
HOW TO READ THE WIRING DIAGRAMS

CONTENTS

MODELS	1-2
--------------	-----

MODELS

<SPACE RUNNER>

Model code		Engine model	Transmission model	Fuel supply system
N63W	SNDEL6*	4G63-SOHC-MPI (1,997 mL)	F5M42 (2WD-5M/T)	MPI
	SNUEL6/R6			
	SNFEL6			
	SRDEL6*		F4A42 (2WD-4A/T)	
	SRUEL6/R6			
	SRFEL6			
N64W	SNJCL6*	4G64-DOHC-GDI (2,351 mL)	F5M42 (2WD-5M/T)	GDI
	SNHCL6			
	SNGCL6			
	SRJCL6*		F4A42 (2WD-4A/T)	
	SRHCL6			
	SRGCL6			

<SPACE WAGON>

Model code		Engine model	Transmission model	Fuel supply system
N83W	LNUEL6/R6*	4G63-SOHC-MPI (1,997 mL)	F5M42 (2WD-5M/T)	MPI
	LNFEL6*			
N84W	LNDCL6*	4G64-DOHC-GDI (2,351 mL)	F5M42 (2WD-5M/T)	GDI
	LNUCL6/R6			
	LNJCL6*			
	LNFCL6			
	LNHCL6/R6			
	LNGCL6			
	LRDCL6*		F4A42 (2WD-4A/T)	
	LRUCL6/R6			
	LRJCL6*			
	LRFCL6			
	LRHCL6/R6			
	LRGCL6			

Model code		Engine model	Transmission model	Fuel supply system
N94W	LNUCL6/R6	4G64-DOHC-GDI (2,351 mL)	W5M42 (4WD-5M/T)	GDI
	LNFLCL6			
	LNHCL6/R6			
	LNGCL6			

NOTE

*: Indicates new models