



Workshop Manual

electrical wiring

SUPPLEMENT

SPACE RUNNER 2001
SPACE WAGON 2001

SPACE RUNNER SPACE WAGON

ELECTRICAL WIRING SUPPLEMENT

FOREWORD

This publication is a supplement to the Electrical Wiring Manual Pub. No. PHDE9802-A, PHDE9802-B and contains only additions and changes to the original issue. It is recommended that all service mechanics engaged in the servicing of the vehicle refer to the following publications as well as this manual.

TECHNICAL INFORMATION MANUAL
PYDE9802

WORKSHOP MANUAL
CHASSIS GROUP

PWDE9803
PWDE9803-A (Supplement)
PWDE9803-B (Supplement)
PWDE9803-C (Supplement)

ELECTRICAL WIRING
PHDE9802
PHDE9802-A (Supplement)
PHDE9802-B (Supplement)

BODY REPAIR MANUAL
PBDE9802

ENGINE GROUP
PWEE□□□□
(Looseleaf edition)

PARTS CATALOGUE
B608W509A□

All information, illustrations and product descriptions contained in this manual are current as of time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

 **mitsubishi MOTORS CORPORATION**

"GDI" is a registered trade mark of Mitsubishi Motors Corporation.

© Mitsubishi Motors Corporation

Apr. 2000

GROUP INDEX

OUTLINE OF CHANGES

HOW TO READ THE WIRING
DIAGRAMS

WIRING HARNESS
CONFIGURATION DIAGRAMS

SINGLE PART INSTALLATION
POSITION

CIRCUIT DIAGRAMS

1

2

3

4

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLE

WARNING!

- (1) Improper service or maintenance of any component of the SRS or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) SRS components should not be subjected to heat over 93 °C, so remove the SRS-ECU, air bag module (driver's side and front passenger's side) and clock spring before drying or baking the vehicle after painting.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B—Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS or any SRS-related component.

HOW TO USE THIS MANUAL

CONTENTS

The preceding page contains GROUP INDEX that lists the group title and group number.

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page number can be found on the top left or right of each page.