

POWER MIRRORS

CONTENTS

	page		page
DESCRIPTION AND OPERATION		MIRROR MOTOR	2
HEATED MIRROR	1	MIRROR SWITCH	2
INTRODUCTION	1	REMOVAL AND INSTALLATION	
DIAGNOSIS AND TESTING		MIRROR ASSEMBLY	2
AUTOMATIC DAY/NIGHT INSIDE MIRROR	1	MIRROR SWITCH	3
HEATED MIRROR	2		

DESCRIPTION AND OPERATION


INTRODUCTION

Power mirrors are controlled by a single switch located on the driver's door. The switch has a rocker buttons mark L (left) and R (right) for mirror selection and four buttons for mirror direction movement (Fig. 1).

The motors which operate the mirrors are part of the mirror assembly and cannot be replaced separately.

The vehicle is equipped with an Ignition-Off Draw Fuse which is used when it is originally shipped from the factory. This fuse is located in the Junction Block and helps to prevent battery discharge during storage when disconnected.

This fuse is included in the power mirror circuitry and should be checked if the mirrors are inoperative.

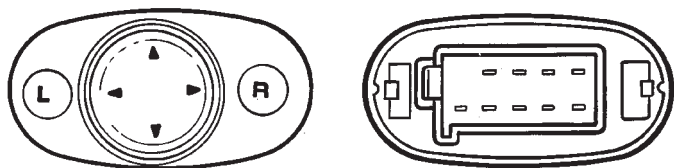

938T-1

Fig. 1 Power Mirror Switch

HEATED MIRROR


Heated mirrors are available with Power Mirrors and Rear Window Defogger only. The heated mirror is controlled by the rear window defogger switch. Only time that the heated mirror is on is when the rear window defogger is on. The mirror should become warm to the touch.

DIAGNOSIS AND TESTING

AUTOMATIC DAY/NIGHT INSIDE MIRROR

Operational test:

- Turn ignition switch to the ON position with the vehicle in park (Fig. 2).
- Place mirror switch in the high position.
- Cover the forward facing sensor with dark cloth to keep out any ambient light.
- Shine a light into the rear facing sensor, watch to see if the mirror darkens.

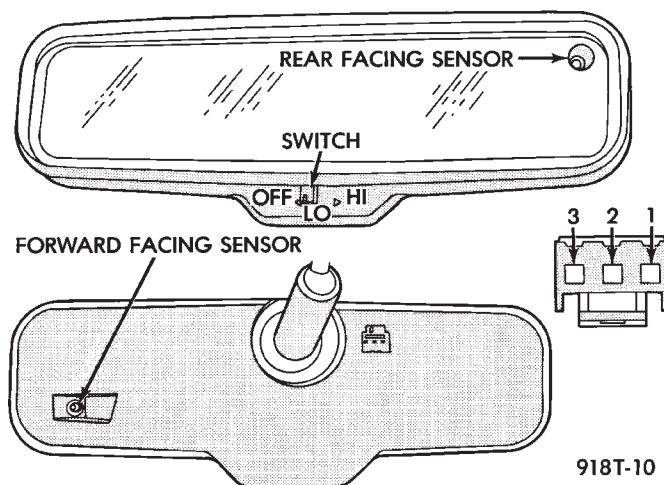

918T-10

Fig. 2 Automatic Day/Night Mirror

With the mirror darkened, place the vehicle in reverse, the mirror should return to its normal condition.

If the above conditions are met the mirror is operating properly. If not OK, test voltage.

Test three way connector harness. Refer to (Fig. 2).

(1) Pin 1 Ignition Switch in run position, should have battery voltage.

(2) Pin 2 Should have continuity to Ground.

(3) Pin 3 Senses when the transmission is in reverse. There should be battery voltage present when transmission is in the reverse position.

DIAGNOSIS AND TESTING (Continued)

- (4) If test is OK replace Mirror.
 (5) If not refer, to Group 8W, Wiring Diagrams manual to test the circuits.

HEATED MIRROR

(1) Check fuse 1 in the Junction Block and repair as necessary.

(2) Using a ohmmeter, check Pin 1 of the mirror motor harness connector for continuity to ground. If OK, go to Step 3. If not OK, repair as necessary. Refer to Group 8W, Wiring Diagrams for proper Pin location.

(3) Activate the rear window defogger switch, use a voltmeter and check Pin 3 for battery voltage.

(a) If OK, go to Step 4. If not OK, Step 2

(b) Check rear window defogger switch, refer to Group 8N, Electrically Heated Systems. If OK, go to Step 3. If not OK, repair as necessary.

(c) If no voltage repair wire as necessary. Refer to Group 8W, Wiring Diagrams.

(4) Remove mirror glass and check wires. If wires are OK, replace mirror glass. If not OK, repair as necessary or replace mirror.

MIRROR MOTOR



(1) Using a trim stick, remove power mirror switch from mounting position.

(2) Disconnect wire harness connector.

(3) Using two jumper wires, one connected to a 12 volt source, and the other connected to a good body ground. Refer to the Mirror Test (Fig. 3) for appropriate mirror response.

(4) If test results are not obtained as shown in the (Fig. 3), check for open or shorted circuit, or replace mirror assembly as necessary.

MIRROR SWITCH CONNECTOR			
12 volt	Ground	Mirror Reaction	
		Left	Right
PIN 2	PIN 1		UP
PIN 7	PIN 10	UP	
PIN 1	PIN 2		DOWN
PIN 10	PIN 7	DOWN	
PIN 1	PIN 9		RIGHT
PIN 10	PIN 3	RIGHT	
PIN 9	PIN 1		LEFT
PIN 3	PIN 10	LEFT	
DOOR CONNECTOR			
PIN 6	PIN 2	UP	
PIN 2	PIN 6	DOWN	
PIN 2	PIN 5	RIGHT	
PIN 5	PIN 2	LEFT	
PIN 1	PIN 3	HEATER	

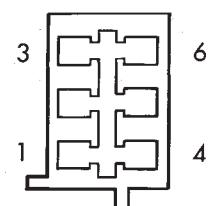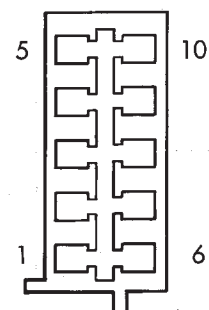

938T-2

Fig. 3 Mirror Test

DIAGNOSIS AND TESTING (Continued)

MIRROR SWITCH

- (1) Using a trim stick, remove power mirror switch from mounting position.
- (2) Disconnect wire harness connector at switch.
- (3) Using an ohmmeter, test for continuity between the terminals of the switch as shown in the Mirror Switch Test (Fig. 4).
- (4) If test results are not obtained as shown in the (Fig. 4), replace the switch.

REMOVAL AND INSTALLATION**MIRROR ASSEMBLY****REMOVAL**

- (1) For door trim panel and mirror removal, refer to Group 23, Body.
- (2) Disconnect mirror wire connector.
- (3) Remove attaching nuts.
- (4) Test operation of mirror before installing door trim panel.


INSTALLATION

For installation, reverse the above procedures.

MIRROR SWITCH**REMOVAL**

- (1) Using a trim stick, remove power mirror switch from mounting position.
- (2) Disconnect wire connector.
- (3) Remove switch.

SWITCH POSITION Move Button	CONTINUITY BETWEEN TERMINALS
Mirror in L Position	
▲	PIN 2 to 4 PIN 4 to 7 PIN 8 to 10
►	PIN 3 to 8 PIN 8 to 9 PIN 4 to 10
▼	PIN 2 to 8 PIN 7 to 8 PIN 4 to 10
◄	PIN 3 to 4 PIN 4 to 9 PIN 8 to 10
Mirror in R Position	
▲	PIN 2 to 4 PIN 4 to 7 PIN 1 to 8
►	PIN 1 to 4 PIN 3 to 8 PIN 8 to 9
▼	PIN 1 to 4 PIN 2 to 8 PIN 7 to 8
◄	PIN 3 to 4 PIN 1 to 8 PIN 4 to 9

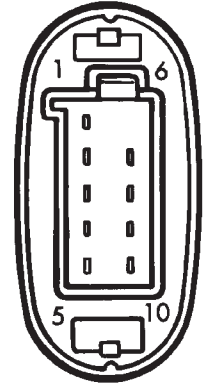

948T-5

Fig. 4 Mirror Switch Test**INSTALLATION**

For installation, reverse the above procedures.

