

CABIN AIR FILTERS

Dust & Pollen Filter - TSX & TL

REMOVAL & INSTALLATION

NOTE: Manufacturer's terminology for this filter is dust and pollen filter.

CABIN AIR FILTER



NOTE: Dust and pollen filter may be an optional component on certain sub-models. Manufacturer does not provide identification information on which sub-models are equipped with filter.

Removal & Installation

1. On TL models, remove the glove box housing. Release the clips by gently pulling the bottom of the glove box housing (A) out, and disconnect the trunk lid opener main switch connector (B) and light bulb connector (C). See [Fig. 1](#). Replace the four clips along the top edge of the glove box housing.

Fastener Locations

▷ : Clip, 10

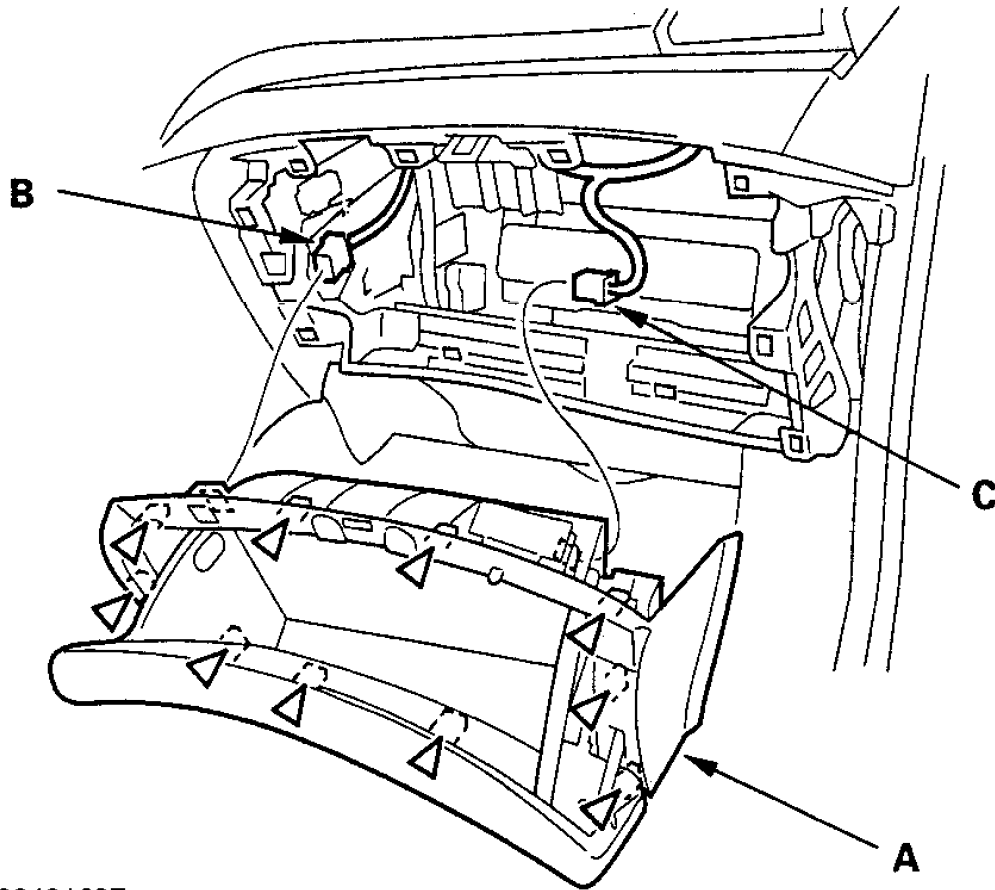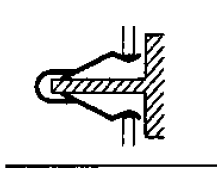


G00401637

Fig. 1: Removing Glove Box Housing (TL)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. On TSX models, open the glove box. Remove the damper from the glove box, then let the glove box hang down. Detach the hook (A) of the glove box damper (B), and remove the glove box stop (C) on each side. See **Fig. 2**.

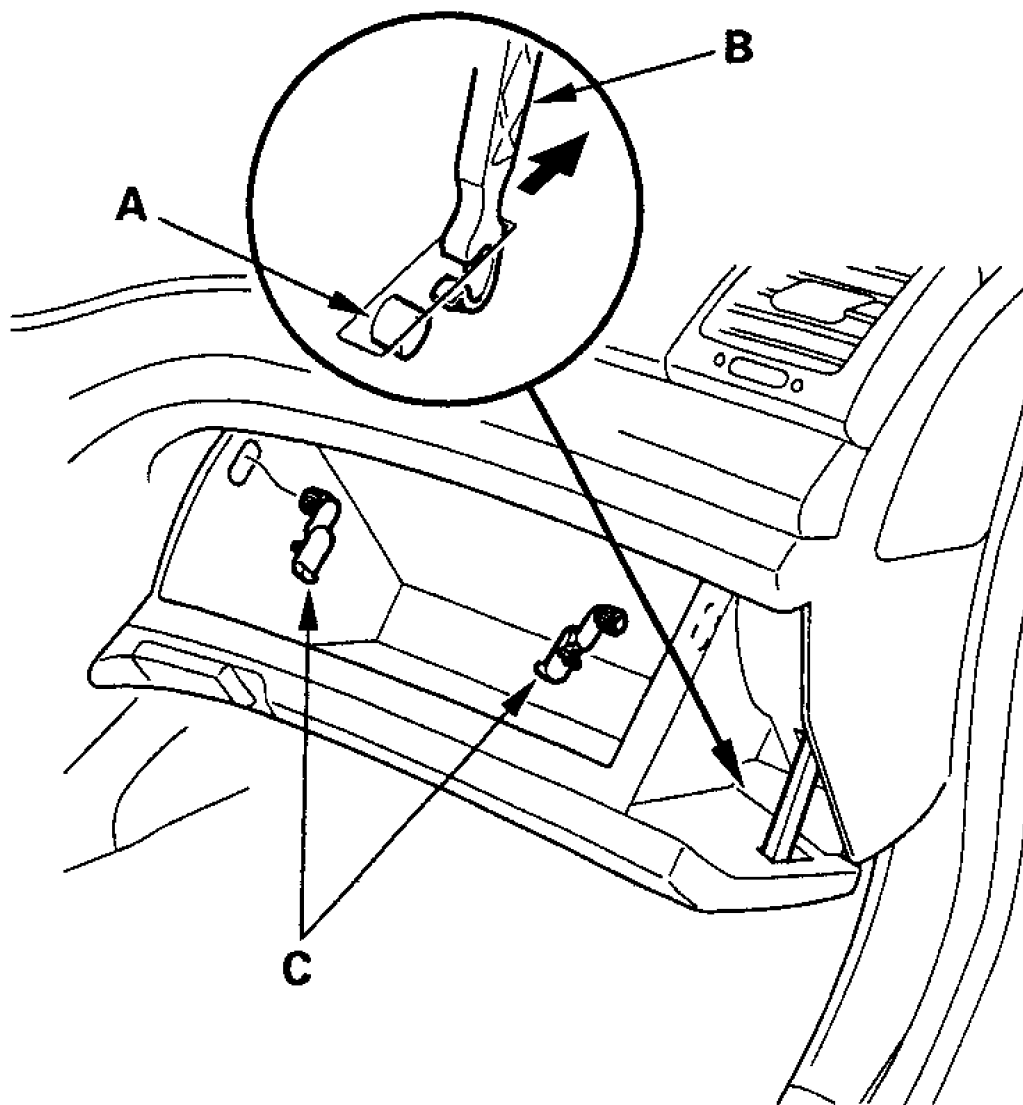


G00401638

Fig. 2: Detaching Glove Box (TSX)

Courtesy of AMERICAN HONDA MOTOR CO., INC.


3. On both models, remove the dust and pollen filter assembly from the evaporator. See **Fig. 3**.

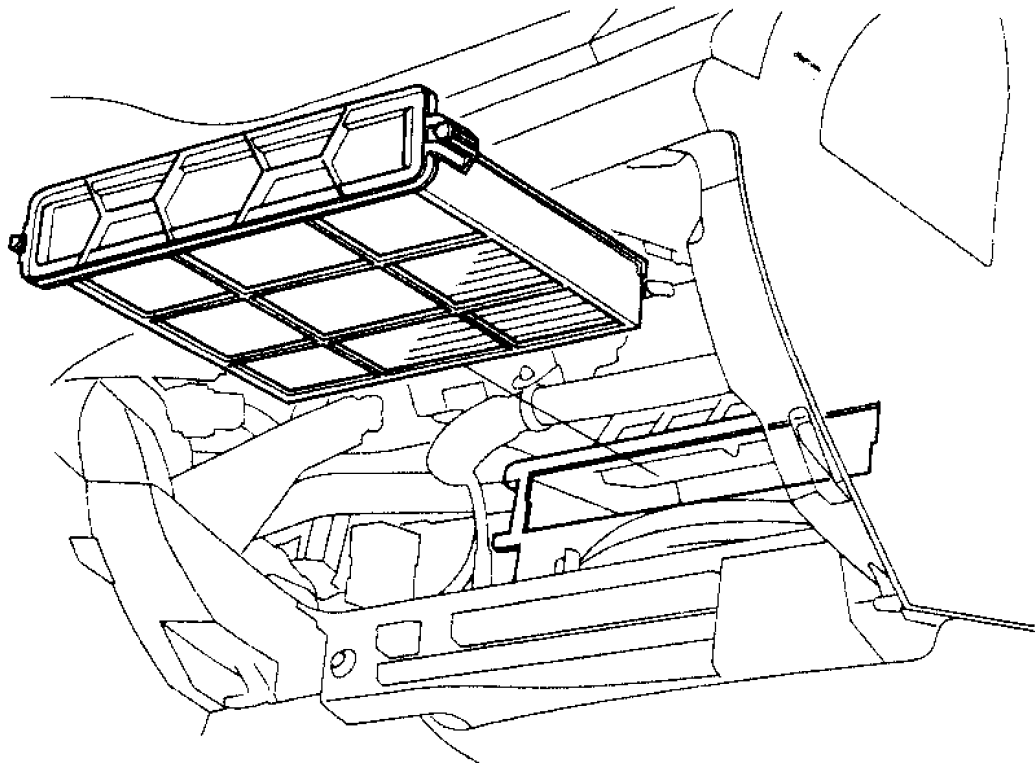

G00302615

Fig. 3: Removing Dust & Pollen Filter From Evaporator
Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Remove the filter (A) from the housing (B), and replace the filter. See **Fig. 4**.

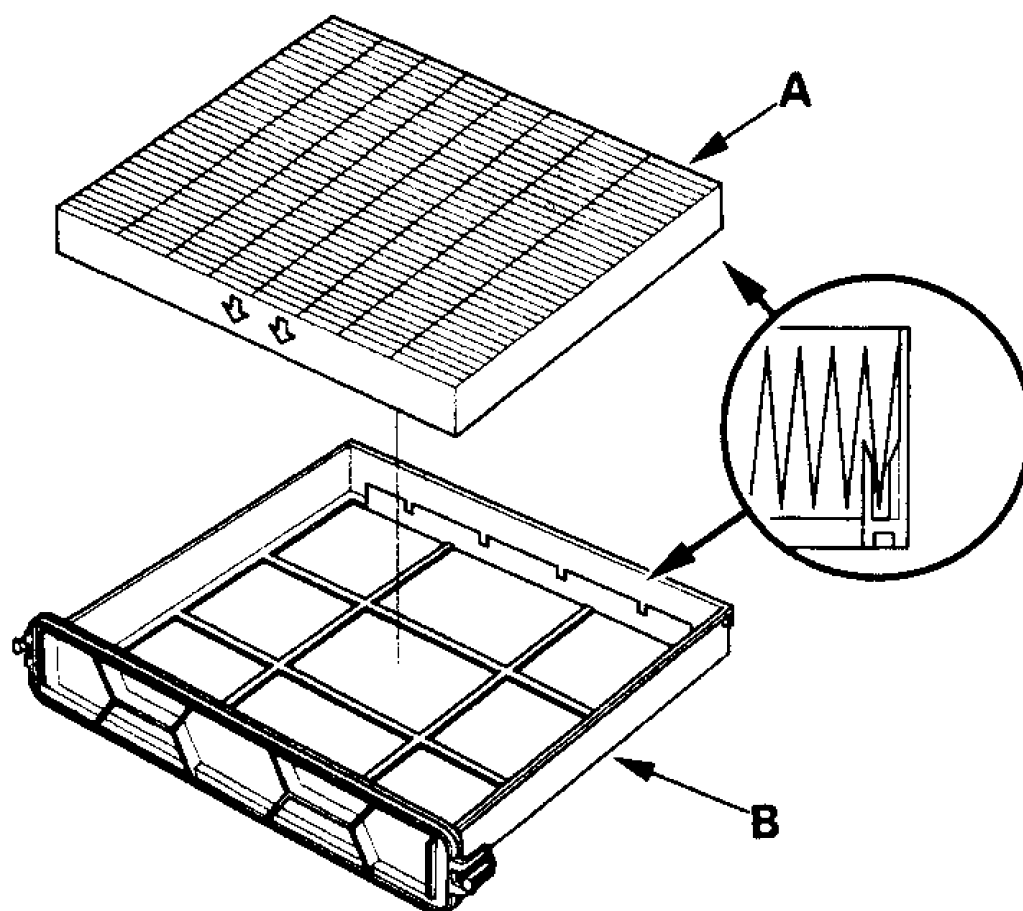

G00302616

Fig. 4: Removing Filter From Housing**Courtesy of AMERICAN HONDA MOTOR CO., INC.**

5. Install the filter in the reverse order of removal. Make sure that there is no air leaking out of the evaporator.