

2007-2008 ACCESSORIES AND EQUIPMENT

Consoles - TL

CENTER CONSOLE REAR SECTION REMOVAL/INSTALLATION

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.
- Take care not to scratch the front seat, dashboard, and related parts.

1. Detach the clips (A, B), and release the hooks (C) by pulling the center console trim (D) from both sides.

Fastener Locations

A ▷ : Clip, 11 B ▷ : Clip, 6

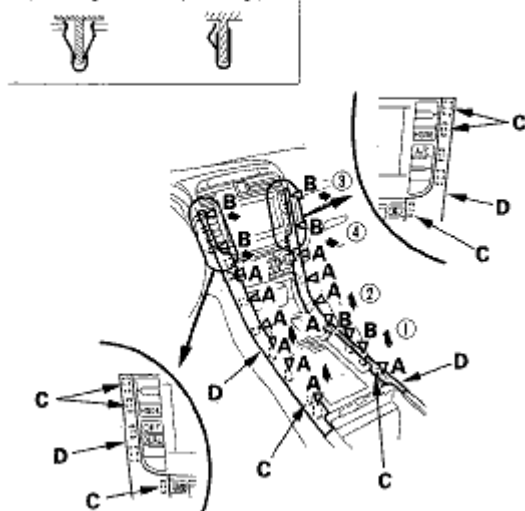



Fig. 1: Identifying Center Console Trim Clips

Courtesy of AMERICAN HONDA MOTOR CO., INC.


2. Open the console box lid (A), then remove the console mat (B) and screws (C, D).

Fastener Locations

C ►: Screw, 2 D ►: Screw, 2

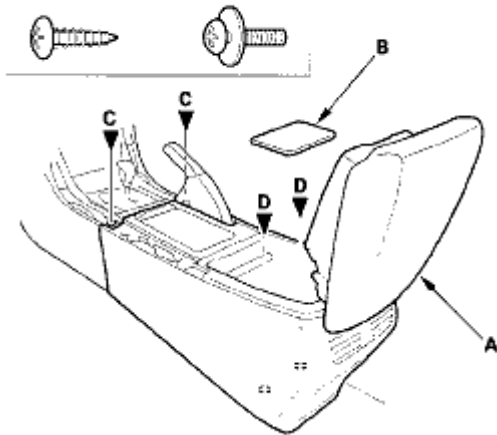**Fig. 2: Opening Console Box Lid****Courtesy of AMERICAN HONDA MOTOR CO., INC.**

- Slide the rear section of the center console(A) rearward to release the hooks (B).

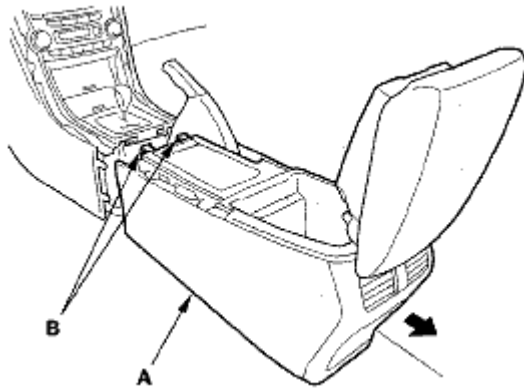**Fig. 3: Sliding Rear Section Of Center Console****Courtesy of AMERICAN HONDA MOTOR CO., INC.**

- Lift up the rear of the console (A). Detach the harness retainer clip (B) from the air duct, and disconnect the console accessory power socket connector (C), the light bulb socket connector (D), and the AUX connector (E), then remove the rear section of the center console.

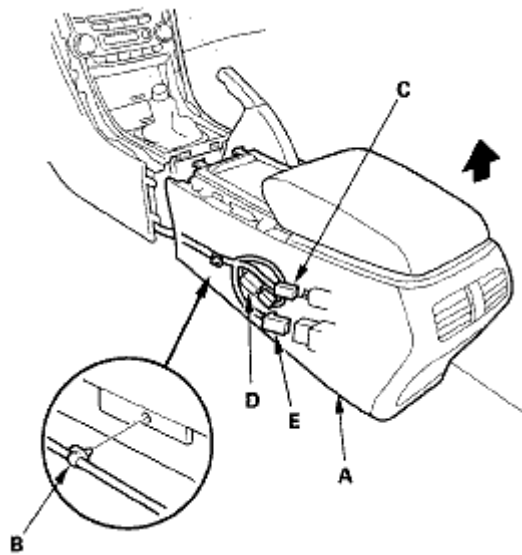


Fig. 4: Lifting Up Rear Of Console

Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Install the console in the reverse order of removal, and note these items:
 - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
 - Push the clips into place securely.
 - Make sure the console accessory power socket connector and the AUX connector are plugged in properly, and the light bulb socket is connected securely.

CENTER CONSOLE PANEL REMOVAL/INSTALLATION

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the front seat, dashboard and related parts.
- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.

1. Move the both front seats all the way back.
2. Remove these items:
 - Center console rear section (see **CENTER CONSOLE REAR SECTION REMOVAL/INSTALLATION**)
 - Dashboard lower cover (see **DRIVER'S DASHBOARD LOWER COVER REMOVAL/INSTALLATION**)
 - Glove box housing (see **GLOVE BOX HOUSING REMOVAL/INSTALLATION**)
3. A/T model: Remove the trim (A).

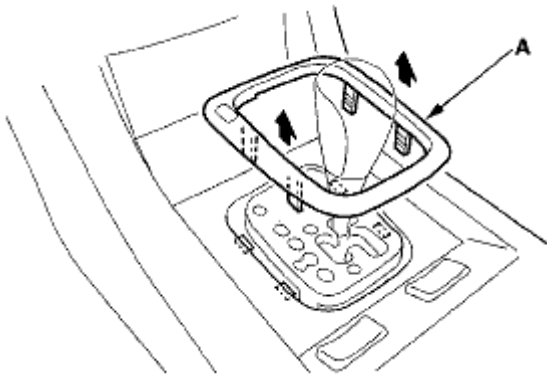


Fig. 5: Removing Trim

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. M/T model: Lower the shift lever boot (A) to release the hooks (B) from the boot, then remove the shift knob (C).

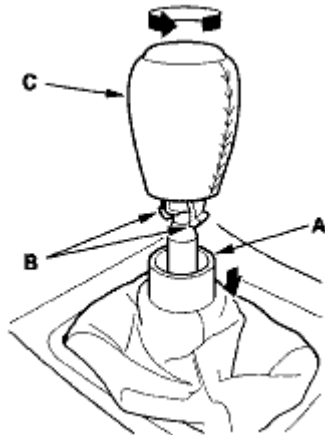


Fig. 6: Removing Shift Knob

Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Remove the insert panel (A) to release the hooks (B).

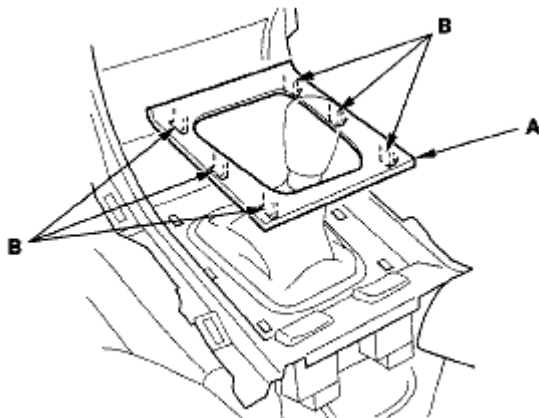


Fig. 7: Identifying Panel And Hooks

Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. Remove the screws (A, B), and detach the clips (C), then remove the driver's console side cover (D) and passenger's console side cover (E).

Fastener Locations

A ► : Screw, 4 B ► : Screw, 4 C ► : Clip, 6

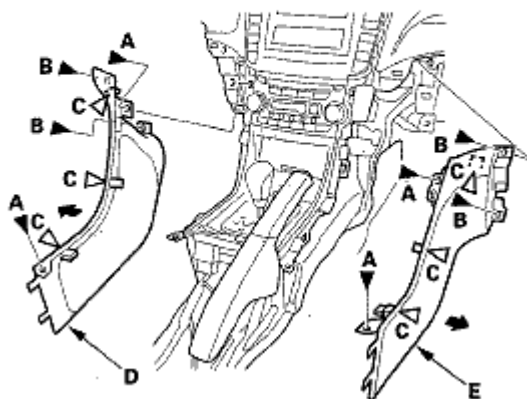
 


Fig. 8: Identifying Screws And Clips

Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. Remove the screws. Pull the center console panel (A) to release the pin (B), and disconnect the accessory power socket connector (C), front accessory power socket light connector (D), and seat heater switch connectors (E).

Fastener Locations

► : Screw, 2

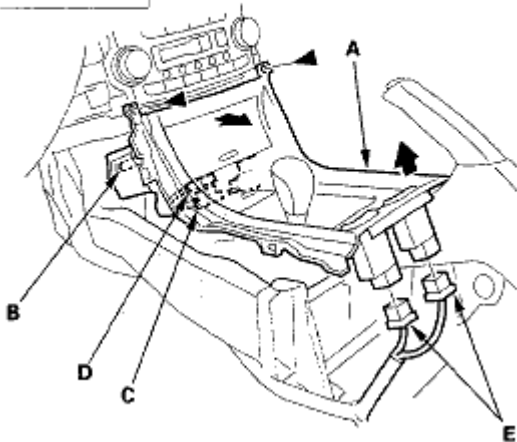
 


Fig. 9: Pulling Center Console Panel And Power Socket Light Connector

Courtesy of AMERICAN HONDA MOTOR CO., INC.

8. Turn the center console panel (A), then lift it up and away from the dashboard.

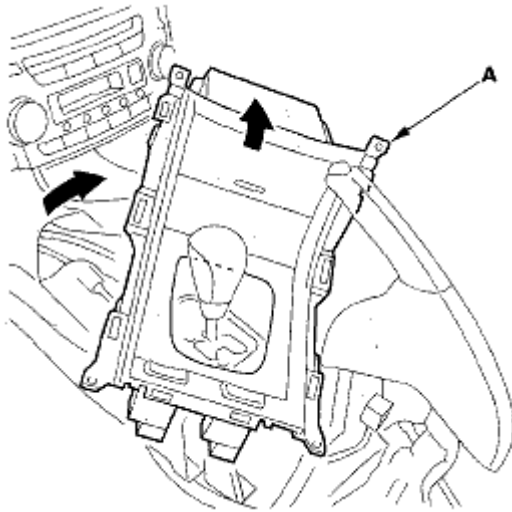


Fig. 10: Turning Center Console Panel

Courtesy of AMERICAN HONDA MOTOR CO., INC.

9. Remove the screws (A) from the back of the console panel, then remove the panel (B) from the console pocket assembly.

Fastener Locations

A ► : Screw, 8 C ► : Screw, 4

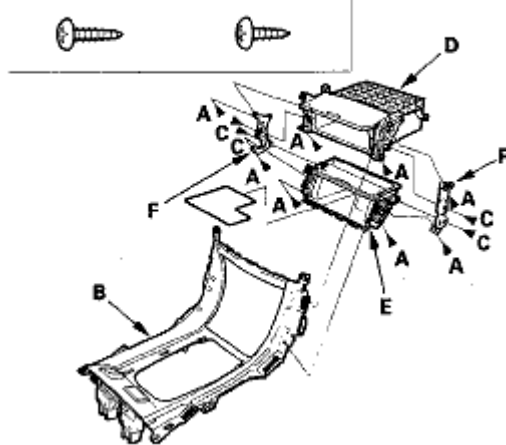


Fig. 11: Identifying Console Pocket Assembly

Courtesy of AMERICAN HONDA MOTOR CO., INC.

10. Remove the screws (C) from both sides, then remove the pocket A (D) and the pocket B (E) from both pocket supports (F).
11. Install the console panel in the reverse order of removal, and note these items:
 - Make sure each connector is plugged in properly.
 - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
 - Push the clips and hooks into place securely.

CENTER CONSOLE REAR COVER REPLACEMENT

Special Tools Required

KTC trim tool set SOJATP2014*

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

NOTE:

- Take care not to bend or scratch the trim and panels.
- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.

1. Remove the center console rear section (see **CENTER CONSOLE REAR SECTION REMOVAL/INSTALLATION**).
2. Open the armrest (A) and remove the screws, then remove the armrest.

Fastener Locations

► : Screw, 4

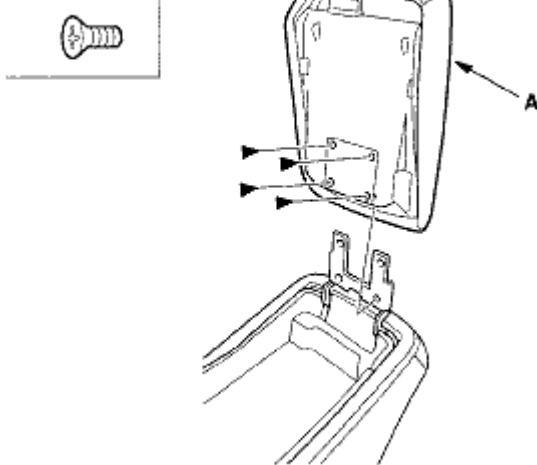


Fig. 12: Identifying Armrest And Screws

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Detach the clips, then pull the console upper trim (A) up and forward to release the hooks (B).

Fastener Locations

▷ : Clip, 4

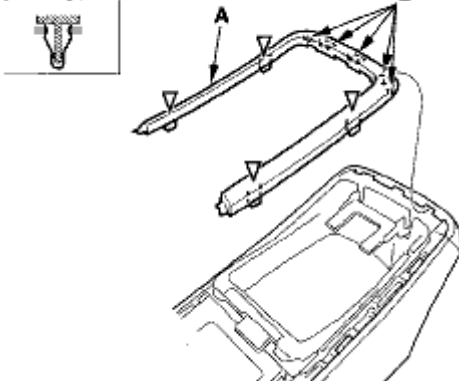


Fig. 13: Identifying Console Upper Trim And Hooks

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Remove the console pocket (A).
 1. Open the console pocket, and release the hooks (B).
 2. Pull the console pocket out to release the tabs (C).

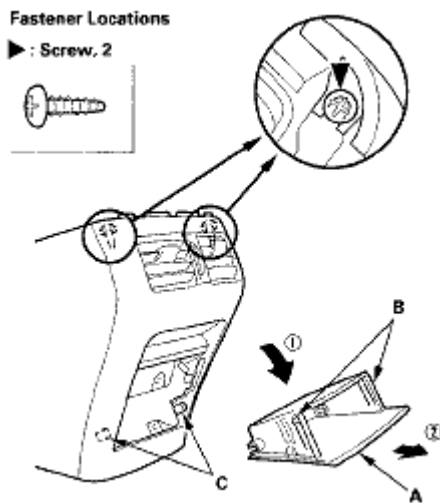


Fig. 14: Pulling Console Pocket

Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Loosen the screws both sides.
6. Remove the screws, then remove the center console rear cover (A).

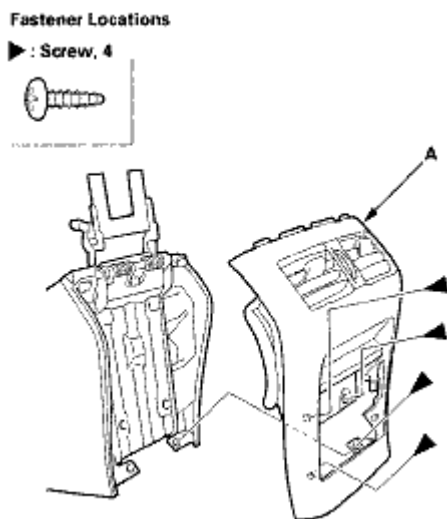


Fig. 15: Identifying Center Console Rear Cover

Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. Install the cover in the reverse order of removal, and note these items:
 - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
 - Push the clips into place securely.

CENTER CONSOLE ARMREST LOCK REPLACEMENT

NOTE: Take care not to scratch the armrest and related parts.

1. Remove the armrest (see step 2).
2. Remove the screws, then remove the inner cover (A) from the console lid assembly (B).

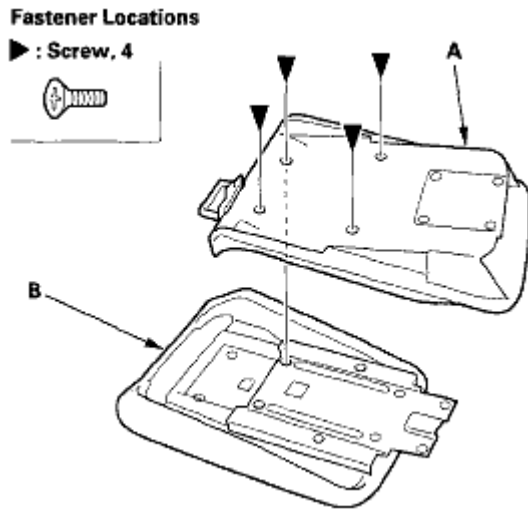


Fig. 16: Identifying Inner Cover From Console Lid Assembly
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Remove the screws, then remove the armrest lock (A) from the inner cover (B).

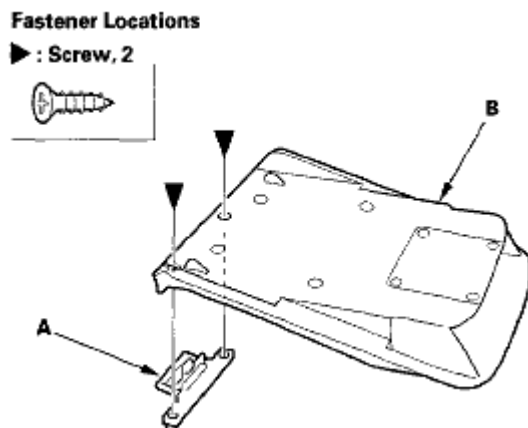


Fig. 17: Identifying Armrest Lock From Inner Cover
Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Install the lock in the reverse order of removal.

CENTER CONSOLE BEVERAGE HOLDER REPLACEMENT

NOTE: Take care not to scratch the armrest and related parts.

1. Remove the rear section of the center console (see **CENTER CONSOLE REAR SECTION REMOVAL/INSTALLATION**).
2. Disconnect the connector holder from underneath the rear section of the center console.
3. Remove the screws, and detach the light bulb socket connector (A), then remove the center console beverage holder (B).

Fastener Locations

► : Screw, 3

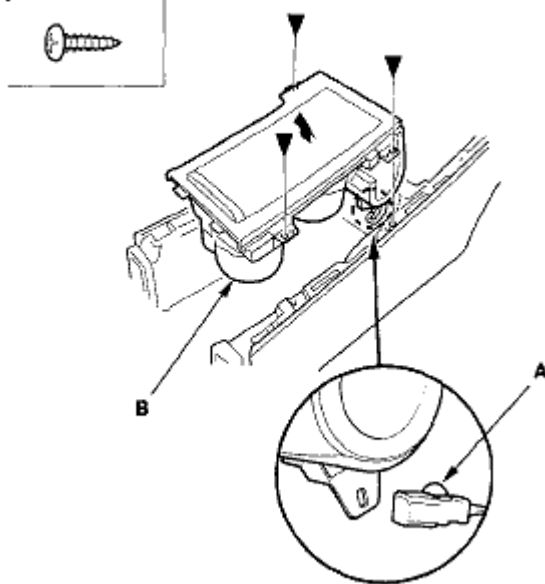


Fig. 18: Identifying Light Bulb Socket Connector And Center Console Beverage Holder
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Install the beverage holder in the reverse order of removal.


CENTER CONSOLE HINGE REPLACEMENT

NOTE: Take care not to scratch the center console and related parts.

1. Remove the rear section of the center console (see **CENTER CONSOLE REAR SECTION REMOVAL/INSTALLATION**).
2. Open the armrest tray (A) and remove the screws, then remove the armrest tray.

Fastener Locations

► : Screw, 2

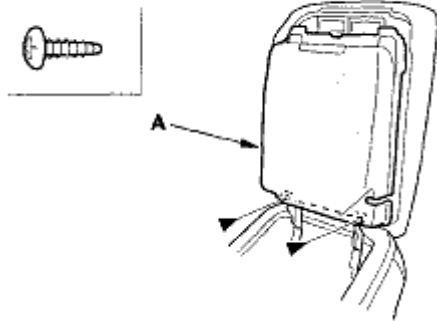
**Fig. 19: Identifying Armrest Tray**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Remove the center console rear cover (see **CENTER CONSOLE REAR COVER REPLACEMENT**), then remove the screws.

Fastener Locations

► : Screw, 2

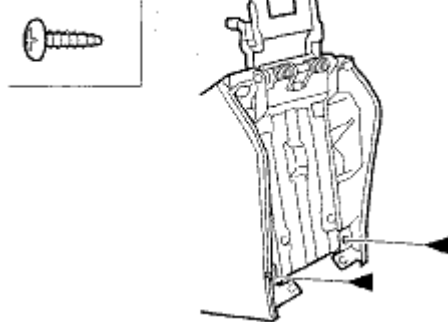
**Fig. 20: Identifying Center Console Rear Cover And Screws**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Remove the screws, then remove the center console hinge (A).

Fastener Locations

► : Screw, 3

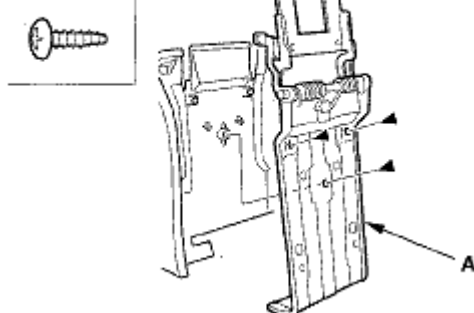**Fig. 21: Identifying Center Console Hinge And Screws**

Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Install the hinge in the reverse order of removal.