

List of components 1:4

1/1	Battery	3/217	Belt buckle contact, left rear
2/16	Relay, rear window wiper	3/218	Belt buckle contact, center rear
2/17	Relay, horn	3/219	Belt buckle contact, right rear
2/22	Relay, climate control system	3/254	Steering Wheel Module (SWM)
2/23	Fuel pump relay	3/255	Position sensor, driver's seat
2/32	Main relay, engine management system	3/256	Position sensor, passenger seat
2/34	Relay, front fog lights	3/267	Telematics switch unit
2/35	Relay, starter motor	4/7	Combustion Preheater Module (CPM)
2/63	Relay, high beam	4/9	Supplemental Restraint System Module (SRS)
2/64	Relay, auxiliary light (accessory)	4/16	Brake Control Module (BCM)
2/80	Relay, reversing lights	4/28	Transmission Control Module (TCM)
2/82	Relay, heated rear window	4/31	Fan control module
2/89	Relay, interior lighting	4/33	Sunroof control module
2/92	Relay, windshield washer motor	4/46	Engine Control Module (ECM)
2/93	Relay, rear window washer motor	4/46	Engine Control Module (ECM), Diesel
2/142	Relay, pre-heater, fuel filter	4/52	Power Seat Module (PSM)
2/159	Relay, infotainment	4/56	Central Electronic Module (CEM)
2/182	Relay, headlight washer motor	4/71	Cooling fan control module
2/192	Relay, (230V), electric engine heater, Gasoline	4/78	Accessory Electronic Module (AEM)
2/192	Relay (230V), electric engine heater, Diesel	4/83	Fuel pump control module
2/193	Relay, comfort functions	4/102	Steering Column Lock Module (SCL)
3/1	Ignition switch	4/103	Remote Entry (RRX)
3/4	Switch unit, cruise control (SWS)	4/109	Glow plug control module
3/6	Switch, hazard warning flashers	4/110	Trailer Module (TRM)
3/8	Switch, heated rear window/door mirror	4/112	Control module, gas discharge lamp master, left
3/9	Brake light contact	4/113	Control module, gas discharge lamp slave, right
3/10	Reversing light contact	5/1	Driver Information Module (DIM)
3/25	Switch, power sunroof	6/1	Wiper Motor Module (WMM)
3/26	Switch unit, power driver's seat	6/2	Washer pump
3/27	Switch unit, power passenger seat	6/16	Driver's seat motor, backrest rake
3/35	Switch, trunk/tailgate handle	6/17	Driver's seat motor, front edge up/down
3/37	Horn contact	6/18	Driver's seat motor, rear edge up/down
3/39	Clutch pedal contact	6/19	Driver's seat motor, forward/aft
3/46	Seat contact, passenger seat	6/20	Passenger seat motor, forward/aft
3/47	Parking brake contact	6/25	Starter motor
3/60	Switch, auxiliary light	6/26	Generator
3/62	Hood alarm contact	6/28	Motor, passenger compartment fan
3/74	Lock unit, driver's door	6/29	Motor, electric cooling fan
3/75	Lock unit, passenger door	6/32	Rear window wiper motor
3/76	Lock unit, left rear door	6/33	Fuel pump
3/77	Lock unit, right rear door	6/35	Fuel pump, auxiliary heater
3/78	Lock unit, trunk lid/tailgate	6/37	Lock motor, fuel filler flap
3/80	Switch, central locking, driver's door	6/38	Left headlight adjustment motor
3/81	Power window switches, driver's door	6/39	Right headlight adjustment motor
3/82	Switch, central locking, passenger door	6/48	Damper motor, recirculation
3/83	Power window switch, passenger door	6/62	Power driver's door mirror
3/85	Power window switch, left rear door	6/63	Power passenger door mirror
3/86	Power window switch, right rear door	6/64	Passenger seat motor, backrest rake
3/93	Belt buckle contact, driver's seat	6/65	Passenger seat motor, front edge up/down
3/94	Belt buckle contact, passenger seat	6/66	Passenger seat motor, rear edge up/down
3/95	Spin control switch	6/67	Pump, fuel leakage control
3/111	Switch unit, lights	6/71	Electrical Power Steering Module (EPS)
3/112	Climate Control Module (CCM)	6/73	Coolant pump, auxiliary heater
3/117	Switch unit, ceiling light	6/95	Damper motor, temperature, left-hand side
3/126	Driver's Door Module (DDM)	6/96	Damper motor, temperature, right-hand side
3/127	Passenger Door Module (PDM)	6/102	Damper motor, defroster
3/128	Left Rear Door Module (LDM)	6/103	Damper motor, floor/ventilation
3/129	Right Rear Door Module (RDM)	6/104	Pump, high pressure headlight washer
3/155	Automatic transmission program selector	6/114	Vacuum pump
3/156	Gear Selector Module (GSM)	6/117	Interior temperature sensor
3/173	Switch, trunk lid/tailgate private lock	6/120	Engine throttle body
3/174	Switch, reduced alarm		

List of components 2:4

7/3	Battery temperature sensor	8/6-10	Injectors
7/4	Brake fluid level sensor	8/18	EVAP valve
7/5	Washer fluid level sensor	8/19	Solenoid, variable valve timing, intake
7/6	Oil pressure sensor	8/28	Turbocharger control valve
7/8	Pressure sensor, climate control system	8/30	Airbag igniter, driver's side
7/12	Solar sensor, twilight sensor and indicator alarm	8/31	Airbag igniter, passenger side
7/15	Heated oxygen sensor, front	8/32	Igniter, airbag stage 2, passenger side
7/16	Coolant temperature sensor	8/33	Igniter, belt tensioner, driver's side
7/17	Mass airflow sensor (MAF)	8/34	Igniter, belt tensioner, passenger side
7/24	Front knock sensor	8/36	Shift lock solenoid
7/25	Pulse generator, Gasoline	8/37	Automatic transmission
7/25	Pulse generator, Diesel	8/38	Shift solenoid 1
7/31	ABS sensor, front left	8/39	Shift solenoid 2
7/32	ABS sensor, front right	8/40	Lock-up solenoid
7/41	Evaporator temperature sensor	8/41	Pressure solenoid
7/51	Accelerator pedal sensor	8/48	Auto-dimming rearview mirror
7/56	ABS sensor, rear left	8/51	Side airbag igniter, driver's side
7/57	ABS sensor, rear right	8/52	Side airbag igniter, passenger side
7/61	Input speed sensor	8/55	Igniter, left rear belt tensioner
7/62	Output speed sensor	8/56	Igniter, right rear belt tensioner
7/69	Outside temperature sensor	8/61	Igniter, airbag stage 2, driver's side
7/71	Charge pressure sensor	8/66	Igniter, left inflatable curtain
7/74	Oil temperature sensor, automatic transmission	8/67	Igniter, right inflatable curtain
7/77	Temperature sensor, intake air	8/68	Bypass valve
7/81	Pressure sensor, intake manifold	8/71	Throttle solenoid
7/82	Heated oxygen sensor, rear	8/72	Shift solenoid 3
7/93	Occupant Weight Sensor (OWS)	8/73	Shift solenoid 4
7/100	Level sensor, alarm	8/74	Shift solenoid 5
7/108	Side impact sensor, rear left	8/77	Control valve, fuel volume
7/109	Side impact sensor, rear right	8/81	Solenoid, variable valve timing outlet
7/110	Sensor, driver's seat temperature	8/82	Solenoid, variable turbo geometry
7/111	Sensor, passenger seat temperature	8/84	Switch, vacuum pump
7/115	Side impact sensor, front left	8/92	Driver's lap belt tensioner
7/116	Side impact sensor, front right	8/99	Igniter, steering column
7/120	Angle sensor, Bi-Xenon, rear	8/119	Pressure monitor, climate control system
7/121	Angle sensor, Bi-Xenon, front	8/120	EGR valve
7/122	Mass movement sensor, front	8/127	Pressure switch, climate control system
7/123	Clutch pedal sensor	8/128	Driver's belt force limiter
7/124	Brake pedal sensor	8/129	Passenger belt force limiter
7/143	Fuel level sensor, pump side	8/131	Cut-off valve, expansion tank
7/149	Rain Sensor Module (RSM)	8/132	Control valve, intake
7/154	Fuel temperature sensor	8/133	Control valve, fuel pressure
7/156	Fuel pressure and temperature sensor, gasoline	8/134	Solenoid, reverse interlock, manual
7/158	Mass movement sensor, rear		
7/159	Air quality sensor	9/1	Front 12V outlet
7/162	Pressure sensor, fuel line	9/2	Heated rear window
7/164	Body Sensor Cluster (BSC)	9/12	Seat Heater Module (SHM), driver's side
7/165	Pressure and temperature sensor, intake manifold	9/13	Seat Heater Module (SHM), passenger side
7/172	Camshaft position sensor, intake side	9/16	Heating element, driver's seat backrest
7/173	Camshaft position sensor, exhaust side	9/17	Heating element, passenger seat backrest
7/178	Right-hand front impact sensor	9/18	Heating element, driver's seat cushion
7/179	Left-hand front impact sensor	9/19	Heating element, passenger seat cushion
7/182	Remote control IR sensor, RTI	9/25	Rear 12V outlet
7/193	Position sensor, turbo	9/30	Auxiliary heater
7/194	Belt pulley sensor, driver	9/32	PTC resistor, oil trap
7/195	Belt pulley sensor, passenger	9/33	Heated driver's door mirror
		9/34	Heated passenger door mirror
		9/38	Heated fuel filter
8/3	Electromagnetic clutch, climate control system	9/41	PTC element

List of components 3:4

10/1	Lamp housing, front left	16/49	Traffic Message Channel Module (TMC)
10/2	Lamp housing, front right	16/55	Tweeter, driver's door
10/3	License plate lighting	16/56	Tweeter, passenger door
10/5	Fog light, front left	16/60	Phone Module (PHM)
10/6	Fog light, front right	16/62	Hand unit, cellular phone
10/11	Position/parking light, front left	16/64	Antenna, cellular phone
10/12	Position/parking light, front right	16/79	Subwoofer Module (SUB)
10/13	Direction indicator, front left	16/93	Control module, cellular phone handsfree
10/14	Direction indicator, front right	16/94	AM/FM Tuner Module (AFM)
10/15	Direction indicator, driver's door mirror	16/98	Microphone
10/16	Direction indicator, passenger door mirror	16/105	Audio Module (AUD)
10/17	Lamp housing, rear right	16/107	Media Player Module (MPM)
10/18	Lamp housing, rear left	16/108	Multimedia Module (MMM)
10/19	Auxiliary brake light	16/126	Holder, cellular phone handsfree
10/22	Ceiling light	16/127	Microphone, cellular phone handsfree
10/24	Cargo compartment lighting	16/136	Tweeter, left rear door
10/25	Ceiling light, cargo compartment	16/137	Tweeter, right rear door
10/29	Glove compartment lighting	16/138	Window antenna, right rear
10/43	Brake light, right	16/139	Global Positioning System Module (GPS)
10/44	Taillight 1, right	16/140	SIM card reader
10/45	Taillight 2, right	16/141	Interference filter, rear window, left
10/46	Fog light, right rear	16/142	Interference filter, rear window, right
10/47	Direction indicator, right rear		
10/48	Reversing light, right	17/13	Data link connector
10/50	Brake light, left	17/19	12V outlet, cargo compartment
10/51	Taillight 1, left	17/37	4-pin outlet, towbar cable harness
10/52	Taillight 2, left	17/38	7-pin outlet, towbar cable harness
10/53	Fog light, left rear	17/39	13-pin outlet, towbar cable harness
10/54	Direction indicator, left rear		
10/55	Reversing light, left	18/4	Contact reel
10/64	High beam, right		
10/65	Auxiliary light, front right	20/3-7	Spark plug and ignition coil
10/66	Low beam, right	20/22-25	Glow plug
10/68	High beam, left		
10/69	Auxiliary light, front left	31/3	Ground connection, Left MacPherson strut tower
10/70	Low beam, left	31/4	Ground connection, Engine
10/97	Courtesy lighting, left	31/6	Ground connection, A-post, driver's side
10/102	Courtesy lighting, right	31/10	Ground connection, A-post, passenger side
10/114	Vanity mirror lighting, left	31/11	Ground connection, Rear left side, S40
10/115	Vanity mirror lighting, right	31/11	Ground connection, Rear left side, V50
10/148	Lighting, driver's door mirror	31/12	Ground connection, Rear right side, S40
10/149	Lighting, passenger door mirror	31/12	Ground connection, Rear right side, V50
10/150	Rear reading light	31/52	Ground connection, Left MacPherson strut tower
		31/66	Ground connection, Left B-post
15/31	Engine compartment distribution box	31/67	Ground connection, Right B-post
		31/80	Ground connection, Left MacPherson strut tower
16/1	Infotainment Control Module (ICM)	31/83	Ground connection, A-post, driver's side
16/3	Speaker, passenger door	31/84	Ground connection, A-post, passenger side
16/4	Speaker, driver's door	31/88	Ground connection, Engine
16/5	Speaker, right rear door	31/89	Ground connection, Engine
16/6	Speaker, left rear door	31/102	Ground connection, Front member, Gasoline
16/9	Window antenna	31/102	Ground connection, Front member, Diesel
16/10	Horn 1	31/110	Ground connection, Right MacPherson strut tower
16/11	Horn 2		
16/16	Window antenna amplifier	31/112	Ground connection, Right MacPherson strut tower
16/26	Center speaker, dashboard		
16/26	Center speaker, dashboard, RTI	31/114	Ground connection, Left MacPherson strut tower
16/35	Siren Control Module (SCM)	31/115	Ground connection, Left A-post
16/46	RTI Display	31/116	Ground connection, Right A-post
16/47	GPS antenna RTI	31/119	Ground connection, Left MacPherson strut tower

List of components 4:4

63/no.	Junction point	64/599	Connector
64/12	Connector	64/600	Connector
64/18	Connector	64/814	Connector
64/25G	Connector	64/815	Connector
64/30	Connector	64/816	Connector
64/31	Connector	64/817	Connector
64/40	Connector	64/861	Connector
64/41	Connector	64/862	Connector
64/43	Connector	64/977A	Connector
64/45	Connector	64/978	Connector
64/47	Connector	64/979	Connector
64/48	Connector S40	64/979G	Connector
64/48	Connector V50		
64/50	Connector	F/no.	Fuse
64/51	Connector	F/no.	Fuse
64/79V	Connector	FH/no.	Fuse in the holder
64/90	Connector	PF/no.	Main fuse near the battery
64/111	Connector, E.E	R/no.	Relay
64/111	Connector, L.E	R/no.	Relay
64/112	Connector	R/no.	Relay
64/113	Connector, E.E	10X/17	Connector, original car interface
64/113	Connector, L.E	10X/18	Connector, original car interface
64/322	Connector	16X/105	Connector, original car interface
64/425	Connector	17X/19	Connector, original car interface
64/545	Connector	64X/12	Connector, original car interface
		64X/322	Connector, original car interface