

This section gives you tips on starting the engine under various conditions, and how to operate the automatic transmission. It also includes important information on parking your car, the braking system, the Vehicle Stability Assist System, and facts you need if you are planning to tow a trailer.

Preparing to Drive	190
Starting the Engine.....	191
Starting in Cold Weather at High Altitude	191
Automatic Transmission.....	192
Shift Lever Position Indicator ..	192
Shift Lever Positions	192
Engine Speed Limiter	194
Shift Lock Release.....	195
Parking.....	196
The Braking System.....	197
Brake Wear Indicators.....	197
Brake System Design.....	198
Anti-lock Brakes	198
Important Safety Reminders	199
ABS Indicator	199
Vehicle Stability Assist System....	201
Driving in Bad Weather.....	204
Towing a Trailer	206