




System Controls

Screen

All selections and instructions are displayed on the screen. In addition, the display is a "touch screen" — you can enter information into the system by touching images on the screen with your finger. For example, when you need to enter a street name, a keyboard will be displayed. You can "type in" the street name by touching the individual characters on the screen.

Clean the screen with a soft, damp cloth. You may use a mild cleaner intended for eyeglasses or computer screens. Harsher chemicals may damage the screen.

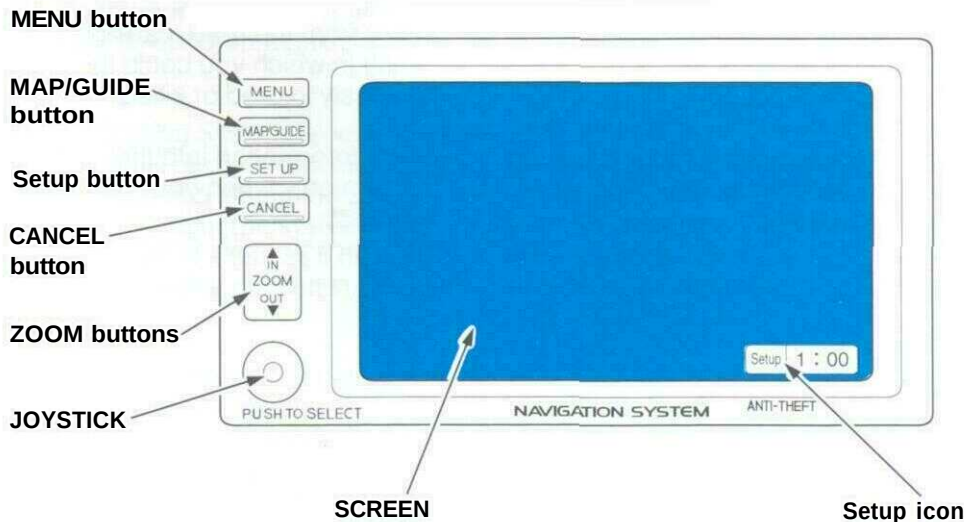

MENU button

Pressing this button changes the display from the current instructions to a menu.

MAP/GUIDE button

Pressing this button switches the display between a map and the guidance screen. See page [46](#).

CANCEL button

Pressing this button cancels the current display and returns to the previous screen display.

ZOOM buttons

When you are displaying a map, these buttons allow you to change the scale. ZOOM IN reduces the scale, showing less area with greater detail. ZOOM OUT increases the scale, showing more area with less detail. Refer to page [46](#).

SETUP icon

Pressing this icon displays a menu of system options. See page [60](#).

JOYSTICK

The joystick moves left, right, up, and down. Use the joystick to move the highlighting around the display, to scroll through a list, or to look around a displayed map. After making a selection in a menu or list, push in on the joystick to enter the selection into the system.

In almost all cases, you can enter a selection into the system by pushing on the joystick, or by touching the appropriate image on the screen.