

The Main Menu gives you seven different ways to enter a desired destination.

Address


This option requires you to enter the city, and the address in that city that you want to go to. See page 9 for detailed instructions.

Intersection

This option allows you to enter the names of two streets in a city. The system will guide you to the intersection of those two streets. This is useful if you know the general location of your destination, but not the exact address. See page 15 .

Phone No. (POI)

This option lets you select a programmed destination by entering the telephone number. See page 21.

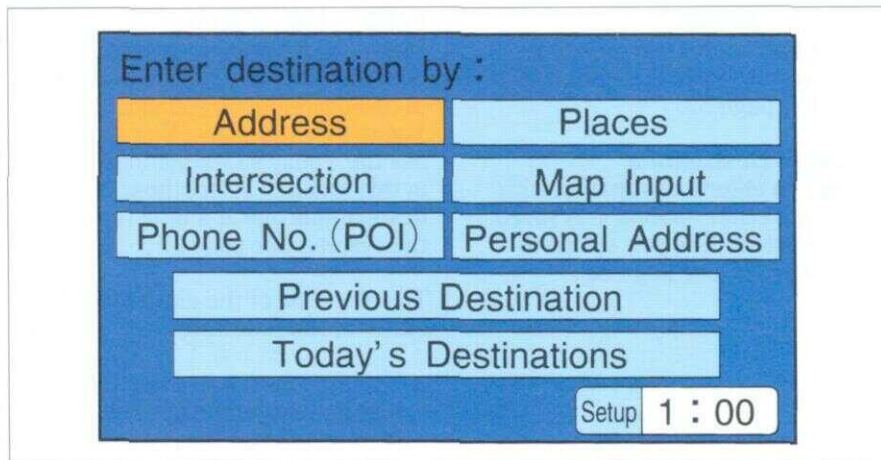

Places

The system has been programmed with the locations of many businesses, parks, hospitals, etc. This option lets you scan these, by category, and select the one you want as your destination. See page 22 for complete information.

Map Input

This option allows you to point to a destination on a displayed map. The system will then guide you to that point. See page 33 .



Main Menu

Personal Address

This option allows two different users to store up to 50 destinations each. See page [52](#).

Previous Destination

When you enter a destination with any of the other options, it is saved by the system. Use this option to select it again. See page [32](#).

Today's Destinations

Using the other options in this menu, you can enter the information for up to five destinations and store them in Today's Destinations. You can then use the Today's Destinations option in this menu to select those destinations one at a time for use by the system. See page [39](#).

To select one of the eight options, do either of the following.

- Use the joystick to move the highlighting to the desired option, then push in on the joystick.
- Touch the desired option on the screen.