

 


Selecting By Address

To select the "Address" option in the Main Menu, do either of the following,

- Push the joystick up or down to move the highlighting to the Address box. Then push on the joystick.
- Touch the Address box on the screen with your finger.

After you select the option, the display changes to:

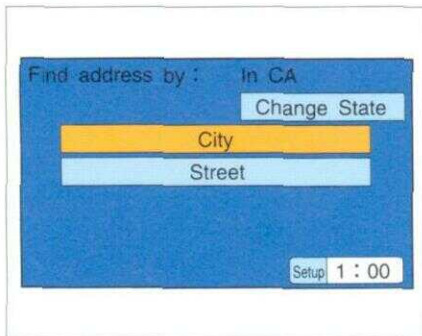


The last state selected is displayed at the top of the screen. If your desired destination is in another state, select the "Change State" option to enter the desired state. If the proper state is displayed, select either the "City" or "Street" option.

If you select the "City" option first, you can enter the name of the city that is your destination. If you select the "Street" option first, the system will list all cities that contain the street name that you enter. This may be helpful if the street runs through several cities, and you are not sure of the exact one your destination is in. Select the "Change State," "City" or "Street" option by touching the box on the screen, or by using the joystick to move the highlighting to the desired option, then pushing in on the joystick.

Change State

 When you select the "Change State" option, the display changes to:

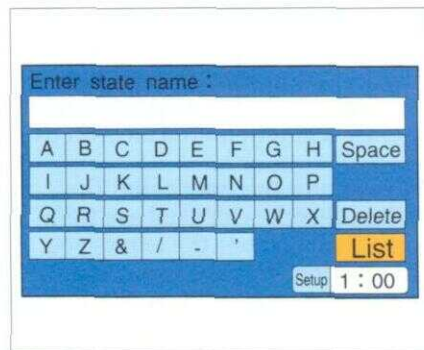

Use the displayed letters to enter the name of the destination state. Enter each letter by doing one of the following.

- Move the highlighting to each letter with the joystick, then push on the joystick to enter that letter.
- Touch each desired letter on the screen.

CONTINUED



Selecting By Address

Each entered letter will appear on the top of the display. Use the "Space" box to enter a space between words. Use the "Delete" box to erase a letter entered incorrectly.

As you enter the state name, the system searches its database for a name that matches the letters you are entering. When it finds only one state that matches, it completes the entry of the name for you.

If the system does not find an exact match, continue entering the name of the state. Select "List" when you are finished.

The system then displays a list of states, with the name that most closely matches what you entered at the top. Use the joystick, the ZOOM IN/OUT buttons, or the triangles in the upper right corner of the screen to scroll through the list. When you find the desired state, do either of the following.

- Highlight it with the joystick, and then push the joystick.
- Touch the name on the screen.

 
You may also select a state by entering only the first character or first few characters of the name. The system will display a list of state names beginning with that character or characters. Scroll through the list, find the desired state, and select it as described.

Once you have selected the state, the system will return to the "Find address by:" screen.

Selecting By Address

Selecting the City

When you select the City option, the display changes to:

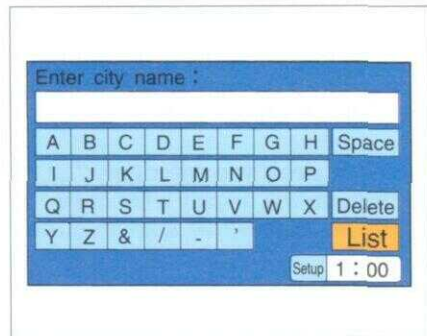

The name of your current location is displayed. If your desired destination is in the same location, select "List". If not, use the displayed letters to enter the name of the destination city. Enter each letter by doing one of the following.

- Move the highlighting to each desired letter with the joystick, then push on the joystick to enter that letter.
- Touch each desired letter on the screen.

Each entered letter will appear on the top of the display. Use the "Space" box to enter a space between words. Use the "Delete" box to erase a letter entered incorrectly.

As you enter the city name, the system searches its database for a name that matches the letters you are entering. When it finds only one city that matches, it completes the entry of the name for you.

CONTINUED

 


Selecting By Address

If the system does not find an exact match, continue entering the name of the city. Select "List" when you are finished.

All cities and towns in the database are listed. Cities and towns in the non-detailed coverage area will have an "*" next to their names. If you select one of these cities or towns, the system will not give you the option to enter a street address. It will guide you to the center of that city or town. See "Non-detailed coverage" on page 70.

The display changes to:

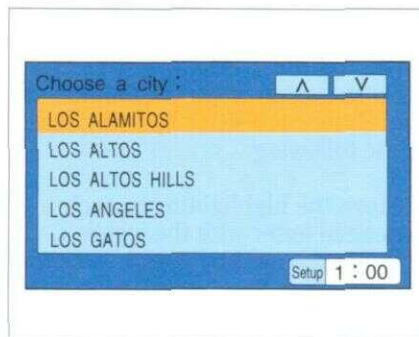

The city selected by the system, or the city you entered, is at the top of the list. To scroll through this list city by city, push the joystick up or down. To scroll up or down a screen at a time, use the Zoom In or Zoom Out buttons, or touch one of the triangles in the upper right corner of the screen. When you find the desired city, do either of the following.

- Highlight it with the joystick, then push the joystick.
- Touch the name on the screen.

You can also select a city by entering only the first one or two letters in its name. Then select "List".

For example, if you enter only "L", the system will display a list of all cities with names that start with the letter "L".

 
Use the joystick, the Zoom In/Out buttons or the triangles on the screen to scroll through the list. When you find the desired city, select it as explained above.

If you do not find the city, or have made a mistake, you can return to the previous display by pressing the CANCEL button. Pressing the Menu button will return you to the Main Menu.

Selecting By Address


Selecting the Street Address

After you have selected the city, or directly if you select the "Street" option in the beginning screen, the display changes to:

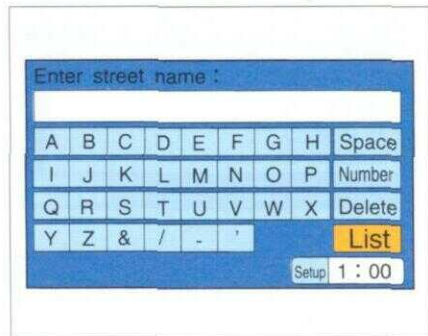

Enter the street name in the same way that you entered the name of the city. If the street name includes numbers (228th Place, for example) select the Number box on the screen.

 The display will change to:

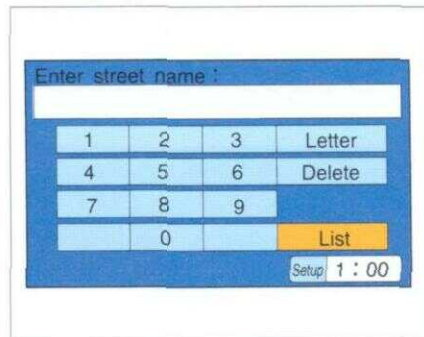


Enter the numbers, then select the Letter box on the screen to return to the alphabet display. Complete the street name, then select "List".

To enter the name of a major highway, you must use the full name, including a hyphen. For interstates, use an "I" (I-80). For U.S. highways, use "US" (US-18). For state highways, use the two-character state designation (CA-101). For

county roads, use the appropriate designation (G-2, for example).

 The system will display a list of street names, with the name you entered, or the closest match to that name, at the top of the list.

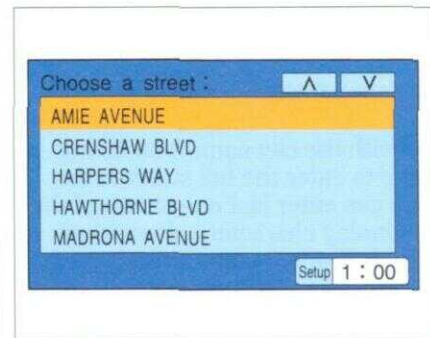

CONTINUED



Selecting By Address

 
Use the joystick, the ZOOM IN/OUT buttons, or the triangles in the upper right corner of the screen to scroll through the list. When you find the desired street, do either of the following.

- Highlight it with the joystick, then push the joystick.
- Touch the name on the screen.

As with the city name, you do not have to enter the full street name. You can enter just one or two of the beginning characters, then select "List". The system will display a list of street names beginning with that character or group of characters.

Use the joystick, the ZOOM IN/OUT buttons, or the triangles on the screen to scroll through the list. When you find the desired street, select it with the joystick, or by touching the screen.

After you have completed the street name, the display changes to:

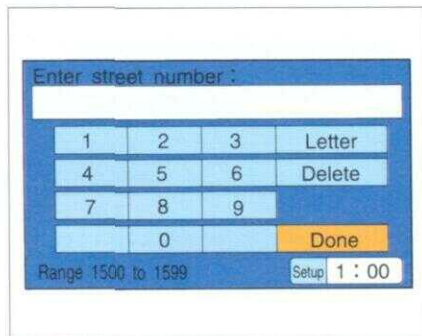


Enter the address number of your destination. When you have finished, select "Done".

The system displays the acceptable address range. If you try to enter a number outside that range, you will be shown an error message.

If you did not select a city in the beginning, and the street name you

 selected appears in more than one city, you will see:

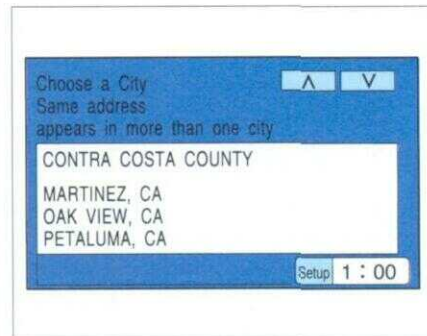

Select the desired destination city from the list.

After you have entered the city and street address, the system will ask for the type of route that you desire, calculate the route, and give you your first route instruction. See "Traveling To Your Destination" on page 42 .