

 


Selecting By Places

To select the "Places" option in the Main Menu, do either of the following.

- Push the joystick up or down to move the highlighting to the Intersection box. Then push on the joystick.
- Touch the Intersection box on the screen with your finger.

After you select the option, the display changes to:

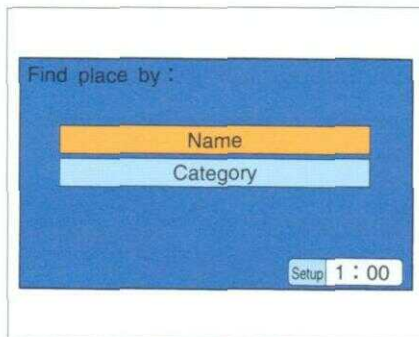


The "Name" option allows you to enter the name of a business establishment. It will then show you a list of businesses with the same or similar names to select from.

The "Category" option gives you a list of categories or types of businesses to select from.

Name

After you select this option, the display changes to:

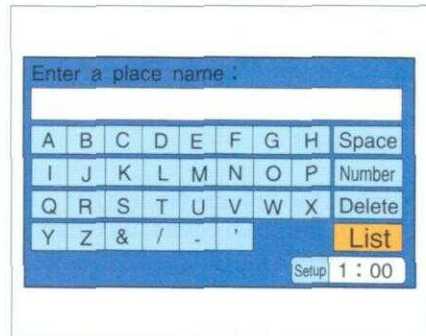

Use the displayed letters to enter the name of the place you want to go by doing either of the following.


- Move the highlighting to each letter with the joystick, then push on the joystick to enter that letter.
- Touch each desired letter on the screen.



Each entered letter will appear on the top of the display. Use the "Space" box to enter a space between words. Use the "Delete" box to erase a letter entered incorrectly.

As you enter the place name, the system searches its database for a name that matches the letters you are entering. When it finds only one name that matches, it completes the entry of the name for you.

If the system does not find an exact match, continue entering the place name. Select "List" when you are finished.

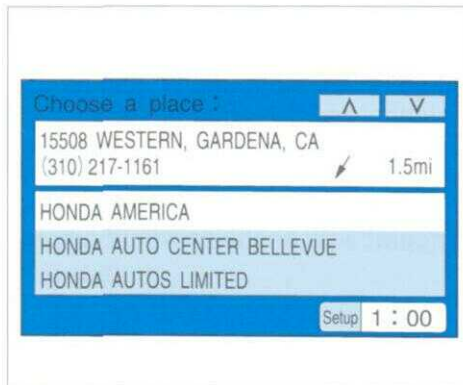

The place name selected by the system is at the top of the list. To scroll through this list place by place, push the joystick up or down. To scroll up or down a screen at a time, use the Zoom In or Zoom Out buttons, or touch one of the triangles in the upper right corner of the screen.

If the system recognizes only one place that matches the highlighted name, the address, distance, and direction is shown at the top of the screen. The distance shown is "as the crow flies." The traveling distance on a calculated route will be longer.

If more than one place matches the highlighted name, the category and number of entries is shown at the top of the screen.

CONTINUED



Selecting By Places

To select the desired place, do either of the following.

- Highlight it with the joystick, then push the joystick.

*** Touch the name on the screen.**

If the selected place is the only system entry (the address is displayed at the top of the screen), the system will ask for the type of route that you desire, calculate the route, and give you your first route instruction. See "Traveling To our Destination" on page [42](#) .


If you select a multiple listing entry, the system displays a list of all the places with that name. The address, distance, and direction to each highlighted entry is shown at the top of the screen. Scroll through the list and select the desired destination in the same way as the previous screen.

If you cannot locate the desired destination, or have made an error, you can return to the previous display by pressing the CANCEL button. Pressing the MENU button will return you to the Main Menu.

Selecting By Places

Category

When you select this option, the screen changes to:

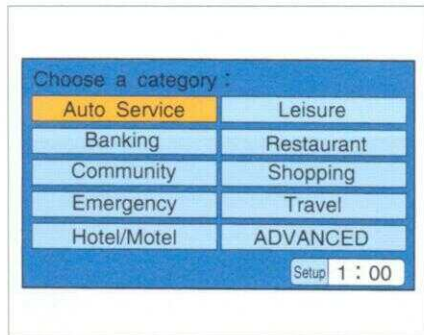

This menu shows you the categories of places that are stored in the system. Each category has a sub-category.

Auto Service

The sub-categories are: Acura Roadside Assistance; Acura Dealer; Gas station.

Banking

The sub-categories are: Bank; ATM.

Community

The sub-categories are: City hall; Post offices; Civic/Community Center; School; Convention/Exhibition Center; Higher Education; Courthouse; Library.

Emergency

The sub-categories are: Hospitals; Police Station.

Hotel/Motel

Directs you to hotels and motels in the area you designate.

Leisure

The sub-categories are: Amusement parks; Golf courses; Historical Monument; Marinas; Museums; Park/Recreation area; Performing arts; Sports Complex; Tourist attractions.

Restaurant

This category is broken down into types of food; American, French, Japanese, etc., giving you a selection of restaurants by each type.

Shopping

The sub-categories are: Grocery/Convenience store; Shopping.



Selecting By Places

Travel

The sub-categories are: Airport; Park & Ride; Automobile Club; Parking garage/house; Bus station; Parking lot; Commuter rail station; Rental car agency; Ferry terminal; Rest area; Tourist information; Train station.

Advanced


If you do not find the category or sub-category you need in the other options, use this option to enter the desired sub-category.

See page [30](#) .


Select the desired category by doing either of the following.

- Highlight it with the joystick, then push the joystick.
- Touch the name on the screen.

The system will then display the sub-category screen (except for Hotel/Motel, which does not have a sub-category). For example, if you select "Leisure", you will see this sub-category screen:

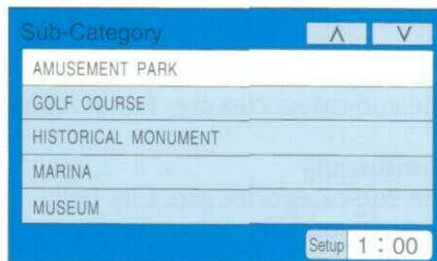

Use the joystick to scroll through the list and find the specific sub-category you desire. Select that sub-category by pushing the joystick, or by touching the screen. The display then changes to:

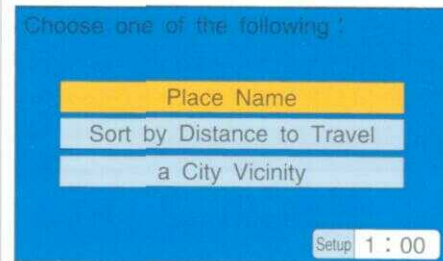

Place Name

Requires you to enter the name of your destination — for example, entering "Rockefeller Center" after selecting the "Performing Arts" sub-category.

Sort by Distance to Travel

The system lists all the places in the sub-category you have selected, starting with the closest to your current location.


a City Vicinity

After you select a city, the system lists all the places in that city that fit the sub-category.

Highlight the desired selection, then push the joystick, or touch the desired selection on the screen.

Place Name

When you select this option, you will see the following screen.

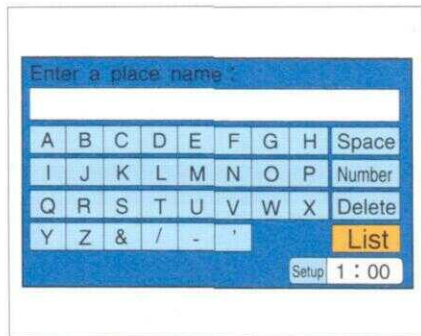

Use the displayed letters to enter the name of the place you want to go by doing either of the following.

- Move the highlighting to each letter with the joystick, then push on the joystick to enter that letter.
- Touch each desired letter on the screen.

The letters you enter are displayed in the box at the top. Use the Space box to create a space between words. Use the Delete box to erase any spelling errors. When you have entered the name, select "List".

CONTINUED



Selecting By Places

The system then displays a list of places in the selected sub-category, starting with those that come closest to matching what you entered. Use the joystick, the ZOOM IN/OUT buttons, or the triangles in the upper right corner of the screen to scroll through the list. Select the desired destination by pushing the joystick, or by touching the screen. See "Traveling To Your Destination" on page [42](#).

Sort by Distance to Travel

When you select this option, the system gives you a list of all the places in the sub-category. This list is arranged by distance from your current location, with the closest at the top of the list.



The distance and direction to each destination are shown in the upper right corner of the screen. The distance shown is straight-line distance ("as the crow flies"), not driving distance. The actual distance on a calculated route will be longer.

Use the joystick, the ZOOM IN/OUT buttons, or the triangles in the upper right corner of the screen to scroll through the list. Select the desired destination by doing either of the following.

- Push the joystick up or down to move the highlighting to the desired destination. Then push on the joystick.
- Touch the desired destination box on the screen with your finger.


See "Traveling To Your Destination" on page [42](#).



Selecting By Places

a City Vicinity

When you select this option, you will see the following display.

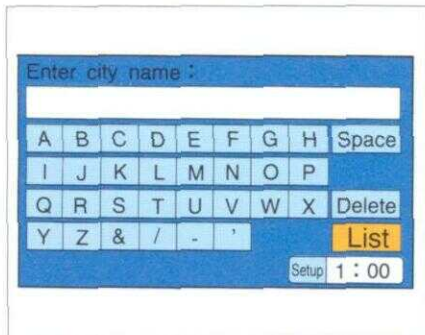

Use the displayed letters to enter the name of the desired city.

- Move the highlighting to each letter with the joystick, then push on the joystick to enter that letter.
- Touch each letter on the screen.

Each entered letter will appear on the top of the display. Use the "Space" box to enter a space between words. Use the "Delete" box to erase a letter entered incorrectly.

As you enter the city name, the system searches its database for a name that matches the letters you are entering. When it finds only one city that matches, it completes the entry of the name for you.

If the system does not find an exact match, continue entering the name of the city. Select "List" when you are finished.

The system then displays a list of cities, with the name that most closely matches what you entered at the top. Use the joystick, the ZOOM IN/OUT buttons, or the triangles in the upper right corner of the screen to scroll through the list. When you find the desired city, do either of the following.

- Highlight it with the joystick, then push the joystick.
- Touch the name on the screen.

You may also select a city by entering only the first character or first few characters of the name. The system will display a list of city names beginning with that character or characters. Scroll through the list, find the desired city, and select it as described.

CONTINUED



Selecting By Places

Once you have selected the city, the system will display a list of places in that city that fit the desired category. Scroll through that list, find the desired destination, then use the joystick, or screen touch to select it.

The system searches within a 20 mile radius of the city's center for places that fit the desired category. If none are found, the message "No POI Found in a 20 mile Search" is displayed.

In urban areas, the points of interest may be in adjacent cities that are within the 20 mile radius.

Once you have selected a destination, the system will ask for the type of route that you desire, calculate the route, and give you your first route instruction. See "Traveling To Your Destination" on page 42.

Advanced

When you select this option, the display changes to:



Use the displayed letters to enter the name of the sub-category you desire. Enter each letter by doing one of the following.

- Highlight it with the joystick, then push the joystick.
- Touch each desired letter on the screen.


Selecting By Places

Each entered letter will appear on the top of the display. Use the "Space" box to enter a space between words. Use the "Delete" box to erase a letter entered incorrectly.

As you enter the sub-category name, the system searches its database for a sub-category that matches the letters you are entering. When it finds only one that matches, it completes the entry for you.

If the system does not find an exact match, continue entering the sub-category. Select "List" when you are done.

The display changes to:

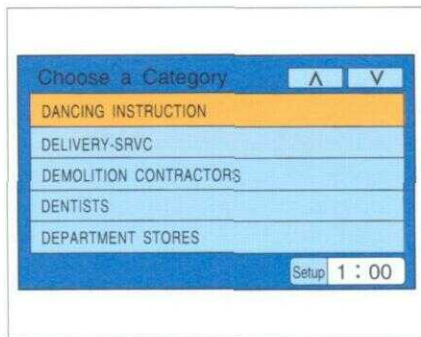

At the top of the list is the sub-category that most closely matches what you entered. Use the joystick, the ZOOM IN/OUT buttons, or the triangles in the upper right corner of the screen to scroll through the list. Select the desired sub-category by pushing the joystick, or by touching the screen.

The system will then give you the options of "Place Name," "Sort by Distance to Travel," or "a City Vicinity." Refer to the previous pages for explanations of these options.