




Selecting By Previous Destination

Every time you use one of the Main Menu options to enter a destination, that destination is saved by the system. It saves the last 20 destinations entered. Use the "Previous Destination" option to select one of those destinations.

To select the Previous Destination option in the Main Menu, do either of the following.

- Push the joystick up or down to move the highlighting to the Previous Destination box. Then push on the joystick.
- Touch the Previous Destination box on the screen with your finger.

After you select the option, the display changes to:

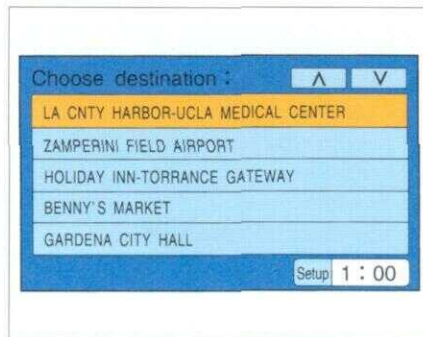

The system lists the last 20 destinations entered, with the most recent appearing first. Scroll through this list by pushing the joystick up and down, using the ZOOM IN/OUT buttons, or by touching the triangles in the upper right corner of the screen.

When you find the desired destination, touch the name on the screen,

or highlight it, then push the joystick.

Once you have selected the destination, the system will ask for the type of route that you desire, calculate the route, and give you your first route instruction. See "Traveling To Your Destination" on page 42.