




Selecting By Map Input

To select the "Map Input" option in the Main Menu, do either of the following.

- Push the joystick up or down to move the highlighting to the Map Input box. Then push on the joystick.
- Touch the Map Input box on the screen with your finger.


After you select the option, the display changes to:

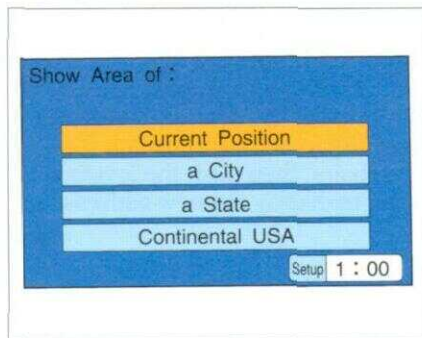

Current Position

The Current Position option assumes that you are looking for a destination in the immediate area.

Select this option by touching the screen, or by highlighting the box and pushing the joystick. The display changes to:

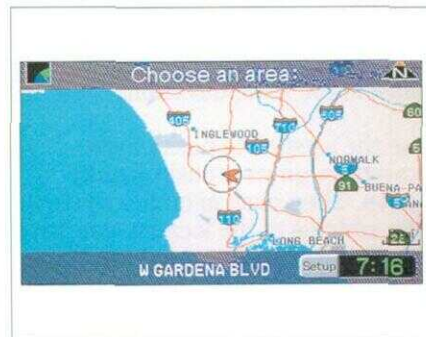

CONTINUED



Selecting By Map Input

If the map is hard to read, use the Zoom buttons to change the scale. Press ZOOM IN to get greater detail, and ZOOM OUT to get less detail. After changing the scale, give the system several seconds to redraw the map on the screen.

The red arrow is your current position. Find your desired destination by pushing the joystick left, right, up, or down. The map will move in the same direction.


Use the joystick to position the crosshairs on your desired destination. Then push in on the joystick. The address of the location you have selected will appear at the top of the screen.

If this is the desired destination, push the joystick again. The system will then calculate the route to that destination. See "Traveling To Your Destination" on page 42.

If this is not the desired destination, use the joystick to reposition the crosshairs, then push the joystick again to display the new address.

A City

Select this option by touching the screen, or by pushing the joystick. The display changes to:

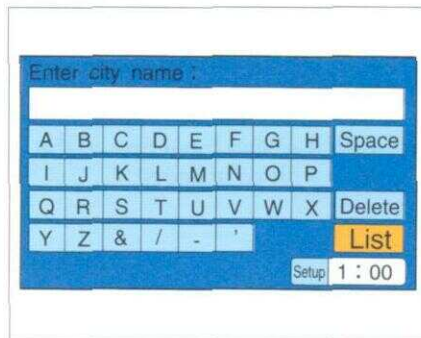

Use the displayed letters to enter the name of the destination city.



Selecting By Map Input

- Move the highlighting to each desired letter with the joystick, then push in on the joystick to enter that letter.
- Touch each desired letter on the screen.

Each entered letter will appear on the top of the display. Use the "Space" box to enter a space between words. Use the "Delete" box to erase a letter entered incorrectly.

The system searches the database for a name that matches the letters you are entering. When it finds only one city that matches, it completes the entry for you. Select "List" to select that city. If the system does not complete the entry, select "List" after you have entered all or part of the name. The system then displays a list of city names, starting with those that most closely match the name you entered.

Push the joystick up or down to scroll through the list city by city. To scroll up or down a screen at a time, use the ZOOM/IN OUT buttons, or touch one of the triangles in the upper right corner of the screen. When you find the desired city, do either of the following.

- Highlight it with the joystick, then push the joystick.
- Touch the name on the screen.


After you have entered the desired city, the display changes to a map. The starting location will be the Civic Center/City Hall of the selected city. Refer to "Current Position" on the previous pages for instructions on finding and entering your desired destination.



Selecting By Map Input

State

After you select the option, the display changes to:

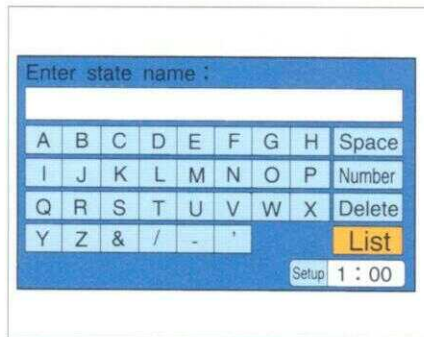

Use the displayed letters to enter the name of the desired state. Enter each letter by doing one of the following.

- Highlight it with the joystick, then push the joystick.
- Touch each desired letter on the screen.


Each entered letter will appear on the top of the display. Use the "Space" box to enter a space between words. Use the "Delete" box to erase a letter entered incorrectly.

The system searches the database for a state name that matches the letters you are entering. When it finds only one state that matches, it completes the entry for you. If the system does not complete the entry, select "List" after you have entered all or part of the name. The system then displays a list of state names, starting with those that most closely match the name you entered.

Use the joystick, the ZOOM IN/OUT buttons, or the triangles in the upper right corner of the screen to scroll through the list. Select the desired state by pushing the joystick, or by touching the screen.

Selecting By Map Input

The display changes to a map of the state, with the crosshairs located near the middle:

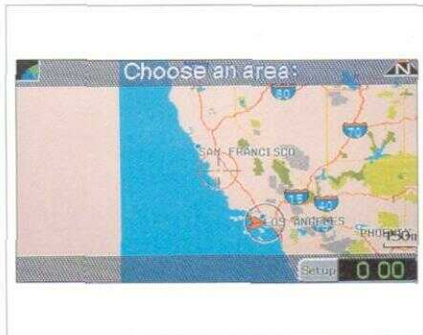

Use the joystick to move the crosshairs to the area of the state you are interested in. If desired, use the ZOOM IN/OUT buttons to change the map scale. When you have the crosshairs in the desired area, press the joystick.

The map scale changes to a closer view. Move the crosshairs to the desired destination, then push in on the joystick. The address of the location you have selected will appear at the top of the screen.


If this is the desired address, push the joystick again to select it. If it is not, use the joystick to reposition the crosshairs, then push the joystick again.



Selecting By Map Input

Continental USA

When you select this option, the display changes to:

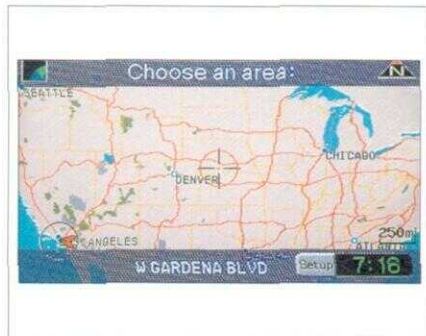

Use the joystick to move the crosshairs to the area of the country you are interested in. Then push in on the joystick.

The map scale changes to display a closer view of the area you selected. Use the joystick to move the crosshairs to the area you are interested in. If desired, use the ZOOM IN/OUT buttons to change the map scale. When you have the crosshairs in the desired area, press the joystick.

The map scale changes again to a closer view. Move the crosshairs to the desired destination, then push in on the joystick. The address of the location you have selected will appear at the top of the screen.

If this is the desired address, push the joystick again to select it. If it is not, use the joystick to reposition the crosshairs, then push the joystick again.