


Selecting By Today's Destinations

Using the other options in the Main Menu, you can store a list of up to five destinations for later selection. Then you can use the Today's Destinations option in the Main Menu to select the destinations in that list.

Adding Destinations To The List

After you have used any of the other Main Menu options to select a destination, the display changes to:

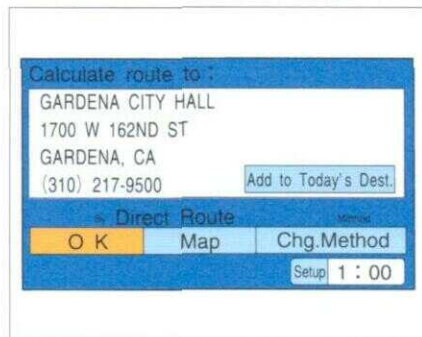

To add this to the destination list, select "Add to Today's Destinations."

- Use the joystick to highlight the box, then push in on the joystick.
- Touch the box on the screen.

The display then changes to show you all the current entries in the Today's Destinations list. Press the MENU button to return to the Main Menu.

Use this procedure to enter up to five destinations in the list. If the list is full, the "Add to Today's Destinations" box will be grayed out so it cannot be selected.




Selecting By Today's Destinations

Selecting Destinations From the List

Select the "Today's Destinations" option in the Main Menu.

- Push the joystick up or down to move the highlighting to the Today's Destinations box. Then push in on the joystick.
- Touch the Today's Destinations box on the screen with your finger.

After you select the option, the display changes to:

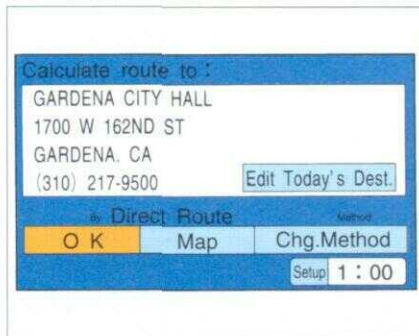

The system displays the first destination in the list. If this is the desired destination, select the type of route. See "Traveling To Your Destination" on page 42 .

If you want to select a different destination from the list, select "Edit Today's Destinations" with the joystick or by touching the screen. The Today's Destinations list is then

displayed.

Select the desired destination by highlighting it with the joystick, then pushing the joystick, or by touching it with your finger.

The display returns to the "Calculate route to:" screen with your desired destination shown. Refer to "Traveling To Your Destination" on page 42 .

When you reach that destination, it will be automatically removed from the list.

If an unselected destination remains in the Today's Destinations list, "NEXT Dest" will be displayed when you reach the current destination. To calculate a route to that destination, touch the "NEXT Dest" box on the screen.




Selecting By Today's Destinations

Editing the List

If your plans change, you can delete a destination from the list.

Select Today's Destinations in the Main Menu. When you see the "Calculate route to;" screen, select "Edit Today's Destinations." The display changes to:

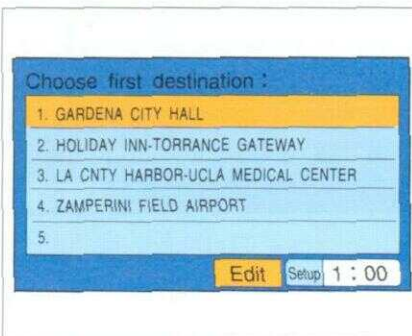

Select "Edit" at the bottom of the screen by highlighting it and then pushing on the joystick, or by touching the box with your finger.

The message at the top of the screen changes to "to delete;". Select the destination you want to delete by highlighting it and pushing on the joystick, or by touching it with your finger. Repeat this to delete as many entries as desired.

When you are done deleting entries, select the "Return" box at the bottom of the screen. Then press the MENU button to return to the Main Menu. If you have deleted all the entries in the Today's Destinations list, the system will return to the Main Menu when you select "Return."

CONTINUED