




Personal Addresses

The Personal Addresses function allows two different users to store up to 50 destinations each. To access and use these destinations requires a Personal Identification Number (PIN). This number can be up to four digits long.

Entering a PIN

To set up or change your own PIN, first display the Setup screen by pressing the Setup icon located next to the clock on the screen. Then select the Others and the Personal PIN option. The display changes to:

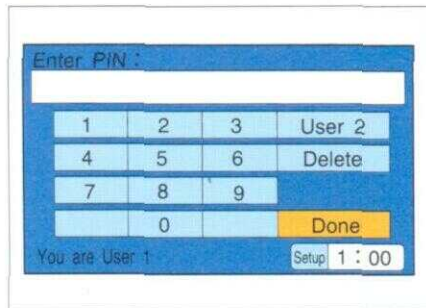


Note which user this screen is for. If you are User 2 and the display says "You are User 1", select the User 2 box. The display will change to "You are User 2".

Use the keypad to enter your PIN (touch the numbers on the screen, or use the joystick). The numbers will not be displayed, only asterisks are shown. When you have entered your PIN, select Done.

NOTE:

There are no PINs in the system when it is new. If this is the first time a PIN is being set up, select Done without entering any numbers.

If you have entered the PIN correctly, the display changes to:

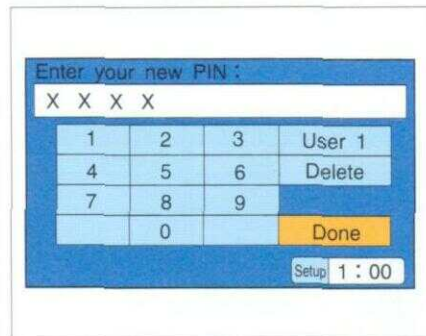

Enter your new PIN (up to four digits). Then select Done.

The display then changes slightly, asking you to re-enter the new PIN. This is to validate the number you have selected. Enter the same number, then select Done. If you have entered the same number both times, the display returns to the Set-up screen. If not, the system repeats the "Enter New PIN-Re-enter New PIN" cycle until you do.

Entering Personal Addresses
Each user can store up to 50 addresses in the system. To begin entering a personal address, select the Setup icon next to the clock. On that screen, select "Address-Personal". The display then changes to:

Enter PIN :

X X X X

1	2	3	User 1
4	5	6	Delete
7	8	9	Done
	0		

You are User2 Setup 1 : 00

Verify that the right user is displayed, enter your PIN, then select Done. The display changes to:

Choose address :

NEW ADDRESS

ADDRESS 2

AMUSEMENT PARK

Return Setup 1 : 00

CONTINUED



Personal Addresses

Select "NEW ADDRESS" at the top of the list. The display changes to:

The Name box is highlighted. You can use this box to give the entry a name or title that you will recognize later, such as "Doctor Smith" or "Rialto Theatre". If you do not give the address a name, the system will assign one: "Address 1", "Address 2", etc.

Select the Name box by pressing the Joystick or by touching the box with your finger. The display changes to:

A	B	C	D	E	F	G	H	Space
I	J	K	L	M	N	O	P	Number
Q	R	S	T	U	V	W	X	Delete
Y	Z	&	/	-	'			Done

Use the displayed letters to enter the desired name by doing either of the following.

- Move the highlighting to each desired letter with the joystick, then push on the joystick to enter that letter.
- Touch each desired letter on the screen.

Each entered letter will appear on the top of the display. Use the "Space" box to enter a space between words. Use the "Delete" box to erase a letter entered incorrectly.



Personal Addresses

Once you have entered the name, select "Done". The display returns to:

Select the address box by highlighting it with the joystick, then pushing the joystick, or by touching the Address box with your finger. The display changes to:

This menu gives you three ways to enter the desired address.

Address

This option requires you to enter the city and address you wish to store. The operation is the same as selecting the "Address" option in the Main Menu. Refer to "Selecting By Address" on page 9 for detailed instructions.

Places

This option allows you to select one of the locations already stored in the system as one of your personal addresses. See "Selecting By Places" on page 22 for instructions.

Previous Destination

This option allows you to store one of the locations in the Previous Destinations list in your Personal Address list. See "Selecting By Previous Destination" on page 32 for instructions.

CONTINUED



Personal Addresses

After you have used one of these three options to enter the address, the display changes back to:

Name :
HOME DOCTOR
Address :
1919 TORRANCE
TORRANCE
Phone Number :
[Empty field]
Done Setup 1 : 00

If desired, you can enter the telephone number of this location. If the address was chosen with the "Places" option, and it has the telephone number, that telephone number is entered automatically. Select the Phone box with the joystick or by touching the box on the screen. The display changes to:

Enter phone number :
[Empty field]
1 2 3
4 5 6 Delete
7 8 9
[Empty field] 0 Find
Setup 1 : 00

Enter the telephone number, including the area code, by touching each digit on the screen, or by using the joystick to highlight each digit.

then pushing the joystick. When you have entered the complete phone number, select Done.

The system will then display everything that you have entered.


Name :
HOME DOCTOR
Address :
1919 TORRANCE
TORRANCE
Phone Number :
(213) 783-2000
Done Setup 1 : 00



Personal Addresses

Verify the information you have entered. If something is incorrect, select the box with the incorrect information either by highlighting the box with the joystick, then pushing the joystick, or by touching the box on the screen. Repeat the process of entering the information in that box.


If all the information is correct, select Done. This will return you to your personal address list.

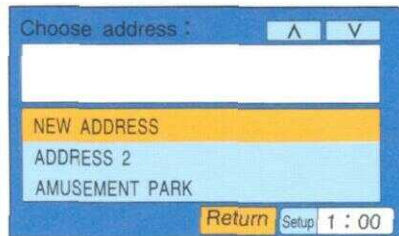

If you want to enter another personal address, select New Address. If not, select Return.

Updating a Personal Address

To change information in a previously-stored personal address, press the Setup icon to select the Setup menu. As before, select Address — Personal in that menu, verify the user, then enter your PIN. Your personal address list will be displayed.

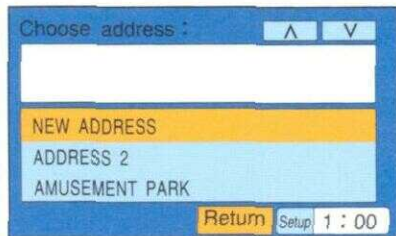

Use the joystick, the ZOOM IN/OUT buttons, or touch the triangles in the upper right corner of the screen to scroll through the list. Select the location you wish to update by doing one of the following.

- Use the joystick to highlight the location, then push on the joystick.
- Touch the location box on the screen with your finger.

The display changes to:



CONTINUED



Personal Addresses

To remove that location from your personal address list, select "To Erase". The system will remove all the information about that location from the list, then return the display to the personal address list.

To change information in that listing, select "To Update". The information about that location will be displayed.

Enter destination by :

Address	Places
Intersection	Map Input
Phone No. (POI)	Personal Address
Previous Destination	
Today's Destinations	

Name :
HOME DOCTOR

Address :
1919 TORRANCE
TORRANCE

Phone Number :
(213) 783-2000

Done Setup 1 : 00

Select the appropriate box, "Name", "Address", or "Phone Number", that needs updating. Follow the instructions under "Entering Personal Addresses" to change the information in that box.

After you have completed the changes, and verified them on the screen, select Done to return to your personal address list.

Repeat this process to update or delete another location in your personal address list. If you are finished, select Return.

Selecting a Personal Address as a Destination

Selecting a personal address entry for use by the Navigation System is done from the Main Menu.

Enter destination by :

Address	Places
Intersection	Map Input
Phone No. (POI)	Personal Address
Previous Destination	
Today's Destinations	

Setup 1 : 00



Personal Addresses

Select the "Personal Address" option.
The display changes to:

Enter PIN :

1	2	3	User 2
4	5	6	Delete
7	8	9	
	0		Done

You are User 1 Setup 1 : 00

Verify that the correct user is
selected, then enter your PIN.

Your Personal Address list will then
be displayed.

Choose :

1919 TORRANCE BLVD
(213) 783-2000

DENTIST
DOCTOR SMITH
HOME

Setup 1 : 00

Use the joystick, the ZOOM IN/OUT buttons, or touch the triangles in the upper right corner of the screen to scroll through the list. When you find the desired location, highlight and select it by pushing on the joystick, or select it by touching the location box on the screen.

The system takes that as your desired destination and begins to calculate the route. See "Traveling To Your Destination" on page [42](#) .