



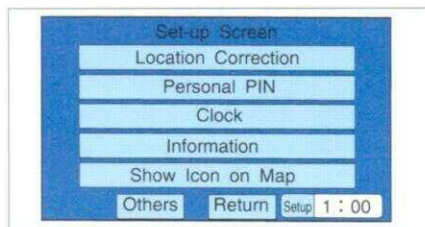

System Setup

The Setup screen allows you to change and update information in the system. To display the Setup screen, press the Setup icon located next to the clock. This can be done at any time. Pressing "Others" shows you the second page of the Setup Screen.

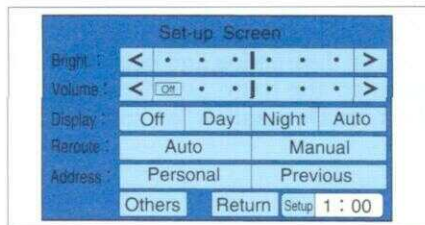

To make selections on this screen, do either of the following.

- Use the joystick to highlight the desired choice. Then push the joystick.
- Touch the desired choice with your finger.

Bright

The screen brightness has 11 settings. To change the brightness, move the cursor by pushing the joystick left or right, or by touching the dots or arrow mark in the bar on the screen.

Volume

The volume of the tones and voice is adjusted in 11 steps. To adjust the volume, move the cursor by pushing the joystick left or right, or by touching the dots or arrow mark in the bar on the screen.

After adjusting the volume, you will

hear beeps at the new volume level.

Display

Adjust the brightness of the display. In all settings, except Off, the screen will dim when you turn on the headlights. The brightness of the screen with the headlights on and off is higher in the Day setting than in the Night setting. The Auto setting gives the widest range of brightness — using the Day brightness when the headlights are off, and the Night brightness when the headlights are on. Use the Bright setting on this Setup screen to fine-tune the brightness to your liking.



System Setup

When the headlights are on, you can brighten the display by pushing the joystick and holding it for ten seconds. Push and hold the joystick again to return the display to its original brightness.

Use Off to turn off the screen if you are not using the system to find a destination. Push any button to turn the screen back on.

Reroute


This option allows you to select either manual or automatic recalculation when you go off-route. See page [49](#) .

Address

This option allows you to add, modify, and delete information in the Personal Address list, and to delete information from the Previous Address list.

To use this Address option with the Personal Address list, see "Personal Addresses" on page [52](#) .

When you select the Previous Address option, the display changes to:

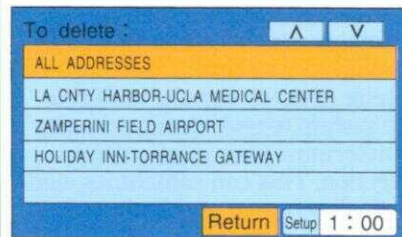

Use the joystick, the ZOOM IN/OUT buttons, or the triangles in the upper right corner of the screen to scroll through the list. Find the address you want to delete, highlight it, then push the joystick. The highlighted address will be deleted, and the addresses below it will shift up.



System Setup

Location Correction

Use this option if the position of the vehicle in a map display does not match your actual position.

The system relies on satellites for positioning information. Buildings, tunnels and other objects can block receipt of these signals, requiring the system to use "dead reckoning" to determine your location and direction. This can sometimes lead to small errors in positioning.

If you find that the map position is not correct (for example, you are sitting at an intersection, but the display shows you have already gone through the intersection), stop the car. The car must be at a full stop before you can correct the position.

Push the Setup icon to display the Setup screen, then select the Location Correction option. This will return you to the map display. Use the joystick to move the location arrow to the correct location. Touch the arrows on the left side of the screen to rotate the arrow so it is pointing in the correct direction.




When you have finished, press the joystick. If you do not press the joystick, the new position will automatically be entered when the vehicle starts to move.

Personal PIN

This option allows you to change your Personal Identification Number. See "Personal Addresses" on page 52.

Clock

This option lets you set the clock that appears in the lower right corner of most screens. When you select this option, the display changes to:

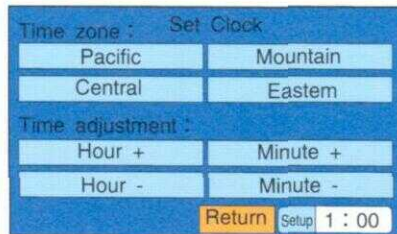


If the time zone is incorrect, select the correct time zone by highlighting it, then pushing the joystick, or by touching the proper time zone box with your finger.

Change the hour or minutes setting by selecting the proper box. For example, to change 10:41 to 10:44, select the "Minute +" box three times.

When you have finished, select the Return box.

Information

Selecting this option displays information about the Navigation System's software.

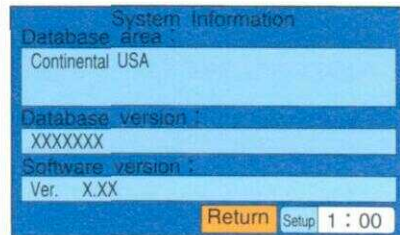


When you have finished reviewing this information, select Return to go back to the Setup screen.



System Setup

Show Icon on Map

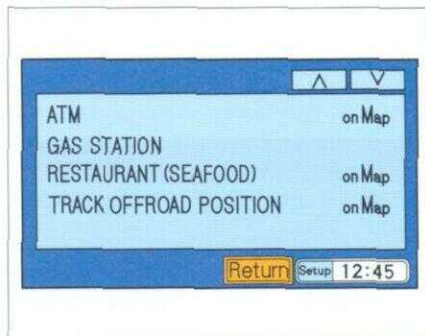

This option lets you select what icons, if any, will be displayed on the Map. The icons will show the locations of ATMs, gas stations, and restaurants.

To select the icon for display, touch the desired item. "onMap" appears on the right side of the screen. Touch it again to turn it off.

When you select the restaurant icon to be on the map, you can also select what type of restaurants (all types, Chinese, Seafood, etc.) should be shown.

Return

This option returns you to the screen that was displayed before you pressed the Setup icon.