



Keep the inside and outside mirrors clean and adjusted for best visibility. Be sure to adjust the mirrors before you start driving.

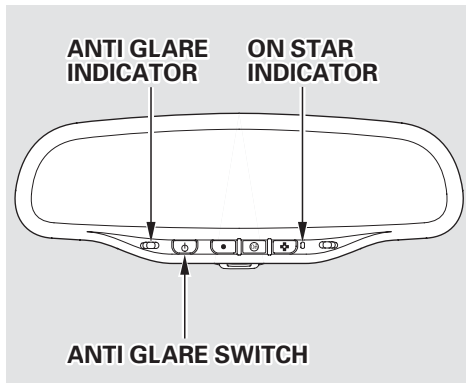

The inside mirror has an automatic anti-glare mechanism. When the AUTO switch is pushed in, the indicator will light. When the mirror senses light from the headlights of the car behind you, the mirror surface will automatically darken to reduce the glare.

Adjusting the Power Mirrors

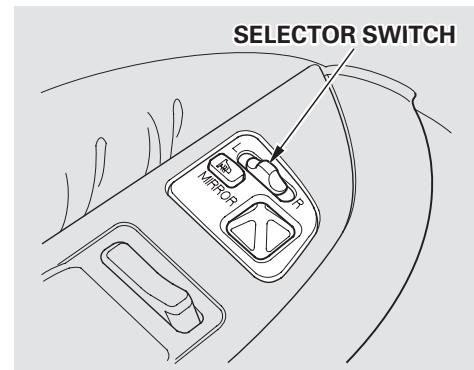


Adjust the outside mirrors with the adjustment button on the driver's door armrest:

1. Turn the ignition switch ON (II).
2. Move the selector switch to L (driver's side) or R (passenger's side).

CONTINUED


Mirrors

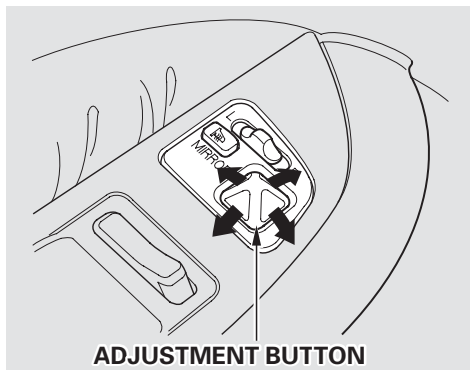

3. Move the mirror right, left, up or down by pushing the adjustment button in that direction.

4. When you finish, move the selector switch to the center (off) position. This turns off the adjustment button so you can't move a mirror out of position by accidentally bumping the button.

Outside mirror positions can be stored in the driving position memory system (see page [93](#)).

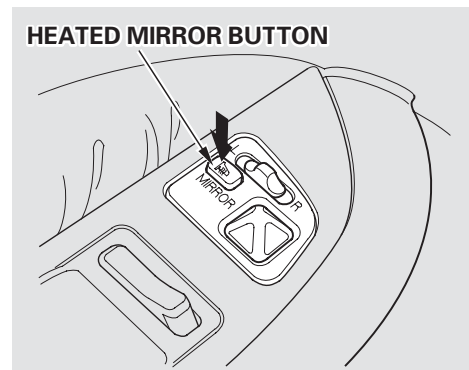

The outside mirrors are heated to remove fog and frost. With the ignition switch ON (II), turn on the heaters by pressing the button. The light in the button comes on as a reminder. Press the button again to turn the heaters off.