




Driving Position Memory System

Your Acura has a memory feature for the steering wheel, driver's seat, and outside mirror positions.

Two seat, steering wheel, and outside mirror positions for different drivers or driving conditions can be stored in separate memories. You select a memorized position by pushing the appropriate button.

Storing a Driving Position in Memory
Store a driving position as explained in this section only when the car is parked.

1. Turn the ignition switch ON (II). You cannot add a new driving position in the memory unless the ignition switch is ON (II). You can recall a memorized position with the ignition switch in any position.
2. Adjust the seat to a comfortable position (see page 86). Adjust the steering wheel to a comfortable position (see page 71). Adjust the outside mirrors for best visibility (see page 91).

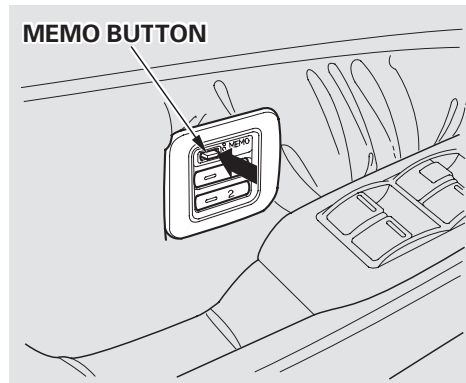

3. Press and release the MEMO button on the control panel. You will hear a beep. Immediately press and hold one of the memory buttons (1 or 2) until you hear two beeps. The indicator light in the memory button will come on. The current positions of the driver's seat, steering wheel, and outside mirrors are now stored.

CONTINUED



Driving Position Memory System


Doing any of the following after pressing the MEMO button will cancel the storing procedure.

- Not pressing a memory button within 5 seconds.
- Readjusting the seat or steering position.
- Readjusting the outside mirror position.

Each memory button stores only one driving position. Storing a new position erases the previous setting stored in that button's memory. If you want to add a new position while retaining the current one, use the other memory button.

All stored driving positions will be lost if your car's battery goes dead or is disconnected.

Selecting a Memorized Position

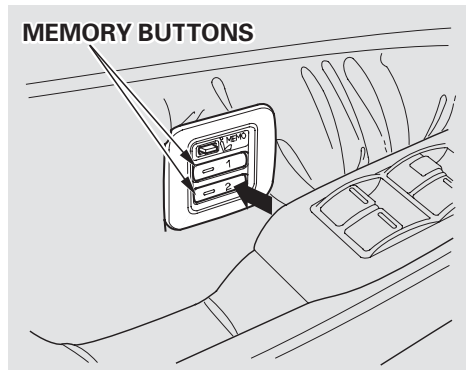

You can select memorized positions as follows.

1. Make sure the parking brake is set and the shift lever is in Park.
2. Insert the key in the ignition switch. If you do not insert the key in the ignition switch, the steering wheel will not adjust to the memorized position until you do.

3. Press the desired memory button (1 or 2) until you hear a beep, then release the button.

The system will move the seat, steering wheel and outside mirrors to the memorized positions. The indicator light in the selected memory button will flash during movement. When the adjustments are complete, you will hear two beeps and the indicator light will remain on.



Driving Position Memory System, Seat Heaters


To stop the system's automatic adjustment;

- Press any button on the control panel: MEMO, 1 or 2.
- Push any of the adjustment switches for the seat or steering wheel.
- Shift out of Park.
- Adjust the outside mirrors.

If you select a memorized position without inserting the key in the ignition switch, only the seat and outside mirrors will adjust. To get the system to also adjust the steering wheel, insert the key in the ignition switch. You will hear two beeps when it is complete.

If desired, you can use the adjustment switches to change the positions of the seat, steering wheel or outside mirrors after they are in their memorized position. To keep this driving position for later use, you must store it in the driving position memory.

Seat Heaters

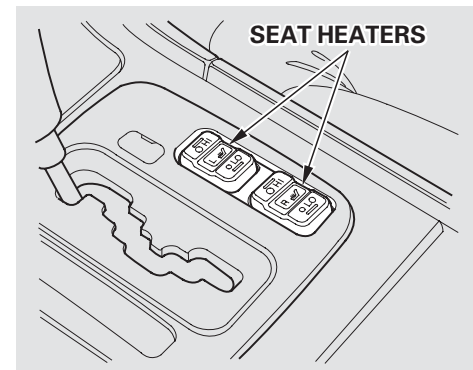

Both front seats are equipped with seat heaters. The ignition switch must be ON (II) to use them. Push the front of the switch, HI, to rapidly heat up the seat. After the seat reaches a comfortable temperature, select LO by pushing the back of the switch. This will keep the seat warm.

CONTINUED



Seat Heaters, Ski Sleeve

The HI or LO indicator lights and remains lit until you turn it off by pushing the opposite side of the switch lightly. The indicator will turn off.

In HI, the heater turns off when the seat gets warm, and turns back on after the seat's temperature drops. It continues to cycle as long as you leave it set on HI. The HI indicator remains lit as a reminder that you have the heater on.

In LO, the heater runs continuously. It does not cycle with temperature changes.


Because of the sensors for the side airbag system, there is no heater in the passenger's seat-back.

Follow these precautions whenever you use the seat heaters:

- Use the HI setting only to heat the seats quickly. Select the LO setting when the seats feel warm. The HI setting draws large amounts of current from the battery.
- Do not use the seat heaters, even on the LO setting, if the engine is left idling for an extended period. They can weaken the battery, causing hard starting.


Ski Sleeve

The ski sleeve allows you to carry skis or other long objects safely without soiling or damaging the interior of your car. It attaches to the trunk pass-through.

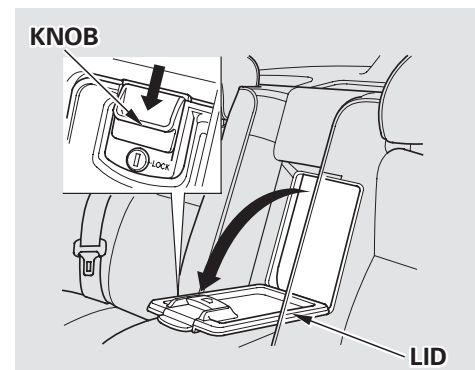


To use the ski sleeve:

1. Pull down the rear seat armrest. Open the trunk pass-through cover by sliding the knob downward and pulling on the cover.

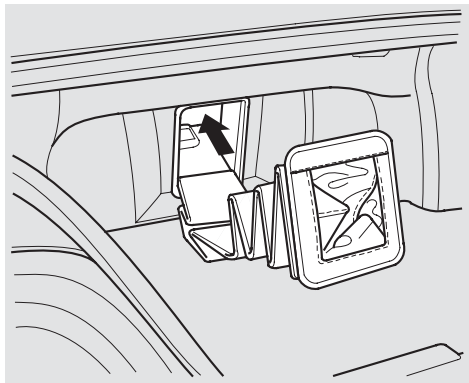

2. Open the trunk. Remove the ski sleeve from its storage bag.
3. Attach the ski sleeve to the trunk pass-through.
4. Load the skis into the ski sleeve from the trunk. Make sure the tip of the ski sleeve is resting on the center console.

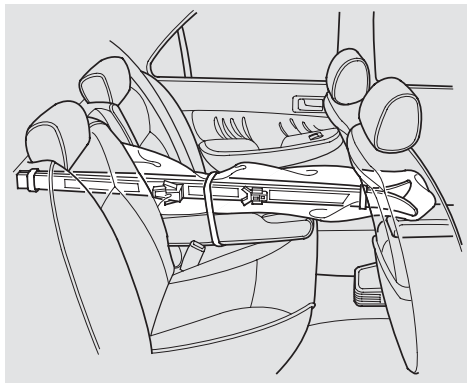

5. Use the strap on the ski sleeve to secure it tightly to the rear seat armrest.

Follow these precautions when you use the ski sleeve:

- Do not transport skis that are longer or heavier than these limits:
Maximum length: 84 in (215 cm)
Maximum weight: 55 lbs (25 kg)
- After use, make sure the ski sleeve is dry both inside and out before folding it up for storage. This will help to prevent mildew.