




Parking Brake, Digital Clock

Parking Brake

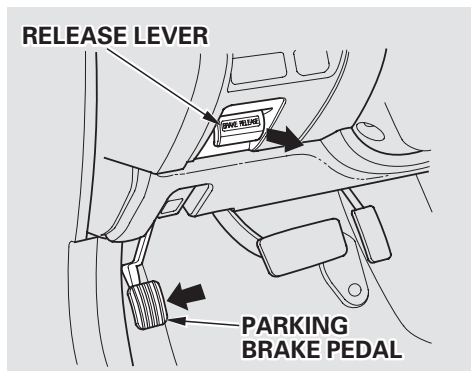


To apply the parking brake, depress the pedal fully. To release it, pull the release lever. The parking brake light on the instrument panel should go out when the parking brake is fully released with the engine running (see page 54). If you try to drive the car without releasing the parking brake, the ABS indicator may come on, and the ABS may not work properly. The VSA system indicator will also come on along

with the ABS indicator (see page 199).

NOTICE


Driving the car with the parking brake applied can damage the rear brakes and axles.

Digital Clock

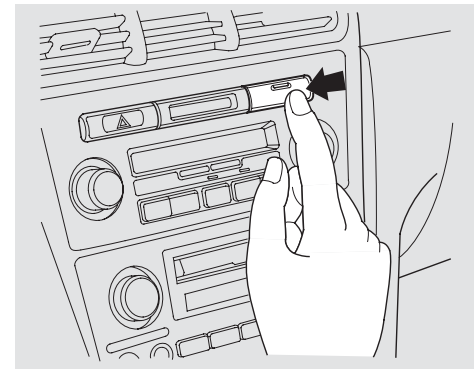

3.5 RL without Navigation System

The digital clock displays the time with the ignition switch ON (II). To see the time with the ignition off, press and hold the wide button to the right of the clock.

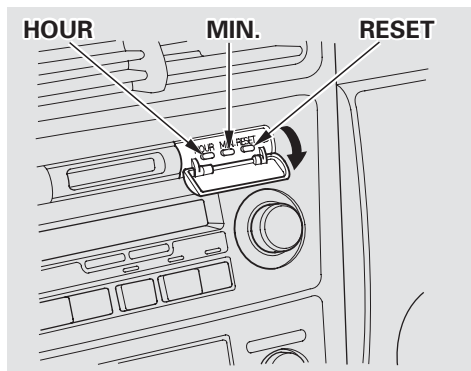

To set the clock:

1. Turn the ignition switch ON (II) to display the time.
2. Swing down the front cover of the wide button to the right of the clock display. You will see HOUR, MIN., and RESET buttons.

3. Press and hold the HOUR button until the hour advances to the desired hour.
4. Press and hold the MIN. button until the numbers advance to the desired time.

You can use the RESET button to quickly set the time to the nearest hour. If the displayed time is before the half hour, pressing the RESET button sets the clock back to the previous hour. If the displayed time is after the half hour, pressing the RESET button sets the clock forward to the beginning of the next hour.

For example:

- 1:06 would RESET to 1:00.
- 1:52 would RESET to 2:00.