




Courtesy Lights

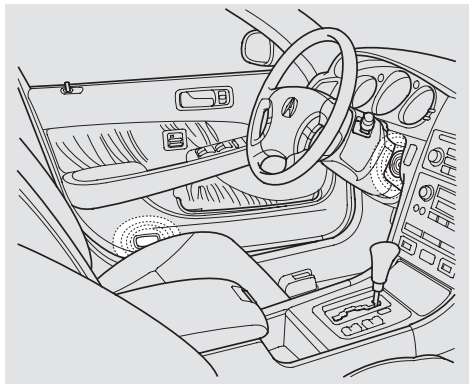

In addition to the ceiling lights, your Acura has courtesy lights in each door and the ignition switch.

The door courtesy lights come on whenever you open any door. After all doors are closed tightly, they dim slightly then fade out in about 10 seconds.

Even if the door is open, the lights will turn off after three minutes when the key is not in the ignition switch or the ignition switch is in the LOCK (0) or ACCESSORY (I) position, and the light switch is in the off position.

The door courtesy lights and ceiling lights (with the switch in the center position) come on when you unlock the door with the key, lock tab on the driver's door, master door lock switch, or remote transmitter (see page 79). If you relock the driver's door or close the driver's door with the key in the ignition switch, the lights turn off immediately. Otherwise, they remain on, then fade out in about 10 seconds.

The door courtesy lights and ceiling lights (with the switch in the center position) also come on when you remove the key from the ignition switch. If you do not open a door, they stay on, then fade out in about 10 seconds.

The courtesy light in the ignition switch comes on when you open the driver's door. It remains on about 10 seconds after the door is closed.