



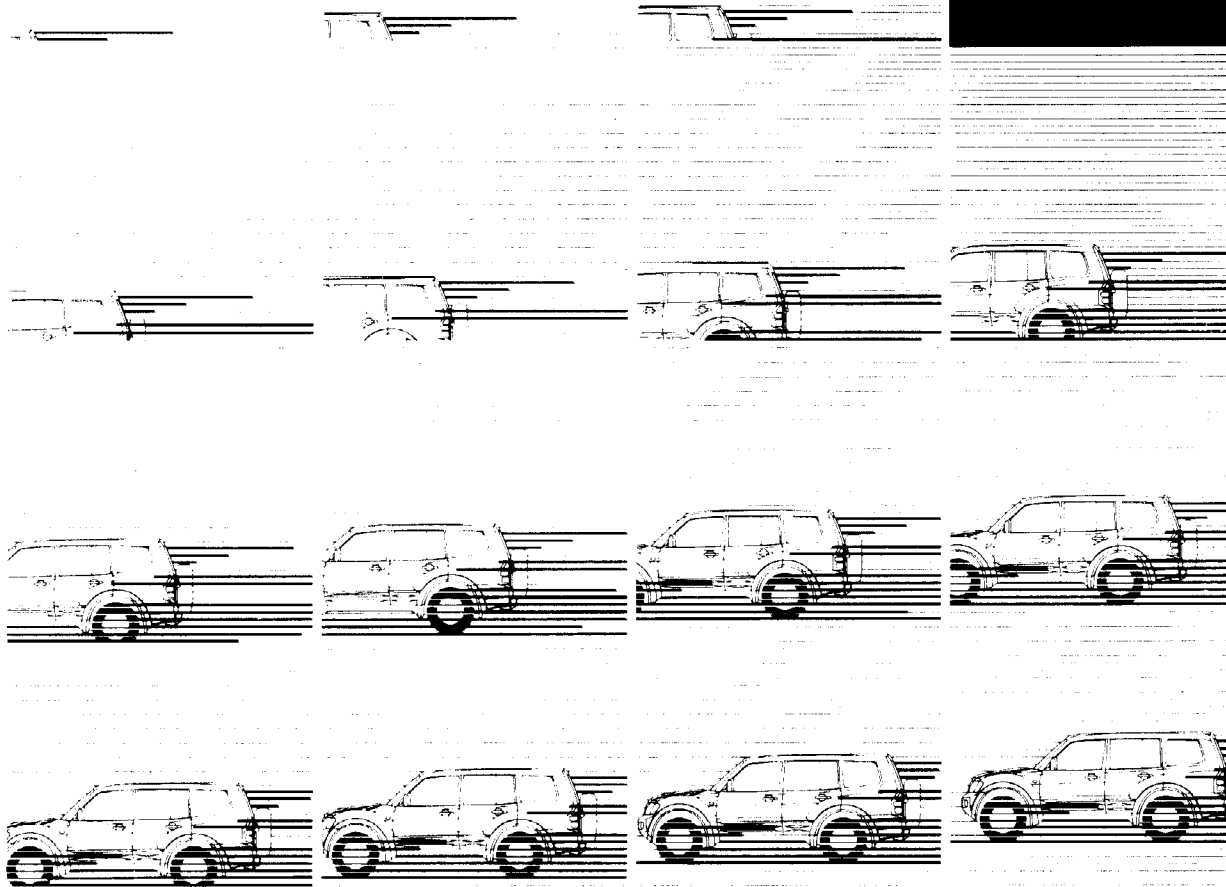

Workshop Manual

electrical wiring

PAJERO 2001

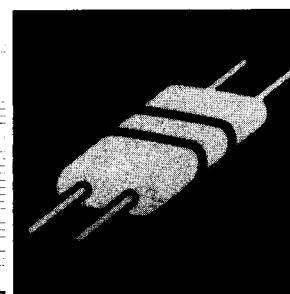

MITSUBISHI PAJERO

ELECTRICAL WIRING

FOREWORD

This Electrical Wiring Manual contains information necessary for inspection and servicing of electrical wiring of Mitsubishi PAJERO edited in the form of wiring harness configuration diagrams and function-separated circuit diagrams.

It is recommended that all service mechanics engaged in the servicing of the vehicle refer to the following publications as well as this manual.

TECHNICAL INFORMATION MANUAL
PYJE0001

WORKSHOP MANUAL
CHASSIS GROUP
PWJE0001
BODY REPAIR MANUAL
PBJE0001
ENGINE GROUP
PWEE□□□□
(Looseleaf edition)

PARTS CATALOGUE
B603H601A□

All information, illustrations and product descriptions contained in this manual are current as of time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

GROUP INDEX

00109001806

GENERAL

0

WIRING HARNESS
CONFIGURATION DIAGRAMS

1

SINGLE PART INSTALLATION
POSITION

2

CIRCUIT DIAGRAM

3

INDEX

4

 **MITSUBISHI MOTORS CORPORATION**

"GDI" is a trade mark which Mitsubishi Motors Corporation holds.

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLE

00100010562

WARNING!

- (1) Improper service or maintenance of any component of the SRS or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) SRS components should not be subjected to heat over 93 °C, so remove the SRS-ECU, air bag module (driver's side and front passenger's side) and clock spring before drying or baking the vehicle after painting.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B—Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS or any SRS-related component.

HOW TO USE THIS MANUAL

CONTENTS

The preceding page contains GROUP INDEX that lists the group title and group number.

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page number can be found on the top left or right of each page.

OPERATION AND TROUBLESHOOTING HINTS

In the GROUP 3 circuit diagrams, the operation and troubleshooting hints are given on the previous page or following page for each circuit where necessary.