

INDEX (In order of connector No.)

90109010168

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
A-01	Motor antenna	3-587, 591, 597, 609	1-4, 6
A-02	Motor antenna	3-587, 591, 597, 609	1-4, 6
A-03	Side turn signal lamp (LH)	3-252, 256, 310, 322	1-4, 6
A-04	Front wiring harness and control wiring harness combination	3-74, 106, 138, 164, 167, 180, 184, 328, 354, 355, 366, 367, 378, 379, 388, 389, 418, 419, 428, 429, 458, 459, 470, 471, 482, 483, 494, 495, 514, 515, 534, 535, 624, 640, 652, 664, 676, 688, 690, 698, 706, 746, 750	1-4, 6
A-05	Front wiring harness and control wiring harness combination	3-63, 64, 69, 70, 71, 355, 361, 367, 373, 379, 389, 399, 409, 419, 429, 439, 449, 458, 464, 471, 477, 483, 489, 494, 504, 515, 525, 535, 545, 741	1-4, 6
A-06X	Horn relay	3-33, 41, 49, 57, 266	1-4, 6
A-07X	Front-ECU	3-36, 37, 44, 45, 52, 53, 61, 194, 198, 202, 203, 206, 207, 210, 214, 219, 223, 251, 553, 557, 580, 582, 758, 760	1-4, 6
A-08X	Front-ECU	3-37, 45, 53, 61, 195, 199, 203, 207, 210, 214, 218, 222, 251, 552, 556, 580, 582, 758, 760	1-4, 6
A-09X	Front fog lamp relay	3-31, 39, 47, 55, 210, 214	1-4, 6
A-10X	Condenser fan relay (HI)	3-354, 360, 366, 372, 378, 388, 398, 408, 418, 428, 438, 448, 458, 464, 470, 476, 482, 488, 494, 504, 514, 524, 534, 544	1-4, 6
A-11X	Condenser fan relay (LO)	3-354, 360, 366, 372, 378, 388, 398, 408, 418, 428, 438, 448, 470, 476, 482, 488, 514, 524, 534, 544	1-4, 6
A-12X	Wiper deicer relay	3-568, 569	1-4, 6
A-13X	A/C compressor relay	3-355, 361, 367, 373, 379, 389, 399, 409, 419, 429, 439, 449, 458, 464, 471, 477, 483, 489, 494, 504, 515, 525, 535, 545	1-4, 6
A-14	J/C (1)	3-8, 16, 252, 256, 310, 322	1-4, 6
A-15	J/C (2)	3-8, 16, 35, 43, 59, 194, 195, 198, 199, 203, 207, 210, 214, 218, 222, 328, 354, 360, 366, 372, 378, 388, 398, 408, 418, 428, 438, 448, 458, 464, 470, 476, 482, 488, 494, 504, 514, 524, 534, 544, 553, 557, 568, 569, 580, 582, 690, 694, 698, 702, 706, 710	1-4, 6

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
A-16	J/C (3)	3-9, 17, 194, 198, 250, 266, 355, 361, 367, 373, 379, 389, 399, 409, 419, 429, 439, 449, 458, 464, 471, 477, 483, 489, 494, 504, 515, 525, 535, 545, 688, 690, 694, 698, 702, 706, 710	1-4, 6
A-17	PTC heater relay 1	3-328, 330	1-4, 6
A-18	Position lamp (LH)	3-202, 206	1-4, 6
A-19	Front turn signal lamp (LH)	3-252, 256, 310, 322	1-4, 6
A-20	Headlamp leveling unit (LH)	3-250	1-4, 6
A-21	Headlamp (LH)	3-194, 198	1-4, 6
A-22	Front fog lamp (LH)	3-210, 214	1-5, 7
A-23	Wheel speed sensor (Front:LH) <ABS>	3-624, 632, 640, 648	1-5, 7
A-24	Dual pressure switch <A/C>	3-356, 362, 368, 374, 384, 394, 404, 414, 424, 434, 444, 454, 459, 465, 471, 477, 483, 489, 495, 505, 515, 525, 535, 545	1-5, 7
A-25	Front impact sensor (LH)	3-715, 717, 721, 723	1-5, 7
A-26	Front wiring harness and front fog lamp wiring harness combination	3-210, 214	1-5, 7
A-27	Condenser fan motor	3-354, 360, 366, 372, 378, 388, 398, 408, 418, 428, 438, 448, 458, 464, 470, 476, 482, 488, 494, 504, 514, 524, 534, 544	1-5, 7
A-28	Horn (HI)	3-266	1-5, 7
A-29	Horn (LO)	3-266	1-5, 7
A-30	Outside thermo sensor	3-461, 467, 473, 479, 485, 491, 497, 507, 517, 527, 537, 547, 600, 612	1-5, 7
A-31	Front impact sensor (RH)	3-715, 717, 721, 723	1-5, 7
A-32	Headlamp leveling unit (RH)	3-250	1-5, 7
A-33	Front fog lamp (RH)	3-210, 214	1-5, 7
A-34	Headlamp (RH)	3-194, 198	1-5, 7
A-35	Windshield washer motor	3-552, 556	1-5, 7
A-36	Headlamp washer motor	3-580, 582	1-5, 7
A-37	Front turn signal lamp (RH)	3-252, 256, 310, 322	1-5, 7
A-38	Position lamp (RH)	3-203, 207	1-5, 7
A-39	Wheel speed sensor (Front:RH) <ABS>	3-624, 632, 640, 648	1-5, 7
A-40	Solenoid valve A	3-688, 690, 694, 698, 702, 706, 710	1-5, 7
A-41	Solenoid valve B	3-688, 690, 694, 698, 702, 706, 710	1-5, 7

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
A-42	Side turn signal lamp (RH)	3-252, 256, 310, 322	1-5, 7
A-43	PTC heater relay 2	3-328	1-5
B-01	Wiper deicer	3-568, 569	1-8, 10, 12, 14, 16, 20
B-02	Lever (throttle) position sensor	3-158, 160, 709, 713	1-8, 10
B-03	Fuel cut valve controller	3-754, 756	1-8, 10
B-04	Ignition failure sensor	3-66, 78, 94, 110, 126, 268, 272, 459, 465, 495, 505	1-16, 20
B-05	Detonation sensor	3-83, 99, 115, 131	1-16, 20
B-06	Glow plug	3-73, 144, 154, 158, 160	1-8, 10, 12, 14
B-07	Injection pump assembly	3-81, 111, 159, 161, 268, 269, 272, 273, 483, 489, 535, 545	1-8, 10
B-08	Boost sensor	3-141, 151	1-12, 14
B-09	Water level switch	3-277, 281	1-10, 12, 14
B-10	Fuel line heater	3-741	1-8, 10, 12, 14
B-11	Idle-up solenoid valve <A/C>	3-367, 373, 419, 429, 439, 449, 483, 489, 535, 545	1-8, 10
B-12	Windshield wiper motor	3-552, 556	1-8, 10, 12, 14, 16, 20
B-13	Vacuum switch	3-277, 281	1-8, 10, 12, 14
B-15	Brake fluid level switch	3-277, 281	1-8, 10, 12, 14, 16, 20
B-16	HBB	3-625, 633, 641, 649	1-8, 10, 12, 14, 16, 20
B-17	HBB	3-624, 625, 632, 633, 640, 641, 648, 649	1-8, 10, 12, 14, 16, 20
B-18	HBB	3-624, 632, 640, 648	1-8, 10, 12, 14, 16, 20
B-19X	Motor relay 2 <HBB>	3-620, 628, 636, 644	1-8, 10, 12, 14, 16, 20
B-20X	Motor relay 1 <HBB>	3-620, 628, 636, 644	1-8, 10, 12, 14, 16, 20
B-21X	Valve relay <HBB>	3-622, 630, 638, 646	1-8, 10, 12, 14, 16, 20
B-22X	Fuel line heater relay	3-741	1-8, 10, 12, 14
B-23X	Fuel cut relay	3-140, 150, 677, 683	1-8, 10, 12, 14
B-24X	Starter relay	3-63, 64	1-8, 10, 12, 14

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
B-25X	Engine control relay	3-74, 90, 106, 122, 138, 148, 164, 172, 180, 188, 652, 658, 664, 670, 676, 682, 746, 748, 750, 752	1-9, 11, 12, 14, 16, 20
B-27X	Fuel pump relay	3-75, 91, 107, 123	1-16, 20
B-28X	Injector driver control relay	3-66, 75, 91, 107, 123	1-16, 20
B-29X	Throttle control servo relay	3-74, 90, 106, 122, 652, 658, 664, 670	1-16, 20
B-30X	Inspection connector	3-66, 78, 94, 110, 126	1-16, 20
B-32	Starter	3-62, 63, 64, 656, 662, 668, 674	1-9, 11, 13, 15, 17, 21
B-33	Starter	3-62, 63, 64	1-9, 11, 13, 15, 17, 21
B-34	EGR solenoid valve 2	3-159, 161	1-9, 11
B-35	EGR solenoid valve 1	3-159, 161	1-9, 11
B-36	Injection pump assembly	3-142, 143, 152, 153, 180, 188	1-13, 15
B-37	Injection pump assembly	3-141, 151	1-13, 15
B-38	Injection pump assembly	3-140, 150, 676, 682	1-13, 15
B-39	Injection pump assembly	3-141, 151, 679, 685	1-13, 15
B-40	Control wiring harness and battery wiring harness combination	3-63, 64, 69, 70, 71, 276, 278, 280, 282, 688, 689, 697, 701, 705, 709, 713	1-9, 11, 13, 15, 17, 21
B-41	Control wiring harness and battery wiring harness combination	3-69, 80, 96, 112, 128	1-17, 21
B-42	Glow plug relay	3-73, 144, 154, 158, 160	1-9, 11, 13, 15
B-43	Glow plug relay	3-73, 144, 154, 158, 160	1-9, 11, 13, 15
B-44	Glow plug relay	3-73, 144, 154, 158, 160	1-9, 11, 13, 15
B-45	Solenoid valve assembly	3-138, 148, 676, 682	1-13, 15
B-46	Engine coolant temperature switch (for A/C compressor control)	3-367, 373, 419, 429, 439, 449, 483, 489, 535, 545	1-9, 11
B-47	Engine coolant temperature switch (for condenser fan control)	3-366, 372, 418, 428, 438, 448, 482, 488, 534, 544	1-9, 11
B-48	A/C compressor	3-355, 361, 367, 373, 379, 389, 399, 409, 419, 429, 439, 449, 458, 464, 471, 477, 483, 489, 494, 594, 515, 525, 535, 545	1-9, 11, 13, 15, 21
B-49	Boost air temperature sensor	3-143, 153	1-13, 15
B-50	Engine coolant temperature gauge unit	3-269, 273	1-11, 13, 15, 21
B-51	Power steering oil pressure switch	3-83, 99, 115, 131, 143, 153	1-11, 13, 15, 21
B-52	Crank angle sensor	3-84, 100, 116, 132, 164, 172	1-17, 21

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
B-53	Engine oil level sensor	3-278, 282	1-9, 11, 13, 15, 17, 21
B-54	Free-wheeling hub engage switch	3-688, 693, 697, 701, 705, 709, 713	1-9, 11, 13, 15, 17, 21
B-55	Oil pressure switch	3-276, 280	1-9, 11, 13, 15, 17, 21
B-56	Engine coolant temperature sensor	3-85, 101, 117, 133	1-17, 21
B-57	Alternator	3-69, 70, 71	1-9, 11, 13, 15, 17, 21
B-58	Alternator	3-70, 71	1-9, 11, 13, 15
B-59	Alternator	3-69, 80, 96, 112, 128	1-17, 21
B-60	EGR valve	3-83, 99, 115, 131	1-17, 21
B-101	Ignition coil 5	3-68, 80, 96, 112, 128	1-18, 22
B-102	Throttle position sensor	3-82, 98, 114, 130, 654, 660, 666, 672	1-18, 22
B-103	Injector 5	3-81, 97, 11, 129	1-18, 22
B-104	Injector 6	3-81, 97, 11, 129	1-18, 22
B-105	Control wiring harness and injector wiring harness combination	3-97, 129	1-18, 22
B-106	Purge control solenoid valve	3-84, 100, 116, 132	1-18, 22
B-107	Control wiring harness and ignition coil wiring harness combination	3-67, 68, 79, 80, 95, 96, 111, 112, 127, 128	1-18, 22
B-108	Ignition coil 6	3-68, 80, 96, 112, 128	1-18, 22
B-109	Camshaft position sensor	3-84, 100, 116, 132	1-18, 22
B-110	Control wiring harness and fuel pressure wiring harness combination	3-84, 85, 100, 101, 116, 117, 132, 133	1-18, 22
B-111	Fuel pressure sensor	3-85, 101, 117, 133	1-19, 23
B-112	Ignition coil 4	3-67, 79, 95, 111, 127	1-19, 23
B-113	Ignition coil 2	3-67, 79, 95, 111, 127	1-19, 23
B-114	Injector 2	3-81, 97, 113, 129	1-19, 23
B-115	Injector 4	3-81, 97, 113, 129	1-19, 23
B-116	Ignition coil 1	3-66, 78, 94, 110, 126	1-19, 23
B-117	Injector 1	3-81, 97, 113, 129	1-19, 23
B-118	Injector 3	3-81, 97, 113, 129	1-19, 23
B-119	Ignition coil 3	3-67, 79, 95, 111, 127	1-19, 23
B-120	Air flow sensor	3-85, 101, 117, 133	1-19, 23

6 INDEX (In order of connector No.)

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
B-121	Injector driver	3-75, 81, 91, 97, 107, 113, 123, 129	1-19, 23
B-122	Throttle control servo	3-82, 98, 114, 130, 654, 660, 666, 672	1-19, 23
C-01	Transmission wiring harness and battery wiring harness combination	3-62, 77, 93, 109, 125, 656, 662, 668, 674	1-24
C-02	Select rail switch <4M4-M/T>	3-146, 156	1-24
C-03	1ST & 2ND rail switch <4M4-M/T>	3-146, 156	1-24
C-04	A/T control solenoid valve assembly	3-165, 173, 181, 189	1-24
C-05	Inhibitor switch <A/T>	3-62, 63, 77, 93, 139, 149, 163, 171, 179, 187, 262, 264, 562, 566, 599, 611, 656, 662, 679, 685, 691, 695, 699, 703	1-24
C-06	4LLC (Direct low range 4WD) switch	3-167, 175, 183, 191, 692, 696, 700, 704, 708, 712	1-24
C-07	2WD operation detection switch	3-692, 696, 700, 704, 708, 712	1-24
C-08	Rear propeller shaft speed sensor	3-691, 695, 699, 703, 707, 711	1-24
C-09	Vehicle speed sensor	3-87, 103, 119, 135, 144, 154, 169, 177, 185, 193, 268, 272, 599, 611, 656, 662, 668, 674, 681, 687, 728, 732	1-24
C-10	Oxygen sensor (Rear)	3-116, 132	1-24
C-11	Shift actuator	3-693, 697, 701, 705, 709, 713	1-24
C-12	High range/low range detection switch	3-689	1-24
C-13	4WD operation detection switch	3-641, 689, 727	1-25
C-14	2WD/4WD detection switch	3-692, 696, 700, 704, 708, 712	1-25
C-15	4H (Full time 4WD) switch	3-692, 696, 700, 704, 708, 712	1-25
C-16	Center differential lock detection switch	3-625, 633, 641, 649, 692, 696, 700, 704, 708, 712, 727, 731	1-25
C-17	Front propeller shaft speed sensor	3-691, 695, 699, 703, 707, 711	1-25
C-18	Back-up lamp switch <M/T>	3-262, 264, 562, 566, 598, 610	1-25
C-19	Oxygen sensor (front)	3-116, 132	1-25
C-20	Oxygen sensor (front)	3-84, 100	1-25
C-21	Back-up lamp switch <4M4-M/T>	3-146, 156, 262, 264	1-25
C-22	3RD & 4TH rail switch <4M4-M/T>	3-146, 156	1-25
C-23	Input shaft speed sensor <A/T>	3-162, 178, 186	1-25
C-24	Output shaft speed sensor <A/T>	3-162, 178, 186	1-25

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-01	Combination meter	3-69, 70, 71, 73, 76, 92, 108, 124, 140, 150, 158, 160, 162, 166, 170, 174, 178, 182, 186, 190, 210, 214, 218, 222, 228, 232, 236, 240, 253, 257, 268, 272, 276, 277, 278, 280, 281, 282, 311, 323, 580, 582, 599, 611, 622, 630, 638, 646, 655, 661, 667, 673, 683, 690, 694, 698, 702, 706, 710, 715, 717, 721, 723, 726, 730	1-26, 32
D-02	Combination meter	3-69, 70, 71, 73, 76, 92, 108, 124, 140, 150, 158, 160, 162, 170, 178, 186, 194, 198, 210, 214, 218, 222, 253, 257, 277, 278, 281, 282, 311, 323, 580, 582, 655, 661, 667, 673, 683, 715, 717, 721, 723	1-26, 32
D-03	Combination meter	3-76, 92, 108, 124, 166, 174, 182, 190, 228, 232, 236, 240, 269, 270, 273, 274, 276, 280, 655, 661, 667, 673, 683, 689, 690, 694, 698, 702, 706, 710, 715, 717, 721, 723, 726, 730	1-26, 32
D-04	Radio	3-584, 586, 588, 590, 592, 593, 594, 596, 604, 605, 606, 608	1-26, 32
D-05	Clock	3-616	1-26, 32
D-06	Center display	3-86, 102, 118, 134, 145, 155, 168, 176, 460, 466, 472, 478, 484, 490, 496, 506, 516, 526, 536, 546, 593, 600, 605, 612, 657, 663, 669, 675, 681, 687, 747, 749, 751, 753	1-26, 32
D-07	Center display	3-593, 599, 600, 605, 611, 612	1-26, 32
D-08	PTC heater 1 <4M4>	3-328, 329, 330, 331	1-26, 32
D-09	Outside/inside air selection damper control motor	3-332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542	1-26, 32
D-10	Air bag module (squib) (Passenger's side)	3-715, 717, 721, 723	1-26, 32
D-11	Throttle valve controller <6G7>	3-74, 82, 90, 98, 106, 114, 122, 130, 652, 654, 656, 658, 660, 662, 664, 666, 668, 670, 672, 674, 693, 697	1-26, 32
D-12	A/T control relay	3-164, 172, 180, 188	1-26, 32
D-13	Engine oil level relay	3-278, 282	1-26, 32
D-14	Earth J/C	3-68, 82, 87, 98, 100, 103, 114, 116, 119, 130, 132, 135, 141, 144, 151, 154, 169, 177, 180, 183, 185, 188, 193, 278, 282, 328, 330, 654, 655, 660, 661, 666, 667, 672, 673, 679, 680, 685, 686, 747, 749, 751, 753, 754, 756	1-26, 32

8 INDEX (In order of connector No.)

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-15	Instrument panel wiring harness and front door wiring harness (Passenger's side) combination	3-244, 245, 285, 289, 293, 299, 304, 306, 308, 314, 316, 318, 320, 326, 571, 573, 575, 577, 578, 579, 584, 588, 594, 606, 762	1-26, 32
D-16	Motor antenna-ECU	3-587, 591, 597, 609	1-26, 32
D-17	Blower motor	3-332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542	1-26, 32
D-18	Glove box lamp switch	3-242	1-26, 32
D-19	Heater water temperature sensor <Automatic A/C>	3-461, 467, 473, 479, 485, 491, 497, 507, 517, 527, 537, 547	1-26, 32
D-20	Automatic compressor-ECU <Manual A/C>	3-329, 331, 356, 362, 368, 374, 384, 394, 404, 414, 424, 434, 444, 454	1-27, 33
D-22	Diagnosis connector	3-86, 102, 118, 134, 145, 155, 168, 176, 185, 193	1-27, 33
D-23	Diagnosis connector	3-86, 102, 118, 134, 145, 155, 168, 176, 184, 192, 196, 200, 205, 209, 212, 216, 221, 225, 227, 231, 235, 239, 247, 249, 254, 258, 284, 288, 292, 298, 307, 313, 319, 325, 460, 466, 472, 478, 484, 490, 496, 506, 516, 526, 536, 546, 555, 559, 561, 565, 581, 583, 601, 613, 626, 634, 642, 650, 657, 663, 669, 675, 681, 687, 693, 697, 701, 705, 709, 713, 714, 716, 720, 722, 736, 740, 747, 749, 751, 753, 755, 757	1-27, 33
D-24	Mode selection damper control motor and potentiometer <Automatic A/C>	3-461, 467, 473, 479, 485, 491, 497, 507, 517, 527, 537, 547	1-27, 33
D-25	Instrument panel wiring harness and front door wiring harness (Driver's side) combination	3-244, 245, 286, 287, 302, 303, 304, 308, 316, 320, 571, 573, 575, 577, 578, 579, 584, 588, 594, 606, 762	1-27, 33
D-26	Instrument panel wiring harness and floor wiring harness (LH) combination	3-76, 108, 119, 162, 178, 196, 205, 218, 222, 228, 232, 236, 240, 244, 245, 246, 260, 263, 265, 284, 292, 294, 300, 304, 306, 308, 312, 316, 320, 324, 585, 589, 592, 595, 604, 607, 614, 619, 621, 623, 631, 637, 639, 647, 652, 664, 668, 678, 681, 692, 700, 708, 726, 728, 730, 732, 736, 743, 744, 762	1-27, 33

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-27	Instrument panel wiring harness and floor wiring harness (LH) combination	3-30, 33, 35, 36, 38, 41, 43, 44, 46, 49, 51, 52, 54, 57, 59, 60, 76, 86, 92, 102, 108, 118, 124, 134, 139, 145, 149, 155, 162, 166, 168, 170, 174, 176, 178, 182, 184, 186, 190, 192, 194, 195, 196, 198, 199, 200, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 214, 215, 216, 218, 219, 220, 221, 222, 223, 224, 225, 227, 231, 235, 239, 242, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 256, 257, 258, 260, 261, 266, 269, 270, 273, 274, 276, 280, 284, 285, 288, 289, 292, 293, 298, 299, 304, 305, 308, 309, 310, 316, 317, 320, 321, 322, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 340, 344, 348, 352, 353, 354, 356, 358, 359, 360, 362, 364, 365, 366, 368, 370, 371, 372, 374, 376, 377, 378, 380, 384, 386, 387, 388, 390, 394, 396, 397, 398, 400, 404, 406, 407, 408, 410, 414, 416, 417, 418, 420, 424, 426, 427, 428, 430, 434, 436, 437, 438, 440, 444, 446, 447, 448, 450, 454, 456, 457, 458, 459, 461, 462, 463, 464, 465, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 497, 502, 503, 504, 505, 507, 512, 513, 514, 515, 516, 517, 522, 523, 524, 525, 526, 527, 532, 533, 534, 535, 537, 542, 543, 544, 545, 546, 547, 552, 553, 555, 556, 557, 559, 560, 561, 564, 565, 568, 569, 570, 572, 574, 576, 578, 579, 580, 581, 582, 583, 584, 588, 592, 593, 594, 600, 601, 604, 605, 606, 612, 613, 616, 617, 618, 619, 621, 626, 629, 634, 637, 642, 645, 650, 652, 654, 657, 658, 660, 663, 664, 666, 669, 670, 672, 675, 678, 681, 684, 687, 690, 692, 693, 694, 696, 697, 698, 700, 701, 702, 704, 705, 706, 708, 709, 710, 712, 713, 714, 715, 716, 717, 720, 721, 722, 723, 726, 730, 734, 735, 736, 738, 739, 740, 742, 744, 747, 749, 751, 753, 754, 755, 756, 757, 758, 760, 762	1-27, 33
D-28	Instrument panel wiring harness and floor wiring harness (LH) combination	3-328, 587, 591, 597, 609	1-27, 33
D-29	Instrument panel wiring harness and roof wiring harness combination	3-226, 230, 234, 238, 309, 321, 734, 738	1-27, 33

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-30	J/C (8)	3-15, 23, 88, 104, 120, 136, 166, 174, 182, 190, 194, 198, 210, 212, 214, 216, 218, 219, 222, 223, 227, 237, 246, 251, 253, 254, 257, 258, 307, 311, 313, 323, 332, 333, 334, 335, 336, 340, 344, 347, 348, 351, 352, 353, 356, 358, 359, 362, 364, 365, 368, 370, 371, 374, 376, 377, 380, 383, 384, 386, 387, 390, 392, 394, 396, 397, 400, 403, 404, 406, 407, 410, 412, 414, 416, 417, 420, 423, 424, 426, 427, 430, 432, 434, 436, 437, 440, 443, 444, 446, 447, 450, 452, 454, 460, 466, 472, 478, 484, 490, 496, 498, 500, 506, 508, 510, 516, 518, 520, 526, 528, 530, 536, 538, 540, 546, 548, 550, 568, 569, 570, 572, 574, 576, 578, 579, 584, 586, 587, 588, 590, 591, 594, 596, 597, 600, 606, 608, 609, 612, 616, 617, 622, 638, 646, 692, 696, 700, 704, 726, 730, 742, 746, 748, 750, 751, 755, 757, 759, 761	1-27, 33
D-31	J/C (7)	3-14, 22, 76, 88, 103, 108, 120, 135, 139, 154, 162, 177, 178, 193, 195, 199, 204, 208, 211, 215, 219, 224, 244, 257, 272, 278, 282, 286, 287, 302, 303, 316, 320, 457, 469, 481, 493, 513, 533, 553, 557, 564, 580, 582, 587, 588, 591, 592, 597, 601, 605, 609, 611, 613, 616, 618, 619, 653, 654, 659, 665, 666, 671, 677, 678, 683, 692, 700, 708, 727, 731, 736, 740, 754, 755, 757	1-27, 33
D-32	J/C (6)	3-13, 21, 76, 92, 108, 124, 156, 162, 166, 170, 174, 178, 182, 186, 190, 216, 223, 228, 236, 237, 240, 242, 251, 262, 264, 270, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 340, 344, 345, 348, 352, 353, 358, 359, 364, 365, 370, 371, 376, 377, 386, 387, 396, 397, 406, 407, 416, 417, 426, 427, 436, 437, 446, 447, 456, 457, 462, 463, 468, 472, 474, 478, 480, 484, 486, 490, 492, 493, 502, 503, 512, 516, 522, 526, 532, 533, 542, 546, 562, 566, 568, 569, 570, 572, 574, 576, 578, 579, 598, 602, 610, 614, 623, 629, 631, 639, 645, 647, 691, 692, 695, 696, 699, 700, 703, 704, 707, 708, 711, 732, 734, 735, 738, 739, 741, 758	1-27, 33

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-33	J/C (5)	3-12, 20, 76, 86, 88, 102, 108, 118, 120, 134, 145, 155, 162, 166, 168, 174, 176, 178, 182, 184, 190, 192, 232, 240, 241, 245, 268, 272, 276, 280, 457, 459, 463, 465, 469, 471, 475, 477, 481, 483, 487, 489, 493, 495, 503, 505, 513, 515, 523, 525, 533, 535, 543, 545, 562, 578, 579, 591, 593, 599, 601, 604, 611, 613, 616, 617, 621, 626, 634, 637, 642, 650, 652, 657, 663, 664, 669, 675, 678, 681, 687, 692, 693, 697, 700, 701, 705, 708, 709, 713, 714, 716, 720, 722, 747, 749, 751, 753, 755, 756, 757	1-27, 33
D-36	PTC heater relay 2 <4M4>	3-328	1-27
D-101	Heater control panel illumination lamp	3-333, 335, 353, 359, 365, 371, 377, 387, 397, 407, 417, 427, 437, 447, 570, 574	1-28, 34
D-102	Max hot switch <Manual A/C (4M4)>	3-329, 331	1-28, 34
D-103	Blower switch <Heater or manual A/C>	3-332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446	1-28, 34
D-104	Hazard warning switch	3-254, 258	1-28, 34
D-105	A/C switch	3-33, 335, 353, 359, 365, 371, 377, 387, 397, 407, 417, 427, 437, 447, 570, 574	1-28, 34
D-106	Photo sensor <Automatic A/C>	3-460, 466, 473, 479, 485, 491, 496, 506, 517, 527, 537, 547	1-28, 34
D-107	A/T-ECU <4M4>	3-178, 181, 183, 184, 185, 186, 189, 191, 193, 355, 361, 379, 389, 399, 409, 471, 477, 515, 525	1-28, 34
D-108	A/T-ECU <4M4>	3-178, 180, 181, 183, 186, 188, 189, 191	1-28, 34
D-109	A/T-ECU <4M4>	3-144, 154, 178, 179, 180, 181, 183, 185, 186, 187, 188, 189, 191, 192, 193	1-28, 34
D-110	Engine-ECU <4M4>	3-73, 138, 140, 142, 143, 144, 148, 150, 152, 153, 154, 328, 330, 355, 361, 379, 389, 399, 409, 471, 477, 515, 525, 676, 677, 680, 682, 683, 686, 751, 753	1-28, 34
D-111	Engine-ECU <4M4>	3-138, 142, 143, 144, 146, 148, 152, 153, 154, 156, 180, 188, 329, 330, 355, 361, 379, 389, 399, 409, 471, 477, 515, 525, 676, 678, 680, 681, 682, 684, 686, 687, 751, 753	1-28, 34
D-112	Engine-ECU <4M4>	3-141, 142, 143, 144, 145, 151, 152, 153, 154, 155, 183, 191, 268, 272, 471, 477, 515, 525, 600, 612, 680, 681, 686, 687, 701, 705, 751, 753	1-28, 34

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-113	Engine-ECU <4M4>	3-139, 140, 141, 142, 143, 144, 145, 149, 150, 151, 152, 153, 154, 155, 180, 188, 656, 677, 678, 680, 681, 683, 684, 686, 687	1-28, 34
D-114	Engine-ECU <4D5>	3-73, 158, 160, 605, 656, 709, 713	1-28, 34
D-115	Engine-ECU <4D5>	3-656	1-28, 34
D-116	Engine-ECU <6G7-M/T>	3-68, 107, 108, 109, 111, 112, 113, 115, 116, 120, 123, 124, 125, 127, 128, 129, 131, 132, 136, 458, 464, 494, 504, 667, 673	1-28, 34
D-117	Engine-ECU <6G7-M/T>	3-66, 68, 69, 107, 109, 110, 112, 115, 116, 117, 119, 123, 125, 126, 128, 131, 132, 133, 135, 268, 272, 459, 465, 495, 505, 664, 667, 668, 670, 673, 674, 747, 749	1-28, 34
D-118	Engine-ECU <6G7-M/T>	3-107, 108, 109, 113, 115, 116, 117, 119, 123, 124, 125, 129, 131, 132, 133, 135, 459, 465, 495, 505, 600, 612, 667, 669, 673, 675, 747, 749	1-28, 34
D-119	Engine-A/T-ECU <6G7-A/T>	3-68, 69, 74, 75, 76, 77, 79, 80, 81, 83, 84, 85, 88, 90, 91, 92, 93, 95, 96, 97, 99, 100, 101, 104, 162, 170, 458, 464, 494, 504, 652, 655, 658, 661	1-28, 34
D-120	Engine-A/T-ECU <6G7-A/T>	3-66, 68, 69, 74, 76, 78, 80, 81, 83, 84, 85, 87, 90, 92, 94, 96, 97, 99, 100, 101, 103, 162, 164, 167, 170, 172, 175, 268, 272, 459, 465, 495, 505, 652, 655, 656, 658, 661, 662, 747, 749	1-28, 34
D-121	Engine-A/T-ECU <6G7-A/T>	3-75, 76, 77, 83, 85, 87, 91, 92, 93, 99, 101, 103, 164, 165, 167, 168, 169, 172, 173, 175, 176, 177, 459, 465, 495, 505, 600, 612, 655, 657, 661, 663, 747, 749	1-28, 34
D-122	Engine-A/T-ECU <6G7-A/T>	3-76, 77, 83, 86, 92, 93, 99, 162, 163, 165, 167, 168, 169, 170, 171, 173, 175, 176, 177, 652, 655, 658, 661, 747, 749	1-28, 34
D-123	Instrument panel wiring harness and floor wiring harness (RH)	3-336, 337, 338, 340, 341, 342, 344, 345, 347, 348, 349, 351, 381, 382, 383, 391, 392, 393, 401, 402, 403, 411, 412, 413, 421, 422, 423, 431, 433, 441, 442, 443, 451, 452, 453, 499, 500, 501, 509, 510, 511, 519, 520, 521, 529, 530, 531, 539, 540, 541, 549, 550, 551, 762	1-28, 34

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-124	Instrument panel wiring harness and floor wiring harness (RH)	3-75, 91, 92, 107, 123, 124, 135, 170, 177, 186, 191, 202, 203, 206, 218, 222, 228, 237, 241, 244, 252, 253, 260, 261, 263, 265, 269, 273, 276, 280, 295, 301, 305, 306, 309, 311, 312, 314, 318, 326, 341, 349, 401, 411, 441, 451, 509, 529, 549, 560, 564, 571, 573, 585, 589, 595, 599, 602, 607, 611, 614, 618, 619, 623, 624, 629, 631, 632, 639, 640, 645, 647, 648, 658, 670, 674, 684, 687, 696, 704, 712, 728, 732, 743, 762	1-28, 34
D-125	Glove box lamp	3-242	1-29, 35
D-126	Blower linear controller <Automatic A/C>	3-456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542	1-29, 35
D-127	Resistor <Heater or manual A/C>	3-332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446	1-29, 35
D-128	J/C (4)	3-10, 11, 18, 19, 69, 76, 86, 90, 92, 102, 106, 108, 118, 122, 124, 134, 138, 145, 148, 155, 162, 163, 164, 168, 170, 171, 172, 176, 178, 179, 184, 186, 187, 192, 262, 264, 278, 282, 562, 566, 598, 610, 620, 626, 628, 634, 636, 642, 644, 650, 652, 657, 658, 663, 664, 669, 670, 675, 676, 678, 681, 682, 684, 687, 741, 746, 747, 748, 749, 750, 751, 752, 753, 754, 756	1-29, 35
D-129	Air thermo sensor <Automatic A/C>	3-461, 467, 473, 479, 485, 491, 497, 507, 517, 527, 537, 547	1-29, 35
D-130	Air mixing damper control motor and poetentiometer <Automatic A/C>	3-461, 467, 473, 479, 485, 491, 497, 507, 517, 527, 537, 547	1-29, 35
D-131	A/C-ECU	3-329, 331, 456, 457, 459, 460, 461, 462, 463, 465, 466, 467, 468, 472, 473, 474, 478, 479, 480, 484, 485, 486, 490, 491, 492, 493, 495, 496, 497, 502, 503, 505, 506, 507, 512, 516, 517, 522, 526, 527, 532, 533, 536, 537, 542, 546, 547, 572, 576, 600, 612	1-29, 35
D-132	A/C-ECU	3-456, 459, 460, 461, 462, 465, 466, 467, 468, 472, 473, 474, 478, 479, 480, 484, 485, 486, 490, 491, 492, 495, 496, 497, 502, 505, 506, 507, 512, 516, 517, 522, 526, 527, 532, 536, 537, 542, 546, 547, 572, 576, 600, 612	1-29, 35
D-133	Immobilizer-ECU <4D5>	3-754, 756	1-29, 35
D-134	Wide open throttle switch <A/T>	3-169, 177, 183, 191	1-29, 35

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-135	Accelerator pedal position sensor	3-83, 99, 115, 131, 142, 152, 167, 175, 183, 191, 655, 661, 667, 673, 680, 686, 693, 697, 701, 705	1-29, 35
D-136	Stop lamp switch	3-76, 92, 108, 124, 162, 170, 178, 186, 260, 261, 621, 629, 637, 645, 652, 658, 664, 670, 678, 684, 692, 696, 700, 704, 708, 712	1-29, 35
D-137	Clutch switch <Auto-cruise (M/T)>	3-119, 135, 329, 331, 668, 674, 681, 687	1-29, 35
D-138	Heater switch <4M4>	3-329, 331	1-29, 35
D-139	Diode (for super select 4WD II circuit)	3-690, 694, 698, 702, 706, 710	1-29, 35
D-140	Headlamp leveling switch	3-251	1-29, 35
D-141	Fog lamp switch	3-212, 216, 219, 223	1-29, 35
D-142	Remote controlled mirror switch	3-578, 579	1-29, 35
D-143	Front wiring harness and control wiring harness combination	3-90, 122, 148, 172, 175, 188, 192, 330, 360, 361, 372, 373, 374, 398, 399, 408, 409, 438, 439, 444, 448, 449, 454, 464, 465, 476, 477, 488, 489, 504, 505, 524, 525, 544, 545, 632, 648, 648, 670, 682, 694, 702, 710, 748, 752	1-35
D-144	Radio	3-593	1-29, 35
D-145	Instrument panel wiring harness and floor wiring harness (LH)	3-592, 602	1-29
D-146	Rheostat	3-758, 760	1-29, 35
D-201	Ignition key ring antenna <Vehicles with immobilizer (4D5)>	3-754, 756	1-30, 36
D-202	Key reminder switch	3-227, 231, 237, 241, 246, 248, 307, 313, 319, 325, 746, 748, 750, 752	1-30, 36
D-203	Column switch	3-195, 199, 204, 208, 211, 215, 220, 224, 253, 257, 553, 557, 560, 564, 580, 582, 601, 613	1-30, 36
D-204	Ignition switch	3-32, 40, 48, 56	1-30, 36
D-205	Clock spring	3-266, 653, 659, 665, 671, 678, 684	1-30, 36
D-206	Clock spring	3-714, 716, 720, 722	1-30, 36
D-207	Instrument panel wiring harness and J/B combination	3-6, 227, 228, 231, 232, 235, 237, 239, 241, 309, 321, 734, 739	1-30, 36

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-208	Instrument panel wiring harness and J/B combination	3-6, 32, 35, 40, 43, 48, 51, 56, 59, 66, 69, 70, 71, 73, 75, 91, 107, 123, 140, 150, 158, 160, 162, 170, 178, 186, 195, 199, 203, 204, 207, 208, 210, 211, 214, 215, 218, 221, 222, 225, 227, 231, 235, 239, 246, 248, 253, 257, 262, 264, 266, 268, 272, 276, 278, 280, 282, 284, 285, 288, 289, 292, 293, 298, 299, 305, 309, 317, 321, 328, 330, 332, 334, 336, 341, 344, 349, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542, 552, 553, 556, 557, 560, 564, 568, 569, 570, 572, 574, 576, 578, 579, 581, 583, 584, 587, 588, 591, 593, 597, 598, 605, 609, 610, 616, 617, 618, 619, 621, 622, 629, 630, 637, 638, 645, 646, 653, 659, 665, 671, 678, 684, 659, 665, 671, 677, 683, 688, 690, 692, 694, 696, 698, 700, 702, 704, 706, 708, 710, 712, 714, 716, 720, 722, 727, 731, 734, 736, 738, 740, 741, 742, 755, 757	1-30, 36
D-209	Instrument panel wiring harness and J/B combination	3-6, 34, 42, 50, 58, 196, 200, 205, 209, 212, 216, 221, 225, 227, 228, 231, 232, 235, 237, 239, 241, 247, 249, 254, 258, 284, 288, 292, 298, 304, 307, 308, 312, 313, 316, 319, 320, 324, 325, 332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542, 554, 558, 561, 565, 570, 572, 574, 576, 581, 583, 598, 610, 616, 714, 716, 720, 722, 736, 739, 740	1-30, 36

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-210	Instrument panel wiring harness and J/B combination	3-6, 35, 43, 51, 59, 69, 70, 71, 73, 75, 86, 91, 102, 107, 118, 123, 134, 140, 145, 150, 155, 158, 162, 168, 170, 176, 178, 184, 186, 192, 195, 196, 199, 200, 203, 204, 205, 207, 208, 209, 210, 211, 212, 214, 215, 216, 218, 220, 221, 222, 224, 225, 227, 231, 232, 235, 239, 241, 245, 247, 249, 253, 254, 257, 258, 268, 272, 274, 276, 278, 282, 284, 288, 292, 298, 307, 311, 313, 319, 323, 325, 328, 330, 332, 334, 336, 341, 344, 349, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 480, 486, 492, 502, 512, 522, 532, 542, 553, 555, 557, 559, 560, 561, 564, 565, 568, 569, 578, 579, 581, 583, 587, 591, 593, 597, 601, 605, 609, 610, 613, 617, 621, 622, 626, 629, 634, 637, 638, 642, 645, 650, 653, 657, 659, 663, 665, 669, 671, 675, 677, 681, 683, 687, 690, 692, 693, 694, 696, 697, 698, 700, 701, 702, 704, 705, 706, 708, 709, 710, 712, 713, 714, 716, 720, 722, 727, 731, 734, 736, 738, 740, 741, 747, 749, 751, 753, 755, 757, 760	1-30, 36
D-211	Instrument panel wiring harness and J/B combination	3-6, 42, 50, 58, 86, 102, 118, 134, 145, 155, 168, 176, 184, 192, 196, 200, 205, 209, 212, 216, 218, 221, 222, 225, 227, 231, 235, 239, 247, 249, 254, 258, 284, 288, 292, 298, 304, 308, 316, 320, 332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542, 555, 559, 561, 565, 570, 572, 574, 576, 581, 583, 601, 613, 626, 634, 642, 650, 657, 663, 669, 675, 681, 687, 693, 697, 701, 705, 709, 713, 714, 716, 720, 722, 736, 740, 747, 749, 751, 753, 755, 757	1-30, 36
D-212	Rear fog lamp relay	3-6, 35, 43, 51, 59, 69, 70, 71, 73, 75, 91, 107, 123, 140, 150, 160, 162, 170, 178, 186, 218, 222	1-30, 36
D-213	Instrument panel wiring harness and J/B combination	3-207, 231, 239, 252, 256, 262, 264, 268, 272, 274, 278, 280, 282, 310, 322, 341, 349, 396, 397, 406, 407, 436, 437, 446, 447, 502, 503, 522, 526, 542, 546, 560, 564, 583, 598, 610, 621, 630, 637, 646, 653, 659, 665, 671, 677, 683, 688, 691, 694, 699, 702, 707, 710, 720, 722, 727, 730, 741, 760	1-30, 36
D-214	Rear blower relay	3-336, 340, 344, 348, 380, 390, 400, 410, 420, 430, 440, 450, 498, 508, 518, 528, 538, 548	1-30, 36

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-215	Accessory socket relay	3-618, 619	1-30, 36
D-216	Alternator relay	3-6, 69, 70, 278, 282	1-31, 37
D-217	Defogger relay	3-6, 34, 42, 50, 58, 570, 572, 574, 576	1-31, 37
D-218	Instrument panel wiring harness and J/B combination	3-6, 196, 205, 228, 237, 246, 253, 269, 276, 284, 292, 305, 306, 309, 311, 312, 561, 570, 572, 736	1-31
D-219	Floor wiring harness (RH) and J/B combination	3-6, 200, 207, 209, 232, 241, 245, 248, 256, 257, 288, 298, 317, 318, 321, 322, 323, 324, 341, 349, 397, 407, 437, 447, 503, 526, 546, 565, 574, 576, 740	1-37
D-220	Front blower relay	3-6, 332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542	1-31, 37
D-221	Power window relay	3-6, 284, 288, 292, 298	1-31, 37
D-222	Instrument panel wiring harness and J/B combination	3-6, 86, 102, 118, 134, 145, 155, 168, 176, 184, 192, 196, 200, 205, 209, 212, 216, 221, 225, 227, 231, 235, 239, 247, 249, 254, 258, 268, 272, 284, 288, 292, 298, 307, 313, 319, 325, 460, 466, 472, 478, 484, 490, 496, 506, 516, 526, 536, 546, 555, 559, 561, 565, 581, 583, 599, 601, 611, 613, 626, 634, 642, 650, 657, 663, 669, 675, 681, 687, 693, 697, 701, 705, 709, 713, 728, 732, 736, 740, 747, 749, 751, 753, 755, 757	1-31, 37
D-223	Instrument panel wiring harness and J/B combination	3-6, 30, 33, 41, 46, 49, 57, 66, 75, 76, 91, 107, 108, 123, 139, 140, 150, 158, 160, 162, 178, 196, 200, 204, 208, 211, 215, 220, 224, 227, 231, 235, 239, 244, 245, 246, 248, 252, 256, 266, 269, 276, 284, 285, 288, 289, 292, 293, 298, 299, 305, 309, 310, 317, 321, 322, 457, 469, 481, 493, 513, 533, 552, 554, 556, 558, 560, 564, 581, 583, 584, 588, 592, 593, 605, 610, 616, 618, 619, 653, 654, 659, 665, 666, 671, 677, 678, 683, 692, 700, 708, 735, 739, 754	1-31, 37
D-224	ETACS-ECU	3-6, 200, 204, 205, 208, 209, 211, 215, 216, 220, 221, 224, 225, 227, 228, 231, 232, 235, 237, 239, 241, 246, 248, 252, 254, 256, 258, 284, 288, 292, 298, 304, 306, 307, 308, 310, 312, 313, 316, 318, 319, 320, 322, 324, 325, 554, 558, 560, 561, 564, 565, 581, 583, 598, 601, 613, 616, 736, 740	1-31, 37
D-225	ETACS-ECU	3-304, 306, 308, 313, 316, 318, 320, 325	1-31, 37

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-226	ETACS-ECU	3-88, 104, 120, 136, 196, 200, 204, 205, 208, 209, 211, 212, 215, 216, 220, 221, 224, 225, 227, 231, 235, 237, 239, 241, 246, 247, 248, 249, 253, 254, 257, 258, 284, 288, 292, 298, 307, 313, 319, 325, 736, 740	1-31, 37
E-01	ABS G sensor	3-623, 631, 639, 647	1-38, 42
E-02	Parking brake switch	3-145, 155, 277, 281, 602, 614	1-38, 42
E-03	A/T selector lever position illumination lamp	3-166, 174, 182, 190, 692, 696, 700, 704	1-38, 42
E-04	Cigarette lighter	3-617	1-38, 42
E-05	Cigarette lighter	3-617	1-38, 42
E-06	Cigarette lighter illumination lamp	3-617	1-38, 42
E-07	Ashtray illumination lamp	3-617	1-38, 42
E-08	HBB buzzer	3-621, 629, 637, 645	1-38, 42
E-09	Diode (for ABS circuit)	3-622, 630, 638, 646	1-38, 42
E-10	Instrument panel wiring harness and control wiring harness combination	3-75, 91, 107, 119, 123, 135, 282, 622, 624, 630, 632, 638, 640, 646, 648, 653, 655, 659, 661, 665, 667, 668, 671, 673, 674, 677, 678, 681, 683, 684, 687	1-38, 42
E-11	Instrument panel wiring harness and control wiring harness combination	3-162, 166, 167, 170, 174, 175, 177, 178, 182, 183, 185, 186, 190, 191, 193	1-38, 42
E-12	Rear heater control unit <Rear heater (Long wheelbase models)>	3-347, 351	1-38, 42
E-13	Instrument panel wiring harness and control wiring harness combination	3-262, 264, 268, 269, 272, 273, 276, 277, 278, 280, 281, 282, 329, 331, 356, 362, 384, 394, 404, 414, 459, 465, 471, 473, 477, 479, 483, 489, 495, 505, 515, 517, 525, 527, 535, 657, 658, 659, 660, 663, 664, 665, 666, 669, 670, 671, 672, 675, 677, 678, 681, 683, 684, 687, 728, 732, 741, 746, 747, 748, 749, 750, 751, 752, 753, 754, 756, 762	1-39, 43
E-14	Front rear fan switch	3-336, 340, 344, 348, 380, 390, 400, 410, 420, 430, 440, 450, 498, 508, 518, 528, 538, 548	1-39, 43
E-15	Wiper deicer switch	3-568, 569	1-39, 43
E-16	Rear differential lock switch	3-726, 730	1-39, 43
E-17	Motor antenna switch	3-586, 590, 596, 608	1-39, 43
E-18	Heated seat switch	3-742	1-39, 43
E-19	Transfer shift lever switch	3-690, 694, 698, 702, 706, 710	1-39, 43

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
E-20	Floor wiring harness (RH) and side air bag wiring harness combination	3-718, 724	1-39, 43
E-21	Floor wiring harness (LH) and side air bag wiring harness combination	3-718, 724	1-39, 43
E-22	Rear cooler control unit <Dual manual A/C (without rear heater)>	3-380, 383, 400, 403, 420, 423, 440, 443	1-39, 43
E-23	Rear A/C control unit <Dual manual A/C (with rear heater) or dual automatic A/C>	3-390, 392, 410, 412, 430, 432, 450, 498, 500, 508, 510, 518, 520, 528, 530, 538, 540, 548, 550	1-39, 43
E-101	Rear heater switch	3-337, 341, 345, 349	1-40, 44
E-102	Accessory socket	3-618, 619	1-40, 44
E-103	Rear heater unit <Rear heater (Short wheelbase models)>	3-338, 342	1-40, 44
E-104	4WD indicator-ECU	3-689	1-40, 44
E-105	Transfer-ECU	3-691, 692, 693, 695, 696, 697, 699, 700, 701, 703, 704, 705, 707, 708, 709, 711, 712, 713	1-40, 44
E-106	ABS-ECU	3-620, 621, 623, 624, 625, 628, 629, 631, 632, 633, 636, 637, 639, 640, 641, 644, 645, 647, 648, 649	1-40, 44
E-107	ABS-ECU	3-620, 621, 622, 623, 624, 625, 626, 628, 629, 630, 631, 632, 633, 634, 636, 637, 638, 639, 640, 641, 642, 644, 645, 646, 647, 648, 649, 650	1-40, 44
E-108	Transfer-ECU	3-690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 708, 709, 710, 712, 713	1-40, 44
E-109	Instrument panel wiring harness and console wiring harness combination	3-336, 340, 344, 348, 380, 390, 400, 410, 420, 430, 440, 450, 498, 508, 518, 528, 538, 548, 568, 569, 586, 590, 596, 608, 617, 726, 730, 742	1-40, 44
E-110	SRS-ECU	3-718, 724	1-40, 44
E-111	SRS-ECU	3-714, 716, 720, 722	1-40, 44
E-112	GDI ECO indication lamp-ECU	3-88, 104, 120, 136	1-41, 45
E-113	Control wiring harness and transmission wiring harness combination	3-63, 64, 77, 84, 87, 93, 100, 103, 109, 116, 119, 125, 132, 135, 139, 144, 145, 146, 149, 154, 155, 156, 159, 160, 162, 164, 165, 167, 169, 170, 172, 173, 175, 177, 178, 180, 181, 183, 185, 186, 188, 189, 191, 193, 262, 264, 268, 272, 562, 566, 598, 599, 610, 611, 623, 625, 631, 633, 639, 641, 647, 649, 656, 662, 668, 674, 679, 681, 685, 687, 688, 690, 693, 694, 697, 698, 701, 702, 705, 706, 709, 710, 713, 728, 732, 762	1-41, 45

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
E-114	Instrument panel wiring harness and transmission wiring harness combination	3-62, 63, 64, 77, 93, 109, 125, 139, 149, 159, 160, 163, 171, 179, 187, 656, 662, 668, 674, 679, 685	1-41, 45
E-115	Instrument panel wiring harness and transmission wiring harness	3-87, 103, 119, 135, 144, 146, 154, 162, 166, 169, 170, 174, 177, 178, 182, 185, 186, 190, 193, 262, 264, 268, 272, 277, 281, 562, 566, 598, 599, 602, 610, 611, 614, 623, 631, 639, 647, 656, 662, 668, 674, 681, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 727, 728, 731, 732	1-41, 45
E-116	Control wiring harness and transmission wiring harness combination	3-84, 100, 116, 132	1-41, 45
E-117	Shift switch assembly <A/T>	3-163, 171, 179, 187	1-41, 45
E-118	Rear cooler switch <Dual manual A/C (without rear heater)>	3-401, 421, 441	1-41, 45
E-119	Rear A/C switch <Dual manual A/C (with rear heater) or dual automatic A/C>	3-391, 411, 431, 451, 499, 509, 519, 529, 539, 549	1-41, 45
F-01	Side impact sensor (RH)	3-718, 724	1-46, 48, 50, 52
F-02	Roof wiring harness and pillar wiring harness combination	3-734, 738	1-46, 48, 50, 52
F-03	Front door switch (RH)	3-200, 209, 228, 232, 237, 241, 244, 245, 248, 288, 293, 312, 318, 324, 740	1-46, 48, 50, 52
F-04	Floor wiring harness (RH) and rear door wiring harness combination (RH)	3-244, 245, 295, 301, 305, 309, 317, 321, 585, 589, 595, 607	1-50, 52
F-05	Sunroof switch	3-735, 739	1-46, 48, 50, 52
F-06	Sunroof motor assembly	3-734, 738	1-46, 48, 50, 52
F-07	Room lamp	3-226, 230, 234, 238, 309, 321	1-46, 48, 50, 52
F-08	Rear speaker (RH)	3-585, 589, 595, 607	1-46, 48
F-09	Rear personal lamp (RH)	3-226, 230, 234, 238	1-46, 48, 50, 52
F-10	Rear door switch (RH)	3-237, 241, 244, 245, 312, 324	1-50, 52
F-11	Floor wiring harness (RH) and fuel wiring harness combination	3-75, 91, 107, 123, 269, 273, 276, 280, 599, 611	1-46, 48, 50, 52
F-12	Rear personal lamp (LH)	3-226, 230, 234, 238	1-46, 48, 50, 52
F-13	Luggage compartment lamp	3-226, 230, 234, 238	1-46, 48, 50, 52

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
F-14	Rear door switch (LH)	3-236, 240, 244, 245, 312, 324	1-50, 52
F-15	Rear speaker (LH)	3-585, 589, 595, 607	1-47, 49
F-16	Floor wiring harness (RH) and frame wiring harness combination	3-202, 203, 206, 207, 252, 253, 256, 257, 260, 261, 311, 322, 323	1-47, 49, 51, 53
F-17	Floor wiring harness (RH) and frame wiring harness combination	3-202, 203, 206, 207, 252, 253, 256, 257, 260, 261, 322, 323, 623, 624, 631, 632, 639, 640, 647, 648, 728, 732	1-47, 49, 51, 53
F-18	Floor wiring harness (LH) and rear door wiring harness (LH) combination	3-244, 245, 294, 300, 304, 308, 316, 320, 585, 589, 595, 607	1-51, 53
F-19	Side impact sensor (LH)	3-718, 724	1-47, 49, 51, 53
F-20	Front door switch (LH)	3-196, 205, 228, 232, 236, 240, 244, 245, 246, 284, 292, 306, 312, 324, 736	1-47, 49, 51, 53
F-21	Side air bag module (squib) (LH)	3-718, 724	1-47, 49, 51, 53
F-22	Heated seat assembly (LH)	3-743	1-47, 49, 51, 53
F-23	Power seat assembly	3-744	1-47, 49, 51, 53
F-24	No connection	3-592, 604	1-47, 49, 51, 53
F-25	No connection	3-602, 614	1-47, 49, 51, 53
F-27	Heated seat assembly (RH)	3-743	1-47, 49, 51, 53
F-28	Side air bag module (squib) (RH)	3-718, 724	1-47, 49, 51, 53
F-29	Fuel gauge unit	3-269, 273, 276, 280, 599, 611	1-47, 49, 51, 53
F-30	Fuel pump	3-75, 91, 107, 123	1-47, 49, 51, 53
G-01	Rear differential lock-ECU	3-623, 631, 639, 647, 726, 728, 730, 732	1-54, 55
G-02	Rear combination lamp (LH)	3-218, 222, 263, 265	1-54, 55
G-03	Back door switch	3-228, 232, 236, 240, 312, 324	1-54, 55
G-04	Rear blower unit <Rear heater or dual manual A/C (without rear heater)>	3-346, 350, 382, 402, 422, 442	1-55
G-05	Floor wiring harness (RH) and back door wiring harness combination	3-306, 314, 318, 326	1-54, 55
G-06	Floor wiring harness (RH) and back door wiring harness combination	3-202, 206, 260, 261, 305, 309, 317, 321, 560, 564, 571, 573, 575, 577	1-54, 55

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
G-07	Rear combination lamp (RH)	3-218, 222, 263, 265	1-54, 55
G-08	Rear combination lamp (RH)	3-203, 207, 253, 257, 260, 261, 311, 323	1-54, 55
G-09	Rear heater unit	3-347, 351	1-55
G-10	Rear heater unit	3-347, 351	1-55
G-11	Wheel speed sensor (Rear: RH) <ABS>	3-624, 632, 640, 648	1-54, 55
G-12	Rear combination lamp (LH)	3-202, 206, 252, 256, 260, 261, 311, 322	1-54, 55
G-13	Rear differential lock detection switch	3-623, 631, 639, 647, 728, 732	1-54, 55
G-14	Rear differential lock air pump	3-728, 732	1-54, 55
G-15	Wheel speed sensor (Rear: LH) <ABS>	3-624, 632, 640, 648	1-54, 55
G-22	Rear A/C unit <Dual manual A/C (with rear heater) or dual automatic A/C>	3-392, 412, 432, 452, 500, 510, 520, 530, 540, 550	1-55
G-24	Rear A/C unit <Dual manual A/C (with rear heater) or dual automatic A/C>	3-393, 413, 433, 453, 501, 511, 521, 531, 541, 551	1-55
G-25	Rear cooler unit <Dual manual A/C (without rear heater)>	3-383, 403, 423, 443	1-55
G-26	Rear A/C unit <Dual manual A/C (with rear heater) or dual automatic A/C>	3-393, 413, 433, 453, 501, 511, 521, 531, 541, 551	1-55
H-01	Door lamp (Rear: LH)	3-244, 245	1-58
H-02	Power window sub switch (Rear: RH)	3-294, 300	1-58
H-03	Door lock actuator (Front: LH)	3-304, 308, 316, 320	1-56, 58
H-04	Power window motor (Front: LH)	3-286, 289, 299	1-56, 58
H-05	Power window main switch	3-286, 302	1-56, 58
H-06	Tweeter (LH)	3-584, 588, 594, 606	1-56, 58
H-07	Remote controlled mirror (LH)	3-571, 573, 575, 577, 578, 579	1-56, 58
H-08	Front door speaker (LH)	3-584, 588, 594, 606	1-56, 58
H-09	Door lamp (Front: LH)	3-244, 245	1-56, 58
H-10	Power window motor (Rear: LH)	3-294, 300	1-58
H-11	Rear speaker (LH)	3-585, 589, 595, 607	1-58
H-12	Door lock actuator (Rear: RH)	3-304, 308, 316, 320	1-58
H-13	Remote controlled mirror (RH)	3-571, 573, 575, 577, 578, 579	1-56, 58
H-14	Tweeter (RH)	3-584, 588, 594, 606	1-57, 59
H-15	Power window sub switch (Front: RH)	3-285, 293	1-57, 59
H-16	Power window motor (Front: RH)	3-285, 293, 302	1-57, 59

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
H-17	Door lock key cylinder switch	3-306, 314, 318, 326	1-57, 59
H-18	Door lock actuator (Front: RH)	3-304, 308, 316, 320	1-57, 59
H-19	Power window sub switch (Rear: RH)	3-295, 301	1-59
H-20	Door lamp (Rear: RH)	3-244, 245	1-59
H-21	Door lock actuator (Rear: RH)	3-305, 309, 317, 321	1-59
H-22	Rear speaker (RH)	3-585, 589, 595, 607	1-59
H-23	Power window motor (Rear: RH)	3-295, 301	1-59
H-24	Door lamp (Front: RH)	3-244, 245	1-57, 59
H-25	Front door speaker (RH)	3-584, 588, 594, 606	1-57, 59
H-26	Power window sub switch (Front: LH)	3-289, 299	1-57, 59
I-01	Defogger (-)	3-571, 573, 575, 577	1-60
I-02	High mounted stop lamp	3-260, 261	1-60
I-03	Defogger (+)	3-571, 573, 575, 577	1-60
I-04	Licence plate lamp assembly	3-202, 206	1-60
I-05	Back door lock key cylinder switch	3-306, 314, 318, 326	1-60
I-06	Back door lock actuator	3-305, 309, 317, 321	1-60
I-07	Rear wiper motor	3-561, 565	1-60
I-08	Rear washer motor	3-560, 564	1-60

INDEX (In order of parts name)

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
1ST & 2ND rail switch <4M4-M/T>	C-03	3-146, 156	1-24
2WD operation detection switch	C-07	3-692, 696, 700, 704, 708, 712	1-24
2WD/4WD detection switch	C-14	3-692, 696, 700, 704, 708, 712	1-25
3RD & 4TH rail switch <4M4-M/T>	C-22	3-146, 156	1-25
4H (Full time 4WD) switch	C-15	3-692, 696, 700, 704, 708, 712	1-25
4LLC (Direct low range 4WD) switch	C-06	3-167, 175, 183, 191, 692, 696, 700, 704, 708, 712	1-24
4WD indicator-ECU	E-104	3-689	1-40, 44
4WD operation detection switch	C-13	3-641, 689, 727	1-25
A/C compressor	B-48	3-355, 361, 367, 373, 379, 389, 399, 409, 419, 429, 439, 449, 458, 464, 471, 477, 483, 489, 494, 594, 515, 525, 535, 545	1-9, 11, 13, 15, 21
A/C compressor relay	A-13X	3-355, 361, 367, 373, 379, 389, 399, 409, 419, 429, 439, 449, 458, 464, 471, 477, 483, 489, 494, 504, 515, 525, 535, 545	1-4, 6
A/C switch	D-105	3-33, 335, 353, 359, 365, 371, 377, 387, 397, 407, 417, 427, 437, 447, 570, 574	1-28, 34
A/C-ECU	D-131	3-329, 331, 456, 457, 459, 460, 461, 462, 463, 465, 466, 467, 468, 472, 473, 474, 478, 479, 480, 484, 485, 486, 490, 491, 492, 493, 495, 496, 497, 502, 503, 505, 506, 507, 512, 516, 517, 522, 526, 527, 532, 533, 536, 537, 542, 546, 547, 572, 576, 600, 612	1-29, 35
A/C-ECU	D-132	3-456, 459, 460, 461, 462, 465, 466, 467, 468, 472, 473, 474, 478, 479, 480, 484, 485, 486, 490, 491, 492, 495, 496, 497, 502, 505, 506, 507, 512, 516, 517, 522, 526, 527, 532, 536, 537, 542, 546, 547, 572, 576, 600, 612	1-29, 35
A/T control relay	D-12	3-164, 172, 180, 188	1-26, 32
A/T control solenoid valve assembly	C-04	3-165, 173, 181, 188	1-24
A/T selector lever position illumination lamp	E-03	3-166, 174, 182, 190, 692, 696, 700, 704	1-38, 42
A/T-ECU <4M4>	D-107	3-178, 181, 183, 184, 185, 186, 189, 191, 193, 355, 361, 379, 389, 399, 409, 471, 477, 515, 525	1-28, 34

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
A/T-ECU <4M4>	D-108	3-178, 180, 181, 183, 186, 188, 189, 191	1-28, 34
A/T-ECU <4M4>	D-109	3-144, 154, 178, 179, 180, 181, 183, 185, 186, 187, 188, 189, 191, 192, 193	1-28, 34
ABS G sensor	E-01	3-623, 631, 639, 647	1-38, 42
ABS-ECU	E-106	3-620, 621, 623, 624, 625, 628, 629, 631, 632, 633, 636, 637, 639, 640, 641, 644, 645, 647, 648, 649	1-40, 44
ABS-ECU	E-107	3-620, 621, 622, 623, 624, 625, 626, 628, 629, 630, 631, 632, 633, 634, 636, 637, 638, 639, 640, 641, 642, 644, 645, 646, 647, 648, 649, 650	1-40, 44
Accelerator pedal position sensor	D-135	3-83, 99, 115, 131, 142, 152, 167, 175, 183, 191, 655, 661, 667, 673, 680, 686, 693, 697, 701, 705	1-29, 35
Accessory socket	E-102	3-618, 619	1-40, 44
Accessory socket relay	D-215	3-618, 619	1-30, 36
Air bag module (squib) (Passenger's side)	D-10	3-715, 717, 721, 723	1-26, 32
Air flow sensor	B-120	3-85, 101, 117, 133	1-19, 23
Air mixing damper control motor and potentiometer <Automatic A/C>	D-130	3-461, 467, 473, 479, 485, 491, 497, 507, 517, 527, 537, 547	1-29, 35
Air thermo sensor <Automatic A/C>	D-129	3-461, 467, 473, 479, 485, 491, 497, 507, 517, 527, 537, 547	1-29, 35
Alternator	B-57	3-69, 70, 71	1-9, 11, 13, 15, 17, 21
Alternator	B-58	3-70, 71	1-9, 11, 13, 15
Alternator	B-59	3-69, 80, 96, 112, 128	1-17, 21
Alternator relay	D-216	3-6, 69, 70, 278, 282	1-31, 37
Ashtray illumination lamp	E-07	3-617	1-38, 42
Automatic compressor-ECU <Manual A/C>	D-20	3-329, 331, 356, 362, 368, 374, 384, 394, 404, 414, 424, 434, 444, 454	1-27, 33
Back door lock actuator	I-06	3-305, 309, 317, 321	1-60
Back door lock key cylinder switch	I-05	3-306, 314, 318, 326	1-60
Back door switch	G-03	3-228, 232, 236, 240, 312, 324	1-54, 55
Back-up lamp switch <4M4-M/T>	C-21	3-146, 156, 262, 264	1-25
Back-up lamp switch <M/T>	C-18	3-262, 264, 562, 566, 598, 610	1-25
Blower linear controller <Automatic A/C>	D-126	3-456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542	1-29, 35

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Blower motor	D-17	3-332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542	1-26, 32
Blower switch <Heater or manual A/C>	D-103	3-332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446	1-28, 34
Boost air temperature sensor	B-49	3-143, 153	1-13, 15
Boost sensor	B-08	3-141, 151	1-12, 14
Brake fluid level switch	B-15	3-277, 281	1-8, 10, 12, 14, 16, 20
Camshaft position sensor	B-109	3-84, 100, 116, 132	1-18, 22
Center differential lock detection switch	C-16	3-625, 633, 641, 649, 692, 696, 700, 704, 708, 712, 727, 731	1-25
Center display	D-06	3-86, 102, 118, 134, 145, 155, 168, 176, 460, 466, 472, 478, 484, 490, 496, 506, 516, 526, 536, 546, 593, 600, 605, 612, 657, 663, 669, 675, 681, 687, 747, 749, 751, 753	1-26, 32
Center display	D-07	3-593, 599, 600, 605, 611, 612	1-26, 32
Cigarette lighter	E-04	3-617	1-38, 42
Cigarette lighter	E-05	3-617	1-38, 42
Cigarette lighter illumination lamp	E-06	3-617	1-38, 42
Clock	D-05	3-616	1-26, 32
Clock spring	D-205	3-266, 653, 659, 665, 671, 678, 684	1-30, 36
Clock spring	D-206	3-714, 716, 720, 722	1-30, 36
Clutch switch <Auto-cruise (M/T)>	D-137	3-119, 135, 329, 331, 668, 674, 681, 687	1-29, 35
Column switch	D-203	3-195, 199, 204, 208, 211, 215, 220, 224, 253, 257, 553, 557, 560, 564, 580, 582, 601, 613	1-30, 36
Combination meter	D-01	3-69, 70, 71, 73, 76, 92, 108, 124, 140, 150, 158, 160, 162, 166, 170, 174, 178, 182, 186, 190, 210, 214, 218, 222, 228, 232, 236, 240, 253, 257, 268, 272, 276, 277, 278, 280, 281, 282, 311, 323, 580, 582, 599, 611, 622, 630, 638, 646, 655, 661, 667, 673, 683, 690, 694, 698, 702, 706, 710, 715, 717, 721, 723, 726, 730	1-26, 32
Combination meter	D-02	3-69, 70, 71, 73, 76, 92, 108, 124, 140, 150, 158, 160, 162, 170, 178, 186, 194, 198, 210, 214, 218, 222, 253, 257, 277, 278, 281, 282, 311, 323, 580, 582, 655, 661, 667, 673, 683, 715, 717, 721, 723	1-26, 32

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Combination meter	D-03	3-76, 92, 108, 124, 166, 174, 182, 190, 228, 232, 236, 240, 269, 270, 273, 274, 276, 280, 655, 661, 667, 673, 683, 689, 690, 694, 698, 702, 706, 710, 715, 717, 721, 723, 726, 730	1-26, 32
Condenser fan motor	A-27	3-354, 360, 366, 372, 378, 388, 398, 408, 418, 428, 438, 448, 458, 464, 470, 476, 482, 488, 494, 504, 514, 524, 534, 544	1-5, 7
Condenser fan relay (HI)	A-10X	3-354, 360, 366, 372, 378, 388, 398, 408, 418, 428, 438, 448, 458, 464, 470, 476, 482, 488, 494, 504, 514, 524, 534, 544	1-4, 6
Condenser fan relay (LO)	A-11X	3-354, 360, 366, 372, 378, 388, 398, 408, 418, 428, 438, 448, 470, 476, 482, 488, 514, 524, 534, 544	1-4, 6
Control wiring harness and battery wiring harness combination	B-40	3-63, 64, 69, 70, 71, 276, 278, 280, 282, 688, 689, 697, 701, 705, 709, 713	1-9, 11, 13, 15, 17, 21
Control wiring harness and battery wiring harness combination	B-41	3-69, 80, 96, 112, 128	1-17, 21
Control wiring harness and fuel pressure wiring harness combination	B-110	3-84, 85, 100, 101, 116, 117, 132, 133	1-18, 22
Control wiring harness and ignition coil wiring harness combination	B-107	3-67, 68, 79, 80, 95, 96, 111, 112, 127, 128	1-18, 22
Control wiring harness and injector wiring harness combination	B-105	3-97, 129	1-18, 22
Control wiring harness and transmission wiring harness combination	E-113	3-63, 64, 77, 84, 87, 93, 100, 103, 109, 116, 119, 125, 132, 135, 139, 144, 145, 146, 149, 154, 155, 156, 159, 160, 162, 164, 165, 167, 169, 170, 172, 173, 175, 177, 178, 180, 181, 183, 185, 186, 188, 189, 191, 193, 262, 264, 268, 272, 562, 566, 598, 599, 610, 611, 623, 625, 631, 633, 639, 641, 647, 649, 656, 662, 668, 674, 679, 681, 685, 687, 688, 690, 693, 694, 697, 698, 701, 702, 705, 706, 709, 710, 713, 728, 732, 762	1-41, 45
Control wiring harness and transmission wiring harness combination	E-116	3-84, 100, 116, 132	1-41, 45
Crank angle sensor	B-52	3-84, 100, 116, 132, 164, 172	1-17, 21
Defogger (–)	I-01	3-571, 573, 575, 577	1-60
Defogger (+)	I-03	3-571, 573, 575, 577	1-60
Defogger relay	D-217	3-6, 34, 42, 50, 58, 570, 572, 574, 576	1-31, 37
Detonation sensor	B-05	3-83, 99, 115, 131	1-16, 20

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Diagnosis connector	D-22	3-86, 102, 118, 134, 145, 155, 168, 176, 185, 193	1-27, 33
Diagnosis connector	D-23	3-86, 102, 118, 134, 145, 155, 168, 176, 184, 192, 196, 200, 205, 209, 212, 216, 221, 225, 227, 231, 235, 239, 247, 249, 254, 258, 284, 288, 292, 298, 307, 313, 319, 325, 460, 466, 472, 478, 484, 490, 496, 506, 516, 526, 536, 546, 555, 559, 561, 565, 581, 583, 601, 613, 626, 634, 642, 650, 657, 663, 669, 675, 681, 687, 693, 697, 701, 705, 709, 713, 714, 716, 720, 722, 736, 740, 747, 749, 751, 753, 755, 757	1-27, 33
Diode (for ABS circuit)	E-09	3-622, 630, 638, 646	1-38, 42
Diode (for super select 4WD II circuit)	D-139	3-690, 694, 698, 702, 706, 710	1-29, 35
Door lamp (Front: LH)	H-09	3-244, 245	1-56, 58
Door lamp (Front: RH)	H-24	3-244, 245	1-57, 59
Door lamp (Rear: LH)	H-01	3-244, 245	1-58
Door lamp (Rear: RH)	H-20	3-244, 245	1-59
Door lock actuator (Front: LH)	H-03	3-304, 308, 316, 320	1-56, 58
Door lock actuator (Front: RH)	H-18	3-304, 308, 316, 320	1-57, 59
Door lock actuator (Rear: RH)	H-12	3-304, 308, 316, 320	1-58
Door lock actuator (Rear: RH)	H-21	3-305, 309, 317, 321	1-59
Door lock key cylinder switch	H-17	3-306, 314, 318, 326	1-57, 59
Dual pressure switch <A/C>	A-24	3-356, 362, 368, 374, 384, 394, 404, 414, 424, 434, 444, 454, 459, 465, 471, 477, 483, 489, 495, 505, 515, 525, 535, 545	1-5, 7
Earth J/C	D-14	3-68, 82, 87, 98, 100, 103, 114, 116, 119, 130, 132, 135, 141, 144, 151, 154, 169, 177, 180, 183, 185, 188, 193, 278, 282, 328, 330, 654, 655, 660, 661, 666, 667, 672, 673, 679, 680, 685, 686, 747, 749, 751, 753, 754, 756	1-26, 32
EGR solenoid valve 1	B-35	3-159, 161	1-9, 11
EGR solenoid valve 2	B-34	3-159, 161	1-9, 11
EGR valve	B-60	3-83, 99, 115, 131	1-17, 21
Engine control relay	B-25X	3-74, 90, 106, 122, 138, 148, 164, 172, 180, 188, 652, 658, 664, 670, 676, 682, 746, 748, 750, 752	1-9, 11, 12, 14, 16, 20
Engine coolant temperature gauge unit	B-50	3-269, 273	1-11, 13, 15, 21
Engine coolant temperature sensor	B-56	3-85, 101, 117, 133	1-17, 21

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Engine coolant temperature switch (for A/C compressor control)	B-46	3-367, 373, 419, 429, 439, 449, 483, 489, 535, 545	1-9, 11
Engine coolant temperature switch (for condenser fan control)	B-47	3-366, 372, 418, 428, 438, 448, 482, 488, 534, 544	1-9, 11
Engine oil level relay	D-13	3-278, 282	1-26, 32
Engine oil level sensor	B-53	3-278, 282	1-9, 11, 13, 15, 17, 21
Engine-A/T-ECU <6G7-A/T>	D-119	3-68, 69, 74, 75, 76, 77, 79, 80, 81, 83, 84, 85, 88, 90, 91, 92, 93, 95, 96, 97, 99, 100, 101, 104, 162, 170, 458, 464, 494, 504, 652, 655, 658, 661	1-28, 34
Engine-A/T-ECU <6G7-A/T>	D-120	3-66, 68, 69, 74, 76, 78, 80, 81, 83, 84, 85, 87, 90, 92, 94, 96, 97, 99, 100, 101, 103, 162, 164, 167, 170, 172, 175, 268, 272, 459, 465, 495, 505, 652, 655, 656, 658, 661, 662, 747, 749	1-28, 34
Engine-A/T-ECU <6G7-A/T>	D-121	3-75, 76, 77, 83, 85, 87, 91, 92, 93, 99, 101, 103, 164, 165, 167, 168, 169, 172, 173, 175, 176, 177, 459, 465, 495, 505, 600, 612, 655, 657, 661, 663, 747, 749	1-28, 34
Engine-A/T-ECU <6G7-A/T>	D-122	3-76, 77, 83, 86, 92, 93, 99, 162, 163, 165, 167, 168, 169, 170, 171, 173, 175, 176, 177, 652, 655, 658, 661, 747, 749	1-28, 34
Engine-ECU <4D5>	D-114	3-73, 158, 160, 605, 656, 709, 713	1-28, 34
Engine-ECU <4D5>	D-115	3-656	1-28, 34
Engine-ECU <4M4>	D-110	3-73, 138, 140, 142, 143, 144, 148, 150, 152, 153, 154, 328, 330, 355, 361, 379, 389, 399, 409, 471, 477, 515, 525, 676, 677, 680, 682, 683, 686, 751, 753	1-28, 34
Engine-ECU <4M4>	D-111	3-138, 142, 143, 144, 146, 148, 152, 153, 154, 156, 180, 188, 329, 330, 355, 361, 379, 389, 399, 409, 471, 477, 515, 525, 676, 678, 680, 681, 682, 684, 686, 687, 751, 753	1-28, 34
Engine-ECU <4M4>	D-112	3-141, 142, 143, 144, 145, 151, 152, 153, 154, 155, 183, 191, 268, 272, 471, 477, 515, 525, 600, 612, 680, 681, 686, 687, 701, 705, 751, 753	1-28, 34
Engine-ECU <4M4>	D-113	3-139, 140, 141, 142, 143, 144, 145, 149, 150, 151, 152, 153, 154, 155, 180, 188, 656, 677, 678, 680, 681, 683, 684, 686, 687	1-28, 34

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Engine-ECU <6G7-M/T>	D-116	3-68, 107, 108, 109, 111, 112, 113, 115, 116, 120, 123, 124, 125, 127, 128, 129, 131, 132, 136, 458, 464, 494, 504, 667, 673	1-28, 34
Engine-ECU <6G7-M/T>	D-117	3-66, 68, 69, 107, 109, 110, 112, 115, 116, 117, 119, 123, 125, 126, 128, 131, 132, 133, 135, 268, 272, 459, 465, 495, 505, 664, 667, 668, 670, 673, 674, 747, 749	1-28, 34
Engine-ECU <6G7-M/T>	D-118	3-107, 108, 109, 113, 115, 116, 117, 119, 123, 124, 125, 129, 131, 132, 133, 135, 459, 465, 495, 505, 600, 612, 667, 669, 673, 675, 747, 749	1-28, 34
ETACS-ECU	D-224	3-6, 200, 204, 205, 208, 209, 211, 215, 216, 220, 221, 224, 225, 227, 228, 231, 232, 235, 237, 239, 241, 246, 248, 252, 254, 256, 258, 284, 288, 292, 298, 304, 306, 307, 308, 310, 312, 313, 316, 318, 319, 320, 322, 324, 325, 554, 558, 560, 561, 564, 565, 581, 583, 598, 601, 613, 616, 736, 740	1-31, 37
ETACS-ECU	D-225	3-304, 306, 308, 313, 316, 318, 320, 325	1-31, 37
ETACS-ECU	D-226	3-88, 104, 120, 136, 196, 200, 204, 205, 208, 209, 211, 212, 215, 216, 220, 221, 224, 225, 227, 231, 235, 237, 239, 241, 246, 247, 248, 249, 253, 254, 257, 258, 284, 288, 292, 298, 307, 313, 319, 325, 736, 740	1-31, 37
Floor wiring harness (LH) and rear door wiring harness (LH) combination	F-18	3-244, 245, 294, 300, 304, 308, 316, 320, 585, 589, 595, 607	1-51, 53
Floor wiring harness (LH) and side air bag wiring harness combination	E-21	3-718, 724	1-39, 43
Floor wiring harness (RH) and back door wiring harness combination	G-05	3-306, 314, 318, 326	1-54, 55
Floor wiring harness (RH) and back door wiring harness combination	G-06	3-202, 206, 260, 261, 305, 309, 317, 321, 560, 564, 571, 573, 575, 577	1-54, 55
Floor wiring harness (RH) and frame wiring harness combination	F-16	3-202, 203, 206, 207, 252, 253, 256, 257, 260, 261, 311, 322, 323	1-47, 49, 51, 53
Floor wiring harness (RH) and frame wiring harness combination	F-17	3-202, 203, 206, 207, 252, 253, 256, 257, 260, 261, 322, 323, 623, 624, 631, 632, 639, 640, 647, 648, 728, 732	1-47, 49, 51, 53
Floor wiring harness (RH) and fuel wiring harness combination	F-11	3-75, 91, 107, 123, 269, 273, 276, 280, 599, 611	1-46, 48, 50, 52

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Floor wiring harness (RH) and J/B combination	D-219	3-6, 200, 207, 209, 232, 241, 245, 248, 256, 257, 288, 298, 317, 318, 321, 322, 323, 324, 341, 349, 397, 407, 437, 447, 503, 526, 546, 565, 574, 576, 740	1-37
Floor wiring harness (RH) and rear door wiring harness combination (RH)	F-04	3-244, 245, 295, 301, 305, 309, 317, 321, 585, 589, 595, 607	1-50, 52
Floor wiring harness (RH) and side air bag wiring harness combination	E-20	3-718, 724	1-39, 43
Fog lamp switch	D-141	3-212, 216, 219, 223	1-29, 35
Free-wheeling hub engage switch	B-54	3-688, 693, 697, 701, 705, 709, 713	1-9, 11, 13, 15, 17, 21
Front blower relay	D-220	3-6, 332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542	1-31, 37
Front door speaker (LH)	H-08	3-584, 588, 594, 606	1-56, 58
Front door speaker (RH)	H-25	3-584, 588, 594, 606	1-57, 59
Front door switch (LH)	F-20	3-196, 205, 228, 232, 236, 240, 244, 245, 246, 284, 292, 306, 312, 324, 736	1-47, 49, 51, 53
Front door switch (RH)	F-03	3-200, 209, 228, 232, 237, 241, 244, 245, 248, 288, 293, 312, 318, 324, 740	1-46, 48, 50, 52
Front fog lamp (LH)	A-22	3-210, 214	1-5, 7
Front fog lamp (RH)	A-33	3-210, 214	1-5, 7
Front fog lamp relay	A-09X	3-31, 39, 47, 55, 210, 214	1-4, 6
Front impact sensor (LH)	A-25	3-715, 717, 721, 723	1-5, 7
Front impact sensor (RH)	A-31	3-715, 717, 721, 723	1-5, 7
Front propeller shaft speed sensor	C-17	3-691, 695, 699, 703, 707, 711	1-25
Front rear fan switch	E-14	3-336, 340, 344, 348, 380, 390, 400, 410, 420, 430, 440, 450, 498, 508, 518, 528, 538, 548	1-39, 43
Front turn signal lamp (LH)	A-19	3-252, 256, 310, 322	1-4, 6
Front turn signal lamp (RH)	A-37	3-252, 256, 310, 322	1-5, 7
Front wiring harness and control wiring harness combination	A-04	3-74, 106, 138, 164, 167, 180, 184, 328, 354, 355, 366, 367, 378, 379, 388, 389, 418, 419, 428, 429, 458, 459, 470, 471, 482, 483, 494, 495, 514, 515, 534, 535, 624, 640, 652, 664, 676, 688, 690, 698, 706, 746, 750	1-4, 6
Front wiring harness and control wiring harness combination	A-05	3-63, 64, 69, 70, 71, 355, 361, 367, 373, 379, 389, 399, 409, 419, 429, 439, 449, 458, 464, 471, 477, 483, 489, 494, 504, 515, 525, 535, 545, 741	1-4, 6

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Front wiring harness and control wiring harness combination	D-143	3-90, 122, 148, 172, 175, 188, 192, 330, 360, 361, 372, 373, 374, 398, 399, 408, 409, 438, 439, 444, 448, 449, 454, 464, 465, 476, 477, 488, 489, 504, 505, 524, 525, 544, 545, 632, 648, 648, 670, 682, 694, 702, 710, 748, 752	1-35
Front wiring harness and front fog lamp wiring harness combination	A-26	3-210, 214	1-5, 7
Front-ECU	A-07X	3-36, 37, 44, 45, 52, 53, 61, 194, 198, 202, 203, 206, 207, 210, 214, 219, 223, 251, 553, 557, 580, 582, 758, 760	1-4, 6
Front-ECU	A-08X	3-37, 45, 53, 61, 195, 199, 203, 207, 210, 214, 218, 222, 251, 552, 556, 580, 582, 758, 760	1-4, 6
Fuel cut relay	B-23X	3-140, 150, 677, 683	1-8, 10, 12, 14
Fuel cut valve controller	B-03	3-754, 756	1-8, 10
Fuel gauge unit	F-29	3-269, 273, 276, 280, 599, 611	1-47, 49, 51, 53
Fuel line heater	B-10	3-741	1-8, 10, 12, 14
Fuel line heater relay	B-22X	3-741	1-8, 10, 12, 14
Fuel pressure sensor	B-111	3-85, 101, 117, 133	1-19, 23
Fuel pump	F-30	3-75, 91, 107, 123	1-47, 49, 51, 53
Fuel pump relay	B-27X	3-75, 91, 107, 123	1-16, 20
GDI ECO indication lamp-ECU	E-112	3-88, 104, 120, 136	1-41, 45
Glove box lamp	D-125	3-242	1-29, 35
Glove box lamp switch	D-18	3-242	1-26, 32
Glow plug	B-06	3-73, 144, 154, 158, 160	1-8, 10, 12, 14
Glow plug relay	B-42	3-73, 144, 154, 158, 160	1-9, 11, 13, 15
Glow plug relay	B-43	3-73, 144, 154, 158, 160	1-9, 11, 13, 15
Glow plug relay	B-44	3-73, 144, 154, 158, 160	1-9, 11, 13, 15
Hazard warning switch	D-104	3-254, 258	1-28, 34
HBB	B-16	3-625, 633, 641, 649	1-8, 10, 12, 14, 16, 20
HBB	B-17	3-624, 625, 632, 633, 640, 641, 648, 649	1-8, 10, 12, 14, 16, 20
HBB	B-18	3-624, 632, 640, 648	1-8, 10, 12, 14, 16, 20
HBB buzzer	E-08	3-621, 629, 637, 645	1-38, 42

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Headlamp (LH)	A-21	3-194, 198	1-4, 6
Headlamp (RH)	A-34	3-194, 198	1-5, 7
Headlamp leveling switch	D-140	3-251	1-29, 35
Headlamp leveling unit (LH)	A-20	3-250	1-4, 6
Headlamp leveling unit (RH)	A-32	3-250	1-5, 7
Headlamp washer motor	A-36	3-580, 582	1-5, 7
Heated seat assembly (LH)	F-22	3-743	1-47, 49, 51, 53
Heated seat assembly (RH)	F-27	3-743	1-47, 49, 51, 53
Heated seat switch	E-18	3-742	1-39, 43
Heater control panel illumination lamp	D-101	3-333, 335, 353, 359, 365, 371, 377, 387, 397, 407, 417, 427, 437, 447, 570, 574	1-28, 34
Heater switch <4M4>	D-138	3-329, 331	1-29, 35
Heater water temperature sensor <Automatic A/C>	D-19	3-461, 467, 473, 479, 485, 491, 497, 507, 517, 527, 537, 547	1-26, 32
High mounted stop lamp	I-02	3-260, 261	1-60
High range/low range detection switch	C-12	3-689	1-24
Horn (HI)	A-28	3-266	1-5, 7
Horn (LO)	A-29	3-266	1-5, 7
Horn relay	A-06X	3-33, 41, 49, 57, 266	1-4, 6
Idle-up solenoid valve <A/C>	B-11	3-367, 373, 419, 429, 439, 449, 483, 489, 535, 545	1-8, 10
Ignition coil 1	B-116	3-66, 78, 94, 110, 126	1-19, 23
Ignition coil 2	B-113	3-67, 79, 95, 111, 127	1-19, 23
Ignition coil 3	B-119	3-67, 79, 95, 111, 127	1-19, 23
Ignition coil 4	B-112	3-67, 79, 95, 111, 127	1-19, 23
Ignition coil 5	B-101	3-68, 80, 96, 112, 128	1-18, 22
Ignition coil 6	B-108	3-68, 80, 96, 112, 128	1-18, 22
Ignition failure sensor	B-04	3-66, 78, 94, 110, 126, 268, 272, 459, 465, 495, 505	1-16, 20
Ignition key ring antenna <Vehicles with immobilizer (4D5)>	D-201	3-754, 756	1-30, 36
Ignition switch	D-204	3-32, 40, 48, 56	1-30, 36
Immobilizer-ECU <4D5>	D-133	3-754, 756	1-29, 35

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Inhibitor switch <A/T>	C-05	3-62, 63, 77, 93, 139, 149, 163, 171, 179, 187, 262, 264, 562, 566, 599, 611, 656, 662, 679, 685, 691, 695, 699, 703	1-24
Injection pump assembly	B-07	3-81, 111, 159, 161, 268, 269, 272, 273, 483, 489, 535, 545	1-8, 10
Injection pump assembly	B-36	3-142, 143, 152, 153, 180, 188	1-13, 15
Injection pump assembly	B-37	3-141, 151	1-13, 15
Injection pump assembly	B-38	3-140, 150, 676, 682	1-13, 15
Injection pump assembly	B-39	3-141, 151, 679, 685	1-13, 15
Injector 1	B-117	3-81, 97, 113, 129	1-19, 23
Injector 2	B-114	3-81, 97, 113, 129	1-19, 23
Injector 3	B-118	3-81, 97, 113, 129	1-19, 23
Injector 4	B-115	3-81, 97, 113, 129	1-19, 23
Injector 5	B-103	3-81, 97, 11, 129	1-18, 22
Injector 6	B-104	3-81, 97, 11, 129	1-18, 22
Injector driver	B-121	3-75, 81, 91, 97, 107, 113, 123, 129	1-19, 23
Injector driver control relay	B-28X	3-66, 75, 91, 107, 123	1-16, 20
Input shaft speed sensor <A/T>	C-23	3-162, 178, 186	1-25
Inspection connector	B-30X	3-66, 78, 94, 110, 126	1-16, 20
Instrument panel wiring harness and console wiring harness combination	E-109	3-336, 340, 344, 348, 380, 390, 400, 410, 420, 430, 440, 450, 498, 508, 518, 528, 538, 548, 568, 569, 586, 590, 596, 608, 617, 726, 730, 742	1-40, 44
Instrument panel wiring harness and control wiring harness combination	E-10	3-75, 91, 107, 119, 123, 135, 282, 622, 624, 630, 632, 638, 640, 646, 648, 653, 655, 659, 661, 665, 667, 668, 671, 673, 674, 677, 678, 681, 683, 684, 687	1-38, 42
Instrument panel wiring harness and control wiring harness combination	E-11	3-162, 166, 167, 170, 174, 175, 177, 178, 182, 183, 185, 186, 190, 191, 193	1-38, 42
Instrument panel wiring harness and control wiring harness combination	E-13	3-262, 264, 268, 269, 272, 273, 276, 277, 278, 280, 281, 282, 329, 331, 356, 362, 384, 394, 404, 414, 459, 465, 471, 473, 477, 479, 483, 489, 495, 505, 515, 517, 525, 527, 535, 657, 658, 659, 660, 663, 664, 665, 666, 669, 670, 671, 672, 675, 677, 678, 681, 683, 684, 687, 728, 732, 741, 746, 747, 748, 749, 750, 751, 752, 753, 754, 756, 762	1-39, 43
Instrument panel wiring harness and floor wiring harness (LH)	D-145	3-592, 602	1-29

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Instrument panel wiring harness and floor wiring harness (LH) combination	D-26	3-76, 108, 119, 162, 178, 196, 205, 218, 222, 228, 232, 236, 240, 244, 245, 246, 260, 263, 265, 284, 292, 294, 300, 304, 306, 308, 312, 316, 320, 324, 585, 589, 592, 595, 604, 607, 614, 619, 621, 623, 631, 637, 639, 647, 652, 664, 668, 678, 681, 692, 700, 708, 726, 728, 730, 732, 736, 743, 744, 762	1-27, 33
Instrument panel wiring harness and floor wiring harness (LH) combination	D-27	3-75, 91, 92, 107, 123, 124, 135, 170, 177, 186, 191, 202, 203, 206, 218, 222, 228, 237, 2, 214, 215, 216, 218, 219, 220, 221, 222, 223, 224, 225, 227, 231, 235, 239, 242, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 256, 257, 258, 260, 261, 266, 269, 270, 273, 274, 276, 280, 284, 285, 288, 289, 292, 293, 298, 299, 304, 305, 308, 309, 310, 316, 317, 320, 321, 322, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 340, 344, 348, 352, 353, 354, 356, 358, 359, 360, 362, 364, 365, 366, 368, 370, 371, 372, 374, 376, 377, 378, 380, 384, 386, 387, 388, 390, 394, 396, 397, 398, 400, 404, 406, 407, 408, 410, 414, 416, 417, 418, 420, 424, 426, 427, 428, 430, 434, 436, 437, 438, 440, 444, 446, 447, 448, 450, 454, 456, 457, 458, 459, 461, 462, 463, 464, 465, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 497, 502, 503, 504, 505, 507, 512, 513, 514, 515, 516, 517, 522, 523, 524, 525, 526, 527, 532, 533, 534, 535, 537, 542, 543, 544, 545, 546, 547, 552, 553, 555, 556, 557, 559, 560, 561, 564, 565, 568, 569, 570, 572, 574, 576, 578, 579, 580, 581, 582, 583, 584, 588, 592, 593, 594, 600, 601, 604, 605, 606, 612, 613, 616, 617, 618, 619, 621, 626, 629, 634, 637, 642, 645, 650, 652, 654, 657, 658, 660, 663, 664, 666, 669, 670, 672, 675, 678, 681, 684, 687, 690, 692, 693, 694, 696, 697, 698, 700, 701, 702, 704, 705, 706, 708, 709, 710, 712, 713, 714, 715, 716, 717, 720, 721, 722, 723, 726, 730, 734, 735, 736, 738, 739, 740, 742, 744, 747, 749, 751, 753, 754, 755, 756, 757, 758, 760, 762	1-27, 33
Instrument panel wiring harness and floor wiring harness (LH) combination	D-28	3-328, 587, 591, 597, 609	1-27, 33

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Instrument panel wiring harness and floor wiring harness (RH)	D-123	3-336, 337, 338, 340, 341, 342, 344, 345, 347, 348, 349, 351, 381, 382, 383, 391, 392, 393, 401, 402, 403, 411, 412, 413, 421, 422, 423, 431, 433, 441, 442, 443, 451, 452, 453, 499, 500, 501, 509, 510, 511, 519, 520, 521, 529, 530, 531, 539, 540, 541, 549, 550, 551, 762	1-28, 34
Instrument panel wiring harness and floor wiring harness (RH)	D-124	3-75, 91, 92, 107, 123, 124, 135, 170, 177, 186, 191, 202, 203, 206, 218, 222, 228, 237, 241, 244, 252, 253, 260, 261, 263, 265, 269, 273, 276, 280, 295, 301, 305, 306, 309, 311, 312, 314, 318, 326, 341, 349, 401, 411, 441, 451, 509, 529, 549, 560, 564, 571, 573, 585, 589, 595, 599, 602, 607, 611, 614, 618, 619, 623, 624, 629, 631, 632, 639, 640, 645, 647, 648, 658, 670, 674, 684, 687, 696, 704, 712, 728, 732, 743, 762	1-28, 34
Instrument panel wiring harness and front door wiring harness (Driver's side) combination	D-25	3-244, 245, 286, 287, 302, 303, 304, 308, 316, 320, 571, 573, 575, 577, 578, 579, 584, 588, 594, 606, 762	1-27, 33
Instrument panel wiring harness and front door wiring harness (Passenger's side) combination	D-15	3-244, 245, 285, 289, 293, 299, 304, 306, 308, 314, 316, 318, 320, 326, 571, 573, 575, 577, 578, 579, 584, 588, 594, 606, 762	1-26, 32
Instrument panel wiring harness and J/B combination	D-207	3-6, 227, 228, 231, 232, 235, 237, 239, 241, 309, 321, 734, 739	1-30, 36
Instrument panel wiring harness and J/B combination	D-208	3-6, 32, 35, 40, 43, 48, 51, 56, 59, 66, 69, 70, 71, 73, 75, 91, 107, 123, 140, 150, 158, 160, 162, 170, 178, 186, 195, 199, 203, 204, 207, 208, 210, 211, 214, 215, 218, 221, 222, 225, 227, 231, 235, 239, 246, 248, 253, 257, 262, 264, 266, 268, 272, 276, 278, 280, 282, 284, 285, 288, 289, 292, 293, 298, 299, 305, 309, 317, 321, 328, 330, 332, 334, 336, 341, 344, 349, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542, 552, 553, 556, 557, 560, 564, 568, 569, 570, 572, 574, 576, 578, 579, 581, 583, 584, 587, 588, 591, 593, 597, 598, 605, 609, 610, 616, 617, 618, 619, 621, 622, 629, 630, 637, 638, 645, 646, 653, 659, 665, 671, 678, 684, 659, 665, 671, 677, 683, 688, 690, 692, 694, 696, 698, 700, 702, 704, 706, 708, 710, 712, 714, 716, 720, 722, 727, 731, 734, 736, 738, 740, 741, 742, 755, 757	1-30, 36

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Instrument panel wiring harness and J/B combination	D-209	3-6, 34, 42, 50, 58, 196, 200, 205, 209, 212, 216, 221, 225, 227, 228, 231, 232, 235, 237, 239, 241, 247, 249, 254, 258, 284, 288, 292, 298, 304, 307, 308, 312, 313, 316, 319, 320, 324, 325, 332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542, 554, 558, 561, 565, 570, 572, 574, 576, 581, 583, 598, 610, 616, 714, 716, 720, 722, 736, 739, 740	1-30, 36
Instrument panel wiring harness and J/B combination	D-210	3-6, 35, 43, 51, 59, 69, 70, 71, 73, 75, 86, 91, 102, 107, 118, 123, 134, 140, 145, 150, 155, 158, 162, 168, 170, 176, 178, 184, 186, 192, 195, 196, 199, 200, 203, 204, 205, 207, 208, 209, 210, 211, 212, 214, 215, 216, 218, 220, 221, 222, 224, 225, 227, 231, 232, 235, 239, 241, 245, 247, 249, 253, 254, 257, 258, 268, 272, 274, 276, 278, 282, 284, 288, 292, 298, 307, 311, 313, 319, 323, 325, 328, 330, 332, 334, 336, 341, 344, 349, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 480, 486, 492, 502, 512, 522, 532, 542, 553, 555, 557, 559, 560, 561, 564, 565, 568, 569, 578, 579, 581, 583, 587, 591, 593, 597, 601, 605, 609, 610, 613, 617, 621, 622, 626, 629, 634, 637, 638, 642, 645, 650, 653, 657, 659, 663, 665, 669, 671, 675, 677, 681, 683, 687, 690, 692, 693, 694, 696, 697, 698, 700, 701, 702, 704, 705, 706, 708, 709, 710, 712, 713, 714, 716, 720, 722, 727, 731, 734, 736, 738, 740, 741, 747, 749, 751, 753, 755, 757, 760	1-30, 36
Instrument panel wiring harness and J/B combination	D-211	3-6, 42, 50, 58, 86, 102, 118, 134, 145, 155, 168, 176, 184, 192, 196, 200, 205, 209, 212, 216, 218, 221, 222, 225, 227, 231, 235, 239, 247, 249, 254, 258, 284, 288, 292, 298, 304, 308, 316, 320, 332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542, 555, 559, 561, 565, 570, 572, 574, 576, 581, 583, 601, 613, 626, 634, 642, 650, 657, 663, 669, 675, 681, 687, 693, 697, 701, 705, 709, 713, 714, 716, 720, 722, 736, 740, 747, 749, 751, 753, 755, 757	1-30, 36

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Instrument panel wiring harness and J/B combination	D-213	3-207, 231, 239, 252, 256, 262, 264, 268, 272, 274, 278, 280, 282, 310, 322, 341, 349, 396, 397, 406, 407, 436, 437, 446, 447, 502, 503, 522, 526, 542, 546, 560, 564, 583, 598, 610, 621, 630, 637, 646, 653, 659, 665, 671, 677, 683, 688, 691, 694, 699, 702, 707, 710, 720, 722, 727, 730, 741, 760	1-30, 36
Instrument panel wiring harness and J/B combination	D-218	3-6, 196, 205, 228, 237, 246, 253, 269, 276, 284, 292, 305, 306, 309, 311, 312, 561, 570, 572, 736	1-31
Instrument panel wiring harness and J/B combination	D-222	3-6, 86, 102, 118, 134, 145, 155, 168, 176, 184, 192, 196, 200, 205, 209, 212, 216, 221, 225, 227, 231, 235, 239, 247, 249, 254, 258, 268, 272, 284, 288, 292, 298, 307, 313, 319, 325, 460, 466, 472, 478, 484, 490, 496, 506, 516, 526, 536, 546, 555, 559, 561, 565, 581, 583, 599, 601, 611, 613, 626, 634, 642, 650, 657, 663, 669, 675, 681, 687, 693, 697, 701, 705, 709, 713, 728, 732, 736, 740, 747, 749, 751, 753, 755, 757	1-31, 37
Instrument panel wiring harness and J/B combination	D-223	3-6, 30, 33, 41, 46, 49, 57, 66, 75, 76, 91, 107, 108, 123, 139, 140, 150, 158, 160, 162, 178, 196, 200, 204, 208, 211, 215, 220, 224, 227, 231, 235, 239, 244, 245, 246, 248, 252, 256, 266, 269, 276, 284, 285, 288, 289, 292, 293, 298, 299, 305, 309, 310, 317, 321, 322, 457, 469, 481, 493, 513, 533, 552, 554, 556, 558, 560, 564, 581, 583, 584, 588, 592, 593, 605, 610, 616, 618, 619, 653, 654, 659, 665, 666, 671, 677, 678, 683, 692, 700, 708, 735, 739, 754	1-31, 37
Instrument panel wiring harness and roof wiring harness combination	D-29	3-226, 230, 234, 238, 309, 321, 734, 738	1-27, 33
Instrument panel wiring harness and transmission wiring harness	E-115	3-87, 103, 119, 135, 144, 146, 154, 162, 166, 169, 170, 174, 177, 178, 182, 185, 186, 190, 193, 262, 264, 268, 272, 277, 281, 562, 566, 598, 599, 602, 610, 611, 614, 623, 631, 639, 647, 656, 662, 668, 674, 681, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 727, 728, 731, 732	1-41, 45
Instrument panel wiring harness and transmission wiring harness combination	E-114	3-62, 63, 64, 77, 93, 109, 125, 139, 149, 159, 160, 163, 171, 179, 187, 656, 662, 668, 674, 679, 685	1-41, 45
J/C (1)	A-14	3-8, 16, 252, 256, 310, 322	1-4, 6

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
J/C (2)	A-15	3-8, 16, 35, 43, 59, 194, 195, 198, 199, 203, 207, 210, 214, 218, 222, 328, 354, 360, 366, 372, 378, 388, 398, 408, 418, 428, 438, 448, 458, 464, 470, 476, 482, 488, 494, 504, 514, 524, 534, 544, 553, 557, 568, 569, 580, 582, 690, 694, 698, 702, 706, 710	1-4, 6
J/C (3)	A-16	3-9, 17, 194, 198, 250, 266, 355, 361, 367, 373, 379, 389, 399, 409, 419, 429, 439, 449, 458, 464, 471, 477, 483, 489, 494, 504, 515, 525, 535, 545, 688, 690, 694, 698, 702, 706, 710	1-4, 6
J/C (4)	D-128	3-10, 11, 18, 19, 69, 76, 86, 90, 92, 102, 106, 108, 118, 122, 124, 134, 138, 145, 148, 155, 162, 163, 164, 168, 170, 171, 172, 176, 178, 179, 184, 186, 187, 192, 262, 264, 278, 282, 562, 566, 598, 610, 620, 626, 628, 634, 636, 642, 644, 650, 652, 657, 658, 663, 664, 669, 670, 675, 676, 678, 681, 682, 684, 687, 741, 746, 747, 748, 749, 750, 751, 752, 753, 754, 756	1-29, 35
J/C (5)	D-33	3-12, 20, 76, 86, 88, 102, 108, 118, 120, 134, 145, 155, 162, 166, 168, 174, 176, 178, 182, 184, 190, 192, 232, 240, 241, 245, 268, 272, 276, 280, 457, 459, 463, 465, 469, 471, 475, 477, 481, 483, 487, 489, 493, 495, 503, 505, 513, 515, 523, 525, 533, 535, 543, 545, 562, 578, 579, 591, 593, 599, 601, 604, 611, 613, 616, 617, 621, 626, 634, 637, 642, 650, 652, 657, 663, 664, 669, 675, 678, 681, 687, 692, 693, 697, 700, 701, 705, 708, 709, 713, 714, 716, 720, 722, 747, 749, 751, 753, 755, 756, 757	1-27, 33
J/C (6)	D-32	3-13, 21, 76, 92, 108, 124, 156, 162, 166, 170, 174, 178, 182, 186, 190, 216, 223, 228, 236, 237, 240, 242, 251, 262, 264, 270, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 340, 344, 345, 348, 352, 353, 358, 359, 364, 365, 370, 371, 376, 377, 386, 387, 396, 397, 406, 407, 416, 417, 426, 427, 436, 437, 446, 447, 456, 457, 462, 463, 468, 472, 474, 478, 480, 484, 486, 490, 492, 493, 502, 503, 512, 516, 522, 526, 532, 533, 542, 546, 562, 566, 568, 569, 570, 572, 574, 576, 578, 579, 598, 602, 610, 614, 623, 629, 631, 639, 645, 647, 691, 692, 695, 696, 699, 700, 703, 704, 707, 708, 711, 732, 734, 735, 738, 739, 741, 758	1-27, 33

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
J/C (7)	D-31	3-14, 22, 76, 88, 103, 108, 120, 135, 139, 154, 162, 177, 178, 193, 195, 199, 204, 208, 211, 215, 219, 224, 244, 257, 272, 278, 282, 286, 287, 302, 303, 316, 320, 457, 469, 481, 493, 513, 533, 553, 557, 564, 580, 582, 587, 588, 591, 592, 597, 601, 605, 609, 611, 613, 616, 618, 619, 653, 654, 659, 665, 666, 671, 677, 678, 683, 692, 700, 708, 727, 731, 736, 740, 754, 755, 757	1-27, 33
J/C (8)	D-30	3-15, 23, 88, 104, 120, 136, 166, 174, 182, 190, 194, 198, 210, 212, 214, 216, 218, 219, 222, 223, 227, 237, 246, 251, 253, 254, 257, 258, 307, 311, 313, 323, 332, 333, 334, 335, 336, 340, 344, 347, 348, 351, 352, 353, 356, 358, 359, 362, 364, 365, 368, 370, 371, 374, 376, 377, 380, 383, 384, 386, 387, 390, 392, 394, 396, 397, 400, 403, 404, 406, 407, 410, 412, 414, 416, 417, 420, 423, 424, 426, 427, 430, 432, 434, 436, 437, 440, 443, 444, 446, 447, 450, 452, 454, 460, 466, 472, 478, 484, 490, 496, 498, 500, 506, 508, 510, 516, 518, 520, 526, 528, 530, 536, 538, 540, 546, 548, 550, 568, 569, 570, 572, 574, 576, 578, 579, 584, 586, 587, 588, 590, 591, 594, 596, 597, 600, 606, 608, 609, 612, 616, 617, 622, 638, 646, 692, 696, 700, 704, 726, 730, 742, 746, 748, 750, 751, 755, 757, 759, 761	1-27, 33
Key reminder switch	D-202	3-227, 231, 237, 241, 246, 248, 307, 313, 319, 325, 746, 748, 750, 752	1-30, 36
Lever (throttle) position sensor	B-02	3-158, 160, 709, 713	1-8, 10
Licence plate lamp assembly	I-04	3-202, 206	1-60
Luggage compartment lamp	F-13	3-226, 230, 234, 238	1-46, 48, 50, 52
Max hot switch <Manual A/C (4M4)>	D-102	3-329, 331	1-28, 34
Mode selection damper control motor and potentiometer <Automatic A/C>	D-24	3-461, 467, 473, 479, 485, 491, 497, 507, 517, 527, 537, 547	1-27, 33
Motor antenna	A-01	3-587, 591, 597, 609	1-4, 6
Motor antenna	A-02	3-587, 591, 597, 609	1-4, 6
Motor antenna-ECU	D-16	3-587, 591, 597, 609	1-26, 32
Motor antenna switch	E-17	3-586, 590, 596, 608	1-39, 43
Motor relay 1 <HBB>	B-20X	3-620, 628, 636, 644	1-8, 10, 12, 14, 16, 20

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Motor relay 2 <HBB>	B-19X	3-620, 628, 636, 644	1-8, 10, 12, 14, 16, 20
No connection	F-24	3-592, 604	1-47, 49, 51, 53
No connection	F-25	3-602, 614	1-47, 49, 51, 53
Oil pressure switch	B-55	3-276, 280	1-9, 11, 13, 15, 17, 21
Output shaft speed sensor <A/T>	C-24	3-162, 178, 186	1-25
Outside thermo sensor	A-30	3-461, 467, 473, 479, 485, 491, 497, 507, 517, 527, 537, 547, 600, 612	1-5, 7
Outside/inside air selection damper control motor	D-09	3-332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446, 456, 462, 468, 474, 480, 486, 492, 502, 512, 522, 532, 542	1-26, 32
Oxygen sensor (front)	C-19	3-116, 132	1-25
Oxygen sensor (front)	C-20	3-84, 100	1-25
Oxygen sensor (Rear)	C-10	3-116, 132	1-24
Parking brake switch	E-02	3-145, 155, 277, 281, 602, 614	1-38, 42
Photo sensor <Automatic A/C>	D-106	3-460, 466, 473, 479, 485, 491, 496, 506, 517, 527, 537, 547	1-28, 34
Position lamp (LH)	A-18	3-202, 206	1-4, 6
Position lamp (RH)	A-38	3-203, 207	1-5, 7
Power seat assembly	F-23	3-744	1-47, 49, 51, 53
Power steering oil pressure switch	B-51	3-83, 99, 115, 131, 143, 153	1-11, 13, 15, 21
Power window main switch	H-05	3-286, 302	1-56, 58
Power window motor (Front: LH)	H-04	3-286, 289, 299	1-56, 58
Power window motor (Front: RH)	H-16	3-285, 293, 302	1-57, 59
Power window motor (Rear: LH)	H-10	3-294, 300	1-58
Power window motor (Rear: RH)	H-23	3-295, 301	1-59
Power window relay	D-221	3-6, 284, 288, 292, 298	1-31, 37
Power window sub switch (Front: LH)	H-26	3-289, 299	1-57, 59
Power window sub switch (Front: RH)	H-15	3-285, 293	1-57, 59
Power window sub switch (Rear: RH)	H-02	3-294, 300	1-58
Power window sub switch (Rear: RH)	H-19	3-295, 301	1-59
PTC heater 1 <4M4>	D-08	3-328, 329, 330, 331	1-26, 32

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
PTC heater relay 1	A-17	3-328, 330	1-4, 6
PTC heater relay 2	A-43	3-328	1-5
PTC heater relay 2 <4M4>	D-36	3-328	1-27
Purge control solenoid valve	B-106	3-84, 100, 116, 132	1-18, 22
Radio	D-04	3-584, 586, 588, 590, 592, 593, 594, 596, 604, 605, 606, 608	1-26, 32
Radio	D-144	3-593	1-29, 35
Rear A/C control unit <Dual manual A/C (with rear heater) or dual automatic A/C>	E-23	3-390, 392, 410, 412, 430, 432, 450, 498, 500, 508, 510, 518, 520, 528, 530, 538, 540, 548, 550	1-39, 43
Rear A/C switch <Dual manual A/C (with rear heater) or dual automatic A/C>	E-119	3-391, 411, 431, 451, 499, 509, 519, 529, 539, 549	1-41, 45
Rear A/C unit <Dual manual A/C (with rear heater) or dual automatic A/C>	G-22	3-392, 412, 432, 452, 500, 510, 520, 530, 540, 550	1-55
Rear A/C unit <Dual manual A/C (with rear heater) or dual automatic A/C>	G-24	3-393, 413, 433, 453, 501, 511, 521, 531, 541, 551	1-55
Rear A/C unit <Dual manual A/C (with rear heater) or dual automatic A/C>	G-26	3-393, 413, 433, 453, 501, 511, 521, 531, 541, 551	1-55
Rear blower relay	D-214	3-336, 340, 344, 348, 380, 390, 400, 410, 420, 430, 440, 450, 498, 508, 518, 528, 538, 548	1-30, 36
Rear blower unit <Rear heater or dual manual A/C (without rear heater)>	G-04	3-346, 350, 382, 402, 422, 442	1-55
Rear combination lamp (LH)	G-02	3-218, 222, 263, 265	1-54, 55
Rear combination lamp (LH)	G-12	3-202, 206, 252, 256, 260, 261, 311, 322	1-54, 55
Rear combination lamp (RH)	G-07	3-218, 222, 263, 265	1-54, 55
Rear combination lamp (RH)	G-08	3-203, 207, 253, 257, 260, 261, 311, 323	1-54, 55
Rear cooler control unit <Dual manual A/C (without rear heater)>	E-22	3-380, 383, 400, 403, 420, 423, 440, 443	1-39, 43
Rear cooler switch <Dual manual A/C (without rear heater)>	E-118	3-401, 421, 441	1-41, 45
Rear cooler unit <Dual manual A/C (without rear heater)>	G-25	3-383, 403, 423, 443	1-55
Rear differential lock air pump	G-14	3-728, 732	1-54, 55
Rear differential lock detection switch	G-13	3-623, 631, 639, 647, 728, 732	1-54, 55
Rear differential lock switch	E-16	3-726, 730	1-39, 43
Rear differential lock-ECU	G-01	3-623, 631, 639, 647, 726, 728, 730, 732	1-54, 55

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Rear door switch (LH)	F-14	3-236, 240, 244, 245, 312, 324	1-50, 52
Rear door switch (RH)	F-10	3-237, 241, 244, 245, 312, 324	1-50, 52
Rear fog lamp relay	D-212	3-6, 35, 43, 51, 59, 69, 70, 71, 73, 75, 91, 107, 123, 140, 150, 160, 162, 170, 178, 186, 218, 222	1-30, 36
Rear heater control unit <Rear heater (Long wheelbase models)>	E-12	3-347, 351	1-38, 42
Rear heater switch	E-101	3-337, 341, 345, 349	1-40, 44
Rear heater unit	G-09	3-347, 351	1-55
Rear heater unit	G-10	3-347, 351	1-55
Rear heater unit <Rear heater (Short wheelbase models)>	E-103	3-338, 342	1-40, 44
Rear personal lamp (LH)	F-12	3-226, 230, 234, 238	1-46, 48, 50, 52
Rear personal lamp (RH)	F-09	3-226, 230, 234, 238	1-46, 48, 50, 52
Rear propeller shaft speed sensor	C-08	3-691, 695, 699, 703, 707, 711	1-24
Rear speaker (LH)	F-15	3-585, 589, 595, 607	1-47, 49
Rear speaker (LH)	H-11	3-585, 589, 595, 607	1-58
Rear speaker (RH)	F-08	3-585, 589, 595, 607	1-46, 48
Rear speaker (RH)	H-22	3-585, 589, 595, 607	1-59
Rear washer motor	I-08	3-560, 564	1-60
Rear wiper motor	I-07	3-561, 565	1-60
Remote controlled mirror (LH)	H-07	3-571, 573, 575, 577, 578, 579	1-56, 58
Remote controlled mirror (RH)	H-13	3-571, 573, 575, 577, 578, 579	1-56, 58
Remote controlled mirror switch	D-142	3-578, 579	1-29, 35
Resistor <Heater or manual A/C>	D-127	3-332, 334, 352, 358, 364, 370, 376, 386, 396, 406, 416, 426, 436, 446	1-29, 35
Rheostat	D-146	3-758, 760	1-29, 35
Roof wiring harness and pillar wiring harness combination	F-02	3-734, 738	1-46, 48, 50, 52
Room lamp	F-07	3-226, 230, 234, 238, 309, 321	1-46, 48, 50, 52
Select rail switch <4M4-M/T>	C-02	3-146, 156	1-24
Shift actuator	C-11	3-693, 697, 701, 705, 709, 713	1-24
Shift switch assembly <A/T>	E-117	3-163, 171, 179, 187	1-41, 45

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Side air bag module (squib) (LH)	F-21	3-718, 724	1-47, 49, 51, 53
Side air bag module (squib) (RH)	F-28	3-718, 724	1-47, 49, 51, 53
Side impact sensor (LH)	F-19	3-718, 724	1-47, 49, 51, 53
Side impact sensor (RH)	F-01	3-718, 724	1-46, 48, 50, 52
Side turn signal lamp (LH)	A-03	3-252, 256, 310, 322	1-4, 6
Side turn signal lamp (RH)	A-42	3-252, 256, 310, 322	1-5, 7
Solenoid valve A	A-40	3-688, 690, 694, 698, 702, 706, 710	1-5, 7
Solenoid valve assembly	B-45	3-138, 148, 676, 682	1-13, 15
Solenoid valve B	A-41	3-688, 690, 694, 698, 702, 706, 710	1-5, 7
SRS-ECU	E-110	3-718, 724	1-40, 44
SRS-ECU	E-111	3-714, 716, 720, 722	1-40, 44
Starter	B-32	3-62, 63, 64, 656, 662, 668, 674	1-9, 11, 13, 15, 17, 21
Starter	B-33	3-62, 63, 64	1-9, 11, 13, 15, 17, 21
Starter relay	B-24X	3-63, 64	1-8, 10, 12, 14
Stop lamp switch	D-136	3-76, 92, 108, 124, 162, 170, 178, 186, 260, 261, 621, 629, 637, 645, 652, 658, 664, 670, 678, 684, 692, 696, 700, 704, 708, 712	1-29, 35
Sunroof motor assembly	F-06	3-734, 738	1-46, 48, 50, 52
Sunroof switch	F-05	3-735, 739	1-46, 48, 50, 52
Throttle control servo	B-122	3-82, 98, 114, 130, 654, 660, 666, 672	1-19, 23
Throttle control servo relay	B-29X	3-74, 90, 106, 122, 652, 658, 664, 670	1-16, 20
Throttle position sensor	B-102	3-82, 98, 114, 130, 654, 660, 666, 672	1-18, 22
Throttle valve controller <6G7>	D-11	3-74, 82, 90, 98, 106, 114, 122, 130, 652, 654, 656, 658, 660, 662, 664, 666, 668, 670, 672, 674, 693, 697	1-26, 32
Transfer shift lever switch	E-19	3-690, 694, 698, 702, 706, 710	1-39, 43
Transfer-ECU	E-105	3-691, 692, 693, 695, 696, 697, 699, 700, 701, 703, 704, 705, 707, 708, 709, 711, 712, 713	1-40, 44

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Transfer-ECU	E-108	3-690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 708, 709, 710, 712, 713	1-40, 44
Transmission wiring harness and battery wiring harness combination	C-01	3-62, 77, 93, 109, 125, 656, 662, 668, 674	1-24
Tweeter (LH)	H-06	3-584, 588, 594, 606	1-56, 58
Tweeter (RH)	H-14	3-584, 588, 594, 606	1-57, 59
Vacuum switch	B-13	3-277, 281	1-8, 10, 12, 14
Valve relay <HBB>	B-21X	3-622, 630, 638, 646	1-8, 10, 12, 14, 16, 20
Vehicle speed sensor	C-09	3-87, 103, 119, 135, 144, 154, 169, 177, 185, 193, 268, 272, 599, 611, 656, 662, 668, 674, 681, 687, 728, 732	1-24
Water level switch	B-09	3-277, 281	1-10, 12, 14
Wheel speed sensor (Front:LH) <ABS>	A-23	3-624, 632, 640, 648	1-5, 7
Wheel speed sensor (Front:RH) <ABS>	A-39	3-624, 632, 640, 648	1-5, 7
Wheel speed sensor (Rear: LH) <ABS>	G-15	3-624, 632, 640, 648	1-54, 55
Wheel speed sensor (Rear: RH) <ABS>	G-11	3-624, 632, 640, 648	1-54, 55
Wide open throttle switch <A/T>	D-134	3-169, 177, 183, 191	1-29, 35
Windshield washer motor	A-35	3-552, 556	1-5, 7
Windshield wiper motor	B-12	3-552, 556	1-8, 10, 12, 14, 16, 20
Wiper deicer	B-01	3-568, 569	1-8, 10, 12, 14, 16, 20
Wiper deicer relay	A-12X	3-568, 569	1-4, 6
Wiper deicer switch	E-15	3-568, 569	1-39, 43