


SEAT BELT

GENERAL INFORMATION	33-3	Removal	33-11
Description	33-3	Installation	33-12
Operation	33-5	Height Adjuster Assembly	33-13
Specifications	33-5	Removal	33-13
Tool	33-5	Installation	33-13
Circuit Diagram	33-6	Rear Seat Belt Assembly	33-14
DIAGNOSIS & TESTING	33-7	Removal	33-14
Seat Belt Inspection	33-7	Inspection	33-15
ON-VEHICLE SERVICE	33-8	Installation	33-15
Front Seat Belt Assembly	33-8	Center Seat Belt Assembly	33-16
Removal	33-8	Removal	33-16
Inspection	33-10	Inspection	33-17
Installation	33-10	Installation	33-17
Front Seat Belt Buckle Assembly	33-11	Rear Seat Belt Buckle Assembly	33-18
On-vehicle Inspection	33-11	Removal	33-18
		Installation	33-18

GENERAL INFORMATION

Description

Front Seat Belt Assembly

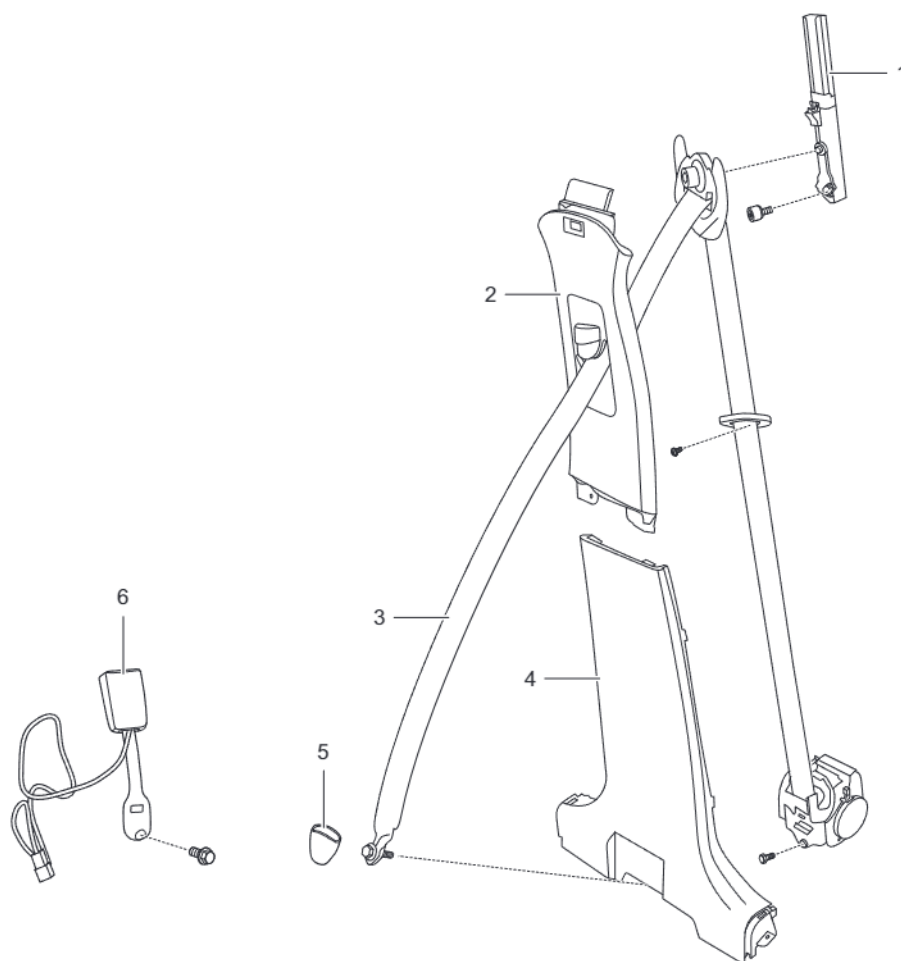


RM16330010

33

1 - Height Adjuster Assembly	2 - B-pillar Upper Protector Assembly
3 - Front Seat Belt Assembly	4 - B-pillar Lower Protector Assembly
5 - Seat Belt Lower Bolt Protective Cap	6 - Front Seat Belt Buckle Assembly

Rear Seat Belt Assembly

33

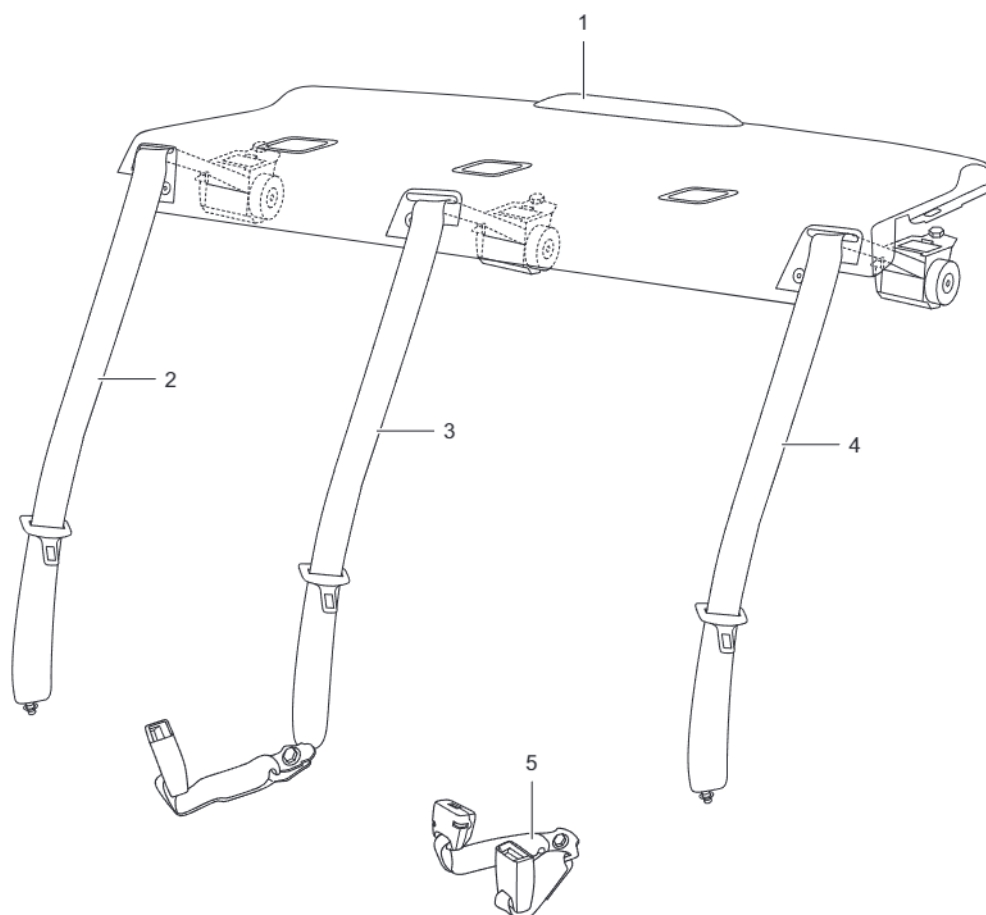

RM16330020

1 - Tonneau Cover Assembly	2 - Rear Right Seat Belt Assembly
3 - Center Seat Belt Assembly	4 - Rear Left Seat Belt Assembly
5 - Rear Seat Belt Buckle Assembly	

Front seat belt assembly is a 3 point type belt with limiter and pretensioner, and front seat belt buckle assembly is a device with unfastened alarm function. Front seat belt is equipped with seat belt reminder light which only works with ignition switch ON. If driver or front passenger seat belt is unfastened, the reminder light will flash continuously. When vehicle speed exceeds 25 km/h, the buzzer will sound to inform driver and front passenger to fasten their seat belts. The seat belt reminder light will go off immediately if seat belt is fastened.

Rear seat belt assembly is 3 point belt.

Operation

In the event of a collision, the seat belt retractor starts to work. The seat belt is locked securely and cannot be pulled out from retractor freely, so that the passenger will be restricted to seat to prevent head and chest from hitting the steering wheel, instrument panel, windshield or front seat, which can reduce the risk of second collision.

Specifications


Torque Specifications

Description	Torque (N·m)
Front Seat Belt Assembly Fixing Bolt	50 ± 5
Front Seat Belt Assembly Fixing Screw	7 ± 1
Seat Belt Buckle Assembly Fixing Bolt	50 ± 5
Height Adjuster Assembly Fixing Bolt	50 ± 5
Rear Seat Belt Assembly Fixing Bolt	50 ± 5
Rear Seat Belt Assembly Fixing Screw	7 ± 1
Center Seat Belt Assembly Fixing Bolt	50 ± 5
Center Seat Belt Assembly Fixing Screw	7 ± 1
Rear Seat Belt Buckle Assembly Fixing Bolt	50 ± 5

33










Tool

General Tool

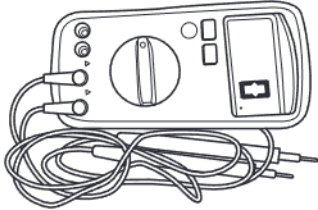Digital Multimeter	 RCH0000002
--------------------	--

Circuit Diagram

   Seat Belt System

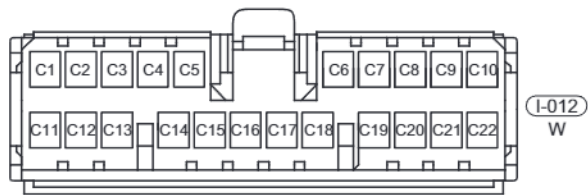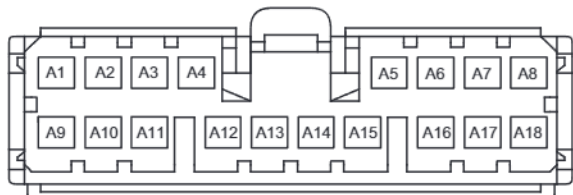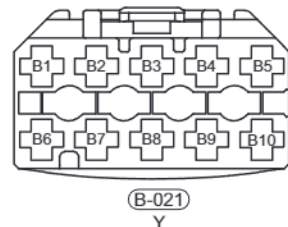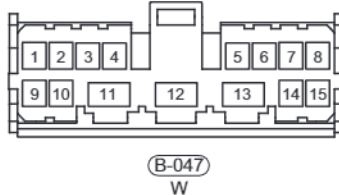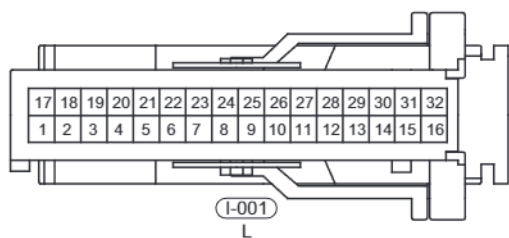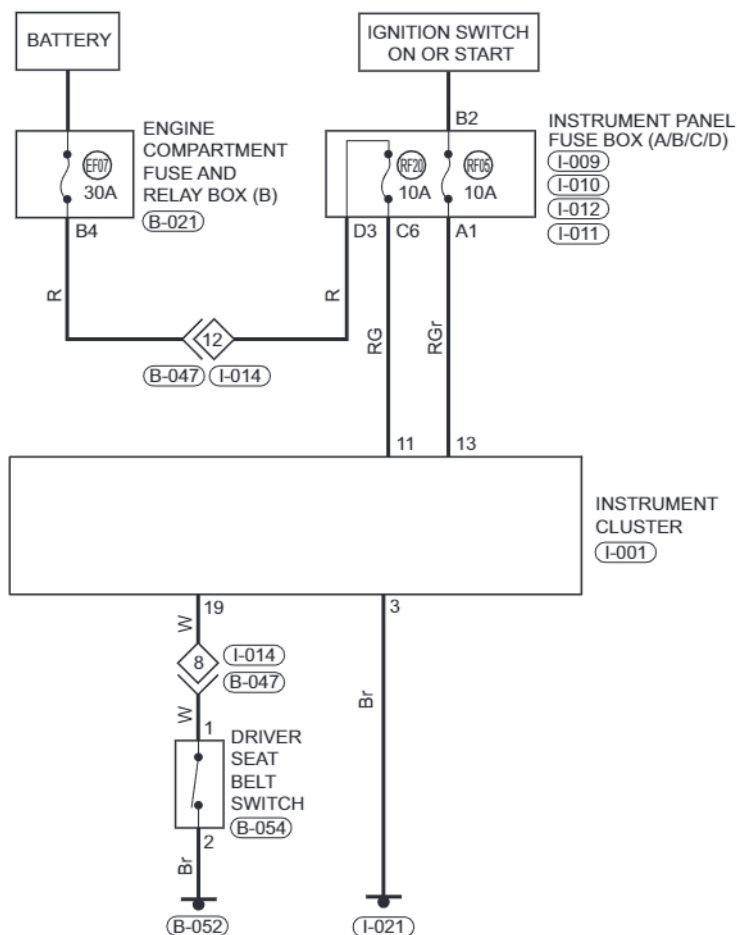

EM16330010

DIAGNOSIS & TESTING

Seat Belt Inspection

1. When pulling seat belt downward slowly by hand, the seat belt should be pulled out smoothly from retractor and can return back after releasing. If result is not as specified, replace the seat belt assembly. The seat belt should be locked automatically as it is pulled out quickly. If not, replace the seat belt assembly.
2. Check seat belt for cuts, wear and looseness. If damaged, replace the seat belt assembly.
3. Check seat belt for overstretch (e.g. after an accident). If damaged, replace the seat belt assembly or related components.
4. Fasten and release seat belt and seat belt buckle repeatedly to check the engagement between them. If those conditions (difficult operation, excessive sliding resistance and seizing, etc.) occur, replace the seat belt assembly or seat belt buckle assembly.

WARNING

- Seat belt system should be checked regularly to reduce the possibility and serious level of injury caused by accidents.
- When checking impacted vehicle, be sure to check seat belt system to reduce the possibility and serious level of injury caused by accidents.

33

ON-VEHICLE SERVICE

Front Seat Belt Assembly

Removal

HINT:

- Use same procedures for right and left sides.
- Procedures listed below are for left side.


CAUTION

- Be sure to wear safety equipment to prevent accidents, when removing the front seat belt assembly.
- Appropriate force should be applied, when removing the front seat belt assembly. Be careful not to operate roughly.
- DO NOT scratch interior, when removing the front seat belt assembly.


33

1. Turn off all electrical equipment and the ignition switch.
2. Disconnect the negative battery cable.
3. Remove the left B-pillar lower protector assembly (See page 50-19).
4. Remove the front left seat belt assembly.

- a. Using a screwdriver wrapped with protective tape, pry off the front seat belt assembly lower bolt protective cap (arrow).

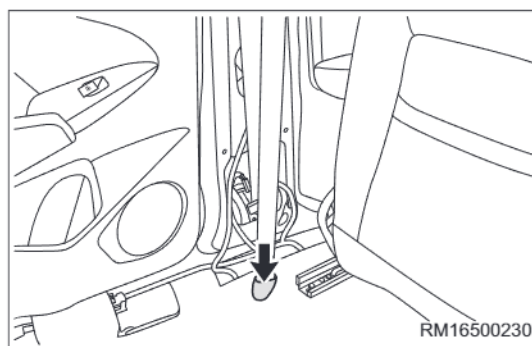


- b. Remove the fixing bolt (arrow) from the lower part of front seat belt assembly.
(Tightening torque: 50 ± 5 N·m)

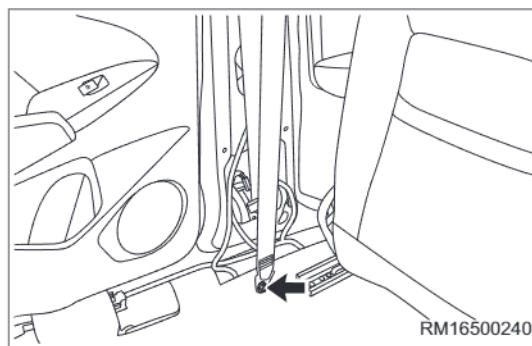

- c. Remove the left B-pillar upper protector assembly (See page 50-21).


- d. Remove the fixing bolt (arrow) from the upper part of front seat belt assembly.
(Tightening torque: 50 ± 5 N·m)

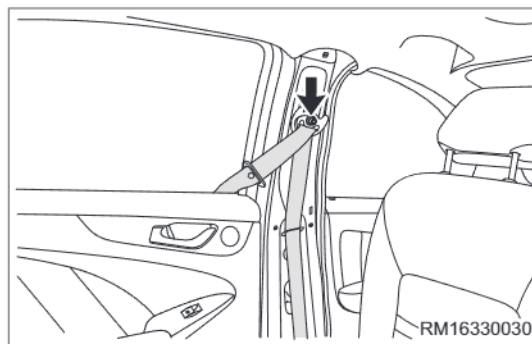

- e. Remove the fixing screw (arrow) from the center part of front seat belt assembly.
(Tightening torque: 7 ± 1 N·m)
- f. Remove the seat belt guide ring (1) from slot.



- g. Disconnect the front seat belt connector (arrow).
- h. Remove the fixing bolt (1) from front seat belt retractor.
(Tightening torque: 50 ± 5 N·m)
- i. Remove the front left seat belt assembly (2).

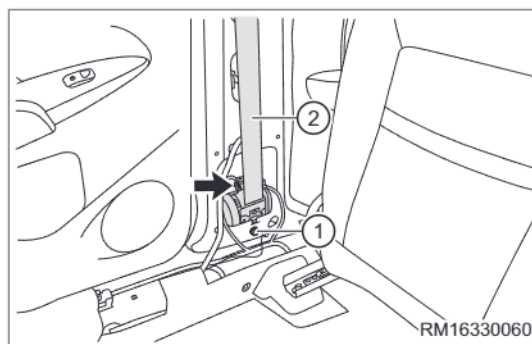

Inspection


Inspect the front seat belt retractor.

CAUTION

- DO NOT disassemble the front seat belt retractor.

HINT:

When the inclination of front seat belt retractor is 15° or less, check that front seat belt can be pulled out from front seat belt retractor. When the inclination of front seat belt retractor is over 45° , check that the front seat belt locks.

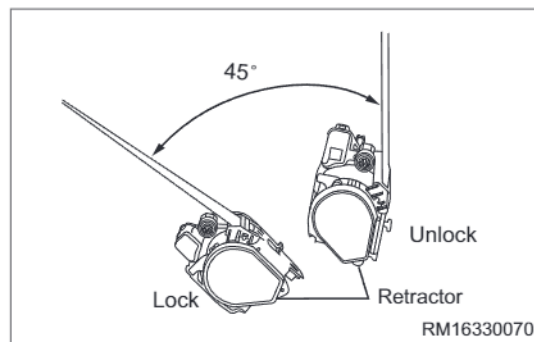

If result is not as specified, replace the front seat belt assembly.

Installation

Installation is in the reverse order of removal.


CAUTION

- Keep seat belt assembly clean without oil attached and check seat belt assembly for damage, when installing the front seat belt assembly.
- Be sure to tighten all fixing bolts and fixing screws according to the specified torque, when installing the front seat belt assembly.

Front Seat Belt Buckle Assembly


On-vehicle Inspection

1. Inspect the front seat belt buckle assembly.
 - a. Disconnect the front seat belt buckle connector (arrow).

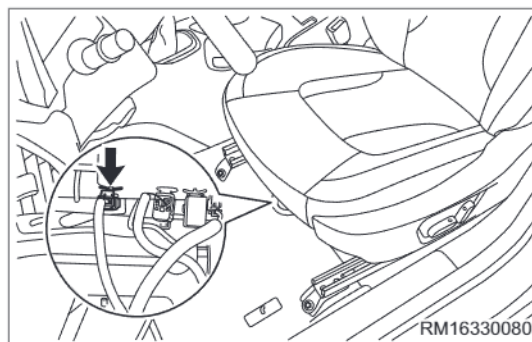

- b. Using a digital multimeter, measure the resistance between terminals 1 and 2 of front seat belt buckle assembly connector.

Under normal condition, the measured resistance should be $\infty \Omega$ (no continuity) when the front seat belt assembly is fastened and the measured resistance is less than 0Ω (continuity) when the front seat belt assembly is unfastened.

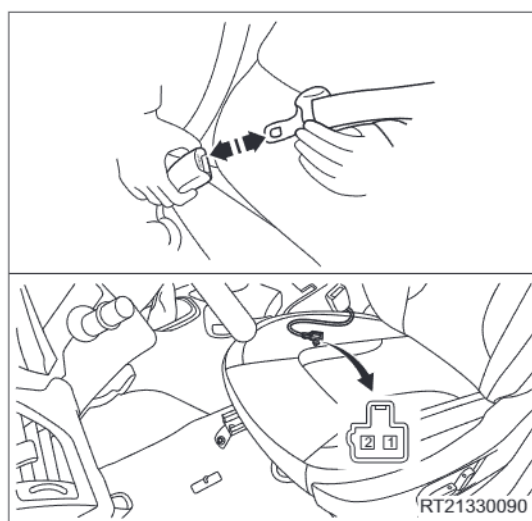

If result is not as specified, replace the front seat belt buckle assembly.

Removal

HINT:


- Use same procedures for front passenger seat belt buckle assembly and driver seat belt buckle assembly.
- Procedures listed below are for driver seat belt buckle assembly.

CAUTION


- Be sure to wear safety equipment to prevent accidents, when removing the front seat belt buckle assembly.
- DO NOT scratch interior, when removing the front seat belt buckle assembly.
- DO NOT damage wire harness and connector, when removing the front seat belt buckle assembly.

1. Turn off all electrical equipment and the ignition switch.
2. Disconnect the negative battery cable.
3. Remove the front seat assembly ([See page 47-9](#)).
4. Remove the driver seat belt buckle assembly.

- a. Disengage the clips (arrow) from lower side wire harness connector of seat belt buckle.

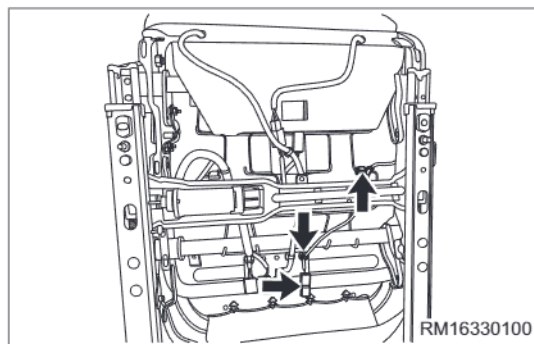

- b. Disengage the clips (arrow) from right side wire harness connector of seat belt buckle.
- c. Remove the fixing bolt (1) from seat belt buckle assembly, and remove the driver seat belt buckle assembly (2).
(Tightening torque: $50 \pm 5 \text{ N}\cdot\text{m}$)

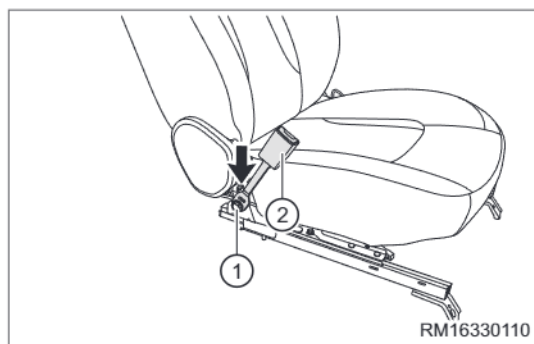

33

Installation

Installation is in the reverse order of removal.

CAUTION

- Be sure to tighten all fixing bolts according to the specified torque, when installing the front seat belt buckle assembly.
- Install connectors in place, when installing the front seat belt buckle assembly.

Height Adjuster Assembly

Removal

HINT:

- Use same procedures for right and left sides.
- Procedures listed below are for left side.


CAUTION

- Be sure to wear safety equipment to prevent accidents, when removing the height adjuster assembly.
- Appropriate force should be applied, when removing the height adjuster assembly. Be careful not to operate roughly.
- DO NOT scratch interior, when removing the height adjuster assembly.


33

1. Turn off all electrical equipment and the ignition switch.
2. Disconnect the negative battery cable.
3. Remove the left B-pillar lower protector assembly (See page 50-19).
4. Remove the left B-pillar upper protector assembly (See page 50-21).
5. Remove the height adjuster assembly.

- a. Remove the fixing bolt (arrow) from the upper part of front seat belt assembly.
(Tightening torque: 50 ± 5 N·m)

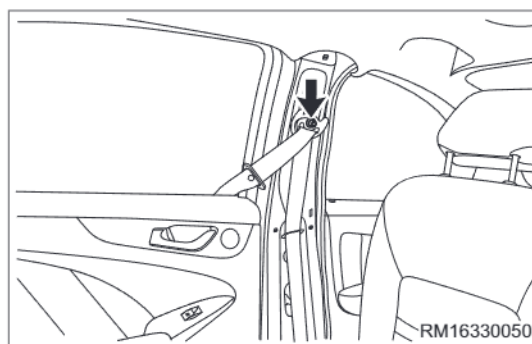

- b. Remove the fixing bolt (arrow) from height adjuster assembly.
(Tightening torque: 23 ± 2 N·m)
- c. Remove the height adjuster assembly (1) from dowel pin.

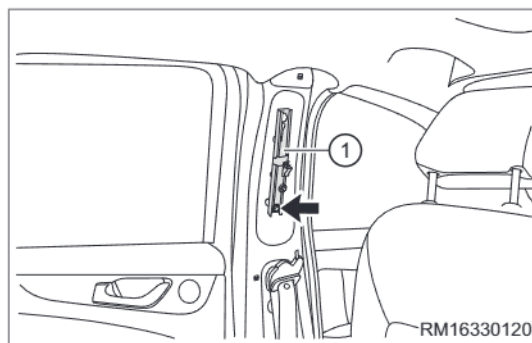

Installation

Installation is in the reverse order of removal.

CAUTION

- Be sure to tighten all fixing bolts according to the specified torque, when installing the height adjuster assembly.



Rear Seat Belt Assembly

Removal

HINT:


- Use same procedures for right and left sides.
- Procedures listed below are for left side.

CAUTION


- Be sure to wear safety equipment to prevent accidents, when removing the rear seat belt assembly.
- Appropriate force should be applied, when removing the rear seat belt assembly. Be careful not to operate roughly.
- DO NOT scratch interior, when removing the rear seat belt assembly.

33


1. Turn off all electrical equipment and the ignition switch.
2. Disconnect the negative battery cable.
3. Remove the rear seat cushion assembly ([See page 47-25](#)).
4. Remove the tonneau cover assembly ([See page 50-37](#)).
5. Remove the rear left seat belt assembly.
 - a. Remove the fixing bolt (arrow) from the lower part of rear seat belt assembly.
(Tightening torque: 50 ± 5 N·m)

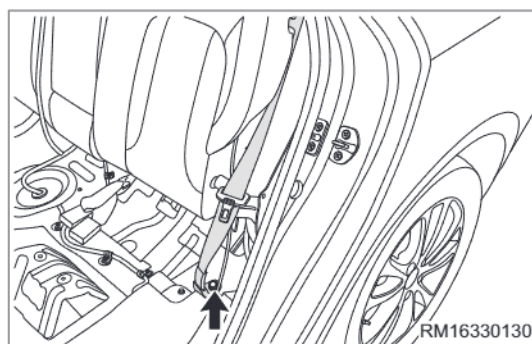

- b. Remove the fixing screw (1) from rear seat belt retractor.
(Tightening torque: 7 ± 1 N·m)
- c. Remove the fixing bolt (arrow) from rear seat belt retractor.
(Tightening torque: 50 ± 5 N·m)

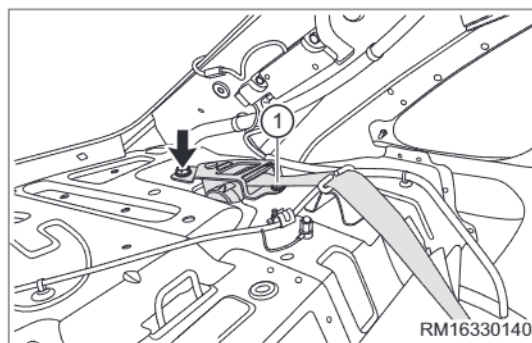

- d. Remove the rear left seat belt assembly (1) from guide bracket.

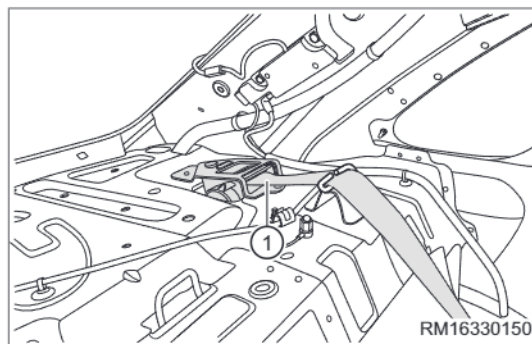

Inspection

Check the rear seat belt retractor.


CAUTION

- DO NOT disassemble the rear seat belt retractor.

33

HINT:

When the inclination of rear seat belt retractor is 15° or less, check that rear seat belt can be pulled out from rear seat belt retractor. When the inclination of rear seat belt retractor is over 45° , check that rear seat belt locks.

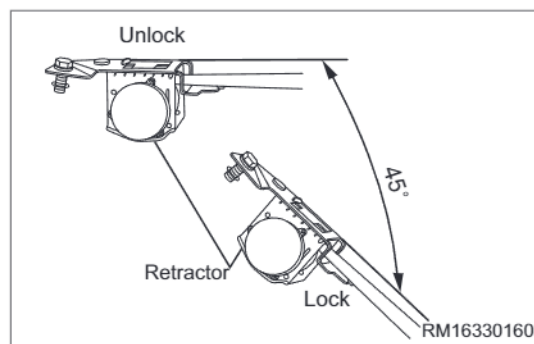

If result is not as specified, replace the rear seat belt assembly.

Installation

Installation is in the reverse order of removal.

CAUTION

- Keep seat belt assembly clean without oil attached and check seat belt assembly for damage, when installing the rear seat belt assembly.
- Be sure to tighten all fixing bolts and fixing screws according to the specified torque, when installing the rear seat belt assembly.

Center Seat Belt Assembly


Removal

CAUTION


- Be sure to wear safety equipment to prevent accidents, when removing the center seat belt assembly.
- Appropriate force should be applied, when removing the center seat belt assembly. Be careful not to operate roughly.
- DO NOT scratch interior, when removing the center seat belt assembly.

33


1. Turn off all electrical equipment and the ignition switch.
2. Disconnect the negative battery cable.
3. Remove the rear seat cushion assembly (See page 47-25).
4. Remove the tonneau cover assembly (See page 50-37).
5. Remove the center seat belt assembly.
 - a. Remove the fixing bolt (arrow) from the lower part of center seat belt assembly.
(Tightening torque: 50 ± 5 N·m)

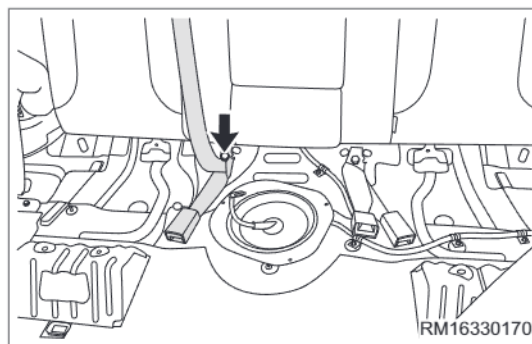

- b. Remove the fixing screw (1) from center seat belt retractor.
(Tightening torque: 7 ± 1 N·m)
- c. Remove the fixing bolt (arrow) from center seat belt retractor.
(Tightening torque: 50 ± 5 N·m)

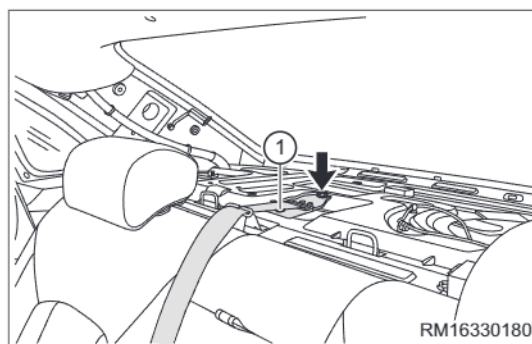

- d. Remove the center seat belt assembly (1) from guide bracket.

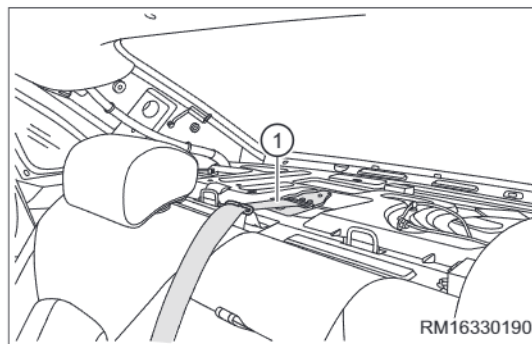

Inspection


Inspect the center seat belt retractor.

CAUTION

- DO NOT disassemble the center seat belt retractor.

HINT:

When the inclination of center seat belt retractor is 15° or less, check that center seat belt can be pulled out from center seat belt retractor. When the inclination of center seat belt retractor is over 45° , check that center seat belt locks.

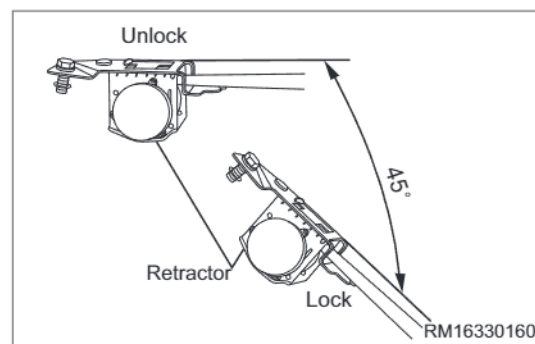

33

If result is not as specified, replace the center seat belt assembly.

Installation

Installation is in the reverse order of removal.

CAUTION

- Keep seat belt assembly clean without oil attached and check seat belt assembly for damage, when installing the center seat belt assembly.
- Be sure to tighten all fixing bolts and fixing screws according to the specified torque, when installing the center seat belt assembly.


Rear Seat Belt Buckle Assembly

Removal

CAUTION

- Be sure to wear safety equipment to prevent accidents, when removing the rear seat belt buckle assembly.
- DO NOT scratch interior, when removing the rear seat belt buckle assembly.

1. Turn off all electrical equipment and the ignition switch.
2. Disconnect the negative battery cable.
3. Remove the rear seat cushion assembly ([See page 47-25](#)).
4. Remove the rear seat belt buckle assembly.
 - a. Remove the fixing bolt (arrow) from rear seat belt buckle assembly, and remove the rear seat belt buckle assembly (1).
(Tightening torque: $50 \pm 5 \text{ N}\cdot\text{m}$)

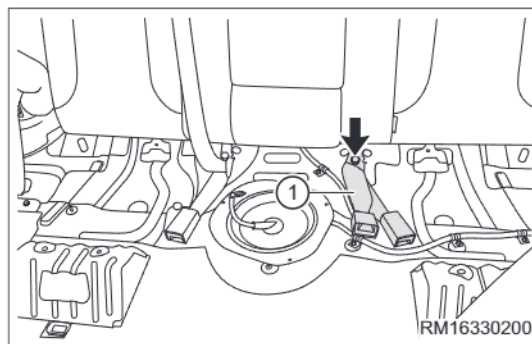

Installation

Installation is in the reverse order of removal.

CAUTION

- Be sure to tighten all fixing bolts according to the specified torque, when installing the rear seat belt buckle assembly.

