


Fuses in interior

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

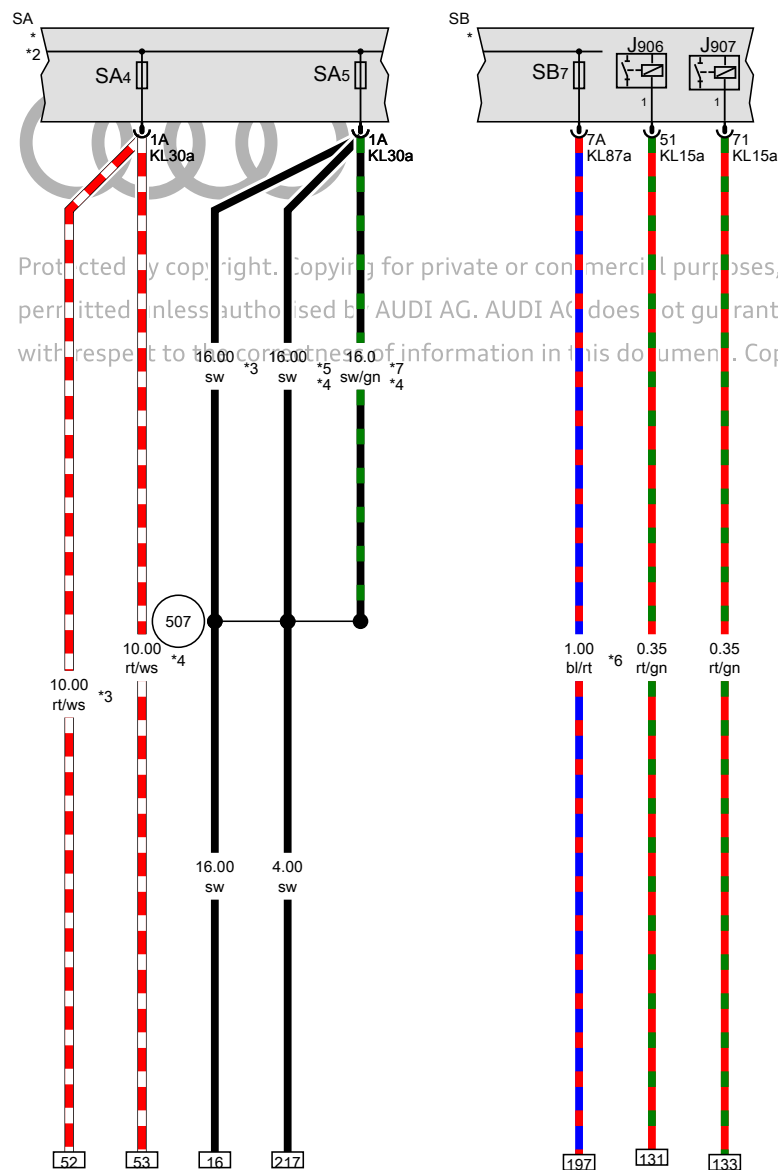

Starter relay 1, Starter relay 2, Fuse holder A, Fuse holder B

- J906 Starter relay 1
- J907 Starter relay 2
- SA Fuse holder A
- SA4 Fuse 4 on fuse holder A
- SA5 Fuse 5 on fuse holder A
- SB Fuse holder B
- SB7 Fuse 7 on fuse holder B
- 507 Threaded connection (30), on battery fuse holder

- * see applicable current flow diagram for fuses in engine compartment
- *2 see applicable current flow diagram for voltage supply for fuses, battery, starter and alternator
- *3 For models with battery in engine compartment
- *4 For models with battery in luggage compartment
- *5 Up to July 2019
- *6 For models with 1.5l petrol engine
- *7 From July 2019

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

Fuse holder C


- D Ignition/starter switch
- J527 Steering column electronics control unit
- SC Fuse holder C
- SC28 Fuse 28 on fuse holder C
- T6f 6-pin connector, black
- T16a 16-pin connector, black


A1 Positive connection (30a), in dash panel wiring harness

B188 Positive connection 5 (30), in interior wiring harness

* For models with no entry and start authorisation

*2 For models with entry and start authorisation

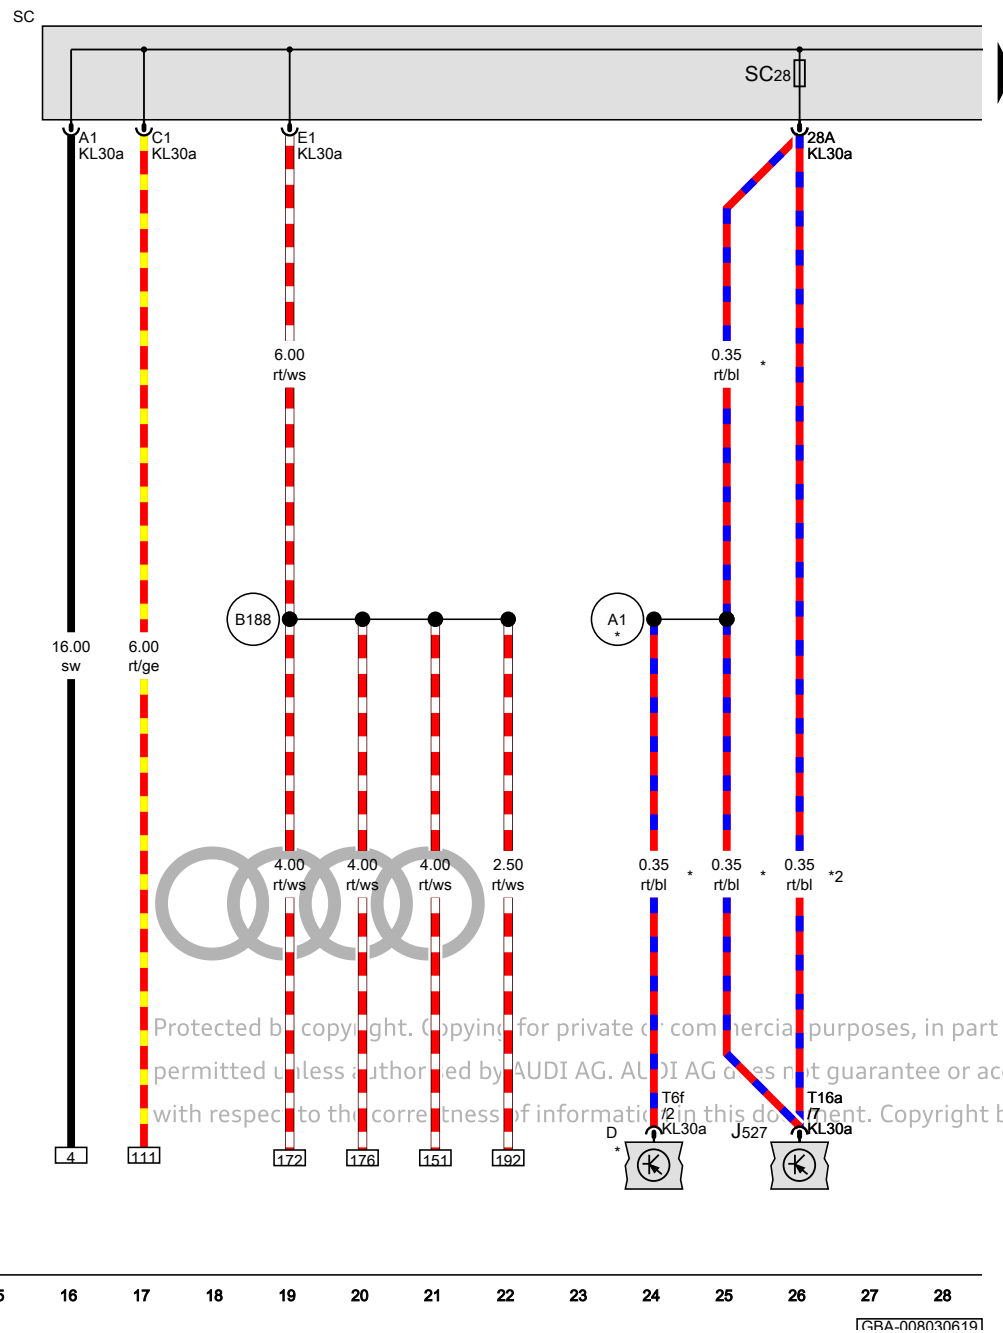

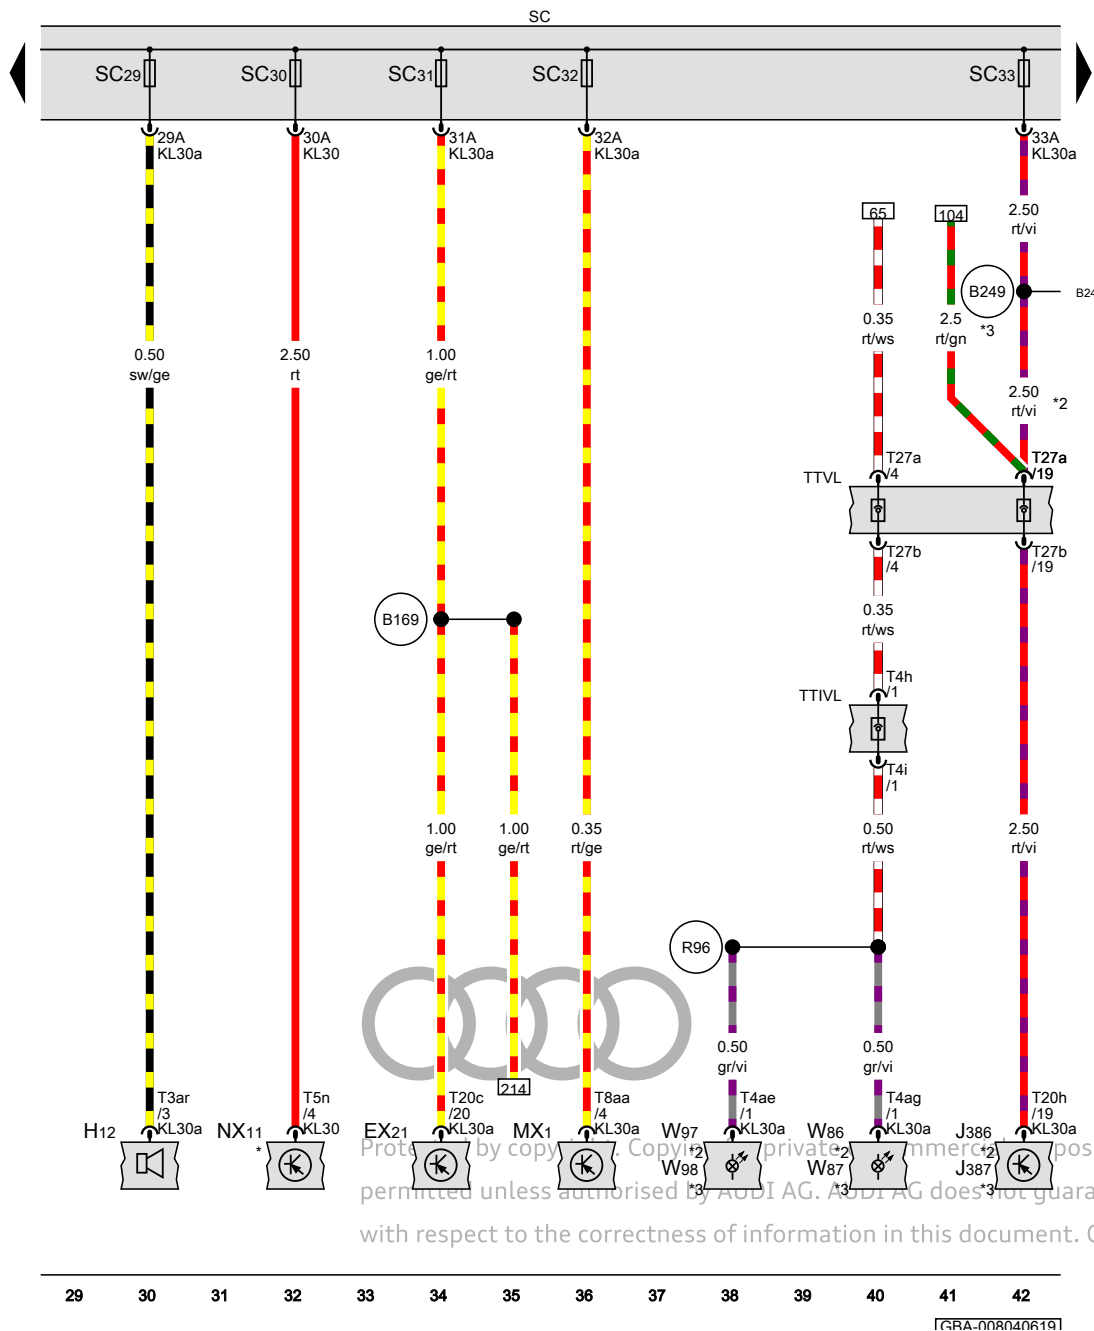


Fuse holder C

- EX21 Heater and air conditioning controls
- H12 Alarm horn
- J386 Driver door control unit
- J387 Front passenger door control unit
- MX1 Front left headlight
- NX11 Front right seat belt
- SC Fuse holder C
- SC29 Fuse 29 on fuse holder C
- SC30 Fuse 30 on fuse holder C
- SC31 Fuse 31 on fuse holder C
- SC32 Fuse 32 on fuse holder C
- SC33 Fuse 33 on fuse holder C
- T3ar 3-pin connector, black
- T4ae 4-pin connector, black
- T4ag 4-pin connector, black
- T4h 4-pin connector, black
- T4i 4-pin connector, black
- T5n 5-pin connector, colourless
- T8aa 8-pin connector, black
- T20c 20-pin connector, black
- T20h 20-pin connector, white
- T27a 27-pin connector, black
- T27b 27-pin connector, black
- TTIVL Coupling point in front left door
- TTVL Coupling point for front left door
- W86 Light for driver door background lighting
- W87 Light for passenger door background lighting
- W97 Light 2 for driver door background lighting
- W98 Light 2 for passenger door background lighting

- B169 Positive connection 1 (30), in interior wiring harness
- B249 Connection 2 (30, window regulator), in interior wiring harness
- R96 Connection 3 in driver side door wiring harness

- * see applicable current flow diagram for airbag
- *2 For left-hand drive models
- *3 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

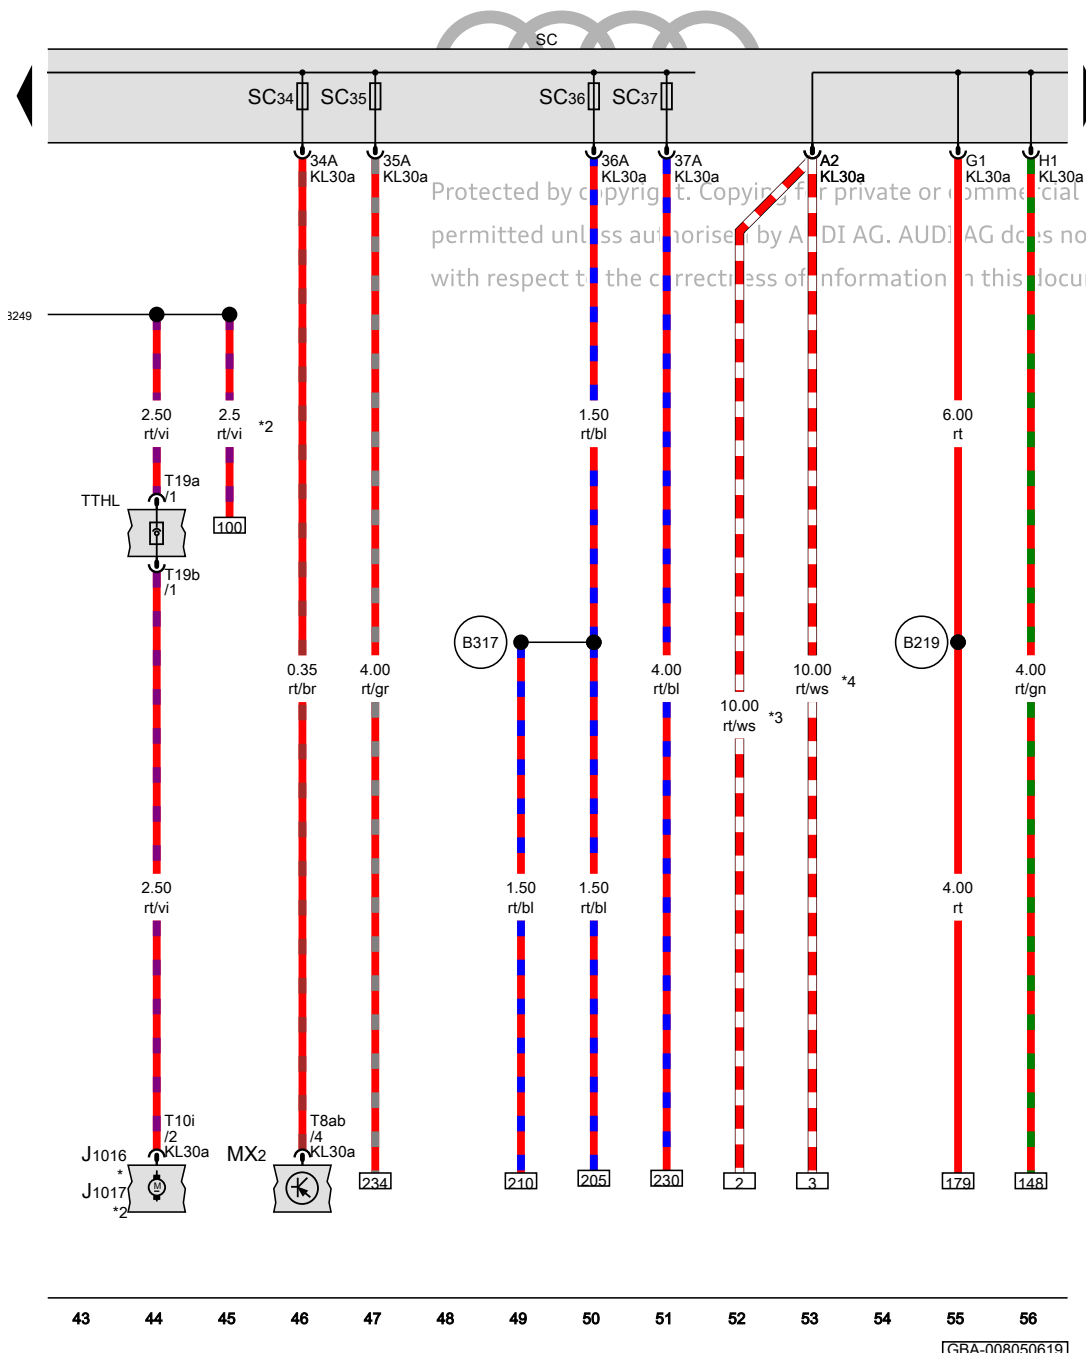


Fuse holder C

- J1016 Control unit with rear driver side window regulator motor
- J1017 Control unit with rear passenger side window regulator motor
- MX2 Front right headlight
- SC Fuse holder C
- SC34 Fuse 34 on fuse holder C
- SC35 Fuse 35 on fuse holder C
- SC36 Fuse 36 on fuse holder C
- SC37 Fuse 37 on fuse holder C
- T8ab 8-pin connector, black
- T10i 10-pin connector, black
- T19a 19-pin connector, black
- T19b 19-pin connector, black
- TTHL Coupling point for rear left door

- B219 Positive connection 4 (30a), in interior wiring harness
- B249 Connection 2 (30, window regulator), in interior wiring harness
- B317 Positive connection 3 (30a) in main wiring harness
- * For left-hand drive models
- *2 For right-hand drive models
- *3 For models with battery in engine compartment
- *4 For models with battery in luggage compartment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

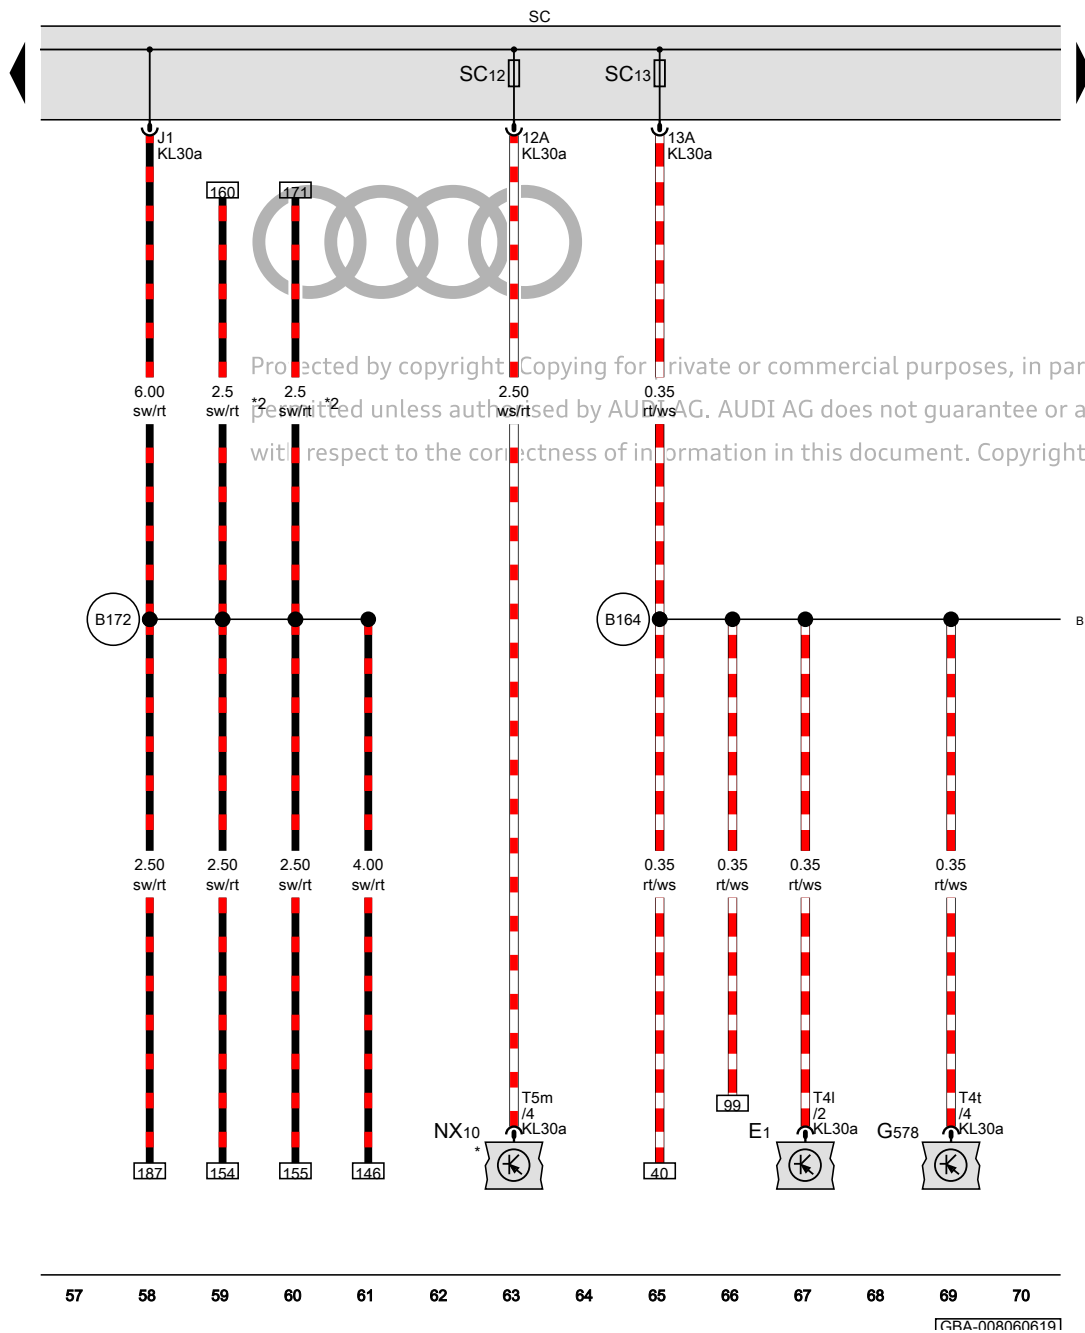



Fuse holder C

- E1 Light switch
- G578 Anti-theft alarm sensor
- NX10 Front left seat belt
- SC Fuse holder C
- SC12 Fuse 12 on fuse holder C
- SC13 Fuse 13 on fuse holder C
- T4l 4-pin connector, red
- T4t 4-pin connector, black
- T5m 5-pin connector, colourless
- B164 Connection (30, door warning light), in interior warning harness
- B172 Positive connection 4 (30), in interior wiring harness
- * see applicable current flow diagram for airbag
- *2 From November 2018

Fuse holder C

- G397 Rain and light sensor
- J745 Control unit for cornering light and headlight range control
- L120 Storage compartment illumination bulb
- L292 Light 1 for dashboard background lighting
- L293 Light 2 for dashboard background lighting
- SC Fuse holder C
- T3ac 3-pin connector, black
- T4ad 4-pin connector, black
- T4ai 4-pin connector, black
- T4aj 4-pin connector, brown
- T16c 16-pin connector, black
- T20e 20-pin connector, brown
- U31 Diagnostic connection

 B164 Connection (30, door warning light), in interior warning harness

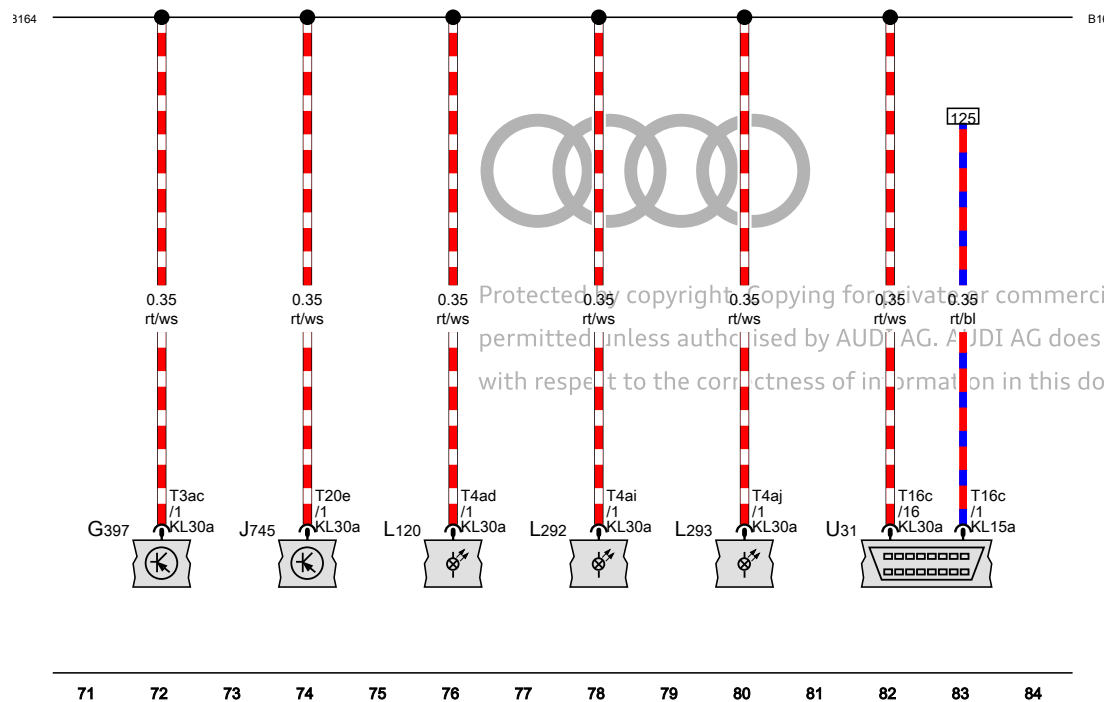


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

71 72 73 74 75 76 77 78 79 80 81 82 83 84

71 72 73 74 75 76 77 78 79 80 81 82 83 84

71 72 73 74 75 76 77 78 79 80 81 82 83 84

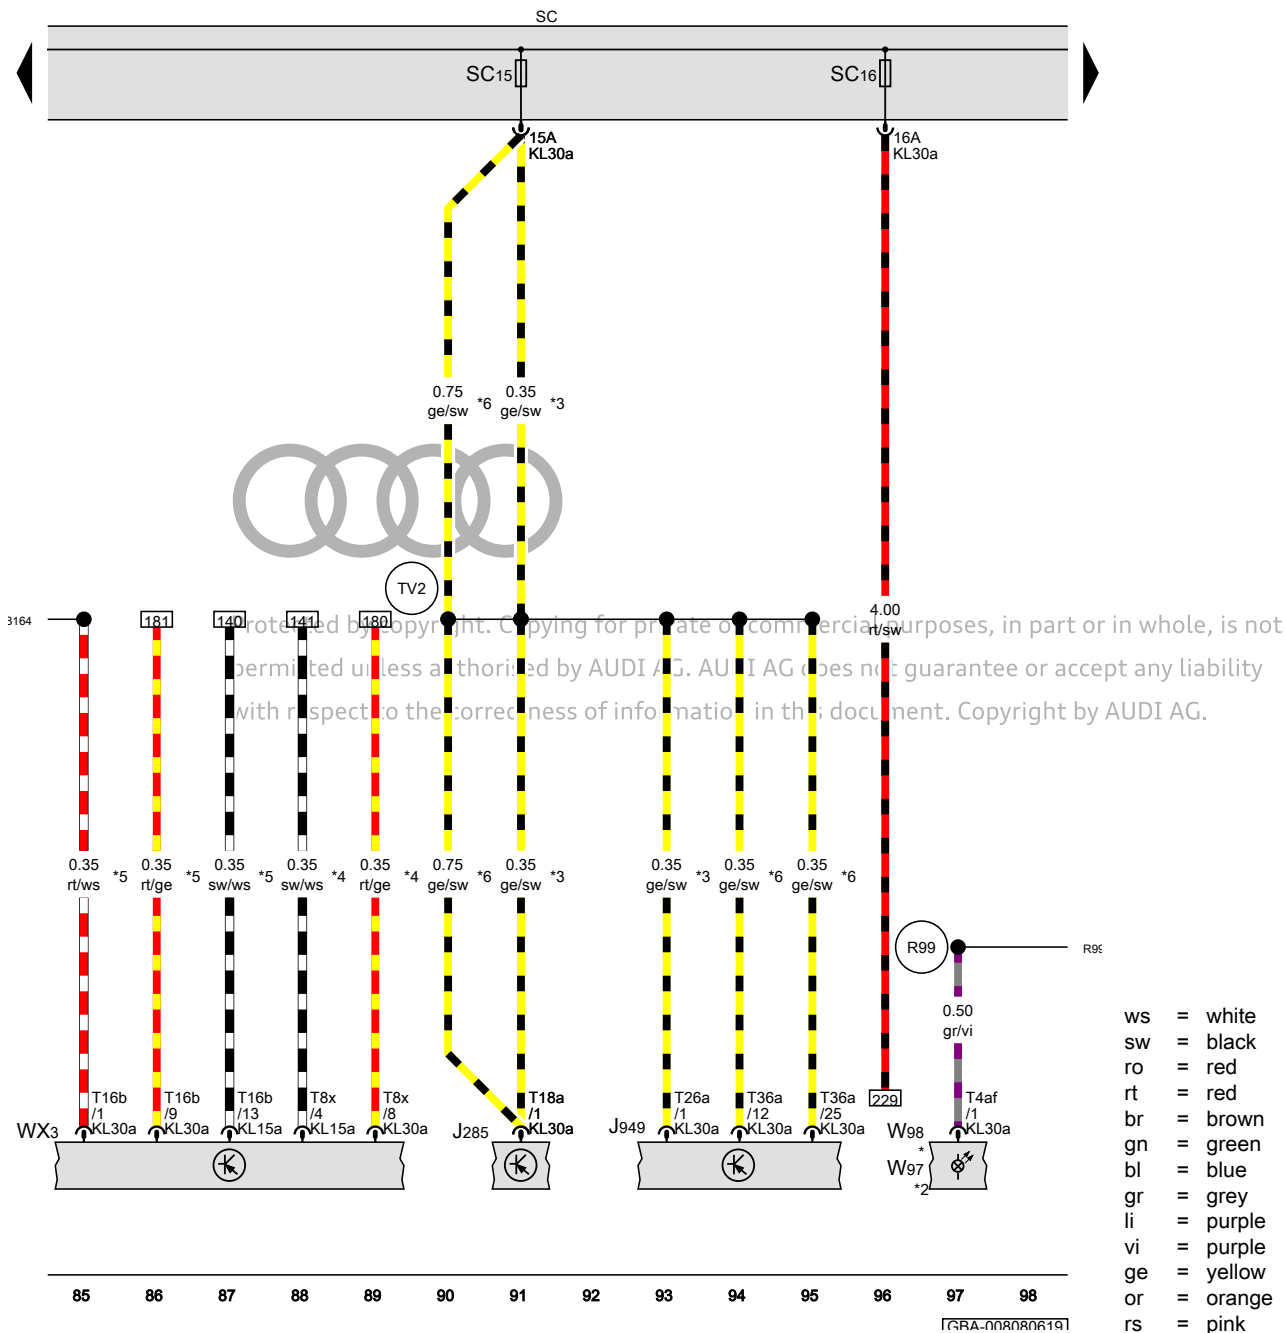

Fuse holder C


- J285 Control unit in dash panel insert
- J949 Emergency call module control unit and communication unit
- SC Fuse holder C
- SC15 Fuse 15 on fuse holder C
- SC16 Fuse 16 on fuse holder C
- T4af 4-pin connector, black
- T8x 8-pin connector, black
- T16b 16-pin connector, brown
- T18a 18-pin connector, black
- T26a 26-pin connector, black
- T36a 36-pin connector, black
- WX3 Front roof module
- W97 Light 2 for driver door background lighting
- W98 Light 2 for passenger door background lighting

B164 Connection (30, door warning light), in interior warning harness

R99 Connection 2 in front passenger side door wiring harness

TV2 Terminal 30 wiring junction

- * For left-hand drive models
- *2 For right-hand drive models
- *3 Up to July 2019
- *4 For models with no background lighting
- *5 For models with background lighting
- *6 From July 2019

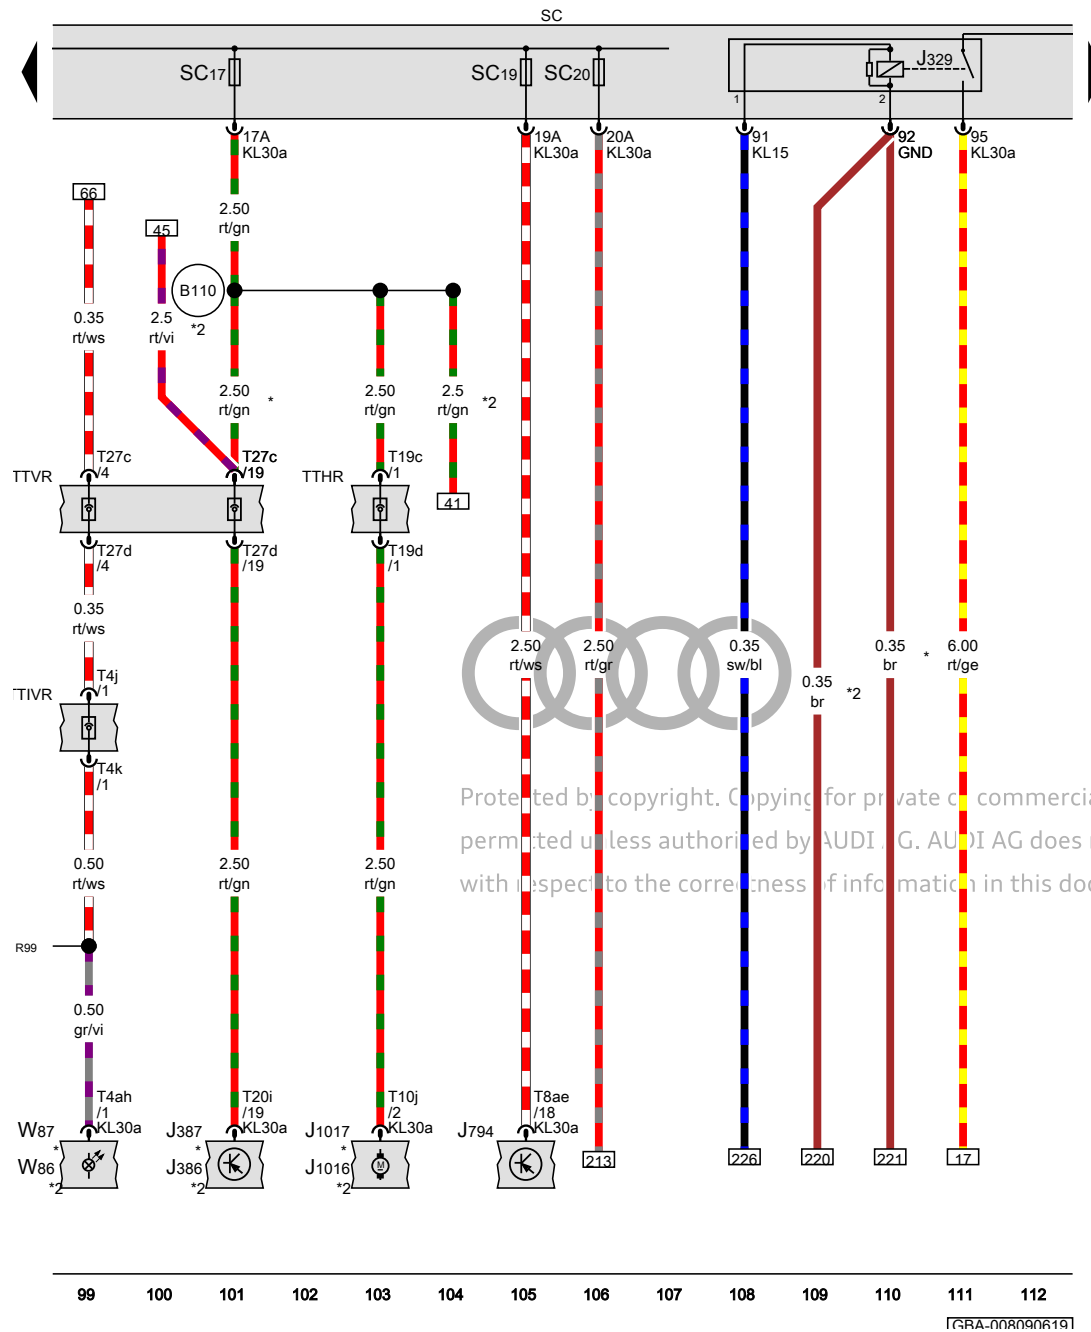

Terminal 15 voltage supply relay, Fuse holder C

- J329 Terminal 15 voltage supply relay
- J386 Driver door control unit
- J387 Front passenger door control unit
- J794 Control unit 1 for information electronics
- J1016 Control unit with rear driver side window regulator motor
- J1017 Control unit with rear passenger side window regulator motor
- SC Fuse holder C
- SC17 Fuse 17 on fuse holder C
- SC19 Fuse 19 on fuse holder C
- SC20 Fuse 20 on fuse holder C
- T4ah 4-pin connector, black
- T4j 4-pin connector, black
- T4k 4-pin connector, black
- T8ae 8-pin connector, black
- T10j 10-pin connector, black
- T19c 19-pin connector, black
- T19d 19-pin connector, black
- T20i 20-pin connector, white
- T27c 27-pin connector, black
- T27d 27-pin connector, black
- TTHR Coupling point for rear right door
- TTIVR Coupling point in front right door
- TTVR Coupling point for front right door
- W86 Light for driver door background lighting
- W87 Light for passenger door background lighting

B110 Connection (30, window regulators), in interior wiring harness


R99 Connection 2 in front passenger side door wiring harness

* For left-hand drive models

*2 For right-hand drive models

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

16BA-00080906101

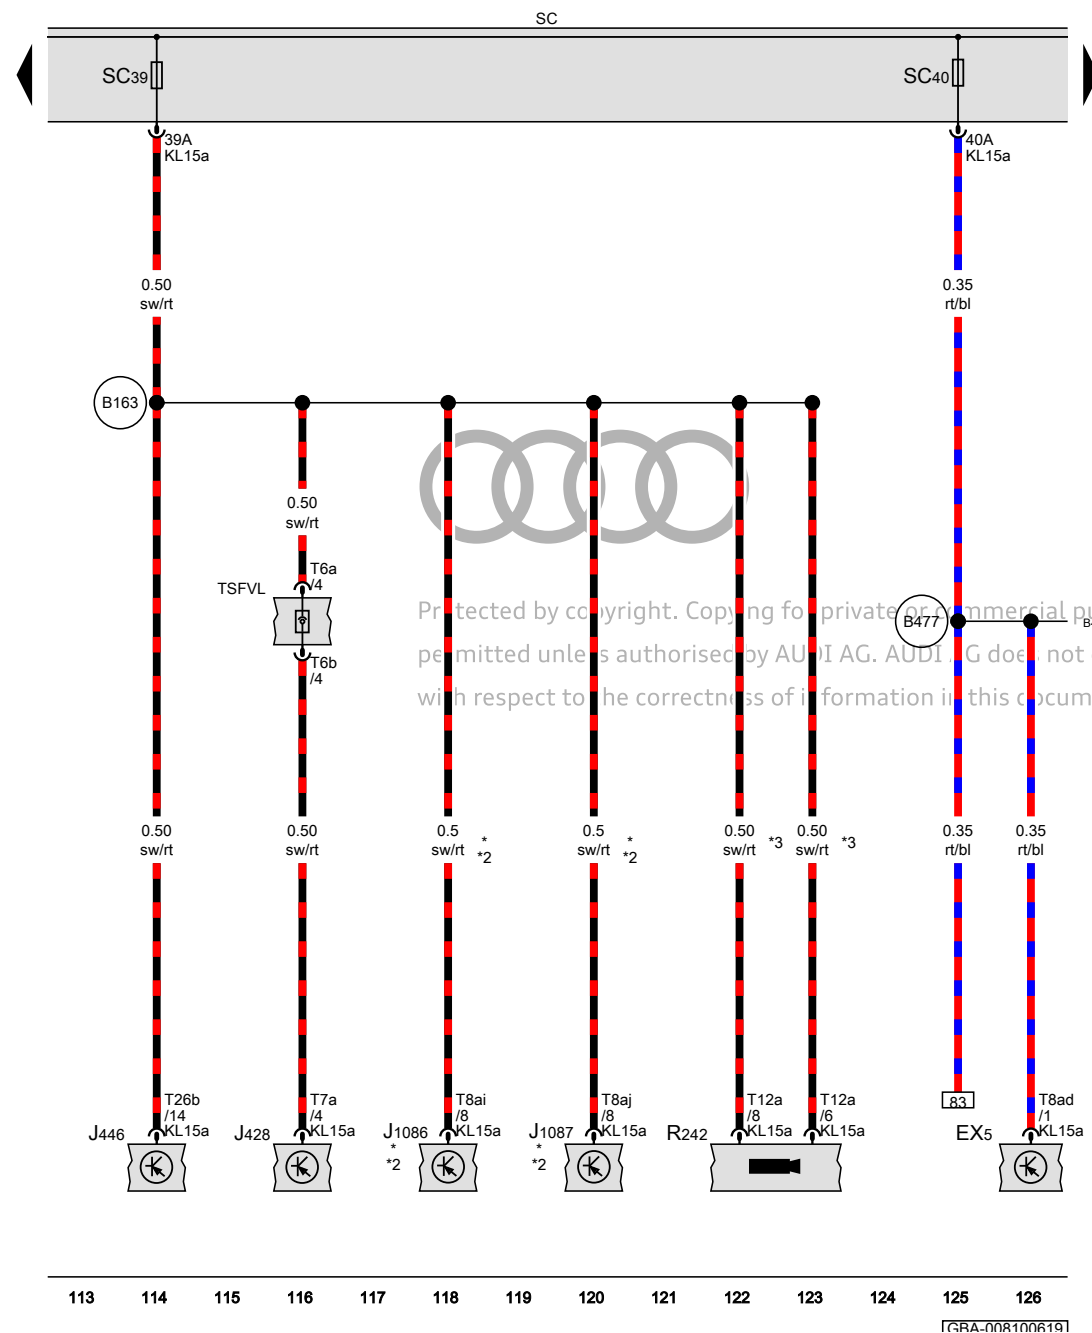

Fuse holder C

- EX5 Interior mirror
- J428 Adaptive cruise control unit
- J446 Parking aid control unit
- J1086 Blind Spot Monitor control unit
- J1087 Blind Spot Monitor control unit 2
- R242 Front camera for driver assist systems
- SC Fuse holder C
- SC39 Fuse 39 on fuse holder C
- SC40 Fuse 40 on fuse holder C
- T6a 6-pin connector, black
- T6b 6-pin connector, black
- T7a 7-pin connector, black
- T8ad 8-pin connector, black
- T8ai 8-pin connector, black
- T8aj 8-pin connector, black
- T12a 12-pin connector, black
- T26b 26-pin connector, black
- TSFVL Coupling point on front left bumper


B163 Positive connection 1 (15), in interior wiring harness

B477 Connection 13, in main wiring harness

* From July 2019

*2 For models with Blind Spot Monitor

*3 According to equipment

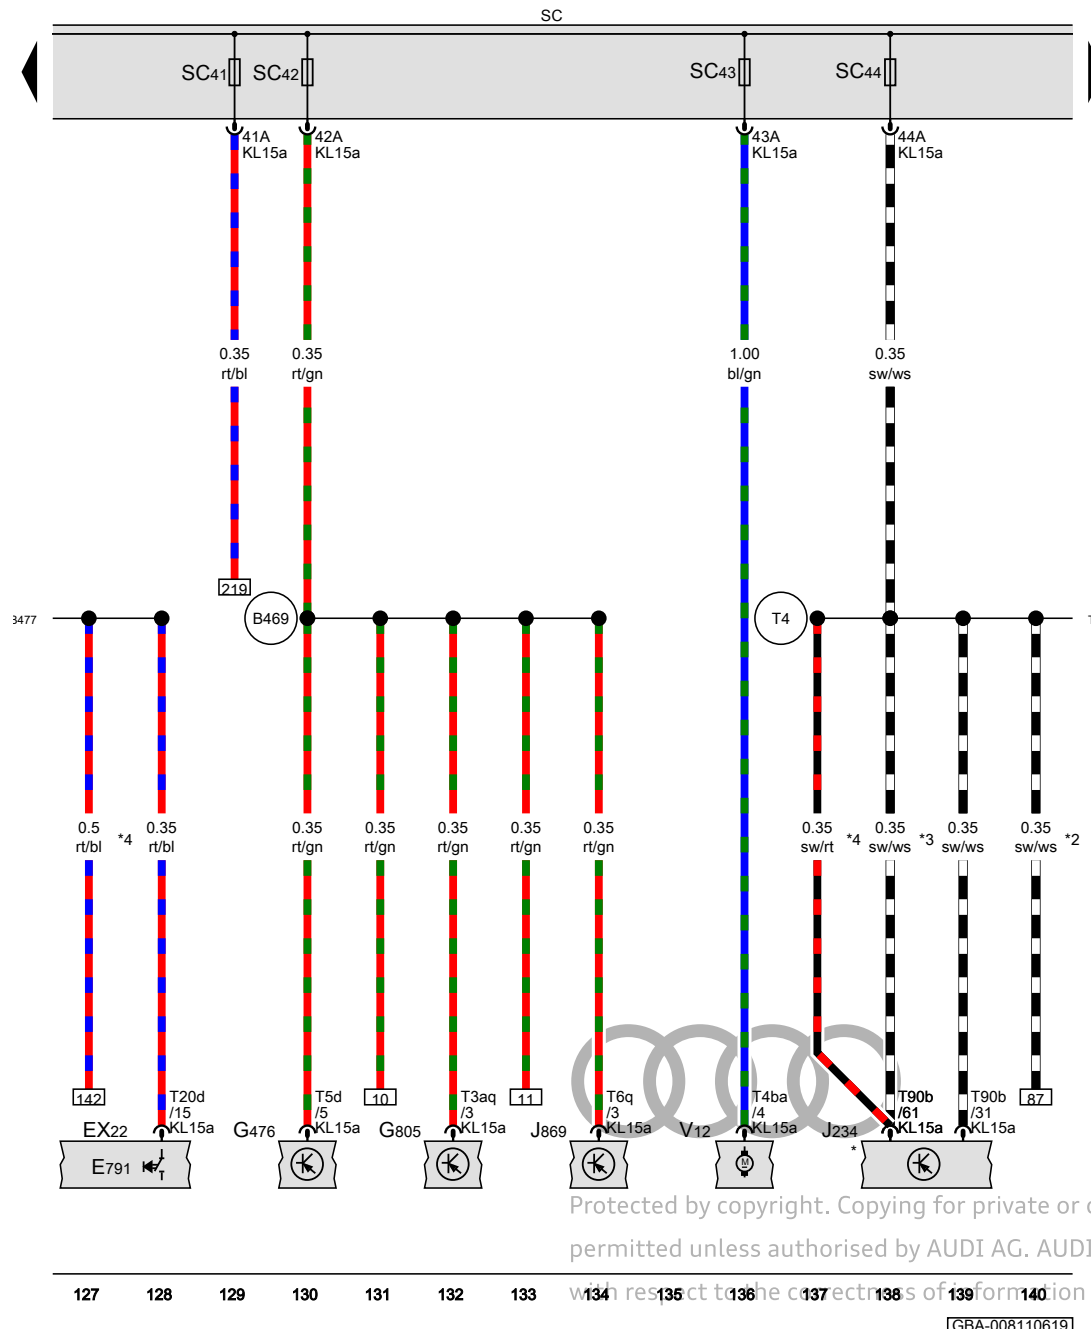

Operating unit 1 for driver and convenience functions, Fuse holder C

- EX22 Centre switch module in dash panel
- E791 Operating unit 1 for driver and convenience functions
- G476 Clutch position sender
- G805 Pressure sender for refrigerant circuit
- J234 Airbag control unit
- J869 Control unit for structure-borne sound
- SC Fuse holder C
- SC41 Fuse 41 on fuse holder C
- SC42 Fuse 42 on fuse holder C
- SC43 Fuse 43 on fuse holder C
- SC44 Fuse 44 on fuse holder C
- T3aq 3-pin connector, black
- T4ba 4-pin connector, black
- T5d 5-pin connector, black
- T6q 6-pin connector, black
- T20d 20-pin connector, black
- T90b 90-pin connector, yellow
- V12 Rear window wiper motor

B469 Connection 5, in main wiring harness

B477 Connection 13, in main wiring harness

T4 Connection (15), in airbag wiring harness

* see applicable current flow diagram for airbag

*2 For models with background lighting


*3 Up to July 2019

*4 From July 2019

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

16BA-00R1106101

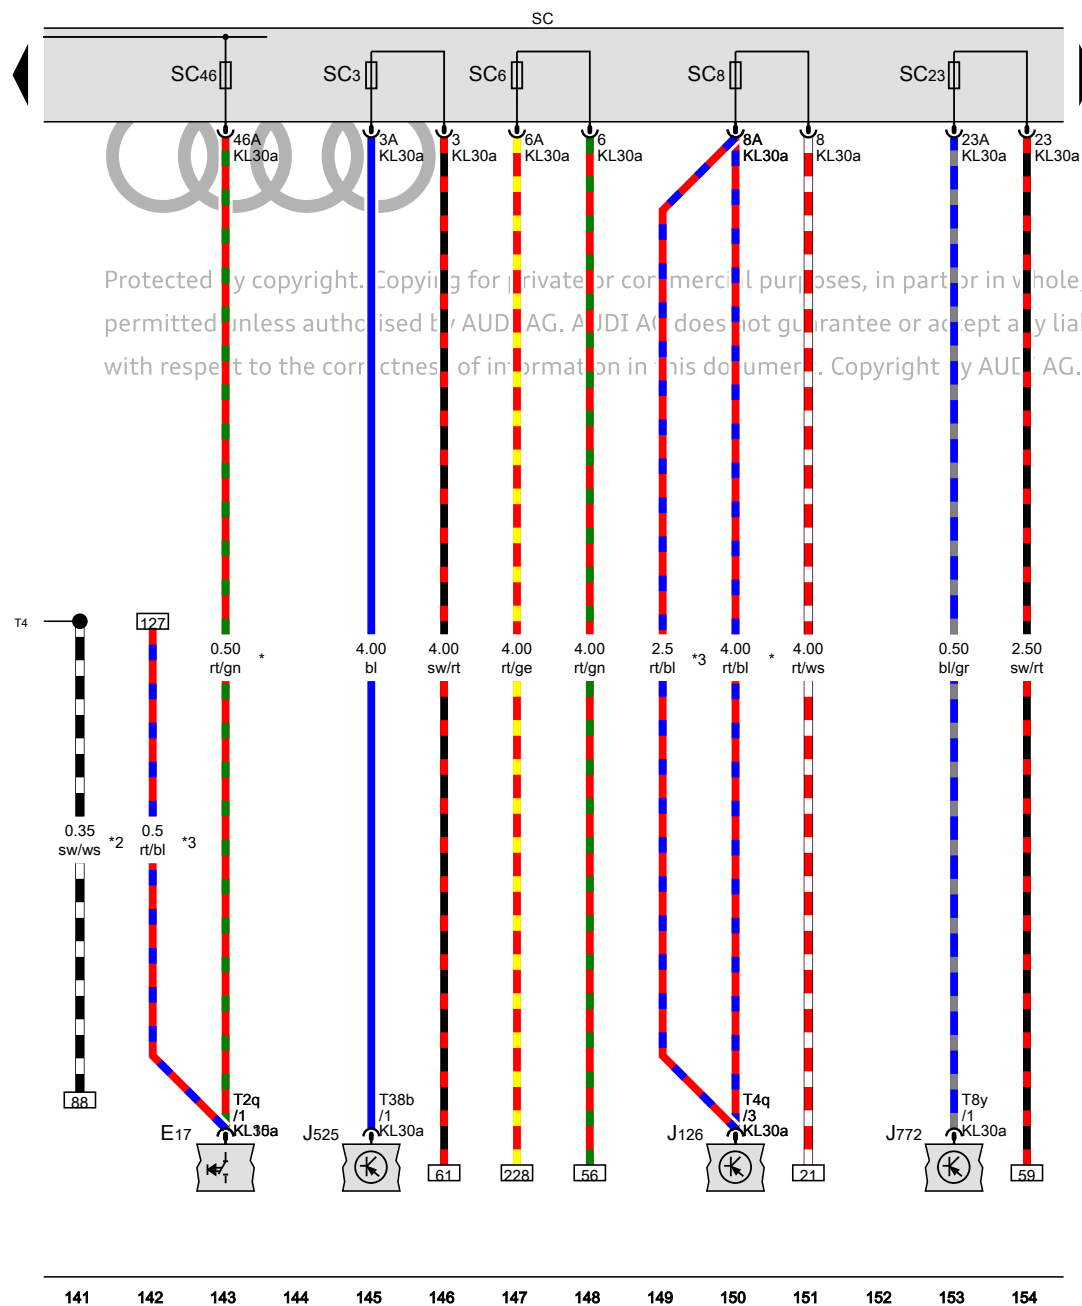

Fuse holder C

- E17 Starter inhibitor and reversing lights switch
- J126 Fresh air blower control unit
- J525 Digital sound package control unit
- J772 Reversing camera system control unit
- SC Fuse holder C
- SC3 Fuse 3 on fuse holder C
- SC6 Fuse 6 on fuse holder C
- SC8 Fuse 8 on fuse holder C
- SC23 Fuse 23 on fuse holder C
- SC46 Fuse 46 on fuse holder C
- T2q 2-pin connector, black
- T4q 4-pin connector, black
- T8y 8-pin connector, black
- T38b 38-pin connector, black

T4 Connection (15), in airbag wiring harness

- * Up to July 2019
- *2 For models with no background lighting
- *3 From July 2019

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Fuse holder C

- E67 Driver side volume regulator
- J676 Chip card reader control unit
- J1146 Charging unit 1 for mobile devices
- R78 TV tuner
- R86 Aerial amplifier for mobile telephone
- R293 USB hub
- SC Fuse holder C
- SC24 Fuse 24 on fuse holder C
- SC25 Fuse 25 on fuse holder C
- T4bg 4-pin connector, black
- T6al 6-pin connector, black
- T6j 6-pin connector, grey
- T6x 6-pin connector, black
- T10n 10-pin connector, black
- T12f 12-pin connector, black
- B150 Positive connection 2 (30a), in interior wiring harness

- * For models with equipment for Japan
- *2 Up to November 2018
- *3 From November 2018
- *4 Up to July 2019
- *5 From July 2019




Protected by copyright. Copying for private or internal use, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

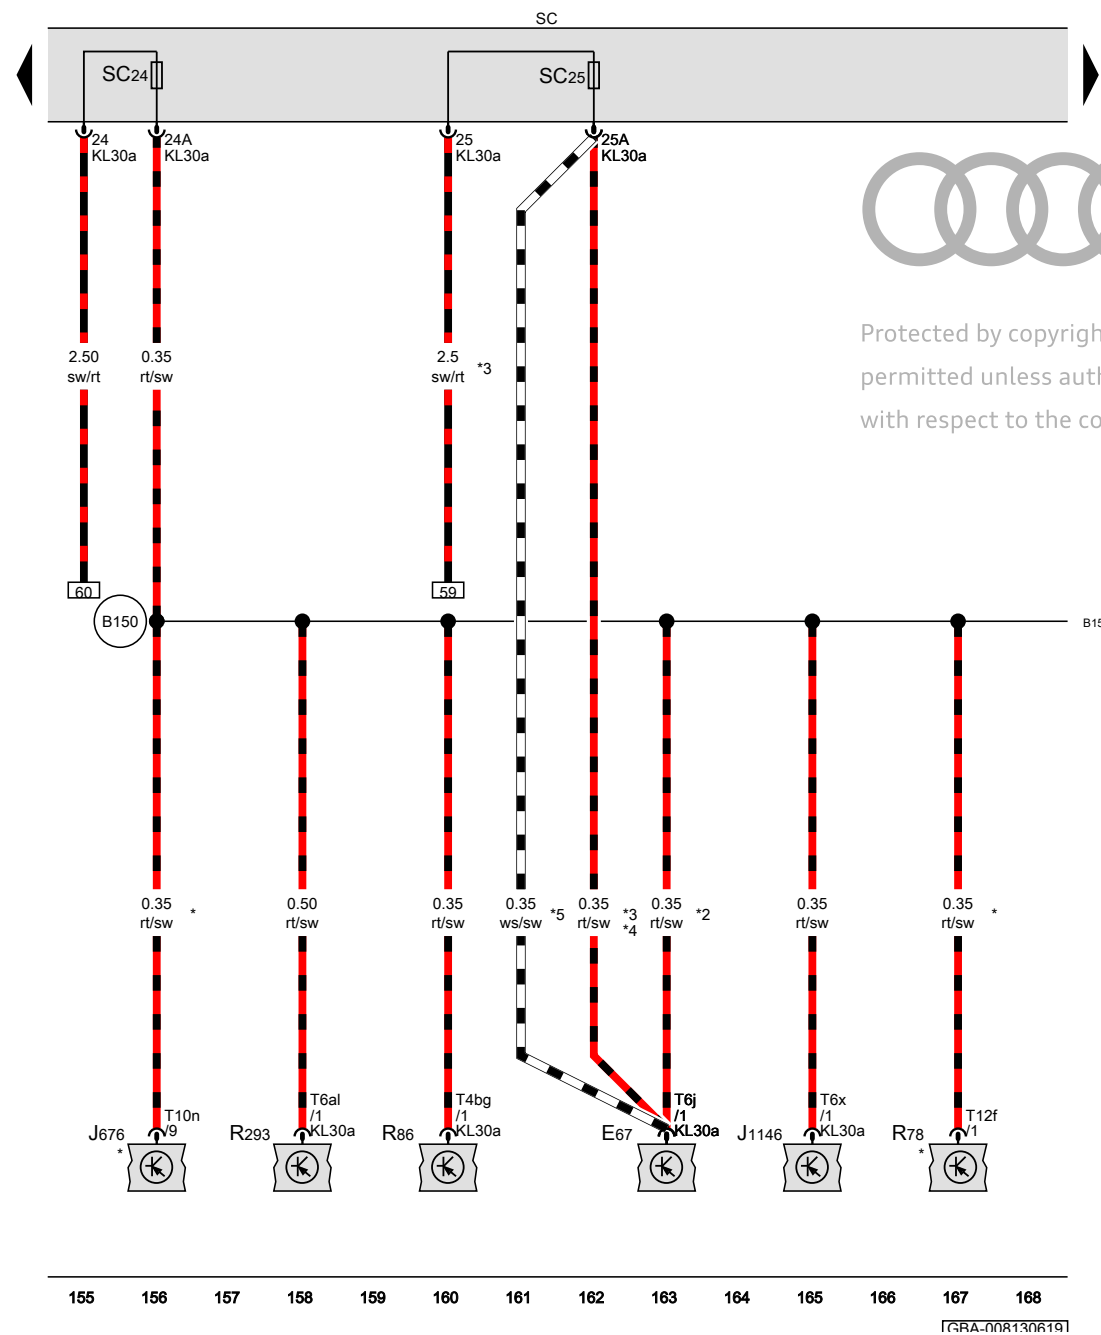

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

[6BA-00R130619]

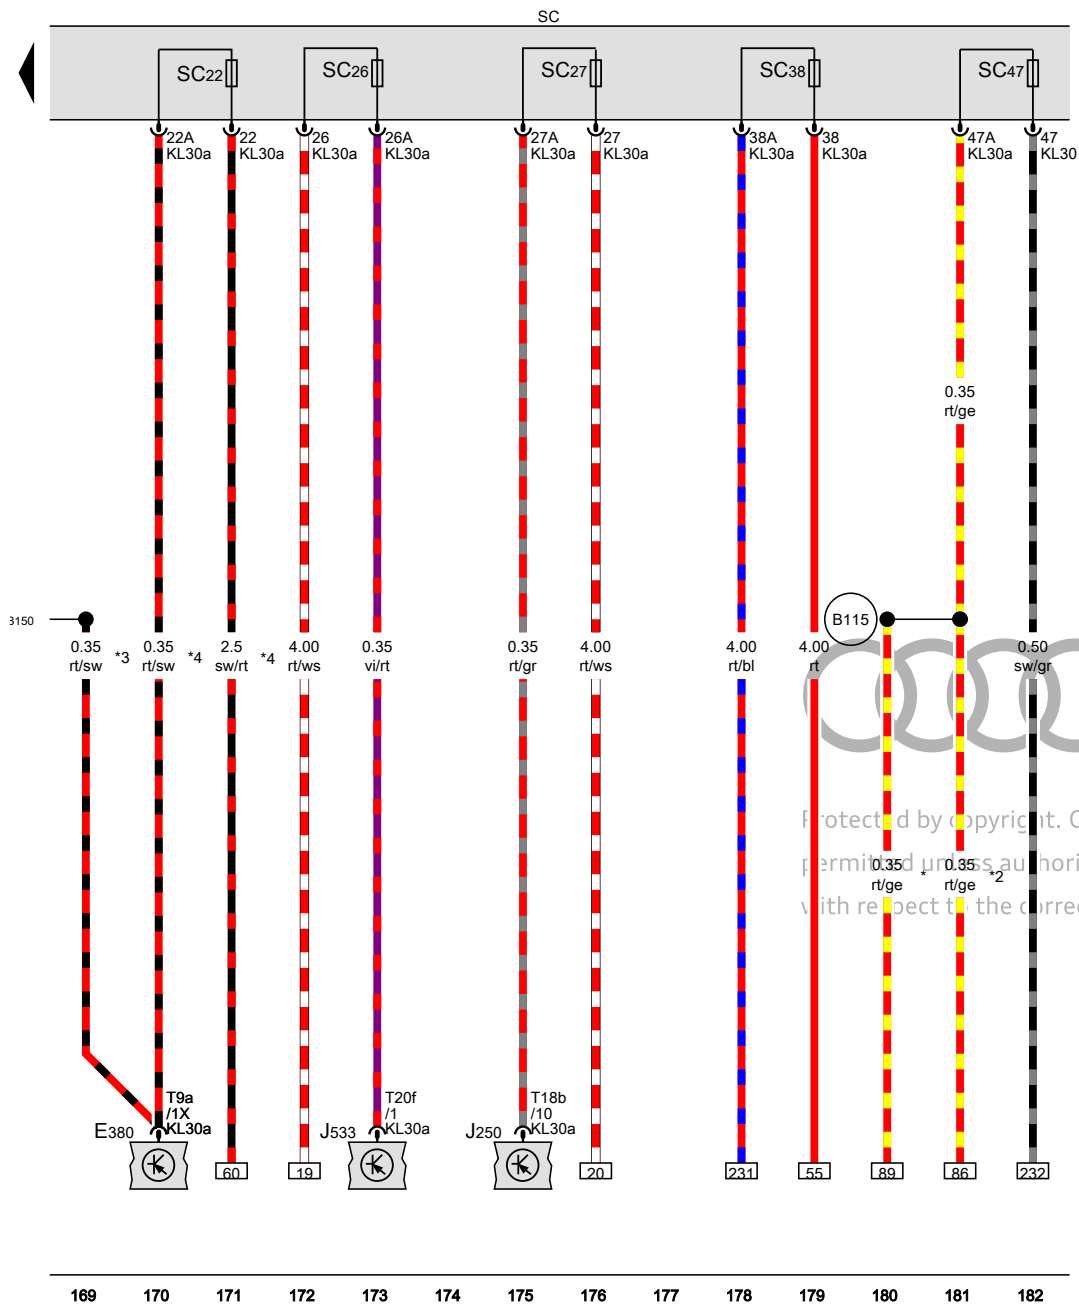

Fuse holder C


- E380 Multimedia system operating unit
- J250 Electronically controlled damping control unit
- J533 Data bus diagnostic interface
- SC Fuse holder C
- SC22 Fuse 22 on fuse holder C
- SC26 Fuse 26 on fuse holder C
- SC27 Fuse 27 on fuse holder C
- SC38 Fuse 38 on fuse holder C
- SC47 Fuse 47 on fuse holder C
- T9a 9-pin connector, blue
- T18b 18-pin connector, black
- T20f 20-pin connector, red

B115 Positive connection, (30, central electrics), in interior wiring harness

B150 Positive connection 2 (30a), in interior wiring harness

- * For models with no background lighting
- *2 For models with background lighting
- *3 Up to November 2018
- *4 From November 2018

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

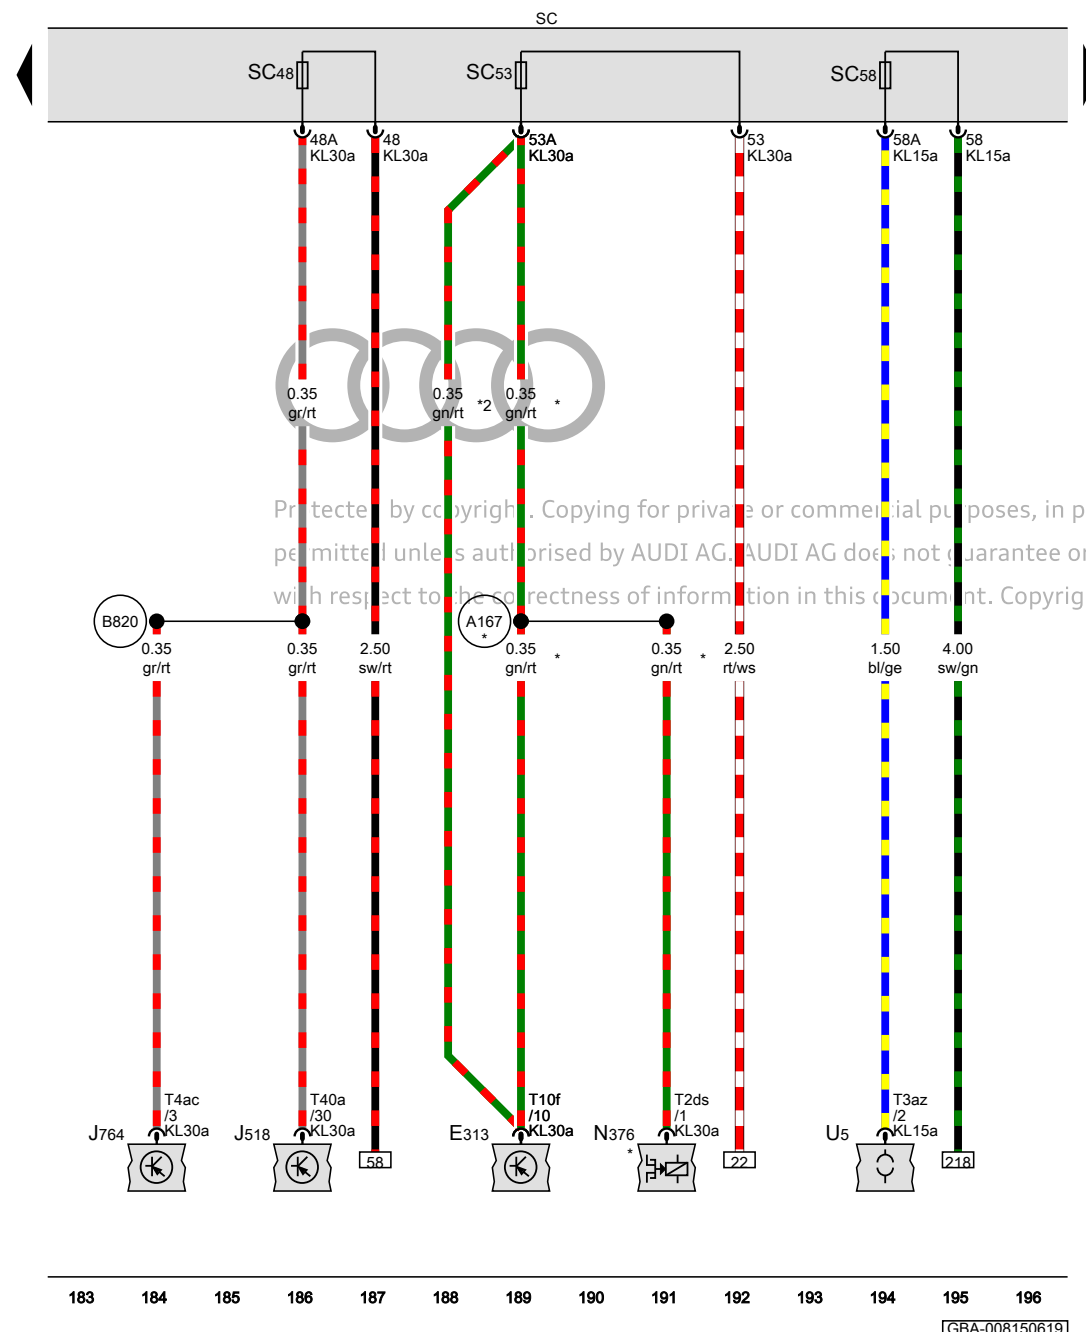

Fuse holder C

- E313 Selector lever
- J518 Entry and start authorisation control unit
- J764 Control unit for electronic steering column lock
- N376 Ignition key withdrawal lock solenoid
- SC Fuse holder C
- SC48 Fuse 48 on fuse holder C
- SC53 Fuse 53 on fuse holder C
- SC58 Fuse 58 on fuse holder C
- T2ds 2-pin connector, black
- T3az 3-pin connector, black
- T4ac 4-pin connector, black
- T10f 10-pin connector, black
- T40a 40-pin connector, black
- U5 12 V socket


A167 Positive connection 3 (30a) in dash panel wiring harness

B820 Connection (electronic steering column lock) in main wiring harness

* For models with no entry and start authorisation

*2 For models with entry and start authorisation


Dual tone horn relay, Vacuum pump relay, Fuse holder C

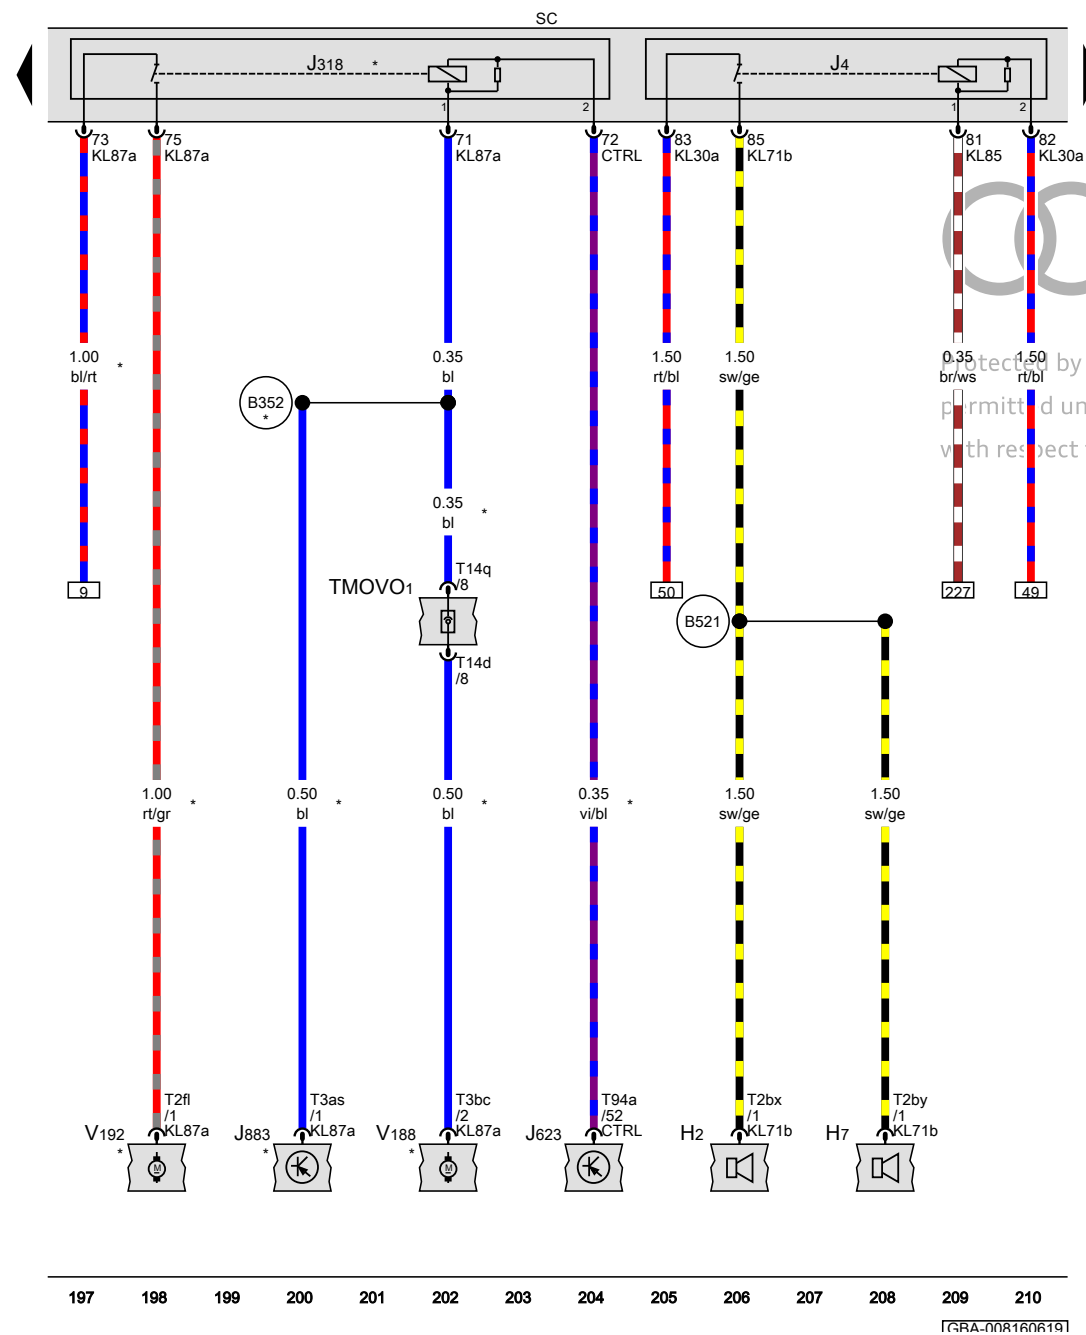

- H2 Treble horn
- H7 Bass horn
- J4 Dual tone horn relay
- J318 Vacuum pump relay
- J623 Engine/motor control unit
- J883 Exhaust flap control unit
- SC Fuse holder C
- T2bx 2-pin connector, black
- T2by 2-pin connector, black
- T2fl 2-pin connector, black
- T3as 3-pin connector, black
- T3bc 3-pin connector, black
- T14d 14-pin connector, grey
- T14q 14-pin connector, grey
- T94a 94-pin connector, black
- TMOVO1 Coupling point 1 for engine prewiring harness
- V188 Charge air cooling pump
- V192 Vacuum pump for brakes

- B352 Positive connection 3 (87a) in main wiring harness
- B521 Connection (dual tone horn), in main wiring harness
- * For models with 1.5l petrol engine

Protected by copyright. Copying for private use, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

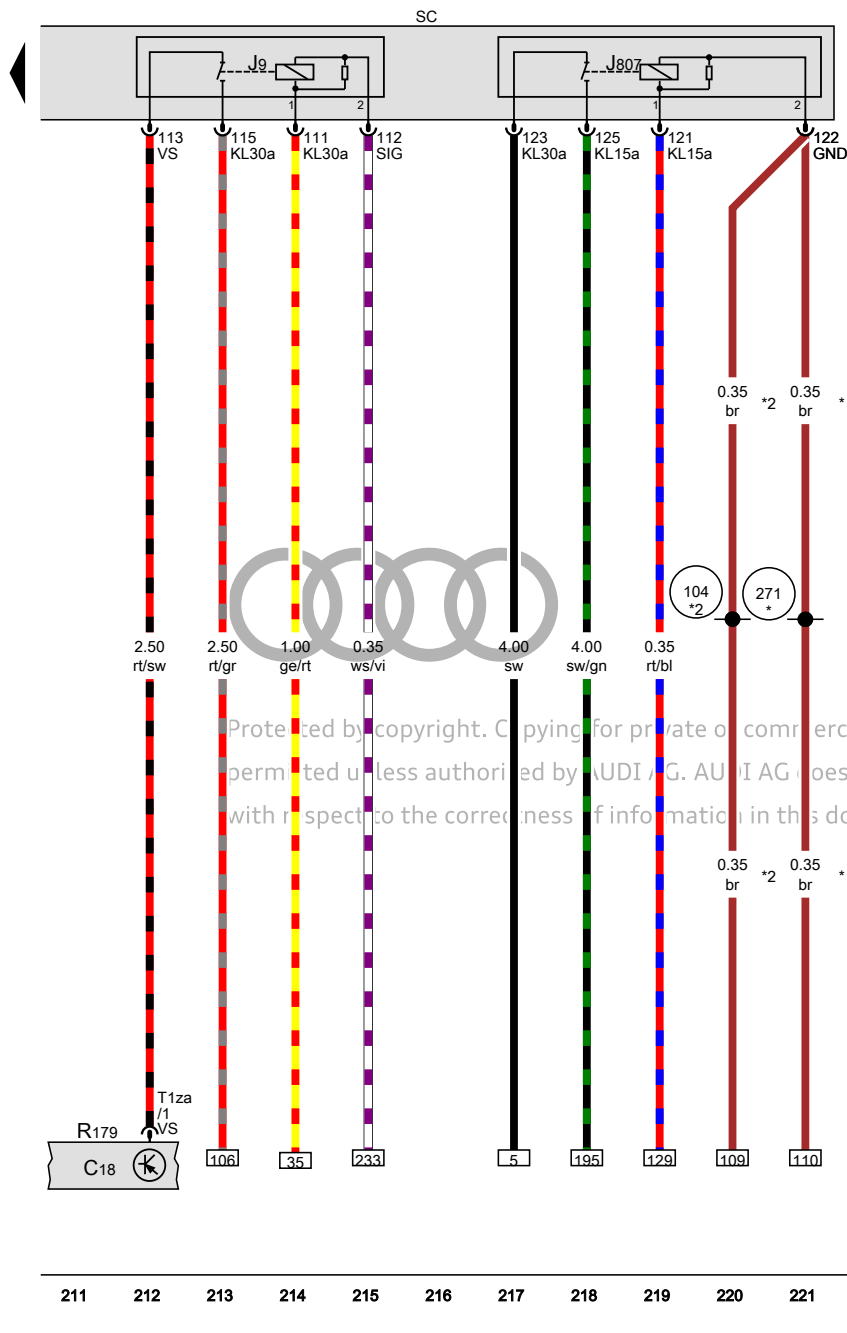

Window aerial suppression filter, Heated rear window relay, Relay for power sockets, Fuse holder C

- C18 Window aerial suppression filter
- J9 Heated rear window relay
- J807 Relay for power sockets
- R179 Frequency modulation (FM) frequency filter in positive wire
- SC Fuse holder C
- T1za 1-pin connector, Terminal

104 Earth connection in front right wiring harness - sensor earth -


271 Earth connection 3, in front wiring harness

* For left-hand drive models

*2 For right-hand drive models

Onboard supply control unit

- J519 Onboard supply control unit
- T46a 46-pin connector, black
- T73a 73-pin connector, black
- T73b 73-pin connector, black

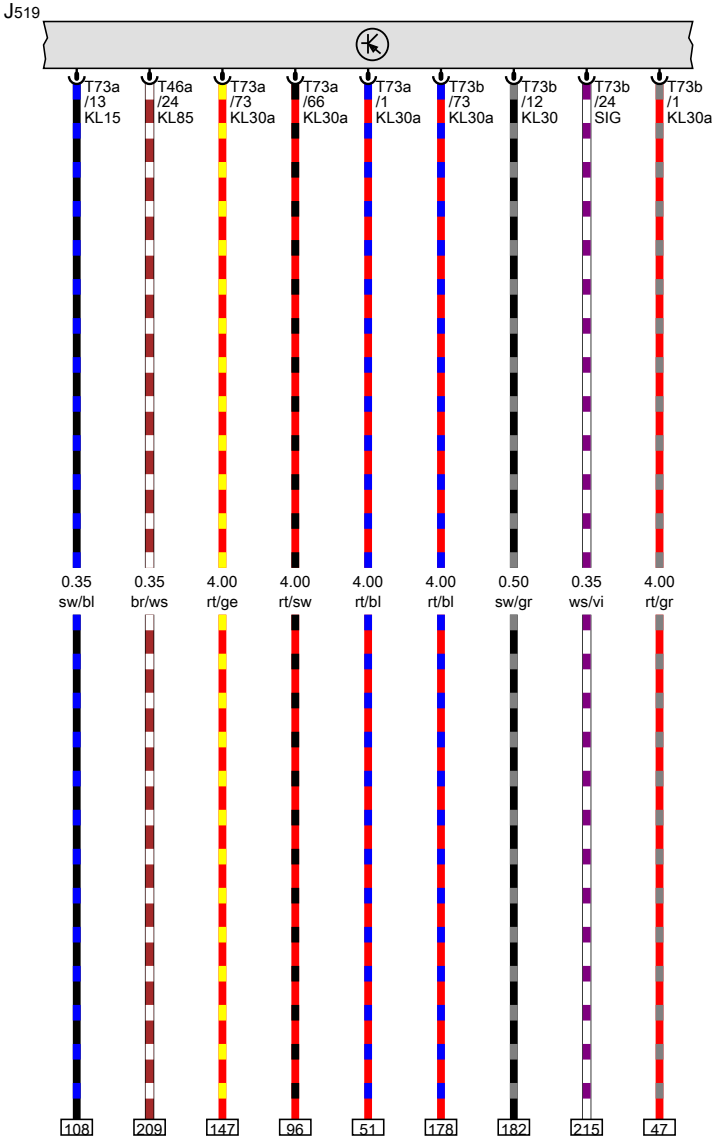

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink