


Entry and start authorisation , (4F2),(4I3)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

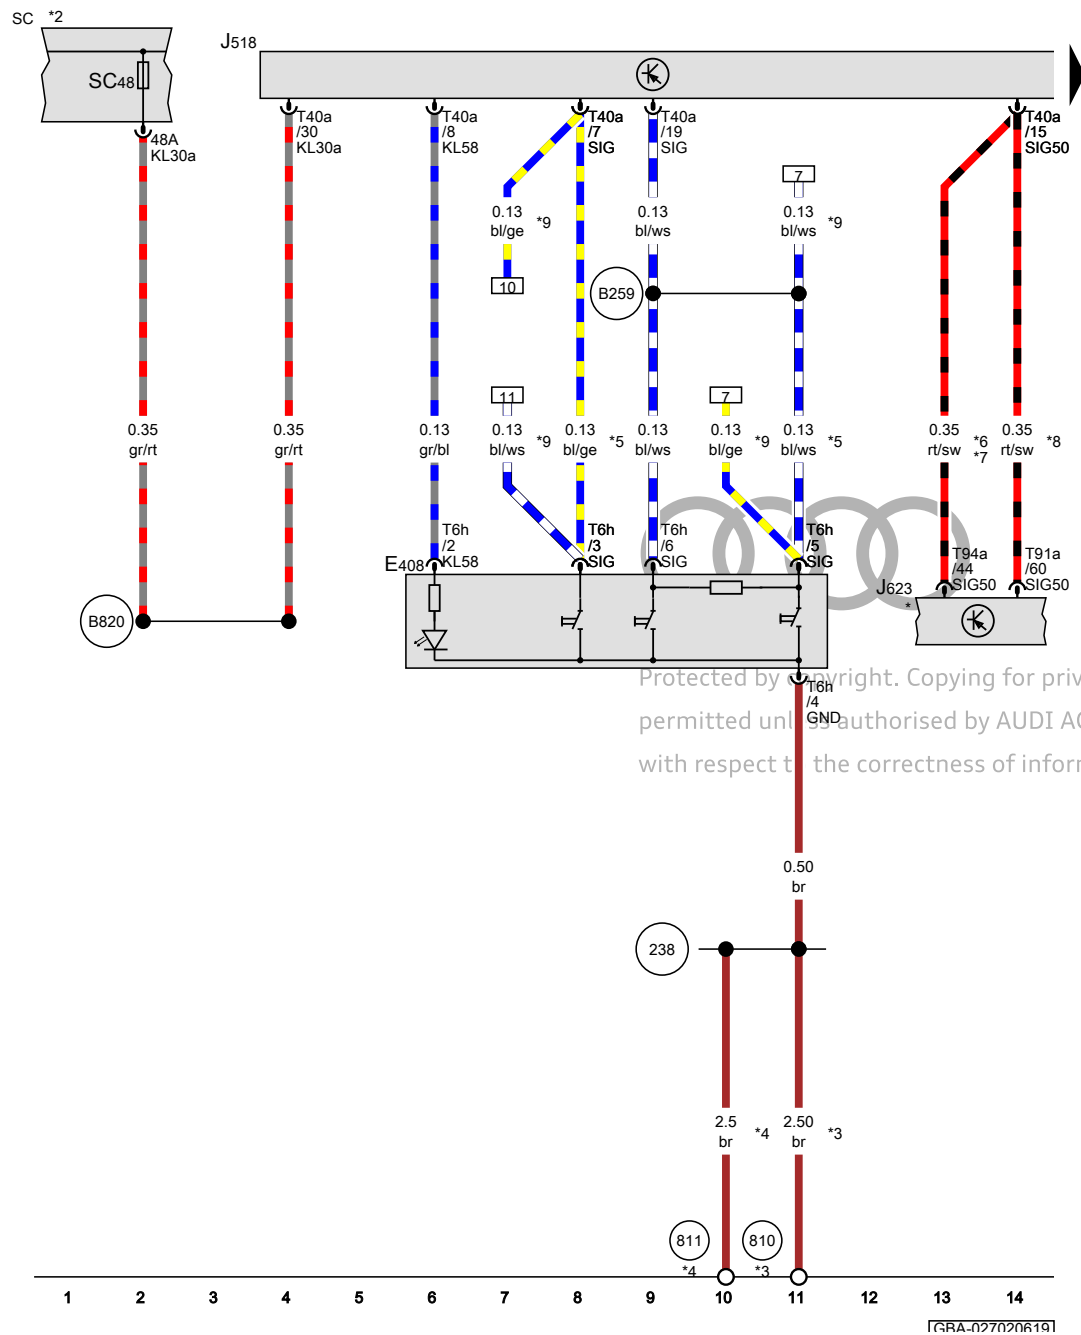


Entry and start authorisation button, Entry and start authorisation control unit, Engine/motor control unit, Fuse holder C

- E408 Entry and start authorisation button
- J518 Entry and start authorisation control unit
- J623 Engine/motor control unit
- SC Fuse holder C
- SC48 Fuse 48 on fuse holder C
- T6h 6-pin connector, black
- T40a 40-pin connector, black
- T91a 91-pin connector, black
- T94a 94-pin connector, black

- 238 Earth connection 1, in interior wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- B259 Connection (start/stop signal), in interior wiring harness
- B820 Connection (electronic steering column lock) in main wiring harness

- * see applicable current flow diagram for engine
- *2 see applicable current flow diagram for fuses in interior
- *3 For left-hand drive models
- *4 For right-hand drive models
- *5 Up to July 2019
- *6 For models with 1.0l petrol engine
- *7 For models with 1.5l petrol engine
- *8 For models with 2.0l petrol engine
- *9 From July 2019


Entry and start authorisation control unit, Coupling point for front left door, Coupling point for front right door

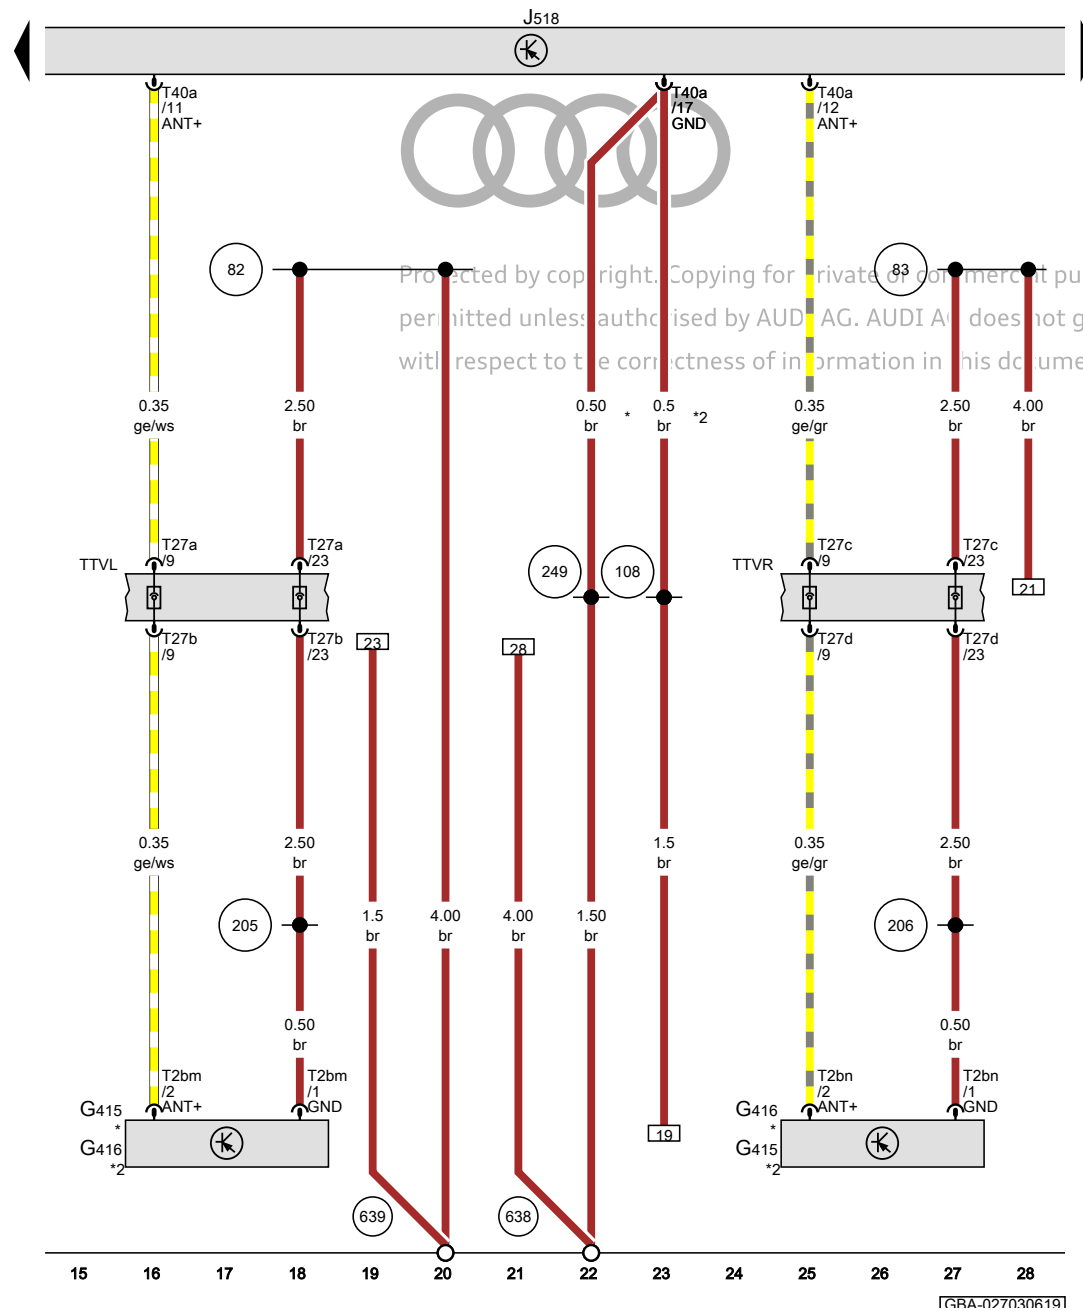

- G415 Driver exterior door handle contact sensor
- G416 Front passenger exterior door handle contact sensor
- J518 Entry and start authorisation control unit
- T2bm 2-pin connector, black
- T2bn 2-pin connector, black
- T27a 27-pin connector, black
- T27b 27-pin connector, black
- T27c 27-pin connector, black
- T27d 27-pin connector, black
- T40a 40-pin connector, black
- TTVL Coupling point for front left door
- TTVR Coupling point for front right door

- 82 Earth connection 1, in front left wiring harness
- 83 Earth connection 1, in front right wiring harness
- 108 Earth connection 2, in front left wiring harness
- 205 Earth connection, in driver door wiring harness
- 206 Earth connection, in front passenger door wiring harness
- 249 Earth connection 2, in interior wiring harness
- 638 Earth point, on right A-pillar
- 639 Earth point, left A-pillar
- * For left-hand drive models
- *2 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

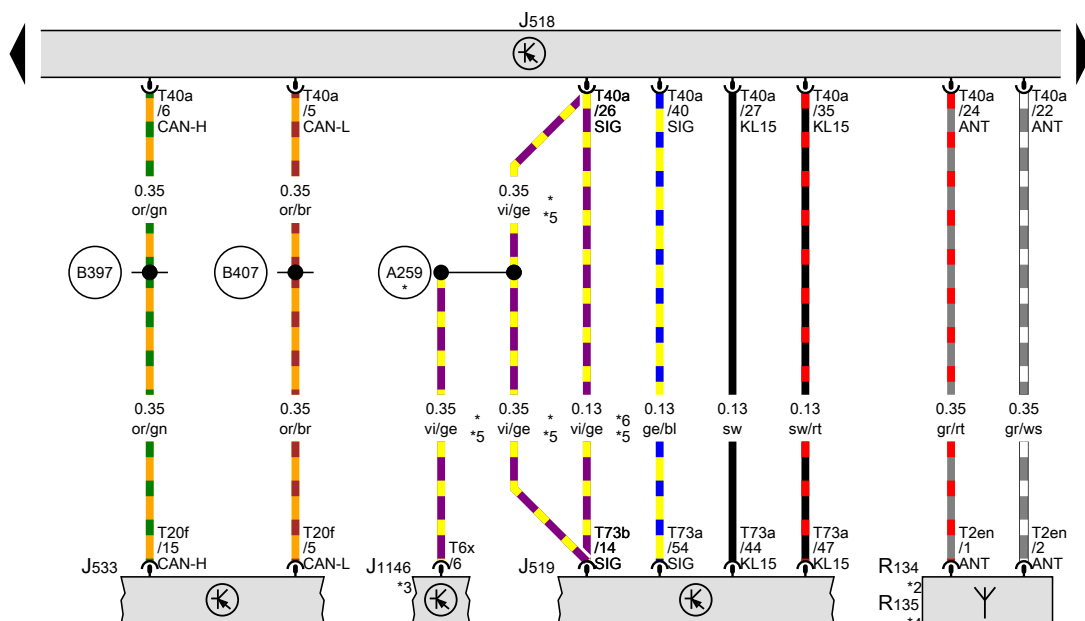


Entry and start authorisation control unit, Onboard supply control unit, Data bus diagnostic interface, Charging unit 1 for mobile devices, Driver side aerial for entry and start system

- J518 Entry and start authorisation control unit
- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- J1146 Charging unit 1 for mobile devices
- R134 Driver side aerial for entry and start system
- R135 Passenger side aerial for entry and start system
- T2en 2-pin connector, colourless
- T6x 6-pin connector, black
- T20f 20-pin connector, red
- T40a 40-pin connector, black
- T73a 73-pin connector, black
- T73b 73-pin connector, black
- A259 Connection 3, in dash panel wiring harness
- B397 Connection 1 (convenience CAN bus, high), in main wiring harness
- B407 Connection 2 (convenience CAN bus, low), in main wiring harness
- * For models with mobile telephone
- *2 For left-hand drive models
- *3 see applicable current flow diagram
- *4 For right-hand drive models
- *5 Wake-up wire
- *6 For models with no telephone/preparation for mobile telephone



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of the information in this document. Copyright by AUDI AG.

ws	=	white
sw	=	black
ro	=	red
rt	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	purple
vi	=	purple
ge	=	yellow
or	=	orange
rs	=	pink

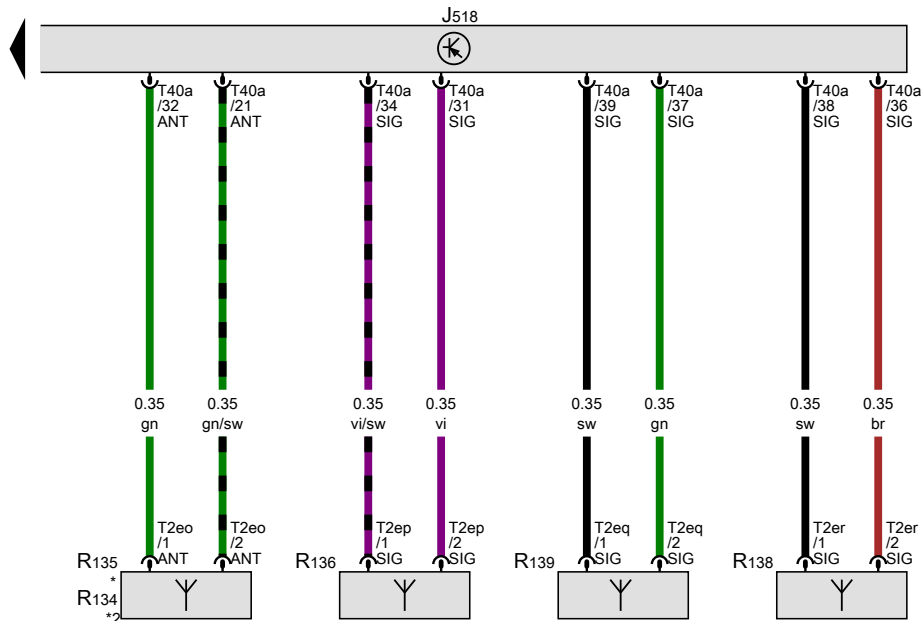

Entry and start authorisation control unit, Passenger side aerial for entry and start system, Rear bumper aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system

- J518 Entry and start authorisation control unit
- R134 Driver side aerial for entry and start system
- R135 Passenger side aerial for entry and start system
- R136 Rear bumper aerial for entry and start system
- R138 Interior aerial 1 for entry and start system
- R139 Interior aerial 2 for entry and start system
- T2eo 2-pin connector, colourless
- T2ep 2-pin connector, colourless
- T2eq 2-pin connector, black
- T2er 2-pin connector, black
- T40a 40-pin connector, black
- * For left-hand drive models
- *2 For right-hand drive models



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink