

2004 ENGINE

Engine Mechanical - 3.6L (LY7) (Repair Instructions, 5 Of 5) - SRX

REPAIR INSTRUCTIONS

THERMOSTAT HOUSING INSTALLATION

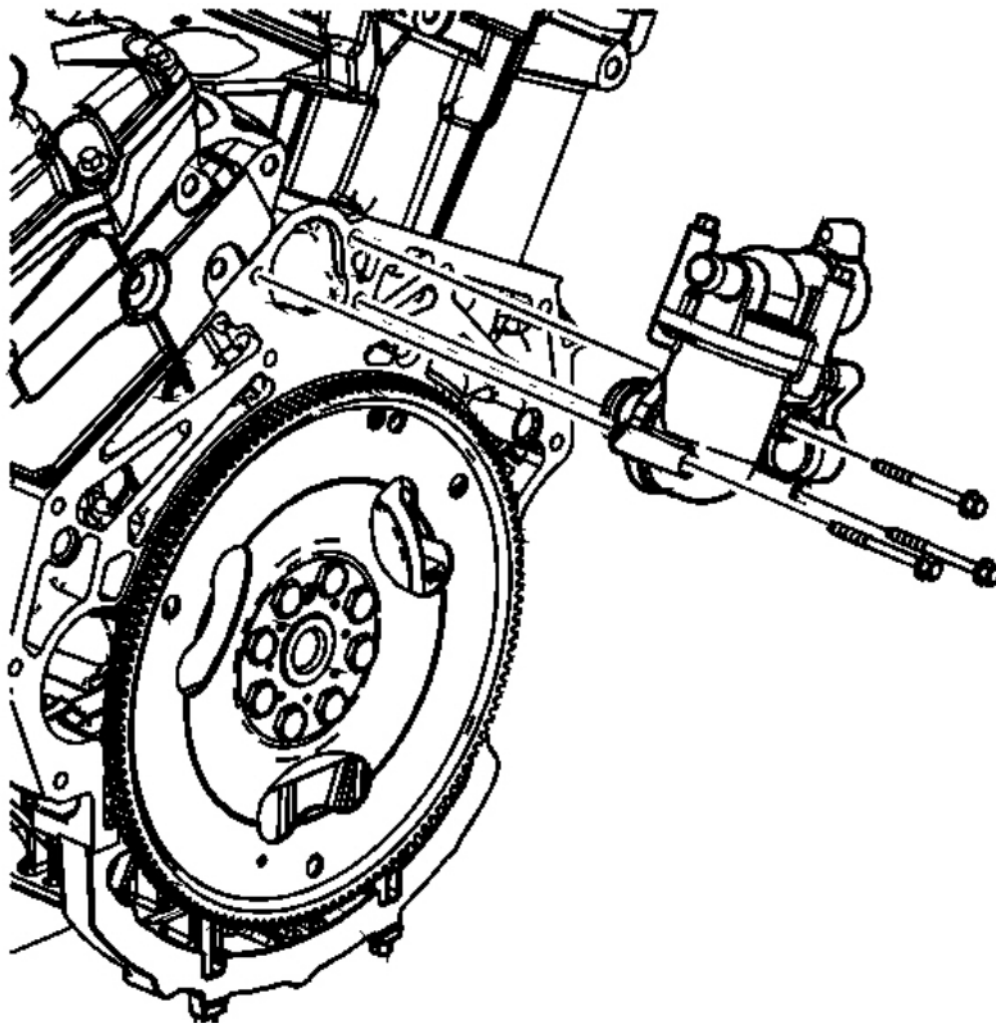


Fig. 1: View Of Thermostat Housing With Heater Pipes, Heater Hoses, Gasket & Bolts

Courtesy of GENERAL MOTORS CORP.

1. Place the thermostat housing and gaskets in position.

NOTE: Refer to Fastener Notice in Cautions and Notices.

2. Install the thermostat housing bolts.

Tighten: Tighten the thermostat housing bolts to 10 N.m (89 lb in).

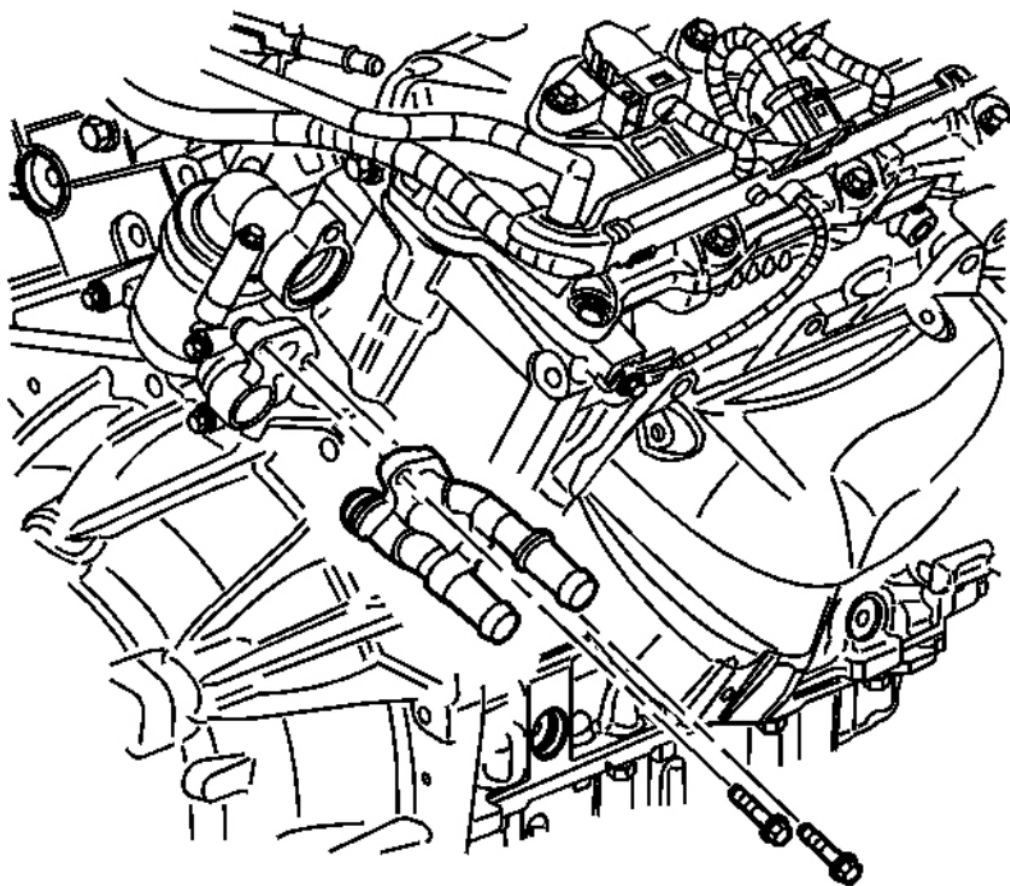


Fig. 2: View Of Heater Inlet/Outlet Pipe Assembly
Courtesy of GENERAL MOTORS CORP.

3. Install the heater inlet/outlet pipe assembly.

4. Install the heater inlet/outlet pipe assembly bolts.

Tighten: Tighten the heater inlet/outlet pipe assembly bolts to 10 N.m (89 lb in).

WATER OUTLET INSTALLATION

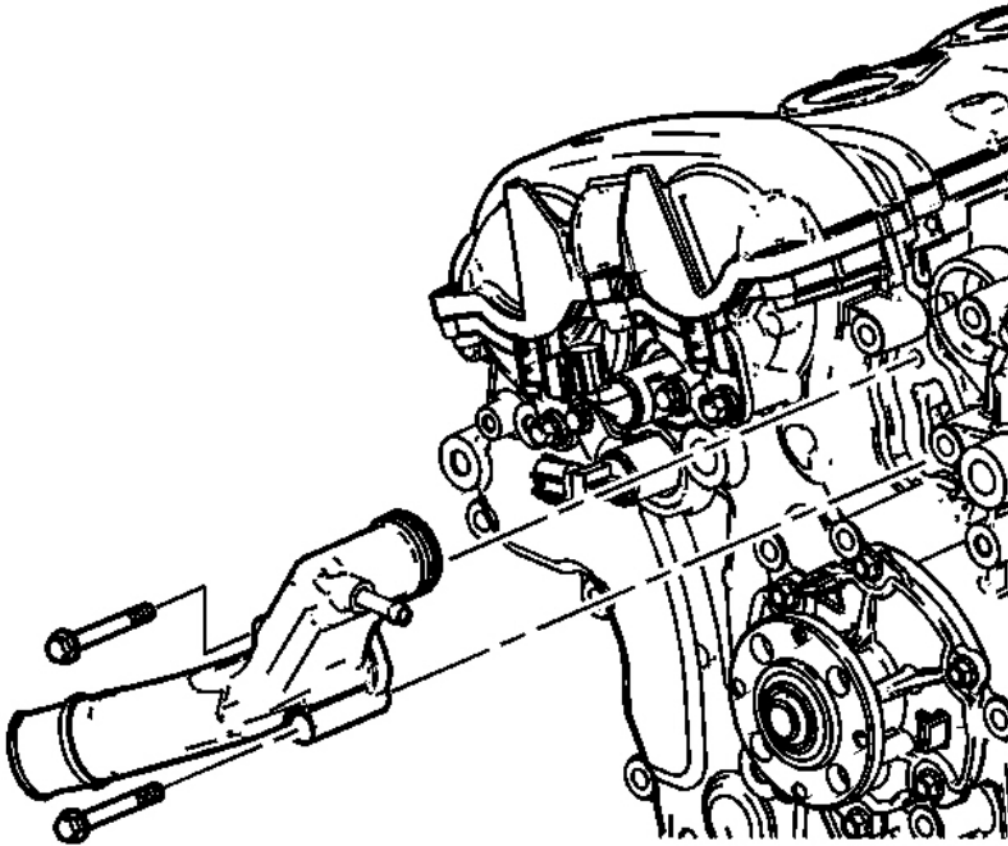


Fig. 3: View Of Water Outlet Housing
Courtesy of GENERAL MOTORS CORP.

1. Place the water outlet and gaskets in position.

NOTE: Refer to Fastener Notice in Cautions and Notices.

2. Install the water outlet bolts.

Tighten: Tighten the water outlet bolts to 10 N.m (89 lb in).

STARTER MOTOR INSTALLATION

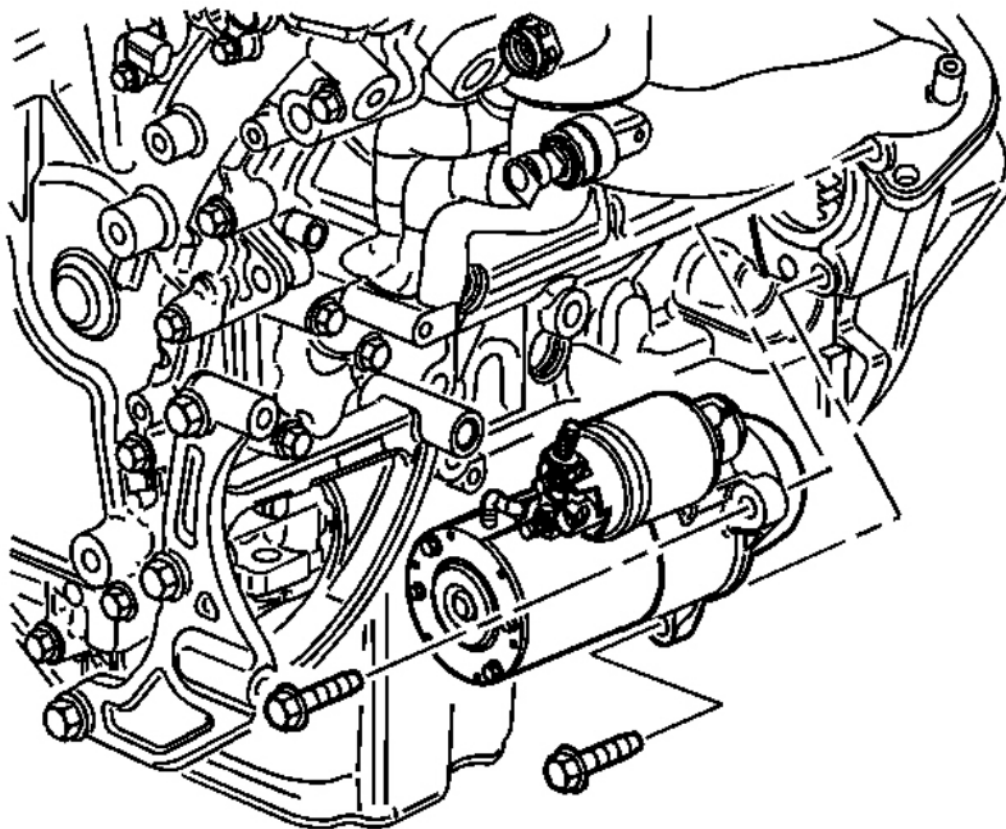


Fig. 4: View Of Starter Motor
Courtesy of GENERAL MOTORS CORP.

1. Install the starter motor.

NOTE: Refer to Fastener Notice in Cautions and Notices.

2. Install the starter motor bolts.

Tighten: Tighten the starter motor bolts to 50 N.m (37 lb ft).

POWER STEERING PUMP INSTALLATION

Tools Required:

J 25033-C Pulley Installer

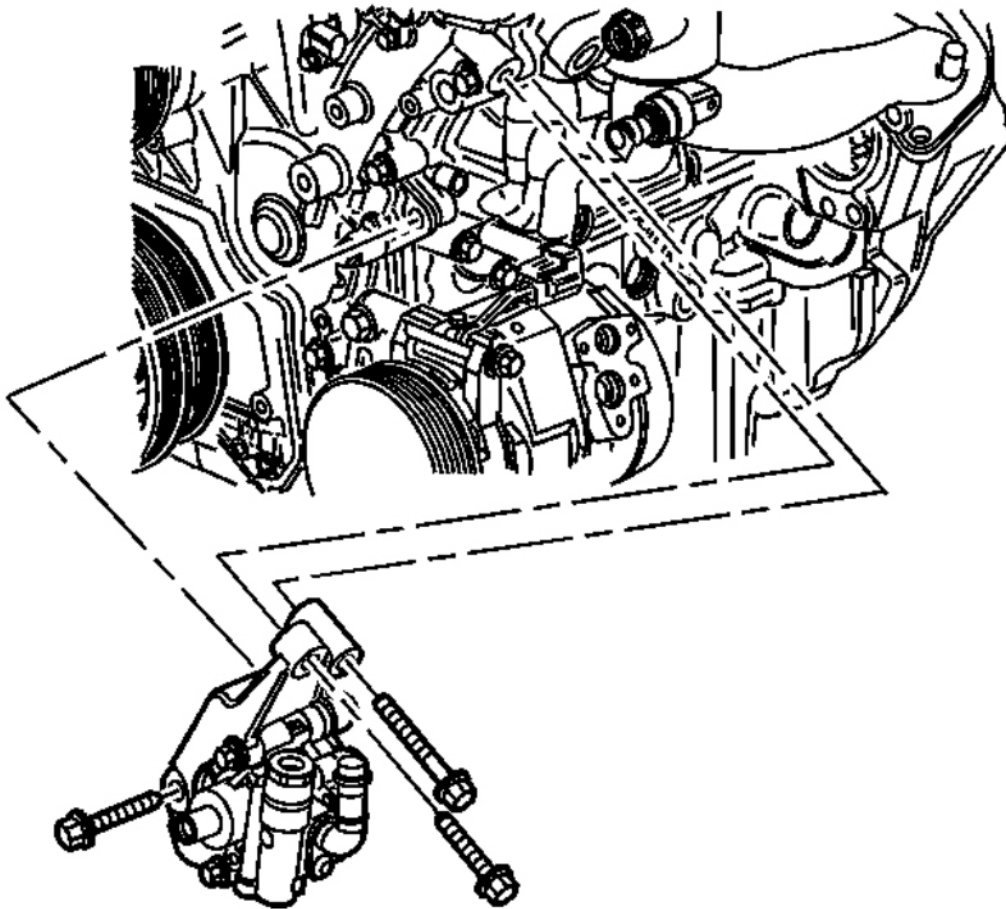


Fig. 5: View Of Power Steering Pump
Courtesy of GENERAL MOTORS CORP.

IMPORTANT: Follow the procedure sequence in order to prevent drive belt mis-alignment and/or possible damage/distortion to the components.

1. Place the power steering pump in position to the cylinder block.
2. Loosely install the power steering side bolts in order to hold the power steering pump in position.
3. Place the power steering front bracket in position.
4. Loosely install the power steering front bracket bolts.
5. Hold the power steering pump firmly against the engine block.

NOTE: Refer to Fastener Notice in Cautions and Notices.

6. Tighten the power steering pump front bracket bolt.

Tighten: Tighten the power steering pump front bracket bolt to 50 N.m (37 lb ft).

7. Install the power steering pump side bolts.

Tighten: Tighten the power steering pump side bolts to 50 N.m (37 lb ft).

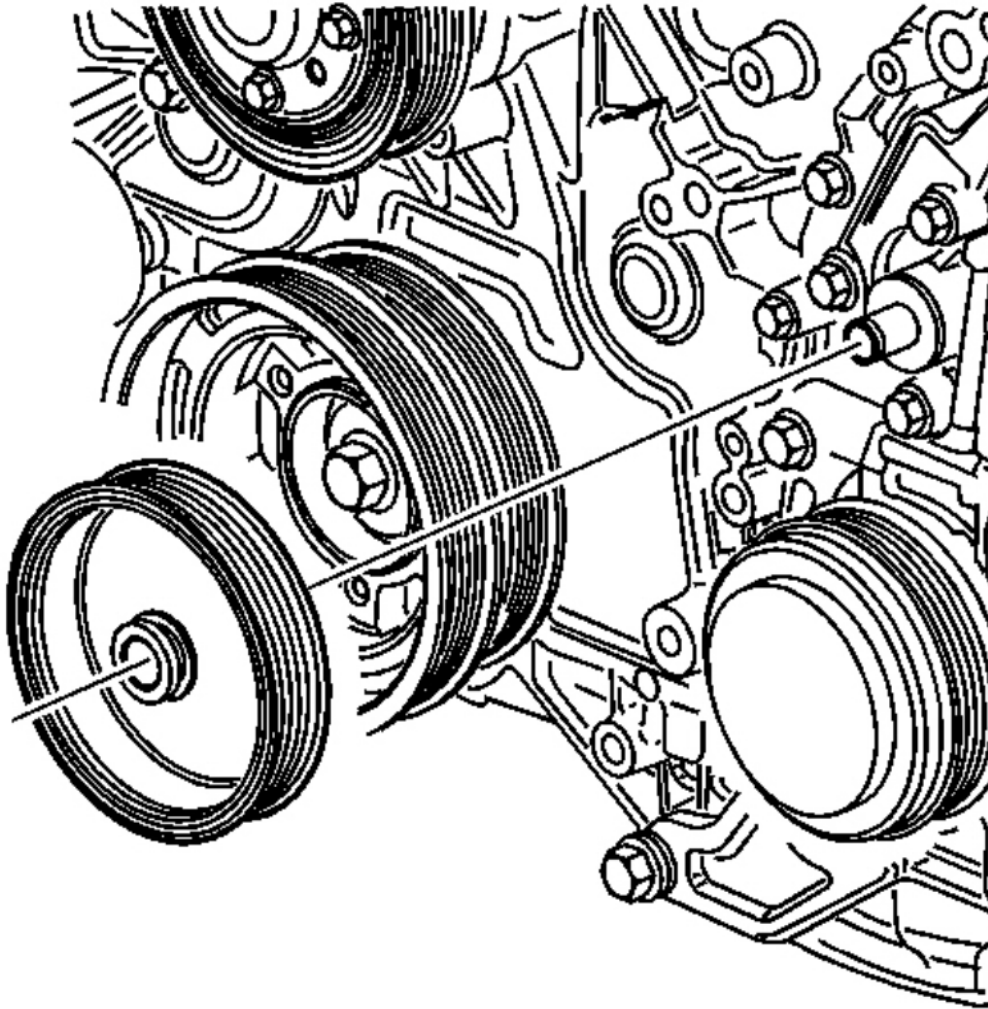


Fig. 6: View Of Power Steering Pulley
Courtesy of GENERAL MOTORS CORP.

8. If removed, place power steering pulley in position to the power steering pump.

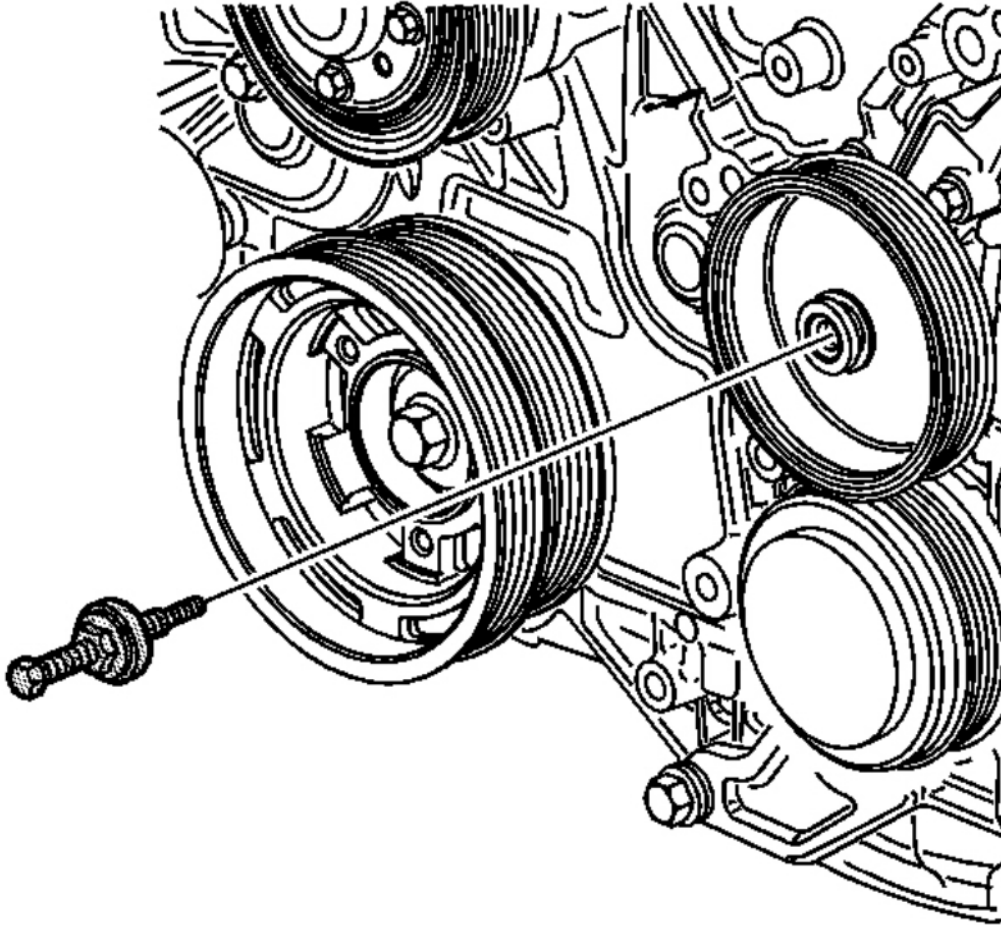


Fig. 7: View Of J 25033-C

Courtesy of GENERAL MOTORS CORP.

9. Install the **J 25033-C** into the threads of the power steering pump shaft. Ensure the **J 25033-C** threads completely into the shaft of the power steering pump before the pressing components of the **J 25033-C** contact the power steering pulley.

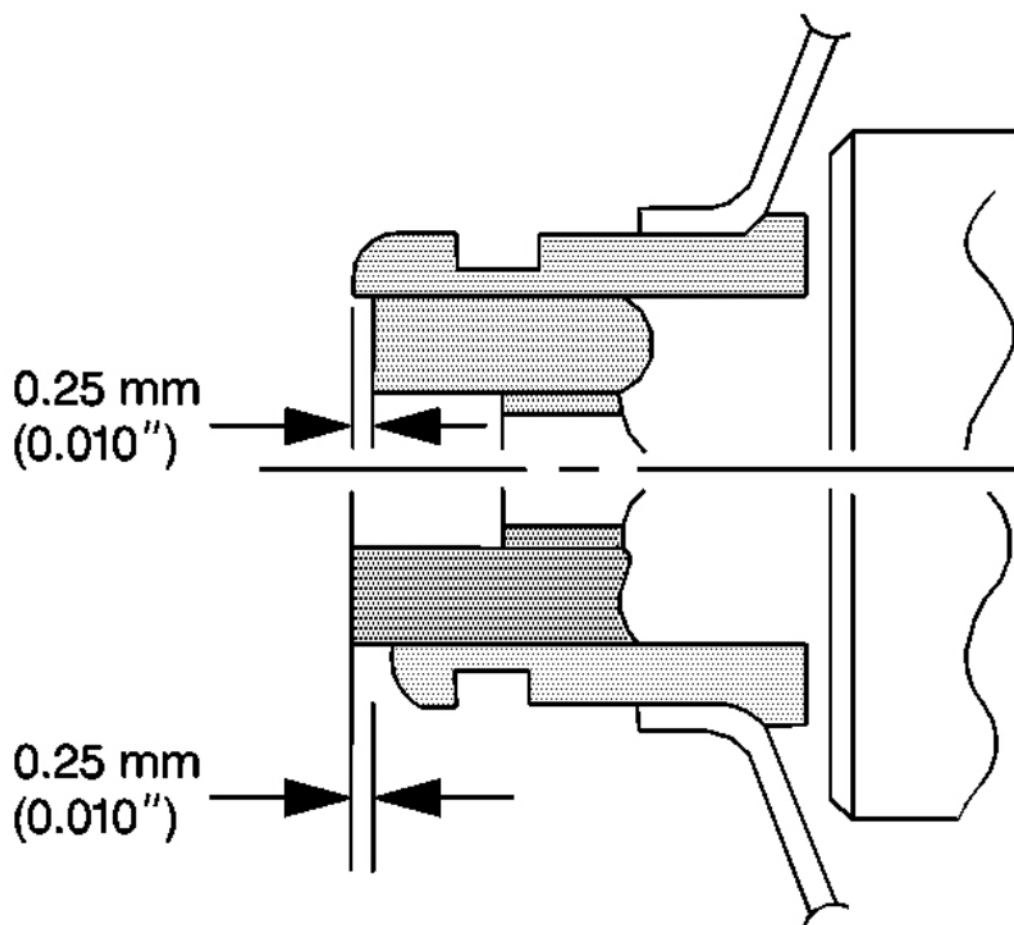


Fig. 8: Measuring Axial Tolerance Of Power Steering Pulley On Pump
Courtesy of GENERAL MOTORS CORP.

10. Tighten the nut on the **J 25033-C** until the hub of the power steering pulley is flush with the end of the power steering pump shaft.
11. Remove the **J 25033-C**.

AIR CONDITIONING (A/C) COMPRESSOR INSTALLATION

IMPORTANT: Follow the procedure sequence in order to prevent drive belt misalignment and/or possible damage/distortion to the components.

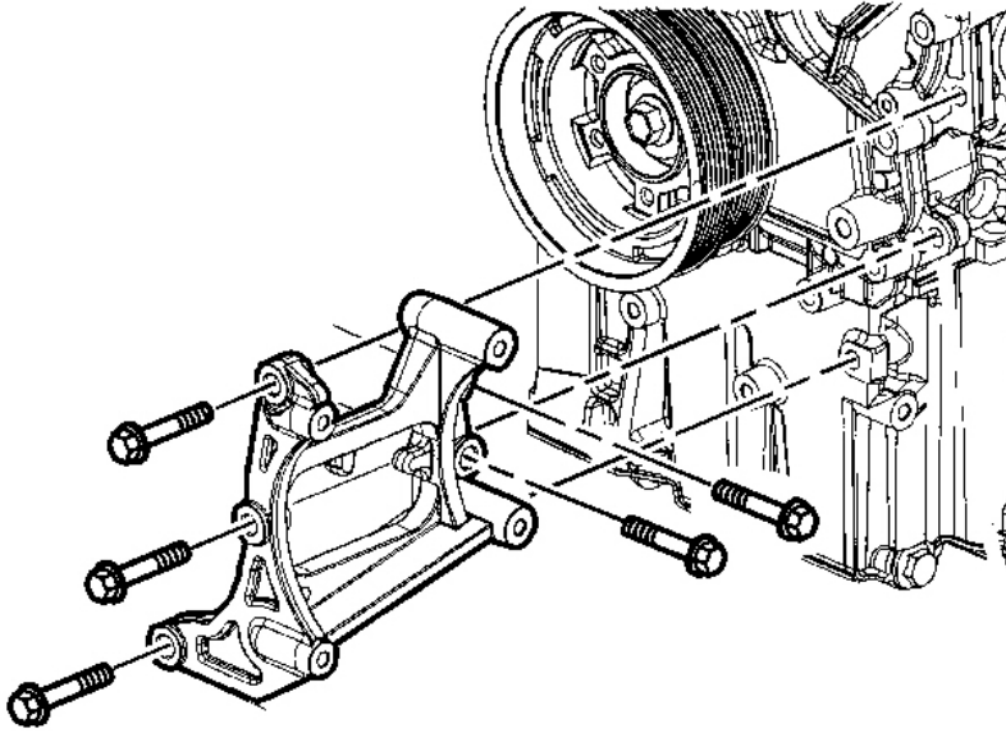


Fig. 9: View Of A/C Compressor Bracket
Courtesy of GENERAL MOTORS CORP.

1. Place the A/C compressor bracket in position to the cylinder block.
2. Loosely install the A/C compressor bracket bolts.

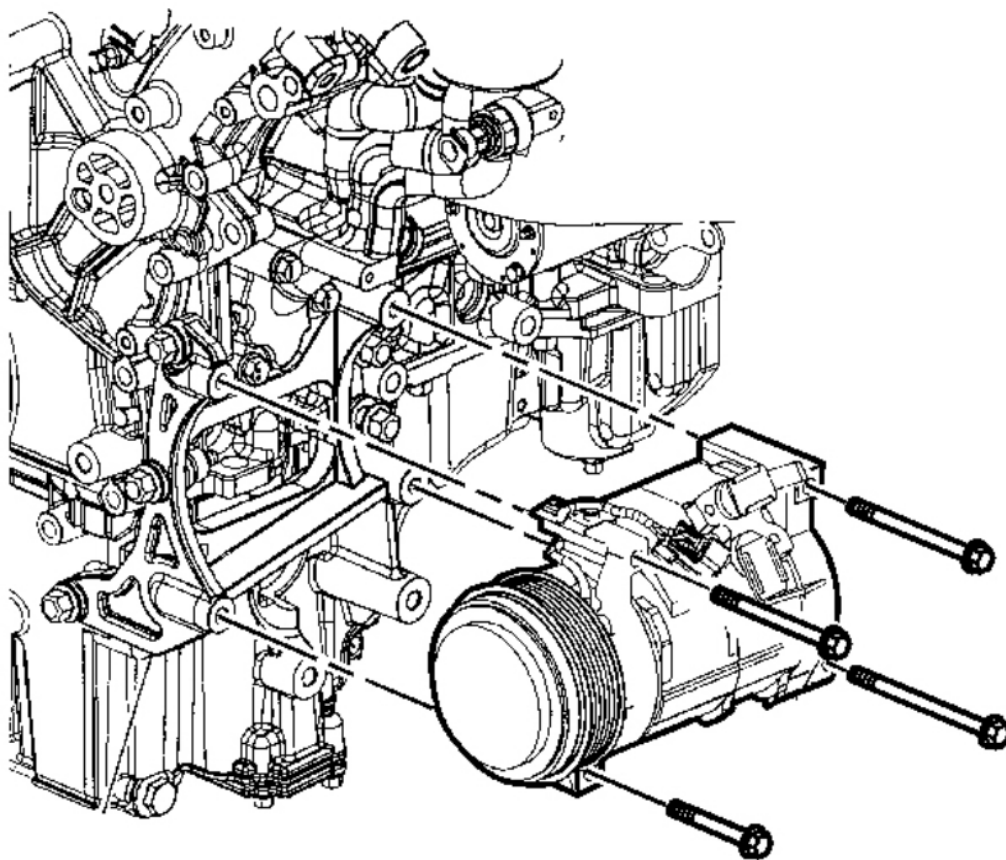


Fig. 10: View Of A/C Compressor
Courtesy of GENERAL MOTORS CORP.

3. Place the A/C compressor in position to the A/C compressor bracket.
4. Loosely install the A/C compressor bolts through the A/C compressor and A/C compressor bracket into the engine block.

NOTE: Refer to Fastener Notice in Cautions and Notices.

5. Tighten the A/C compressor bracket center bolt.

Tighten: Tighten the A/C compressor bracket center bolt to 50 N.m (37 lb ft).

6. Install the A/C compressor bracket upper bolt.

Tighten: Tighten the A/C compressor bracket upper bolt to 50 N.m (37 lb ft).

7. Install the A/C compressor bracket lower bolt.

Tighten: Tighten the A/C compressor bracket lower bolt to 50 N.m (37 lb ft).

8. Install the A/C compressor front upper and lower bolts.

Tighten: Tighten the A/C compressor front upper and lower bolts to 23 N.m (18 lb ft).

9. Install the A/C compressor rear upper and lower bolts.

Tighten: Tighten the A/C compressor rear upper and lower bolts to 23 N.m (18 lb ft).

GENERATOR INSTALLATION

IMPORTANT: Follow the procedure sequence in order to prevent drive belt mis-alignment and/or possible damage/distortion to the components.

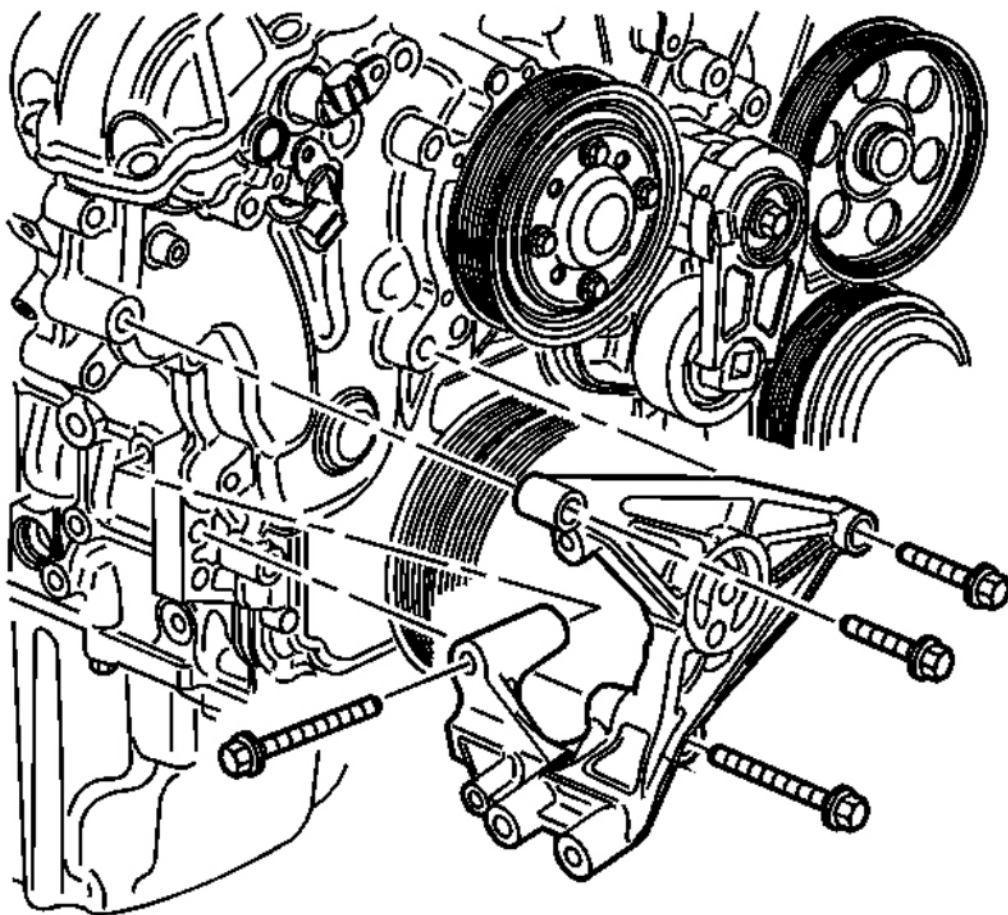


Fig. 11: View Of Generator Bracket
Courtesy of GENERAL MOTORS CORP.

1. Place the generator bracket in position to the cylinder block.
2. Loosely install the generator bracket bolts.

NOTE: Refer to Fastener Notice in Cautions and Notices.

3. Tighten the front lower generator bracket bolt.

Tighten: Tighten the front lower generator bracket bolt to 50 N.m (37 lb ft).

4. Tighten the front upper generator bracket bolts.

Tighten: Tighten the front upper generator bracket bolts to 50 N.m (37 lb ft).

5. Tighten the side generator bracket bolt.

Tighten: Tighten the side generator bracket bolt to 22 N.m (16 lb ft).

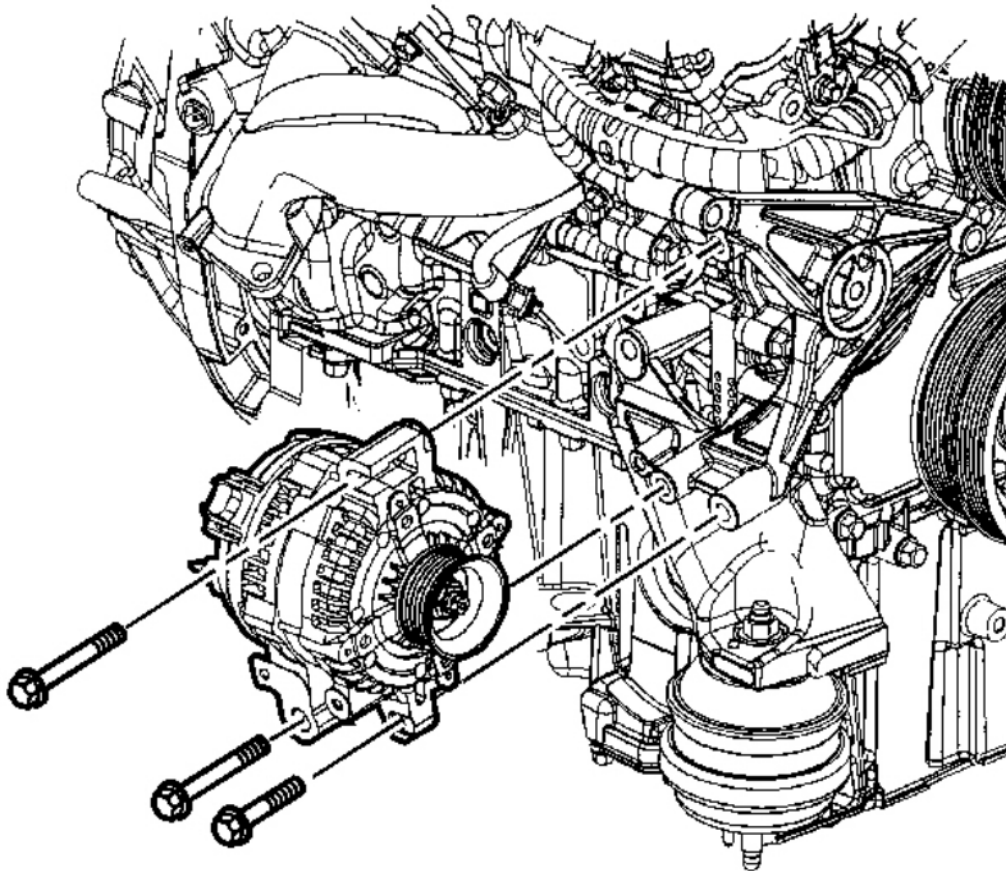


Fig. 12: View Of Generator

Courtesy of GENERAL MOTORS CORP.

6. Place the generator in position to the generator bracket.
7. Loosely install the generator side bolts. Ensure the short bolt is installed in the front lower

position.

8. Hold the generator firmly against the engine block.
9. Tighten the generator side bolts.

Tighten: Tighten the generator side bolts to 50 N.m (37 lb ft).

DRIVE BELT TENSIONER INSTALLATION - LEFT

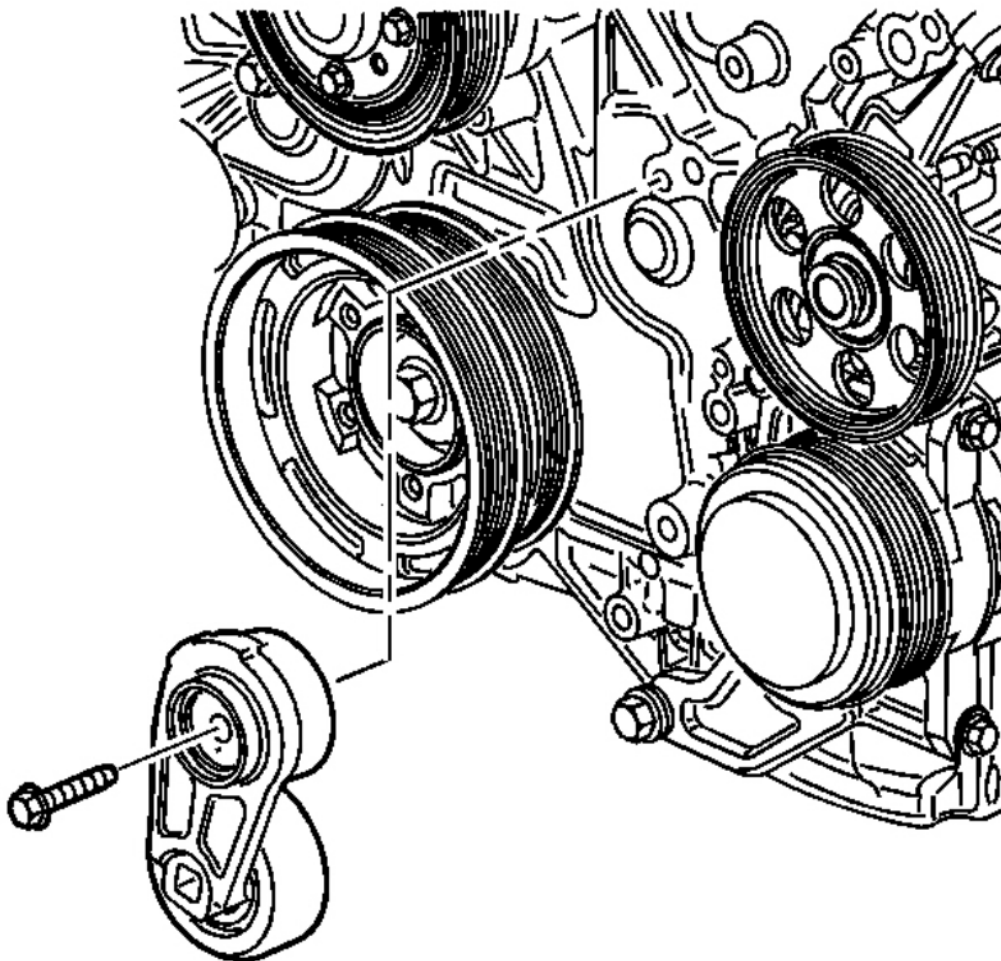


Fig. 13: View Of Left Drive Belt Tensioner
Courtesy of GENERAL MOTORS CORP.

1. Place the left drive belt tensioner in position to the engine front cover.

NOTE: Refer to Fastener Notice in Cautions and Notices.

2. Install the left drive belt tensioner bolt.

Tighten: Tighten the left drive belt tensioner bolt to 50 N.m (37 lb ft).

DRIVE BELT TENSIONER INSTALLATION - RIGHT

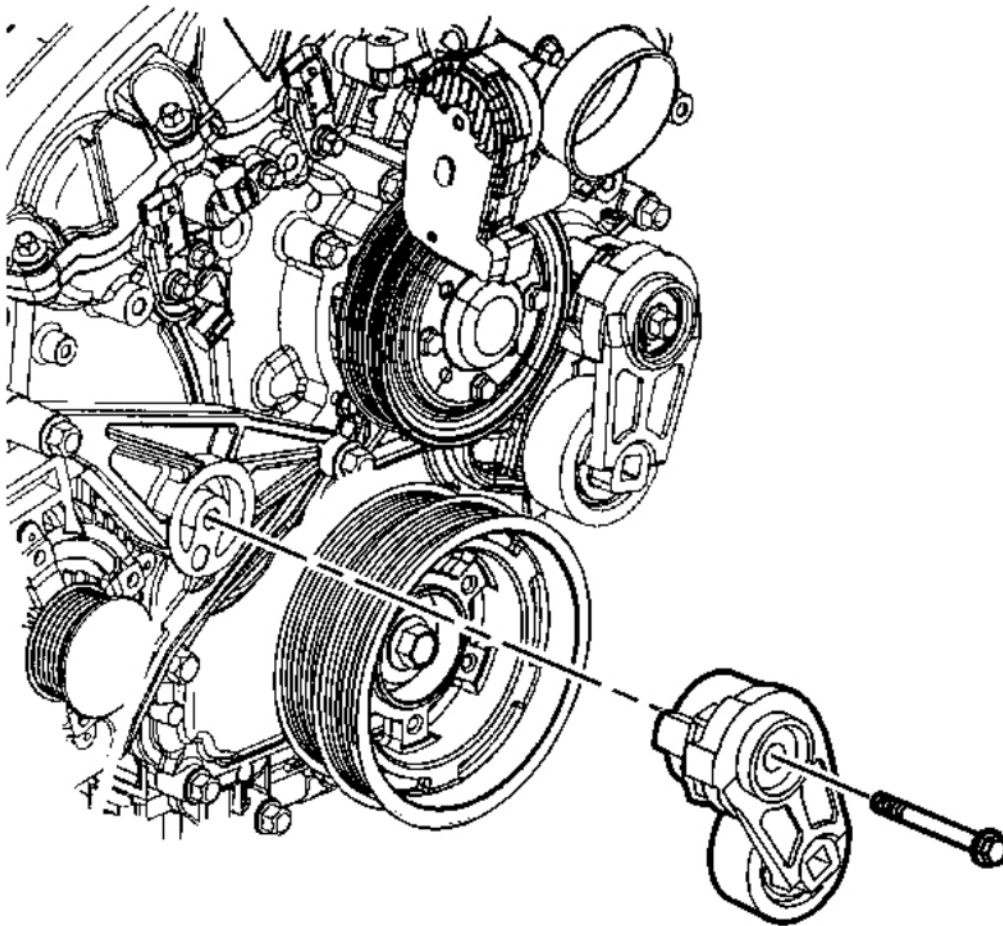


Fig. 14: View Of Right Drive Belt Tensioner
Courtesy of GENERAL MOTORS CORP.

1. Place the right drive belt tensioner in position to the engine front cover.

NOTE: Refer to Fastener Notice in Cautions and Notices.

2. Install the right drive belt tensioner bolt.

Tighten: Tighten the right drive belt tensioner bolt to 23 N.m (17 lb ft).

DRIVE BELT INSTALLATION

Inner Drive Belt

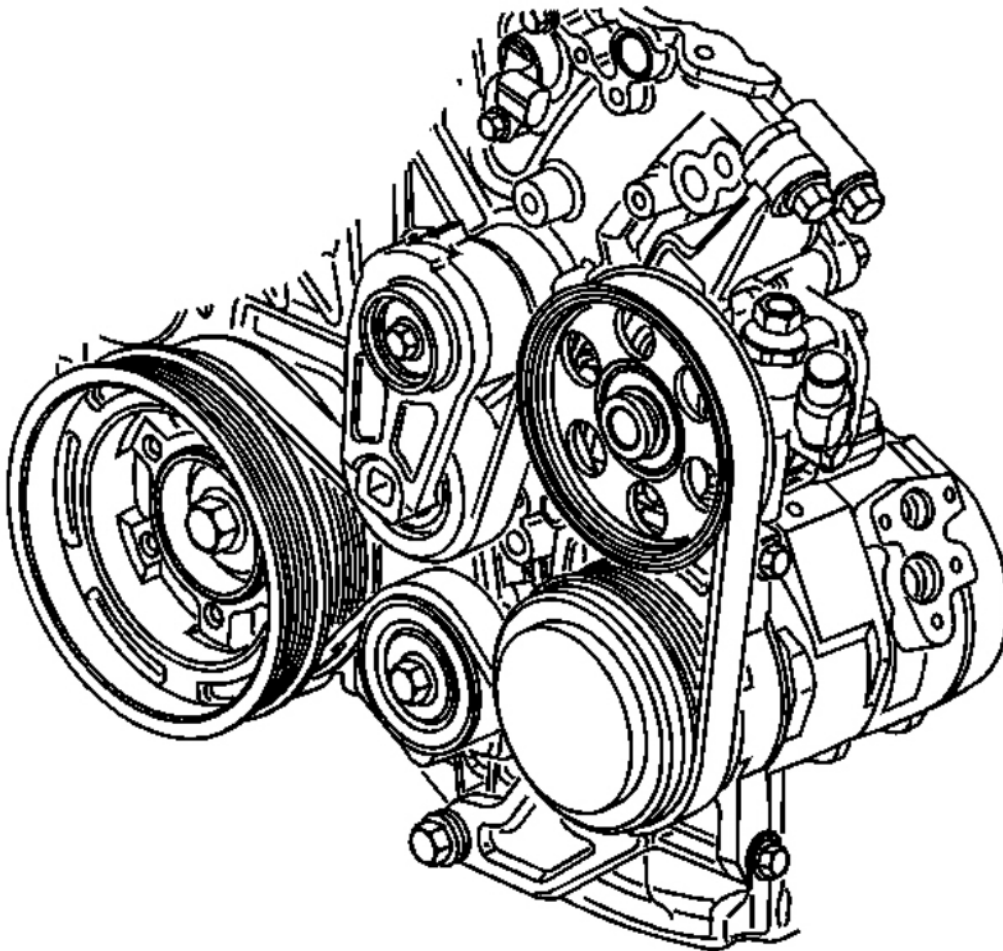


Fig. 15: View Of Inner Drive Belt
Courtesy of GENERAL MOTORS CORP.

1. Route the inner drive belt around the following:
 - Crankshaft balancer
 - Air conditioning compressor
 - Drive belt tensioner
 - Power steering pump

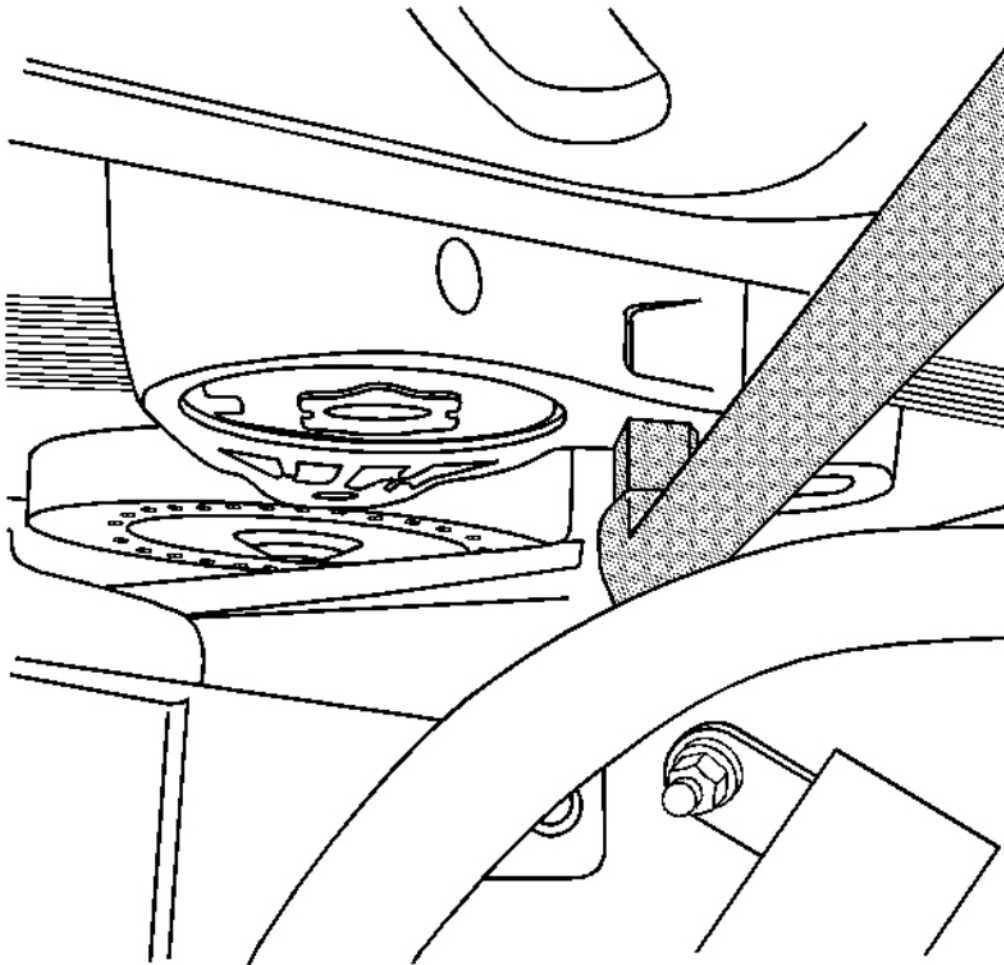


Fig. 16: View Of Drive Belt Tensioner & Pulleys
Courtesy of GENERAL MOTORS CORP.

2. Insert a 1/2 inch drive ratchet into the inner drive belt tensioner.
3. Rotate the drive belt tensioner clockwise.
4. Route the remainder of the drive belt around the drive belt idler.
5. Slowly rotate the drive belt tensioner counter-clockwise until the drive belt is tight.
6. Remove the 1/2 inch drive ratchet.
7. Inspect the drive belt for proper seating in all pulleys.

Outer Drive Belt

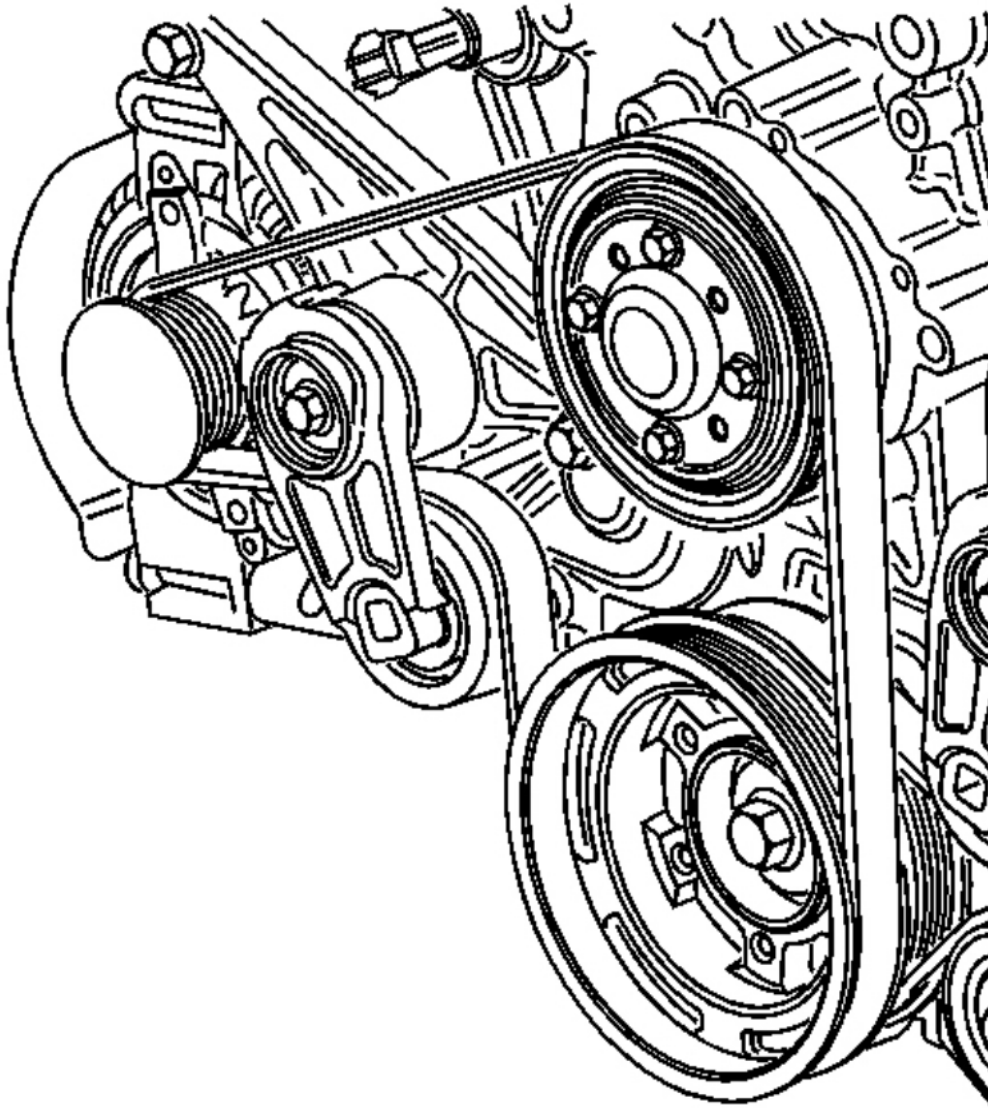


Fig. 17: View Of Outer Drive Belt
Courtesy of GENERAL MOTORS CORP.

1. Route the outer drive belt around the following:
 - Crankshaft balancer
 - Generator

- Water pump pulley

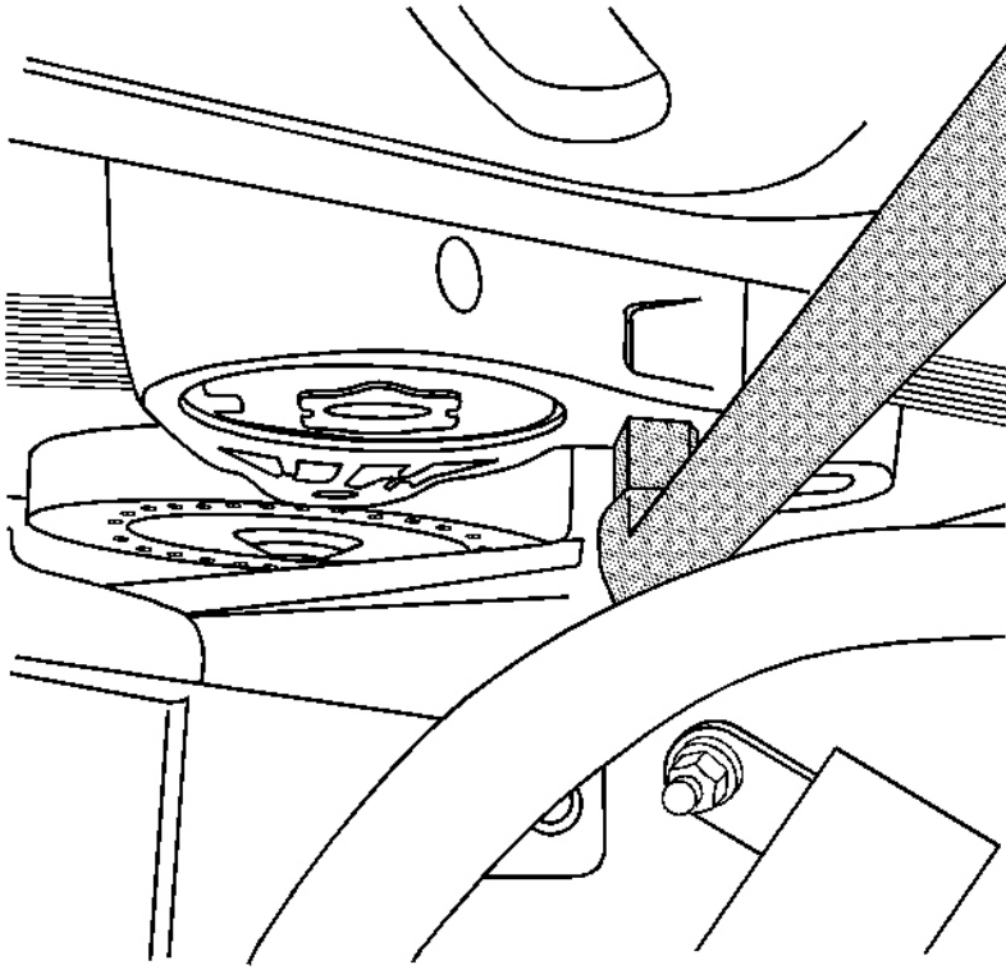


Fig. 18: View Of Drive Belt Tensioner & Pulleys
Courtesy of GENERAL MOTORS CORP.

2. Insert a 1/2 inch drive ratchet into the outer drive belt tensioner.
3. Rotate the drive belt tensioner clockwise.
4. Route the remainder of the drive belt around the drive belt tensioner.
5. Slowly rotate the drive belt tensioner counter-clockwise until the drive belt is tight.
6. Remove the 1/2 inch drive ratchet.

7. Inspect the drive belt for proper seating in all pulleys.

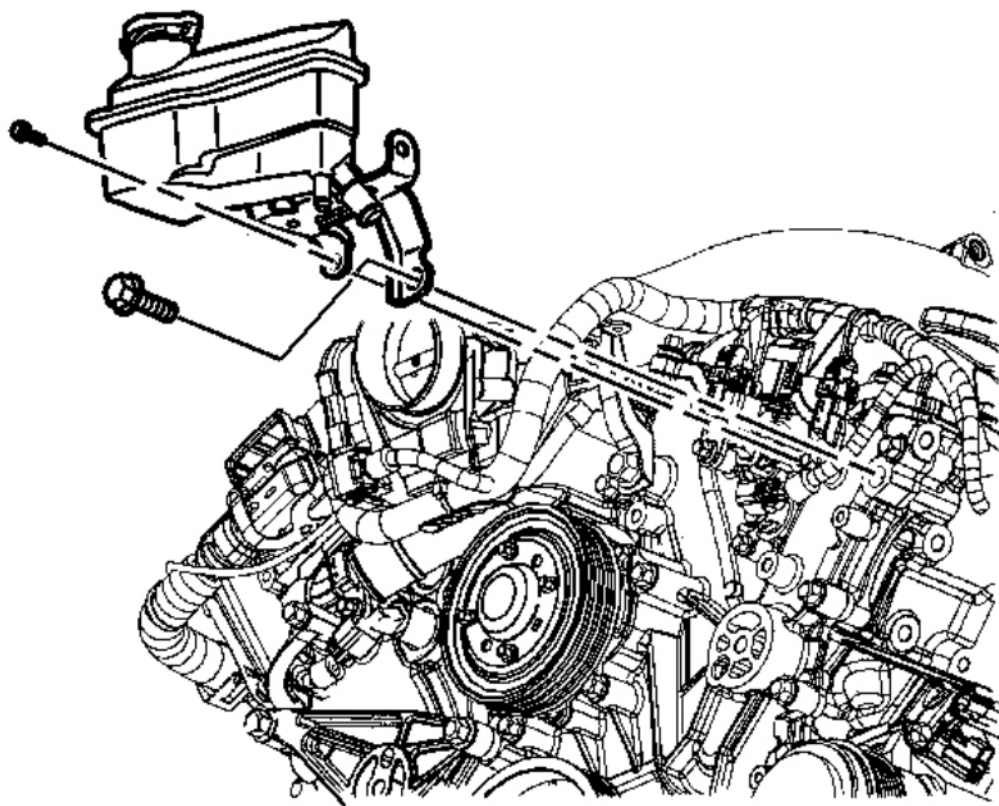


Fig. 19: View Of Power Steering Pump Reservoir
Courtesy of GENERAL MOTORS CORP.

8. Place the power steering pump reservoir.
9. Install the upper inboard power steering pump reservoir bolt.

Tighten: Tighten the upper inboard power steering pump reservoir bolt to 10 N.m (89 lb in).

10. Install the lower outboard power steering pump reservoir bolts.

Tighten: Tighten the lower outboard power steering pump reservoir bolts to 40 N.m (30 lb ft).

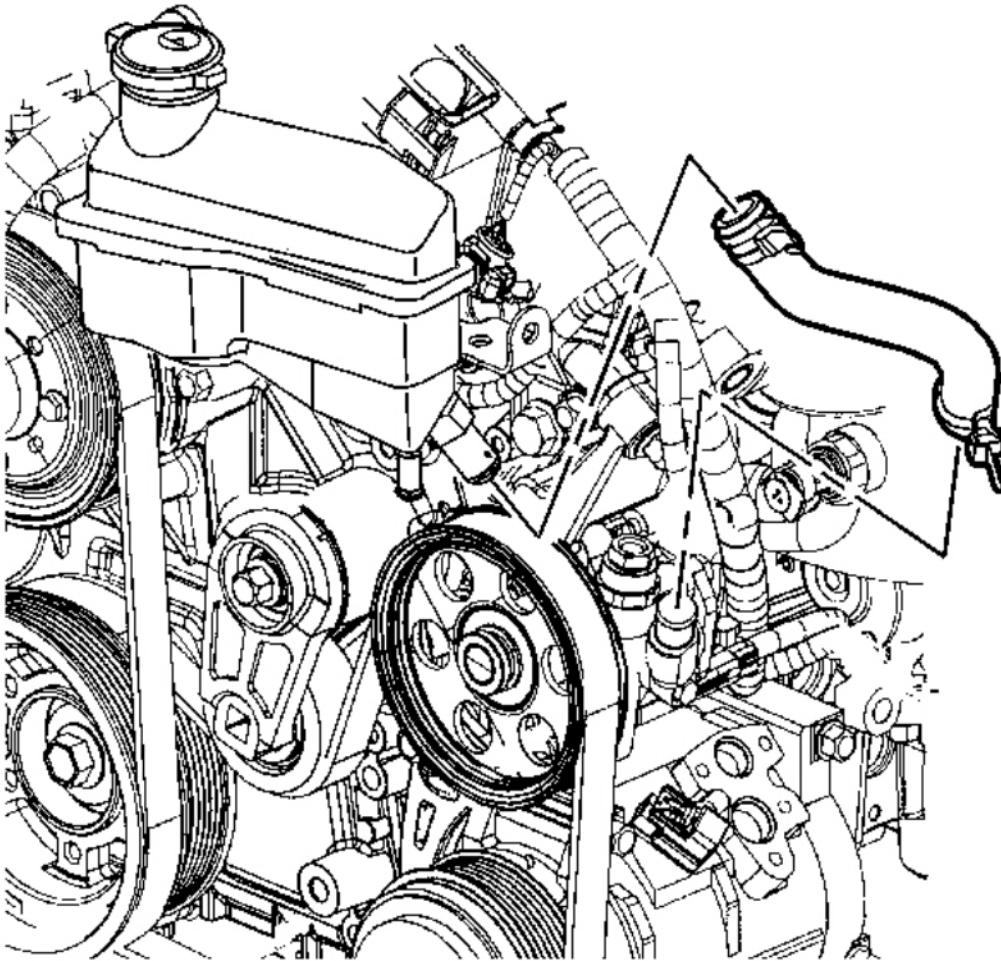


Fig. 20: View Of Power Steering Reservoir Hose
Courtesy of GENERAL MOTORS CORP.

11. Install the power steering reservoir hose to the power steering pump.
12. Compress and reposition the clamp on the power steering reservoir hose at the power steering pump.

ENGINE WIRING HARNESS ASSEMBLY INSTALLATION

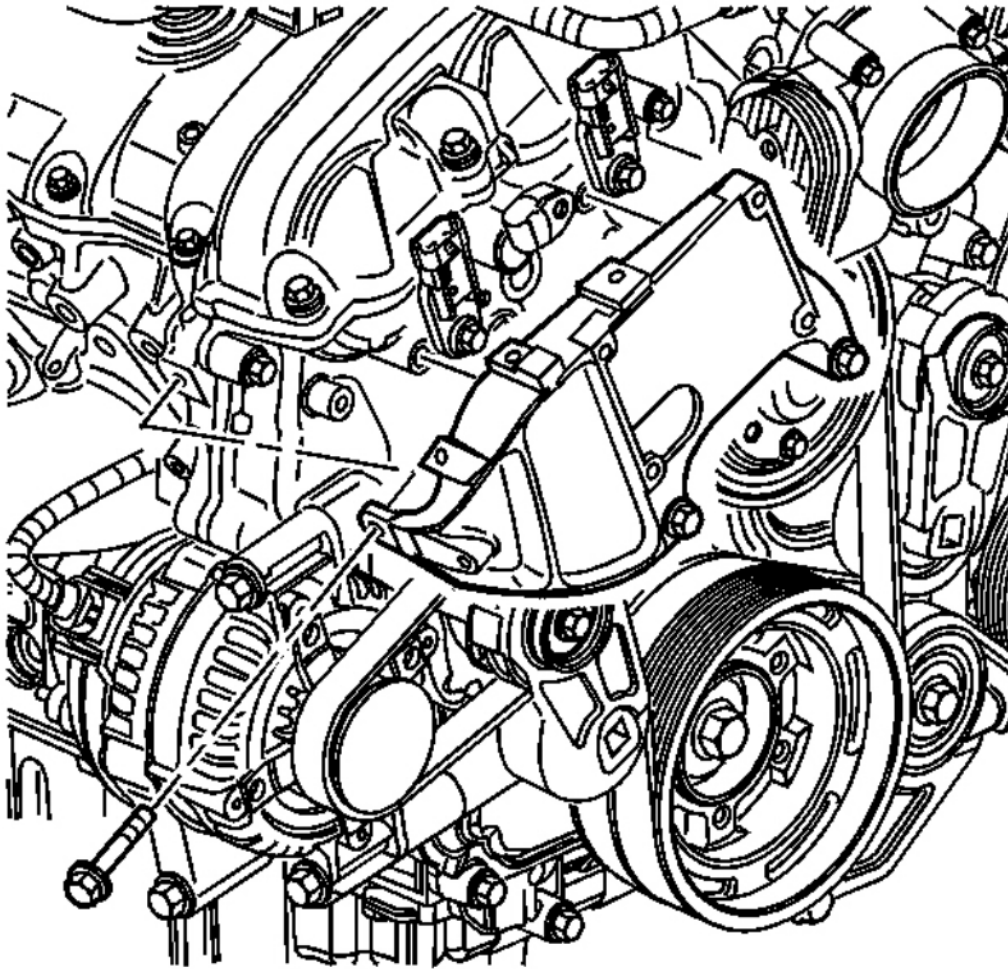


Fig. 21: View Of ECM Bracket
Courtesy of GENERAL MOTORS CORP.

1. Install the engine control module (ECM) bracket.

NOTE: Refer to Fastener Notice in Cautions and Notices.

2. Loosely install the ECM bracket bolts.

Tighten:

1. Tighten the side ECM bracket bolts to 10 N.m (89 lb in).

2. Tighten the front ECM bracket bolts to 23 N.m (17 lb ft).

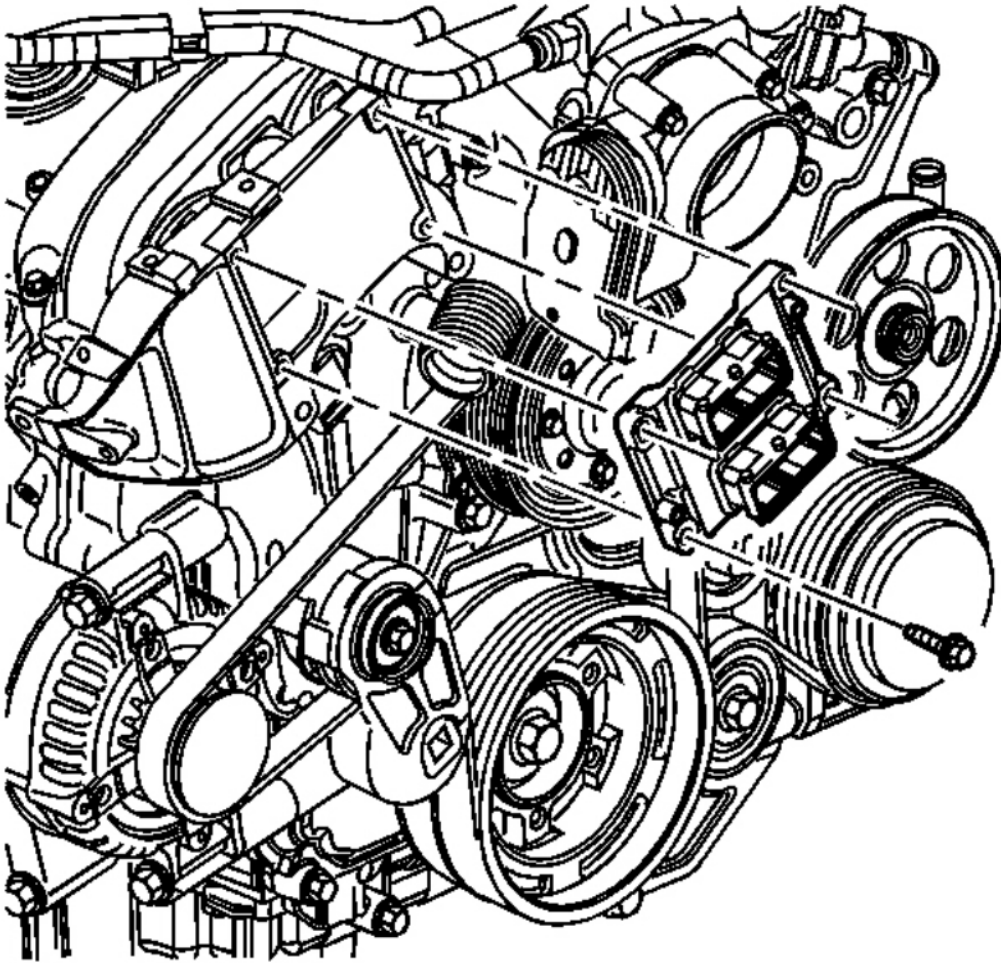


Fig. 22: View Of ECM
Courtesy of GENERAL MOTORS CORP.

3. Install the ECM module to the ECM bracket.
4. Install the ECM module bolts.

Tighten: Tighten the ECM module bolts to 10 N.m (89 lb in).

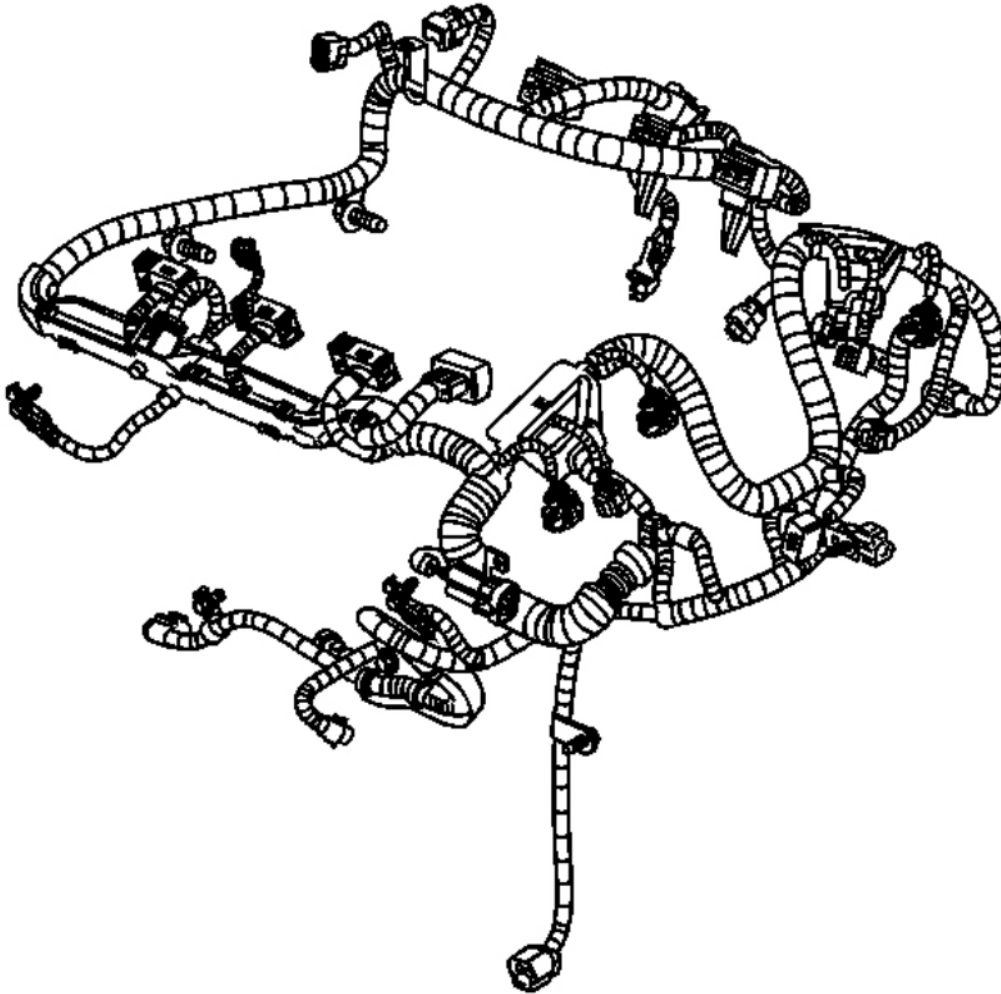


Fig. 23: View Of Engine Wiring Harness
Courtesy of GENERAL MOTORS CORP.

5. Install the engine wiring harness to the engine.

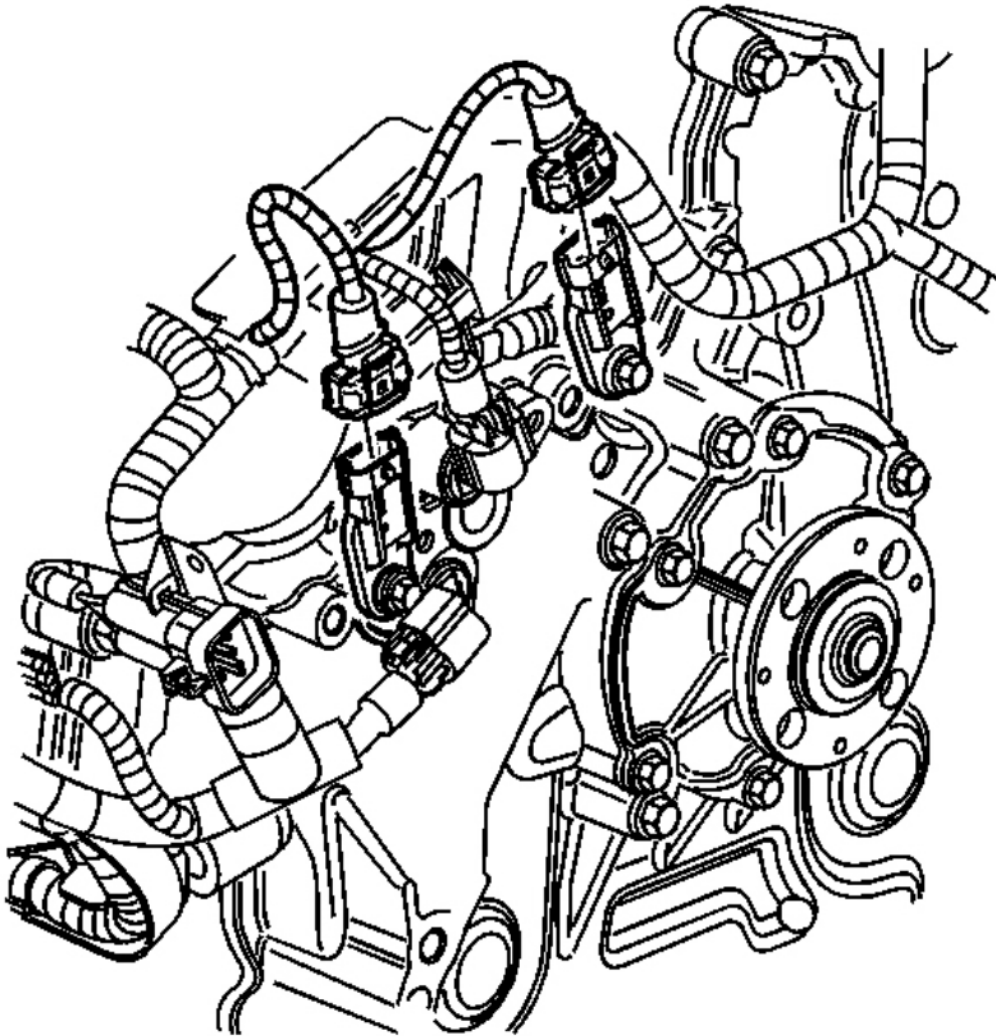


Fig. 24: View Of Right Camshaft Position Sensor Electrical Connectors
Courtesy of GENERAL MOTORS CORP.

6. Connect the engine wiring harness to the right camshaft position sensors.

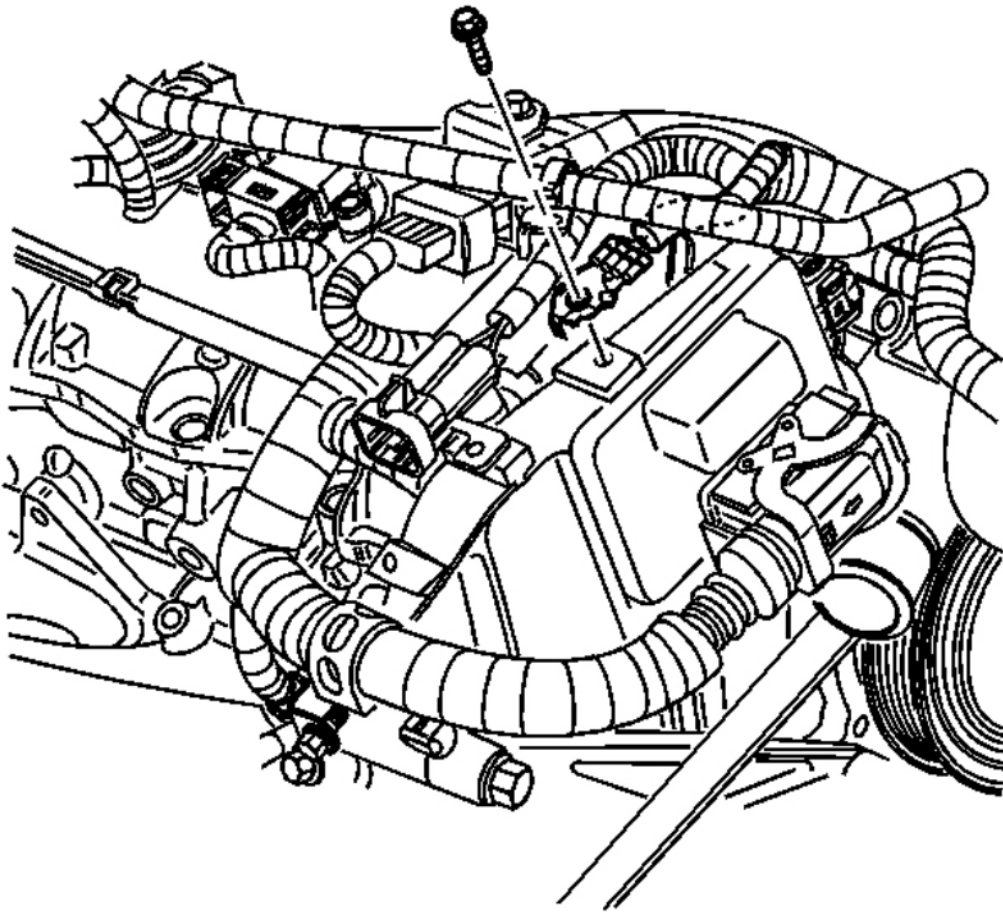


Fig. 25: View Of ECM Bracket Wiring Harness Ground Bolt
Courtesy of GENERAL MOTORS CORP.

7. Install the engine wiring harness ground bolt to the ECM bracket.

Tighten: Tighten the engine wiring harness ground bolt to 10 N.m (89 lb in).

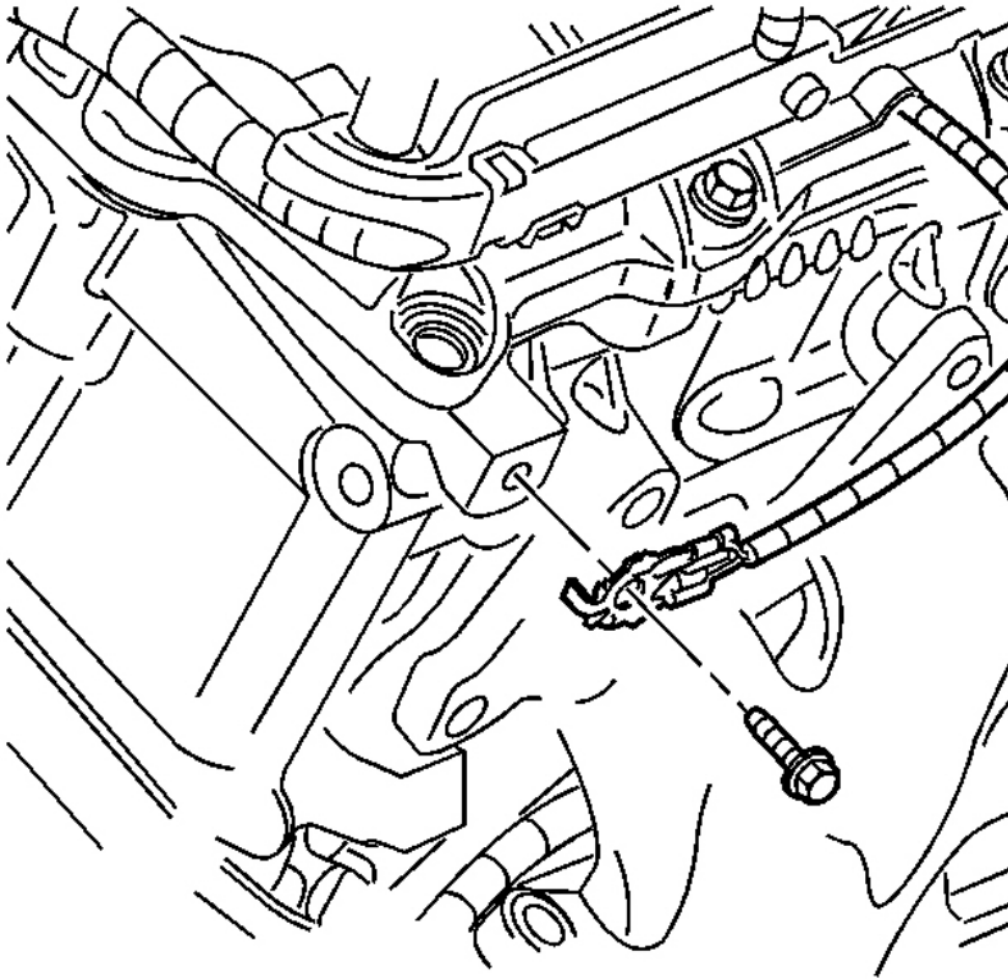


Fig. 26: View Of Wiring Harness Ground Bolt At Side Of Right Cylinder Head
Courtesy of GENERAL MOTORS CORP.

8. Install the engine wiring harness ground bolt to the side of the right cylinder head.

Tighten: Tighten the engine wiring harness ground bolt to 10 N.m (89 lb in).

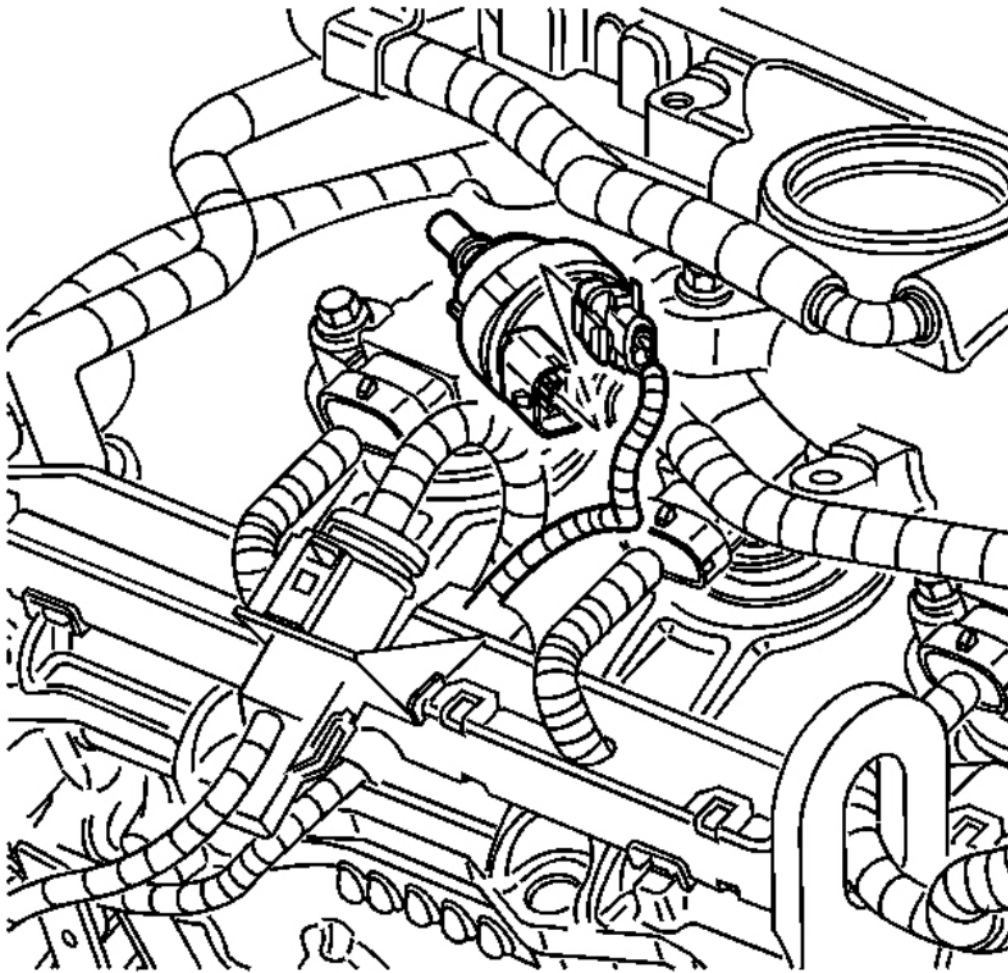


Fig. 27: View Of EVAP Solenoid Wiring Harness Connector
Courtesy of GENERAL MOTORS CORP.

9. Connect the engine wiring harness to the evaporative emission (EVAP) solenoid.

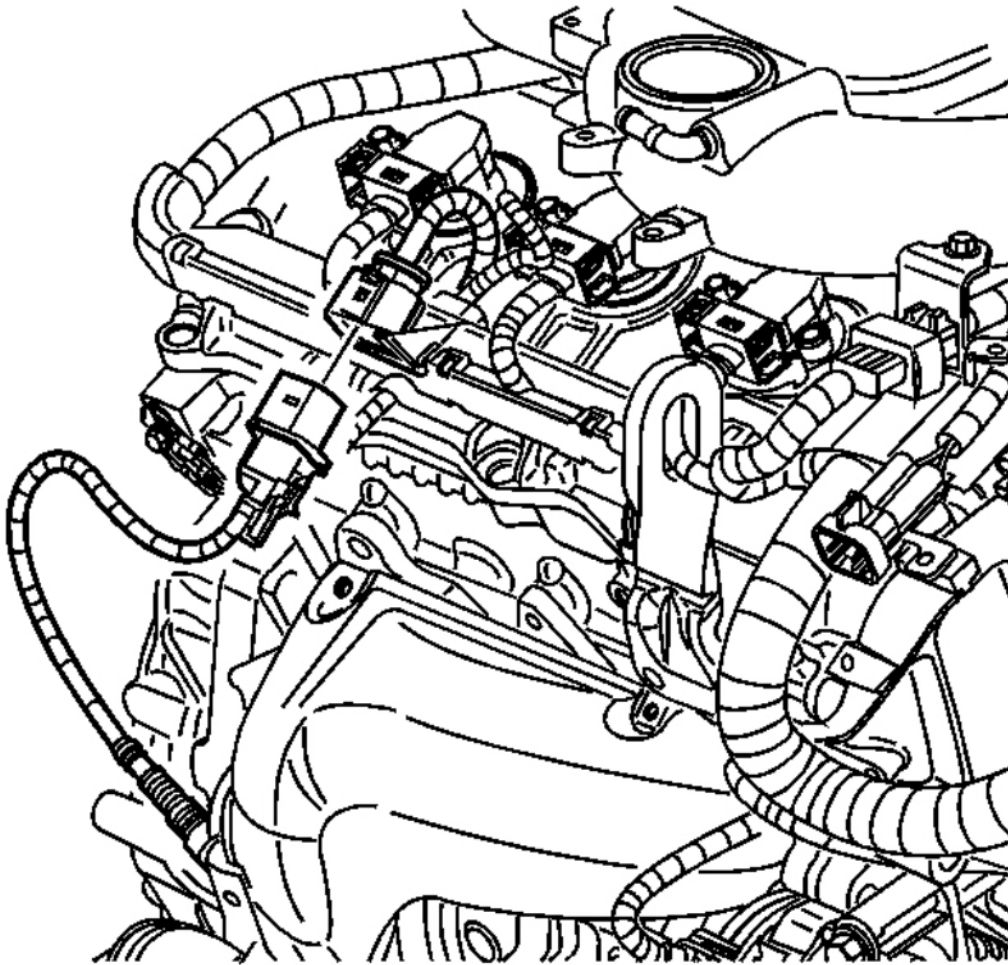


Fig. 28: View Of Right Oxygen Sensor Harness Wiring Harness Connector
Courtesy of GENERAL MOTORS CORP.

10. Connect the engine wiring harness to the right oxygen sensor harness.

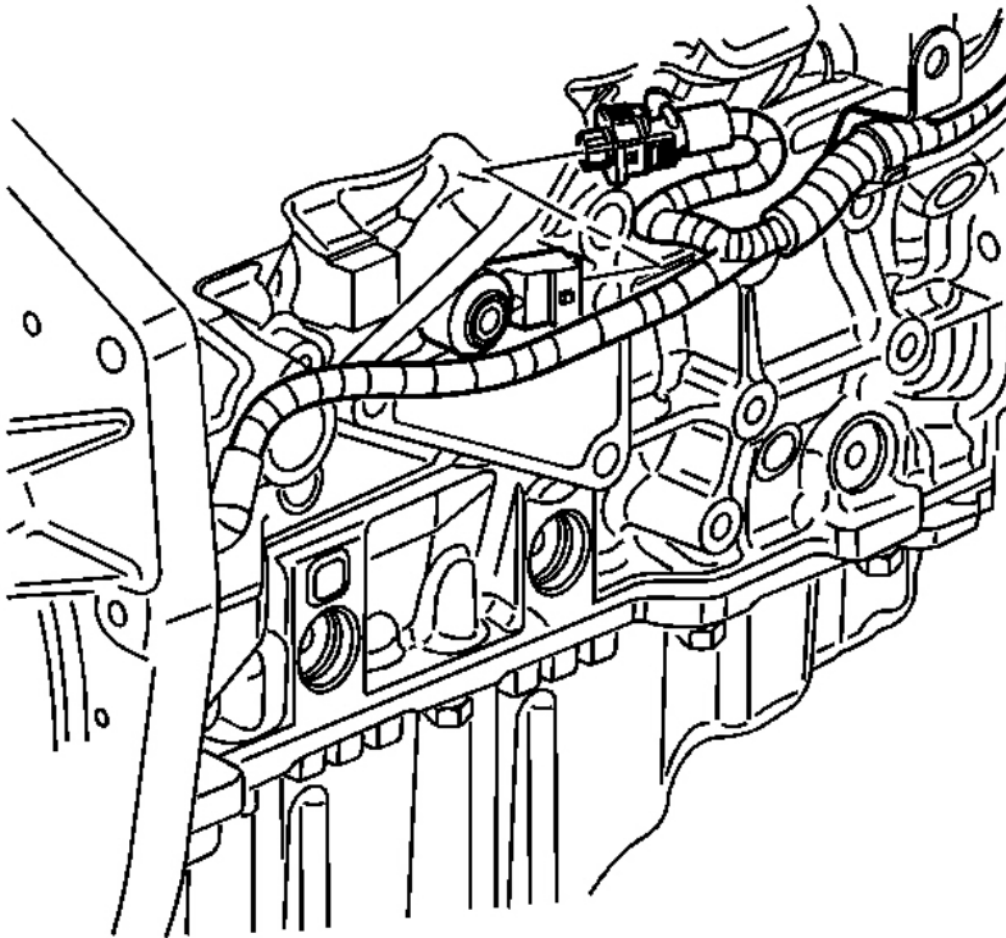


Fig. 29: View Of Right Knock Sensor And Electrical Connector
Courtesy of GENERAL MOTORS CORP.

11. Connect the engine wiring harness to the right knock sensor.

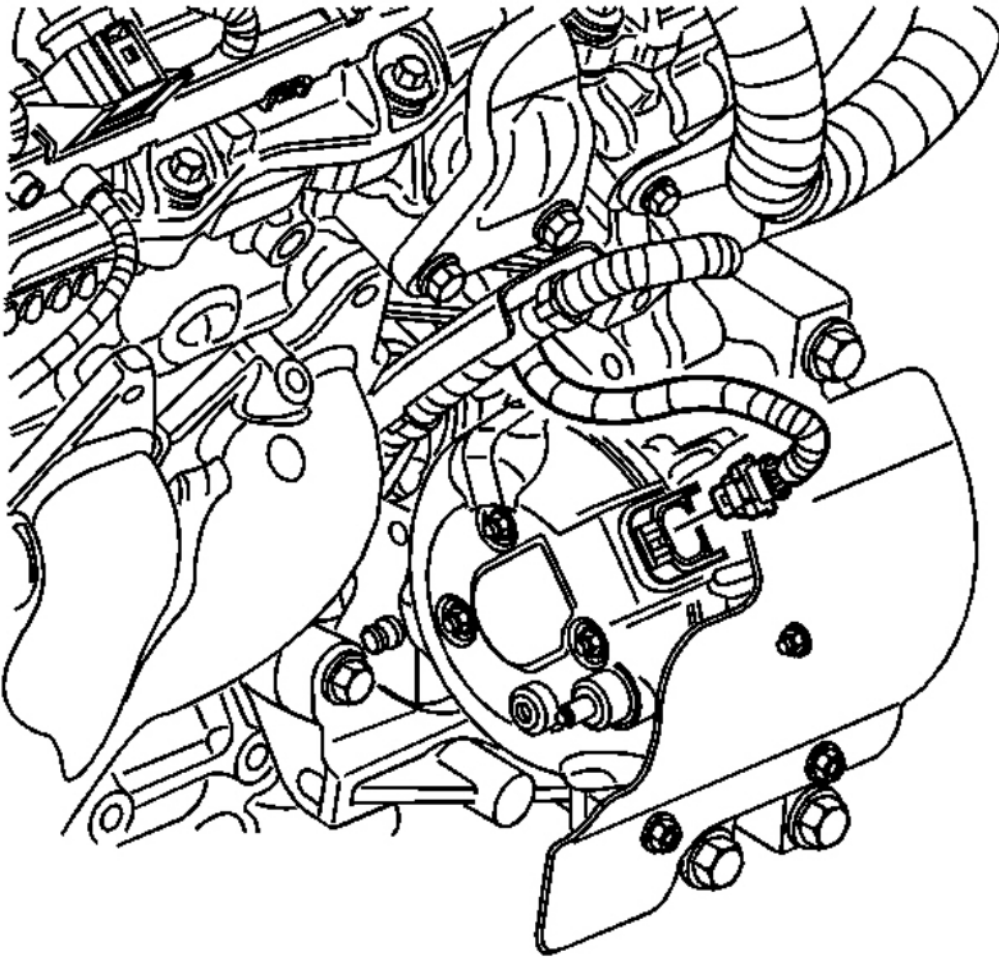


Fig. 30: View Of Generator Wiring Harness Connector
Courtesy of GENERAL MOTORS CORP.

12. Connect the engine wiring harness to the generator.

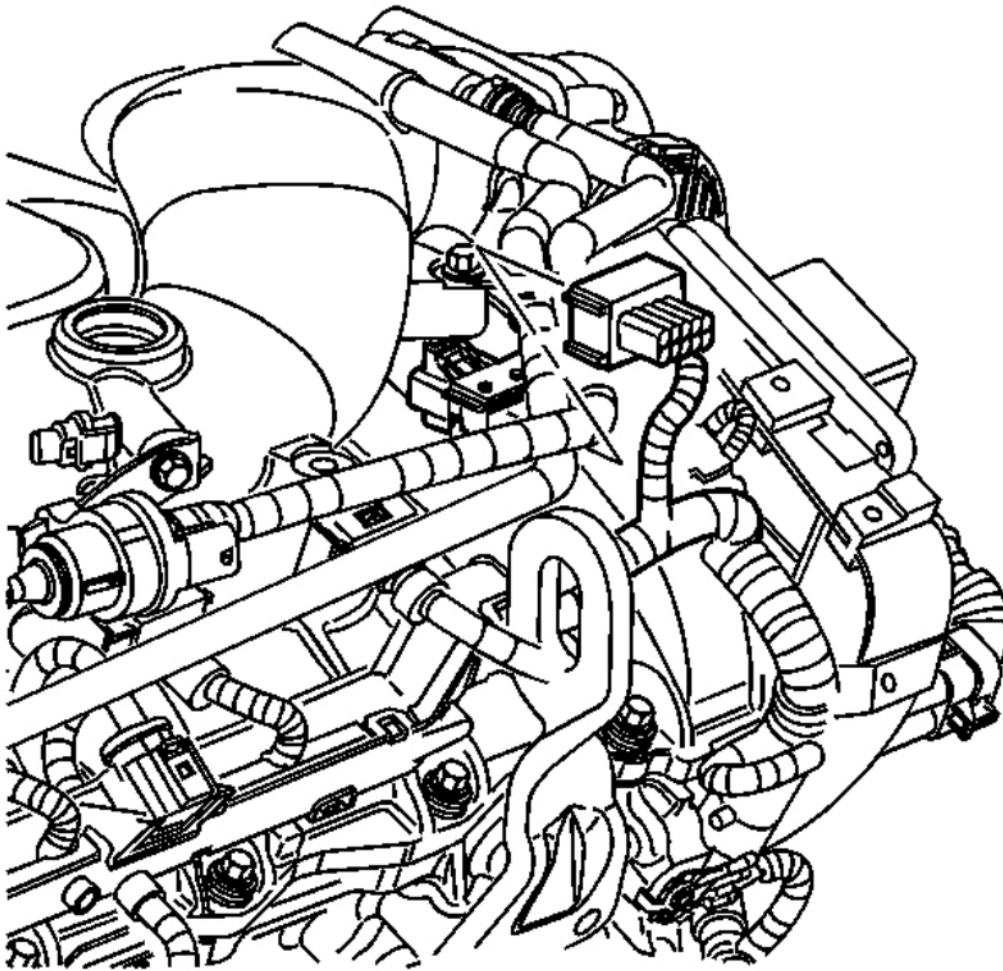


Fig. 31: View Of Fuel Injector Harness Wiring Harness Connector
Courtesy of GENERAL MOTORS CORP.

13. Connect the engine wiring harness to the fuel injector harness.

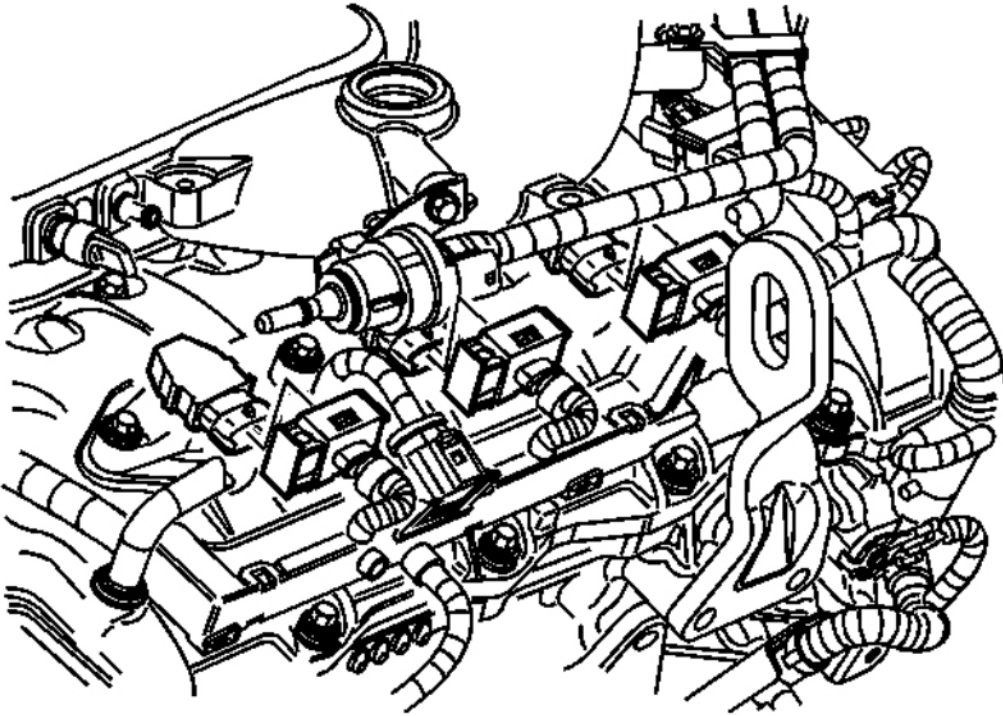


Fig. 32: View Of Right Ignition Coils Electrical Connectors
Courtesy of GENERAL MOTORS CORP.

14. Connect the engine wiring harness to the right ignition coils.

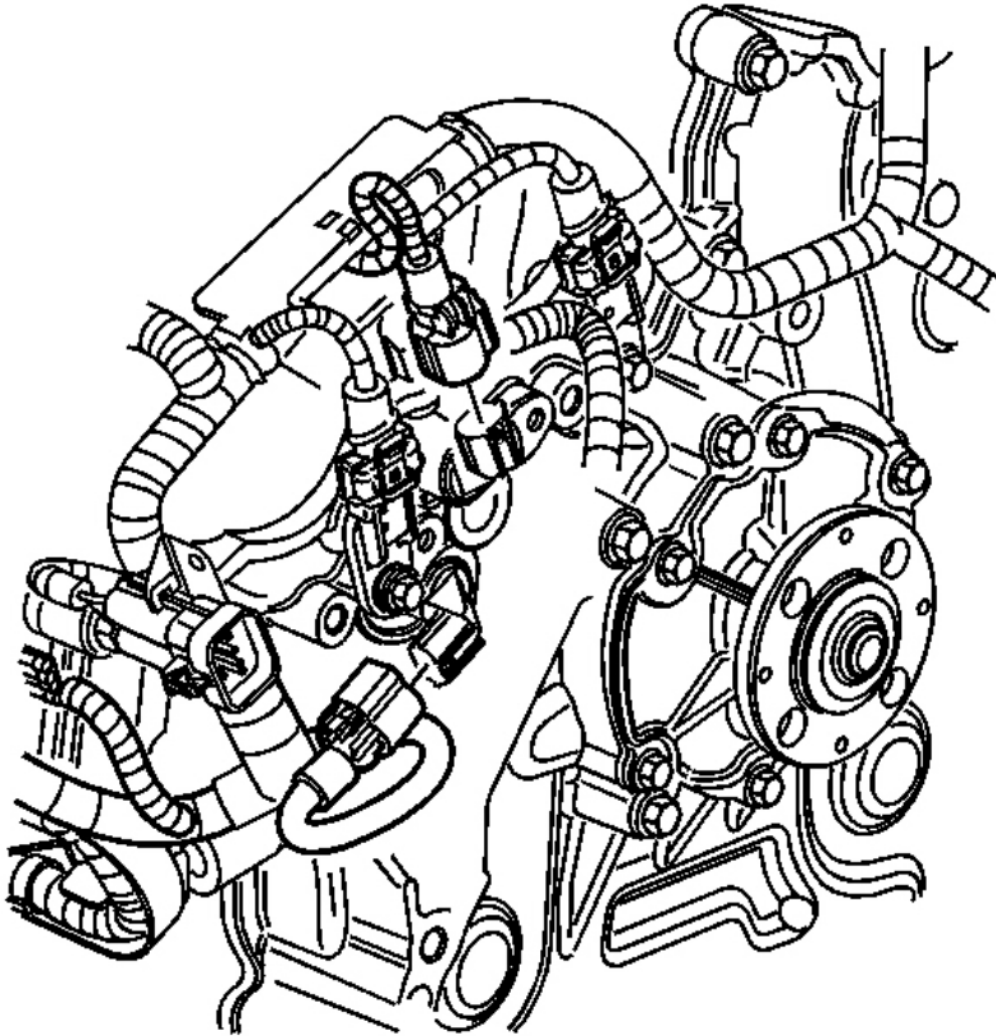


Fig. 33: View Of Right Camshaft Position Actuator Valves Wiring Harness Connector

Courtesy of GENERAL MOTORS CORP.

15. Connect the engine wiring harness to the right camshaft position actuator valves.

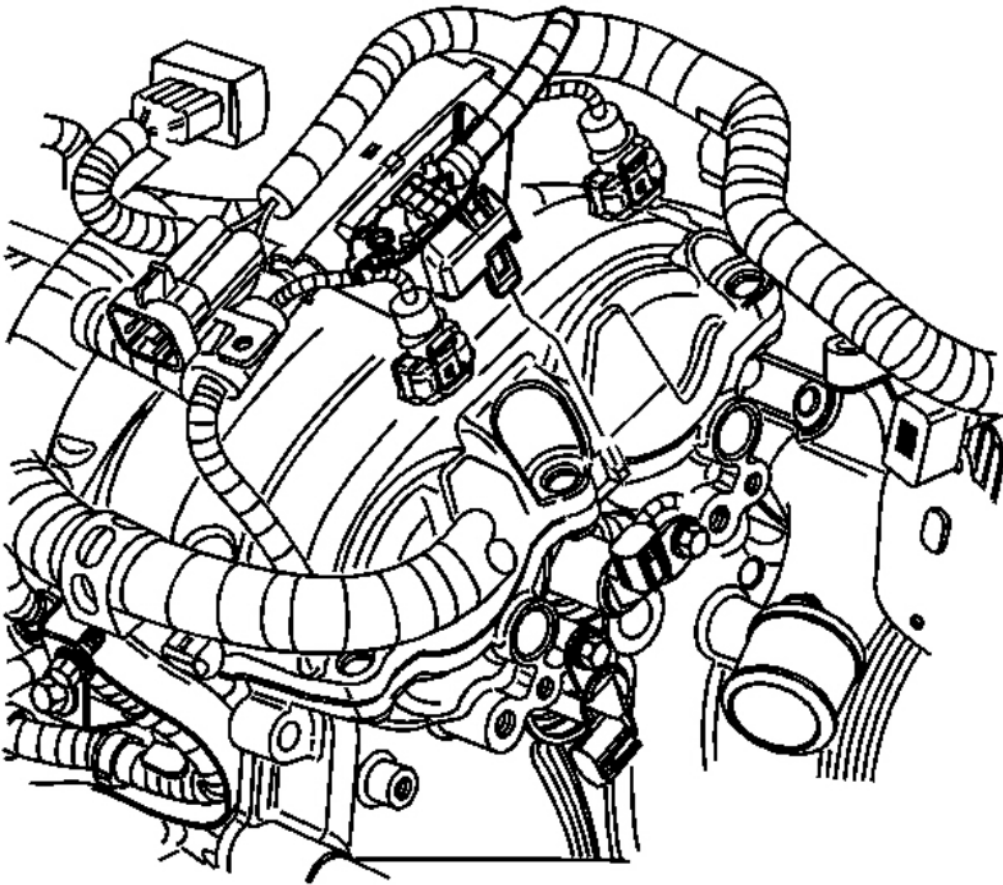


Fig. 34: View Of Right Camshaft Cover Wiring Harness Connector - Front
Courtesy of GENERAL MOTORS CORP.

16. Connect the engine wiring harness to the front of the right camshaft cover.

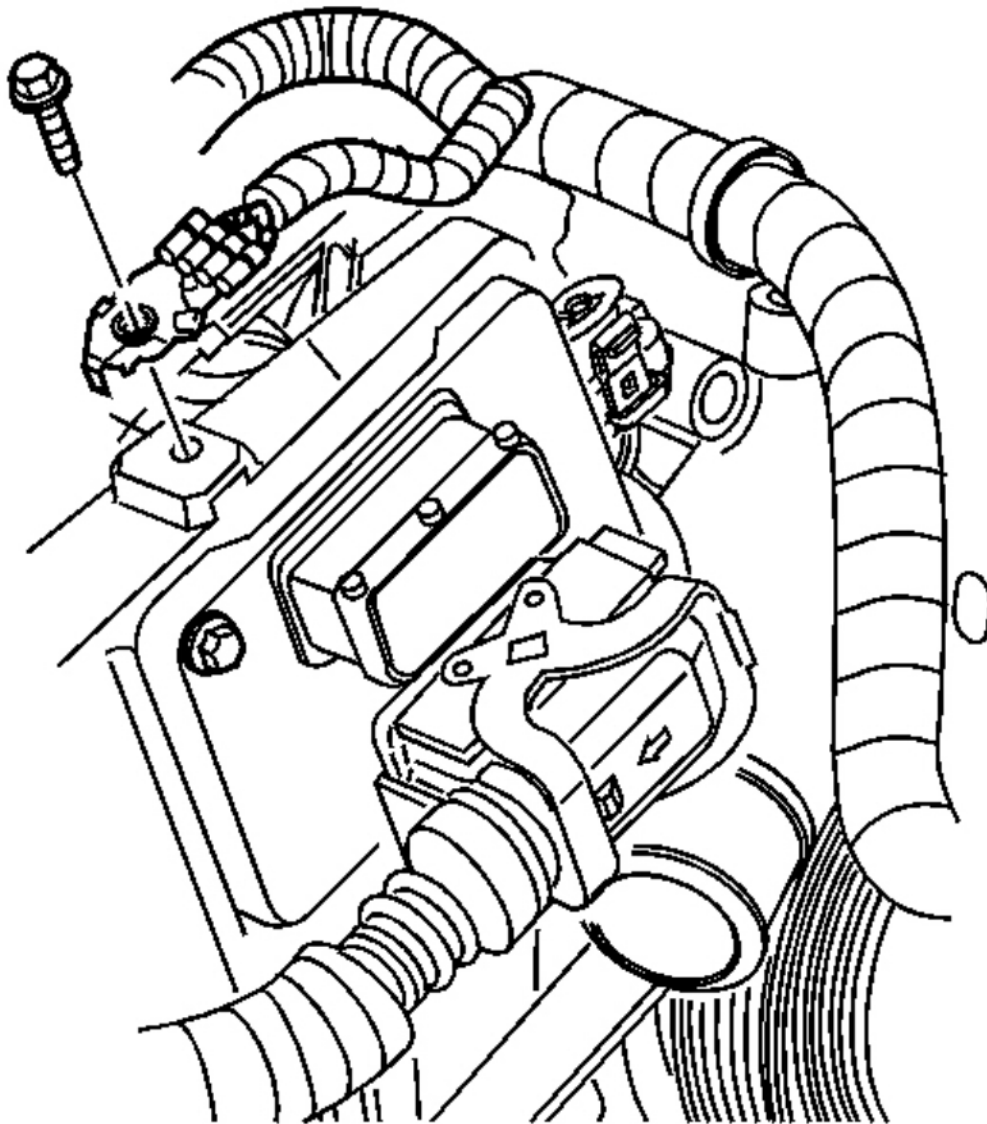


Fig. 35: View Of ECM Ground Harness Ring Terminal Screw
Courtesy of GENERAL MOTORS CORP.

17. Position the ECM ground harness ring terminal to ECM lug and install the ECM ground harness ring terminal screw.

Tighten: Tighten the ECM ground harness ring terminal screw to 4.5 N.m (40 lb in).

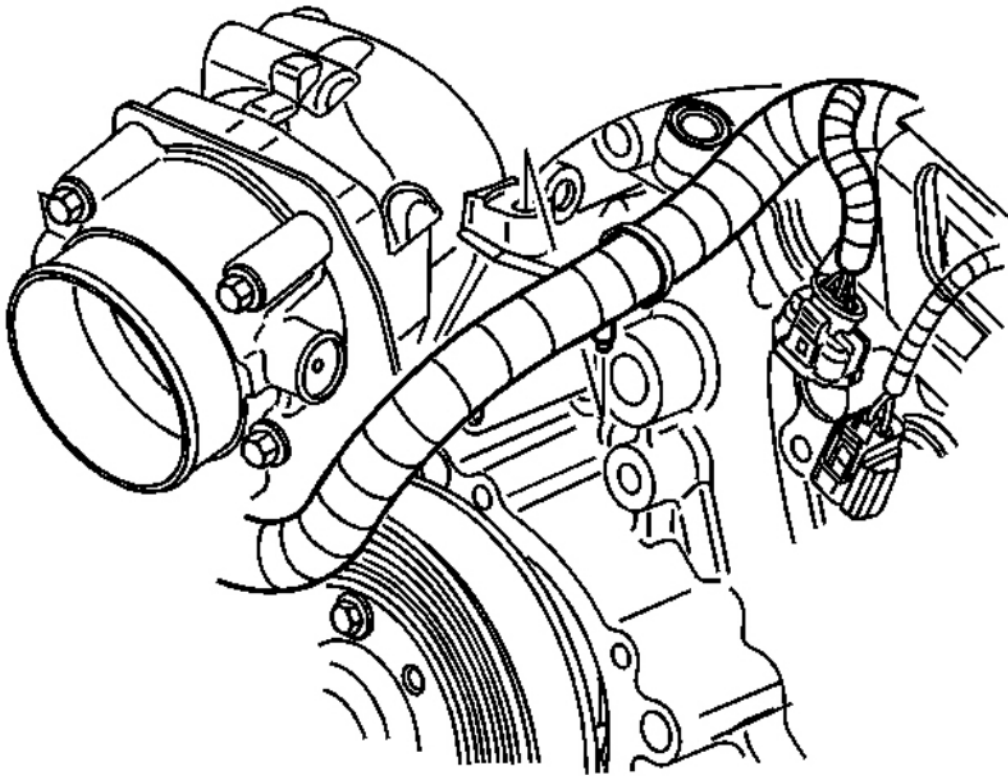


Fig. 36: View Of Throttle Body/Intake Manifold Wiring Harness Connector
Courtesy of GENERAL MOTORS CORP.

18. Connect the engine wiring harness to the left side of the throttle body/intake manifold.

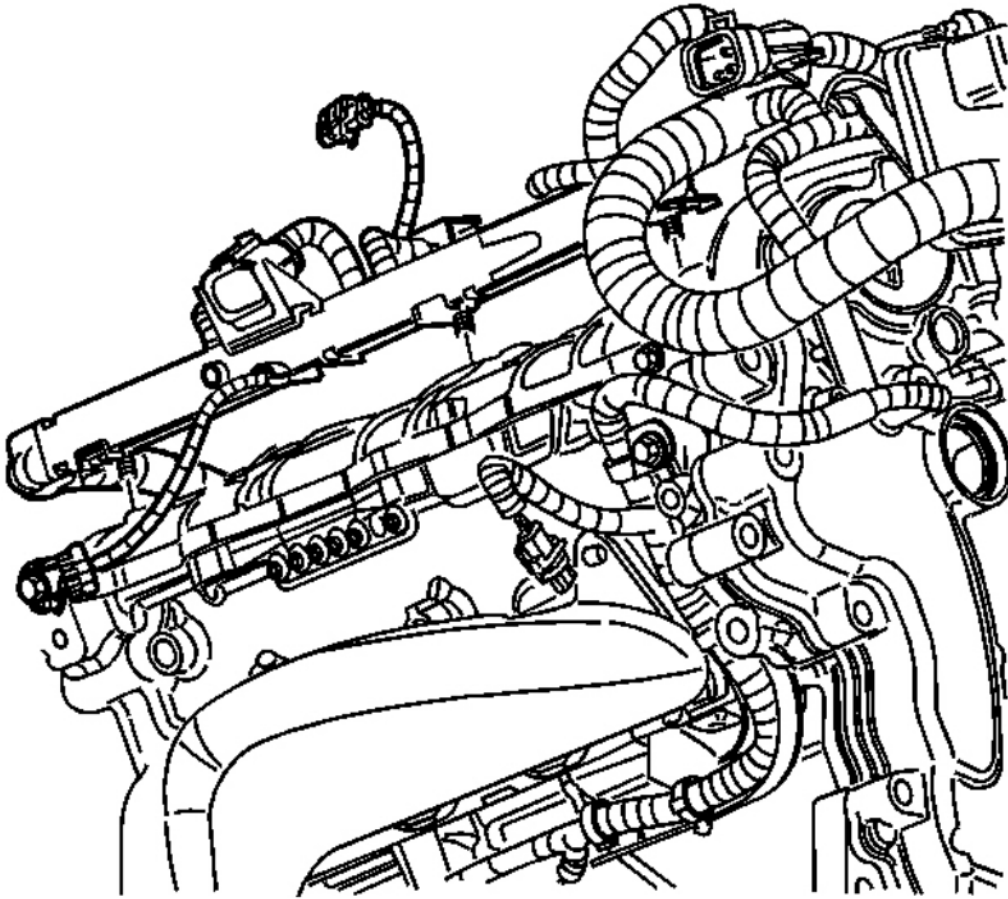


Fig. 37: View Of Right Camshaft Cover Wiring Harness Connector - Top
Courtesy of GENERAL MOTORS CORP.

19. Connect the engine wiring harness to the top of the right camshaft cover.

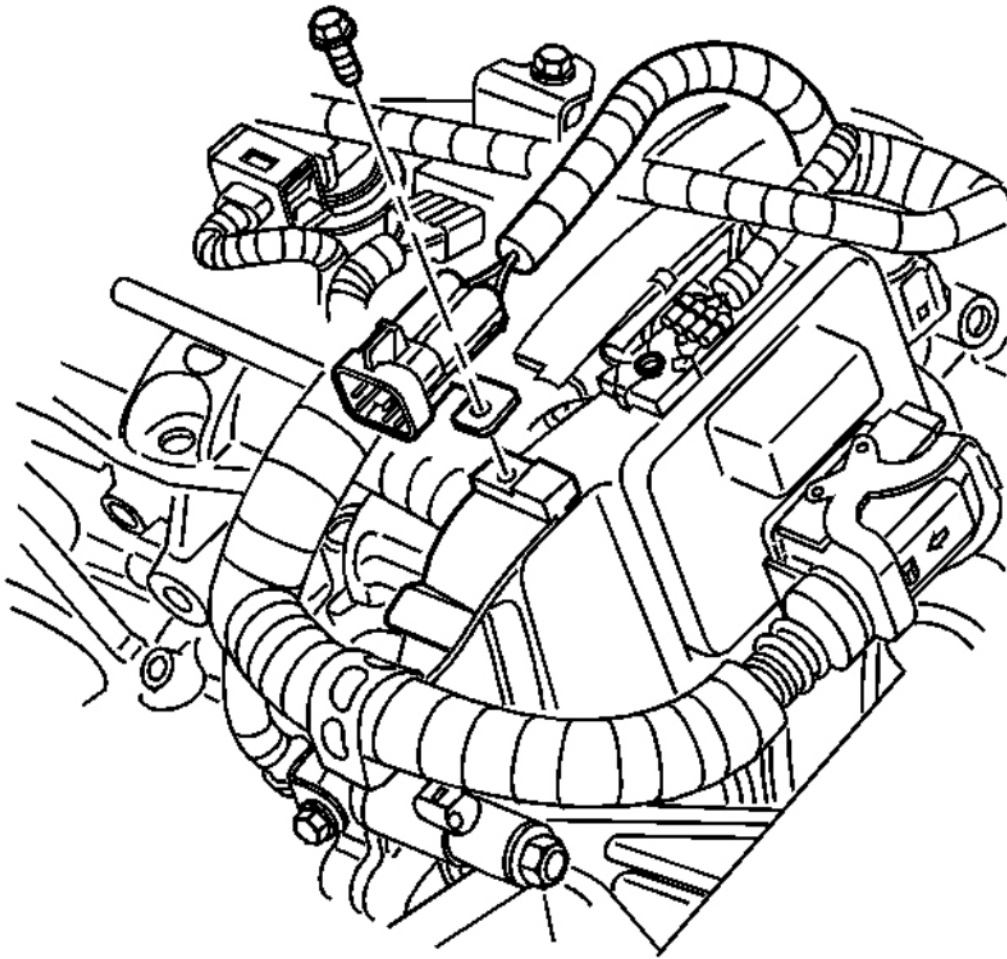


Fig. 38: View Of Engine Wiring Harness Bracket Bolt - Top Of ECM Bracket
Courtesy of GENERAL MOTORS CORP.

20. Install the engine wiring harness bracket bolt to the top of the ECM bracket.

Tighten: Tighten the engine wiring harness bracket bolt to 10 N.m (89 lb in).

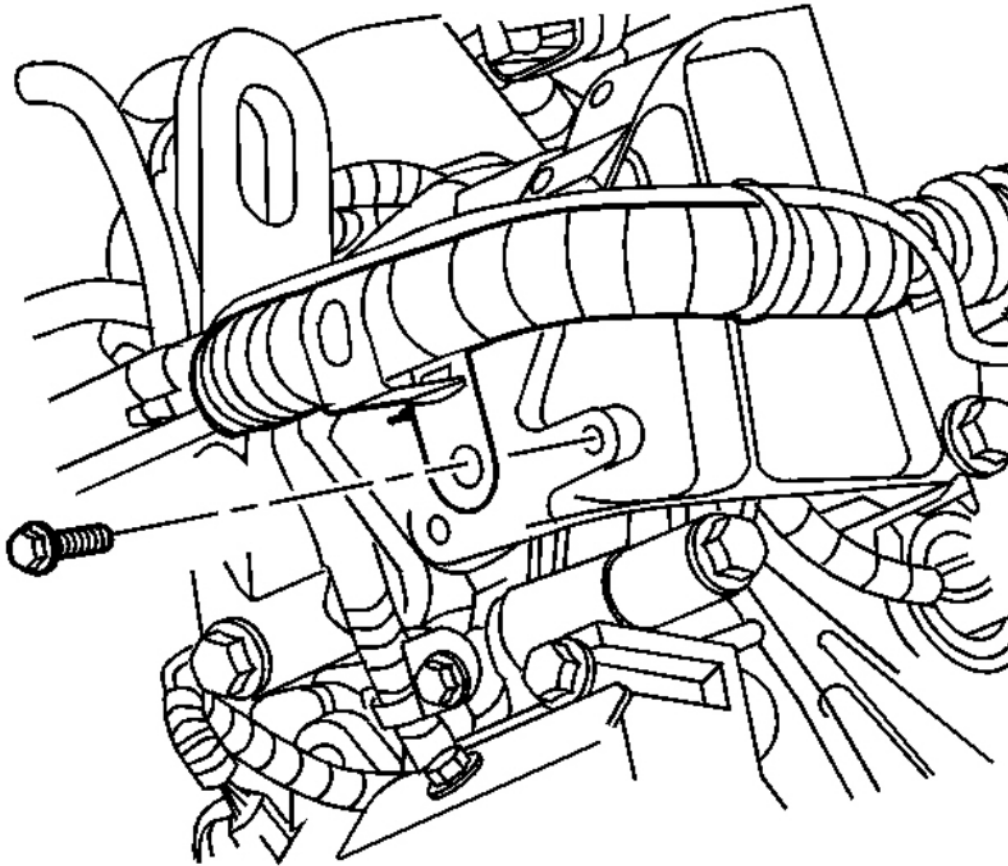


Fig. 39: View Of Engine Wiring Harness Bracket Bolt - Side Of ECM Bracket
Courtesy of GENERAL MOTORS CORP.

21. Install the engine wiring harness bracket bolt to the side of the ECM bracket.

Tighten: Tighten the engine wiring harness bracket bolt to 23 N.m (17 lb ft).

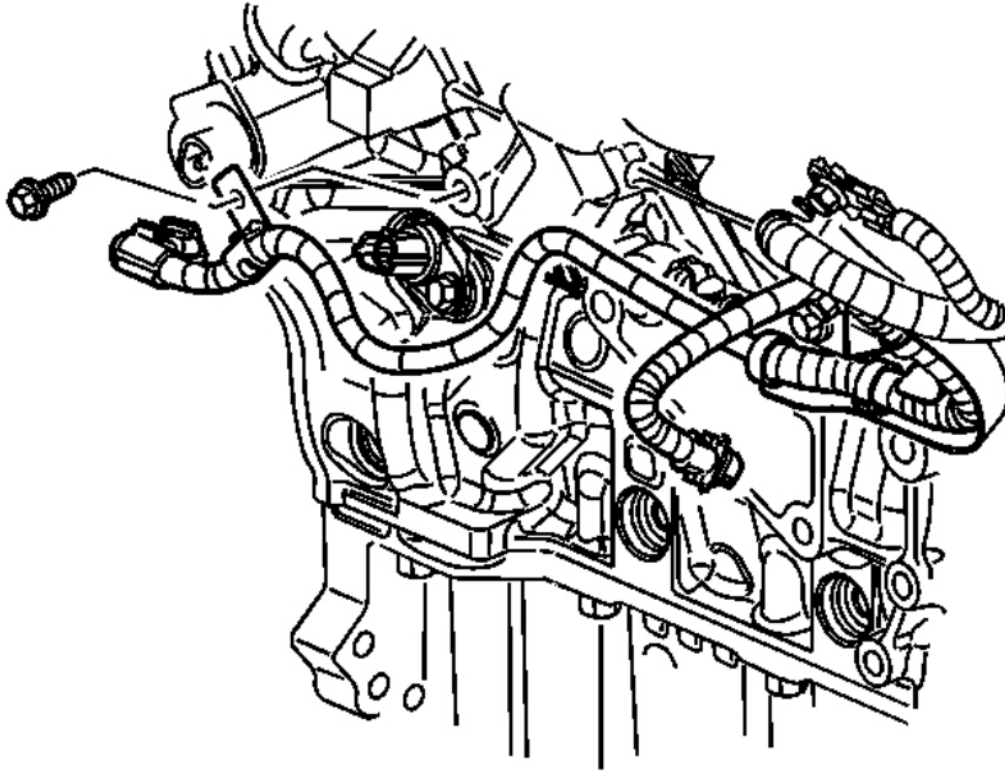


Fig. 40: View Of Crankshaft Position Sensor Wiring Harness Connector
Courtesy of GENERAL MOTORS CORP.

22. Connect the engine wiring harness to the crankshaft position sensor.
23. Install the engine wiring harness bracket bolt.

Tighten: Tighten the engine wiring harness bracket bolt to 50 N.m (37 lb ft).

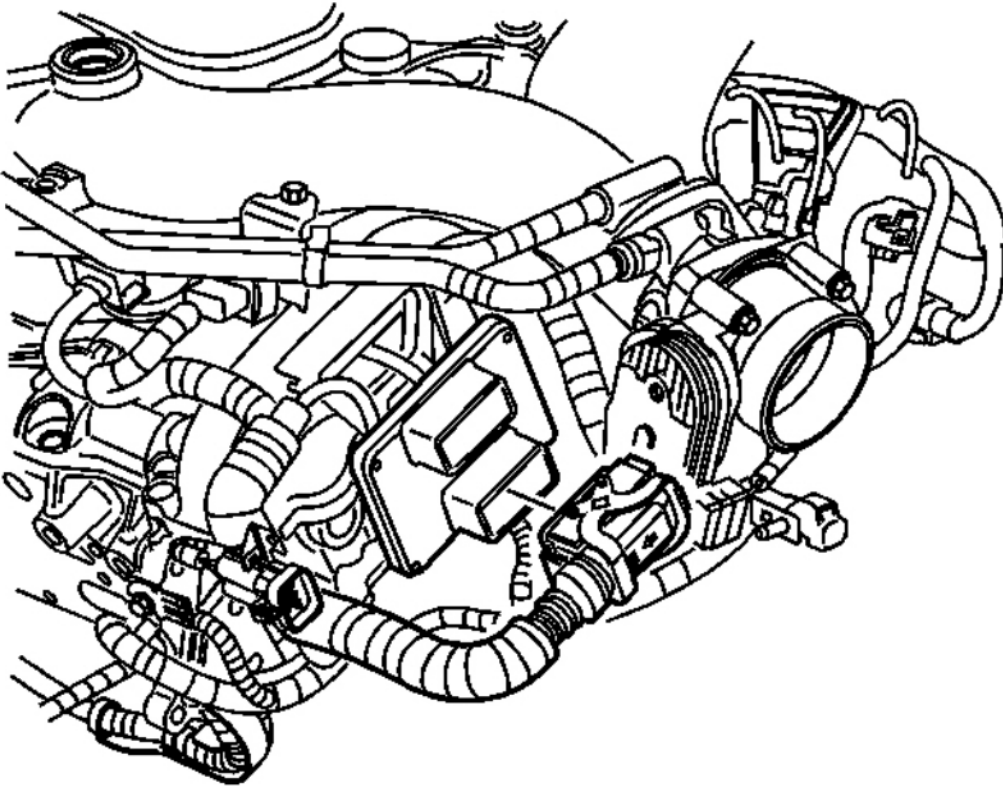


Fig. 41: View Of ECM Wiring Harness Connector
Courtesy of GENERAL MOTORS CORP.

24. Connect the engine wiring harness to the ECM module.

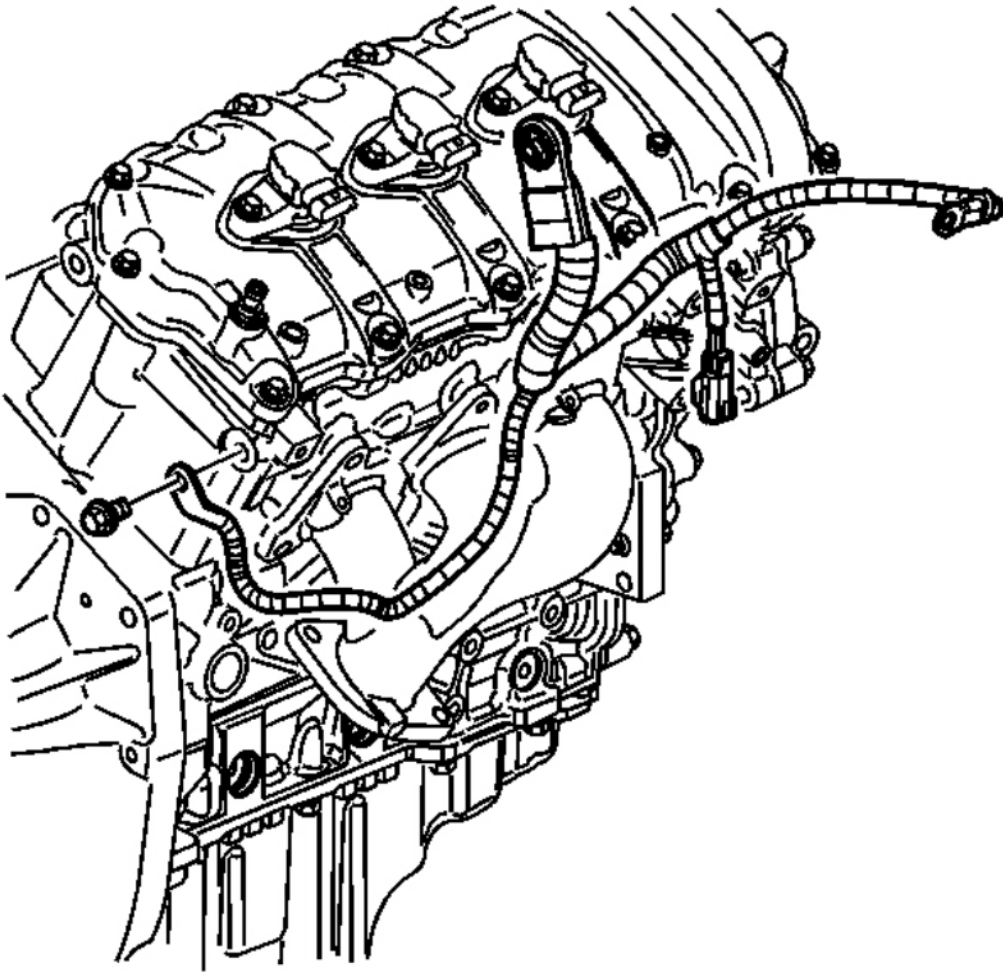


Fig. 42: View Of Battery Cable Ground
Courtesy of GENERAL MOTORS CORP.

25. Install the battery cable ground.
26. Install the battery cable ground bolt to the rear of the left cylinder head.

Tighten: Tighten the battery cable ground bolt to 50 N.m (37 lb ft).

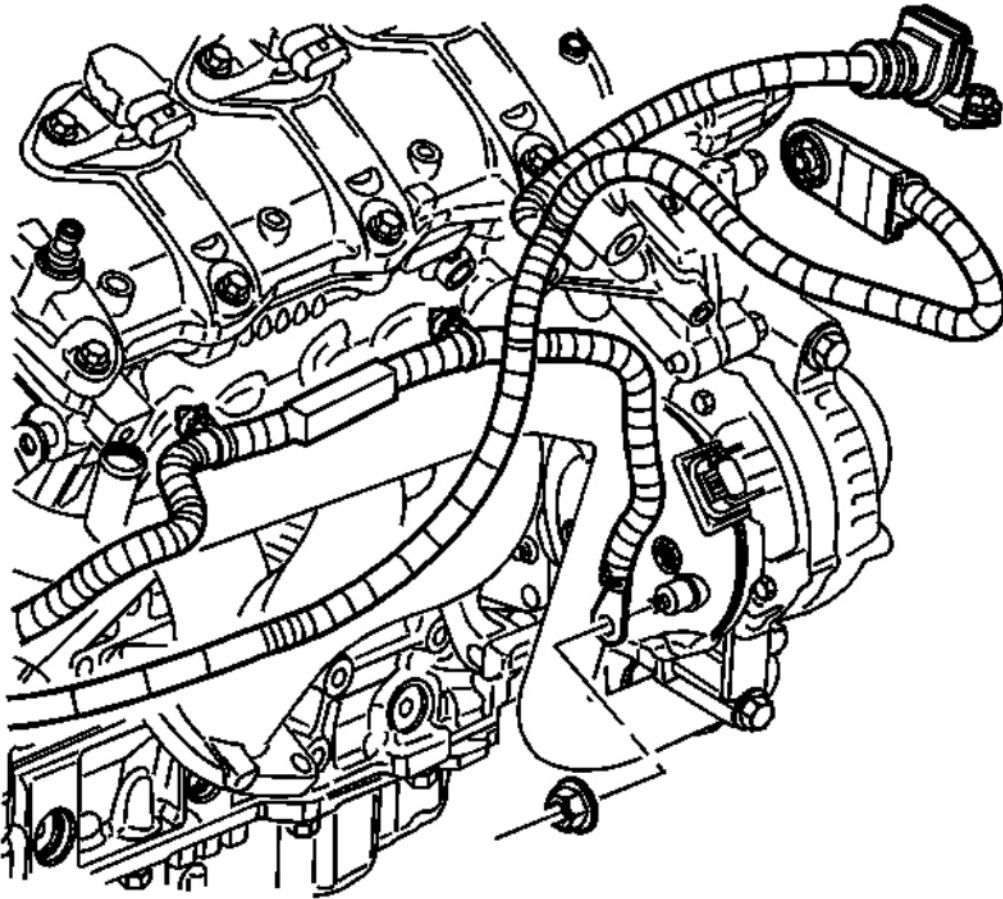


Fig. 43: View Of Battery Cable
Courtesy of GENERAL MOTORS CORP.

27. Connect the battery cable to the generator.
28. Install the battery cable/generator nut to the generator.

Tighten: Tighten the battery cable/generator nut to 13 N.m (115 lb in).

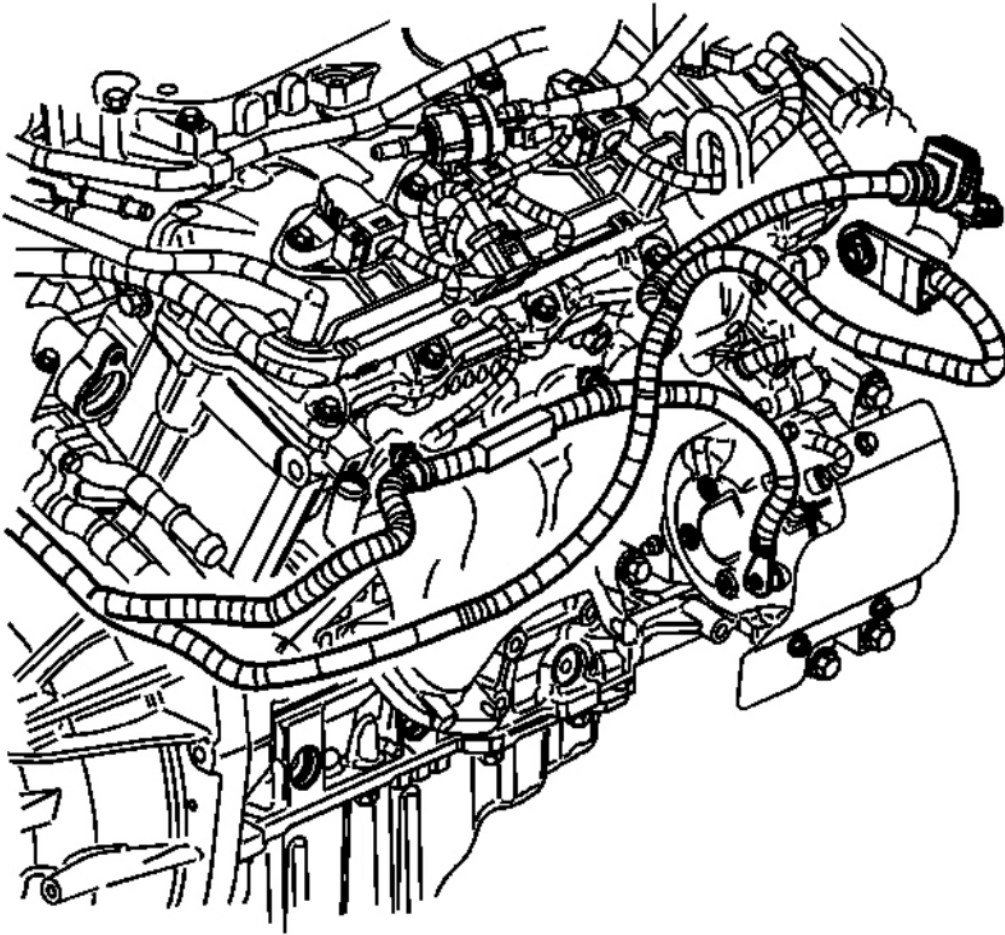


Fig. 44: View Of Engine Battery Cable Harness Connector
Courtesy of GENERAL MOTORS CORP.

29. Connect the battery cable harness to the right side of the engine.

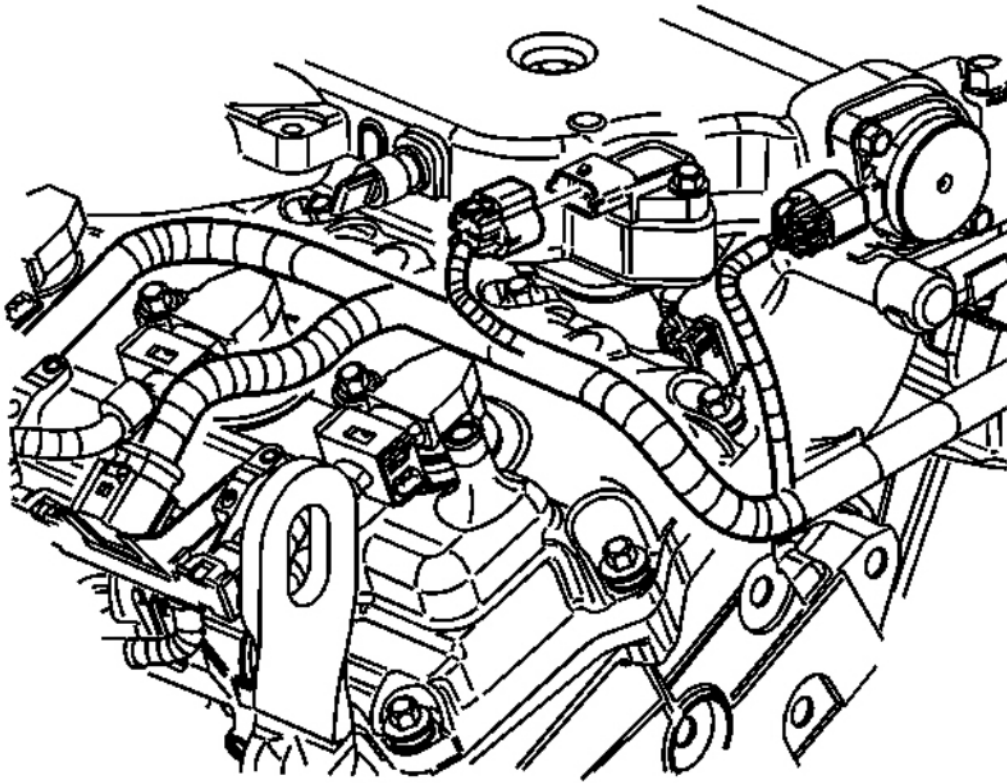


Fig. 45: Identifying Barometric Pressure Sensor And Electrical Connector
Courtesy of GENERAL MOTORS CORP.

30. Connect the engine wiring harness to the barometric pressure (BARO) sensor.

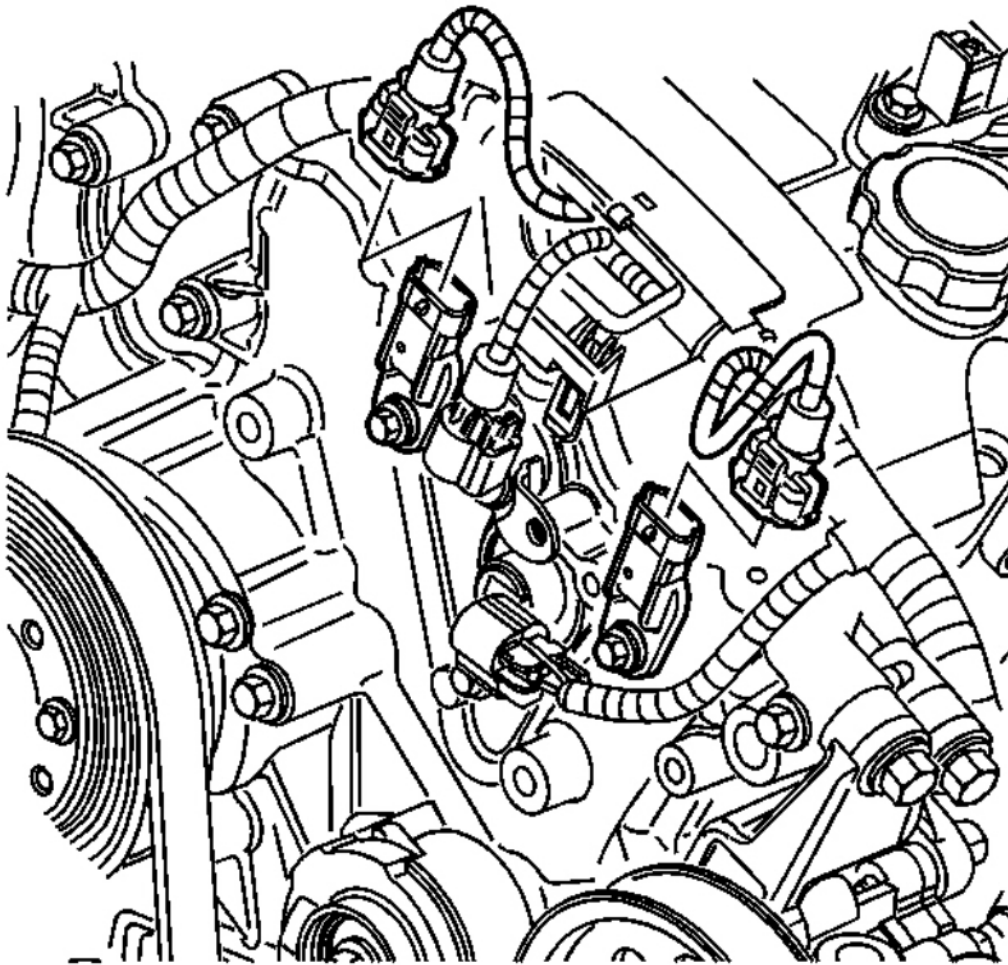


Fig. 46: View Of Left Camshaft Position Sensors Wiring Harness Connector
Courtesy of GENERAL MOTORS CORP.

31. Connect the engine wiring harness to the left camshaft position sensors.

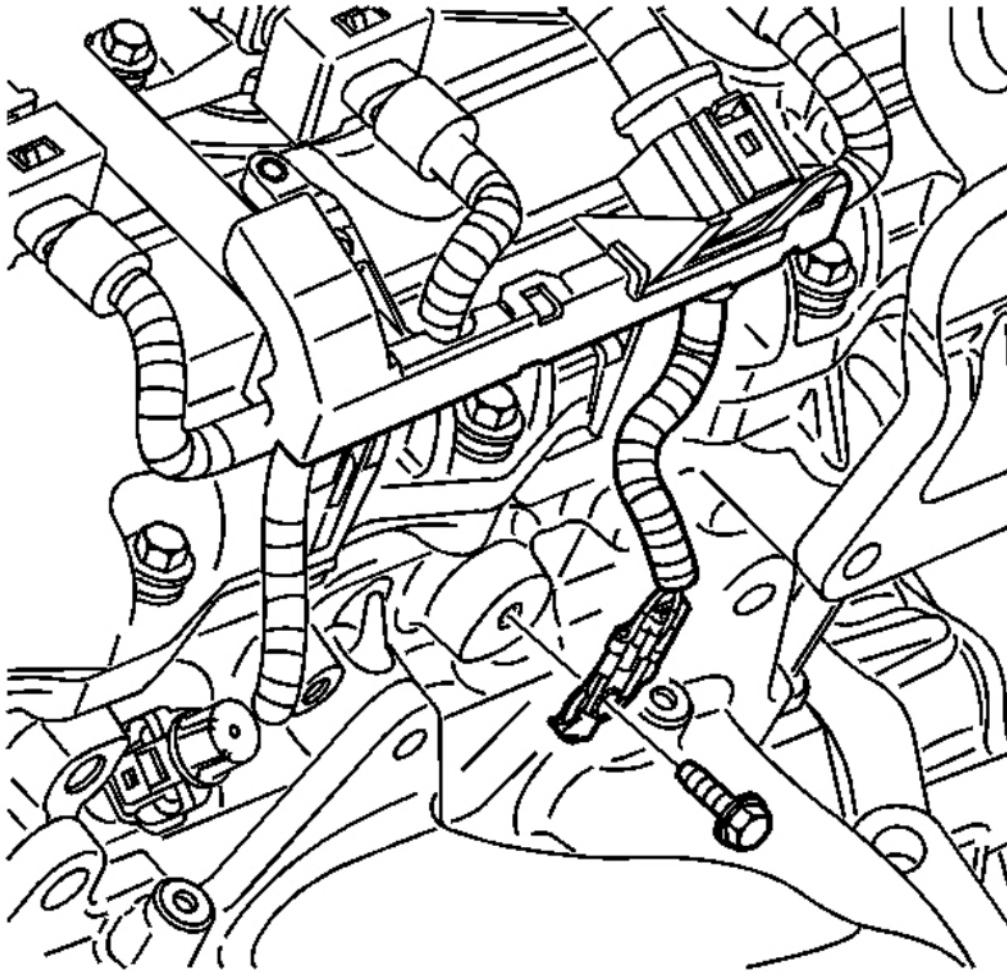


Fig. 47: View Of Left Cylinder Head Wiring Harness Ground Bolt
Courtesy of GENERAL MOTORS CORP.

32. Install the engine wiring harness ground bolt to the left cylinder head.

Tighten: Tighten the engine wiring harness ground bolt to 10 N.m (89 lb in).

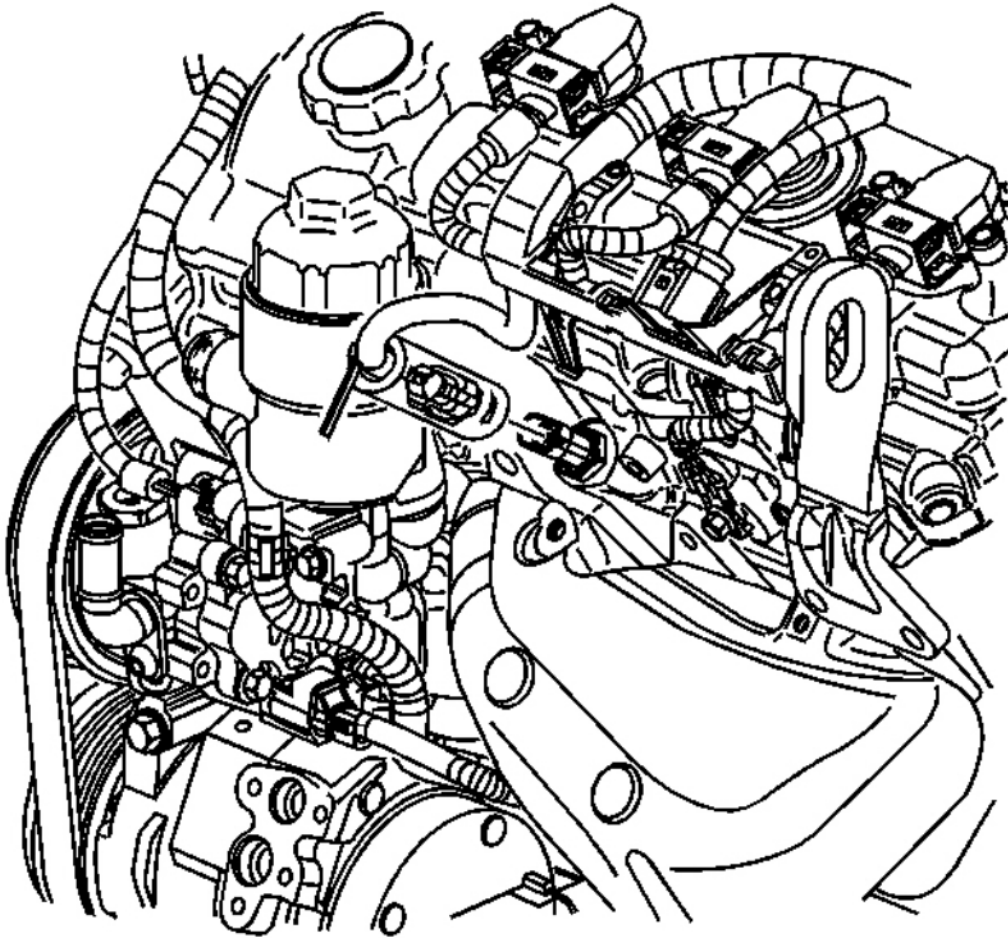


Fig. 48: View Of Coolant Temperature Sensor And Electrical Connector
Courtesy of GENERAL MOTORS CORP.

33. Connect the engine wiring harness to the engine coolant temperature (ECT) sensor.

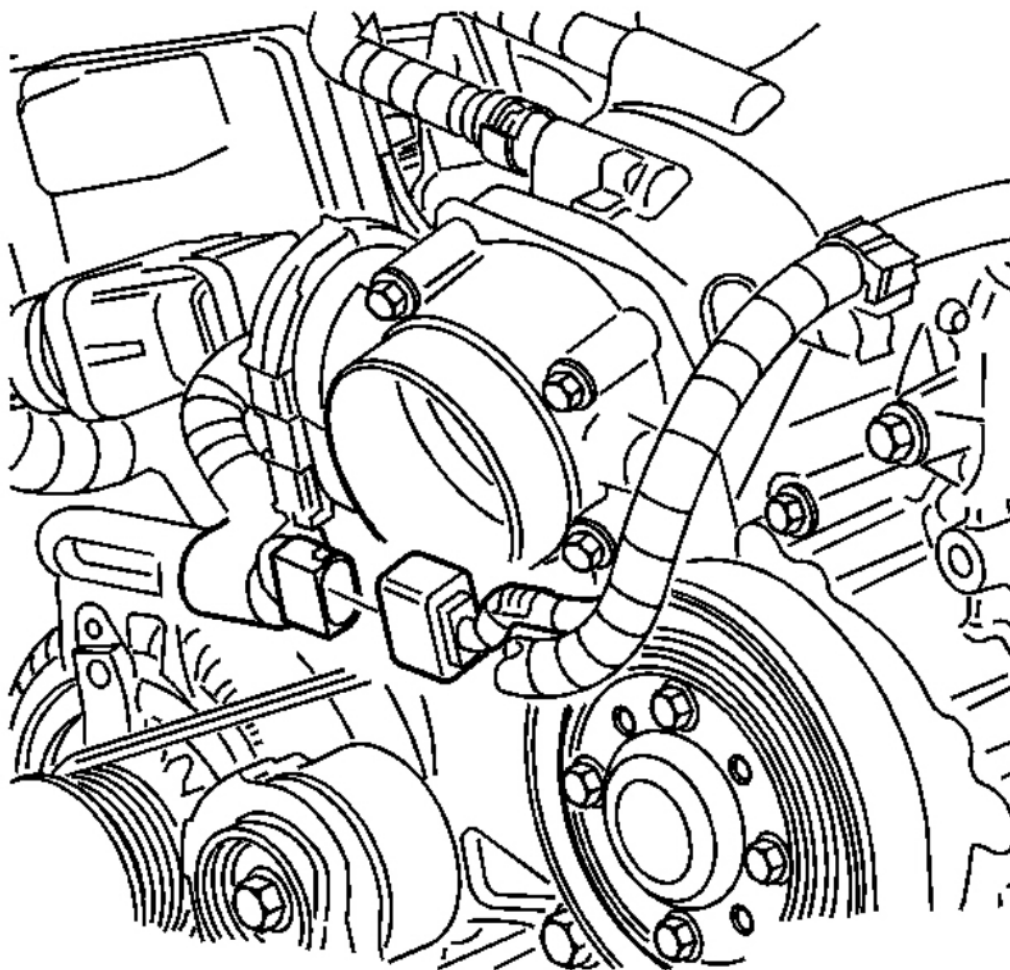


Fig. 49: View Of Throttle Body Electrical Connector
Courtesy of GENERAL MOTORS CORP.

NOTE: Ensure proper engagement of the wiring harness connector. The wiring harness connector must be installed straight onto the component connector and firmly seated. Visually inspect the connector to ensure that the connector latches are engaged and locked. Any damage to the connector or wiring must be repaired. Failure to follow this procedure can lead to an intermittent electrical connection, driveability concerns, and/or wiring harness or wiring harness connector damage or failure.

35. Connect the engine wiring harness to the starter motor solenoid.

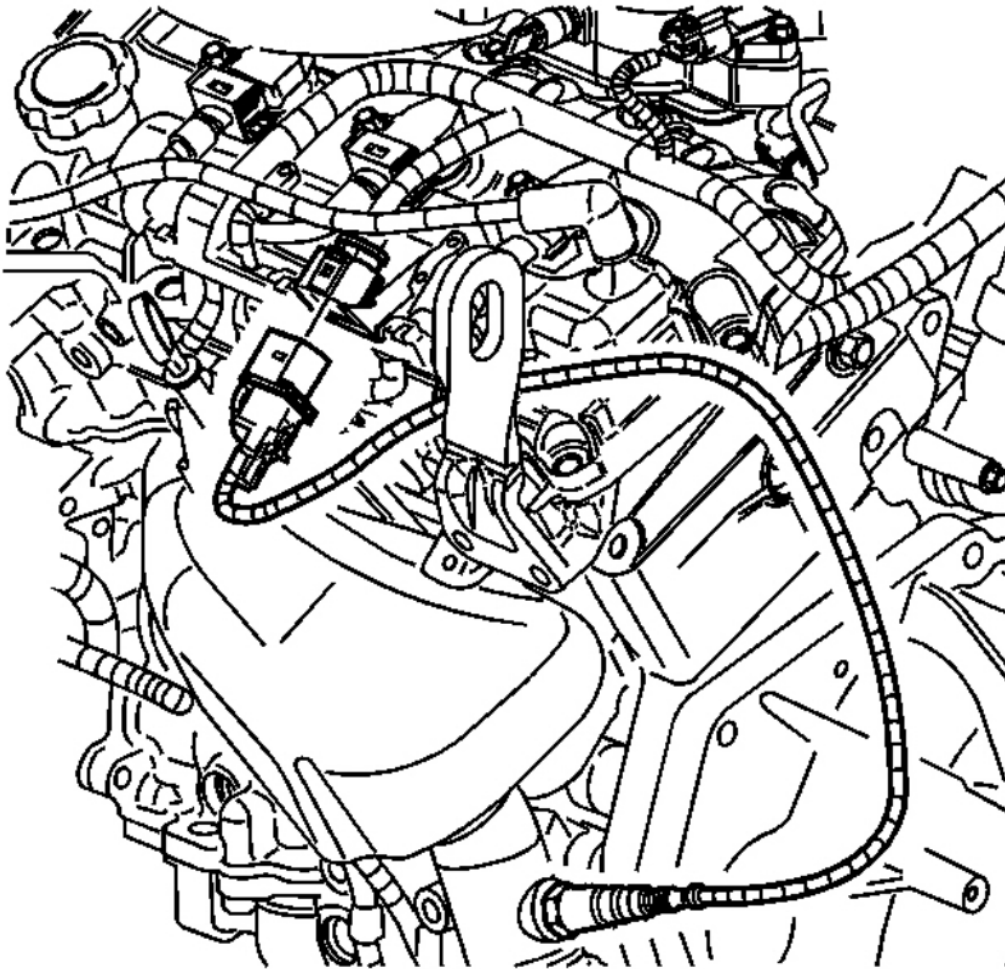


Fig. 51: View Of Left Oxygen Sensor Harness Wiring Harness Connector
Courtesy of GENERAL MOTORS CORP.

36. Connect the engine wiring harness to the left oxygen sensor harness.

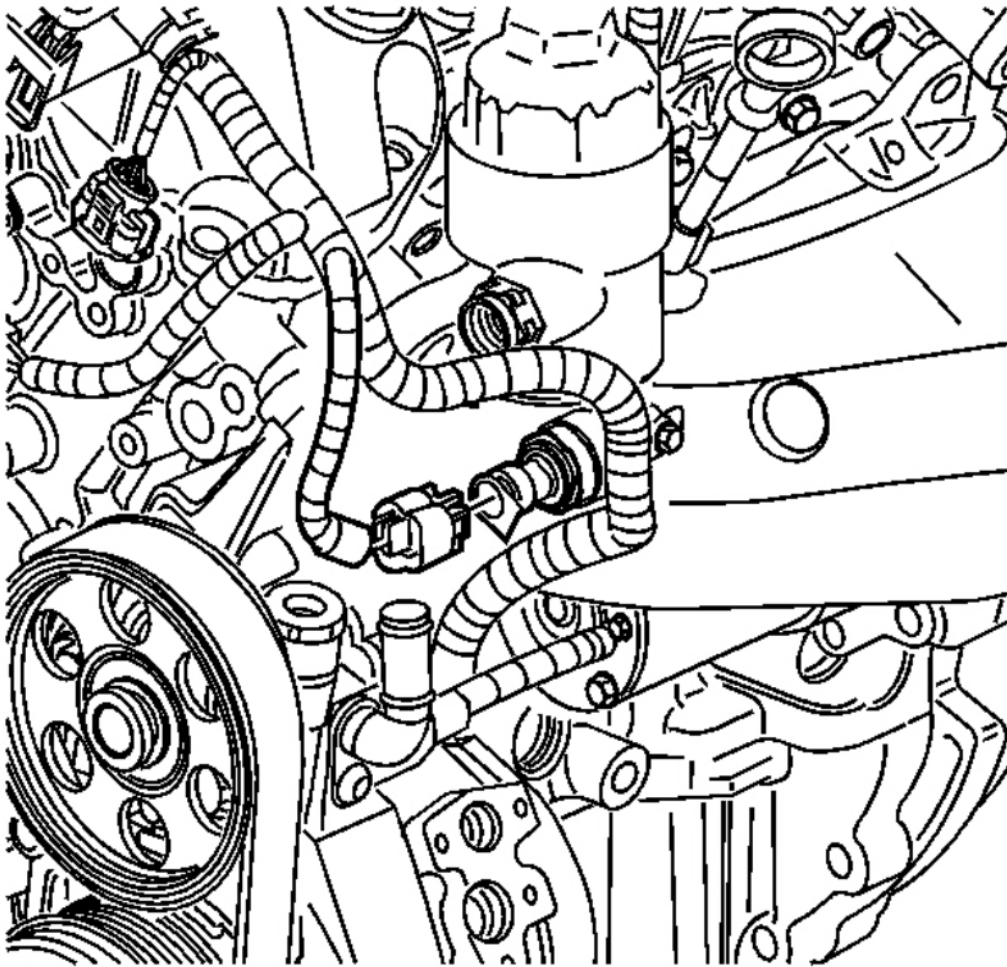


Fig. 52: View Of Oil Pressure Sender Wiring Harness Connector
Courtesy of GENERAL MOTORS CORP.

37. Connect the engine wiring harness to the oil pressure sender.

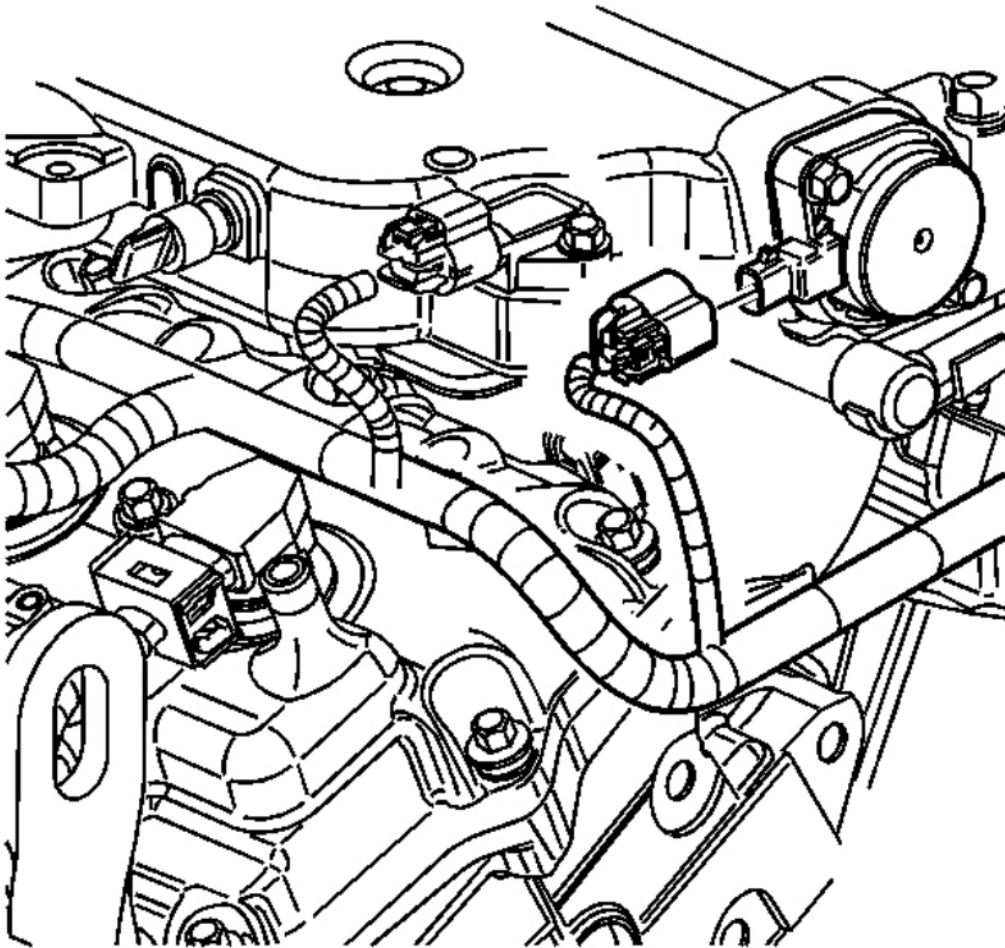


Fig. 53: View Of Communicator And Intake Manifold Runner Control Solenoid Electrical Connectors

Courtesy of GENERAL MOTORS CORP.

38. Connect the engine wiring harness to the communicator valve.

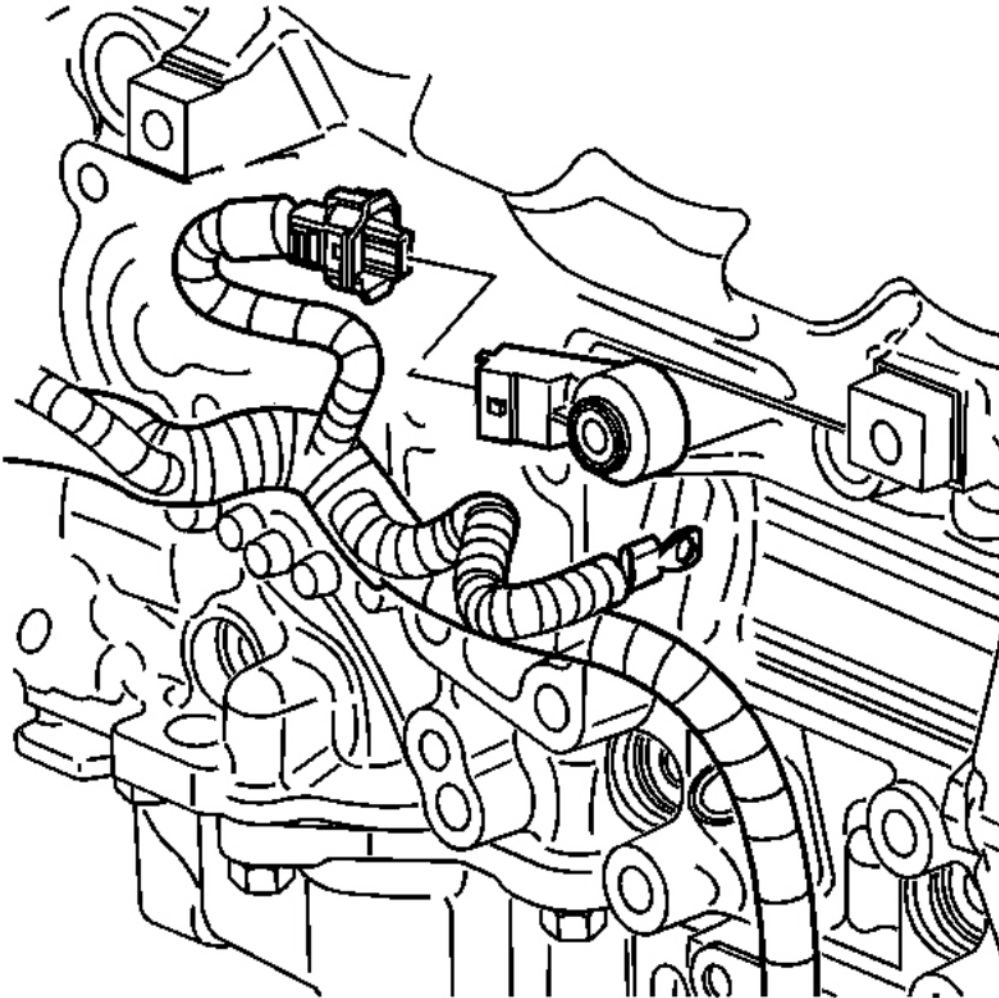


Fig. 54: View Of Left Knock Sensor And Electrical Connector
Courtesy of GENERAL MOTORS CORP.

39. Connect the engine wiring harness to the left knock sensor.

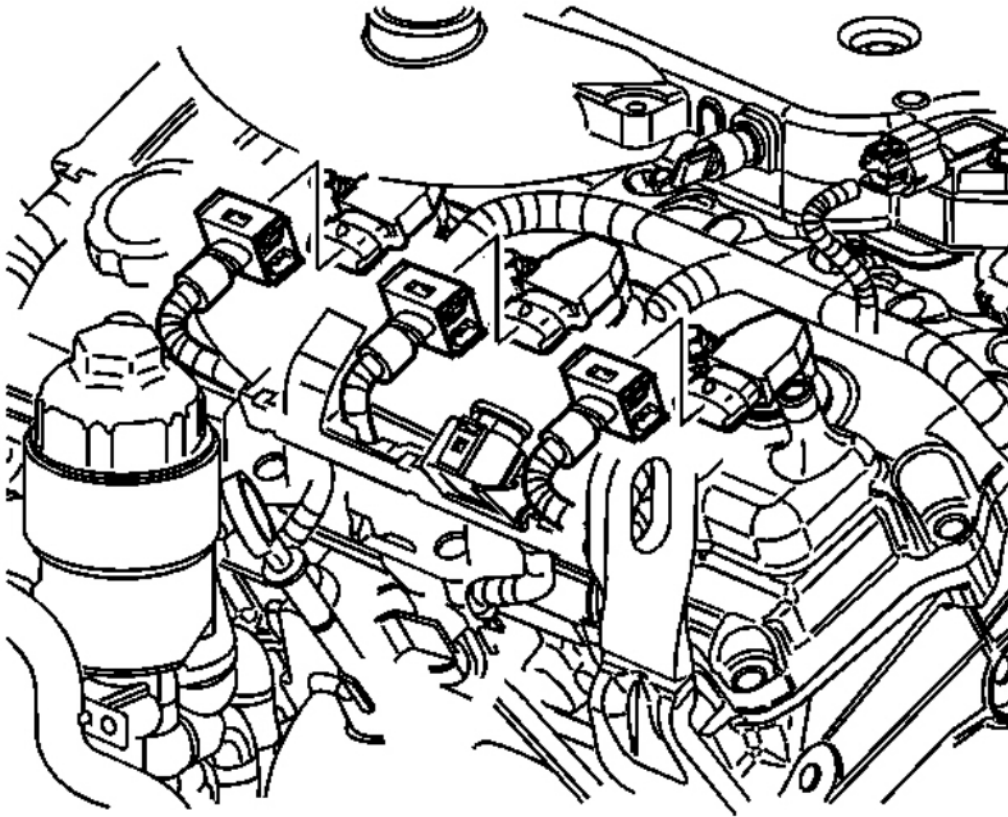


Fig. 55: View Of Left Ignition Coils Wiring Harness Connectors
Courtesy of GENERAL MOTORS CORP.

40. Connect the engine wiring harness to the left ignition coils.

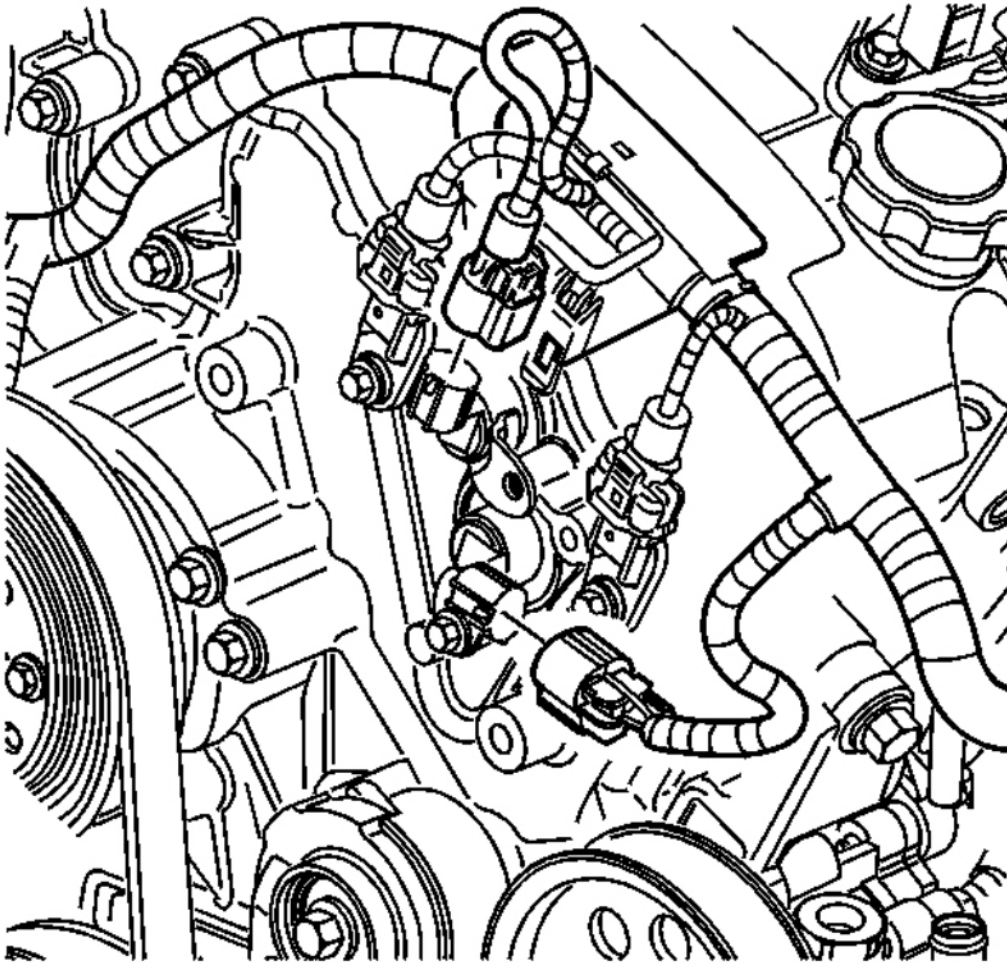


Fig. 56: View Of Left Camshaft Position Actuator Valves Wiring Harness Connector
Courtesy of GENERAL MOTORS CORP.

41. Connect the engine wiring harness to the left camshaft position actuator valves.

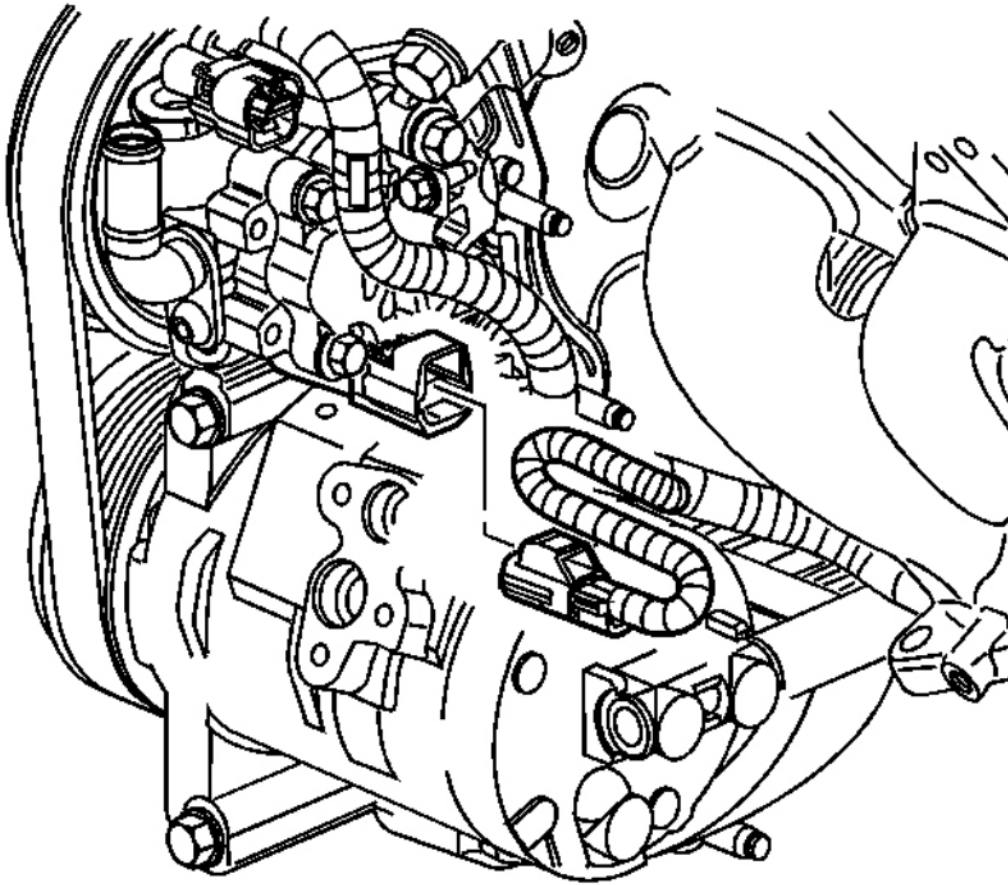


Fig. 57: View Of A/C Compressor Wiring Harness Connector
Courtesy of GENERAL MOTORS CORP.

42. Connect the engine wiring harness to the A/C compressor.

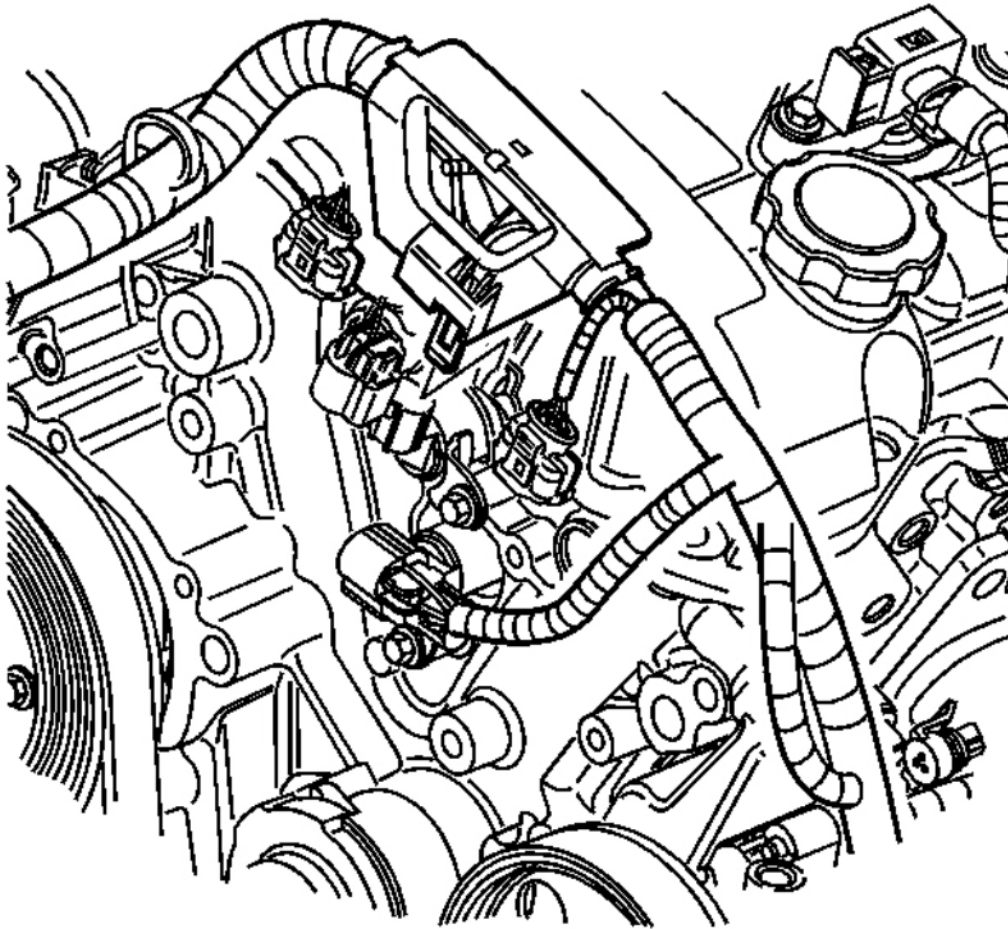


Fig. 58: View Of Left Camshaft Cover Wiring Harness Connector - Front
Courtesy of GENERAL MOTORS CORP.

43. Connect the engine wiring harness to the front of the left camshaft cover.

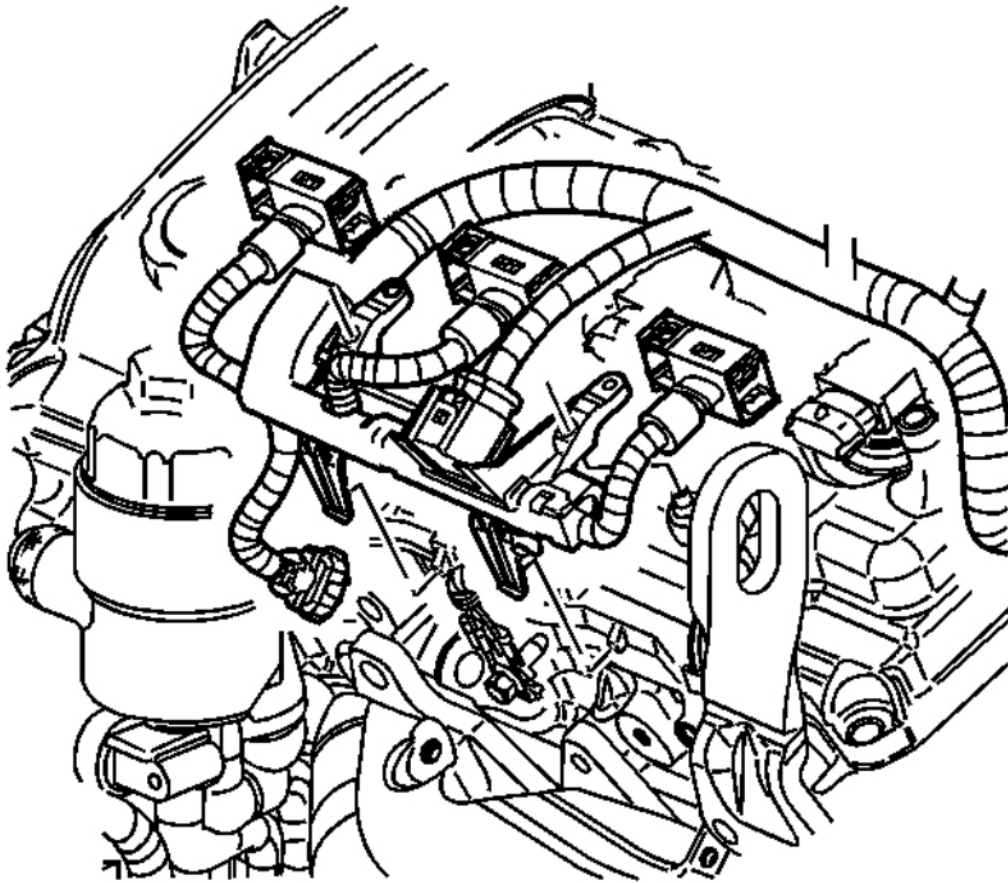


Fig. 59: View Of Left Camshaft Cover Wiring Harness Connectors
Courtesy of GENERAL MOTORS CORP.

44. Connect the engine wiring harness to the top of the left camshaft cover.

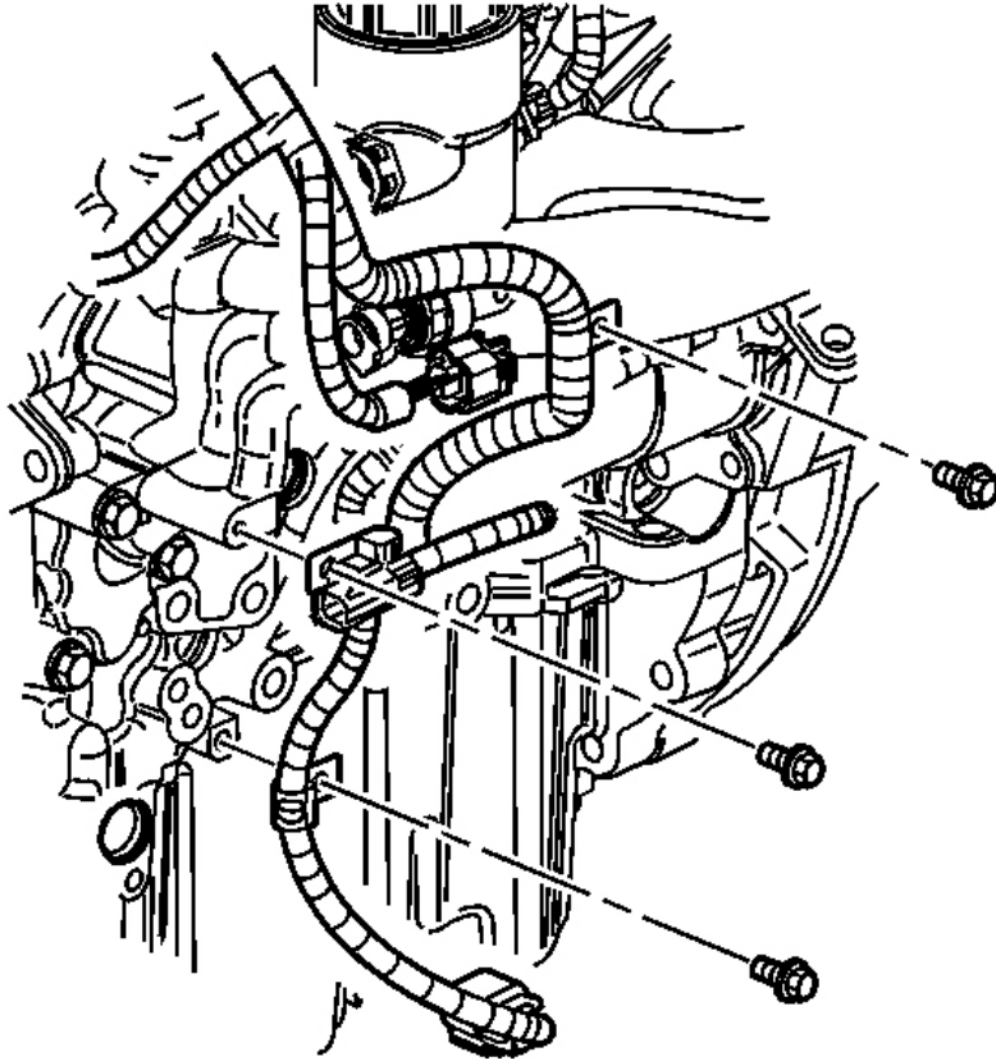


Fig. 60: View Of Engine Wiring Harness Connector - Lower Left
Courtesy of GENERAL MOTORS CORP.

45. Install the engine wiring harness bracket bolts to the lower left side of the engine.

Tighten: Tighten the engine wiring harness bracket bolts to 10 N.m (89 lb in).

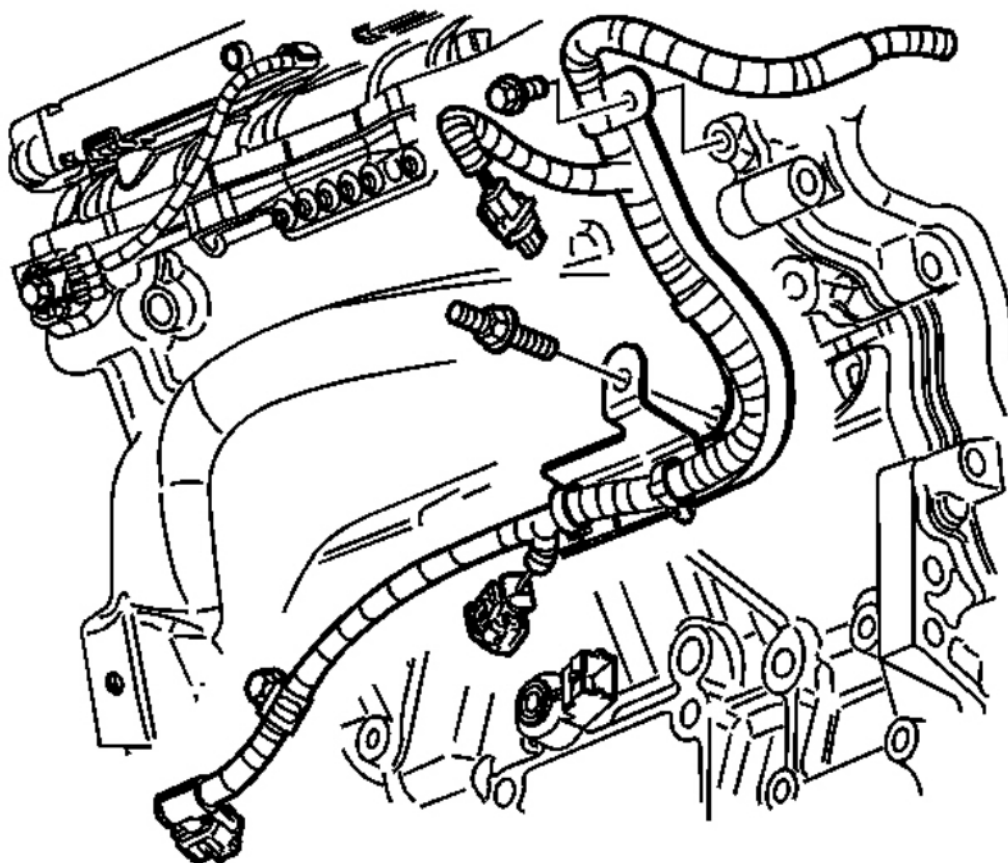


Fig. 61: Locating Engine Wiring Harness Bracket Bolt & Engine Wiring Harness Bracket Stud

Courtesy of GENERAL MOTORS CORP.

46. Install the engine wiring harness bracket bolt to the lower right side of the engine.

Tighten: Tighten the engine wiring harness bracket bolt to 10 N.m (89 lb in).

47. Install the engine wiring harness bracket stud to the lower right side of the engine.

Tighten: Tighten the engine wiring harness bracket stud to 22 N.m (16 lb ft).

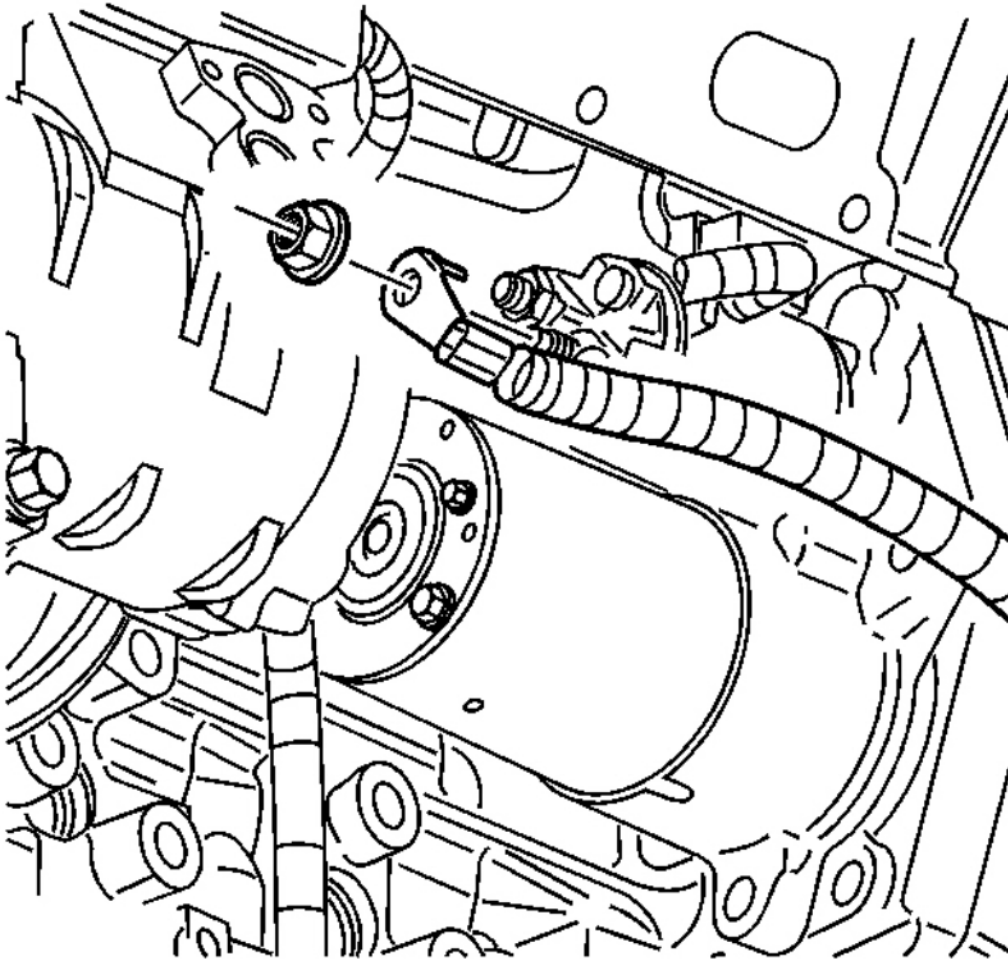


Fig. 62: View Of Starter Motor Battery Cable Harness Connector
Courtesy of GENERAL MOTORS CORP.

48. Connect the battery cable harness to the starter motor.

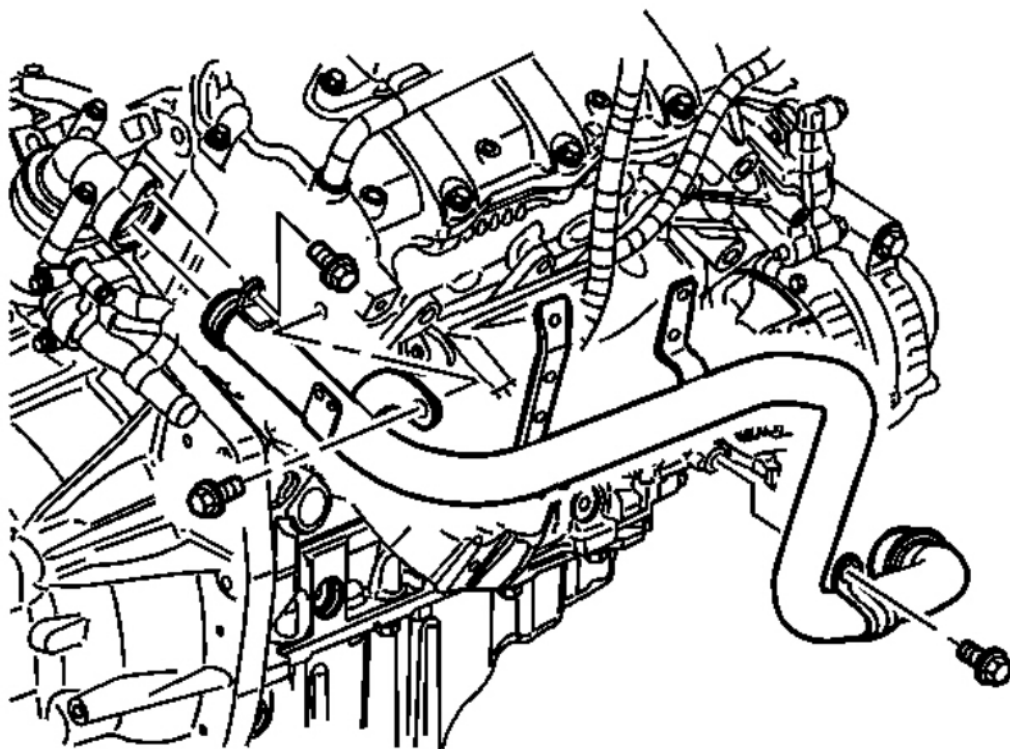


Fig. 63: View Of Radiator Outlet Pipe & Bolt
Courtesy of GENERAL MOTORS CORP.

49. Install the radiator outlet pipe.
50. Install the radiator outlet pipe bolt to the thermostat housing and the generator bracket.

Tighten: Tighten the radiator outlet pipe bolt to the thermostat housing and the generator bracket to 10 N.m (89 lb in).

51. Install the radiator outlet pipe bolt to the rear of the right cylinder head.

Tighten: Tighten the radiator outlet pipe bolt to 50 N.m (27 lb ft).

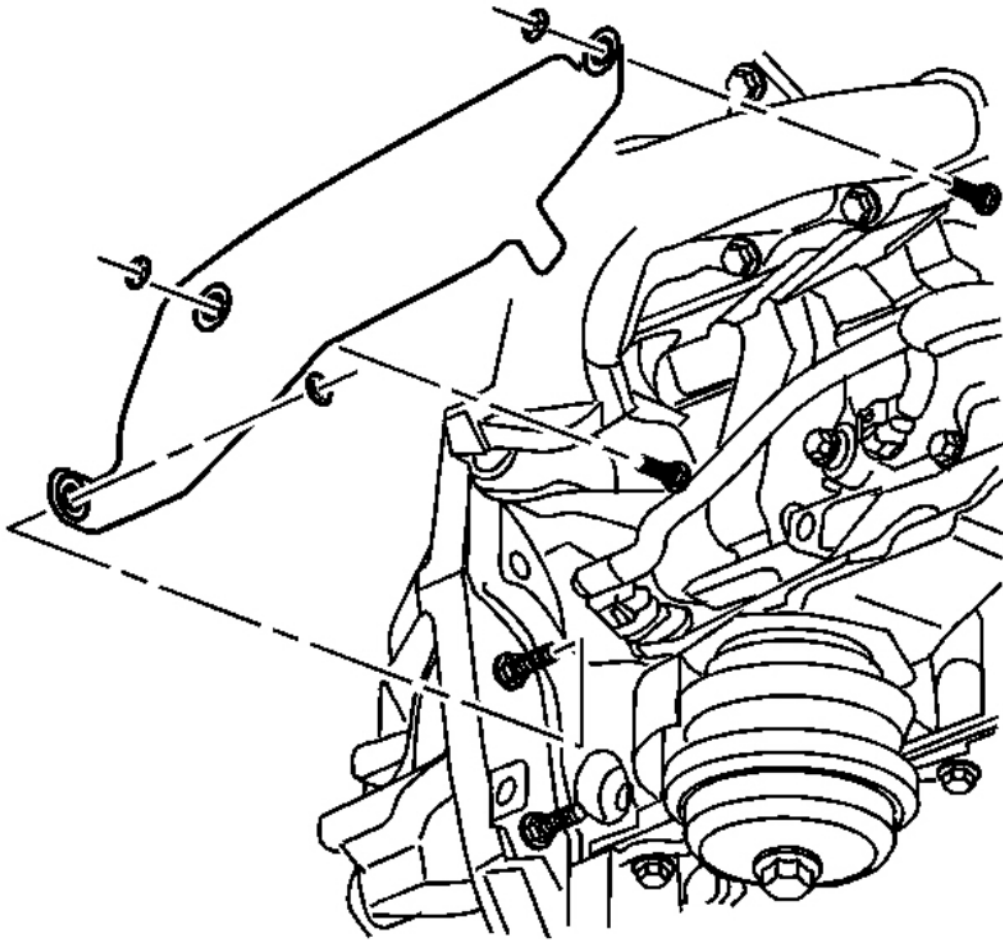


Fig. 64: View Of Right Exhaust Manifold Lower Insulator
Courtesy of GENERAL MOTORS CORP.

52. Install the right exhaust manifold lower insulator.
53. Install the right exhaust manifold lower insulator nuts.

Tighten: Tighten the right exhaust manifold lower insulator nuts to 10 N.m (89 lb in).

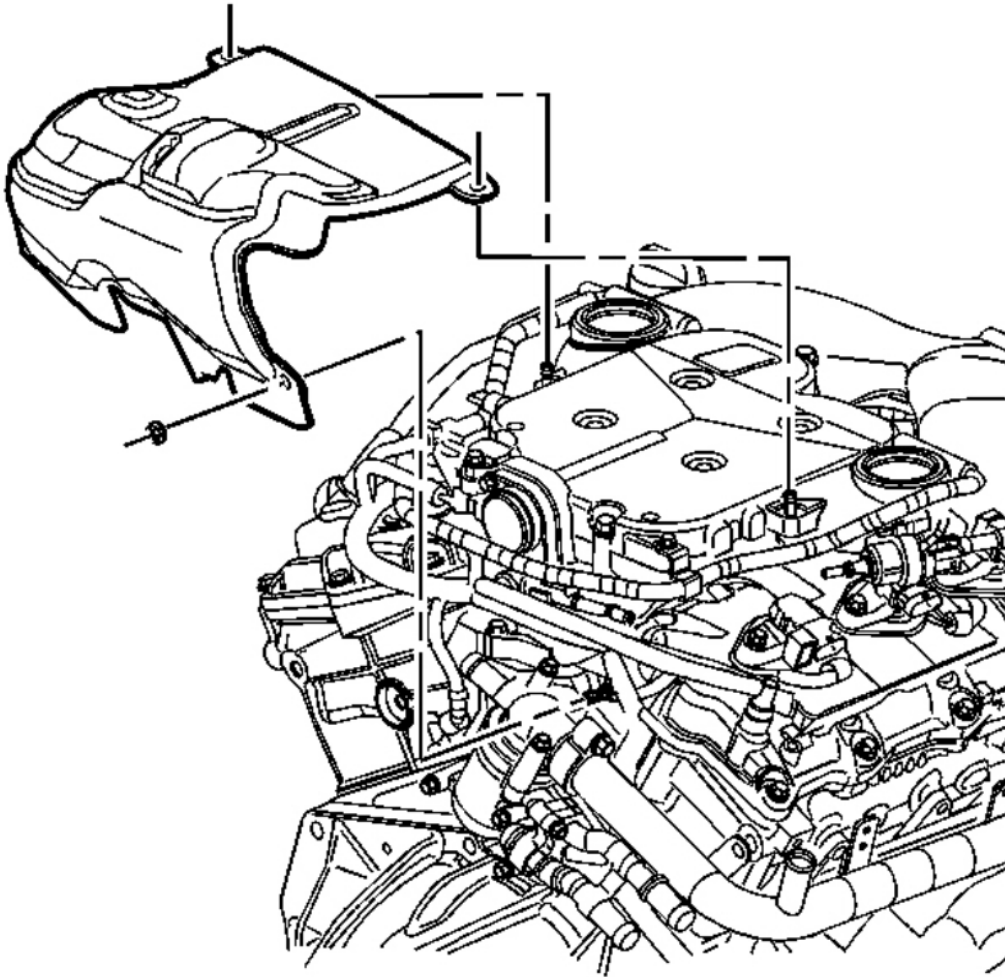


Fig. 65: View Of Intake Manifold Insulator
Courtesy of GENERAL MOTORS CORP.

54. Install the intake manifold insulator.
55. Install the intake manifold insulator nut.

Tighten: Tighten the intake manifold insulator nut to 10 N.m (89 lb in).

ENGINE PRELUBING

Tools Required:

J 45299 Engine Preluber

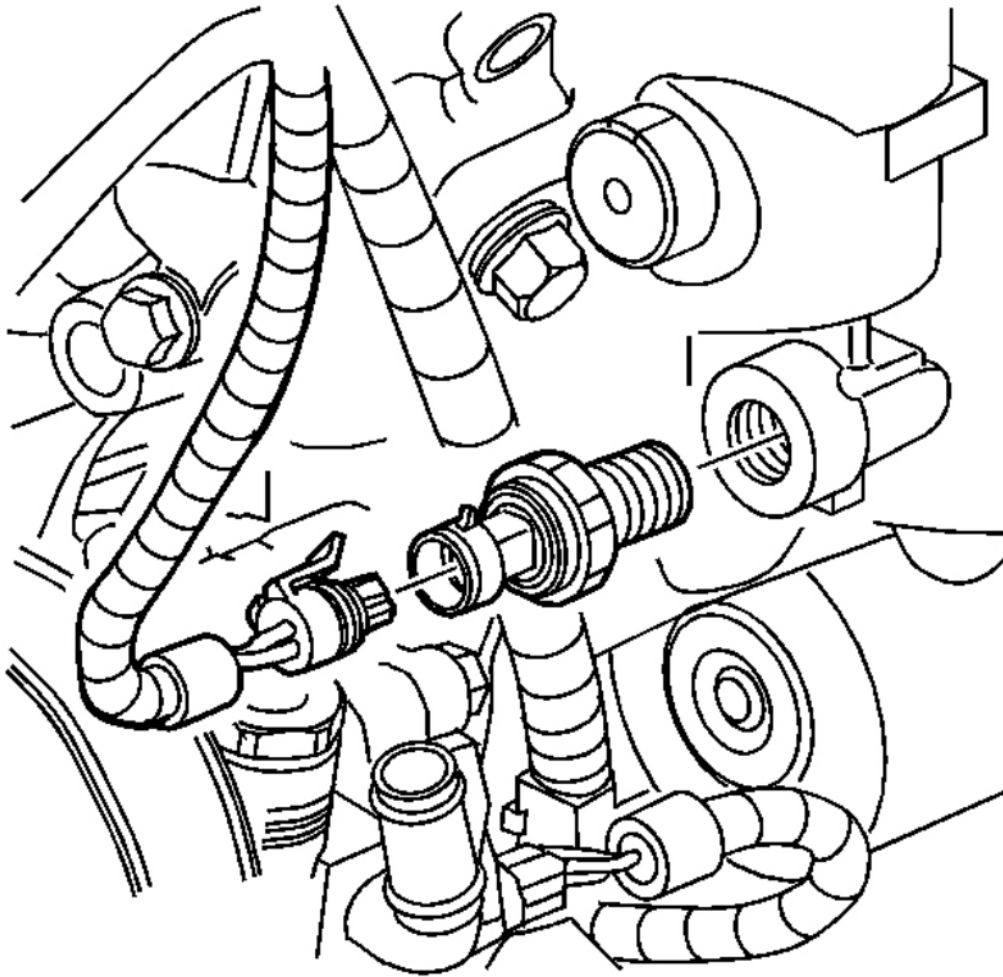


Fig. 66: View Of Oil Pressure Sending Unit
Courtesy of GENERAL MOTORS CORP.

IMPORTANT: A constant and continuous flow of clean engine oil is required in order to properly prime the engine. Be sure to use an approved engine oil as specified in the owners manual.

1. Remove the oil filter cap.
2. Install the NEW oil filter cartridge.

3. Lubricate the threads of the oil filter cap with clean engine oil.

NOTE: Refer to Fastener Notice in Cautions and Notices.

4. Install the oil filter cap.

Tighten: Tighten the oil filter cap to 25 N.m (18 lb ft).

5. Remove the oil pressure sending unit from the oil filter adapter.
6. Install the 14 x 1.5 mm adapter P/N 219433.

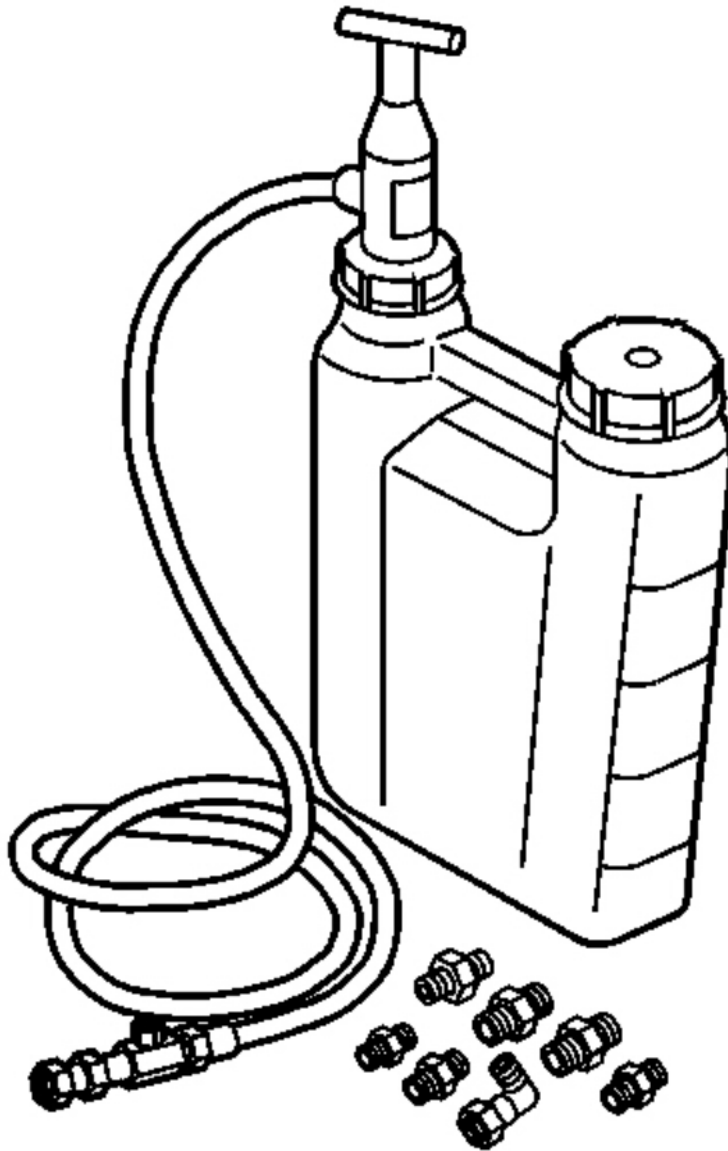


Fig. 67: Identifying Engine Preluber J 45299
Courtesy of GENERAL MOTORS CORP.

7. Install the flexible hose to the adapter and open the valve.
8. Pump the handle on the **J 45299** in order to flow a minimum of 1-1.9 liters (1-2 quarts) of

engine oil. Observe the flow of engine oil through the flexible hose and into the engine assembly.

9. Close the valve and remove the flexible hose and adapter from the engine.
10. Install the oil pressure sending unit.

Tighten: Tighten the oil pressure sending unit to 20 N.m (15 lb ft).

11. Top-off the engine oil to the proper level.