

1 Earth points

- ◆ ⇒ [“1.1 Earth points in front part of vehicle”, page 2](#)
- ◆ ⇒ [“1.2 Earth points in middle part of vehicle”, page 11](#)
- ◆ ⇒ [“1.3 Earth points in rear part of vehicle”, page 16](#)

Component	Chapter	Comment
14 Earth point, on gearbox	⇒ “1.1.6 Dual clutch gearbox 0CW”, page 8	Torque 20 Nm
14 Earth point, on gearbox	⇒ “1.1.7 Dual clutch gearbox 0D9”, page 9	Torque 20 Nm
14 Earth point, on gearbox	⇒ “1.1.8 Manual gearbox”, page 10	Torque 20 Nm
15 Earth point on cylinder head	⇒ “1.1.3 1.0l petrol engine, DKJA, DKLA, DKRF”, page 5	Torque 9 Nm
43 Earth point, lower part of right A-pillar	⇒ “1.2.3 Front right of interior, LHD models”, page 14	Torque 9 Nm
44 Earth point, lower part of left A-pillar	⇒ “1.2.2 Front left of interior, RHD models”, page 13	Torque 9 Nm
50 Earth point on left in luggage compartment	⇒ “1.3.1 Left luggage compartment”, page 16	Torque 9 Nm
51 Earth point, on right in luggage compartment	⇒ “1.3.2 Right luggage compartment, rear lid”, page 17	Torque 9 Nm
62 Earth point, right C-pillar	⇒ “1.3.2 Right luggage compartment, rear lid”, page 17	Torque 2 Nm
75 Earth point, rear right pillar	⇒ “1.3.2 Right luggage compartment, rear lid”, page 17	Torque 9 Nm
612 Earth point, centre on rear lid	⇒ “1.3.2 Right luggage compartment, rear lid”, page 17	Torque 2 Nm
624 Earth point next to starter battery	⇒ “1.1.2 Front from right”, page 4	Torque 9 Nm
638 Earth point, on right A-pillar	⇒ “1.2.3 Front right of interior, LHD models”, page 14	Torque 9 Nm
638 Earth point, on right A-pillar	⇒ “1.2.4 Front right of interior, RHD models”, page 15	Torque 9 Nm
639 Earth point, on left A-pillar	⇒ “1.2.1 Front left of interior, LHD models”, page 11	Torque 9 Nm
639 Earth point, on left A-pillar	⇒ “1.2.2 Front left of interior, RHD models”, page 13	Torque 9 Nm
652 Earth point for engine and gearbox earth	⇒ “1.1.2 Front from right”, page 4	Torque 20 Nm
655 Earth point, on left headlight	⇒ “1.1.1 Front from left”, page 2	Torque 9 Nm
656 Earth point, on right headlight	⇒ “1.1.2 Front from right”, page 4	Torque 9 Nm
673 Earth point 3 on front of left longitudinal member	⇒ “1.1.1 Front from left”, page 2	Torque 9 Nm
685 Earth point 1 on front of right longitudinal member	⇒ “1.1.1 Front from left”, page 2	Torque 9 Nm
797 Earth point on cylinder block for ignition coil, cylinders 1 and 2	⇒ “1.1.4 1.5l petrol engine, DADA, DPCA”, page 6	Torque 9 Nm
798 Earth point on cylinder block for ignition coil, cylinders 3 and 4	⇒ “1.1.4 1.5l petrol engine, DADA, DPCA”, page 6	Torque 9 Nm
810 Earth point on central tube for dash panel, centre left	⇒ “1.2.1 Front left of interior, LHD models”, page 11	Torque 9 Nm

Component	Chapter	Comment
811 right Earth point on central tube for dash panel, centre	⇒ “1.2.4 Front right of interior, RHD models”, page 15	Torque 9 Nm
846 Earth point on ignition coil 1	⇒ “1.1.5 2.0l petrol engine, CZPC, DKZC”, page 7	Torque 9 Nm
847 Earth point on ignition coil 2	⇒ “1.1.5 2.0l petrol engine, CZPC, DKZC”, page 7	Torque 9 Nm
848 Earth point on ignition coil 3	⇒ “1.1.5 2.0l petrol engine, CZPC, DKZC”, page 7	Torque 9 Nm
849 Earth point on ignition coil 4	⇒ “1.1.5 2.0l petrol engine, CZPC, DKZC”, page 7	Torque 9 Nm
1 Earth strap, battery - body	⇒ “1.3.2 Right luggage compartment, rear lid”, page 17	Torque 20 Nm

1.1 Earth points in front part of vehicle

- ◆ ⇒ [“1.1.1 Front from left”, page 2](#)
- ◆ ⇒ [“1.1.2 Front from right”, page 4](#)
- ◆ ⇒ [“1.1.3 1.0l petrol engine, DKJA, DKLA, DKRF”, page 5](#)
- ◆ ⇒ [“1.1.4 1.5l petrol engine, DADA, DPCA”, page 6](#)
- ◆ ⇒ [“1.1.5 2.0l petrol engine, CZPC, DKZC”, page 7](#)
- ◆ ⇒ [“1.1.6 Dual clutch gearbox 0CW”, page 8](#)
- ◆ ⇒ [“1.1.7 Dual clutch gearbox 0D9”, page 9](#)
- ◆ ⇒ [“1.1.8 Manual gearbox”, page 10](#)

1.1.1 Front from left

655 - Earth point, on left headlight

□ Torque 9 Nm

673 - Earth point 3, on front of left longitudinal member


□ Torque 9 Nm

685 - Earth point 1, on front of right longitudinal member

□ Torque 9 Nm



Protected by copyright. Copying for private or commercial purposes is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

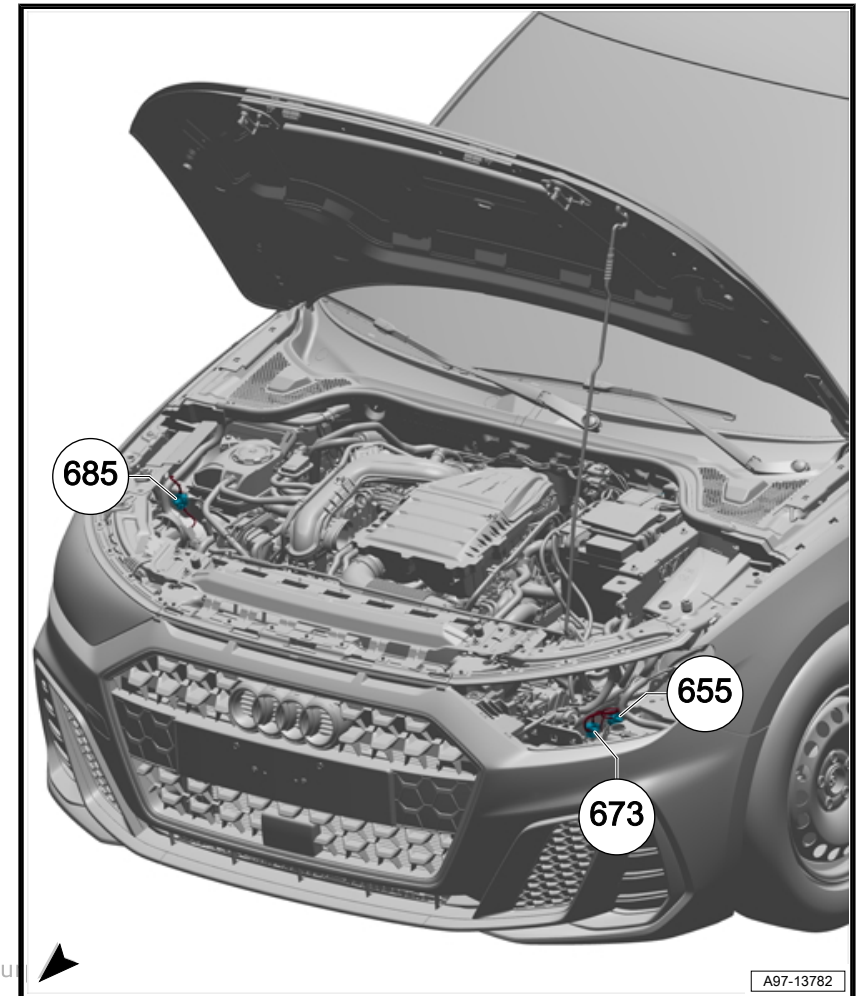

1.1.2 Front from right

624 - Earth point, starter battery

- Torque 9 Nm


652 - Earth point, engine and gearbox earth

- Torque 20 Nm

656 - Earth point, on right headlight

- Torque 9 Nm

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is prohibited without the prior written permission of Audi AG. Audi AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Audi AG.

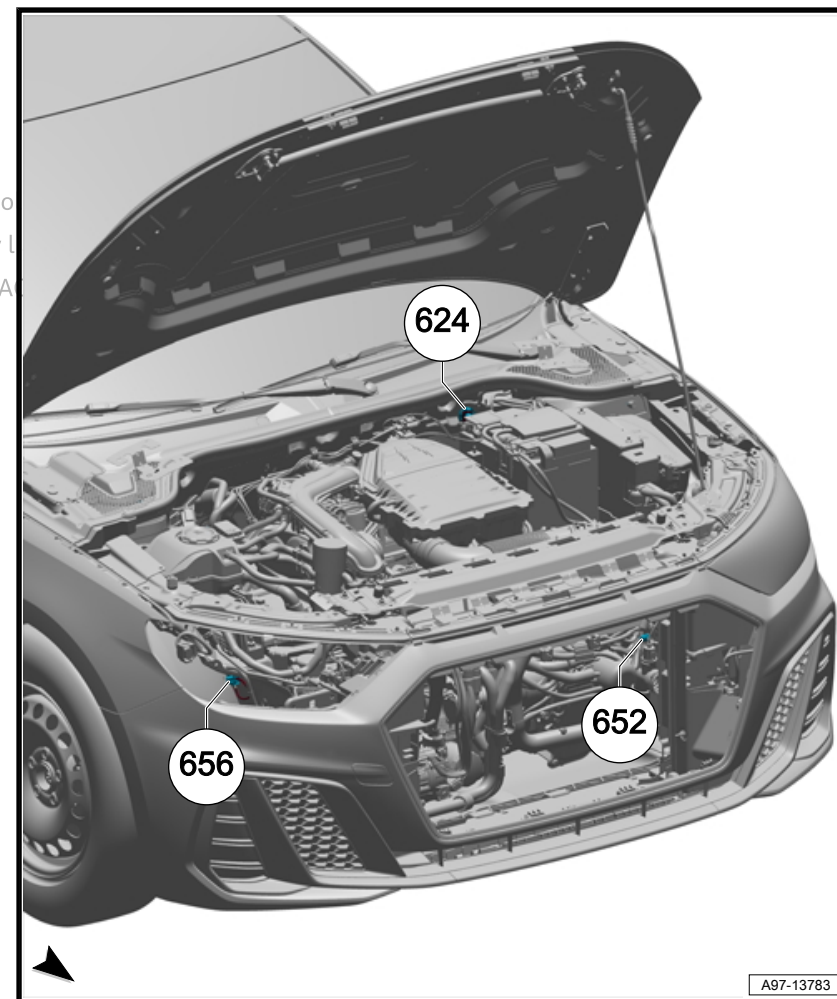

A97-13783

1.1.3 1.0l petrol engine, DKJA, DKLA, DKRF



Note


For models with 1.0l petrol engine, DKJA, DKLA, DKRF

15 - Earth point, on cylinder head

- Torque 9 Nm



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

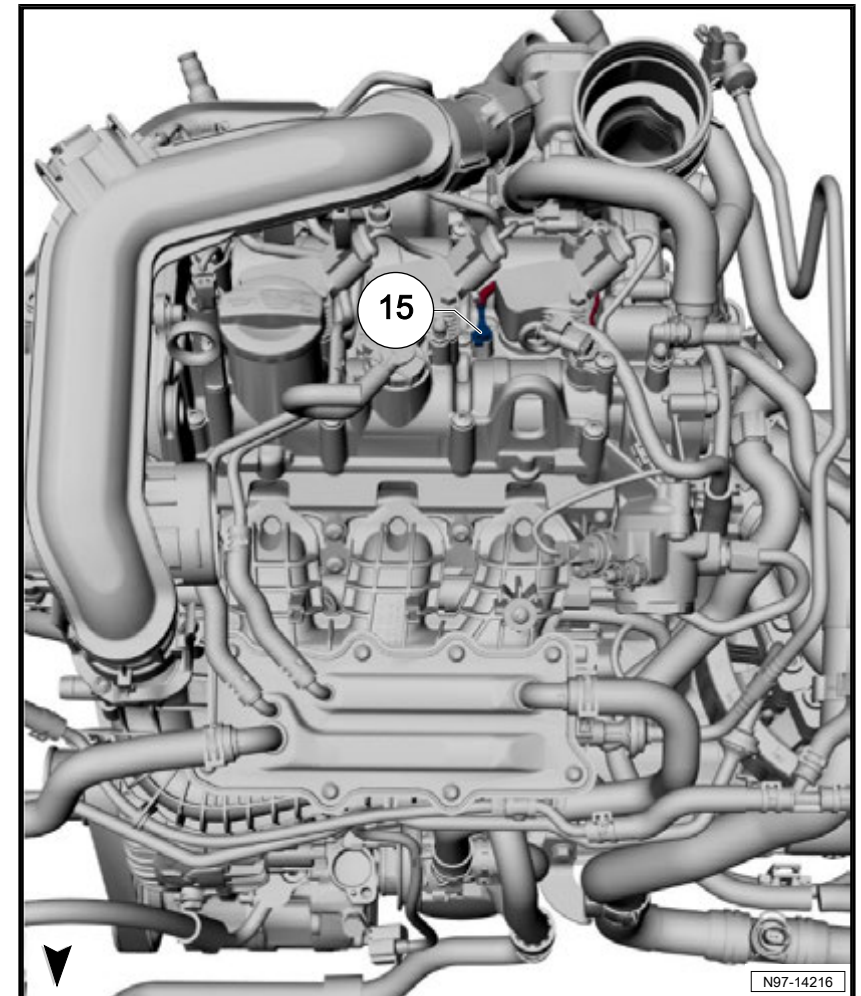

1.1.4 1.5l petrol engine, DADA, DPCA



Note

For models with 1.5l petrol engine, DADA, DPCA

797 - Earth point on cylinder block for ignition coil, cylinders 1 and 2


□ Torque 9 Nm

798 - Earth point on cylinder block for ignition coil, cylinders 3 and 4

□ Torque 9 Nm



Protected by copyright. Copying for private or permitted unless authorised by AUDI AG. AUD with respect to the correctness of information

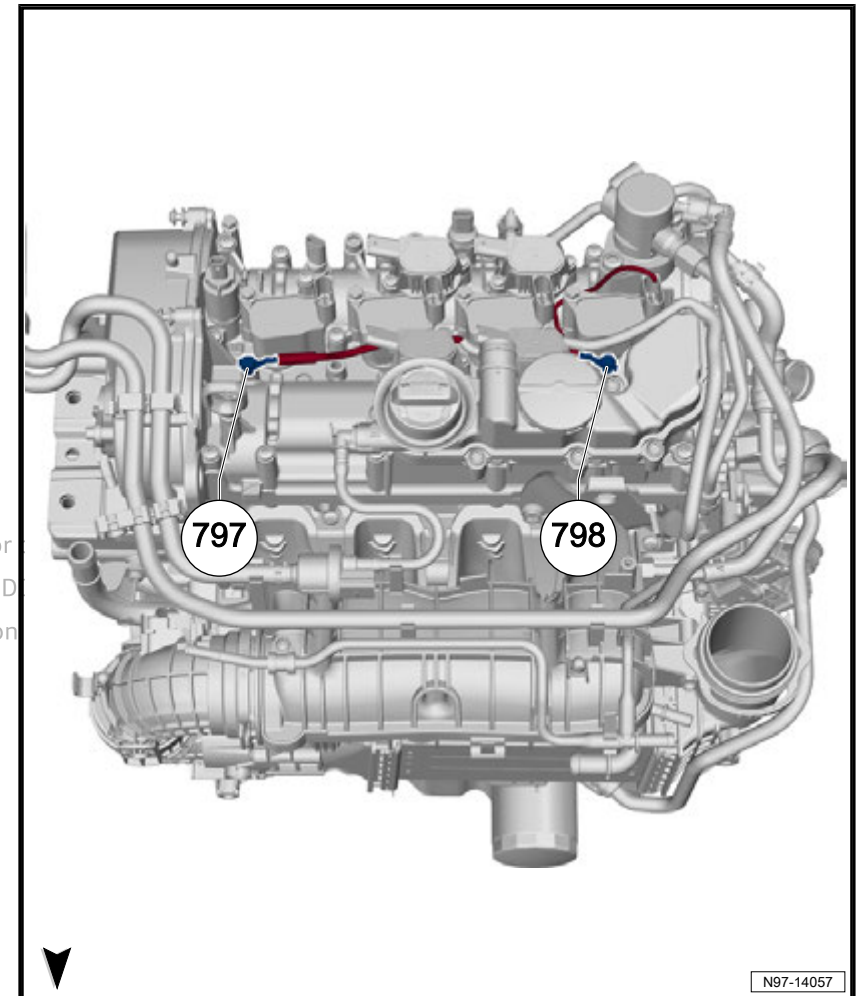

1.1.5 2.0l petrol engine, CZPC, DKZC



Note

For models with 2.0l petrol engine, CZPC, DKZC



Protected by copyright. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without prior written permission from the copyright owner.

846 - Earth point on ignition coil 1

- ☐ Torque 9 Nm

847 - Earth point on ignition coil 2


- ☐ Torque 9 Nm

848 - Earth point on ignition coil 3

- ☐ Torque 9 Nm

849 - Earth point on ignition coil 4

- ☐ Torque 9 Nm

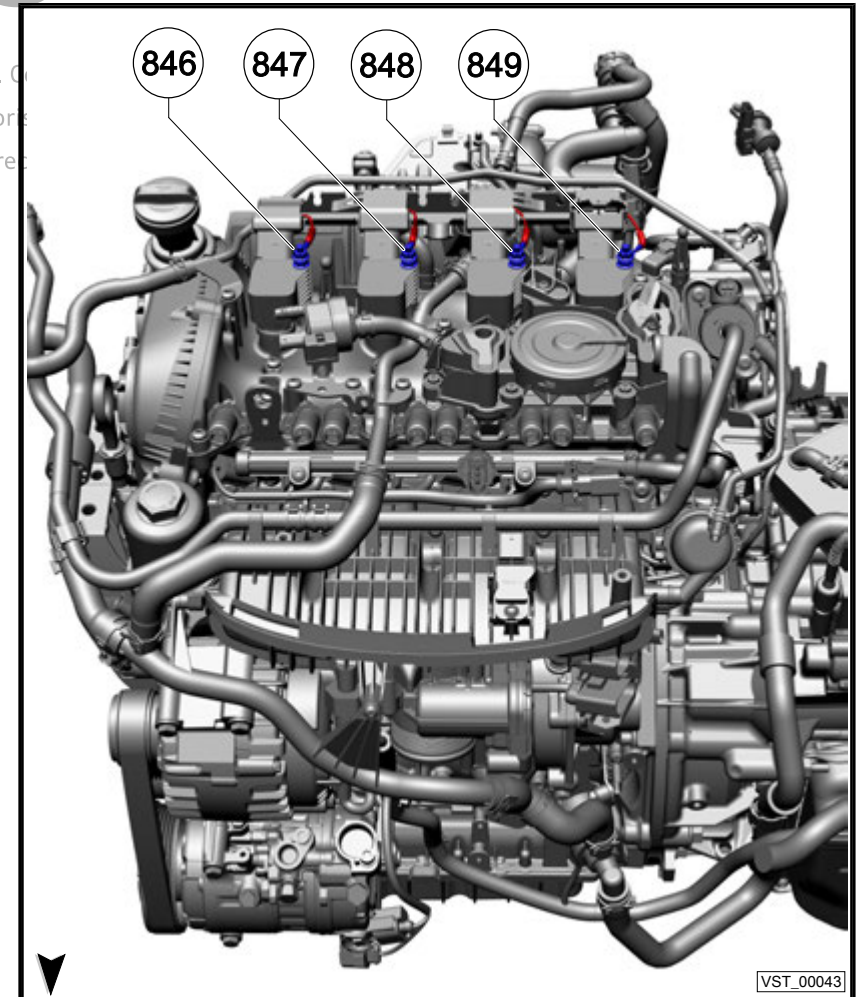

1.1.6 Dual clutch gearbox, 0CW




Note

For models with dual clutch gearbox, 0CW

14 - Earth point, on gearbox

- Torque 20 Nm

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

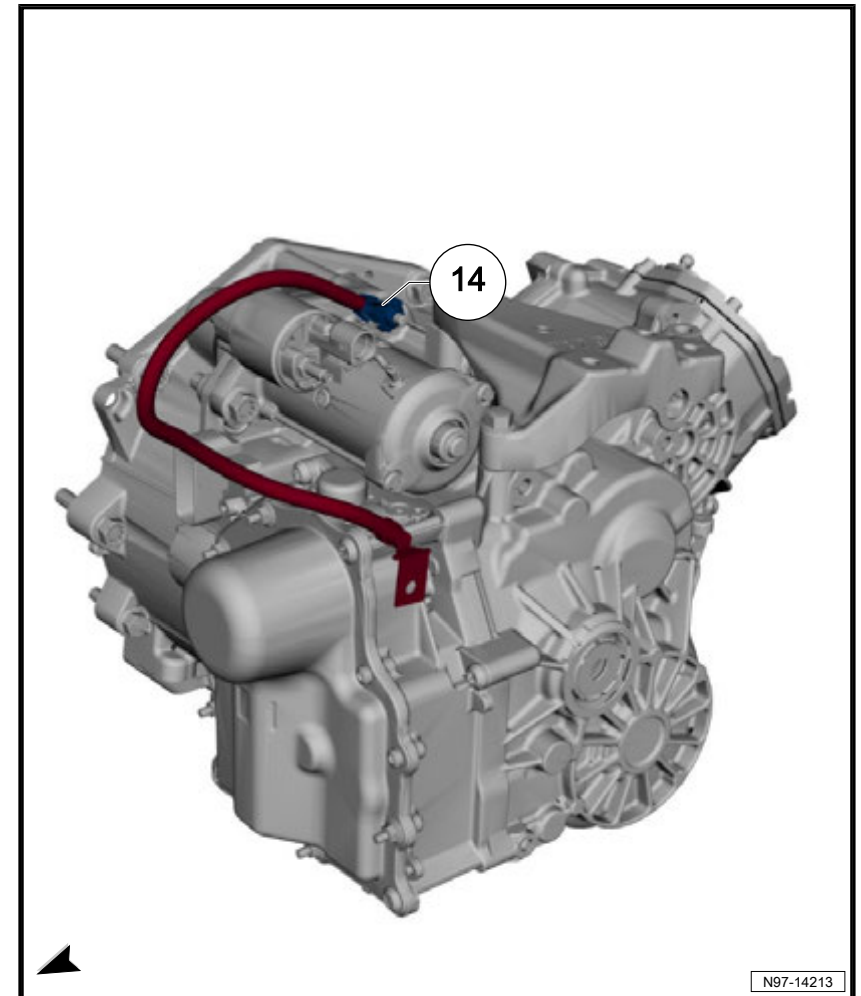

1.1.7 Dual clutch gearbox, 0D9



Note


For models with dual clutch gearbox, 0D9

14 - Earth point, on gearbox

□ Torque 20 Nm



Protected by copyright. Copying for private or commercial purpose permitted unless authorised by AUDI AG. AUDI AG does not guarantee with respect to the correctness of information in this document. C

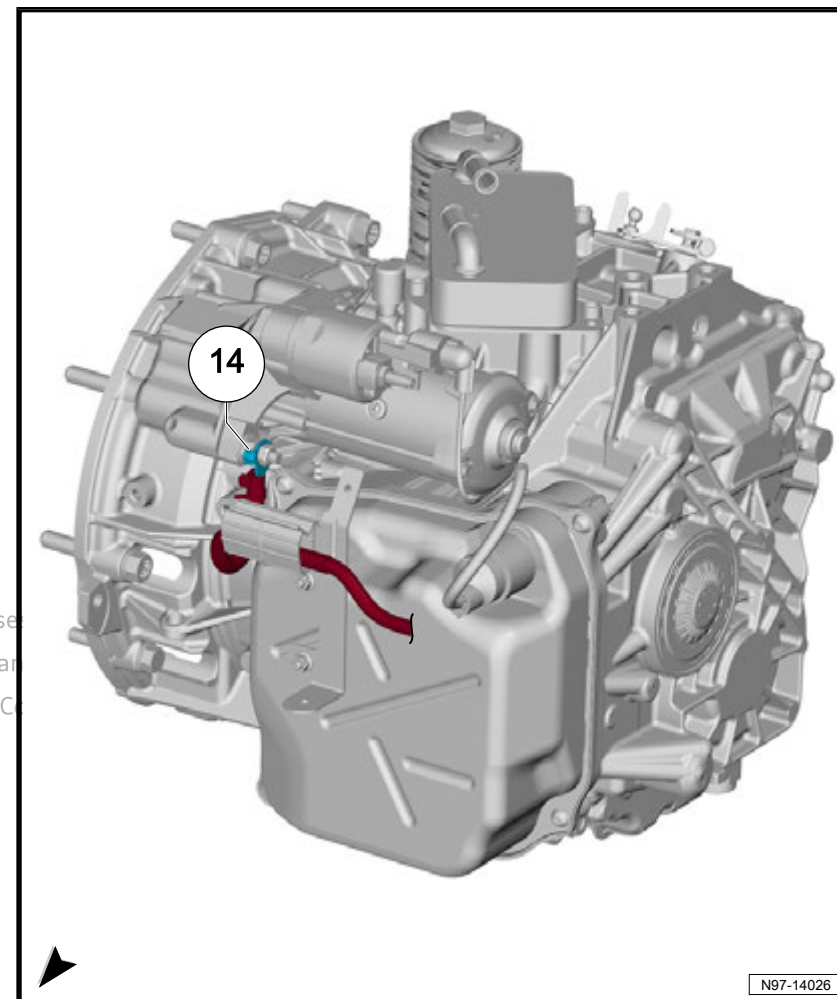

N97-14026

1.1.8 Manual gearbox



Note


For models with manual gearbox

14 - Earth point, on gearbox

□ Torque 20 Nm



Protected by copyright. Copying for private or commercial permitted unless authorised by AUDI AG. AUDI AG does not with respect to the correctness of information in this document.

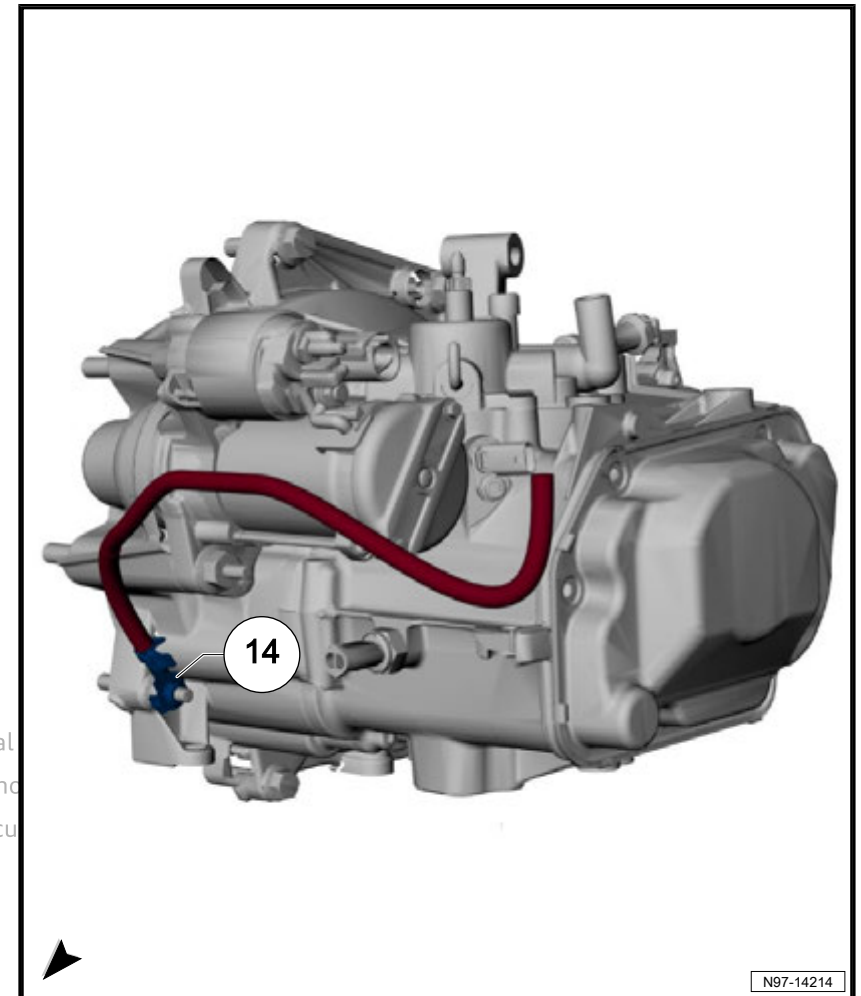

N97-14214

1.2 Earth points in middle part of vehicle

- ◆ ⇒ [“1.2.1 Front left of interior, LHD models”, page 11](#)
- ◆ ⇒ [“1.2.2 Front left of interior, RHD models”, page 13](#)
- ◆ ⇒ [“1.2.3 Front right of interior, LHD models”, page 14](#)
- ◆ ⇒ [“1.2.4 Front right of interior, RHD models”, page 15](#)

1.2.1 Front left of interior, LHD models



Note

For left-hand drive models



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

639 - Earth point, left A-pillar


- Torque 9 Nm

810 - Earth point on central tube for dash panel, centre left

- Torque 9 Nm



Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document.

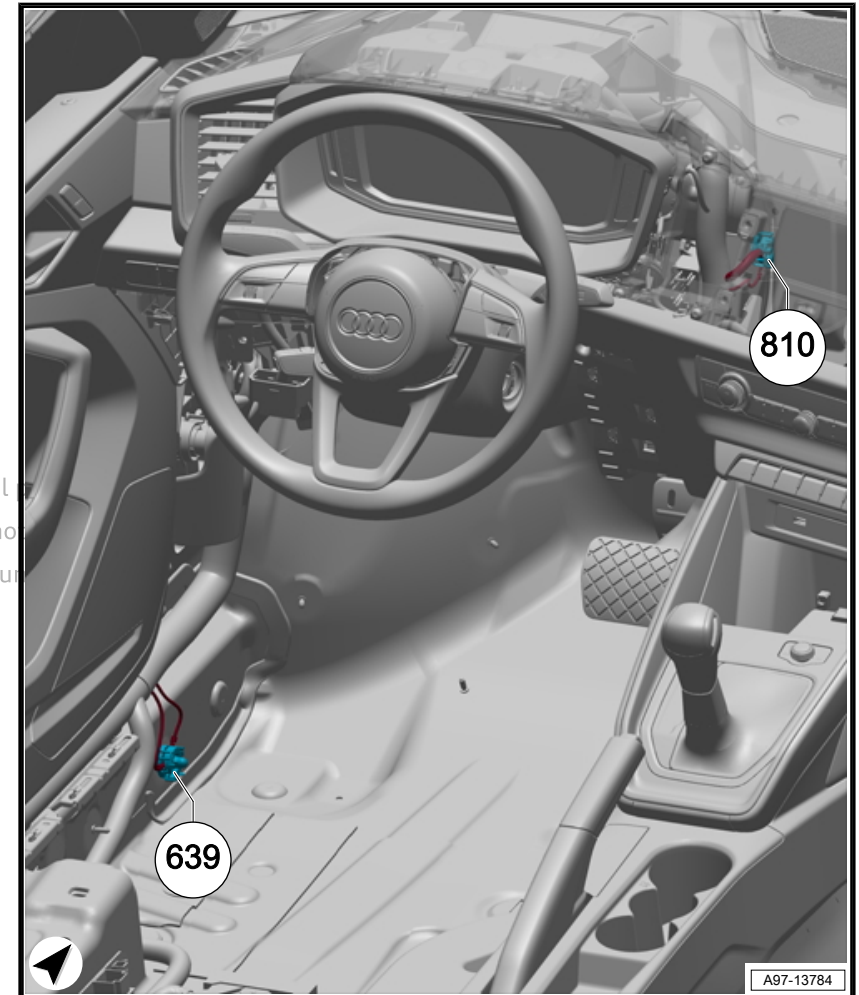

1.2.2 Front left of interior, RHD models



Note

For right-hand drive models

44 - Earth point, lower part of left A-pillar


□ Torque 9 Nm

639 - Earth point, left A-pillar

□ Torque 9 Nm



Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document.

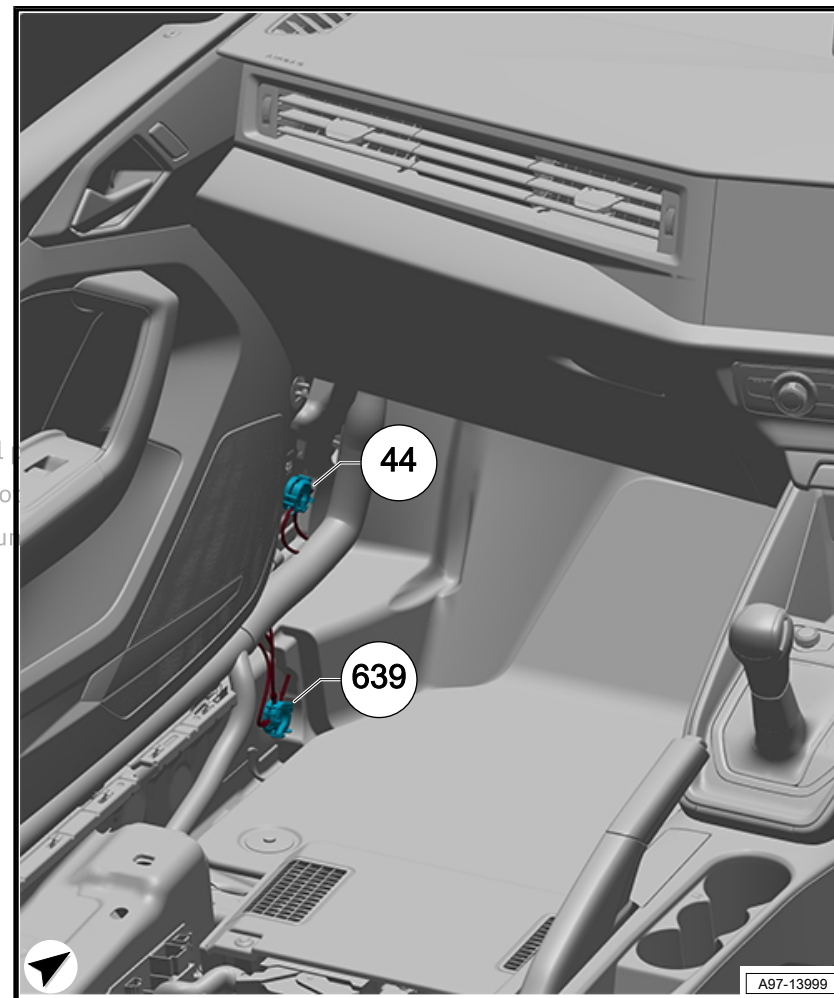

1.2.3 Front right of interior, LHD models



Note


For left-hand drive models

43 - Earth point, lower part of right A-pillar

□ Torque 9 Nm

638 - Earth point, on right A-pillar

□ Torque 9 Nm

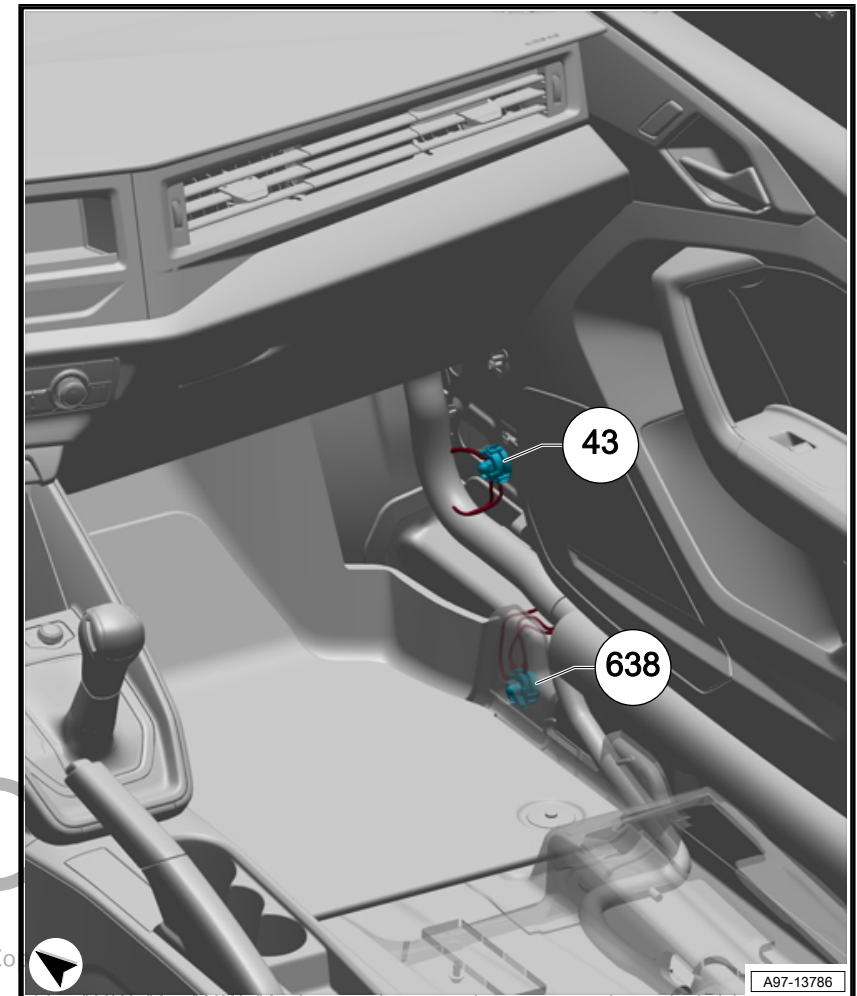

Protected by copyright. Copying or reproduction is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1.2.4 Front right of interior, RHD models




For right-hand drive models

638 - Earth point, on right A-pillar

- ☐ Torque 9 Nm

811 - Earth point on central tube for dash panel, centre right

- ☐ Torque 9 Nm
- Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the prior written permission of AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

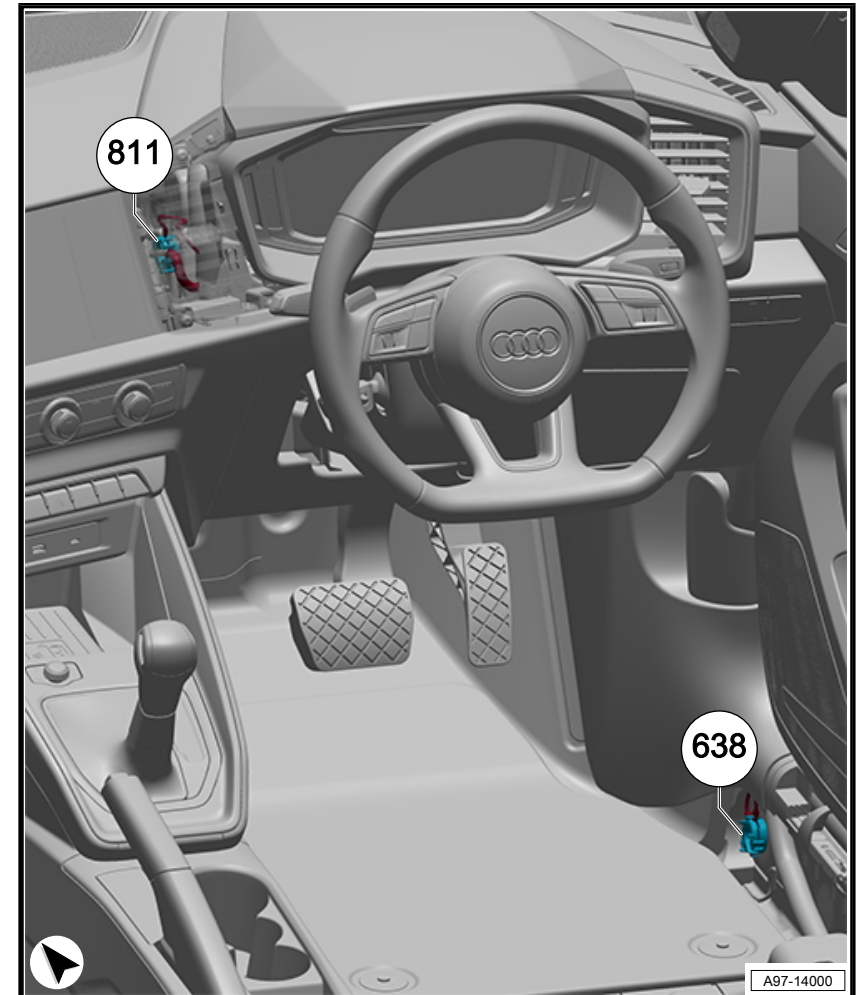


1.3 Earth points in rear part of vehicle

- ◆ ⇒ [“1.3.1 Left luggage compartment”, page 16](#)
- ◆ ⇒ [“1.3.2 Right luggage compartment, rear lid”, page 17](#)

1.3.1 Left luggage compartment

50 - Earth point, on left in luggage compartment

- Torque 9 Nm

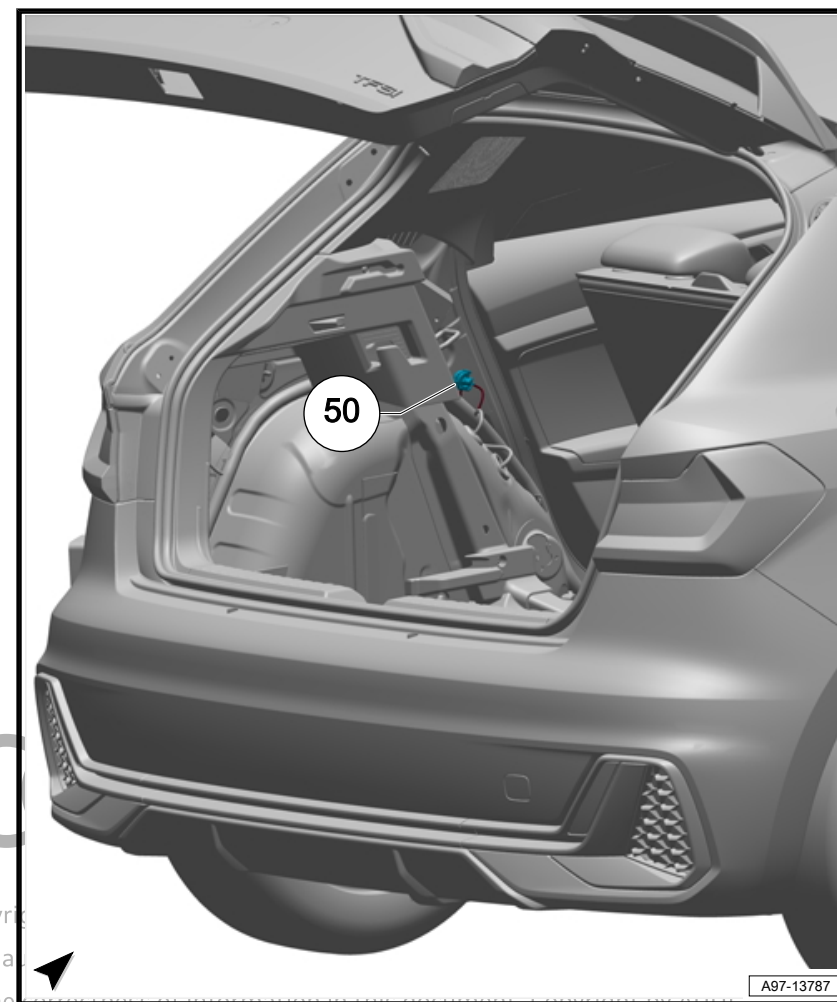

Protected by copyright
permitted unless a
with respect to the

1.3.2 Right luggage compartment, rear lid

1 - Earth strap, battery - body

- Torque 20 Nm

51 - Earth point, on right in luggage compartment

- Torque 9 Nm

62 - Earth point, right C-pillar

- Torque 2 Nm

75 - Earth point, rear right pillar


- Torque 9 Nm

612 - Earth point, centre on rear lid

- Torque 2 Nm



Protected by copyright. Copying for private or commercial purposes, in part or in full, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee the accuracy of the information with respect to the correctness of information in this document. Copyright © 2019 Audi AG

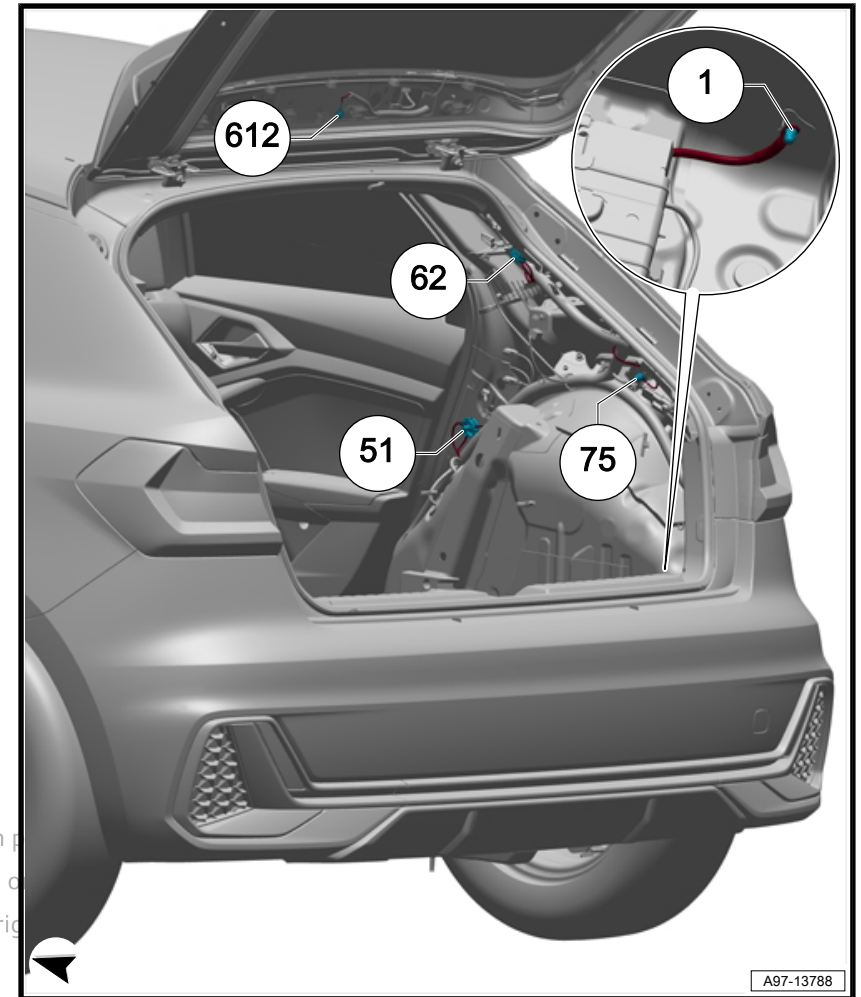

A97-13788