

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX


2010 RESTR NTS**Supplemental nflatable Restraints SRX****S EC C T ONS****ASTENER TIG TENING SPECI ICATIONS**

Application	Speci ication	
	Metric	English
Driver or Passenger Seat Side Inflatable Restraint Module Nut	9 N.m	79 lb in
Driver of Passenger Seat Belt Tensioner Assembly Fastener	45 N.m	33 lb ft
Driver of Passenger Seat Belt Tensioner Fastener	6 N.m	53 lb in
Front Seat Belt Pretensioner Fastener	42 N.m	31 lb in
Inflatable Restraint Discriminating Front End Sensor	7.5 N.m	66 lb in
Inflatable Restraint Instrument Panel Module Fasteners	10 N.m	89 lb in
Inflatable Restraint Roof Rail Module Fasteners	9 N.m	80 lb in
Inflatable Restraint Seat Position Sensor Fastener	3 N.m	25 lb in
Inflatable Restraint Sensing and Diagnostic Module (SDM) Fasteners	7 N.m	56 lb in
Inflatable Restraint Side Impact Sensor Bolts	10 N.m	89 lb in
Inflatable Restraint Steering Wheel Module Coil Bolt	3 N.m	27 lb in
Seat Belt Buckle Pretensioner Bolt	42 N.m	31 lb ft
Seat Shoulder Belt Guide Fastener	42 N.m	31 lb ft
Seat Shoulder Belt Retractor Fastener	68 N.m	50 lb ft

SC EM T C ND RO T N D R MS**SIR SC EMATICS**

2010 Cadillac SRX


2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

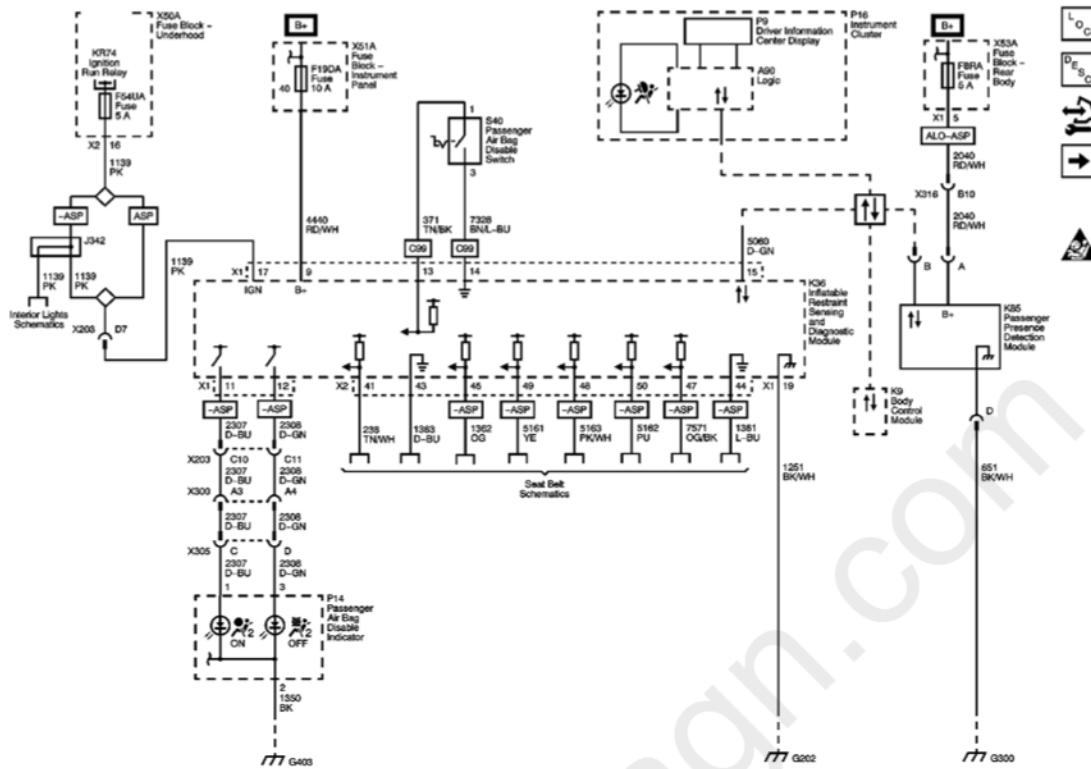

ig 1 Po er Ground Serial Data Passenger Presence System Circuit Schematic
 Courtesy o GENERA MOTORS CORP

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

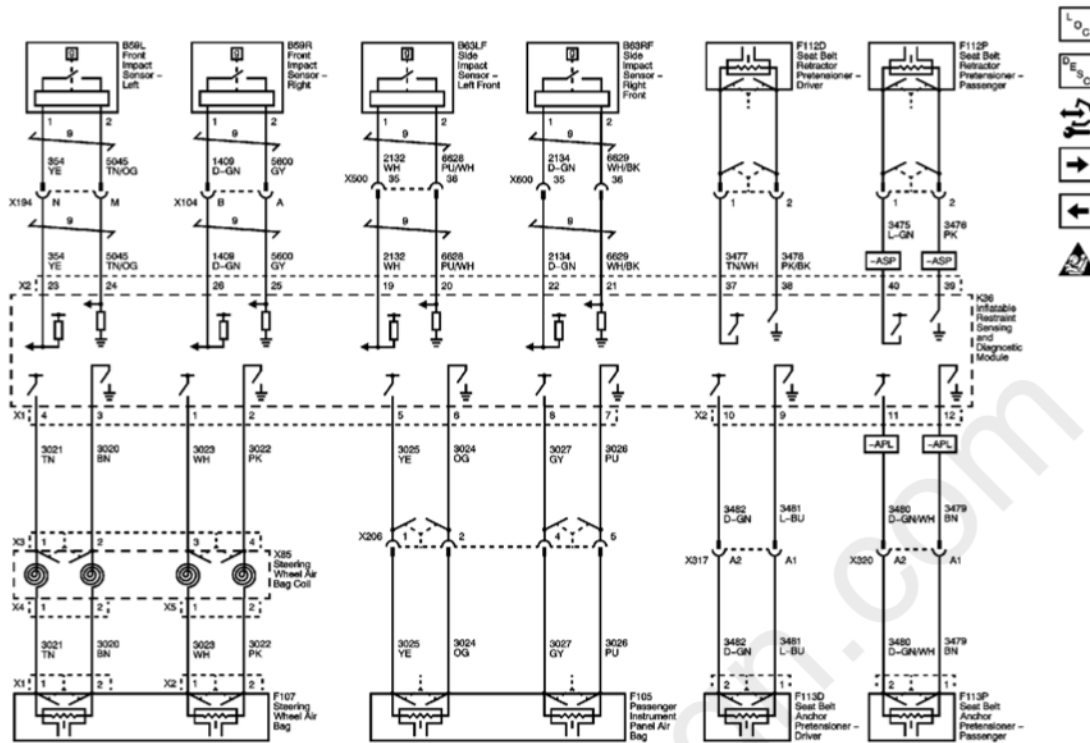

ig 2 ront Impact Sensors Seat Belt Pretensioners Circuit Schematic
 Courtesy o GENERA MOTORS CORP

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

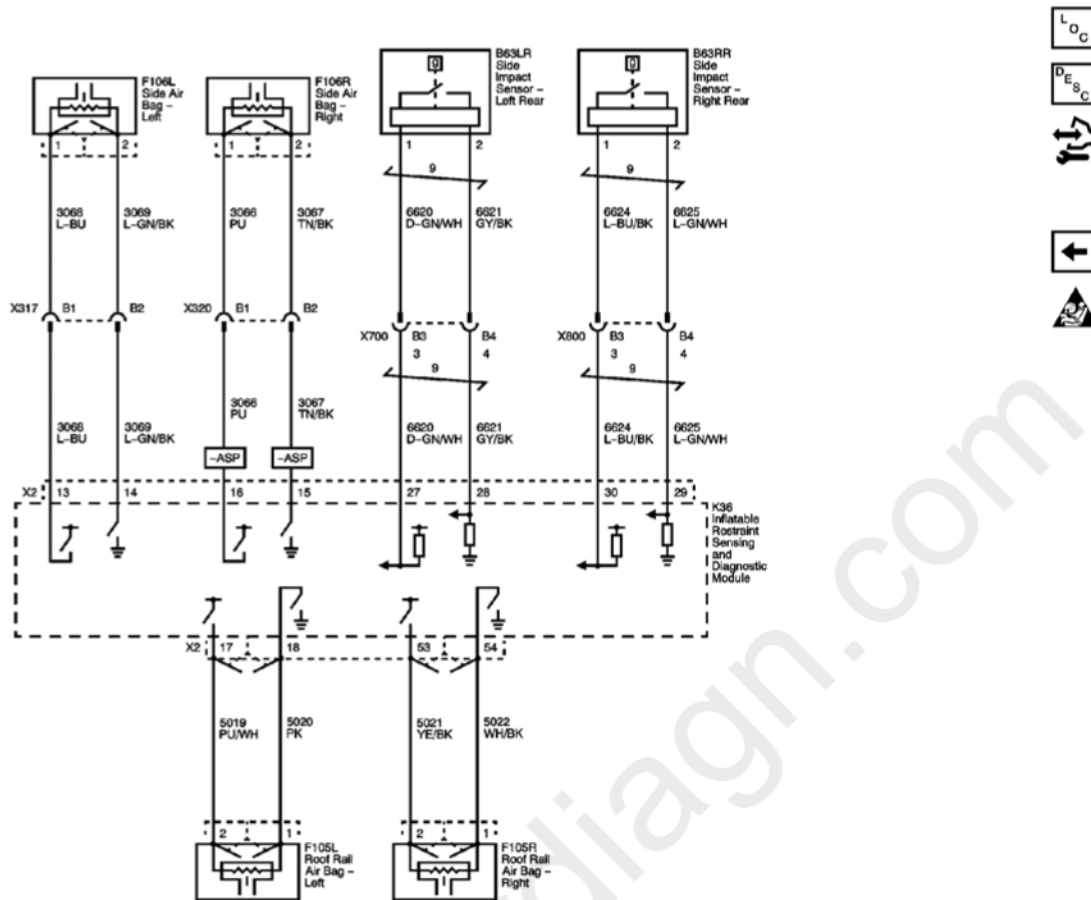


Fig 3 Roof Rail Modules Side Impact Sensors Circuit Schematic
Courtesy of GENERAL MOTORS CORP

COMPONENT LOCATOR

SIR IDENTIFICATION VIEWS

The SIR Identification Views shown below illustrate the approximate location of all SIR components available for the vehicle. This will assist in determining the appropriate SIR Disabling and Enabling for a given service procedure, refer to SIR Disabling and Enabling.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

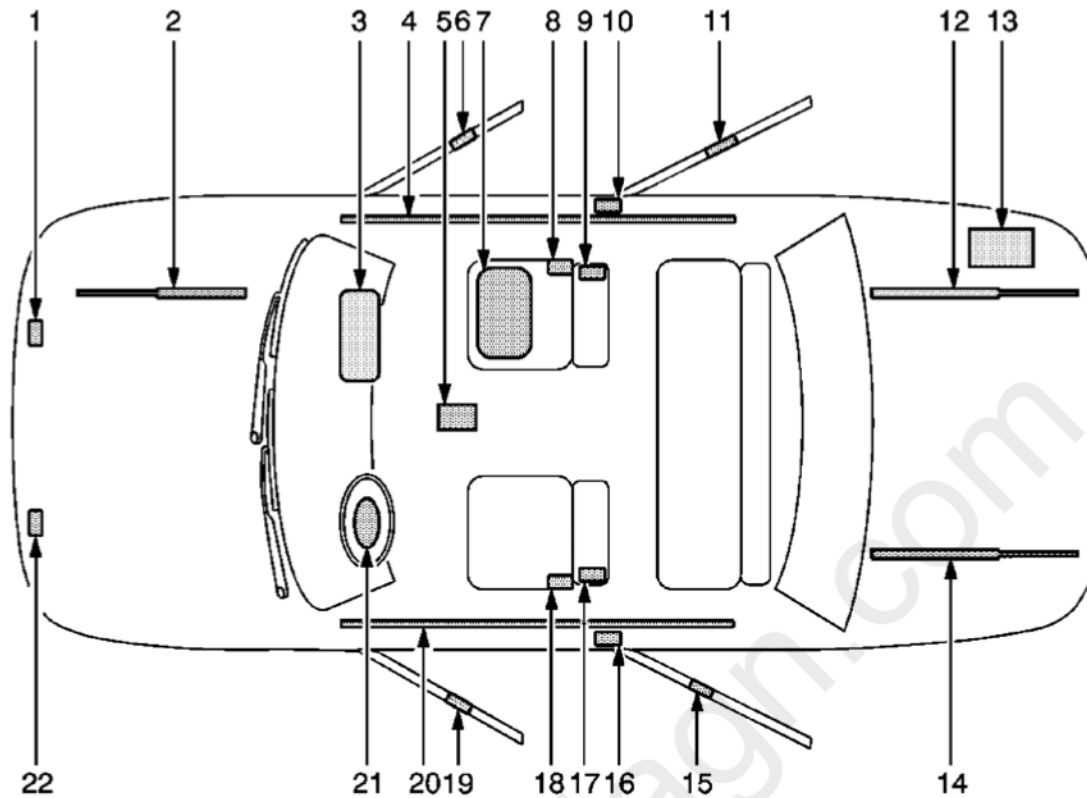


Fig 4 Identifying SIR Components
Courtesy of GENERAL MOTORS CORP

Callout	Component Name
1	Right Front Impact Sensor - Located on the front of the vehicle in the engine compartment
2	Front Hood Assist Rod - A gas shock located under the front hood on the passenger side
3	Passenger Instrument Panel Air Bag - Located at the top right under the instrument panel
4	Right Roof Rail Air Bag - Located on the quarter panel upper behind the garnish, extending from the passenger front windshield pillar to the passenger rear windshield pillar
5	Inflatable Restraint Sensing and Diagnostic Module (SDM) - Located underneath the vehicle carpet under the center console
6	Right Front Side Impact Sensor - Located inside front passenger door
7	Passenger Presence System - Located under the front passenger seat trim cover
8	Passenger Seat Belt Anchor Pretensioner - Located on the outboard side of the passenger seat
9	Passenger Seat Side Air Bag - Located on the seat back of passenger seat
10	Passenger Seat Belt Retractor Pretensioner - Located under the trim near the bottom of the center pillar

2010 Cadillac SRX**2010 RESTRAINTS Supplemental Inflatable Restraints - SRX**

11	Right Rear Side Impact Sensor - Located inside rear passenger door
12	Rear Compartment Lid Assist Rod-A gas shock is located under the rear trunk lid on the passenger side
13	Vehicle Battery - Located inside rear compartment on the passenger side behind the trim
14	Rear Compartment Lid Assist Rod-A gas shock is located under the rear trunk lid on the driver side
15	Left Rear Side Impact Sensor - Located inside rear passenger door
16	Driver Seat Belt Retractor Pretensioner - Located under the trim near the bottom of the center pillar
17	Driver Seat Side Air Bag - Located on the seat back of driver seat
18	Driver Seat Belt Anchor Pretensioner - Located on the outboard side of the driver seat
19	Left Front Side Impact Sensor - Located inside driver door
20	Left Roof Rail Air Bag - Located on the quarter panel upper, extending from the driver front windshield pillar to the driver rear windshield pillar
21	Driver Steering Wheel Air Bag - Located on the steering wheel
22	Left Front Impact Sensor - Located on the front of the vehicle in the engine compartment

D NOST C N ORM T ON ND ROCED RES**DIAGNOSTIC CODE INDEX****DIAGNOSTIC CODE INDEX**

DTC	Description
<u>DTC B0012 or B0013</u>	B0012 01 Driver Steering Wheel Air Bag Deployment Loop Stage 1 Short to Battery
	B0012 02 Driver Steering Wheel Air Bag Deployment Loop Stage 1 Short to Ground
	B0012 04 Driver Steering Wheel Air Bag Deployment Loop Stage 1 Open
	B0012 0D Driver Steering Wheel Air Bag Deployment Loop Stage 1 High Resistance
	B0012 0E Driver Steering Wheel Air Bag Deployment Loop Stage 1 Low Resistance
	B0013 01 Driver Steering Wheel Air Bag Deployment Loop Stage 2 Short to Battery
	B0013 02 Driver Steering Wheel Air Bag Deployment Loop Stage 2 Short to Ground
	B0013 04 Driver Steering Wheel Air Bag Deployment Loop Stage 2 Open
	B0013 0D Driver Steering Wheel Air Bag Deployment Loop Stage 2 High Resistance
	B0013 0E Driver Steering Wheel Air Bag Deployment Loop Stage 2

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

	Low Resistance
DTC B0014-B0045	B0014 01 Driver Seat Side Air Bag Deployment Loop Short to Battery B0014 02 Driver Seat Side Air Bag Deployment Loop Short to Ground B0014 04 Driver Seat Side Air Bag Deployment Loop Open B0014 0D Driver Seat Side Air Bag Deployment Loop High Resistance B0014 0E Driver Seat Side Air Bag Deployment Loop Low Resistance B0015 01 Driver Seat Belt Retractor Pretensioner Deployment Loop Short to Battery B0015 02 Driver Seat Belt Retractor Pretensioner Deployment Loop Short to Ground B0015 04 Driver Seat Belt Retractor Pretensioner Deployment Loop Open B0015 0D Driver Seat Belt Retractor Pretensioner Deployment Loop High Resistance B0015 0E Driver Seat Belt Retractor Pretensioner Deployment Loop Low Resistance B0016 01 Left Roof Rail Air Bag Deployment Loop Short to Battery B0016 02 Left Roof Rail Air Bag Deployment Loop Short to Ground B0016 04 Left Roof Rail Air Bag Deployment Loop Open B0016 0D Left Roof Rail Air Bag Deployment Loop High Resistance B0016 0E Left Roof Rail Air Bag Deployment Loop Low Resistance B0019 01 Passenger Instrument Panel Air Bag Deployment Loop Stage 1 Short to Battery B0019 02 Passenger Instrument Panel Air Bag Deployment Loop Stage 1 Short to Ground B0019 04 Passenger Instrument Panel Air Bag Deployment Loop Stage 1 Open B0019 0D Passenger Instrument Panel Air Bag Deployment Loop Stage 1 High Resistance B0019 0E Passenger Instrument Panel Air Bag Deployment Loop Stage 1 Low Resistance B0020 01 Passenger Instrument Panel Air Bag Deployment Loop Stage 2 Short to Battery B0020 02 Passenger Instrument Panel Air Bag Deployment Loop Stage 2 Short to Ground B0020 04 Passenger Instrument Panel Air Bag Deployment Loop Stage 2 Open B0020 0D Passenger Instrument Panel Air Bag Deployment Loop Stage 2 High Resistance B0020 0E Passenger Instrument Panel Air Bag Deployment Loop Stage 2 Low Resistance B0021 01 Passenger Seat Side Air Bag Deployment Loop Short to Battery B0021 02 Passenger Seat Side Air Bag Deployment Loop Short to Ground B0021 04 Passenger Seat Side Air Bag Deployment Loop Open B0021 0D Passenger Seat Side Air Bag Deployment Loop High Resistance

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

	B0021 0E Passenger Seat Side Air Bag Deployment Loop Low Resistance B0022 01 Passenger Seat Belt Retractor Pretensioner Deployment Loop Short to Battery B0022 02 Passenger Seat Belt Retractor Pretensioner Deployment Loop Short to Ground B0022 04 Passenger Seat Belt Retractor Pretensioner Deployment Loop Open Circuit B0022 0D Passenger Seat Belt Retractor Pretensioner Deployment Loop High Resistance B0022 0E Passenger Seat Belt Retractor Pretensioner Deployment Loop Low Resistance B0023 01 Right Roof Rail Air Bag Deployment Loop Short to Battery B0023 02 Right Roof Rail Air Bag Deployment Loop Short to Ground B0023 04 Right Roof Rail Air Bag Deployment Loop Open B0023 0D Right Roof Rail Air Bag Deployment Loop High Resistance B0023 0E Right Roof Rail Air Bag Deployment Loop Low Resistance
<u>DTC B001A or B001B</u>	B001A 01 Driver Seat Belt Anchor Pretensioner Deployment Loop Short to Battery B001A 02 Driver Seat Belt Anchor Pretensioner Deployment Loop Short to Ground B001A 04 Driver Seat Belt Anchor Pretensioner Deployment Loop Open B001A 0D Driver Seat Belt Anchor Pretensioner Deployment Loop High Resistance B001A 0E Driver Seat Belt Anchor Pretensioner Deployment Loop Low Resistance B001B 01 Passenger Seat Belt Anchor Pretensioner Deployment Loop Short to Battery B001B 02 Passenger Seat Belt Anchor Pretensioner Deployment Loop Short to Ground B001B 04 Passenger Seat Belt Anchor Pretensioner Deployment Loop Open B001B 0D Passenger Seat Belt Anchor Pretensioner Deployment Loop High Resistance B001B 0E Passenger Seat Belt Anchor Pretensioner Deployment Loop Low Resistance
<u>DTC B0052</u>	B0052 00 Deployment Commanded Malfunction B0052 56 Deployment Commanded Too Many Transitions
<u>DTC B0074</u>	B0074 00 Passenger Presence Sensor Circuit Malfunction B0074 04 Passenger Presence Sensor Open
<u>DTC B0081 (SDM)</u>	B0081 00 Passenger Presence Module Malfunction B0081 3A Passenger Presence Module Incorrect Component Installed
<u>DTC B0081 (Passenger Presence Detection Module)</u>	B0081 11 Passenger Presence Module High Input B0081 4B Passenger Presence Module Calibration Not Learned
<u>DTC B0082</u>	B0082 01 Seat Belt Reminder Sensor Short to Battery B0082 02 Seat Belt Reminder Sensor Short to Ground

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

DTC B0083-B0088

B0082 04 Seat Belt Reminder Sensor Open Circuit
B0083 01 Left Front Impact Sensor Short to Battery
B0083 02 Left Front Impact Sensor Short to Ground
B0083 04 Left Front Impact Sensor Open
B0083 05 Left Front Impact Sensor High/Voltage Open
B0083 0C Left Front Impact Sensor Low Current
B0083 39 Left Front Impact Sensor Internal Electronic Failure
B0083 3A Left Front Impact Sensor Incorrect Component Installed
B0083 71 Left Front Impact Sensor Invalid Serial Data Received
B0084 01 Right Front Impact Sensor Short to Battery
B0084 02 Right Front Impact Sensor Short to Ground
B0084 04 Right Front Impact Sensor Open
B0084 05 Right Front Impact Sensor High/Voltage Open
B0084 0C Right Front Impact Sensor Low Current
B0084 39 Right Front Impact Sensor Internal Electronic Failure
B0084 3A Right Front Impact Sensor Incorrect Component Installed
B0084 71 Right Front Impact Sensor Invalid Serial Data Received
B0085 01 Left Front Side Impact Sensor Short to Battery
B0085 02 Left Front Side Impact Sensor Short to Ground
B0085 04 Left Front Side Impact Sensor Open
B0085 05 Left Front Side Impact Sensor High/Voltage Open
B0085 0C Left Front Side Impact Sensor Low Current
B0085 39 Left Front Side Impact Sensor Internal Malfunction
B0085 3A Left Front Side Impact Sensor Incorrect Component Installed
B0085 71 Left Front Side Impact Sensor Invalid Serial Data Received
B0086 01 Right Front Side Impact Sensor Short to Battery
B0086 02 Right Front Side Impact Sensor Short to Ground
B0086 04 Right Front Side Impact Sensor Open
B0086 05 Right Front Side Impact Sensor High/Voltage Open
B0086 0C Right Front Side Impact Sensor Low Current
B0086 39 Right Front Side Impact Sensor Internal Malfunction
B0086 3A Right Front Side Impact Sensor Incorrect Component
Installed
B0086 71 Right Front Side Impact Sensor Invalid Data
B0087 01 Left Rear Side Impact Sensor Short to Battery
B0087 02 Left Rear Side Impact Sensor Short to Ground
B0087 04 Left Rear Side Impact Sensor Open
B0087 05 Left Rear Side Impact Sensor High/Voltage Open
B0087 0C Left Rear Side Impact Sensor Low Current
B0087 39 Left Rear Side Impact Sensor Internal Malfunction
B0087 3A Left Rear Side Impact Sensor Incorrect Component Installed
B0087 71 Left Rear Side Impact Sensor Invalid Serial Data Received
B0088 01 Right Rear Side Impact Sensor Short to Battery
B0088 02 Right Rear Side Impact Sensor Short to Ground
B0088 04 Right Rear Side Impact Sensor Open
B0088 05 Right Rear Side Impact Sensor High/Voltage Open
B0088 0C Right Rear Side Impact Sensor Low Current
B0088 39 Right Rear Side Impact Sensor Internal Malfunction

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

	B0088 3A Right Rear Side Impact Sensor Incorrect Component Installed
	B0088 71 Right Rear Side Impact Sensor Invalid Data
<u>DTC B1001</u>	B1001 00 Option Configuration
<u>DTC B1019</u>	B1019 00 System Configuration Error

DTC B0012 OR B0013

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category

DTC Descriptors

DTC B0012 01

Driver Steering Wheel Air Bag Deployment Loop Stage 1 Short to Battery

DTC B0012 02

Driver Steering Wheel Air Bag Deployment Loop Stage 1 Short to Ground

DTC B0012 04

Driver Steering Wheel Air Bag Deployment Loop Stage 1 Open

DTC B0012 0D

Driver Steering Wheel Air Bag Deployment Loop Stage 1 High Resistance

DTC B0012 0E

Driver Steering Wheel Air Bag Deployment Loop Stage 1 Low Resistance

DTC B0013 01

Driver Steering Wheel Air Bag Deployment Loop Stage 2 Short to Battery

DTC B0013 02

Driver Steering Wheel Air Bag Deployment Loop Stage 2 Short to Ground

DTC B0013 04

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Driver Steering Wheel Air Bag Deployment Loop Stage 2 Open

DTC B0013 0D

Driver Steering Wheel Air Bag Deployment Loop Stage 2 High Resistance

DTC B0013 0E

Driver Steering Wheel Air Bag Deployment Loop Stage 2 Low Resistance

Diagnostic Fault Information

Circuit	Short to Ground	High Resistance	Open	Short to Voltage	Signal Performance
Driver Steering Wheel Air Bag Stage 1 High Control	B0012 02, B0012 0E	B0012 0D	B0012 04	B0012 01	-
Driver Steering Wheel Air Bag Stage 1 Low Control	B0012 02, B0012 0E	B0012 0D	B0012 04	B0012 01	-
Driver Steering Wheel Air Bag Stage 2 High Control	B0013 02, B0013 0E	B0013 0D	B0013 04	B0013 01	-
Driver Steering Wheel Air Bag Stage 2 Low Control	B0013 02, B0013 0E	B0013 0D	B0013 04	B0013 01	-

Circuit/System Description

During a frontal crash of sufficient force the inflatable restraint sensing and diagnostic module (SDM) will allow current to flow through the deployment loop in order to deploy the driver steering wheel air bag. The SDM performs continuous diagnostic tests on the deployment loops to check for proper circuit continuity and for shorts to ground or voltage. There are 2 shorting bars used within the driver steering wheel air bag coil connector which will short together both driver steering wheel air bag stage 1 control circuit and driver steering wheel air bag stage 1 control circuit and both driver steering wheel air bag stage 2 control circuit and driver steering wheel air bag stage 2 control circuit when the connector is disconnected. This will help to prevent unwanted deployment of the air bag during servicing.

Conditions for Running the DTC

Ignition voltage is between 9-16 V.

Conditions for Setting the DTC

B0012 01 stage 1 or B0013 01 stage 2

The driver steering wheel air bag control circuit is shorted to voltage for 2 seconds.

B0012 02 stage 1 or B0013 02 stage 2

The driver steering wheel air bag control circuit is shorted to ground for 2 seconds.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

B0012 04 stage 1 or B0013 04 stage 2

The driver steering wheel air bag control circuit is open for 2 seconds.

B0012 0D stage 1 or B0013 0D stage 2

The driver steering wheel air bag deployment loop resistance is greater than 5.5 ohms for 2 seconds.

B0012 0E stage 1 or B0013 0E stage 2

The driver steering wheel air bag deployment loop resistance is less than 1.7 ohms for 2 seconds.

Action Taken When the DTC Sets

- The SDM requests the instrument panel cluster to illuminate the AIR BAG indicator.
- The SDM will store a DTC, however if an event occurs the system will still attempt deployment.

Conditions for Clearing the DTC

- The condition for setting the DTC is no longer exists.
- A history DTC will clear once 100 malfunction-free ignition cycles have occurred.

Reference Information

Schematic Reference

SIR Schematics

Connector End View Reference

Component Connector End Views

Description and Operation

SIR System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**
- **Connector Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

Ignition ON, observe the appropriate scan tool Deployment Loop Resistance parameter. The reading should be between 1.8-5.12 ohms.

NOTE: When removing connectors, inspect for damage or corrosion. Damage or corrosion in the following requires repair or replacement of the affected component/connector:

- Driver steering wheel air bag
- SDM module
- Driver steering wheel air bag wiring harness connector
- SDM wiring harness connector

Circuit/System Testing

1. Ignition OFF, disconnect the harness connector at the F107 driver steering wheel air bag.
2. Ignition OFF, disconnect the scan tool, wait 120 seconds, test for less than 1.0 ohms between the following control circuit terminals and ground
 - circuit terminal 2 1
 - circuit terminal 4 1
 - If greater than the specified range, test the control circuit for an open/high resistance. If the circuit tests normal, replace the K36 SDM.
3. Ignition ON, verify the scan tool Deployment Loop Resistance parameter is greater than 5.12 ohms.
 - If less than the specified range, test control circuit terminals for a short to ground. If the circuit tests normal, replace the K36 SDM.
4. Install a 3 A fused jumper wire between the following control circuit terminals. Verify the scan tool Deployment Loop Resistance parameter is less than 1.8 ohms.
 - circuit terminal 1 1 and terminal 2 1
 - circuit terminal 4 1 and terminal 3 1
 - If greater than the specified range, test the signal circuit for a short to voltage or an open/high resistance. If the circuit tests normal, replace the K36 SDM.
5. If all circuits test normal, test or replace the F107 driver steering wheel air bag.

Repair Procedures

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **Steering Wheel Inflatable Restraint Module Replacement**
- **SIR/SRS Wiring Repairs**
- **Control Module References** for SDM replacement, setup, and programming

Diagnostic Instructions

- Perform the **Diagnostic System Check** **Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors**DTC B0014 01**

Driver Seat Side Air Bag Deployment Loop Short to Battery

DTC B0014 02

Driver Seat Side Air Bag Deployment Loop Short to Ground

DTC B0014 04

Driver Seat Side Air Bag Deployment Loop Open

DTC B0014 0D

Driver Seat Side Air Bag Deployment Loop High Resistance

DTC B0014 0E

Driver Seat Side Air Bag Deployment Loop Low Resistance

DTC B0015 01

Driver Seat Belt Retractor Pretensioner Deployment Loop Short to Battery

DTC B0015 02

Driver Seat Belt Retractor Pretensioner Deployment Loop Short to Ground

DTC B0015 04

Driver Seat Belt Retractor Pretensioner Deployment Loop Open

DTC B0015 0D

Driver Seat Belt Retractor Pretensioner Deployment Loop High Resistance

DTC B0015 0E

Driver Seat Belt Retractor Pretensioner Deployment Loop Low Resistance

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

DTC B0016 01

Left Roof Rail Air Bag Deployment Loop Short to Battery

DTC B0016 02

Left Roof Rail Air Bag Deployment Loop Short to Ground

DTC B0016 04

Left Roof Rail Air Bag Deployment Loop Open

DTC B0016 0D

Left Roof Rail Air Bag Deployment Loop High Resistance

DTC B0016 0E

Left Roof Rail Air Bag Deployment Loop Low Resistance

DTC B0019 01

Passenger Instrument Panel Air Bag Deployment Loop Stage 1 Short to Battery

DTC B0019 02

Passenger Instrument Panel Air Bag Deployment Loop Stage 1 Short to Ground

DTC B0019 04

Passenger Instrument Panel Air Bag Deployment Loop Stage 1 Open

DTC B0019 0D

Passenger Instrument Panel Air Bag Deployment Loop Stage 1 High Resistance

DTC B0019 0E

Passenger Instrument Panel Air Bag Deployment Loop Stage 1 Low Resistance

DTC B0020 01

Passenger Instrument Panel Air Bag Deployment Loop Stage 2 Short to Battery

DTC B0020 02

Passenger Instrument Panel Air Bag Deployment Loop Stage 2 Short to Ground

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

DTC B0020 04

Passenger Instrument Panel Air Bag Deployment Loop Stage 2 Open

DTC B0020 0D

Passenger Instrument Panel Air Bag Deployment Loop Stage 2 High Resistance

DTC B0020 0E

Passenger Instrument Panel Air Bag Deployment Loop Stage 2 Low Resistance

DTC B0021 01

Passenger Seat Side Air Bag Deployment Loop Short to Battery

DTC B0021 02

Passenger Seat Side Air Bag Deployment Loop Short to Ground

DTC B0021 04

Passenger Seat Side Air Bag Deployment Loop Open

DTC B0021 0D

Passenger Seat Side Air Bag Deployment Loop High Resistance

DTC B0021 0E

Passenger Seat Side Air Bag Deployment Loop Low Resistance

DTC B0022 01

Passenger Seat Belt Retractor Pretensioner Deployment Loop Short to Battery

DTC B0022 02

Passenger Seat Belt Retractor Pretensioner Deployment Loop Short to Ground

DTC B0022 04

Passenger Seat Belt Retractor Pretensioner Deployment Loop Open Circuit

DTC B0022 0D

Passenger Seat Belt Retractor Pretensioner Deployment Loop High Resistance

2010 Cadillac SRX**2010 RESTRAINTS Supplemental Inflatable Restraints - SRX****DTC B0022 0E**

Passenger Seat Belt Retractor Pretensioner Deployment Loop Low Resistance

DTC B0023 01

Right Roof Rail Air Bag Deployment Loop Short to Battery

DTC B0023 02

Right Roof Rail Air Bag Deployment Loop Short to Ground

DTC B0023 04

Right Roof Rail Air Bag Deployment Loop Open

DTC B0023 0D

Right Roof Rail Air Bag Deployment Loop High Resistance

DTC B0023 0E

Right Roof Rail Air Bag Deployment Loop Low Resistance

Diagnostic Fault Information

Circuit	Short to Ground	High Resistance	Open	Short to Voltage	Signal Performance
Driver Seat Side Air Bag High Control	B0014 02, B0014 0E	B0014 0D	B0014 04, B0014 0D	B0014 01	-
Driver Seat Side Air Bag Low Control	B0014 02, B0014 0E	B0014 0D	B0014 04, B0014 0D	B0014 01	-
Driver Seat Belt Retractor Pretensioner High Control	B0015 02, B0015 0E	B0015 0D	B0015 04, B0015 0D	B0015 01	-
Driver Seat Belt Retractor Pretensioner Low Control	B0015 02, B0015 0E	B0015 0D	B0015 04, B0015 0D	B0015 01	-
Left Roof Rail Air Bag High Control	B0016 02, B0016 0E	B0016 0D	B0016 04, B0016 0D	B0016 01	-
Left Roof Rail Air Bag Low Control	B0016 02, B0016 0E	B0016 0D	B0016 04, B0016 0D	B0016 01	-
Passenger Instrument Panel Air Bag - Stage 1 High Control	B0019 02, B0019 0E	B0019 0D	B0019 04, B0019 0D	B0019 01	-
Passenger Instrument Panel Air Bag - Stage 1 Low Control	B0019 02, B0019 0E	B0019 0D	B0019 04, B0019 0D	B0019 01	-
Passenger Instrument Panel Air Bag - Stage 2 High Control	B0020 02, B0020 0E	B0020 0D	B0020 04, B0020 0D	B0020 01	-

2010 Cadillac SRX**2010 RESTRAINTS Supplemental Inflatable Restraints - SRX**

Passenger Instrument Panel Air Bag - Stage 2 Low Control	B0020 02, B0020 0E	B0020 0D	B0020 04, B0020 0D	B0020 01	-
Passenger Seat Side Air Bag High Control	B0021 02, B0021 0E	B0021 0D	B0021 04, B0021 0D	B0021 01	-
Passenger Seat Side Air Bag High Control	B0021 02, B0021 0E	B0021 0D	B0021 04, B0021 0D	B0021 01	-
Passenger Seat Belt Retractor Pretensioner High Control	B0022 02, B0022 0E	B0022 0D	B0022 04, B0022 0D	B0022 01	-
Passenger Seat Belt Retractor Pretensioner Low Control	B0022 02, B0022 0E	B0022 0D	B0022 04, B0022 0D	B0022 01	-
Right Roof Rail Air Bag High Control	B0023 02, B0023 0E	B0023 0D	B0023 04, B0023 0D	B0023 01	-
Right Roof Rail Air Bag Low Control	B0023 02, B0023 0E	B0023 0D	B0023 04, B0023 0D	B0023 01	-

Circuit/System Description

During a side or frontal crash of sufficient force the inflatable restraint sensing and diagnostic module (SDM) will allow current to flow through the deployment loop in order to deploy an air bag. There are 2 shorting bars used within the module connector which will short together control circuits, when the connector is disconnected. This will help to prevent unwanted deployment of the air bag or pretensioner during servicing.

Conditions for Running the DTC

Ignition voltage is between 9-16 V.

Conditions for Setting the DTC

B0014 01, B0015 01, B0016 01, B0019 01, B0020 01, B0021 01, B0022 01, B0023 01

The air bag or retractor pretensioner control circuit is shorted to voltage for 2 seconds.

B0014 02, B0015 02, B0016 02, B0019 02, B0020 02, B0021 02, B0022 02, B0023 02

The air bag or retractor pretensioner control circuit is shorted to ground for 2 seconds.

B0014 04, B0015 04, B0016 04, B0019 04, B0020 04, B0021 04, B0022 04, B0023 04

The air bag or retractor pretensioner control circuit is open for 2 seconds.

B0014 0D, B0015 0D, B0016 0D, B0019 0D, B0020 0D, B0021 0D, B0022 0D, B0023 0D

The air bag or retractor pretensioner deployment loop resistance is greater than 4.2 ohms for 2 seconds.

B0014 0E, B0015 0E, B0016 0E, B0019 0E, B0020 0E, B0021 0E, B0022 0E, B0023 0E

The air bag or retractor pretensioner deployment loop resistance is less than 1.4 ohms for 2 seconds.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Action Taken When the DTC Sets

- The SDM requests the instrument cluster to illuminate the AIR BAG indicator.
- The SDM will store a DTC, however if an event occurs the system will still attempt deployments.

Conditions for Clearing the DTC

- The condition for setting the DTC no longer exists.
- A history DTC will clear once 100 malfunction-free ignition cycles have occurred.

Diagnostic Aid

NOTE: The following diagnostic aids apply for both current and history DTCs.

An incorrectly installed CPA or incorrectly seated connector can cause a shorting bar to short both control circuits together. Check the connectors and CPAs if a DTC with symptom byte 02 or 0E is set, to ensure the shorting bars are not causing the circuits to be shorted together. Shorting bars are used in the locations listed below

- Passenger instrument panel air bag
- Driver and passenger seat side air bags
- Left and right roof rail air bags
- Driver and passenger seat belt retractor pretensioners
- SDM
- Inline connectors - on the side of the harness connector
- Harness side of the SDM connector

Terminal fretting or incorrectly seated connector can cause an open/high resistance condition. Check the circuit terminals for fretting or incorrectly seated connector if a DTC with symptom byte 04 or 0D is set. If DTCs of deployment loops which are in the seat DTC B0014 and B0021, can occur because of stress or damage to the harness due to seat movement. Move the seat to the full extend of travel while using the scan tool to observe deployment type loop parameters.

If the pretensioner, passenger instrument panel or side air bag has inflated under unexpected conditions and/or DTC with symptom byte 01 is set, check both control circuits for a short to voltage.

Reference Information

Schematic Reference

SIR Schematics

Connector End View Reference

Component Connector End Views

Description and Operation**SIR System Description and Operation****Electrical Information Reference**

- **Circuit Testing**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**
- **Connector Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification**NOTE:**

- Refer to **SIR Service Precautions**.
- Inspect all terminals for damage or corrosion when disconnecting connectors. Damage or corrosion in the following requires repair or replacement of the affected component/connector.
 - Seat belt retractor pretensioner
 - Passenger instrument panel air bag
 - Seat side air bag
 - Roof rail air bag
 - SDM
 - SDM wiring harness connector
 - Roof rail air bag wiring harness connector
 - Seat side air bag wiring harness connector
 - Passenger instrument panel air bag wiring harness connector
 - Seat belt retractor pretensioner wiring harness connector
- The connector and connector position assurance (CPA) may seat independent of each other. Both the connector and CPA should seat with an audible and/or tactile click. The CPA isolates the shorting-bars within the connector allowing the deployment circuit to operate properly.
- If the condition is intermittent or cannot be duplicated, disconnect the connectors and add Nyogel lubricant 760G. This procedure will correct the high resistance condition due to terminal fretting corrosion.

Observe the scan tool Deployment Loop Resistance parameters while moving the harness near each connector listed below. The reading should stay consistently between 1.7 and 4.2 ohms without any drop outs or spikes.

- F105 Passenger instrument panel air bag, and Roof rail air bag

- F106 Seat side air bag
 - F112 Seat belt retractor pretensioner
 - Any inline harness
 - K36 SDM
- If the reading is erratic while moving the harness, perform the following
- Inspect each connector terminal for damage or corrosion and repair as necessary.
 - Apply Nyogel lubricant 760G to each connector terminal.
 - Insure each connector and CPA is correctly seated.

Circuit/System Testing**DTC B00 4-B00 or B002 -B0045**

1. Ignition OFF, disconnect the harness connector at the appropriate F105, F106 air bag or F112 seat belt retractor pretensioner.
2. Ignition OFF, disconnect the scan tool, wait 120 seconds, test for greater than 25 ohms between the control circuit terminals listed below
 - F105 Left roof rail airbag terminal 1 and 2
 - F105 Right roof rail airbag terminal 1 and 2
 - F106 Driver seat side airbag terminal 1 and 2
 - F106 Passenger seat side airbag terminal 1 and 2
 - F112 Driver seat belt retractor pretensioner terminal 1 and 2
 - F112 Passenger seat belt retractor pretensioner terminal 1 and 2
 - If less than the specified range, test for a short between the control circuits, check each connector and CPA to ensure that the shorting bars are lifted. If the circuits and shorting bars tests normal, replace the K36 SDM.
3. Ignition ON, test for less than 11 V between the control circuit terminals listed below and ground
 - F105 roof rail air bag or F106 seat side air bag control circuit terminal 1
 - F105 roof rail air bag or F106 seat side air bag control circuit terminal 2
 - F112 seat belt retractor pretensioner control circuit terminal 1
 - F112 seat belt retractor pretensioner control circuit terminal 2
 - If greater than the specified range, test the control circuit for a short to voltage. If the circuit tests normal, replace the K36 SDM.
4. Ignition OFF, test for greater than 25 ohms between the control circuit terminals listed below and ground
 - F105 roof rail air bag or F106 seat side air bag control circuit terminal 1
 - F105 roof rail air bag or F106 seat side air bag control circuit terminal 2
 - F112 seat belt retractor pretensioner control circuit terminal 1
 - F112 seat belt retractor pretensioner control circuit terminal 2
 - If less than the specified range, test the control circuit for a short to ground. If the circuit tests

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

normal, replace the K36 SDM.

5. Install a 3 A fused jumper wire between the control circuit terminals listed below
 - F105 Left roof rail air bag terminal 1 and 2
 - F105 Right roof rail air bag terminal 1 and 2
 - F106 Driver seat side air bag terminal 1 and 2
 - F106 Passenger seat side air bag terminal 1 and 2
 - F112 Driver seat belt retractor pretensioner terminal 1 and 2
 - F112 Passenger seat belt retractor pretensioner terminal 1 and 2
6. Verify the scan tool Deployment Loop Resistance parameter is less than 2 ohms.
 - If greater than the specified range, test both control circuits terminals for an open/high resistance. If the circuits test normal, replace the K36 SDM.
7. If all circuits test normal, replace the F105, F106 air bag or F112 seat belt retractor pretensioner.

DTC B00 -B0020

1. Ignition OFF, disconnect harness connector 206.
2. Disconnect the scan tool.
3. Wait 120 seconds, test for greater than 25 ohms between the control circuit terminals listed below on the SDM side of the connector
 - F105 Passenger instrument panel air bag stage 1 206 terminal 1 and 2
 - F105 Passenger instrument panel air bag stage 2 206 terminal 4 and 5
 - If less than the specified range, test for a short between the control circuits, check each connector and CPA to ensure that the shorting bars are lifted. If the circuits and shorting bars tests normal, replace the K36 SDM.
4. Ignition ON, test for less than 11 V between the control circuit terminals listed below and ground
 - 206 control circuit terminal 1
 - 206 control circuit terminal 2
 - 206 control circuit terminal 4
 - 206 control circuit terminal 5
 - If greater than the specified range, test the control circuit for a short to voltage. If the circuit tests normal, replace the K36 SDM.
5. Ignition OFF, test for greater than 25 ohms between the control circuit terminals listed below and ground
 - 206 control circuit terminal 1
 - 206 control circuit terminal 2
 - 206 control circuit terminal 4
 - 206 control circuit terminal 5
 - If less than the specified range, test the control circuit for a short to ground. If the circuit tests normal, replace the K36 SDM.
6. Install a 3 A fused jumper wire between the control circuit terminals listed below
 - F105 Passenger instrument panel air bag stage 1 206 terminal 1 and 2

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

- F105 Passenger instrument panel air bag stage 2 206 terminal 4 and 5
- 7. Verify the scan tool Deployment Loop Resistance parameter is less than 2 ohms.
 - If greater than the specified range, test both control circuits terminals for an open/high resistance. If the circuits test normal, replace the K36 SDM.
- 8. If all circuits test normal, replace the F105 passenger instrument panel air bag.

Repair Procedures

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **Driver or Passenger Seat Side Inflatable Restraint Module Replacement**
- **Seat Belt Retractor Pretensioner Replacement - Front**
- **Instrument Panel Inflatable Restraint Module Replacement**
- **Roof Side Rail Inflatable Restraint Module Replacement**
- **SIR/SRS Wiring Repairs**
- **Control Module References** for SDM replacement, setup, and programming

DTC B00 A OR B00 B

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provide an overview of each diagnostic category.

DTC Descriptors

DTC B00 A 0

Driver Seat Belt Anchor Pretensioner Deployment Loop Short to Battery

DTC B00 A 02

Driver Seat Belt Anchor Pretensioner Deployment Loop Short to Ground

DTC B00 A 04

Driver Seat Belt Anchor Pretensioner Deployment Loop Open

DTC B00 A 0D

Driver Seat Belt Anchor Pretensioner Deployment Loop High Resistance

DTC B00 A 0E

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Driver Seat Belt Anchor Pretensioner Deployment Loop Low Resistance

DTC B00 B 0

Passenger Seat Belt Anchor Pretensioner Deployment Loop Short to Battery

DTC B00 B 02

Passenger Seat Belt Anchor Pretensioner Deployment Loop Short to Ground

DTC B00 B 04

Passenger Seat Belt Anchor Pretensioner Deployment Loop Open

DTC B00 B 0D

Passenger Seat Belt Anchor Pretensioner Deployment Loop High Resistance

DTC B00 B 0E

Passenger Seat Belt Anchor Pretensioner Deployment Loop Low Resistance

Diagnostic Fault Information

Circuit	Short to ground	High Resistance	Open	Short to Voltage	Signal Performance
Driver Seat Belt Anchor Pretensioner Low Control	B001A 02, B001A 0E	B001A 0D	B001A 04	B001A 01	-
Driver Seat Belt Anchor Pretensioner High Control	B001A 02, B001A 0E	B001A 0D	B001A 04	B001A 01	-
Passenger Seat Belt Anchor Pretensioner Low Control	B001B 02, B001B 0E	B001B 0D	B001B 04	B001B 01	-
Passenger Seat Belt Anchor Pretensioner High Control	B001B 02, B001B 0E	B001B 0D	B001B 04	B001B 01	-

Circuit/System Description

During a side or frontal crash of sufficient force the inflatable restraint sensing and diagnostic module (SDM) will allow current to flow through the deployment loop in order to deploy the appropriate seat belt anchor pretensioner. The SDM performs continuous diagnostic tests on the deployment loops to check for proper circuit continuity and for shorts to ground or voltage.

A shorting bar used within the seat belt anchor pretensioner connector will short together both seat belt anchor pretensioner high and low control circuits when the connector is disconnected, this will help to prevent unwanted deployment of the pretensioner during servicing.

Conditions for Running the DTC

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Ignition voltage is between 9-16 V.

Conditions for Setting the DTC

B00 A 0 B00 B 0

The seat belt anchor pretensioner control circuit is shorted to voltage for 120 milliseconds.

B00 A 02 B00 B 02

The seat belt anchor pretensioner control circuit is shorted to ground for 120 milliseconds.

B00 A 04 B00 B 04

The seat belt anchor pretensioner control circuit is open for 120 milliseconds.

B00 A 0D B00 B 0D

The seat belt anchor pretensioner deployment loop resistance is more than 4.2 ohms for 120 milliseconds.

B00 A 0E B00 B 0E

The seat belt anchor pretensioner deployment loop resistance is less than 1.7 ohms for 120 milliseconds.

Action Taken When the DTC Sets

- The SDM requests the instrument cluster to illuminate the AIR BAG indicator.
- The SDM will store a DTC, however if an event occurs the system will still attempt deployments.

Conditions for Clearing the DTC

- The condition for setting the DTC no longer exists.
- A history DTC will clear once 100 malfunction-free ignition cycles have occurred.

Diagnostic Aid

NOTE: The following diagnostic aids apply for both current and history DTCs.

An incorrectly installed CPA or incorrectly seated connector can cause a shorting bar to short both control circuits together. Check the connectors and CPAs if a DTC with symptom byte 02 or 0E is set, to ensure that the shorting bars are not causing the circuits to be shorted together. Shorting bars locations are listed below

- Inline connectors - on the seat belt anchor pretensioner side of the harness connector
- Harness side of the SDM connector

Terminal fretting, an incorrectly installed CPA, or incorrectly seated connector can cause an open/high resistance condition. Check the circuit terminals for fretting, incorrectly installed CPAs, or incorrectly seated

connectors if a DTC with symptom byte 04 or 0D is set.

If the seat belt anchor pretensioner has deployed under unexpected conditions and/or DTC with symptom byte 01 is set, check both control circuits for a short to voltage.

Reference Information

Schematic Reference

SIR Schematics

Connector End View Reference

Component Connector End Views

Description and Operation

SIR System Description and Operation

Electrical Information Reference

- Circuit Testing
- Connector Repairs
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

Refer to SIR Service Precautions.

NOTE: Inspect all terminals for damage or corrosion when disconnecting connectors. Damage or corrosion in the following requires repair or replacement of the affected component/connector.

- Seat belt anchor pretensioner
- SDM
- Seat belt anchor pretensioner wiring harness connector
- SDM wiring harness connector

NOTE: The connector and connector position assurance (CPA) may seat independent of each other. Both the connector and CPA should seat with an audible and/or

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

tactile click. The CPA isolates the shorting-bars within the connector allowing the deployment circuit to operate properly. Replace any CPA that is damaged or missing.

If the condition is intermittent or cannot be duplicated, disconnect the connectors and add Nyogel lubricant 760G. This procedure will correct the high resistance condition due to terminal fretting corrosion.

1. Observe the scan tool Deployment Loop Resistance parameters. The reading should be between 2.1 and 4.0 ohms.
 - If not within the specified range, refer to **Circuit/System Testing**.
2. Observe the scan tool Deployment Loop Resistance parameters while moving the harness near each connector listed below. The reading should stay consistently between 2.1 and 4.0 ohms without any drop outs or spikes.
 - F113 Seat belt anchor pretensioner
 - Any harness inline
 - K36 SDM
 - If the reading is erratic while moving the harness, perform the following
 - Inspect each connector terminal for damage or corrosion and repair as necessary.
 - Apply Nyogel lubricant 760G to each connector terminal.
 - Insure each connector and CPA is correctly seated.

Circuit/System Testing

Refer to **SIR Service Precautions**.

NOTE: Inspect all terminals for damage or corrosion when disconnecting connectors. Damage or corrosion in the following requires repair or replacement of the affected component/connector.

- Seat belt anchor pretensioner
- SDM
- Seat belt anchor pretensioner wiring harness connector
- SDM wiring harness connector

NOTE: The connector and connector position assurance (CPA) may seat independent of each other. Both the connector and CPA should seat with an audible and/or tactile click. The CPA isolates the shorting-bars within the connector allowing the deployment circuit to operate properly. Replace any CPA that is damaged or missing.

If the condition is intermittent or cannot be duplicated, disconnect the connectors and add Nyogel lubricant 760G. This procedure will correct the high resistance condition due to terminal fretting corrosion.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

1. Ignition OFF, disconnect the harness connector at the appropriate F113 seat belt anchor pretensioner.
2. Disconnect the scan tool.
3. Wait for 120 seconds and then test for greater than 25 ohms between the seat belt anchor pretensioner control circuits terminal 1 and terminal 2.
 - If less than the specified range, test for a short between the control circuits, check each connector and CPA to ensure that the shorting bars are lifted. If the circuits and shorting bars tests normal, replace the K36 SDM.
4. Ignition ON, test for less than 11 V between each of the seat belt anchor pretensioner control circuit terminals 1 and 2 and ground.
 - If greater than the specified range, test the control circuit for a short to voltage. If the circuit tests normal, replace the K36 SDM.
5. Ignition OFF, test for greater than 25 ohms between each of the seat belt anchor pretensioner control circuit terminals 1 and 2 and ground.
 - If less than the specified range, test the control circuit for a short to ground. If the circuit tests normal, replace the K36 SDM.
6. Install a 3 A fused jumper wire between the seat belt anchor pretensioner control circuits terminal 1 and terminal 2.
7. Verify the scan tool Deployment Loop Resistance parameter is less than 2 ohms.
 - If greater than the specified range, test the control circuit terminals 1 and 2 for an open/high resistance. If the circuits test normal, replace the K36 SDM.
8. If all circuits test normal, replace the F113 seat belt anchor pretensioner.

Repair Procedures

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **Driver or Passenger Seat Belt Tensioner Replacement**
- **SIR/SRS Wiring Repairs**
- **Control Module References** for SDM replacement, setup, and programming

DTC B0052

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using the diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptor

DTC B0052 00

Deployment Commanded Malfunction

DTC B0052 56

Deployment Commanded Too Many Transitions

Circuit/System Description

The inflatable restraint sensing and diagnostic module (SDM) senses vehicle impacts and provides deployment signals to the air bags and anchor and/or retractor pretensioners when warranted. The SDM sets DTC B0052 after each command for deployment. DTC B0052 will latch and not clear until after 3 commanded deployments by the SDM. And therefore the SDM has to be replaced using end of life disposal procedure.

Conditions for Running the DTC

Ignition voltage is between 9-16 V.

Conditions for Setting the DTC

- The SDM detects a frontal impact of sufficient force to warrant deployment of the frontal air bags.
- The SDM detects a side impact or rollover (if equipped) of sufficient force to warrant deployment of a seat side air bag and/or roof rail air bag.

Action Taken When the DTC Sets

The SDM requests the instrument cluster to illuminate the AIR BAG indicator.

Conditions for Clearing the DTC

- DTC B0052 00 is a clearable DTC and may be cleared with a scan tool without replacing the SDM.
- DTC B0052 56 is a latched DTC. The DTC cannot be cleared with the scan tool. Replacement of the SDM is required.

Reference Information**Schematic Reference****SIR Schematics****Connector End View Reference****Component Connector End Views****Electrical Information Reference**

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Verify that DTC B0052 00 is not set.
 - If DTC is set, clear the DTC.
2. Verify that DTC B0052 56 is not set.
 - If DTC is set, replace the K36 SDM.

Repair Procedures

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

Control Module References for SDM replacement, setup, and programming

DTC B0074**Diagnostic Instructions**

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors**DTC B0074 00**

Passenger Presence Sensor Circuit Malfunction

DTC B0074 04

Passenger Presence Sensor Open

Circuit/System Description

The passenger presence module monitors the sensor status continually. Whenever the sensor mat has an internal malfunction, the passenger presence module will set DTC B0074.

Conditions for Running the DTC

Ignition voltage is between 9-16 V.

Conditions for Setting the DTC

B0074 00

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

The passenger presence module has detected a disconnection from the sensor mat.

B0074 04

The passenger presence module has detected an open circuit.

The passenger presence system has received a fault signal from the sensor mat.

Action Taken When the DTC Sets

The SDM requests the instrument panel cluster to illuminate the AIR BAG indicator.

Conditions for Clearing the DTC

- The condition for setting the DTC no longer exists.
- A history DTC will clear once 100 malfunction-free ignition cycles have occurred.

Diagnostic Aids

- If either the SDM or PPS were replaced verify that the correct part numbers were used for the vehicle application.
- If this DTC is set as either current or history it may have been caused by an electronic device. If an electronic device (Computers, MP3 Players, Cell Phones, Diagnostic Scan Tool, etc.) was placed on the passenger seat the passenger presence module may command the passenger air bag indicator to turn on and/or command the passenger seat belt indicator to turn on. Make sure there are no objects on the passenger seat and clear the DTCs. If this DTC resets then perform this diagnostic. If the DTC does not reset there is no further work needed on the passenger presence system.

Reference Information

Schematic Reference

SIR Schematics

Connector End View Reference

Component Connector End Views

Description and Operation

SIR System Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Testing for Intermittent Conditions and Poor Connections**
- **Connector Repairs**

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Testing

NOTE: This system is serviced as a kit (seat foam, module, and/or sensing mat). Perform a Passenger Presence System Preload procedure whenever a component is replaced. Inspect the following component connectors for damage or corrosion. Repair or replace the affected component/connector:

1. Confirm that all passenger presence system connectors are fully seated.
2. Verify DTC B0074 is not set.
 - o If the DTC is set, replace the K85 passenger presence system sensor mat.

Repair Procedures

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **Inflatable Restraint Front Passenger Presence Sensor Replacement**
- **Control Module References** for passenger presence module and SDM replacement, setup, and programming

DTC B0081 SDM

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors

DTC B0081 00

Passenger Presence Module Malfunction

DTC B0081 3A

Passenger Presence Module Incorrect Component Installed

Circuit/System Description

When the ignition is turned ON, the inflatable restraint sensing and diagnostic module (SDM) and the passenger

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

presence module perform tests to diagnose critical malfunctions. Upon a successful power-up mode the SDM will illuminate both PASSENGER AIRBAG ON/OFF indicators. If the SDM detects a fault in the passenger presence module, it may disable the passenger instrument panel air bag deployment loop, set DTC B0081 00 or DTC B0081 3A and illuminate the AIRBAG indicator.

Conditions for Running the DTC

Ignition voltage is between 9-16 V.

Conditions for Setting the DTC

B0081 00

The SDM has received a fault present message from the passenger presence module.

B0081 3A

The SDM has received a message from the passenger presence module indicating a vehicle and passenger presence module mismatch.

Action Taken When the DTC Sets

- The SDM requests the instrument cluster to illuminate the AIR BAG indicator.
- The passenger instrument panel air bag deployment loop will be disabled.

Conditions for Clearing the DTC

- The condition for setting the DTC no longer exists.
- A history DTC will clear once 100 malfunction-free ignition cycles have occurred.

Diagnostic Aids

- If either the SDM or PPS module were replaced verify that the correct part numbers were used for the vehicle application.
- If this DTC is set as either current or history it may have been caused by an electronic device. If an electronic device (Computers, MP3 Players, Cell Phones, Diagnostic Scan Tool, etc.) was placed on the passenger seat the passenger presence module may command the passenger air bag indicator to turn on and/or command the passenger seat belt indicator to turn on. Make sure there are no objects on the passenger seat and clear the DTCs. If this DTC resets then perform this diagnostic. If the DTC does not reset there is no further work needed on the passenger presence system.

Reference Information

Schematic Reference

SIR Schematics

Connector End View Reference

Component Connector End Views**Description and Operation****SIR System Description and Operation****Electrical Information Reference**

- **Circuit Testing**
- **Testing for Intermittent Conditions and Poor Connections**
- **Connector Repairs**
- **Wiring Repairs**

Scan Tool Reference**Control Module References** for scan tool information**Circuit/System Verification****NOTE:**

- This system is serviced as a kit (seat foam, module and/or sensing mat). Perform a Passenger Presence System Preload procedure whenever a component is replaced. Refer to **Passenger Presence System Preload Test**.
- Both SDM and Passenger Presence Module set DTC B00 1 but with different symptom bytes. Therefore it is important to identify which module has set the DTC B00 1. Use the symptom bytes as a way of identify the correct module to diagnose.

1. Verify that DTC B1001 is not set in the SDM.
 - If the DTC is set in the SDM, refer to **DTC B1001**.
2. Verify that DTC B0074, B101D, or B101E is not set in the passenger presence module.
 - If any of the DTCs are set in the passenger presence module, refer to **Diagnostic Trouble Code DTC list - Vehicle**.

NOTE: The SDM sets a redundant B00 1 00 DTC when the passenger presence module sets a DTC B00 1 11 or B00 1 B.

3. Verify that DTC B0081 00 is not set in the SDM
 - If DTC B0081 00 is set in the SDM, then the passenger presence module has set a B0081 11 or a B0081 4B. Refer to B0081 (Passenger Presence Module) for diagnosis.

NOTE: The SDM sets a B00 1 A when an incorrect passenger presence module is installed.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

4. Verify that DTC B0081 3A is not set in the SDM.
 - If DTC B0081 3A is set in the SDM, replace the K85 passenger presence module.

Repair Procedures

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

Control Module References for passenger presence module and SDM replacement, setup, and programming

DTC B0081 PASSE GER PRESE CE DETECTIO MOD E

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors

DTC B0081 11

Passenger Presence Module High Input

DTC B0081 4B

Passenger Presence Module Calibration Not Learned

Circuit/System Description

When the ignition is turned ON, the inflatable restraint sensing and diagnostic module (SDM) and the passenger presence module perform tests to diagnose critical malfunctions. Upon a successful power-up mode the SDM will illuminate both PASSENGER AIRBAG ON/OFF indicators. If the SDM detects a fault in the passenger presence module, it may disable the passenger instrument panel air bag deployment loop, set DTC B0081 and illuminate the AIRBAG indicator.

Conditions for Running the DTC

Ignition voltage is between 9-16 V.

Conditions for Setting the DTC

Any of the following conditions must exist for 5 seconds.

B0081 11

The passenger presence module has failed preload procedure.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

B0081 4B

The passenger presence module is not calibrated.

Action Taken When the DTC Sets

- The SDM requests the instrument cluster to illuminate the AIR BAG indicator.
- The passenger instrument panel air bag deployment loop will be disabled.

Conditions for Clearing the DTC

- The condition for setting the DTC no longer exists.
- A history DTC will clear once 100 malfunction-free ignition cycles have occurred.

Diagnostic Aids

- If either the SDM or PPS module were replaced verify that the correct part numbers were used for the vehicle application.
- If this DTC is set as either current or history it may have been caused by an electronic device. If an electronic device (Computers, MP3 Players, Cell Phones, Diagnostic Scan Tool, etc.) was placed on the passenger seat the passenger presence module may command the passenger air bag indicator to turn on and/or command the passenger seat belt indicator to turn on. Make sure there are no objects on the passenger seat and clear the DTCs. If this DTC resets then perform this diagnostic. If the DTC does not reset there is no further work needed on the passenger presence system.

Reference Information

Description and Operation

SIR System Description and Operation

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

NOTE:

- This system is serviced as a kit (seat foam, module and sensing mat). Perform a Passenger Presence System Preload procedure whenever a component is replaced. Refer to Passenger Presence System Preload Test.
- Both SDM and passenger presence module set DTC B00 1 but with different symptom bytes. Therefore it is important to identify which module has set the DTC B00 1. Use the symptom bytes as a way of identify the correct module to diagnose.
- The SDM sets a B00 1 A when an incorrect passenger presence module

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

is installed.

1. Verify that DTC B0081 3A is not set in the SDM.
 - o If DTC B0081 3A is set in the SDM, replace the K85 passenger presence module.

NOTE: The SDM sets a redundant B00 1 00 DTC when the passenger presence module sets a DTC B00 1 11 or B00 1 B.

2. Verify that DTC B0081 11 or DTC B0081 4B is not set in the passenger presence module.
 - o If DTC B0081 11 or DTC B0081 4B is set in the passenger presence module, perform the Passenger Presence System Preload procedure. Refer to **Passenger Presence System Preload Test**.

Repair Procedures

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

Control Module References for passenger presence module or SDM replacement, setup, and programming

DTC B0082

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors

DTC B0082 01

Seat Belt Reminder Sensor Short to Battery

DTC B0082 02

Seat Belt Reminder Sensor Short to Ground

DTC B0082 04

Seat Belt Reminder Sensor Open Circuit

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Seat Belt Reminder Sensor Signal	B0082 02	B0082 04	B0082 01	-
Seat Belt Reminder Sensor Ground	-	B0082 04	B0082 04	-

Circuit/System Description

The seat belt reminder sensor is in the passenger seat cushion and provides an input to the inflatable restraint sensing and diagnostic module (SDM). The SDM supplies a low reference circuit and a seat belt reminder sensor signal circuit to determine seated or unseated condition of passenger seat.

Conditions for Running the DTC

Ignition voltage is between 9-16 V.

Conditions for Setting the DTC

B0082 01

The SDM detects a short to voltage in the seat belt reminder sensor signal circuit.

B0082 02

The SDM detects a short to ground in the seat belt reminder sensor signal circuit

B0082 04

The SDM detects an open/high resistance in the seat belt reminder sensor signal circuit or the seat belt reminder sensor ground circuit

Action Taken When the DTC Sets

The SIR System is disabled and no deployments are allowed.

Conditions for Clearing the DTC

- The DTC will be current for as long as the fault is present
- When the fault is no longer present, the DTC will be a history DTC
- A history DTC will clear after 50 ignition cycles

Reference Information

Schematic Reference

SIR Schematics

Connector End View Reference

Component Connector End Views

Description and Operation

SIR System Description and Operation

Electrical Information Reference

- Circuit Testing
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs
- Connector Repairs

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Ignition ON, with the passenger seat unoccupied, verify the scan tool Passenger Seat Occupancy Status parameter is Empty Seat.
2. With the passenger seat occupied, verify the scan tool Passenger Seat Occupancy Status parameter is Occupied.

Circuit/System Testing

1. Ignition OFF, disconnect the harness connector at the B60 seat belt reminder sensor.
2. Test for less than 30 ohms between the ground circuit terminal 2 and ground.
 - If greater than the specified range, test the ground circuit for an open/high resistance. If the circuit tests normal, replace the K36 SDM
3. Ignition ON, test for 4.75-5.25 V between the signal circuit terminal 1 and ground.
 - If less than the specified range, test the signal circuit for a short to ground or an open/high resistance. If the circuit tests normal, replace the K36 SDM.
 - If greater than the specified range, test the signal circuit for a short to voltage. If the circuit tests normal, replace the K36 SDM.
4. If all circuits test normal, replace the B60 seat belt reminder sensor.

Repair Procedures

Perform the Diagnostic Repair Verification after completing the diagnostic procedure.

- Inflatable Restraint Front Passenger Presence Sensor Replacement
- Control Module References for SDM replacement, setup, and programming

DTC B0083-B0088

Diagnostic Instructions

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors

DTC B0083 01

Left Front Impact Sensor Short to Battery

DTC B0083 02

Left Front Impact Sensor Short to Ground

DTC B0083 04

Left Front Impact Sensor Open

DTC B0083 05

Left Front Impact Sensor High/Voltage Open

DTC B0083 0C

Left Front Impact Sensor Low Current

DTC B0083 39

Left Front Impact Sensor Internal Electronic Failure

DTC B0083 3A

Left Front Impact Sensor Incorrect Component Installed

DTC B0083 71

Left Front Impact Sensor Invalid Serial Data Received

DTC B0084 01

Right Front Impact Sensor Short to Battery

DTC B0084 02

Right Front Impact Sensor Short to Ground

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

DTC B

Right Front Impact Sensor Open

DTC B

Right Front Impact Sensor High/Voltage Open

DTC B C

Right Front Impact Sensor Low Current

DTC B 9

Right Front Impact Sensor Internal Electronic Failure

DTC B A

Right Front Impact Sensor Incorrect Component Installed

DTC B

Right Front Impact Sensor Invalid Serial Data Received

DTC B

Left Front Side Impact Sensor Short to Battery

DTC B

Left Front Side Impact Sensor Short to Ground

DTC B

Left Front Side Impact Sensor Open

DTC B

Left Front Side Impact Sensor High/Voltage Open

DTC B C

Left Front Side Impact Sensor Low Current

DTC B 9

Left Front Side Impact Sensor Internal Malfunction

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

DTC B A

Left Front Side Impact Sensor Incorrect Component Installed

DTC B

Left Front Side Impact Sensor Invalid Serial Data Received

DTC B

Right Front Side Impact Sensor Short to Battery

DTC B

Right Front Side Impact Sensor Short to Ground

DTC B

Right Front Side Impact Sensor Open

DTC B

Right Front Side Impact Sensor High/Voltage Open

DTC B C

Right Front Side Impact Sensor Low Current

DTC B 9

Right Front Side Impact Sensor Internal Malfunction

DTC B A

Right Front Side Impact Sensor Incorrect Component Installed

DTC B

Right Front Side Impact Sensor Invalid Data

DTC B

Left Rear Side Impact Sensor Short to Battery

DTC B

Left Rear Side Impact Sensor Short to Ground

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

DTC B

Left Rear Side Impact Sensor Open

DTC B

Left Rear Side Impact Sensor High/Voltage Open

DTC B C

Left Rear Side Impact Sensor Low Current

DTC B 9

Left Rear Side Impact Sensor Internal Malfunction

DTC B A

Left Rear Side Impact Sensor Incorrect Component Installed

DTC B

Left Rear Side Impact Sensor Invalid Serial Data Received

DTC B

Right Rear Side Impact Sensor Short to Battery

DTC B

Right Rear Side Impact Sensor Short to Ground

DTC B

Right Rear Side Impact Sensor Open

DTC B

Right Rear Side Impact Sensor High/Voltage Open

DTC B C

Right Rear Side Impact Sensor Low Current

DTC B 9

Right Rear Side Impact Sensor Internal Malfunction

2010 Cadillac SRX**2010 RESTRAINTS Supplemental Inflatable Restraints - SRX****DTC B A**

Right Rear Side Impact Sensor Incorrect Component Installed

DTC B

Right Rear Side Impact Sensor Invalid Data

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Left Front Impact Sensor High Signal	B0083 02, B0083 0C	B0083 04, B0083 05	B0083 01	B0083 3A
Left Front Impact Sensor Low Reference	B0083 02, B0083 0C	B0083 04, B0083 05	B0083 01	B0083 3A
Right Front Impact Sensor High Signal	B0084 02, B0084 0C	B0084 04, B0084 05	B0084 01	B0084 3A
Right Front Impact Sensor Low Reference	B0084 02, B0084 0C	B0084 04, B0084 05	B0084 01	B0084 3A
Left Front Side Impact Sensor High Signal	B0085 02, B0085 0C	B0085 04, B0085 05	B0085 01	B0085 39
Left Front Side Impact Low Reference	B0085 02, B0085 0C	B0085 04, B0085 05	B0085 01	B0085 39
Right Front Side Impact Sensor High Signal	B0086 02, B0086 0C	B0086 04, B0086 05	B0086 01	B0086 39
Right Front Side Impact Sensor Low Reference	B0086 02, B0086 0C	B0086 04, B0086 05	B0086 01	B0086 39
Left Rear Side Impact Sensor High Signal	B0087 02, B0087 0C	B0087 04, B0087 05	B0087 01	B0087 39
Left Rear Side Impact Sensor Low Reference	B0087 02, B0087 0C	B0087 04, B0087 05	B0087 01	B0087 39
Right Rear Side Impact Sensor High Signal	B0088 02, B0088 0C	B0088 04, B0088 05	B0088 01	B0088 39
Right Rear Side Impact Sensor Low Reference	B0088 02, B0088 0C	B0088 04, B0088 05	B0088 01	B0088 39

Circuit/System Description

The impact sensors are equipped on vehicles to supplement the Supplemental Inflatable Restraint (SIR) System performance. The impact sensors are electronic and are not part of the deployment loops, but instead provide inputs to the sensing and diagnostic module (SDM). The impact sensors can assist in determining the severity of some frontal and side collisions. The SDM uses the input from the impact sensors to assist in determining the severity of a collision further supporting air bag deployment. If the SDM determines a deployment is warranted, the SDM will cause current to flow through the deployment loops deploying the frontal air bags.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Conditions for Running the DTC

Ignition voltage is between 9-16 V.

Conditions for Setting the DTC

Any of the following conditions exist for 10 seconds

B B B B B B

The sensor has been shorted to voltage.

B B B B B B

- The sensor has been shorted to ground.
- The sensor current is greater than 23 mA for greater than 5 milliseconds.

B B B B B B

- The sensor circuit is open.
- The SDM has not received a message from the sensor for greater than 375 milliseconds.

B B B B B B

- The sensor circuit is open or high resistance.
- The SDM has not received a message from the sensor for greater than 375 milliseconds.

B C B C B C B C B C

- The sensor has been shorted to ground.
- The sensor current is greater than 23 mA for greater than 5 milliseconds.

B 9 B 9 B 9 B 9 B 9

- The SDM has received a Not OK message from the sensor.
- The SDM has not received a message.

B A B A B A B A B A

- The SDM has received identification message from the sensor, which does not match the identification stored in the SDM memory.
- The SDM has reset the sensor twice without detecting the correct identification message.

B B B B B B

The SDM has received invalid serial data from the sensor.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Action Taken When the DTC Sets

The SDM requests the instrument panel cluster to illuminate the AIR BAG indicator.

Conditions for Clearing the DTC

- The condition for setting the DTC no longer exists.
- A history DTC will clear once 100 malfunction-free ignition cycles have occurred.
- An ignition cycle is required for the DTC to go from current to history.

Reference Information

Schematic Reference

SIR Schematics

Connector End View Reference

Component Connector End Views

Description and Operation

SIR System Description and Operation

Electrical Information Reference

- Circuit Testing
- Testing for Intermittent Conditions and Poor Connections
- Connector Repairs
- Wiring Repairs

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

NOTE: Refer to SIR Service Precautions.
Inspect all terminals for damage or corrosion when disconnecting connectors.
Damage or corrosion in the following requires repair or replacement of the affected component/connector.

- Impact Sensor
- SDM
- Impact sensor wiring harness connector

- **SDM wiring harness connector**

NOTE: The connector and connector position assurance (CPA) may seat independent of each other. Both the connector and CPA should seat with an audible and/or tactile click. The CPA isolates the shorting-bars within the connector allowing the deployment circuit to operate properly. Replace any CPA that is damaged or missing.

If the condition is intermittent or cannot be duplicated, disconnect the connectors and add Nyogel lubricant 760G. This procedure will correct the high resistance condition due to terminal fretting corrosion.

1. Verify that DTC B0083-B0088 symptom byte 39 or 71 is not set as current.
 - If symptom byte 39 or 71 is set as current, replace the appropriate B59 front impact sensor or B63 side impact sensor.
2. Verify that the SDM calibrations match the VIN data, software part number, and calibration part number.
 - If not the correct data or part number, program the SDM.
3. Verify the correct impact sensors have the correct part numbers, matching the label part numbers with the parts book.
 - If the part numbers do not match, replace the incorrect B59 front impact sensor or B63 side impact sensor
4. Verify that DTC B0083-B0088 symptom byte 01, 02, 04, 05, or 0C is not set as current.
 - If symptom byte 01, 02, 04, 05, or 0C is set as current, refer to **Circuit/System Testing**.

Circuit/System Testing

1. Ignition OFF, disconnect the harness connector at the appropriate B59 front impact sensor or B63 side impact sensor.
2. Ignition OFF, disconnect the scan tool, wait 120 seconds, test for less than 10 ohms between the low reference circuit terminal 2 and ground.
 - If greater than the specified range, test the low reference circuit for an open/high resistance. If the circuit tests normal, replace the K36 SDM.
3. Test for greater than 50k ohms between the signal circuit terminal 1 and ground.
 - If less than the specified value, test the signal circuit for a short to ground. If the circuit tests normal, replace the K36 SDM.
4. Disconnect the harness connector at the SDM.
5. Test for less than 1 ohms between the impact sensor signal circuit terminal 1 and the SDM terminal listed below.
 - B59 Left front impact sensor terminal 23 2
 - B59 Right front impact sensor terminal 26 2
 - B63 Left front side impact sensor terminal 19 2
 - B63 Right front side impact sensor terminal 22 2
 - B63 Left rear side impact sensor terminal 27 2

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

- B63 Right rear side impact sensor terminal 30 2
 - If greater than the specified range, test the circuit for an open/high resistance.
- 6. If all circuits test normal, replace the B59 front impact sensor or B63 side impact sensor. The DTC should not be set as current.
 - If the DTC resets as current, replace the K36 SDM.

Repair Procedures

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **Inflatable Restraint Side Impact Sensor Replacement**
- **Front End Inflatable Restraint Discriminating Sensor Replacement**
- **Control Module References** for SDM replacement, setup, and programming

DTC B1001

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category

DTC Descriptor

DTC B1001 00

Option Configuration

Circuit/System Description

The inflatable restraint sensing and diagnostic module (SDM) stores a primary data key, which is a 4-digit number. When the ignition is turned ON, the SDM compares this information to the information stored in the body control module (BCM) over the serial data communication circuit. If there is a mismatch between the information stored in the SDM and BCM, DTC B1001 will set.

Conditions for Running the DTC

System voltage is between 9-16 V.

Conditions for Setting the DTC

The 4-digit Primary Data Key stored in the SDM does not match the 4 digits stored in the BCM.

Action Taken When the DTC Sets

- The SDM requests the instrument cluster to illuminate the AIR BAG indicator.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

- The SDM disables all deployments.

Conditions for Clearing the DTC

The last 4-digit Primary Data Key in the SDM matches the last 4 digits stored in the BCM.

Diagnostic Aids

This DTC is an indication that an incorrect SDM is installed in the vehicle, or that the SDM and/or the BCM was replaced without reprogramming the BCM with the new information.

Reference Information

Schematic Reference

SIR Schematics

Connector End View Reference

Component Connector End Views

Description and Operation

SIR System Description and Operation

Electrical Information Reference

- Circuit Testing
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs
- Connector Repairs

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

NOTE: **Cycle the ignition after performing the Setup SDM Primary Key procedure in the BCM. This enables the BCM to read the new SDM primary Key value.**

Verify the scan tool SDM Primary Key Status is Valid in the BCM.

- If the SDM Primary Key Status is Invalid, perform the Setup SDM Primary Key procedure in the BCM.

DTC B1019

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptor**DTC B1019 00**

System Configuration Error

Circuit/System Description

The inflatable restraint sensing and diagnostic module (SDM) monitors the number of safety components installed on the vehicle. When the ignition is turned ON, the SDM evaluates the number of safety components installed and compares it to the number of components the SDM expects to see on the vehicle with its current calibration. If there is a mismatch between detected components and the components programmed with the SDM calibration, DTC B1019 will set. The components (if equipped) that the SDM will detect include inflatable restraint deployment loops, impact sensors, passenger presence system components, seat position sensors, disable switches, and seat belt switches.

Conditions for Running the DTC

Ignition voltage is between 9-16 V.

Conditions for Setting the DTC

The setup for the SDM has not been completed and the SDM does not detect the correct number of sensors or deployment loops than is expected with this calibration.

Action Taken When the DTC Sets

- The SDM requests the instrument cluster to illuminate the AIR BAG warning indicator.
- The DTC must be cleared before running the setup SDM.
- Air bag indicator will continue to flash until SDM setup procedure is complete.

Conditions for Clearing the DTC

- The condition for setting the DTC is no longer present.
- A history DTC will clear once 100 malfunction-free ignition cycles have occurred.

Diagnostic Aids

The SDM scan tool deployment loop and impact sensor data will match what the SDM has been programmed to expect to see on the vehicle. B1019 DTC will set if a deployment loop or impact sensor is added or removed from the system.

DTC B1019 will set when an open/high resistance DTC sets for a deployment loop or impact sensor. This causes mismatch between the learned and actual components connected to the SDM.

DTC B1019 can set with no other DTCs if an unused deployment loop or impact sensor circuit is shorted to ground. This causes a mismatch between the learned and actual components connected to the SDM.

Reference Information

Schematic Reference

- Seat Belt Schematics
- SIR Schematics

Connector End View Reference

Component Connector End Views

Description and Operation

- Seat Belt System Description and Operation
- SIR System Description and Operation

Electrical Information Reference

- Circuit Testing
- Testing for Intermittent Conditions and Poor Connections
- Connector Repairs
- Wiring Repairs

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

NOTE: DTC B101 can set after SDM has been replaced and or reprogrammed before the setup procedure is completed. The setup procedure cannot be completed if DTC B101 is set as current or history. If a short or open is detected in a deployment circuit prior to the setup procedure being performed the SDM will set DTC B101 .

1. Ignition ON, verify no other SDM DTC are set.
 - If another SDM DTC is set, diagnose those DTCs first. Refer to Diagnostic Trouble Code (DTC) List - Vehicle
2. With the scan tool observe the SDM impact sensor configuration scan tool data list. Verify the impact

sensors called out in the scan tool data list match the number of actual impact sensors the vehicle is built with.

- If the number of impact sensors do not match verify the correct SDM calibration file is loaded in the SDM.
 - If the SDM calibration file is correct, the vehicle contains less/more sensors than it is supposed to. Modify the vehicle to match the SDM impact sensor calibration scan tool data list.
3. With the scan tool observe the SDM enabled deployment loop configuration scan tool data list. Verify the enabled deployment loops called out in the scan tool data list match the deployment loops the vehicle is built with.
- If the number of enabled deployment loops do not match verify the correct SDM calibration file is loaded in the SDM.
 - If the SDM calibration file is correct, modify the vehicle to match the SDM enabled deployment loop calibration scan tool data list.
4. If the SDM impacts sensor and enabled deployment loops match the vehicle build and the DTC is still current, replace the K36 SDM.

Repair Procedures

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **SIR/SRS Wiring Repairs**
- **Control Module References** for SDM replacement, setup, and programming

PASSENGER PRESENCE SYSTEM PRELOAD TEST

Introduction

The Passenger Presence System (PPS) is a calibrated system that requires checking for preloads within each region when the system has been serviced or replaced. If the passenger seat bottom cushion, seat bottom trim, or heater pad has been serviced, reinstalled, or removed for any reason, the procedure below will check for any preloads on the PPS. The passenger presence module cannot be tested for preload until it is unlocked using SPS programming. A service replacement passenger presence module does not require an unlock procedure prior to an initial preload test. Once a preload test has been performed, the passenger presence module will lock regardless of a pass or fail status. If a module needs to be retested, it must first be unlocked with SPS programming. Before you start, read these procedures carefully and completely. For further information regarding PPS, refer to **SIR System Description and Operation**.

Passenger Presence System Preload System Test Procedure

1. With **Service Programming System (SPS)**, unlock the passenger presence module.
2. Empty the front outboard passenger seat.
3. With the scan tool, perform the Passenger Presence Preload procedure.
4. If the test fails, adjust the seat bottom trim, and massage the cover to ensure unwanted pressure is not present in the specified area, and restart the Passenger Presence Preload procedure (Existing Module).
5. Once the test successfully completes, cycle the ignition key OFF.

6. Perform the **Diagnostic System Check - Vehicle** after successfully completing the preload test procedure to ensure the system is functioning properly.

SYMPTOMS - SIR

IMPORTANT: Complete the following steps before using the symptom tables:

1. Perform **Diagnostic System Check - Vehicle** before using the symptom tables in order to verify that all of the following are true:
 - There are no DTCs set.
 - The inflatable restraint sensing and diagnostic module (SDM) can communicate via the serial data link.
2. Review the SIR system description and operation in order to familiarize yourself with the system functions. Refer to **SIR System Description and Operation**.

Visual/Physical Inspection

- Inspect for aftermarket devices which could affect the operation of the SIR system. Refer to **Checking Aftermarket Accessories**.
- Inspect the easily accessible or visible system components for obvious damage or conditions which could cause the symptom.

Intermittent

Faulty electrical connections or wiring may be the cause of intermittent conditions. Refer to **Testing for Intermittent Conditions and Poor Connections**.

Symptom List

Refer to a symptom diagnostic procedure from the following list in order to diagnose the symptom:

Air Bag Indicator Circuit Malfunction (Driver) or **Air Bag Indicator Circuit Malfunction (Passenger)** in order to diagnose the symptom.

AIR BAG INDICATOR CIRCUIT MALFUNCTION (DRIVER)

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

Circuit/System Description

When the ignition is turned ON, during the bulb check, the driver air bag indicator will flash, and then turn OFF after the bulb check. The inflatable restraint sensing and diagnostic module (SDM) performs diagnostic tests on

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

the SIR system during the bulb check. If any malfunction exists the SDM will request the instrument cluster to illuminate the air bag indicator steady, via serial data. If a preexisting malfunction exists, the air bag indicator will illuminate steady immediately after the ignition is turned ON. If the ignition 1 voltage is outside of the normal operating voltage range of 9-16 V, the SDM will command the instrument cluster to illuminate the air bag indicator ON, even with no DTCs present, and then disable all deployment loops.

Diagnostic Aids

A DTC B1370 may set if the ignition 1 circuit is outside the 9-16 V range.

Reference Information

Schematic Reference

SIR Schematics

Connector End View Reference

Component Connector End Views

Description and Operation

SIR System Description and Operation

Electrical Information Reference

- Circuit Testing
- Testing for Intermittent Conditions and Poor Connections
- Connector Repairs
- Wiring Repairs

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Testing

1. Verify SDM DTCs are not set.
 - If any DTCs are set, refer to **Diagnostic Trouble Code (DTC) List - Vehicle**.
2. With a scan tool command the Instrument Cluster to turn all instrument cluster indicators ON and OFF. The air bag indicator should turn ON and OFF as commanded.
 - If the air bag indicator does not turn ON and OFF as expected, replace the P16 instrument cluster.
3. If all circuits test normal, replace the K36 SDM.

Repair Procedures

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

- **SIR/SRS Wiring Repairs**
- **Control Module References** for instrument cluster or SDM replacement, setup, and programming

AIR BAG INDICATOR CIRCUIT MALFUNCTION (PASSENGER)

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Passenger Air Bag OFF Indicator Control	2	2*	4	-
Passenger Air Bag ON Indicator Control	3	3*	5	-
Passenger Air Bag Disable Indicator Ground	-	1	1	-
Passenger Air Bag Switch Signal	2, 5	3, 4	3, 4	-
Passenger Air Bag Switch Ground	-	3, 4	3, 4	-
1. Both indicators always OFF 2. The OFF indicator will not illuminate 3. The ON indicator will not illuminate 4. The OFF indicator always ON 5. The ON indicator always ON * High resistance may cause the appropriate indicator to illuminate less bright than normal				

Circuit/System Description (C99)

When the ignition switch is turned to ON, the sensing and diagnostic module (SDM) continuously checks the air bag enable/disable switch position switch and circuit defect by letting regular voltage flow through the switch circuit and verifying the current. The passenger air bag switch controls when the air bag is enabled or disabled and notifies the driver when the passenger instrument panel air bag is enabled or disabled using the passenger air bag ON/OFF indicators. When the sensing and diagnostic module (SDM) receives the signal from the passenger air bag disable switch (on/off), the SDM will then provide voltage to the appropriate indicator.

Circuit/System Description (ALO)

The passenger air bag ON/OFF indicators are used to notify the driver when the passenger presence system has enabled or disabled the passenger instrument panel air bag. When the ignition is turned ON, the ignition voltage is supplied to the passenger presence module. When the sensing and diagnostic module (SDM) receives the

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

appropriate serial data message from the passenger presence system the SDM will then provide voltage to the appropriate indicator.

Reference Information

Schematic Reference

SIR Schematics

Connector End View Reference

Component Connector End Views

Description and Operation

SIR System Description and Operation

Electrical Information Reference

- Circuit Testing
- Connector Repairs
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs

Scan Tool Reference

Control Module References for scan tool information

Circuit System Verification

NOTE: The passenger air bag ON and OFF indicators may not operate as expected if there are supplemental inflatable restraint (SIR) DTCs. Repair all SIR DTCs before proceeding with this diagnostic.

1. (C99) Observe the scan tool Passenger Air Bag Disabled Switch parameter while commanding the passenger air bag ON and OFF by using the S40 passenger air bag disable switch. The value should change between On and Off. If the value does not change refer to **Passenger Air Bag Disable Switch Circuit System Testing C**.
2. (ALO) Ignition ON, with the passenger seat unoccupied, verify the scan tool Passenger Seat Occupancy Status parameter is Empty. If it is not the Passenger Presence System Module has set a DTC. Diagnose the DTC.
3. With the passenger seat unoccupied, verify the passenger air bag OFF indicator is illuminated. If it is not refer to **Passenger Air Bag Indicator Circuit System Testing**.
4. (ALO) With the passenger seat occupied, verify the scan tool Passenger Seat Occupancy Status parameter is Occupied. If it is not the Passenger Presence System Module has set a DTC. Diagnose the DTC.

5. With the passenger seat occupied, verify the passenger air bag ON indicator is illuminated. If it is not refer to **Passenger Air Bag Indicator Circuit System Testing**.

Passenger Air Bag Disable Switch Circuit System Testing C

1. Ignition OFF, disconnect the harness connector at the S40 passenger air bag disable switch.
2. Test for less than 30 ohms between the ground circuit terminal 3 and ground.
 - If greater than the specified range, test the ground circuit for an open/high resistance. If the circuit tests normal, replace the K36 SDM.
3. Ignition ON, test for 4.75-5.25V between the signal circuit terminal 1 and ground.
 - If less than the specified range, test the signal circuit for a short to ground or an open/high resistance. If the circuit tests normal, replace the K36 SDM.
 - If greater than the specified range, test the signal circuit for a short to voltage. If the circuit tests normal, replace the K36 SDM.
4. If all circuits test normal, replace the S40 passenger air bag disable switch.

Passenger Air Bag Indicator Circuit System Testing

NOTE: **removing connectors inspect for damage or corrosion. Damage or corrosion in the following requires repair or replacement of the affected.**

- **P14 Passenger Air Bag Indicator.**
- **P14 Passenger Air Bag Indicator wiring harness.**

1. Ignition OFF, disconnect the harness connector at the P14 Passenger Air Bag Indicator.
2. Test for less than 5 ohms between the ground circuit terminal 2 and ground.
 - If greater than the specified range, test the ground circuit for an open/high resistance.
3. Ignition ON, with the passenger seat occupied, verify that a test lamp does not illuminate between the control circuit terminal 3 and ground.
 - If the test lamp is illuminated, test the control circuit for a short to voltage. If the circuit tests normal, replace the K36 SDM
4. With the passenger seat unoccupied, verify that a test lamp illuminates between the control circuit terminal 3 and ground.
 - If the test lamp does not illuminate, test the control circuit for a short to ground or an open/high resistance. If the circuit tests normal replace the K36 SDM.
5. With the passenger seat unoccupied verify that a test lamp does not illuminate between the control circuit terminal 1 and ground.
 - If the test lamp is illuminated, test the control circuit for a short to voltage. If the circuit tests normal, replace the K36 SDM.
6. With the passenger seat occupied verify that a test lamp illuminates between the control circuit terminal 1 and ground.
 - If the test lamp does not illuminate, test the control circuit for a short to ground or an open/high resistance. If the circuit tests normal replace the K36 SDM.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

7. If all circuits test normal, replace the P14 Passenger Air Bag Indicator. Refer to **Inflatable Restraint Instrument Panel Module Indicator Replacement**.

Repair Procedures

Perform the **Diagnostic Repair Verification** after completing the diagnostic procedure.

Control Module References for Passenger Air Bag Disable Switch and SDM replacement, setup, and programming

SIR DISABLING AND ENABLING

SIR component location affects how a vehicle should be serviced. There are parts of the SIR system installed in various locations around a vehicle. To find the location of the SIR components refer to **SIR Identification** views.

There are several reasons for disabling the SIR system, such as repairs to the SIR system or servicing a component near or attached to an SIR component. There are several ways to disable the SIR system depending on what type of service is being performed. The following information covers the proper procedures for disabling/enabling the SIR system.

Condition	Action
If the vehicle was involved in an accident with an air bag deployment.	Disconnect the negative battery cable(s) *. Refer to <u>Repairs and Inspections Required After a Collision</u> .
When performing SIR diagnostics.	Follow the appropriate SIR service manual diagnostic procedure(s) *
When moving, removing or replacing an SIR component or a component attached to an SIR component. (Anytime you remove fasteners.)	Disconnect the negative battery cable(s) *
If the vehicle is suspected of having shorted electrical wires.	Disconnect the negative battery cable(s) *
When performing electrical diagnosis on components other than the SIR system.	Remove the SIR/Airbag fuse(s) when indicated by the diagnostic procedure to disable the SIR system
* DTCs will be lost when the negative battery cable is disconnected.	

SIR Service Precautions

WARNING: When performing service on or near the SIR components or the SIR wiring, the SIR system must be disabled. Failure to observe the correct procedure could cause deployment of the SIR components. Serious injury can occur. Failure to observe the correct procedure could also result in unnecessary SIR system repairs.

The inflatable restraint sensing and diagnostic module (SDM) maintains a reserved energy supply. The reserved energy supply provides deployment power for the air bags if the SDM loses battery power during a collision.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Deployment power is available for as much as 1 minute after disconnecting the vehicle power. Waiting 1 minute before working on the system after disabling the SIR system prevents deployment of the air bags from the reserved energy supply.

General Service Instructions

The following are general service instructions which must be followed in order to properly repair the vehicle and return it to its original integrity:

- Do not expose air bags to temperatures above 65°C (149°F).
- Verify the correct replacement part number. Do not substitute a component from a different vehicle.
- Use only original GM replacement parts available from your authorized GM dealer. Do not use salvaged parts for repairs to the SIR system.

Discard any of the following components if it has been dropped from a height of 92 cm (3 feet) or greater:

- Inflatable restraint sensing and diagnostic module (SDM)
- Any air bag
- Driver steering wheel air bag coil
- Any impact sensor
- Seat belt anchor and/or retractor pretensioners
- Passenger presence module and/or occupant sensor

Disabling Procedure Air Bag Fuse

1. Turn the steering wheel so that the vehicles wheels are pointing straight ahead.
2. Place the ignition in the OFF position.

NOTE: The SDM may have more than one fused power input. To ensure there is no unwanted SIR deployment, personal injury, or unnecessary SIR system repairs, remove all fuses supplying power to the SDM. With all SDM fuses removed and the ignition switch in the ON position, the AIR BAG warning indicator illuminates. This is normal operation, and does not indicate a SIR system malfunction.

3. Locate and remove the fuse(s) supplying power to the SDM. Refer to **SIR Schematics** or **Electrical Center Identification** .
4. Wait 1 minute before working on the system.

Enabling Procedure Air Bag Fuse

1. Place the ignition in the OFF position.
2. Install the fuse(s) supplying power to the SDM. Refer to **SIR Schematics** or **Electrical Center Identification** .
3. Turn the ignition switch to the ON position. The AIR BAG indicator will flash then turn OFF.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

4. Perform the Diagnostic System Check - Vehicle if the AIR BAG warning indicator does not operate as described. Refer to **Diagnostic System Check - Vehicle**.

Disabling Procedure - Negative Battery Cable

1. Turn the steering wheel so that the vehicle's wheels are pointing straight ahead.
2. Place the ignition in the OFF position.
3. Disconnect the negative battery cable from the battery. Refer to **Battery Negative Cable Disconnection and Connection**.
4. Wait 1 minute before working on system.

Enabling Procedure - Negative Battery Cable

1. Place the ignition in the OFF position.
2. Connect the negative battery cable to the battery. Refer to **Battery Negative Cable Disconnection and Connection**.
3. Turn the ignition switch to the ON position. The AIR BAG indicator will flash then turn OFF.
4. Perform the Diagnostic System Check - Vehicle if the AIR BAG warning indicator does not operate as described. Refer to **Diagnostic System Check - Vehicle**.

REPAIR INSTRUCTIONS

SIR SERVICE PRECAUTIONS

General Service Instructions

WARNING: When performing service on or near the SIR components or the SIR wiring, the SIR system must be disabled. Refer to **SIR Disabling and Enabling**. Failure to observe the correct procedure could cause deployment of the SIR components, personal injury, or unnecessary SIR system repairs.

NOTE: The inflatable restraint sensing and diagnostic module (SDM) maintains a reserved energy supply. The reserved energy supply provides deployment power for the SIR air bags. Deployment power may be available for up to 60 seconds after disconnecting the vehicle power. Disabling the SIR system prevents deployment of the SIR air bags from the reserved energy supply.

NOTE: The following are general service instructions which must be followed in order to properly repair the vehicle and return it to its original integrity:

- Do not expose air bags to temperatures above 65°C (149°F)
- Verify the correct replacement part number. Do not substitute a component from a different vehicle
- Use only original GM replacement parts available from your authorized GM dealer. Do not use salvaged

parts for repairs to the SIR system

NOT : **iscard any of the following components if it has been dropped from a height of 2 cm (ft) or greater:**

- SDM
- Passenger instrument panel air bag
- Driver steering wheel air bag
- Driver steering wheel air bag coil
- Roof rail air bags
- Front and or side impact sensors
- Seat belt anchor and or retractor pretensioners
- Front seat side air bag

FRONT END INFLATABLE RESTRAINT DISCRIMINATING SENSOR REPLACEMENT

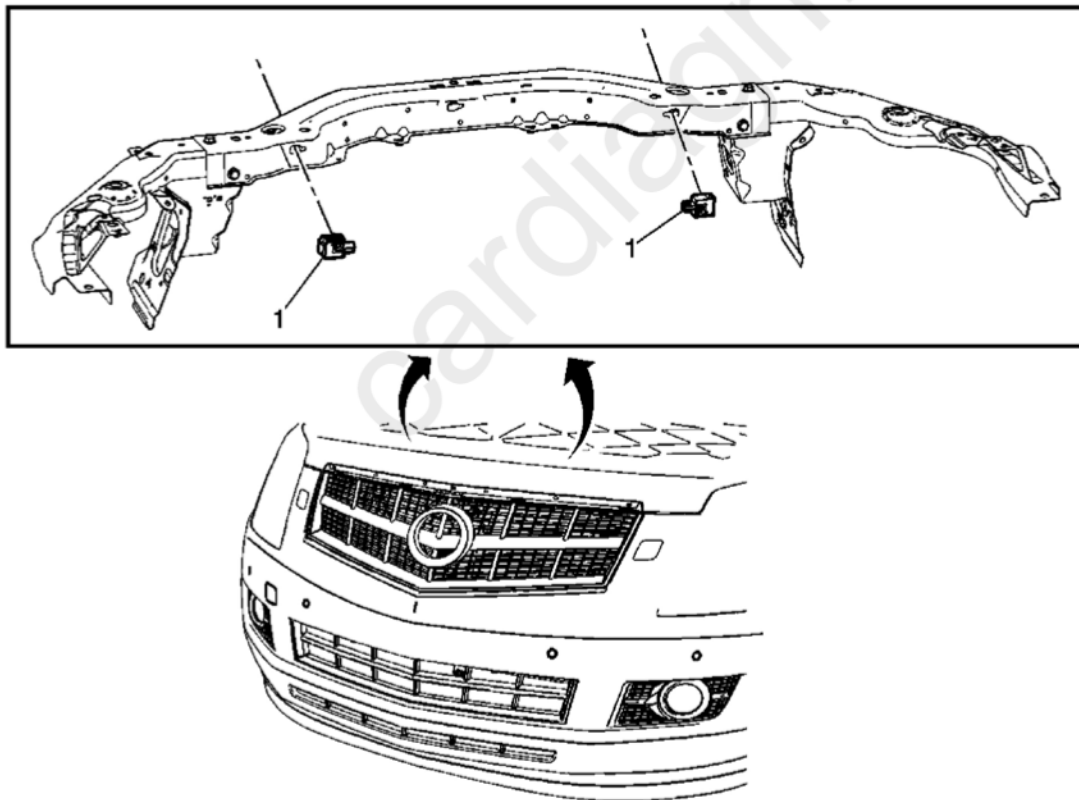


Fig. 5: Identifying Front End Inflatable Restraint Discriminating Sensor
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name

WARNING:

Refer to SIR Warning .

Preliminary Procedures

1. Disable the supplemental inflatable restraint (SIR) system. Refer to SIR Disabling and Enabling.
2. Remove the front sight shield. Refer to Front Compartment Front Sight Shield Replacement .

Inflatable Restraint Front End Discriminating Sensor Assembly

CAUTION:

Refer to Fastener Caution .

1

Procedure

1. Loosen the bolts and slide the sensor out of the keyhole slots.
2. The bolts are integral to the sensor assembly and DO NOT remove separately.

Tighten: 7. N.m (66 lb in)

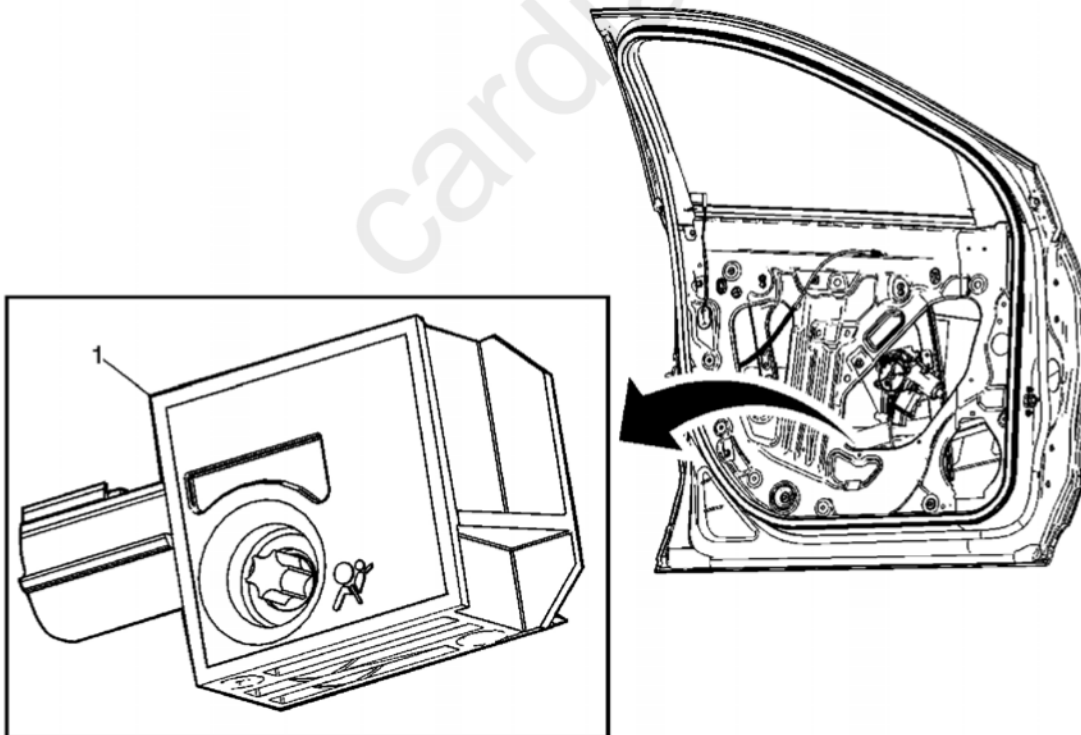
INFLATABLE RESTRAINT SIDE IMPACT SENSOR REPLACEMENT

Fig. 6: Identifying Inflatable Restraint Side Impact Sensor
Courtesy of GENERAL MOTORS CORP.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Callout	Component Name
WARNING: When performing service on or near the SIR components or the SIR wiring, the SIR system must be disabled. Refer to <u>SIR Disabling and Enabling</u> . Failure to observe the correct procedure could cause deployment of the SIR components, personal injury, or unnecessary SIR system repairs.	
WARNING: Do not strike or jolt the inflatable restraint side impact sensor (SIS). Before applying power to the SIS make sure that it is securely fastened. Failure to observe the correct installation procedures could cause SIR deployment, personal injury, or unnecessary SIR system repairs.	
Preliminary Procedures 1. Disable the supplemental inflatable restraint (SIR) system. Refer to <u>SIR Disabling and Enabling</u>. 2. Remove the front side door trim panel. Refer to <u>Front Side Door Trim Replacement</u>.	
1	Inflatable Restraint Side Impact Sensor Assembly CAUTION: Refer to <u>Fastener Caution</u> . Procedure 1. Loosen the fasteners and slide the sensor out of the keyhole slots. 2. The bolts are integral to the sensor assembly, DO NOT remove separately. Tip: The sensor is located on the inside of the front door inner panel. Tighten: 1 N.m (1 lb in)

INFLATABLE RESTRAINT SENSING AND DIAGNOSTIC MODULE REPLACEMENT

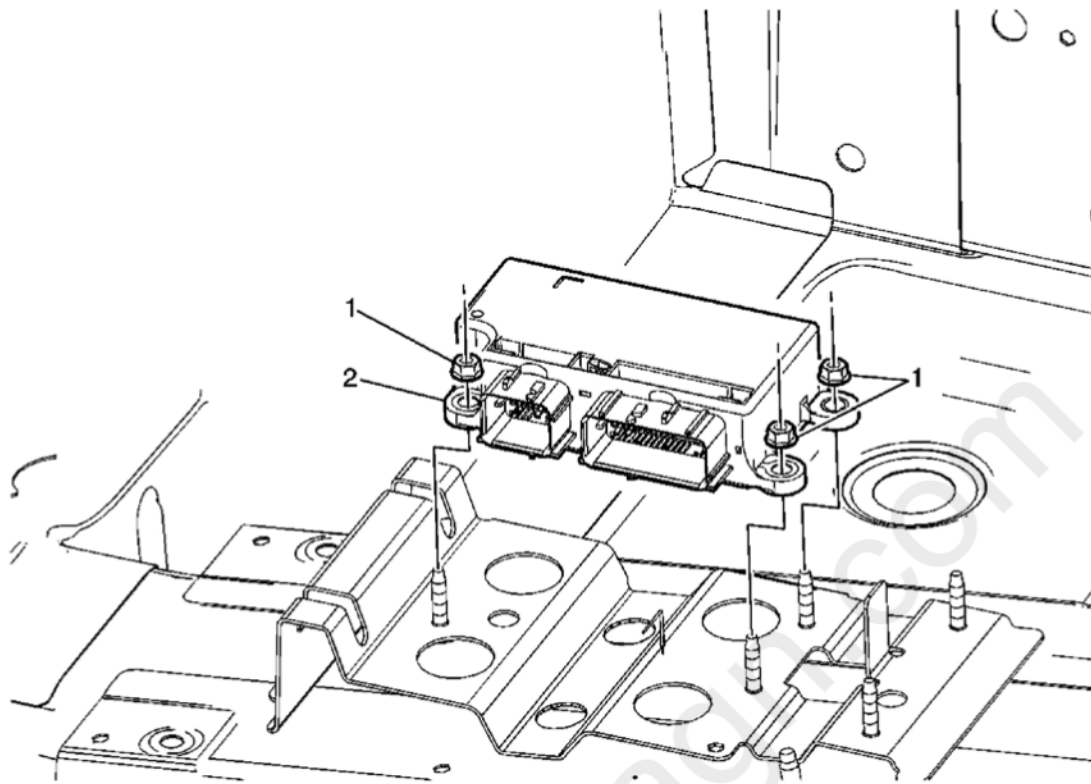


Fig. 7: Identifying Inflation Restraint Sensing & Diagnostic Module
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
WARNING: Do not strike or jolt the inflatable restraint sensing and diagnostic module (SIRSDM). Before applying power to the SIRSDM, make sure that it is securely fastened with the arrow facing toward the front of the vehicle. Failure to observe the correct installation procedure could cause SIR deployment, personal injury, or unnecessary SIR system repairs. WARNING: Refer to SIR Warning. Preliminary Procedures 1. Disable the supplemental inflatable restraint (SIR) system. Refer to SIR Disabling and Enabling. 2. Remove the console. Refer to Front Floor Console Replacement. 3. Remove the auxiliary blower motor. Refer to Auxiliary Blower Motor Replacement. 4. Disconnect the electrical connector.	
	Inflation Restraint Sensing and Diagnostic Module Fastener (Qty: 3)
	CAUTION:

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

1	Refer to <u>Fastener Caution</u> . Tighten: 7 N.m (6 lb in)
2	Inflatable Restraint Sensing and Diagnostic Module Assembly Tip: • When installing, ensure the arrow on the module is pointed towards the front of the vehicle. • If installing a replacement module, program the module. Refer to <u>Control Module References</u> .

STEERING WHEEL INFLATABLE RESTRAINT MODULE REPLACEMENT

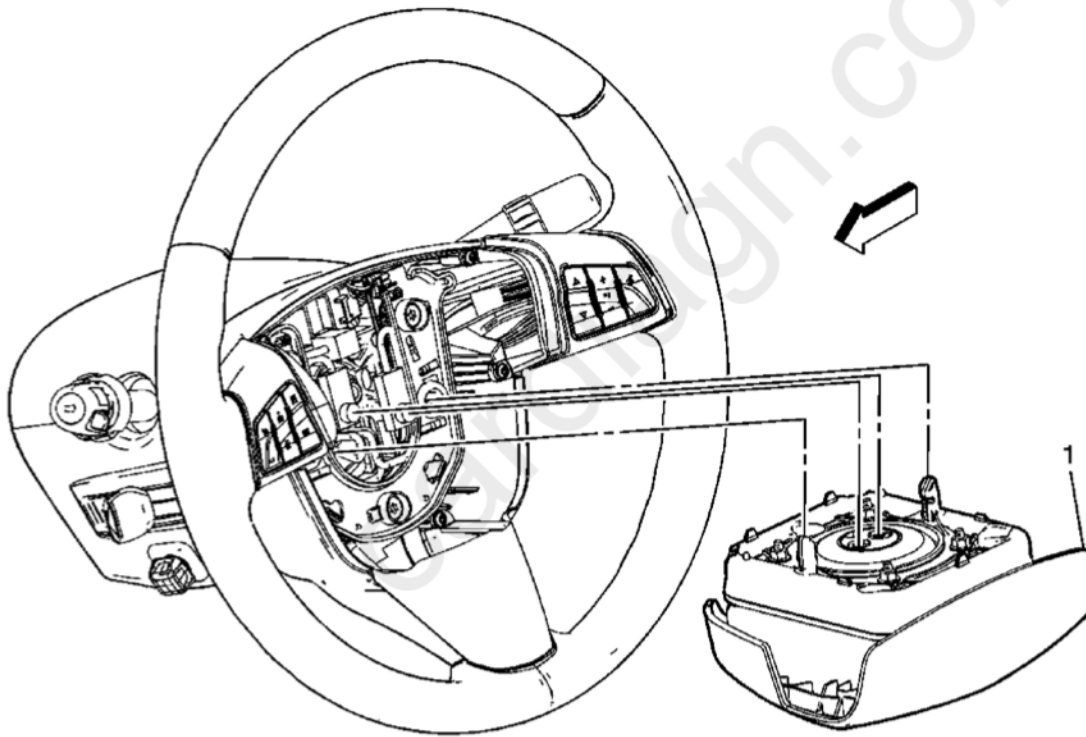


Fig. 8: Identifying Inflatable Restraint Steering Wheel Module
Courtesy of GENERAL MOTORS CORP.


Callout	Component Name
WARNING: Refer to <u>SIR Inflator Module Handling and Storage Warning</u> . WARNING: Refer to <u>SIR Warning</u> .	

Preliminary Procedures

1. Disable the SIR system. Refer to **SIR Disabling and Enabling**.
2. On the side of the steering wheel are 2 circular openings, place the wheel so that one opening is on top.
3. Using a blunt-ended tool, push the spring fastener inward through the access hole. Repeat the step for the other opening.

Steering Wheel Inflatable Restraint Module**Procedure**

1. Release the connector position assurance (CPA) retainer.
2. Disconnect the electrical connectors.
3. Fully deploy the module before disposal. If the module was replaced under warranty, fully deploy and dispose of the module after the required retention period. Refer to **Inflatable Restraint Module Handling and Scrapping**.

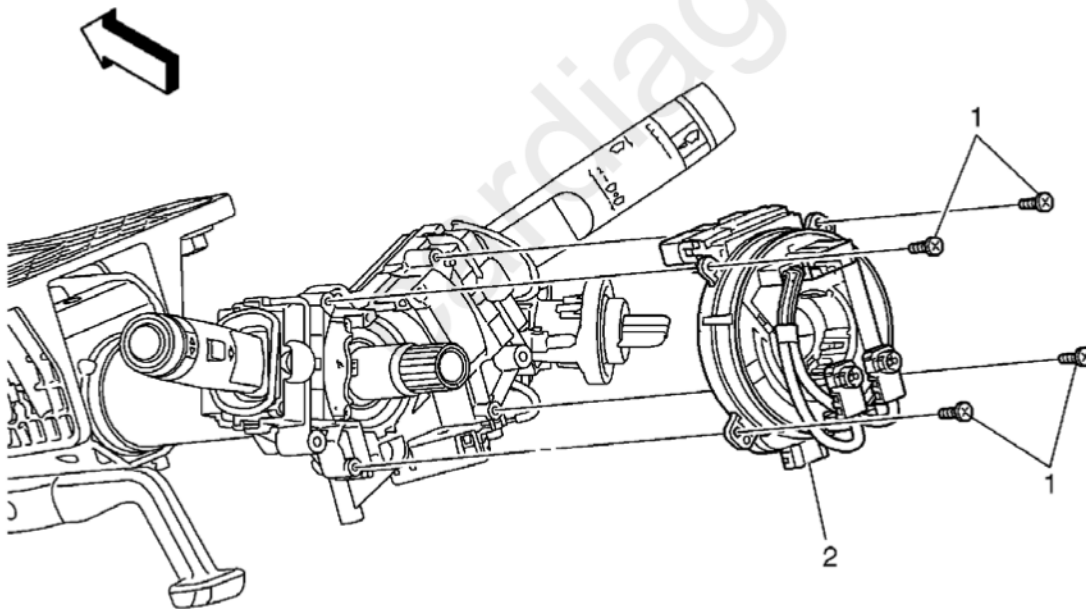STEERING WHEEL INFLATABLE RESTRAINT MODULE COIL REPLACEMENT**Fig. : Identifying Steering Wheel Inflatable Restraint Module Coil**

Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedures	
1. Remove the steering wheel. Refer to <u>Steering Wheel Replacement</u>.	

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

2. Remove the steering column shroud. Refer to **Steering Column Shroud Replacement** .

1

Inflatable Restraint Steering Wheel Module Coil Bolt (Qty: 4)

CAUTION:

Refer to **Fastener Caution** .

Tighten: 3 N.m (27 lb in)

2

Inflatable Restraint Steering Wheel Module Coil

Procedure

1. Disconnect any electrical connectors as necessary.
2. Transfer the steering angle sensor. Refer to **Steering Angle Sensor Replacement** .
3. Ensure the coil is centered during installation. If you are installing a NEW coil, remove the centering tab AFTER the coil is on the steering column. Refer to **Inflatable Restraint Steering Wheel Module Coil Centering**.

INFLATABLE RESTRAINT STEERING WHEEL MODULE COIL CENTERING

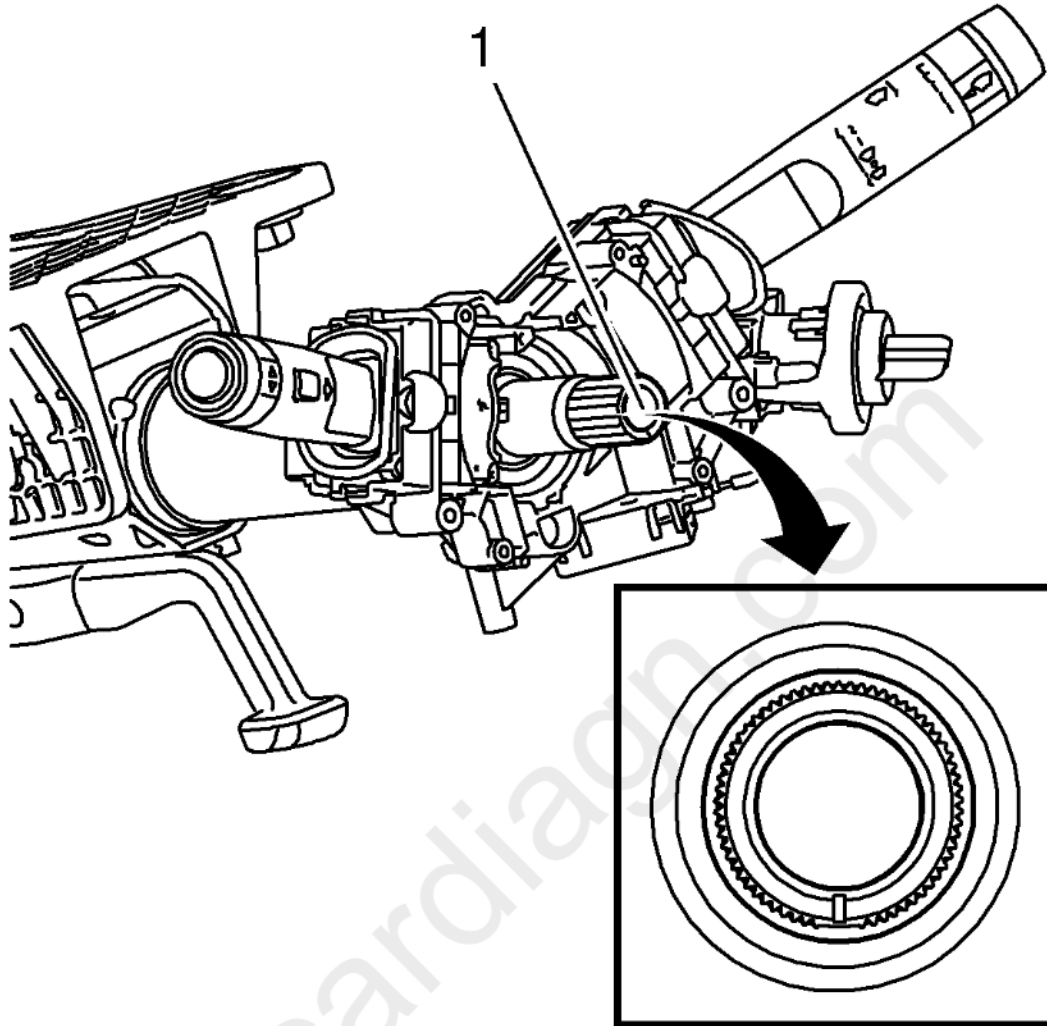


Fig. 1 : Identifying Inflatable Restraint Steering Wheel Module Coil
Courtesy of GENERAL MOTORS CORP.

CAUTION: The new SIR coil assembly will be centered. Improper alignment of the SIR coil assembly may damage the unit, causing an inflatable restraint malfunction.

1. Verify the following conditions before centering the supplemental inflatable restraint (SIR) steering wheel module coil:
 - The wheels on the vehicle are straight ahead.
 - The centering mark (1) of the steering shaft is in the 6 o'clock position.
2. Turn the lobe of the clock spring clockwise until the coil ribbon stops. Do not force.
3. Turn the lobe of the clock spring counterclockwise approximately 3 turns to the Neutral position.

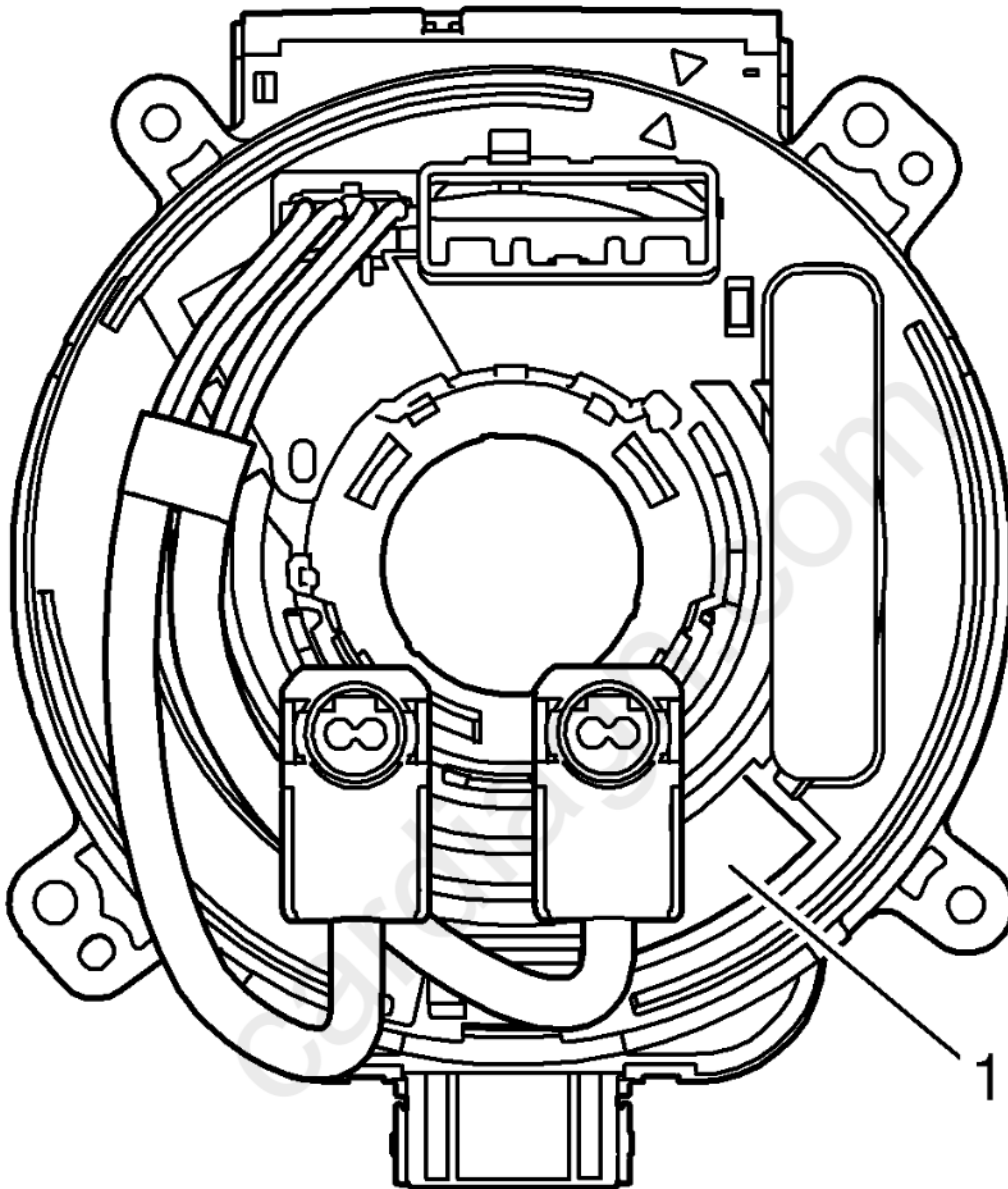


Fig. 11: Locating Centering window
Courtesy of GENERAL MOTORS CORP.

4. Properly align until the centering window turns yellow (1). This indicates the CENTER position.

INSTRUMENT PANEL INFLATABLE RESTRAINT MODULE REPLACEMENT

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

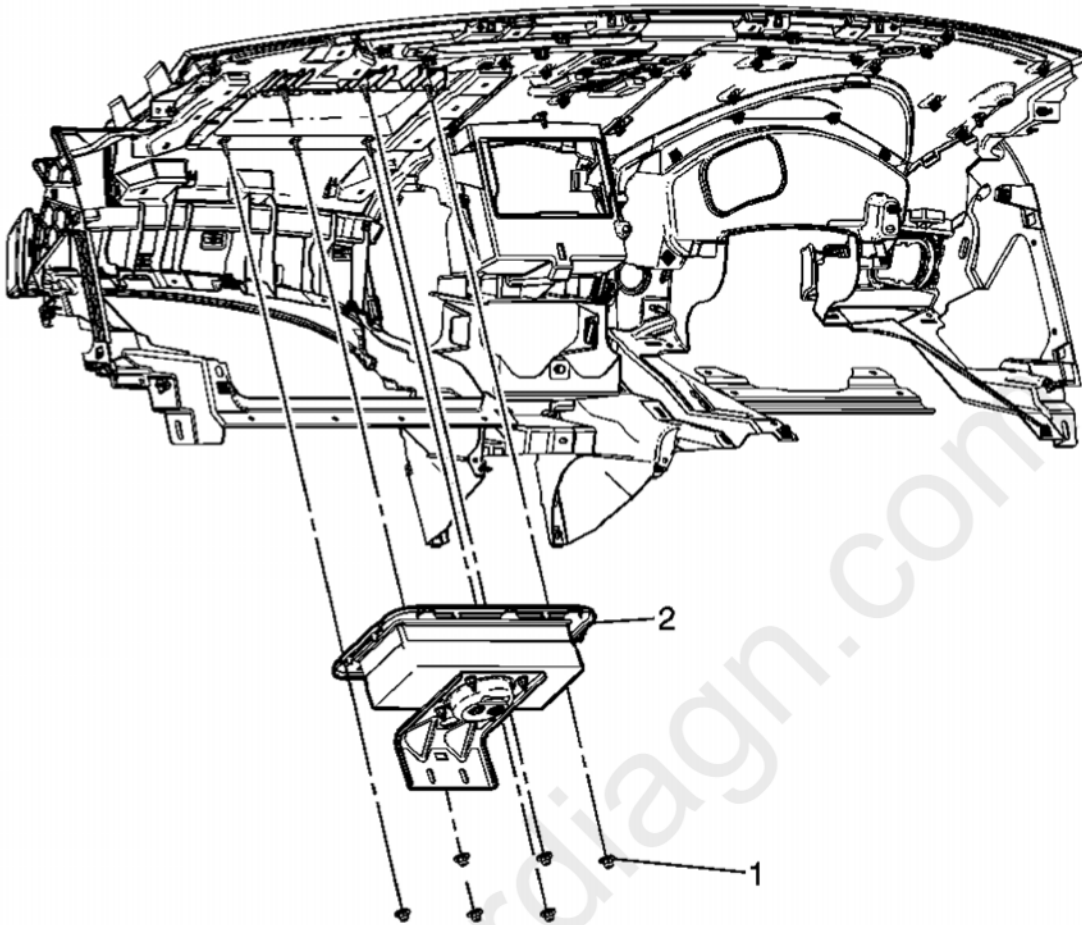


Fig. 1 : Identifying Instrument Panel Inflatable Restraint Module
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
WARNING: Refer to <u>SIR Inflator Module Handling and Storage Warning</u> .	
WARNING: Refer to <u>SIR Warning</u> .	
Preliminary Procedures	
1. Disable the SIR system. Refer to <u>SIR Disabling and Enabling</u> .	
2. Remove the instrument panel assembly. Refer to <u>Instrument Panel Assembly Removal</u> .	
3. Remove the air distribution duct. Refer to <u>Air Distributor Duct Replacement</u> .	
	Instrument Panel Inflatable Restraint Module Nut (Qty: 6)

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

1	CAUTION: Refer to Fastener Caution . Tighten: 9 N.m (79 lb in)
2	Instrument Panel Inflatable Restraint Module Procedure: Fully deploy the module before disposal. If the module was replaced under warranty, fully deploy and dispose of the module, after the required retention period. Refer to Inflatable Restraint Module Handling and Scrapping .

INFLATABLE RESTRAINT FRONT PASSENGER PRESENCE SENSOR REPLACEMENT

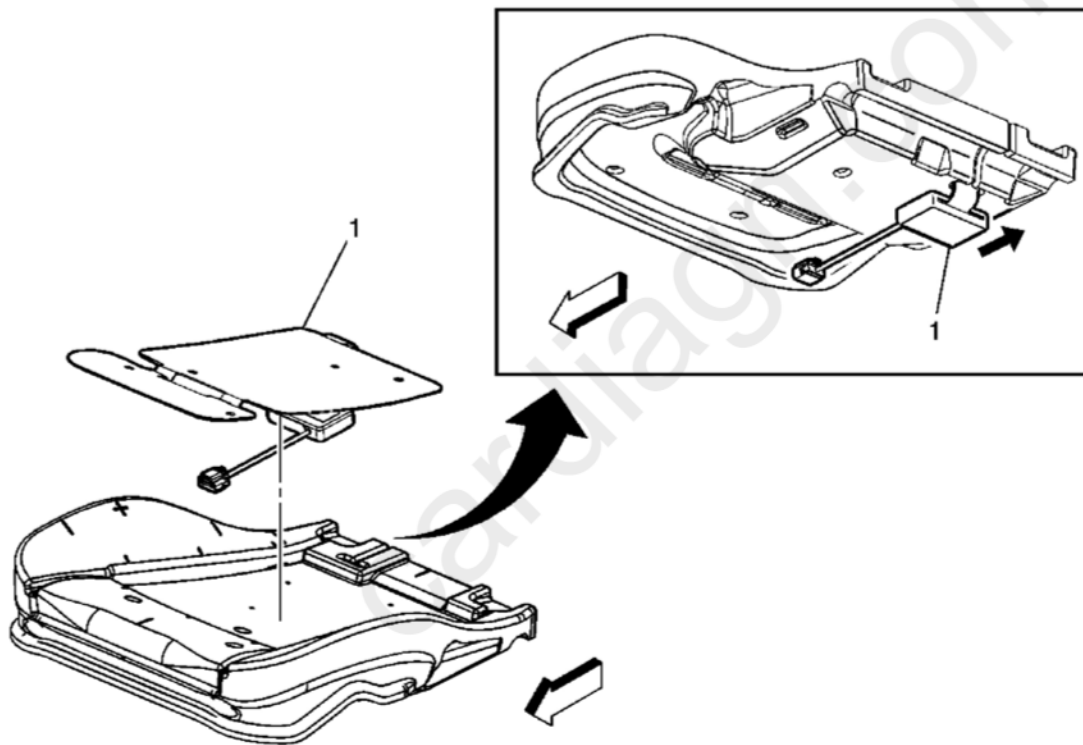


Fig. 13: View Of Inflatable Restraint Front Passenger Presence Sensor
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
WARNING: Replace the passenger presence system as a complete assembly to prevent possible injury to the occupant. All the components in the service kit are assembled and calibrated as a unit. Using only some of the components in the service kit will cause the passenger presence system to operate improperly.	
WARNING:	

To avoid personal injury, perform a preload test on the passenger presence system whenever you remove or replace the seat cushion trim. Failure to do so may cause the system to malfunction.

Preliminary Procedure

1. Remove the passenger front seat. Refer to **Driver or Passenger Seat Replacement** .
2. Remove the front seat cushion cover and pad. Refer to **Front Seat Cushion Cover and Pad Replacement** .

Inflatable Restraint Front Passenger Presence System Assembly

Procedures

1

1. Preload Test the inflatable restraint passenger presence system whenever the seat cushion or any component of the passenger presence system is removed. Refer to **Passenger Presence System Preload Test**.
2. Program the inflatable restraint passenger presence system after replacement. Refer to **Control Module References** .
3. Disengage the inflatable restraint sensor bracket with the sensor from the seat cushion spring.
4. Disengage the sensor from the bracket.
5. Disengage the passenger presence system assembly from the seat cushion by sliding the sensor belt through the cushion pad.

Tip:

- The passenger presence system is an integral part of the pad on the passenger seat cushion.
- The sensor, module and seat cushion pad must be replaced as a unit.
- Note the routing of the wiring harness and connector location for installation.

INFLATABLE RESTRAINT DRIVER SEAT POSITION SENSOR REPLACEMENT

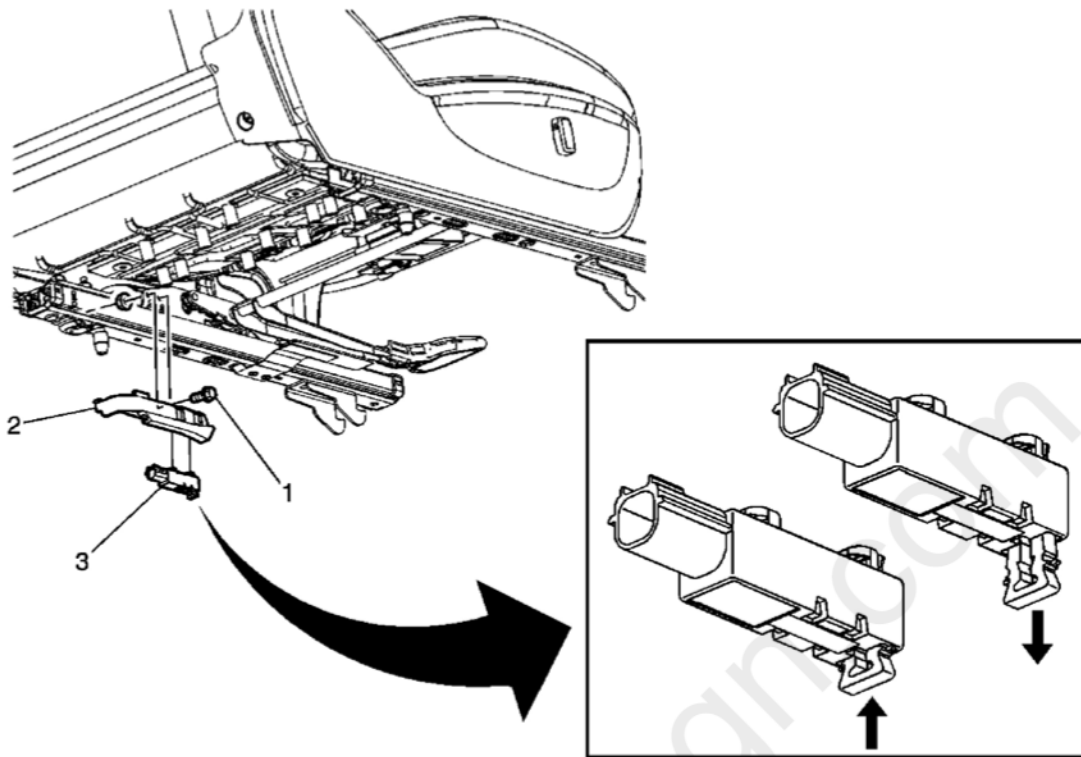


Fig. 14: Identifying Inflatable Restraint Driver Or Passenger Seat Position Sensor
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
WARNING: Refer to <u>SIR Warning</u> .	
Preliminary Procedures	
1. Disable the supplemental inflatable restraint (SIR) system. Refer to <u>SIR Disabling and Enabling</u> . 2. Remove the driver or passenger seat. Refer to <u>Driver or Passenger Seat Replacement</u> .	
1	Inflatable Restraint Seat Position Sensor Screw CAUTION: Refer to <u>Fastener Caution</u> . Tighten: 3 N.m (25 lb in)
2	Inflatable Restraint Seat Position Sensor Bracket Assembly Procedure: Disconnect the electrical connector.
3	Inflatable Restraint Seat Position Sensor

INFLATABLE RESTRAINT FRONT PASSENGER POSITION SENSOR BRACKET REPLACEMENT

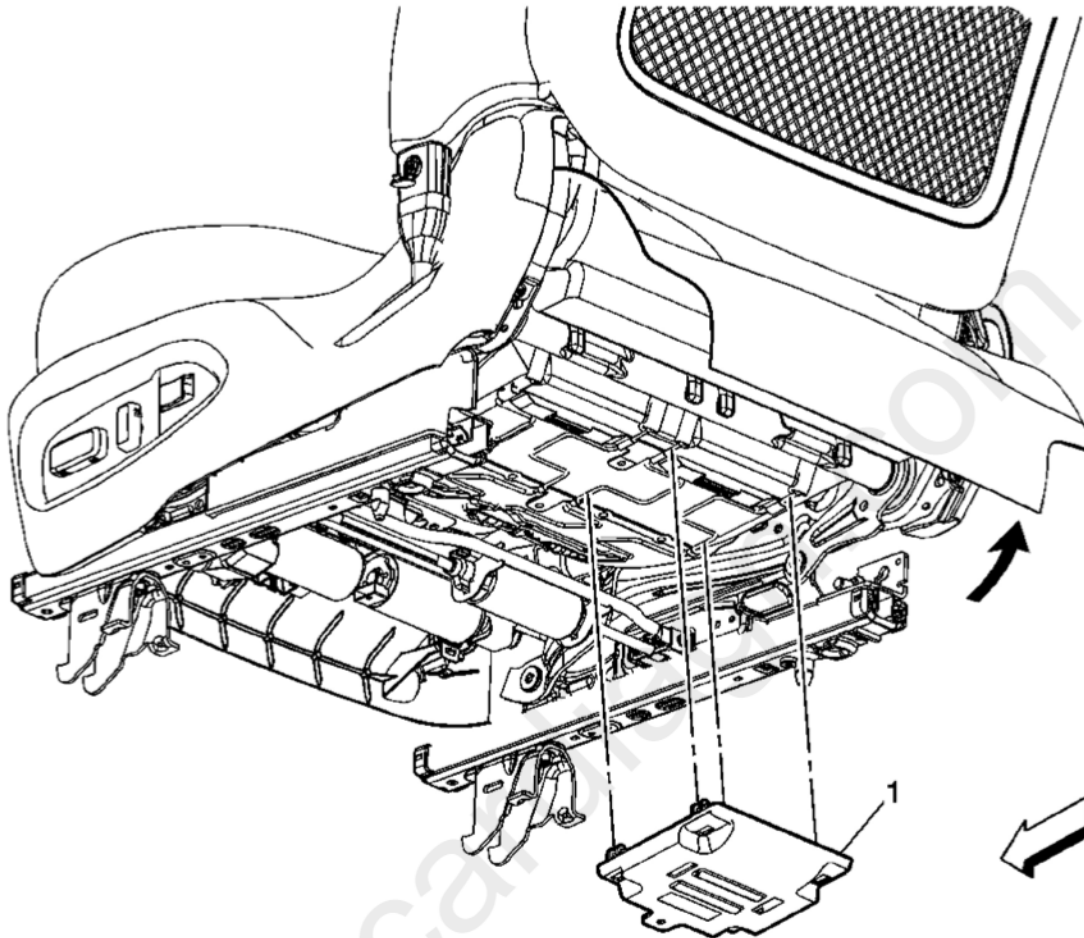


Fig. 15: Identifying Front Passenger Position Sensor Bracket
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure: Remove the front seat. Refer to Driver or Passenger Seat Replacement .	
1	Inflatable Restraint Front Passenger Position Sensor Bracket Procedure 1. Detach the seat back cushion cover bottom two bungee clips from the crossbar to gain access to the sensor bracket. 2. Disconnect the electrical connectors, if equipped. 3. Remove the front passenger position sensor bracket from the seat cushion pad support spring wires.

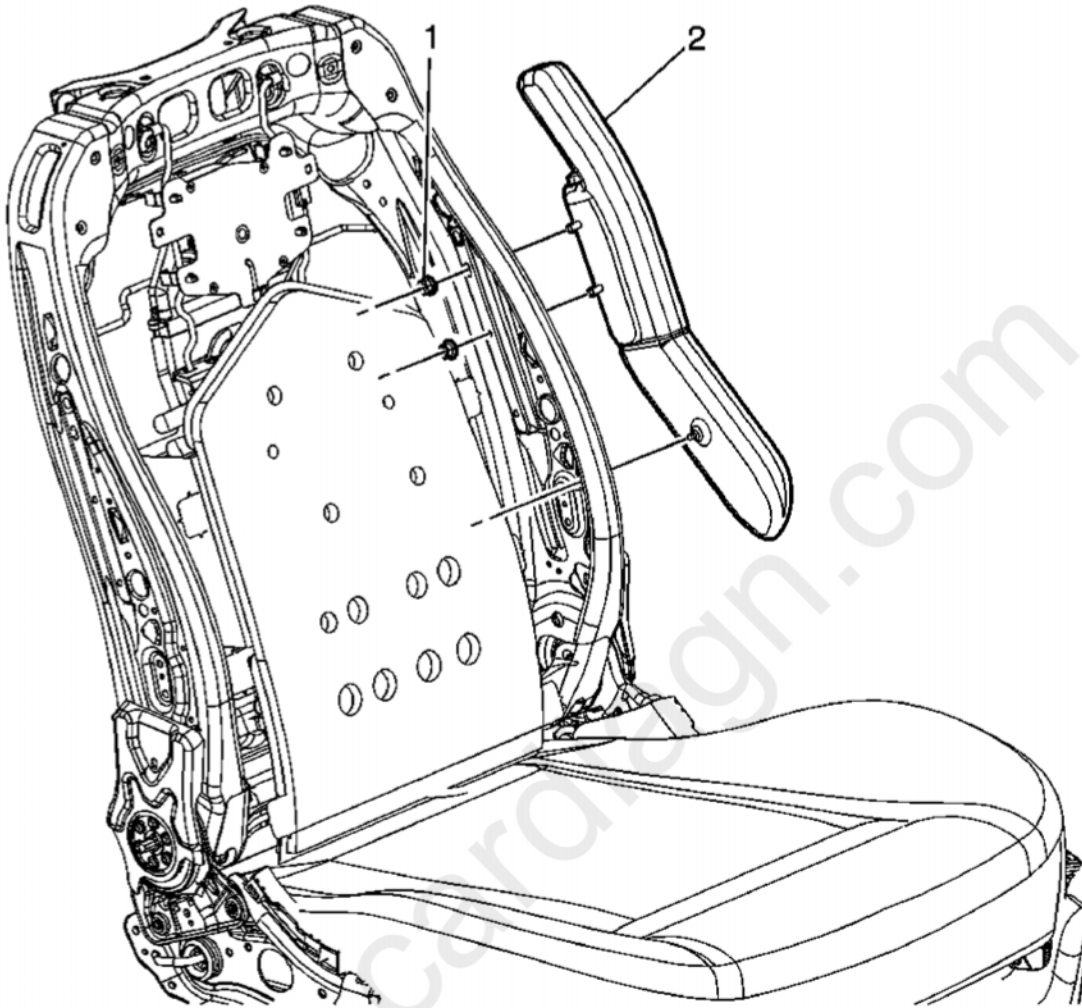
DRIVER OR PASSENGER SEAT SIDE INFLATABLE RESTRAINT MODULE REPLACEMENT

Fig. 16: Identifying Seat Side Inflatable Restraint Module
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
WARNING: Following the deployment of a side impact air bag, inspect the following parts for damage. Replace these parts if necessary:	
• The seat cushion frame • The seat recliner, if equipped • The seat adjuster • The seat back frame	

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Failure to do so may cause future personal injury.

WARNING:

Do not strike or jolt the inflatable restraint side impact sensor (SIS). Before applying power to the SIS make sure that it is securely fastened. Failure to observe the correct installation procedures could cause SIR deployment, personal injury, or unnecessary SIR system repairs.

Preliminary Procedure

1. Disable the SIR system. Refer to **SIR Disabling and Enabling**.
2. Remove the driver or passenger seat. Refer to **Driver or Passenger Seat Replacement**.
3. Remove the driver or passenger seat back cushion cover and pad. Refer to **Driver or Passenger Seat Back Cushion Cover and Pad Replacement**.

1	Driver or Passenger Seat Side Inflatable Restraint Module Nut (Qty: 2) CAUTION: Refer to <u>Fastener Caution</u>. Tighten: N.m (80 lb in)
2	Driver or Passenger Seat Side Inflatable Restraint Module Procedure 1. Remove the connector position assurance (CPA) from the module electrical connector. 2. Disconnect the electrical connector. 3. Remove the seat back cushion cover and inflatable restraint module from the seat cushion frame as an assembly. Refer to <u>Driver or Passenger Seat Back Cushion Cover and Pad Replacement</u> 4. Remove the inflatable restraint module from the seat cover pocket. 5. Fully deploy the module before disposal. If the module was replaced under warranty, fully deploy and dispose of the module after the required retention period. Refer to <u>Inflatable Restraint Module Handling and Scrapping</u>.

INFLATABLE RESTRAINT REAR SIDE DOOR SIDE IMPACT SENSOR REPLACEMENT

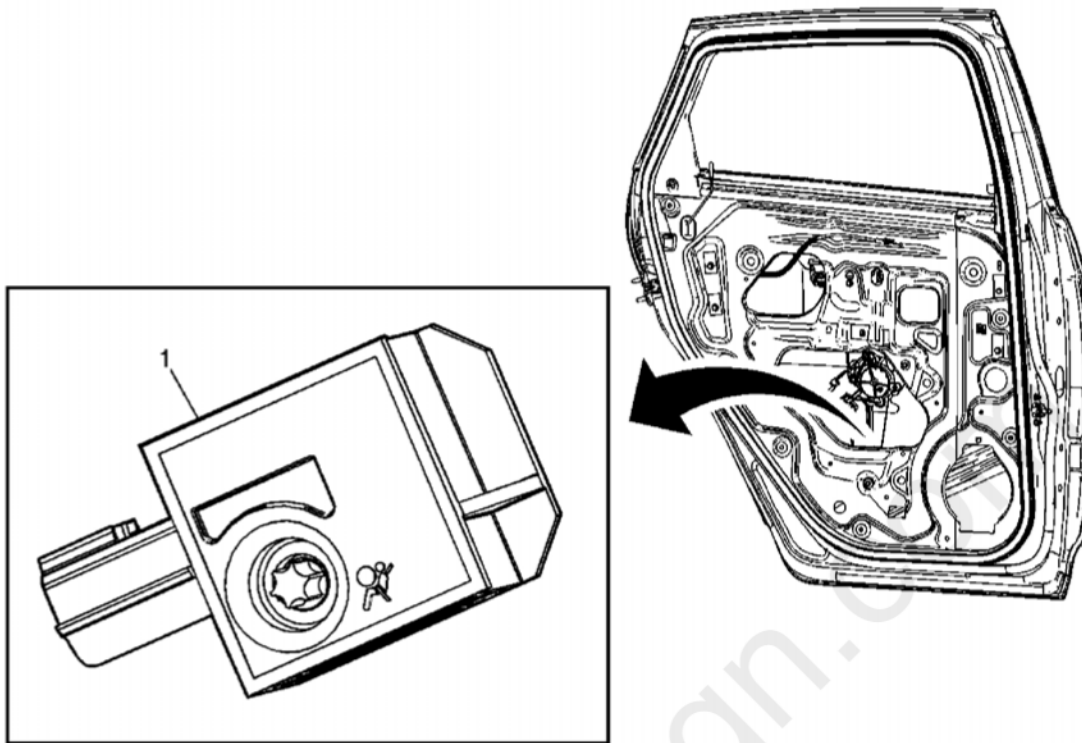


Fig. 1 : View Of Inflatable Restraint Side Impact Sensor - Rear Side Door
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
WARNING: When performing service on or near the SIR components or the SIR wiring, the SIR system must be disabled. Refer to <u>SIR Disabling and Enabling</u>. Failure to observe the correct procedure could cause deployment of the SIR components, personal injury, or unnecessary SIR system repairs. WARNING: Do not strike or jolt the inflatable restraint side impact sensor (SIS). Before applying power to the SIS make sure that it is securely fastened. Failure to observe the correct installation procedures could cause SIR deployment, personal injury, or unnecessary SIR system repairs. Preliminary Procedures 1. Disable the supplemental inflatable restraint (SIR) system. Refer to <u>SIR Disabling and Enabling</u>. 2. Remove the rear side door trim panel. Refer to <u>Rear Side Door Trim Replacement</u>.	
	Inflatable Restraint Rear Side Door Impact Sensor Assembly CAUTION: Refer to <u>Fastener Caution</u> .

Procedure

1

1. Loosen the fasteners and slide sensor out of key hole slots.
2. The bolts are integral to the sensor assembly, DO NOT remove separately.

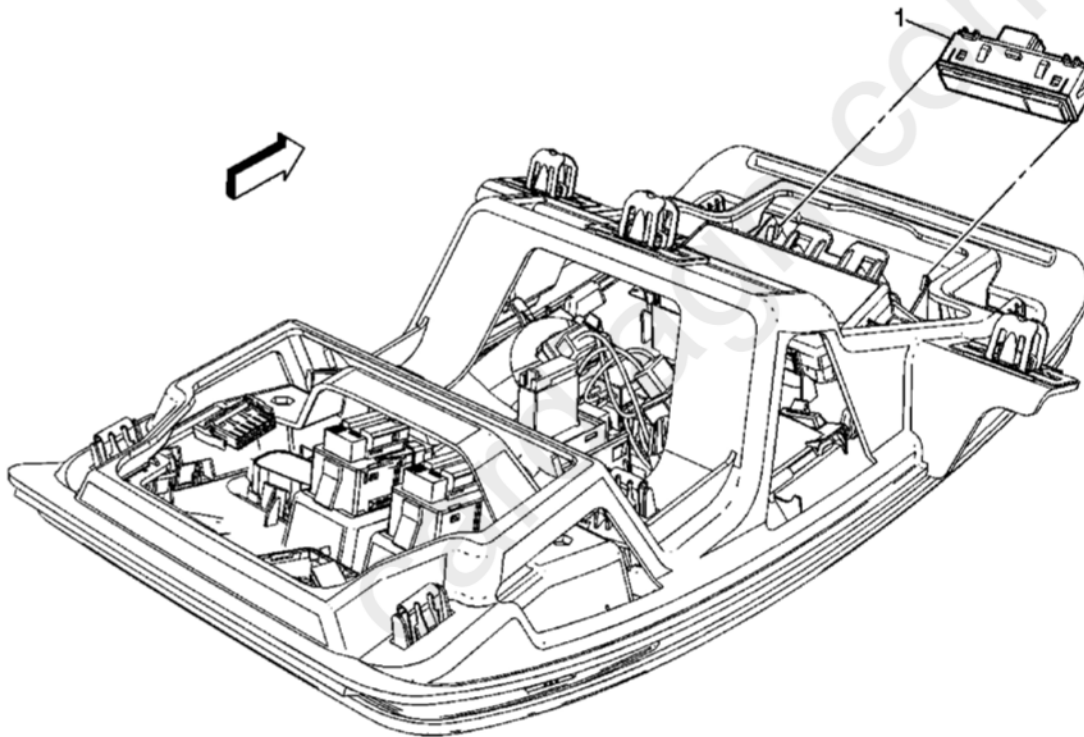
Tip: The sensor is located on the inside of the rear door inner panel.**Tighten:** 10 N.m (8 lb in)**INFLATABLE RESTRAINT INSTRUMENT PANEL MODULE INDICATOR REPLACEMENT**

Fig. 1 : Identifying Inflatable Restraint Instrument Panel Module Indicator
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure: Remove the roof console. Refer to Roof Console Replacement .	
1	Inflatable Restraint Instrument Panel Module Indicator Assembly Procedure: Unsnap the indicator from the roof console bezel.

ROOF SIDE RAIL INFLATABLE RESTRAINT MODULE REPLACEMENT

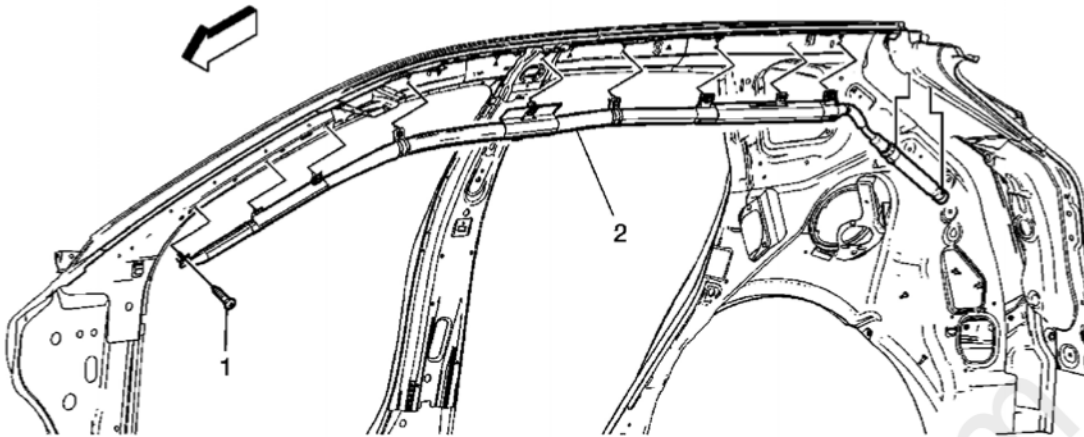


Fig. 1 : Identifying Roof Side Rail Inflatable Restraint Module
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
WARNING: In order to prevent SIR deployment, personal injury, or unnecessary SIR system repairs, do not strike the door or the door pillar in the area of the side impact sensor (SIS). Turn OFF the ignition and remove the key when performing service in the area of the SIS. WARNING: When installing the roof rail airbag, do not twist or turn the airbag 0 degrees. Securing the roof rail airbag with an airbag twisted or turned 0 degrees may cause the airbag not to deploy correctly and could cause personal injury. WARNING: Refer to <u>SIR Warning</u> . WARNING: Refer to <u>SIR Inflator Module Handling and Storage Warning</u> . Preliminary Procedures 1. Disable the SIR system. Refer to <u>SIR Disabling and Enabling</u>. 2. It is only necessary to lower the headliner. Only do those steps in headliner replacement that will lower the headliner enough to gain access to the part. Refer to <u>Headlining Trim Panel Replacement With C U</u> or <u>Headlining Trim Panel Replacement Without C U</u> .	
1	Roof Side Rail Inflatable Restraint Module Fastener (ty:) CAUTION: Refer to <u>Fastener Caution</u> .

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

	Tighten: N.m (80 lb in)
2	Roof Side Rail Inflatable Restraint Module Assembly Procedure 1. Disconnect the electrical connector. 2. Remove the 2 push in retainers securing the roof side rail inflatable restraint module to the vehicle. 3. Remove the roof side rail inflatable restraint module from the vehicle. 4. Fully deploy the module before disposal. If the module was replaced under warranty, fully deploy and dispose of the module after the required retention period. Refer to <u>Inflatable Restraint Module Handling and Scrapping</u>. Tip: The bolts and the push in fasteners are an integral part of the module and should remain with the module.

DRIVER OR PASSENGER SEAT BELT TENSIONER REPLACEMENT

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

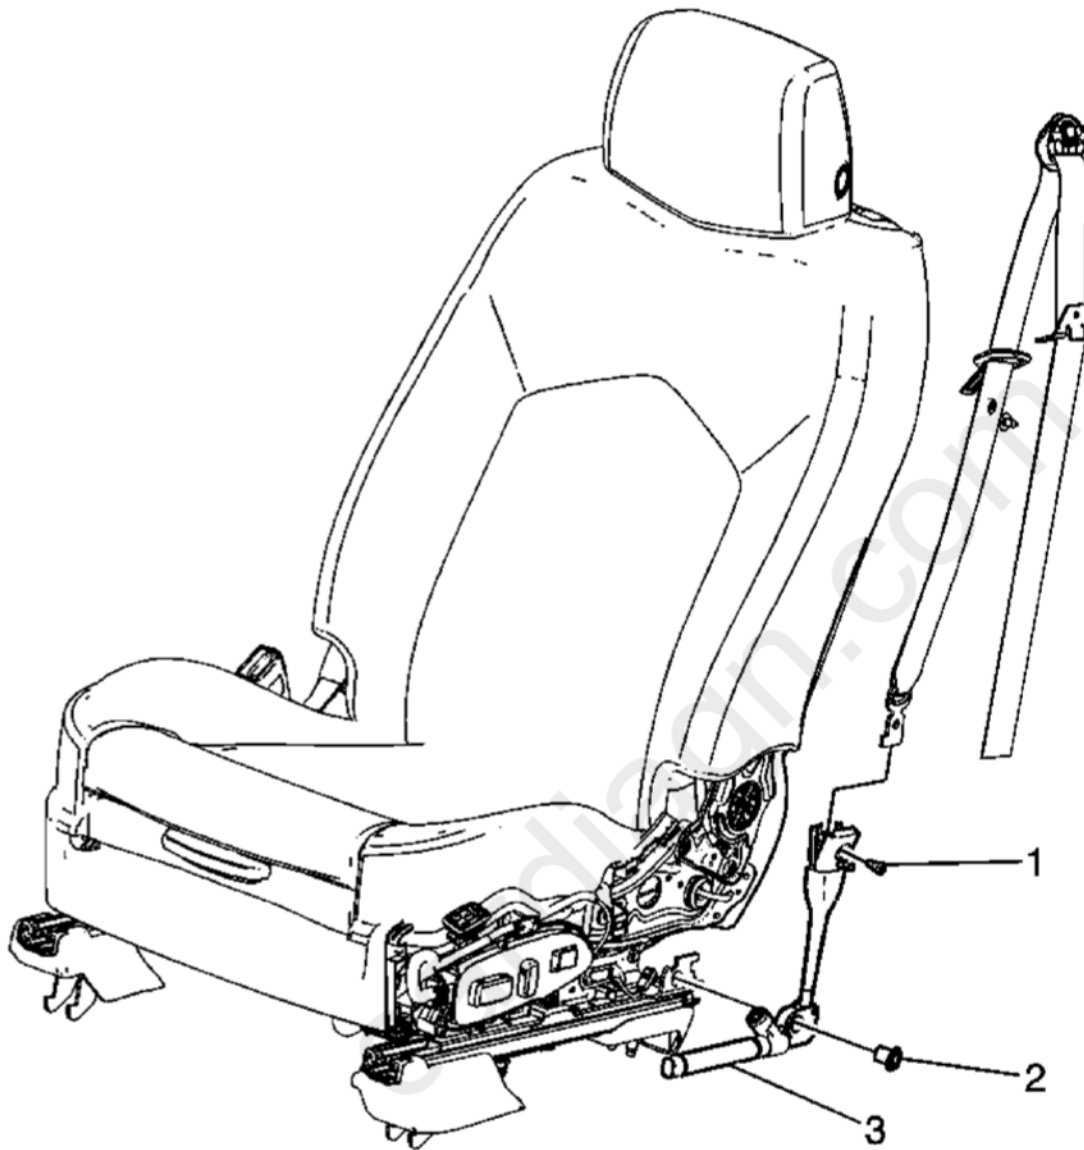


Fig. 20: View Of Seat Belt Tensioner
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
WARNING: Refer to SIR Warning .	
WARNING: In order to prevent accidental deployment and the risk of personal injury, do not dispose of an undeployed inflatable restraint seat belt pretensioner as normal shop waste. Undeployed seat belt pretensioners contain substances that could cause severe illness or personal injury if their sealed containers are damaged during disposal. Use the following deployment procedures to safely dispose of an undeployed seat belt pretensioner. Failure to observe the following disposal methods	

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

may be a violation of federal, state, or local laws.

Preliminary Procedures

1. Move the front seat to the full forward and full up position.
2. Disable the SIR. Refer to **SIR Disabling and Enabling**.
3. Remove the seat outer adjuster finish cover. Refer to **Driver or Passenger Seat Outer Adjuster Finish Cover Replacement**.
4. Remove the seat outer adjuster auxiliary finish cover. Refer to **Front Seat Outer Adjuster Auxiliary Finish Cover Replacement**.
5. For pretensioner handling and scrapping. Refer to **Pretensioner Handling and Scrapping**.

1	Driver or Passenger Seat Belt Tensioner Fastener CAUTION: Refer to <u>Fastener Caution</u> . Tighten: 6 N.m (53 lb in)
2	Driver or Passenger Seat Belt Tensioner Assembly Fastener Tighten: 45 N.m (33 lb ft)
3	Driver Seat Belt Tensioner Assembly Procedure: Disconnect the electrical connector.

SEAT BELT RETRACTOR PRETENSIONER REPLACEMENT - FRONT

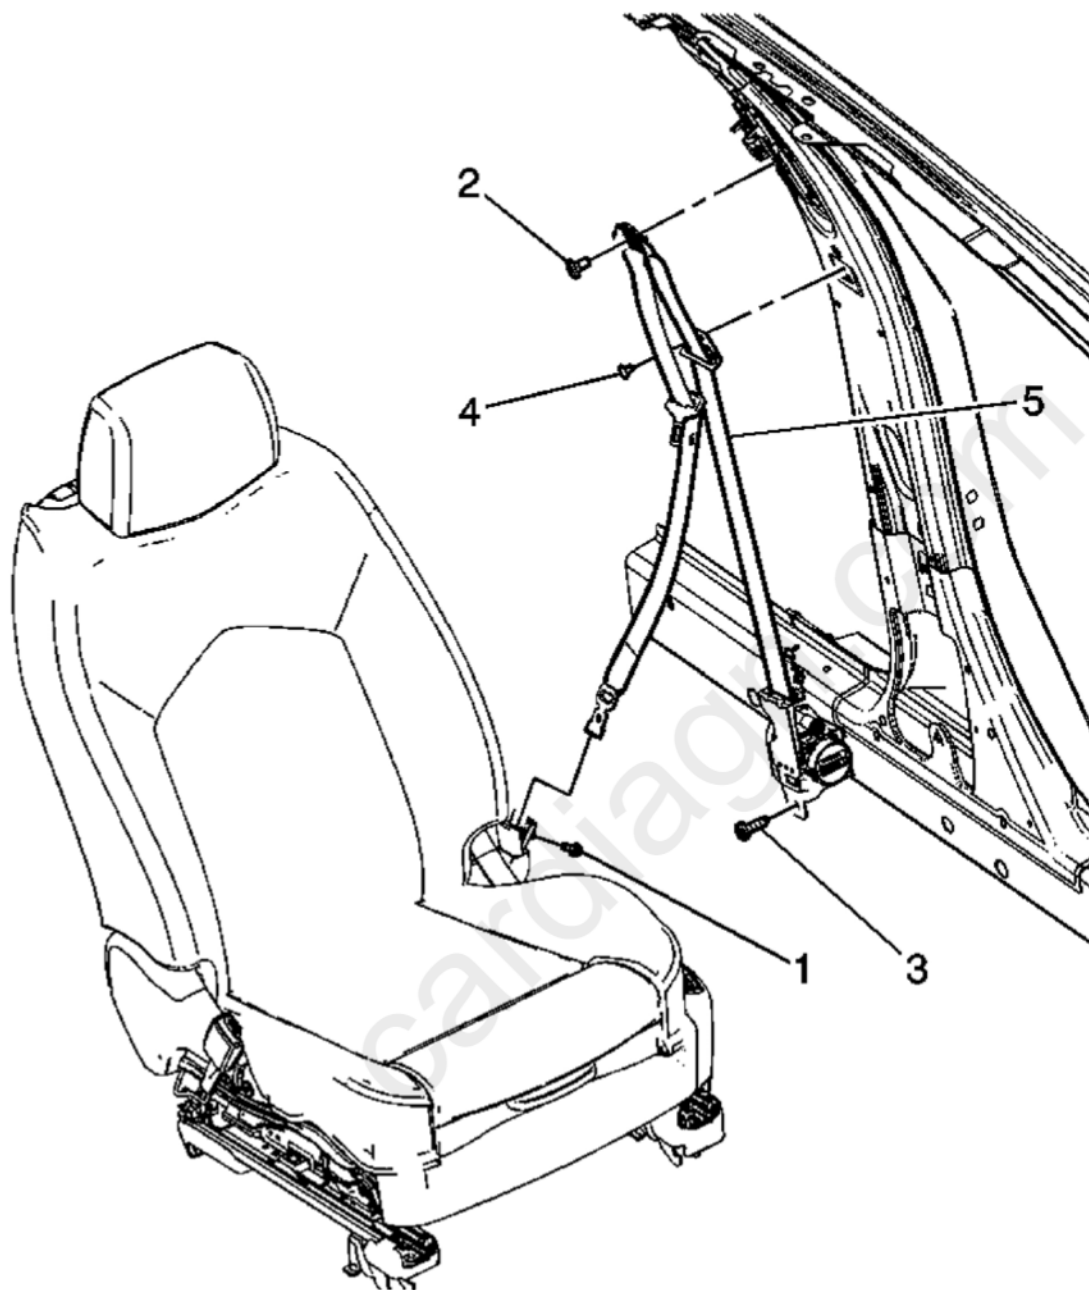


Fig. 21: Identifying Front Seat Belt Retractor Pretensioner
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
WARNING: In order to prevent accidental deployment and the risk of personal injury, do not dispose of an undeployed inflatable restraint seat belt pretensioner as normal shop waste. Undeployed seat belt pretensioners contain substances that could cause severe illness or personal injury if their sealed containers are damaged during disposal. Use the following deployment procedures to safely	

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

dispose of an undeployed seat belt pretensioner. Failure to observe the following disposal methods may be a violation of federal, state, or local laws.

WARNING:

Refer to **SIR Warning** .

WARNING:

Refer to **SIR Inflator Module Handling and Storage Warning** .

Preliminary Procedures

1. Move the front seat to a full forward and full up position.
2. Disable the SIR. Refer to **SIR Disabling and Enabling**.
3. Remove the upper and lower center pillar trim panel. Refer to **Center Pillar Upper Trim Panel Replacement** and **Center Pillar Lower Trim Panel Replacement** .

1	Driver or Passenger Front Seat Belt Tensioner Fastener CAUTION: Refer to <u>Fastener Caution</u> . Tip: Remove seat belt tensioner cover to access the fastener. Tighten: 6 N.m (53 lb in)
2	Front Seat Belt Pretensioner Fastener Tighten: 42 N.m (31 lb ft)
3	Seat Shoulder Belt Retractor Fastener Tighten: 45 N.m (33 lb ft)
4	Seat Belt Push On Retainer Tip: Use a flat-bladed tool to remove locking pin in retainer.
5	Seat Belt Retractor Pretensioner Assembly Procedure 1. Disconnect electrical connector. 2. Fully deploy the module before disposal. If the module was replaced under warranty, fully deploy and dispose of the module after the required retention period. Refer to <u>Pretensioner Handling and Scrapping</u>.

REPAIRS AND INSPECTIONS REQUIRED AFTER A COLLISION

Accident With or Without Air Bag Deployment - Component Inspections

WARNING: Proper operation of the Supplemental Inflatable Restraint (SIR) sensing system requires that any repairs to the vehicle structure return the vehicle structure to the original production configuration. Not properly repairing the vehicle structure could cause non-deployment of the air bag(s) in a frontal collision or deployment of the air bag(s) for conditions less severe than intended.

After any collision, inspect the following components as indicated. If you detect any damage, replace the component. If you detect any damage to the mounting points or mounting hardware, repair the component or replace the hardware as needed.

- The steering column - Inspect the steering column for bending, twisting, buckling or any type of damage.
- The instrument panel knee bolsters and mounting points - Inspect the knee bolsters for bending, twisting, buckling, or any other type of damage.
- The instrument panel brackets, braces, etc. - Inspect for bending, twisting, buckling, or any other type of damage.
- The seat belts - Perform the seat belt operational and functional checks. Refer to **Repairs and Inspections Required After a Collision**.
- The instrument panel cross car beam - Inspect for bending, twisting, buckling, or any other type of damage.
- The instrument panel mounting points and brackets - Inspect for bending, twisting, buckling, or any other type of damage.
- The seats and seat mounting points - Inspect for bending, twisting, buckling, or any other type of damage.
- The roof and headliner mounting points.

Accident With Frontal Air Bag Deployment - Component Replacement and Inspections

After a collision involving air bag deployment, replace the following components.

- Passenger instrument panel air bag
- Driver steering wheel air bag
- Inflatable restraint sensing and diagnostic module (SDM)
- Front and/or side impact sensors
- Driver/Passenger seat side air bag, if deployed
- Seat back cover on if side seat air bag is deployed
- Driver/Passenger seat belt anchor and/or retractor pretensioners

Perform additional inspections on the following components.

- Steering wheel air bag coil and the coil wiring pigtail - Inspect for melting, scorching, or other damage due to excessive heat.
- Mounting points or mounting hardware for the passenger instrument panel air bag, steering wheel air bag, SDM, seat side air bag (if deployed) and seat belt anchor and/or retractor pretensioners - Inspect for any damage and repair or replace each component as needed.

Accident it Side Seat Air Bag Deployment - Component Replacement and Inspections

After a collision involving driver/passenger side seat air bag deployment, replace the following components.

- Left/right side impact sensors on the side of the impact.
- Left/right roof rail air bag on the side of the impact.
- Inflatable restraint sensing and diagnostic module (SDM), if SDM has DTC B0052 56.
- Inflatable restraint seat belt anchor and/or retractor pretensioner.
- Driver or passenger seat back cushion cover replacement.

W RNIN : o not repair or replace the seat stitching or seams in the seat bac trim cover with an internal mounted seat side airbag module. Replace the complete seat bac trim cover from the OE . Non OE seat stitching may cause improper airbag deployment which could result in personal injury.

Perform additional inspections on the following components.

- Mounting points or mounting hardware for the side impact sensors, and driver/passenger side seat air bags on the side of impact - Inspect for any damage and repair or replace each component as needed.
- Mounting points, mounting hardware, headliner and trim pieces for the left/right roof rail air bag on the side of impact - Inspect for any damage and repair or replace each component as needed.
- Mounting points or mounting hardware for the SDM and seat belt anchor and/or retractor pretensioners - Inspect for any damage and repair or replace each component as needed.
- The seat cushion frame
- The seat recliner and cover, if equipped
- The seat adjuster
- The seat back frame
- Door trim assembly
- Impacted seat cushion side covers and switches

Impact Sensor Replacement Guidelines

The impact sensor replacement policy requires replacing sensors in the area of the accident damage. The area of accident damage is defined as the portion of the vehicle which is crushed, bent, or damaged due to a collision. An example of this would be a moderate collision where the front of the vehicle impacts a object. If the vehicle has an impact sensor mounted forward of the radiator, it must be replaced.

- Replace the impact sensor whether or not the air bags have deployed.
- Replace the impact sensor even if it appears to be undamaged.

Impact sensor damage which is not visible, such as slight bending of the mounting bracket or cuts in the wire insulation, can cause improper operation of the SIR system. Do not try to determine whether the impact sensor is undamaged, replace the impact sensor. Also, if you follow a diagnostic trouble code (DTC) procedure and a malfunctioning impact sensor is indicated, replace the impact sensor.

INFLATABLE RESTRAINT MODULE HANDLING AND SCRAPPING**Special Tools**

- **EL-38826:** SIR Deployment Harness
- **EL-39401-B:** SIR Deployment Fixture

For equivalent regional tools, refer to **Special Tools**.

Live and Undeployed Air Bag

WARNING : Refer to **SIR Inflator Module Handling and Storage Warning**.

Take special care when handling or storing an undeployed air bag. An air bag deployment produces a rapid generation of gas. This may cause the air bag, or an object in front of the air bag, to project through the air in the event of an unlikely deployment.

Dual Stage Air Bags

Dual stage air bags have two deployment stages. If stage 1 was used to deploy a dual stage air bag, stage 2 may still be active. Therefore, a deployed dual stage air bag must be treated as an active air bag. If disposal of a dual stage air bag is required, both deployment loops must be energized to deploy the air bag.

Scrapping Procedure

During the course of a vehicle's useful life, certain situations may arise which will require the disposal of a live and undeployed air bag. Do NOT dispose a live and undeployed air bag through normal disposal channels until the air bag has been deployed.

Do not deploy the air bag in the following situations:

- After replacement of an air bag under warranty - the air bag may need to be returned undeployed to the manufacturer.
- If the vehicle is the subject of a product liability claim, related to the SIR system and is subject to a preliminary investigation - do NOT alter the SIR system in any manner.
- If the vehicle is involved in a campaign affecting the air bags - follow the instructions in the campaign service bulletin for proper SIR handling procedures.

Deployment Procedures

You can deploy the air bag either inside or outside of the vehicle. The method used depends upon the final disposition of the vehicle. Review the following procedures in order to determine which will work best in a given situation:

Deployment Outside Vehicle - Steering Wheel Air Bag, Instrument Panel Air Bag, and Roof Rail Air Bag

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Deploy the air bag outside of the vehicle when the vehicle will be returned to service. Situations that require deployment outside of the vehicle include the following:

- Using the SIR diagnostics, you determine that the air bag is malfunctioning.
- The air bag is cosmetically damaged, scratched, or ripped.
- The air bag pigtail is damaged.
- The air bag connector is damaged.
- The air bag connector terminals are damaged.

Deployment and disposal of a malfunctioning air bag is subject to any required retention period.

W RNIN : Refer to SIR Inflator Module Disposal Warning .

1. Turn OFF the ignition.

W RNIN : Refer to SIR Inflator Module Handling and Storage Warning .

2. Remove the air bag.

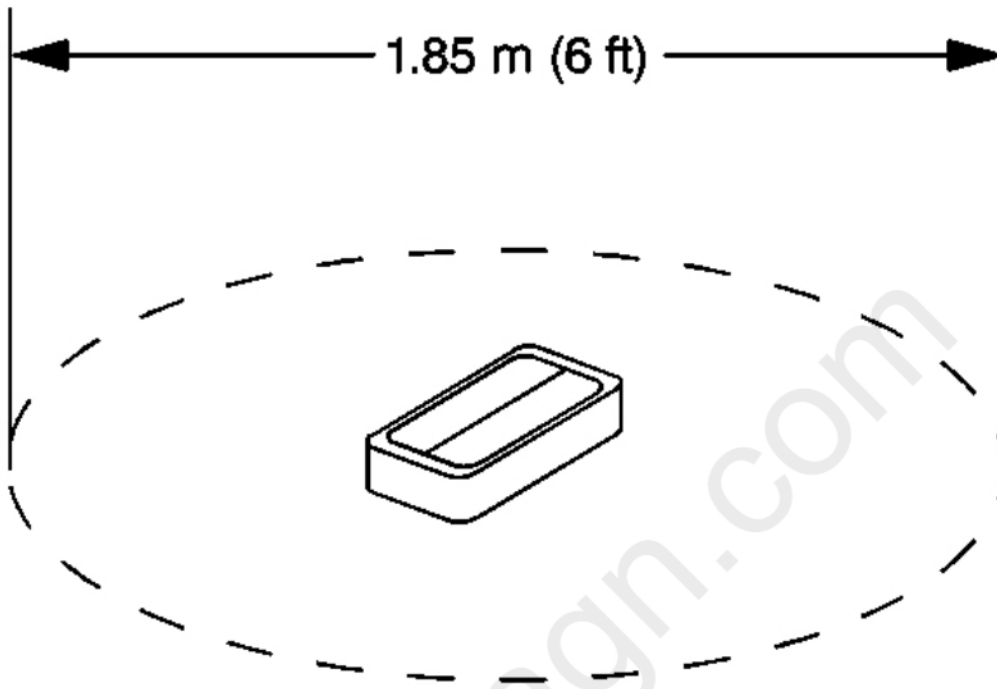


Fig. 22: Identifying Clearance For Deployment Of Inflator Module
Courtesy of GENERAL MOTORS CORP.

3. Clear a space on the ground about 1.85 m (6 ft) in diameter for deployment of the air bag or deployment fixture. If possible, use a paved, outdoor location free of activity. Otherwise, use a space free of activity on the shop floor. Ensure you have sufficient ventilation.
4. Clear the area of loose or flammable objects.

NOTE: Dual stage deployments are only used in steering wheel and instrument panel air bags. If stage 1 was used to deploy a dual stage air bag, stage 2 may still be active. If disposal of a dual stage air bag is required, both deployment loops must be energized to deploy the air bag.

5. If you are deploying a steering wheel air bag, place the air bag in the center of the space with the vinyl trim cover facing up and away from the surface.

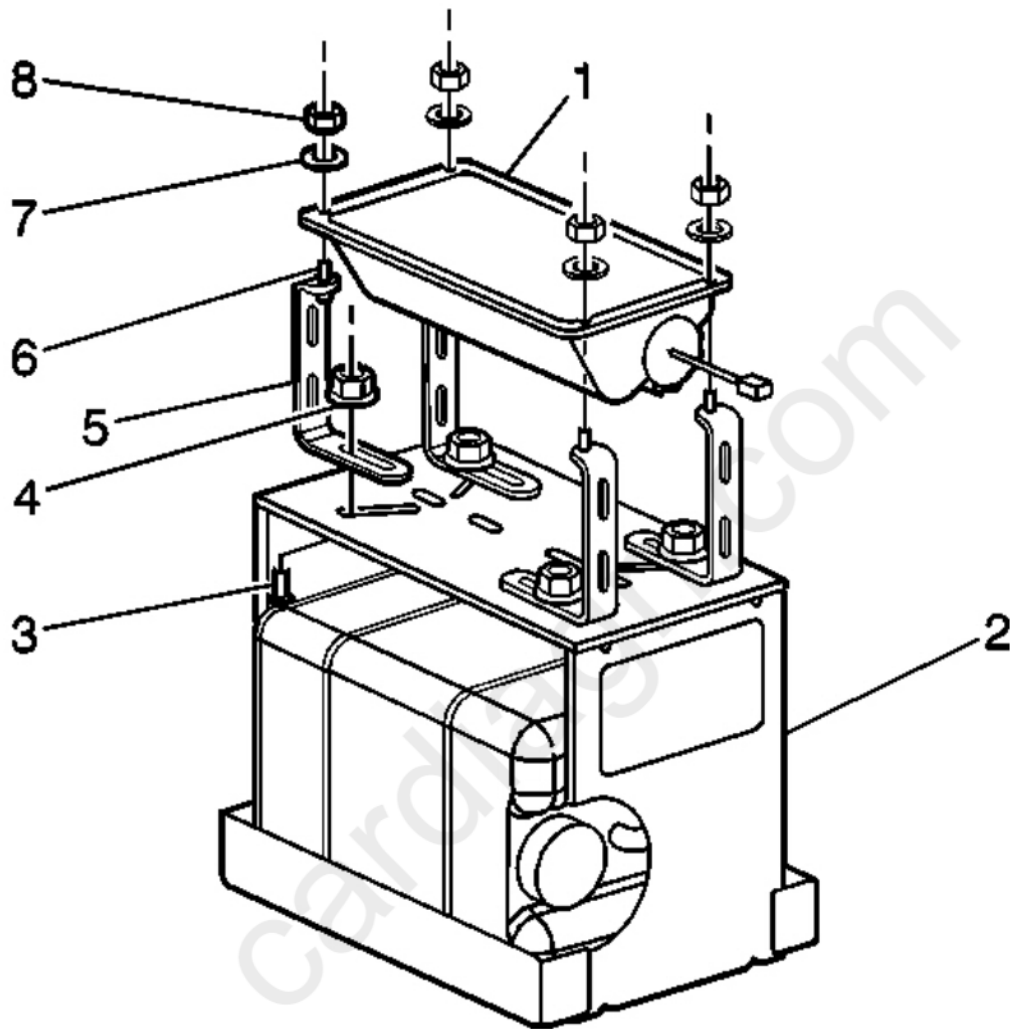


Fig. 23: Identifying IP Module Components
Courtesy of GENERAL MOTORS CORP.

6. When deploying an instrument panel air bag, perform the following instructions:
 1. Place the **EL-39401-B:** fixture in the center of the cleared area.
 2. Fill the deployment fixture with water or sand.
 3. Using the proper nuts and bolts, mount the instrument panel air bag (1) to the deployment fixture (2), with the vinyl trim facing up.
 4. Securely tighten all fasteners that hold the instrument panel air bag (1) to the deployment fixture (2).

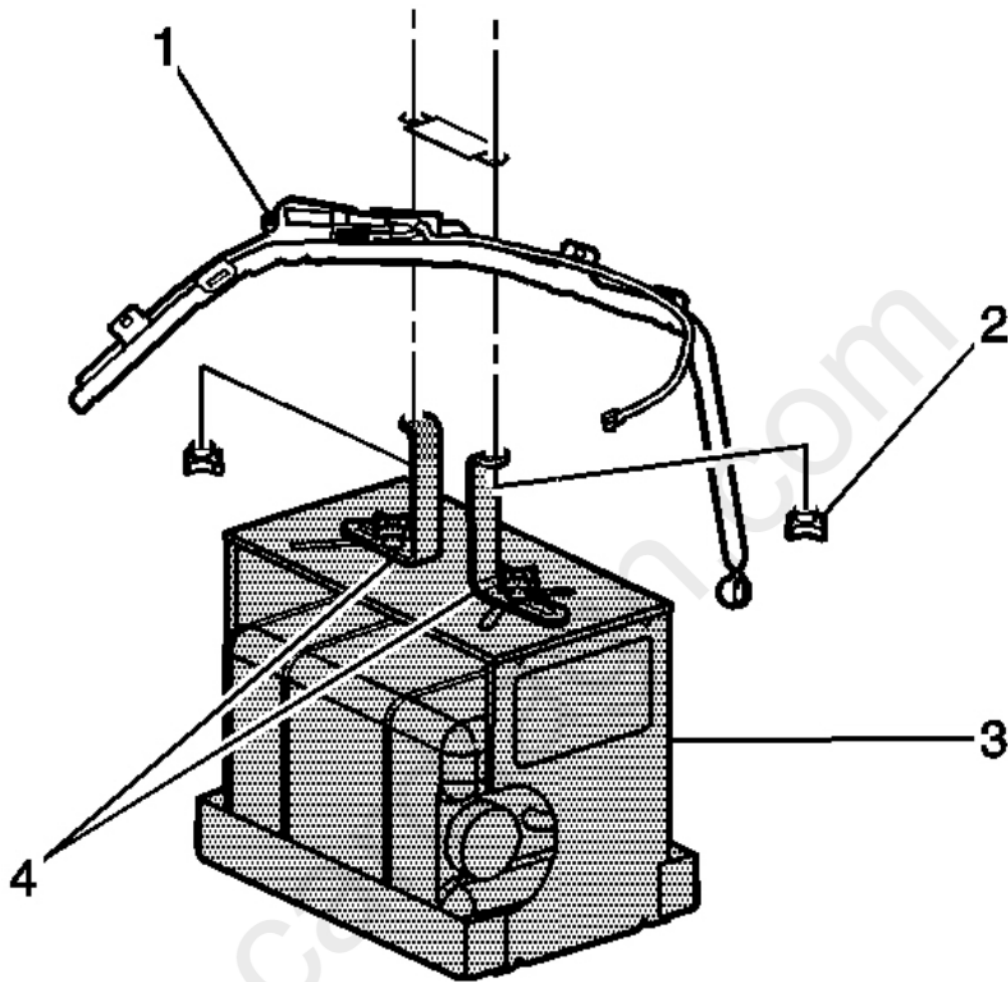


Fig. 24: Identifying Fasteners Holding Side Impact Module To Deployment Fixture
Courtesy of GENERAL MOTORS CORP.

7. When deploying a roof rail air bag, perform the following instructions:
 1. Place the **EL-39401-B:** fixture (3) in the center of the cleared area.
 2. Fill the deployment fixture with water or sand to provide sufficient stabilization of fixture during deployment.
 3. Adjust and secure the fixture arms (4) to the deployment fixture (3), using the proper nuts and bolts.
 4. Attach the roof rail air bag in the deployment fixture and securely tighten all fasteners.

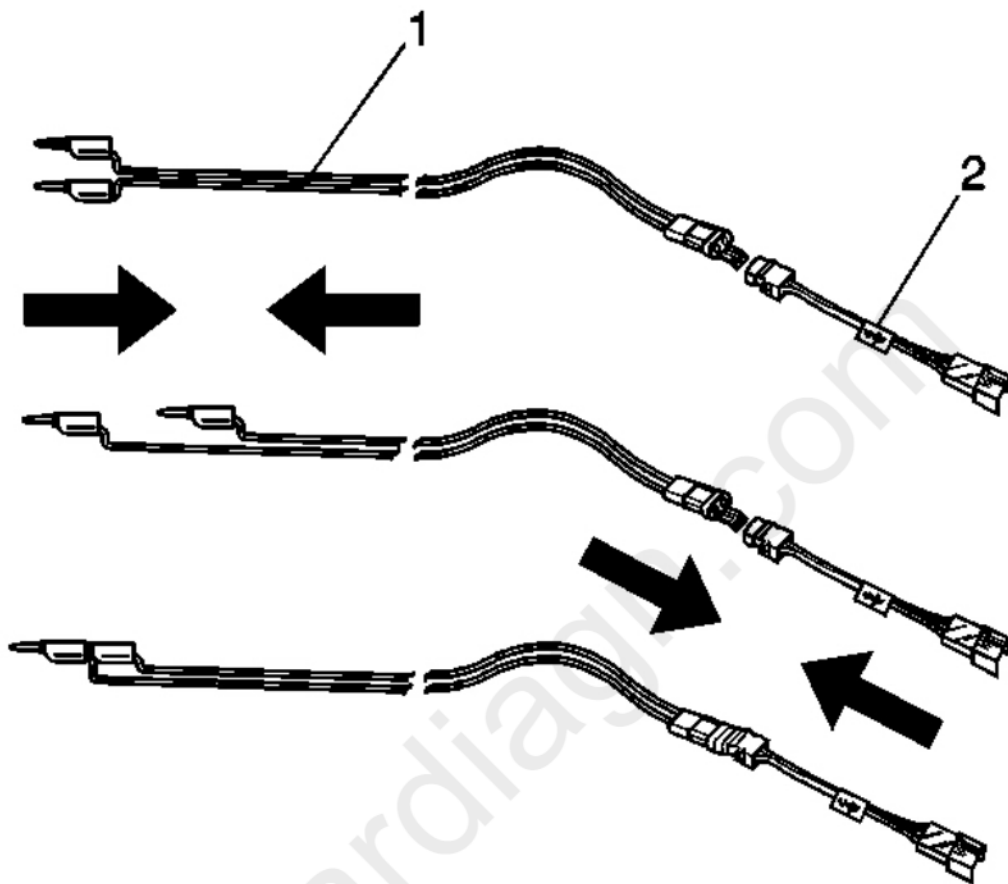


Fig. 25: Identifying SIR Deployment Harness & Adapter
Courtesy of GENERAL MOTORS CORP.

8. Inspect the **EL-38826:** harness and the appropriate pigtail adapter (2) for damage. Replace as needed.
9. Short the 2 SIR deployment harness leads (1) together using one banana plug seated into the other.
10. Connect the appropriate pigtail adapter (2) to the SIR deployment harness (1).

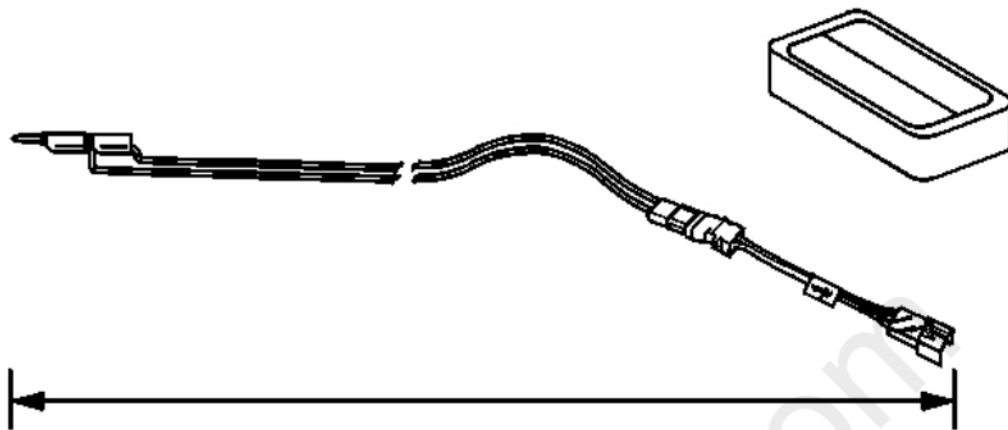


Fig. 26: Extending SIR Deployment Harness & Adapter
Courtesy of GENERAL MOTORS CORP.

11. Extend the SIR deployment harness and adapter to the full length from the deployment fixture or area.

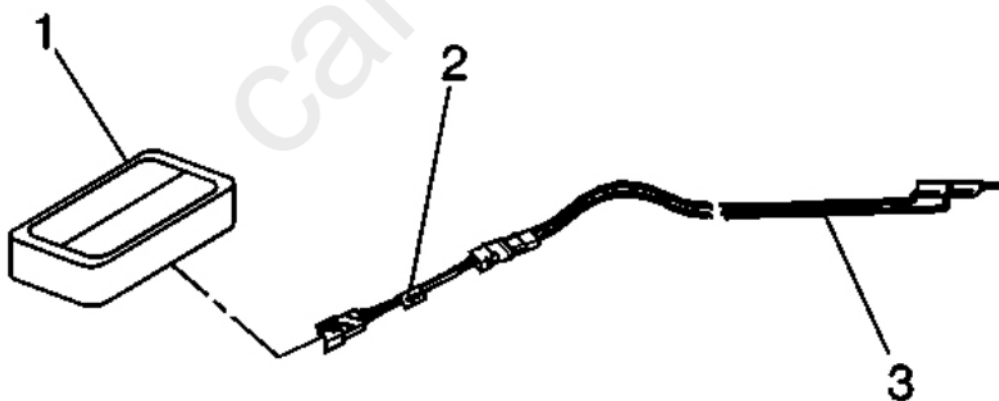


Fig. 27: Identifying Inflator Module, SIR Deployment Harness & Adapter
Courtesy of GENERAL MOTORS CORP.

NOTE: On a dual stage air bag, both connectors must be attached to the deployment harness adapter. This will ensure that both stage 1 and stage

2 of the deployment loops are energized, regardless of the deployment state.

12. Connect the air bag (1) to the adapter (2) on the SIR deployment harness (3).

NOTE:

- The rapid expansion of gas involved with deploying an air bag is very loud. Notify all the people in the immediate area that you intend to deploy the air bag.
- When the air bag deploys, the deployment fixture may jump about 30 cm (1 ft) vertically. This is a normal reaction of the air bag due to the force of the rapid expansion of gas inside the air bag.
- If you are deploying a dual stage air bag with stage 1 already deployed, the fixture may not move and the noise may have been reduced.

13. Clear the area of people.

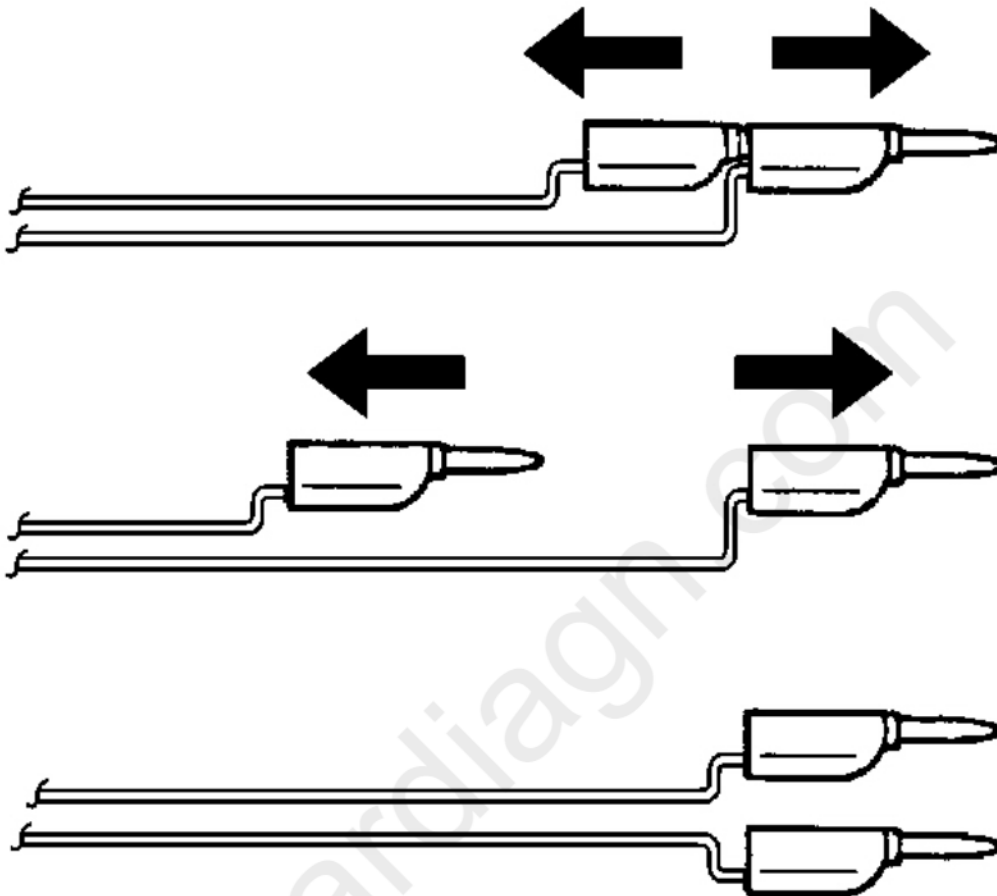


Fig. 28: Separating Banana Plugs
Courtesy of GENERAL MOTORS CORP.

14. Separate the 2 banana plugs on the SIR deployment harness that were shorted together earlier in the procedure.

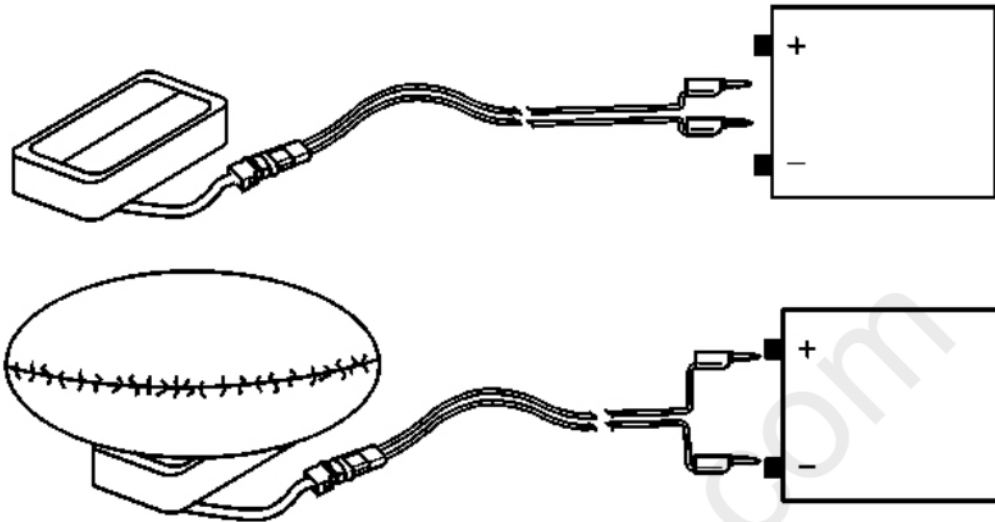


Fig. 2 : Connecting SIR Deployment Harness Wires To Power Source
Courtesy of GENERAL MOTORS CORP.

15. Place a 12 V minimum/2A minimum power source, such as a vehicle battery, near the shorted end of the harness.
16. Connect the SIR deployment harness wires to the power source. Deployment of the air bag will occur when contact is made.

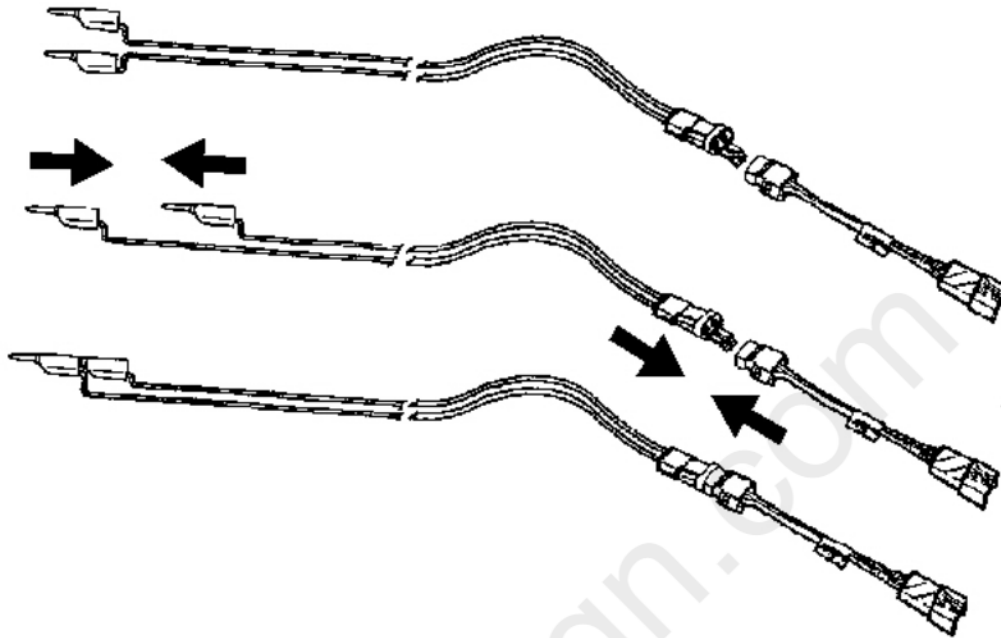


Fig. 30: View Of Deployment Harness Leads
Courtesy of GENERAL MOTORS CORP.

17. Disconnect the SIR deployment harness from the power source after the air bag deploys.
18. If the air bag did not deploy, disconnect the adapter and discontinue the procedure and contact the Technical Assistance Group.

If deployment was successful, proceed to the following steps.

RNIN : Refer to SIR eplo ed Inflator odules re ot arning .

19. Seat one banana plug into the other in order to short the deployment harness leads.
20. Put on a pair of shop gloves.
21. Disconnect the pigtail adapter from the air bag as soon as possible.
22. Inspect the pigtail adapter and the SIR deployment harness. Replace as needed.
23. Dispose of the deployed air bag through normal refuse channels.
24. Wash your hands with a mild soap.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

Deploy the air bags inside of the vehicle when destroying the vehicle or when salvaging the vehicle for parts. This includes, but is not limited to, the following situations

- The vehicle has completed all useful life.
- Irreparable damage occurred to the vehicle in a non-deployment type accident.
- Irreparable damage occurred to the vehicle during a theft.
- The vehicle is being salvaged for parts to be used on a vehicle with a different VIN, as opposed to rebuilding as the same VIN.

RNIN : Refer to SIR Inflatable Module Deployment Outside Vehicle Warning .

1. Lower the driver and passenger windows.
2. Turn the ignition switch to the OFF position and remove the ignition key.
3. Check that all air bags which will be deployed are mounted securely.
4. Remove all loose objects from the front seats.

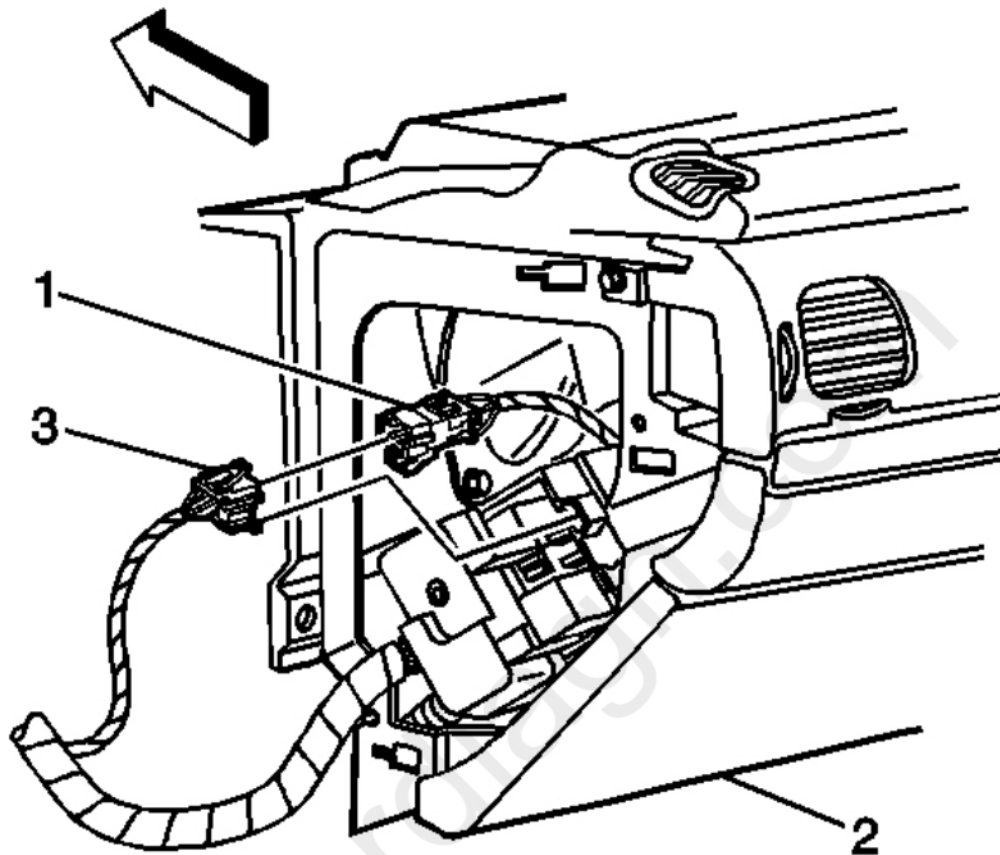


Fig. 3 : Identifying I/P Module Connector To Vehicle Harness Connector (LH Side I/P)
Courtesy of GENERAL MOTORS CORP.

RNIN : deplo ed dual stage inflator module will loo the same whether one or both stages were used. lwa s assume a deplo ed dual stage inflator module has an active stage 2. Improper handling or servicing can activate the inflator module and cause personal in ur .

5. Disconnect the steering wheel air bag yellow connector (1) from vehicle harness yellow connector (3).

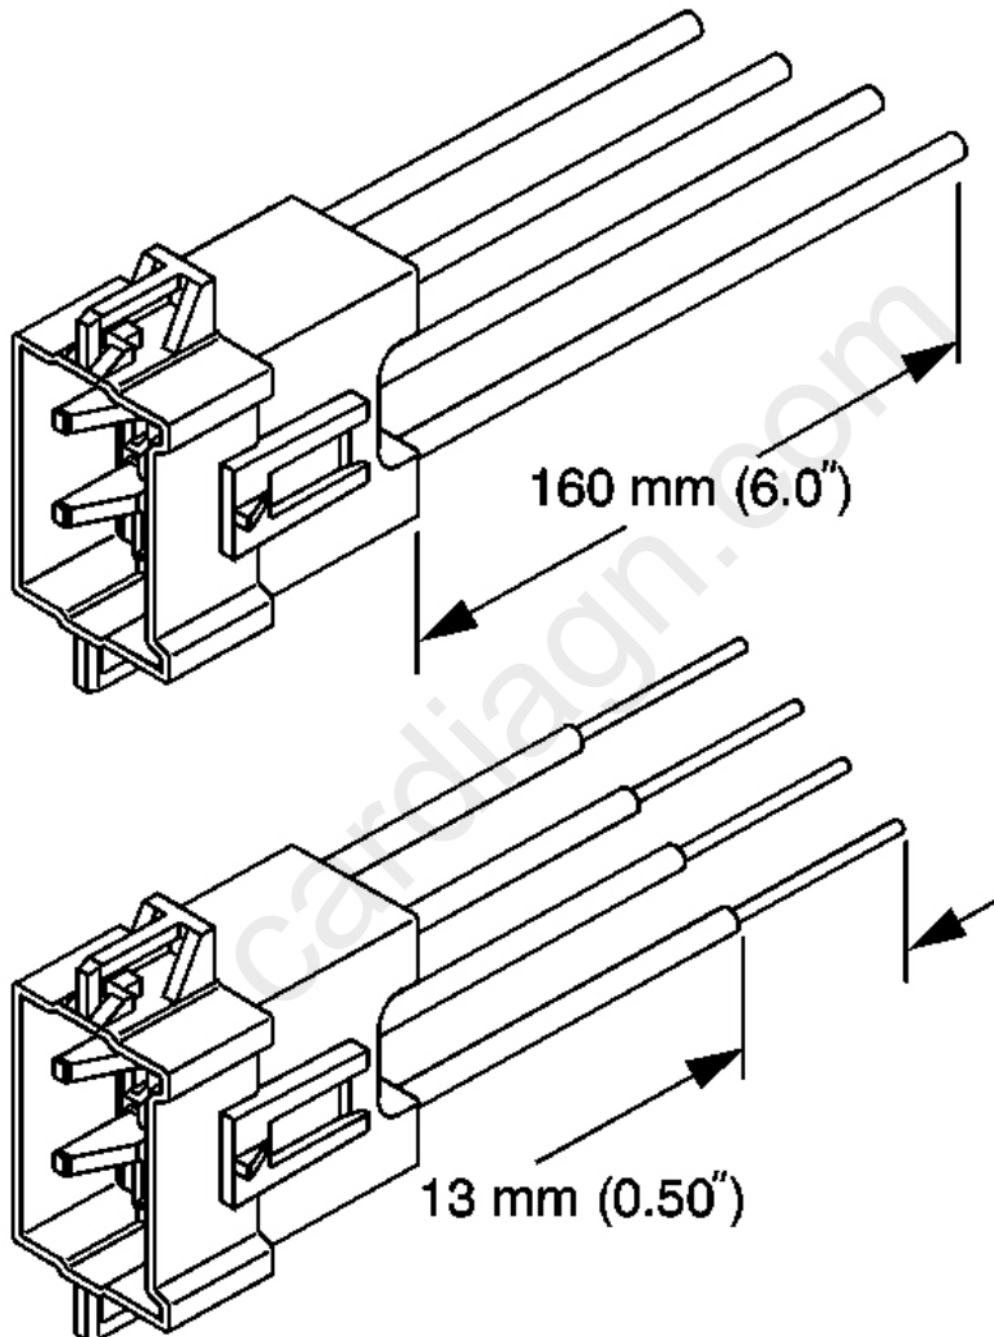


Fig. 32: Stripping SIR Wires
Courtesy of GENERAL MOTORS CORP.

NOTE: If the vehicle is equipped with dual stage air bags the steering wheel air bag and instrument panel air bag will each have 4 wires. Refer to Component Connector End Views for determining high and low circuits.

6. Cut the yellow harness connector out of the vehicle, leaving at least 16 cm (6 in) of wire at the connector.
7. Strip 13 mm (0.5 in) of insulation from each of the connector wire leads.

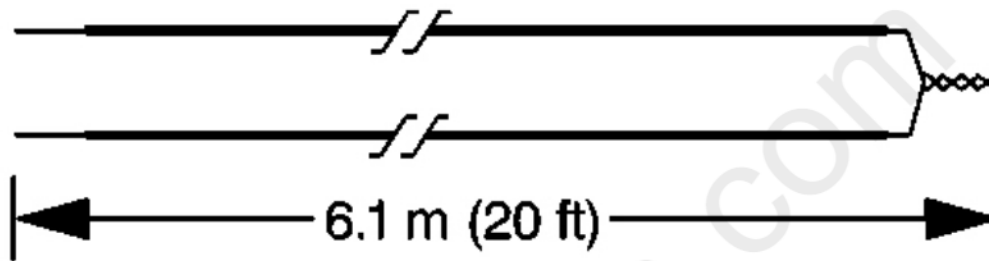


Fig. 33: Fabricating 20 Ft. Deployment Harness
Courtesy of GENERAL MOTORS CORP.

8. Cut two 6.1 m (20 ft) deployment wires from a 0.8 mm (18 gauge) or thicker multi-strand wire. Use these wires to fabricate the driver deployment harness.
9. Strip 13 mm (0.5 in) of insulation from both ends of the wires.
10. Twist together one end from each of the wires in order to short the wires. Deployment wires shall remain shorted, and not connected to a power source until you are ready to deploy the air bag.

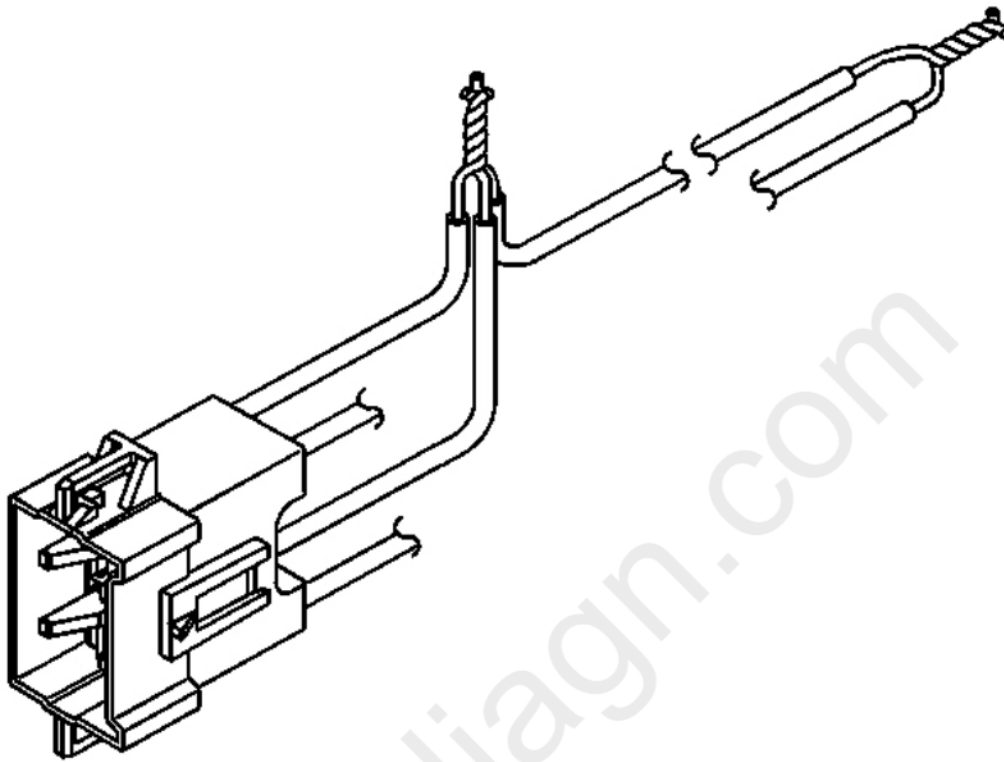


Fig. 34: Twisting Connector Wire Leads (High Circuits) To Deployment Harness Wire
Courtesy of GENERAL MOTORS CORP.

11. Twist together the 2 connector wire leads from the high circuits from both stages of the steering wheel air bag, to one set of deployment wires. Refer to **Component Connector End Views** in order to determine the correct circuits.
12. Inspect that the 3-wire connection is secure.
13. Secure and insulate the 3-wire connection to the deployment harness using electrical tape.

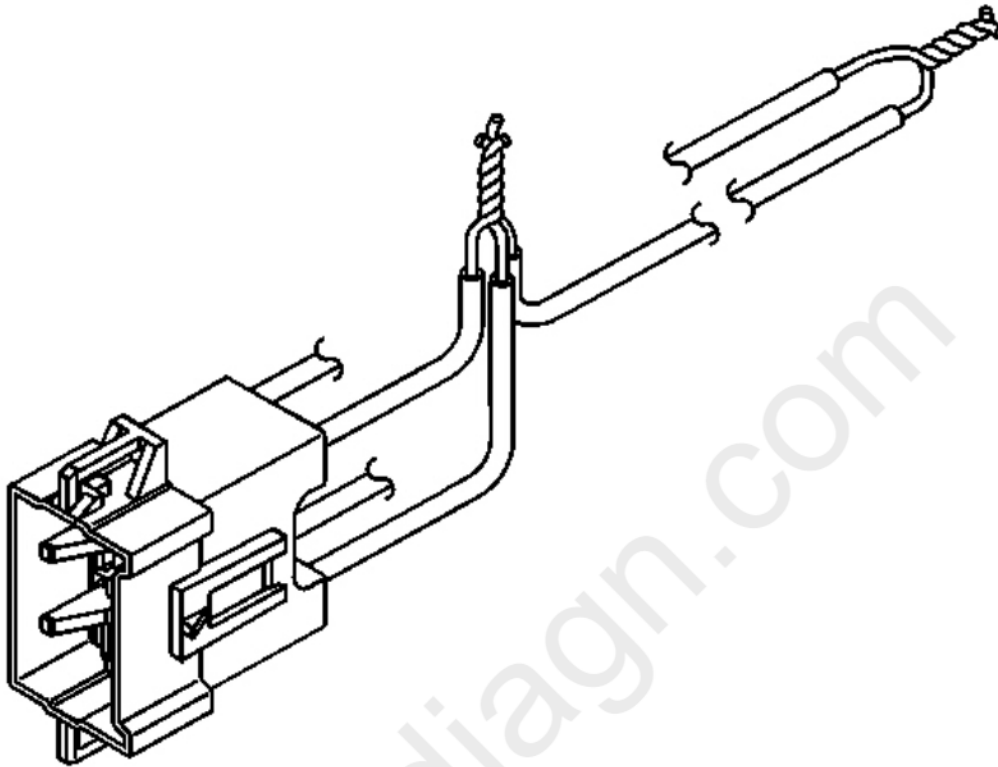


Fig. 35: Twisting Connector Wire Leads (Low Circuits) To Deployment Harness Wire
Courtesy of GENERAL MOTORS CORP.

14. Twist together the 2 connector wire leads from the low circuits from both stages of the steering wheel air bag, to one set of deployment wires. Refer to **Component Connector End Views** in order to determine the correct circuits.
15. Inspect that the 3-wire connection is secure.
16. Secure and insulate the 3-wire connection to the deployment harness using electrical tape.
17. Connect the deployment harness to the connector on the steering wheel air bag.
18. Route the deployment harness out of the driver side of the vehicle.
19. Disconnect the yellow left roof rail harness connector from the vehicle harness connector.
20. Cut the harness connector out of the vehicle, leaving at least 16 cm (6 in) of wire at the connector.
21. Strip 13 mm (0.5 in) of insulation from each of the connector wire leads.
22. Cut two 6.1 m (20 ft) deployment wires from a 0.8 mm (18 gauge) or thicker multi-strand wire. These wires will be used to fabricate the roof rail air bag deployment harness.
23. Strip 13 mm (0.5 in) of insulation from both ends of the wires.

24. Twist together one end from each of the wires in order to short the wires.
25. Twist together one connector wire lead to one deployment wire.
26. Secure and insulate the connection using electrical tape.
27. Twist together and tape the remaining connector wire lead to the remaining deployment wire.
28. Connect the deployment harness to the yellow connector of the roof rail air bag.
29. Route the deployment harness out of the driver side of the vehicle.

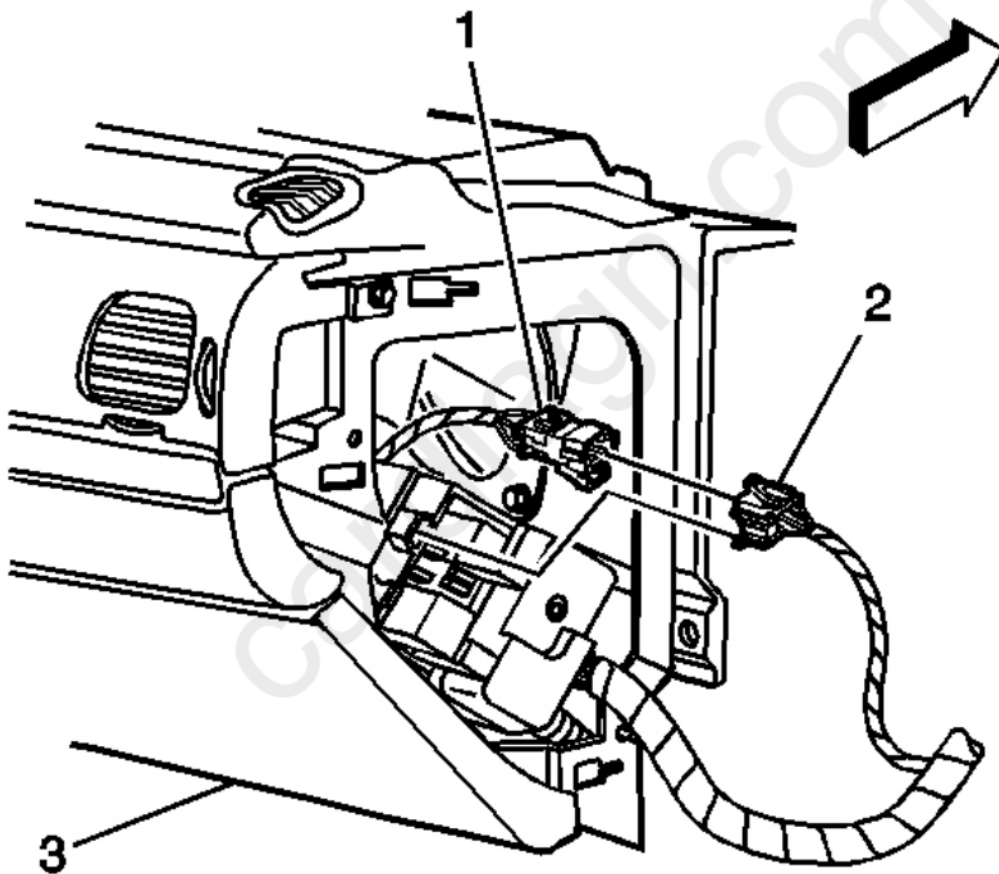


Fig. 36: Identifying I/P Module Connector To Vehicle Harness Connector
Courtesy of GENERAL MOTORS CORP.

30. Disconnect the instrument panel air bag yellow harness connector (1) from the vehicle harness connector (2).

NOTE: If the vehicle is equipped with dual stage air bags the steering wheel air

bag and instrument panel air bag will each have 4 wires. Refer to Component Connector End Views for determining high and low circuits.

31. Cut the yellow harness connector out of the vehicle, leaving at least 16 cm (6 in) of wire at the connector.
32. Strip 13 mm (0.5 in) of insulation from each of the connector wire leads.
33. Cut two 6.1 m (20 ft) deployment wires from a 0.8 mm (18 gauge) or thicker multi-strand wire. These wires will be used to fabricate the passenger deployment harness.
34. Strip 13 mm (0.5 in) of insulation from both ends of the wires.
35. Twist together one end from each of the wires in order to short the wires.
36. Twist together the 2 connector wire leads from the high circuits from both stages of the instrument panel air bag to one set of deployment wires. Refer to Component Connector End Views in order to determine the correct circuits.
37. Inspect that the 3-wire connection is secure.
38. Secure and insulate the 3-wire connection to the deployment harness using electrical tape.
39. Twist together the 2 connector wire leads from the low circuits from both stages of the instrument panel air bag to one set of deployment wires. Refer to Component Connector End Views in order to determine the correct circuits.
40. Inspect that the 3-wire connection is secure.
41. Secure and insulate the 3-wire connection to the deployment harness using electrical tape.
42. Connect the deployment harness to the instrument panel air bag in-line connector.
43. Route the deployment harness out of the passenger side of the vehicle.
44. Disconnect the yellow harness connector to the right roof rail air bag from the vehicle harness connector.
45. Cut the harness connector out of the vehicle, leaving at least 16 cm (6 in) of wire at the connector.
46. Strip 13 mm (0.5 in) of insulation from each of the connector wire leads.
47. Cut two 6.1 m (20 ft) deployment wires from a 0.8 mm (18 gauge) or thicker multi-strand wire. These wires will be used to fabricate the roof rail air bag deployment harness.
48. Strip 13 mm (0.5 in) of insulation from both ends of the wires.
49. Twist together one end from each of the wires in order to short the wires.
50. Twist together one connector wire lead to one deployment wire.
51. Secure and insulate the connection using electrical tape.
52. Twist together and tape the remaining connector wire lead to the remaining deployment wire.
53. Connect the deployment harness to the roof rail air bag yellow connector.
54. Route the deployment harness out of the passenger side of the vehicle.
55. Completely cover the windshield and the front door window openings with a drop cloth.
56. Stretch to the full length all of the deployment harness wires on the right side of the vehicle.
57. Deploy each deployment loop one at a time.
58. Place a power source, 12 V minimum/2A minimum, such as a vehicle battery, near the shorted end of the harnesses.
59. Separate one set of wires and touch the wire ends to the power source in order to deploy the selected air bag.

60. Disconnect the deployment harness from the power source and twist the wire ends together.
61. Continue the same process with the remaining deployment harnesses.
62. Disconnect all harnesses from the vehicle.
63. Discard the harnesses.
64. Scrap the vehicle in the same manner as a non-SIR equipped vehicle.
65. If one or all of the air bags did not deploy, remove the undeployed air bags from the vehicle.

PRETENSIONER HANDLING AND SCRAPPING

Scrapping Procedure

During the course of a vehicle's useful life, certain situations may arise which will necessitate the disposal of a live (undeployed) pretensioner. The following information covers the proper procedures for the disposing of a live (undeployed) pretensioner. Deploy the pretensioner before disposal. Do not dispose of a live (undeployed) pretensioner through normal disposal channels until the pretensioner has been deployed. The following information covers the proper procedures for the disposing of a live (undeployed) pretensioner.

- After replacement of a pretensioner under warranty. The pretensioner may need to be returned undeployed to the original manufacturer of pretensioner.
- If the vehicle is the subject of a Product Liability report related to the SIR system and is subject to a Preliminary Investigation (GM-1241). Do not alter the SIR system in any manner.
- If the vehicle is involved in a campaign affecting the pretensioners. Follow the instructions in the Campaign Service Bulletin for proper SIR handling procedures.

Deployment Procedures

The pretensioner can be deployed inside or outside of the vehicle. The method used depends upon the final disposition of the vehicle. Review the following procedures in order to determine which will work best in a given situation.

Deployment Inside the Vehicle

Refer to **Inflatable Restraint Module Handling and Scrapping** for deploying the pretensioner inside vehicle under Vehicle Scrapping Procedure.

Special Tools

- **4 B SIR Deployment Fixture.** See **Special Tools**.
- **SIR Deployment Harness.** See **Special Tools**.

Deployment Outside Vehicle for Seat Belt Pretensioners

Deploy the seat belt pretensioners outside of the vehicle when the vehicle will be returned to service. Situations that require deployment outside of the vehicle include the following:

- Using the SIR diagnostics, you determine that the seat belt pretensioner is malfunctioning.

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

- The pretensioner pigtail (if equipped) is damaged.
- The pretensioner connector is damaged.
- The pretensioner connector terminal is damaged.

Deployment and disposal of a malfunctioning seat belt pretensioner is subject to any required retention period.

WARNING: In order to prevent accidental deployment of the pretensioner which could cause personal injury, do not dispose of an undeployed pretensioner as normal shop waste. The undeployed pretensioner contains substances that could cause severe illness or personal injury if the sealed container is damaged during disposal. Use the following deployment procedures to safely dispose of an undeployed pretensioner. Failure to dispose of a pretensioner as instructed may be a violation of federal, state, or local laws.

WARNING: When you are deploying a pretensioner for disposal, perform the deployment procedures in the order listed. Failure to follow the procedures in the order listed may result in personal injury.

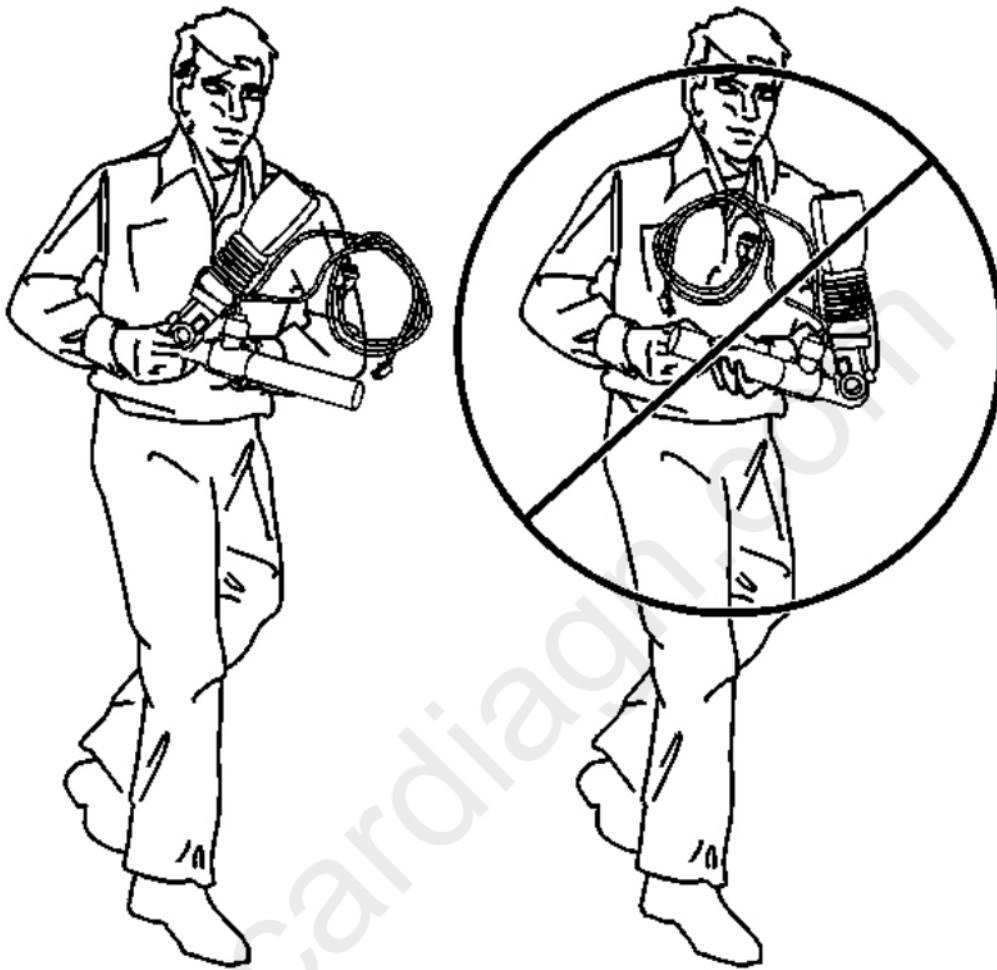


Fig. : Illustrating Proper Carrying Of Pretensioner
Courtesy of GENERAL MOTORS CORP.

1. Turn the ignition switch to the OFF position.
2. Remove the ignition key.
3. Put on safety glasses.
4. Remove the seat belt pretensioner from the vehicle.
5. When carrying a pretensioner to the deployment area keep the open end of pretensioner pointed away from the body.

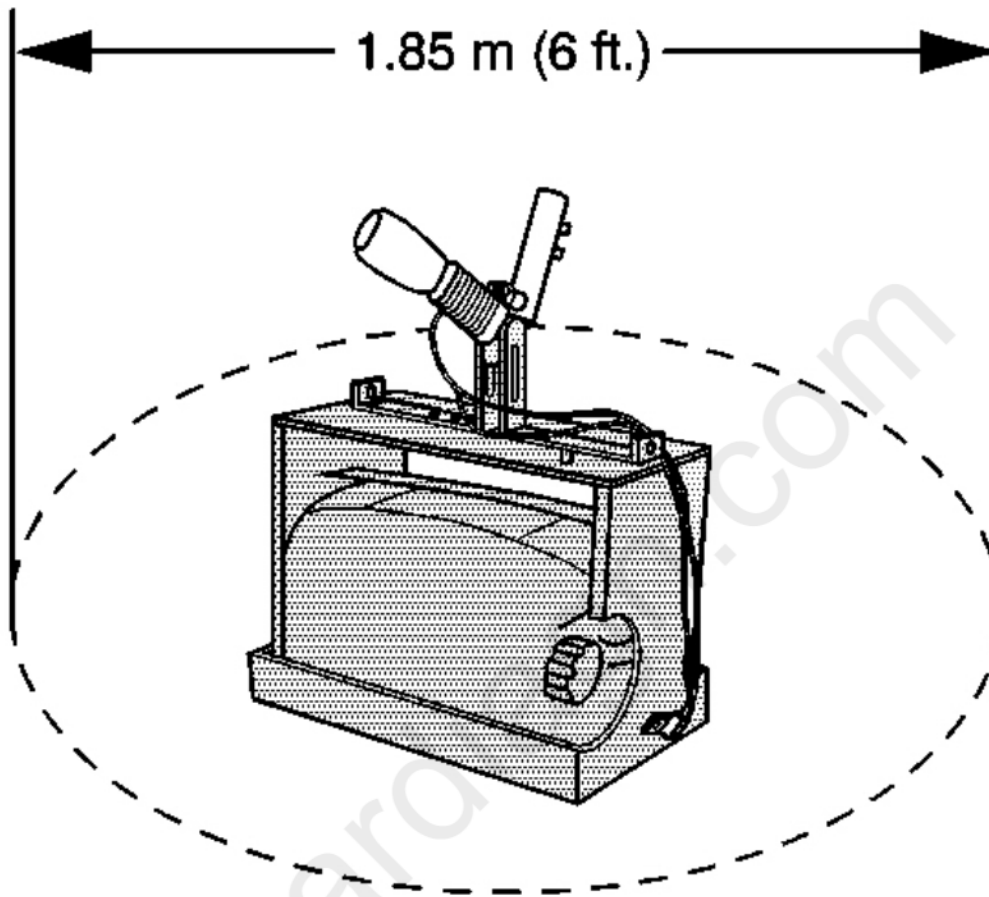


Fig. : Identifying Pretensioner Deployment Area
Courtesy of GENERAL MOTORS CORP.

6. Clear a space on the ground about 1.85 M (6 ft) in diameter for deployment of the pretensioner. If possible, use a paved, outdoor location free of activity. Otherwise, use a space free of activity on the shop floor. Make sure you have sufficient ventilation.
7. Make sure no loose or flammable objects are in the area.
8. Place the **4 B** SIR Deployment Fixture in the center of the cleared area. See **Special Tools**.
9. Fill the fixture plastic reservoir with water or sand.

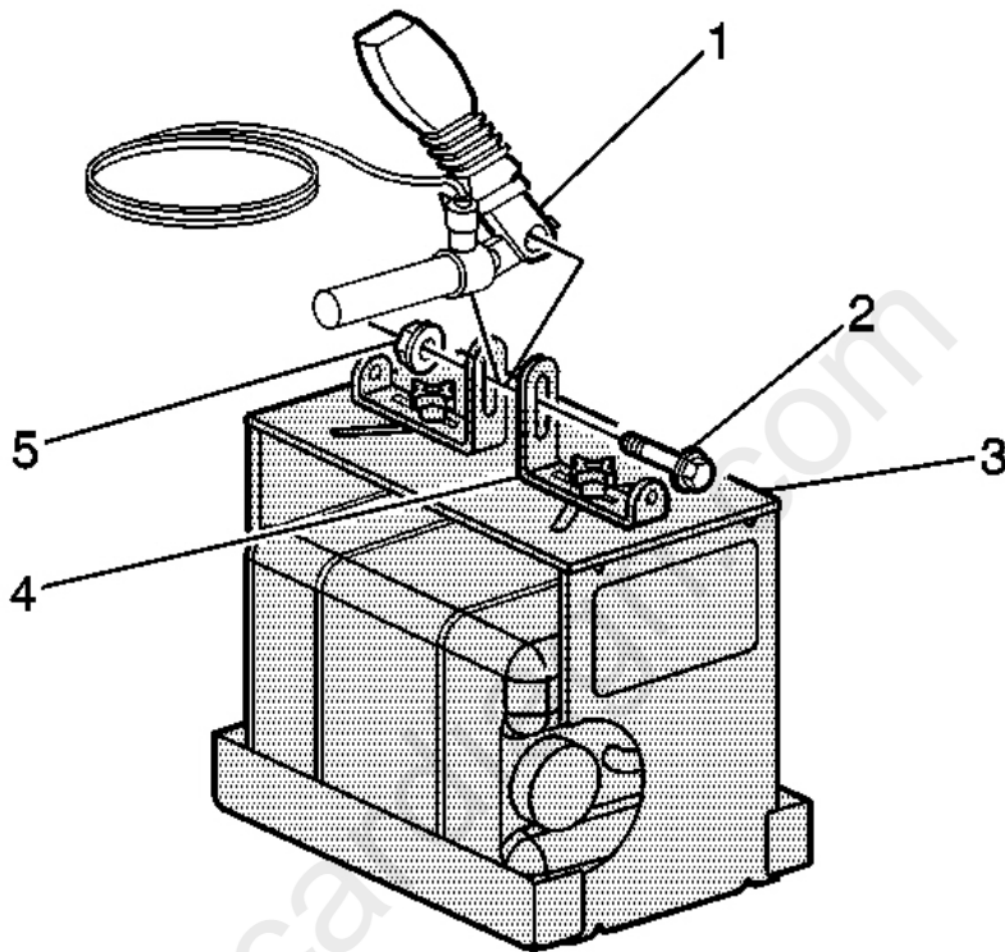


Fig. : View Of SIR Deployment Fixture Pretensioner Module Components
Courtesy of GENERAL MOTORS CORP.

10. Mount the pretensioner (1) in the SIR deployment fixture (3) with the open end facing up using the following mounting method.
 1. Adjust and secure the **4 B arms** (4) to the deployment fixture (3). See **Special Tools**.
 2. To mount, use the proper size bolt (2) and nut (5) with washers in order to secure the pretensioner (1) to the deployment fixture brackets (4).
 3. Securely tighten all fasteners prior to deployment.

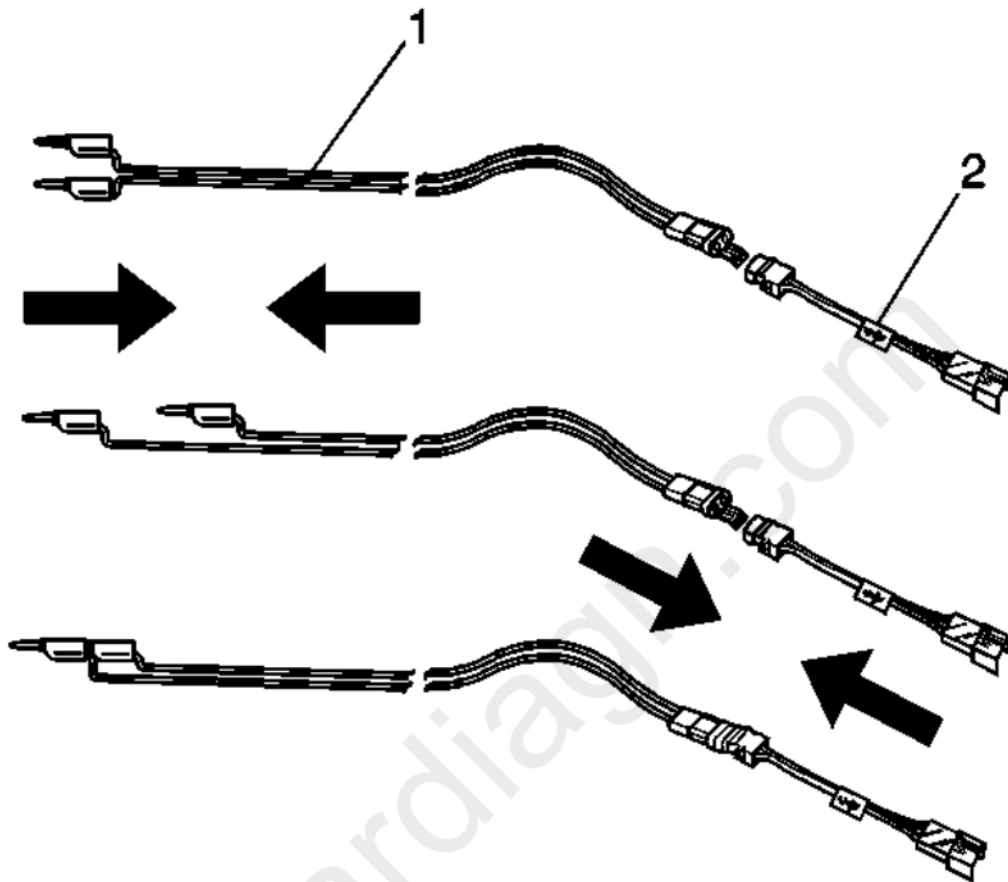


Fig. 4 : Identifying SIR Deployment Harness Adapter
Courtesy of GENERAL MOTORS CORP.

11. Inspect the SIR Deployment Harness and the appropriate pigtail adapter for damage. See **Special Tools**. Replace as needed.
12. Short the 2 SIR deployment harness (1) leads together using one banana plug seated into the other.
13. Connect the appropriate pigtail adapter (2) to the SIR deployment harness (1).

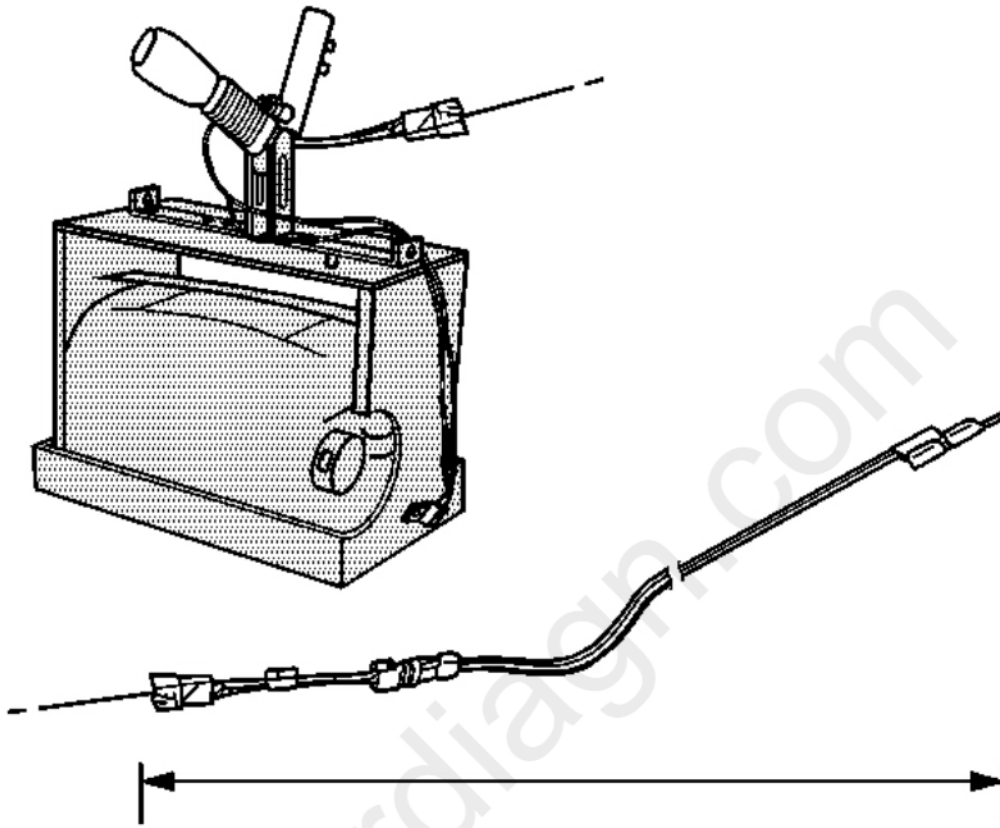


Fig. 4 : Extending SIR Deployment Harness Adapter
Courtesy of GENERAL MOTORS CORP.

14. Extend the SIR deployment harness and adapter to full length from the deployment fixture.

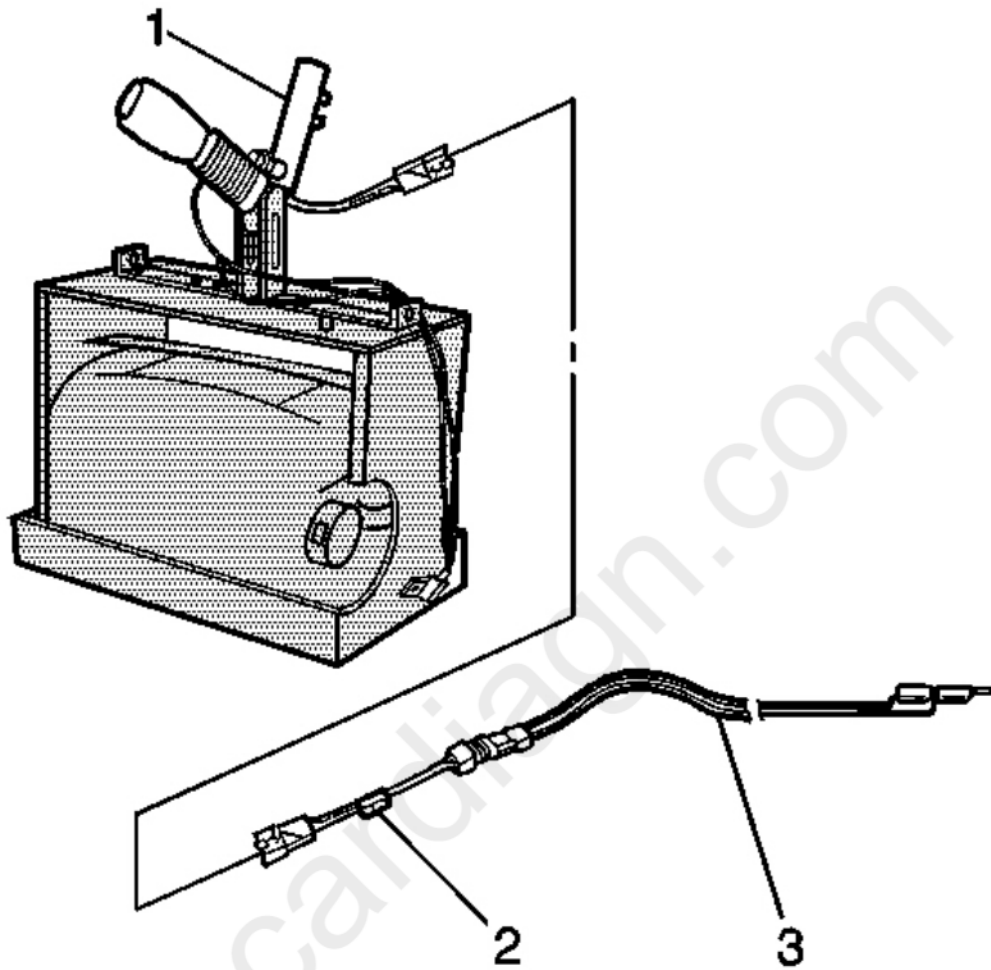


Fig. 4 : Connecting Pretensioner To Adapter
Courtesy of GENERAL MOTORS CORP.

15. Connect the pretensioner (1) to the adapter (2) on the deployment harness (3).

NOTE: The rapid gas expansion involved with deploying a pretensioner is very loud. Notify all the people in the immediate area that you intend to deploy the seat belt pretensioner.

16. Clear the area of people.

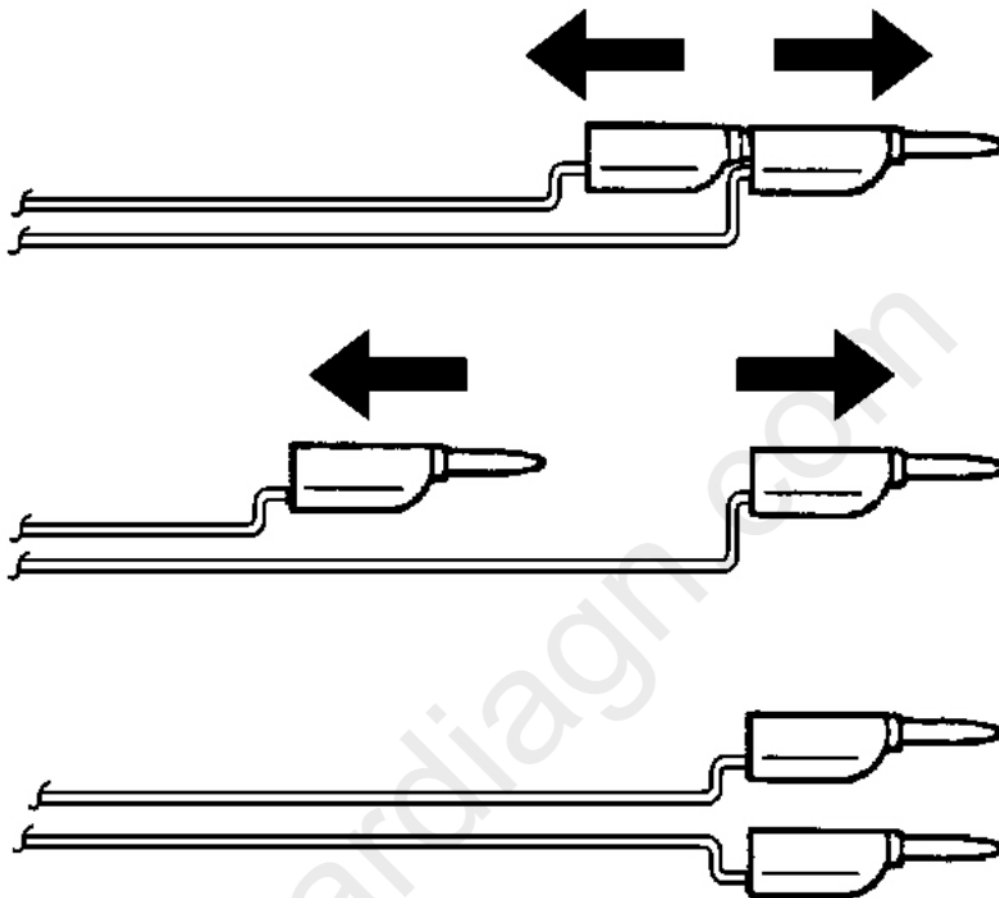


Fig. 4 : Separating Banana Plugs
Courtesy of GENERAL MOTORS CORP.

WARNIN : When you are deploying a pretensioner for disposal, perform the deployment procedures in the order listed. Failure to follow the procedures in the order listed may result in personal injury.

17. Separate the 2 banana plugs on the SIR deployment harness.

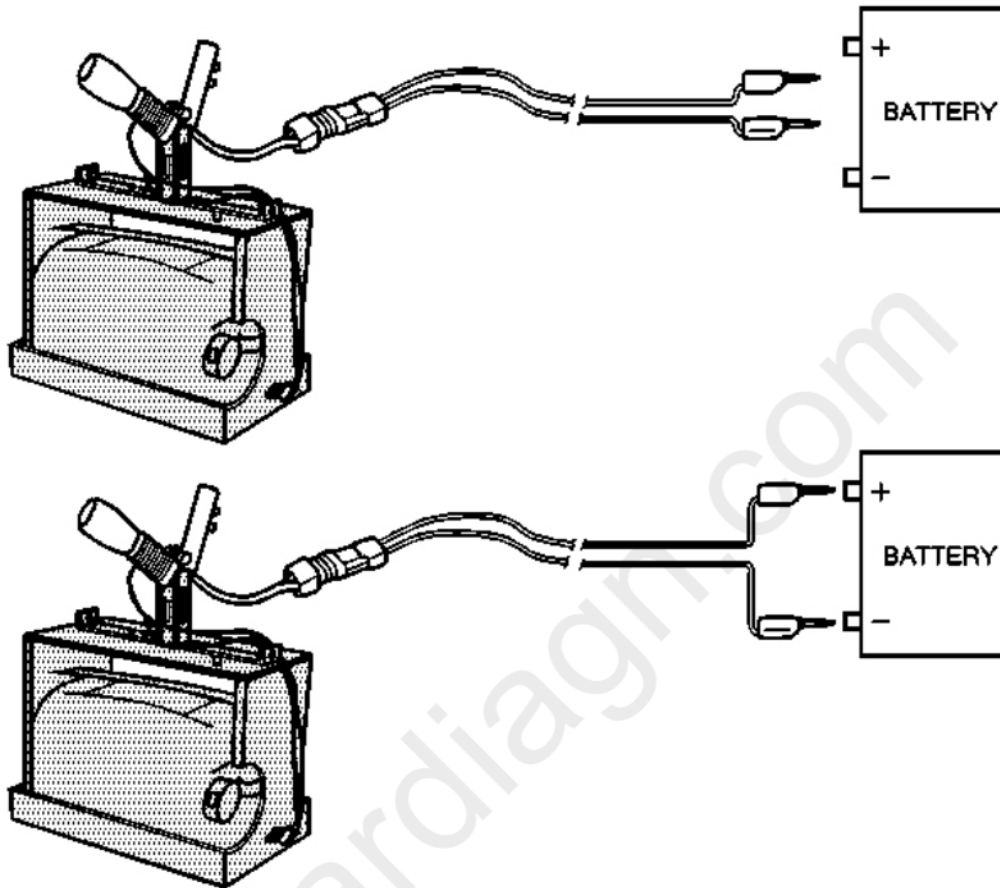


Fig. 44: Deploying Pretensioner

Courtesy of GENERAL MOTORS CORP.

NOTE: When the seat belt pretensioner deploys, the deployment fixture may ump about 0 cm (1 ft) vertically. This is a normal reaction of the seat belt pretensioner due to the force of the rapid expansion of gas inside the pretensioner.

18. Place a 12 V minimum/2 A minimum power source (i.e., vehicle battery) near the shorted end of the harness.
19. Connect the SIR deployment harness wires to the power source. Pretensioner deployment will occur when contact is made.
20. Disconnect the SIR deployment harness from the power source after the pretensioner deploys.

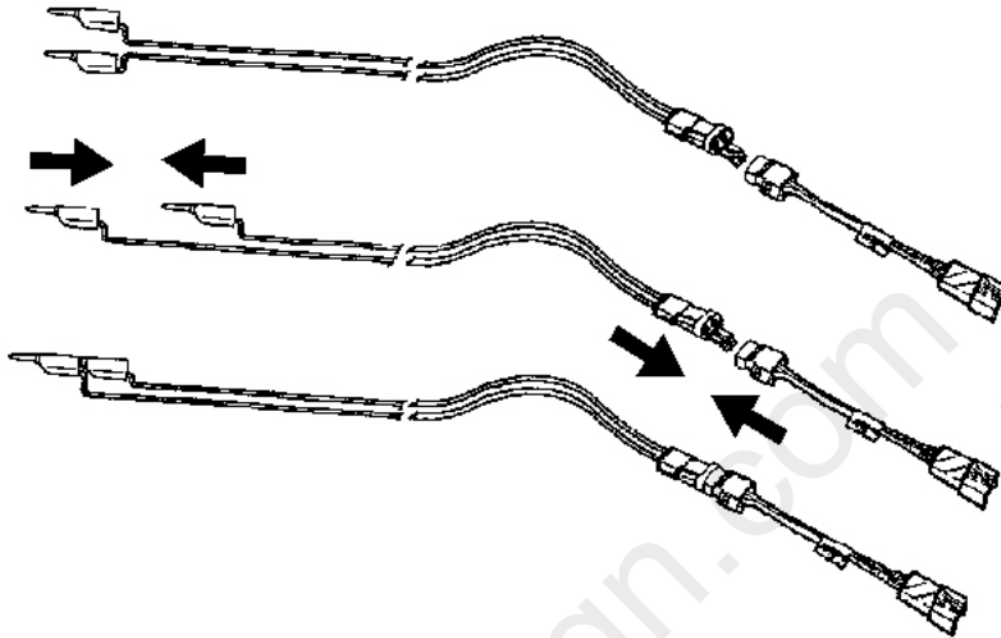


Fig. 45: View Of Deployment Harness Leads
Courtesy of GENERAL MOTORS CORP.

21. Seat one banana plug into the other in order to short the deployment harness leads.
22. If the pretensioner did not deploy, disconnect the adapter and discontinue the procedure. Contact the Technical Assistance Group. Otherwise, proceed to the following steps.
23. Put on a pair of shop gloves.
24. Disconnect the pigtail adapter from the pretensioner as soon as possible.
25. Inspect the pigtail adapter and the SIR deployment harness. Replace as needed.
26. Dispose of the deployed pretensioner through normal refuse channels.
27. Wash hands with a mild soap.

DESCRIPTION AND OPERATION

SIR SYSTEM DESCRIPTION AND OPERATION

SIR System Overview

The supplemental inflatable restraint (SIR) system supplements the protection offered by the seat belts. The SIR system contains an inflatable restraint sensing and diagnostic module (SDM), air bags, seat belt pretensioners (anchor and retractor), and impact sensors. The SDM determines the severity of a collision with the assistance

of impact sensors located at strategic points on the vehicle. When the SDM detects a collision, the SDM will process the information provided by the sensors to further support air bag or pretensioner deployment. The SDM will deploy the air bags and pretensioners if it detects a collision of sufficient force. If the force of the impact is not sufficient to warrant air bag deployment, the SDM may still deploy the seat belt pretensioners. The SDM contains a sensing device that converts vehicle velocity changes to an electrical signal. The SDM compares these signals to values stored in memory. If the signals exceed a stored value, the SDM will determine the severity of the impact and either cause current to flow through the frontal deployment loops deploying the frontal air bags and pretensioners, or it will deploy the pretensioners only. The SDM continuously monitors the deployment loops for malfunctions and illuminates the AIR BAG indicator if a fault is detected. The SDM performs continuous diagnostic monitoring of the SIR system electrical components. Upon detection of a circuit malfunction, the SDM will set a DTC and inform the driver by illuminating the AIR BAG indicator. The steering column and knee bolsters are designed to absorb energy and compress during frontal collisions in order to limit leg movement and decrease the chance of injury to the driver and passenger.

AIR BAG Indicator (Driver)

The AIR BAG indicator, located in the instrument cluster, is used to notify the driver of SIR system malfunctions and to verify that the inflatable restraint sensing and diagnostic module (SDM) is communicating with the instrument cluster. When the ignition is turned ON, the SDM is supplied with ignition positive voltage. The instrument cluster will momentarily turn on the AIR BAG indicator. While the indicator is on, the SDM conducts tests on all SIR system components and circuits. If no malfunctions are detected the SDM will communicate with the instrument cluster through the serial data circuit and command the AIR BAG indicator OFF. The SDM provides continuous monitoring of the air bag circuits by conducting a sequence of checks. If a malfunction is detected the SDM will store a diagnostic trouble code (DTC) and command the instrument cluster to illuminate the AIR BAG indicator via serial data. The presence of a SIR system malfunction could result in non-deployment of the air bags or deployment in conditions less severe than intended. The AIR BAG indicator will remain ON until the malfunction has been repaired.

Inflatable Restraint Sensing and Diagnostic Module (SDM)

The inflatable restraint sensing and diagnostic module (SDM) is a microprocessor and the control center for the supplemental inflatable restraint (SIR) system. The SDM contains internal sensors along with external impact sensors, mounted at strategic locations on the vehicle. In the event of a collision, the SDM compares the signals from the internal and external impact sensors to a value stored in memory. When the generated signals exceed the stored value, the SDM will cause current to flow through the appropriate deployment loops to deploy the air bags. The SDM records the SIR system status when a deployment occurs and illuminates the AIR BAG indicator located in the instrument cluster. The SDM performs continuous diagnostic monitoring of the SIR system electrical components and circuitry when the ignition is turned ON. If the SDM detects a malfunction, a DTC will be stored and the SDM will request the instrument cluster to illuminate the AIR BAG indicator, notifying the driver that a malfunction exists. In the event that ignition positive voltage is lost during a collision, the SDM maintains a 23-volt loop reserve for deployment of the air bags. It is important when disabling the SIR system for servicing or rescue operations to allow the 23-volt loop reserve to dissipate, which could take up to 1 minute.

Air Bags

This vehicle contains 6 air bags. The 6 air bags are located in the driver steering wheel (dual air bags), passenger instrument panel (passenger side) (dual air bags), driver seat side (B-pillar), passenger seat side (B-

pillar), left roof rail, and right roof rail. To view the locations of the air bags refer to **SIR Identification Views**. Air bags contain a housing, inflatable air bag, two initiating devices (if dual air bags), canister of gas generating material and, in some cases, stored compressed gas. The deployment loops supply current to deploy the air bags. The steering wheel and passenger instrument panel air bags have two stages of deployment, which varies the amount of restraint to the occupant according to the collision severity. For moderate frontal collisions the air bags deploy at less than full deployment which consists of stage 1 of the air bag. For more severe frontal collisions a full deployment is initiated which consists of stage 1 and stage 2 of the air bag. The current passing through the air bags ignites the material in the canister producing a rapid generation of gas and in some cases, the release of compressed gas. The gas produced from this reaction rapidly inflates the air bag. Once the air bag is inflated it quickly deflates through the air bag vent holes and/or the bag fabric. Each air bag is equipped with a shorting bar located in the connector. The shorting bar shorts the air bag deployment loop circuitry to prevent unwanted deployment of the air bag when it is disconnected.

Seat Belt Pretensioners (Anchor and Retractor)

The seat belt pretensioners (driver and passenger) consist of a housing, seat belt retractor (located in the B-pillar), seat belt anchor (located on the floor), seat belt webbing, an initiator, and a canister of gas generating materials. To view the locations of the seat belt pretensioner refer to **SIR Identification Views**. The initiator is part of the seat belt pretensioner deployment loop. When the vehicle is involved in a collision of sufficient force, the SDM causes current to flow through the seat belt deployment loops to the initiator. Current passing through the initiator ignites the material in the canister producing a rapid generation of gas. The gas produced from this reaction deploys the seat belt pretensioners which removes all of the slack in the seat belts. Depending on the severity of the collision, the seat belt pretensioners may deploy without the frontal air bags deploying, or they will deploy immediately before the frontal air bags deploy. Each seat belt pretensioner is equipped with a shorting bar that is located in the connector of the seat belt pretensioner. The shorting bar shorts the seat belt pretensioner circuitry to prevent unwanted deployment of the seat belt pretensioner when the connector is disconnected.

Impact Sensors

This vehicle contains 6 impact sensors. The impact sensors are located in the front of the vehicle (2, left and right), and the 4 doors. To view the locations of the impact sensors refer to **SIR Identification Views**. The impact sensors contain a sensing device which monitors vehicle acceleration and velocity changes to detect side collisions that are severe enough to warrant air bag deployment. The impact sensors are not part of the deployment loop, but instead provide input to the SDM. The SDM contains a microprocessor that performs calculations using the measured accelerations and compares these calculations to a value stored in memory. When the generated calculations exceed the stored value, the SDM will cause current to flow through the deployment loops deploying the appropriate air bags.

Passenger Presence Detection System and Air Bag Indicator (Passenger) (If Equipped)

NOTE: **The passenger presence system (PPS) is a calibrated unit. When replacing the assembly all parts in the service kit must remain together. Do not mix any of the old parts with the new parts. After repairing or replacing the PPS, the preload test must be performed in order to function properly.**

The passenger presence system (PPS) is used to monitor the type of occupant that is sitting in the front passenger seat and communicate the status to the inflatable restraint sensing and diagnostic module (SDM). The

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

SDM then uses this information to determine whether to enable or suppress the passenger instrument panel air bag. The PPS consists of an electronic control module, a sensor mat in the seat, a harness, and PASSENGER AIR BAG ON/OFF indicators. The PPS transmits and receives a low-level electric field. The measured capacitance value of this field is used to determine the type of occupant sitting in the front passenger seat. If the measured capacitance is less than a calibrated value, then the PPS module will send a serial data signal to the SDM to disable the passenger instrument panel air bag. If the measured capacitance is greater than a calibrated value, then the passenger presence module will send a serial data signal to the SDM to enable the passenger instrument panel air bag. The SDM will notify the customer of the enable/disable status by illuminating one of the PASSENGER AIR BAG ON/OFF indicator. The passenger presence module monitors itself for faults and will displays diagnostic trouble codes (DTCs) on the scan tool. When a fault is detected, the passenger presence module sends out a message to the SDM. The SDM responds by sending a command message to the IPC to illuminate the AIR BAG indicator.

Passenger Air Bag Disable Switch (If Equipped)

The passenger air bag disable switch is used to turn the passenger instrument panel air bag on or off. The customer can decide to disable the passenger instrument panel air bag by turning this switch on. When the SDM sees a ground circuit from this switch the passenger instrument panel air bag is turned off. The vehicle has a PASSENGER AIR BAG ON/OFF indicator to tell the customer when the passenger instrument panel air bag is on or off based on the disable switch position.

Seat Belt Indicators

The seat belt indicators are controlled through the inflatable restraint sensing and diagnostic module (SDM). For further information on seat belt indicators refer to [Seat Belt System Description and Operation](#) .


SPECIAL TOOLS AND EQUIPMENT

SPECIAL TOOLS

Illustration	Tool Number/Description
	J 38826 SIR Deployment Harness

2010 Cadillac SRX

2010 RESTRAINTS Supplemental Inflatable Restraints - SRX

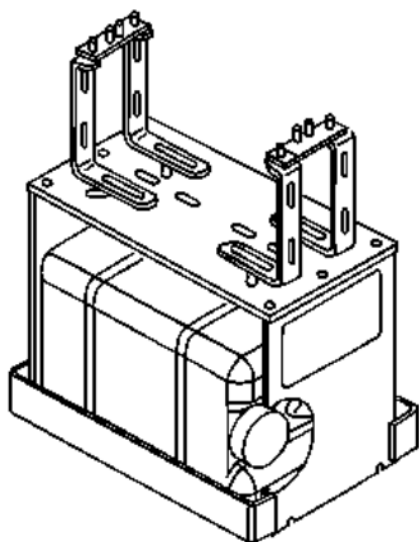

J 39401-B
SIR Deployment Fixture

