


Automatic anti-dazzle interior mirror , (4L6)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Interior mirror, Onboard supply control unit, Fuse holder C, Front roof module

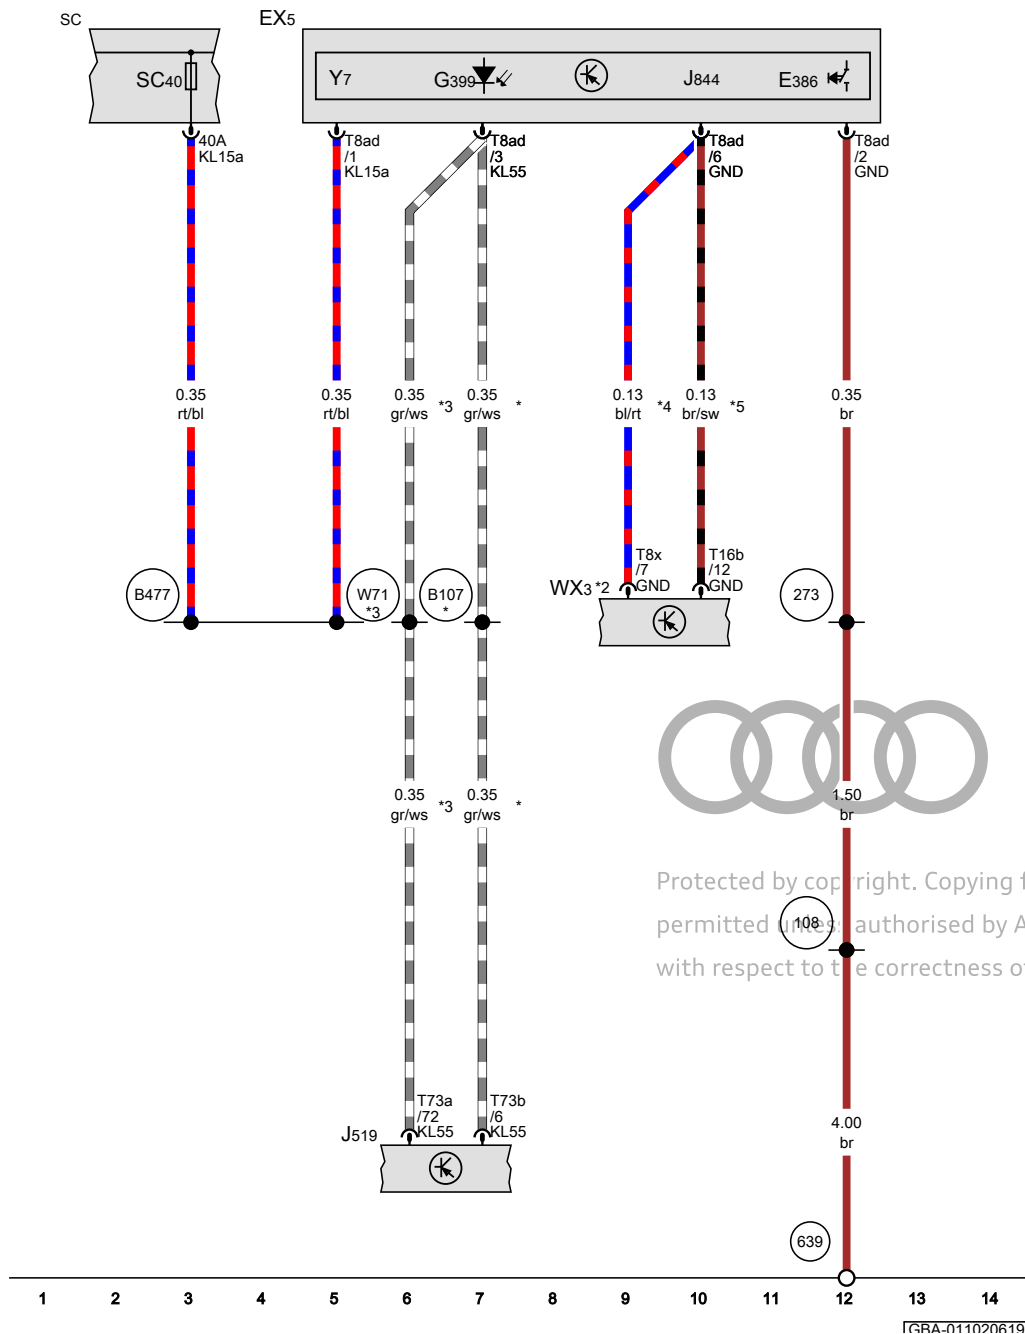

- EX5 Interior mirror
- E386 Anti-dazzle interior mirror button
- G399 Light sensor
- J519 Onboard supply control unit
- J844 Main beam assist control unit
- SC Fuse holder C
- SC40 Fuse 40 on fuse holder C
- T8ad 8-pin connector, black
- T8x 8-pin connector, black
- T16b 16-pin connector, brown
- T73a 73-pin connector, black
- T73b 73-pin connector, black
- WX3 Front roof module
- Y7 Automatic anti-dazzle interior mirror

- 108 Earth connection 2, in front left wiring harness
- 273 Earth connection 5, in front wiring harness
- 639 Earth point, left A-pillar
- B107 Connection (reversing light), in main wiring harness
- B477 Connection 13, in main wiring harness
- W71 Connection (reversing light), in rear wiring harness

- * For left-hand drive models
- *2 see applicable current flow diagram
- *3 For right-hand drive models
- *4 For models with no background lighting
- *5 For models with background lighting

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink