

SECTION 5

ELECTRICAL WIRING DIAGRAMS

CONTENTS

1. STARTING & CHARGING SYSTEM	5-8
1) BATTERY, IGNITION SWITCH, STARTER MOTOR, GENERATOR & PNP SWITCH CIRCUIT	5-8
2. ECM (ENGINE CONTROL MODULE) : MR-140	5-10
1) BATTERY POWER SUPPLY, GROUND, EI SYSTEM & CKP SENSOR CIRCUIT	5-10
2) FUEL PUMP, INJECTOR & HEATED O2 SENSOR CIRCUIT	5-12
3) IAC, SENSOR(MAP, ECT, TP, KNOCK, ACP & ROUGH ROAD) & LEGR CIRCUIT	5-14
4) EVAP CANISTER PURGE SOLENOID, CMP SENSOR, CLUSTER & VSS CIRCUIT	5-16
5) CLUSTER, FUEL PUMP & TCM CIRCUIT	5-18
6) DLC, MIL LAMP & IMMOBILIZER CONTROL CIRCUIT	5-20
3. ECM (ENGINE CONTROL MODULE) : HV-240	5-22
1) BATTERY POWER SUPPLY, GROUND, EI SYSTEM & CKP SENSOR CIRCUIT	5-22
2) FUEL PUMP, INJECTOR & O2 SENSOR CIRCUIT	5-24
3) IAC, SENSOR(MAP, ECT, TP, IAT, KNOCK & ACP) & EGR VALVE CIRCUIT	5-26
4) EVAP CANISTER PURGE SOLENOID, CMP SENSOR, CLUSTER & VSS CIRCUIT	5-28
5) CLUSTER, FUEL PUMP & TCM CIRCUIT	5-30
6) DLC, MIL LAMP, IMMOBILIZER CONTROL & RON SWITCH CIRCUIT	5-32

4. ECM (ENGINE CONTROL MODULE) : SIRIUS D4	5-34
1) BATTERY POWER SUPPLY, GROUND, EI SYSTEM & CKP SENSOR CIRCUIT	5-34
2) FUEL PUMP, INJECTOR, FUEL CONNECTOR & CMP SENSOR CIRCUIT	5-36
3) MTIA, SENSOR(ECT, KNOCK, IAT, MAP, ACP & HO2S) & POWER STEERING PRESSURE SWITCH CIRCUIT : EOBD	5-38
4) MTIA, SENSOR(ECT, KNOCK, IAT, MAP, ACP & O2) & POWER STEERING PRESSURE SWITCH CIRCUIT : NON EOBD	5-40
5) EEGR VALVE, VR SENSOR, CLUSTER & FUEL PUMP CIRCUIT : EOBD	5-42
6) EGR VALVE, CLUSTER & FUEL PUMP CIRCUIT: NON EOBD	5-44
7) EVAP CANISTER PURGE SOLENOID, VGIS, CLUSTER, VSS, TCM & RON SWITCH CIRCUIT	5-46
8) DLC, MIL LAMP & IMMOBILIZER CONTROL CIRCUIT	5-48
5. TCM (TRANSMISSION CONTROL MODULE) : MR-140/HV-240	5-50
1) POWER SUPPLY, GROUND, PNP SWITCH, BRAKE SWITCH & SOLENOID VALVE CIRCUIT	5-50
2) SENSOR(INPUT SPEED,OUTPUT SPEED, TRANSMISSION FLUID TEMP.), CLUSTER, DLC, ECM & HOLD MODE SWITCH CIRCUIT	5-52
3) PNP SWITCH & CLUSTER CIRCUIT	5-54
6. TCM (TRANSMISSION CONTROL MODULE) : SIRIUS D4	5-56
1) POWER SUPPLY, GROUND, PNP SWITCH, CLUSTER & ECM CIRCUIT : NOTCH BACK	5-56
2) POWER SUPPLY, GROUND, PNP SWITCH, CLUSTER & ECM CIRCUIT : HATCH BACK	5-58
3) BRAKE SWITCH, BTSI SOLENOID, ISS SENSOR & TRANSAXLE CIRCUIT	5-60
4) HOLD MODE SWITCH, VSS & DLC CIRCUIT	5-62
7. AIR CONDITIONER	5-64
1) AIR CONDITIONER CONTROL SWITCH, BLOWER MOTOR RESISTER & BLOWER MOTOR CIRCUIT	5-64
2) AIR CONDITIONER CONTROL, INTAKE MOTOR SWITCH & AIR CONDITIONER COMPRESSOR CIRCUIT	5-66
8. FATC (FULL AUTOMATIC TEMPERATURE CONTROL)	5-68
1) BLOWER MOTOR, INTAKE MOTOR, MODE MOTOR, MAX HIGH RELAY & POWER TR CIRCUIT	5-68
2) SENSOR(AMBIENT,INCAR,SUN&WATER), AIR MIX DOOR MOTOR, A/C COMPRESSOR & ECM CIRCUIT	5-70
2-1) MR-140/HV-240	5-70
2-2) SIRIUS D4	5-72

9. RADIATOR COOLING FAN CIRCUIT	5-74
1) COOLING FAN CIRCUIT(MR-140/HV-240) : DUAL	5-74
2) COOLING FAN CIRCUIT(MR-140/HV-240) : SINGLE	5-76
3) COOLING FAN CIRCUIT(SIRIUS D4) : DUAL	5-78
4) COOLING FAN CIRCUIT(SIRIUS D4) : SINGLE	5-80
10. HEAD LAMP & HEAD LAMP LEVELING DEVICE(HLLD) CIRCUIT	5-82
1) NOTCH BACK	5-82
2) HATCH BACK	5-84
11. DRL (DAY TIME RUNNING LIGHT) CIRCUIT	5-86
1) NOTCH BACK	5-86
2) HATCH BACK	5-88
12. ILLUMINATION CIRCUIT	5-90
1) ILLUMINATION CIRCUIT- W/O DIMMER CONTROL	5-90
2) ILLUMINATION CIRCUIT- W/ DIMMER CONTROL	5-92
3) LAMP(LICENSE PLATE & W/ FRONT/REAR POSITION) CIRCUIT : NOTCH BACK	5-94
4) LAMP(LICENSE PLATE & W/ FRONT/REAR POSITION) CIRCUIT : HATCH BACK	5-96
13. FRONT & REAR FOG LAMP CIRCUIT	5-98
1) NOTCH BACK	5-98
2) HATCH BACK	5-100
14. HAZARD & TURN SIGNAL LAMP CIRCUIT	5-102
1) NOTCH BACK	5-102
2) HATCH BACK	5-104
15. STOP LAMP, CENTER HIGH MOUNT STOP LAMP (CHMSL) & REVERSE LAMP CIRCUIT	5-106
1) MR-140/HV-240 : NOTCH BACK	5-106
2) MR-140/HV-240 : HATCH BACK	5-108
3) SIRIUS D4 : NOTCH BACK	5-110
4) SIRIUS D4 : HATCH BACK	5-112


16. TRUNK/TAIL GATE OPEN SWITCH, TRUNK LATCH SWITCH, TRUNK ROOM LAMP & HORN CIRCUIT	5-114
1) DUAL HORN	5-114
2) SIGNLE HORN	5-116
17. LAMPS(MAP & ROOM) CIRCUIT	5-118
1) W/O SUN ROOF & W/ DECAY	5-118
2) W/ SUN ROOF & W/ DECAY	5-120
3) W/O SUN ROOF & W/O DECAY	5-122
4) W/ SUN ROOF & W/O DECAY	5-124
18. CLOCK, CIGAR LIGHTER,ASHTRAY ILLUM. LAMP & EXTRA POWER JACK CIRCUIT	5-126
1) M/T	5-126
2) A/T	5-128
19. CHIME BELL, SEAT BELT & KEY REMIND SWITCH CIRCUIT	5-130
20. WIPER CIRCUIT	5-132
1) W/O RAIN SENSOR & AIR CONDITIONER : NOTCH BACK	5-132
2) W/O RAIN SENSOR & AIR CONDITIONER : HATCH BACK	5-134
3) W/ RAIN SENSOR & AIR CONDITIONER : NOTCH BACK	5-136
4) W/ RAIN SENSOR & AIR CONDITIONER : HATCH BACK	5-138
5) W/O RAIN SENSOR & FATC : NOTCH BACK	5-140
6) W/O RAIN SENSOR & FATC : HATCH BACK	5-142
7) W/ RAIN SENSOR & FATC : NOTCH BACK	5-144
8) W/ RAIN SENSOR & FATC : HATCH BACK	5-146
21. REAR WINDOW DEFROSTER & OSRV MIRROR HEATING SYSTEM CIRCUIT	5-148
22. ELECTRIC OSRV (OUTSIDE REAR VIEW) MIRROR CIRCUIT	5-150
23. FOLDING MIRROR UNIT CIRCUIT	5-152

24. POWER WINDOW CIRCUIT	5-154
1) ONLY FRONT POWER WINDOW CIRCUIT	5-154
2) FRONT & REAR POWER WINDOW CIRCUIT	5-156
25. CENTRAL DOOR LOCKING SYSTEM CIRCUIT	5-158
1) NOTCH BACK	5-158
2) HATCH BACK	5-160
26. CLUSTER	5-162
1) TEMPERATURE GAUGE, TACHOMETER, FUEL GAUGE, ODDOMETER, SPEEDOMETER & FUEL WARNING LAMP CIRCUIT : MR-140/HV-240	5-162
2) TEMPERATURE GAUGE, TACHOMETER, FUEL GAUGE, ODDOMETER, SPEEDOMETER & FUEL WARNING LAMP CIRCUIT : SIRIUS D4	5-164
3) WARNING(MIL, ABS, TCS, PARKING BRAKE & CHARGING) LAMP CIRCUIT	5-166
4) WARNING(SSPS, AIR BAG, OIL PRESSURE & SEAT BELT) LAMP & HOLD MODE CIRCUIT	5-168
5) INDICATOR LAMP (FRONT & REAR FOG) & DOOR OPENING WARNING LAMP CIRCUIT	5-170
6) INDICATOR LAMP (TURN SIGNAL, HIGH BEAM & HAZARD) & ILLUMINATION LAMP CIRCUIT	5-172
27. AUDIO CIRCUIT	5-174
1) NOTCH BACK	5-174
2) HATCH BACK	5-176
28. ABS (ANTILOCK BRAKE SYSTEM)	5-178
1) POWER SUPPLY, WHEEL SPEED SENSOR & BRAKE SWITCH CIRCUIT	5-178
2) OIL FEEDING CONNECTOR, WARNING(ABS, TCS & BRAKE) LAMP & DLC CIRCUIT	5-180
29. AIR BAG (SDM: SENSING & DIAGNOSTIC MODULE) CIRCUIT	5-182
30. SUN ROOF CIRCUIT	5-184
31. SSPS(SPEED SENSITIVE POWER STEERING) CIRCUIT	5-186

32. IMMOBILIZER SYSTEM CIRCUIT	5-188
33. ANTI THEFT CONTROL SYSTEM CIRCUIT	5-190
1) NOTCH BACK	5-190
2) HATCH BACK	5-192

1. STARTING & CHARGING SYSTEM

1) BATTERY, IGNITION SWITCH, STARTER MOTOR, GENERATOR & PNP SWITCH CIRCUIT

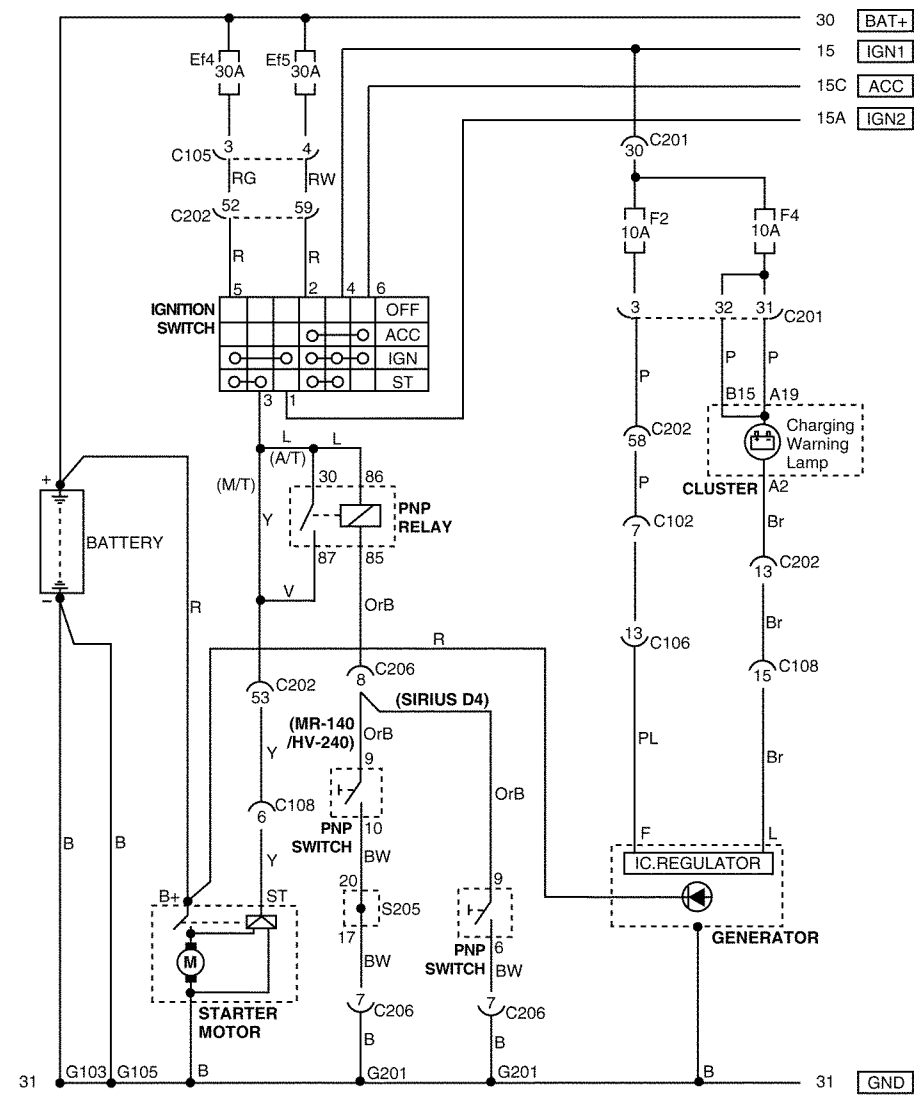


J3D15001

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
S205 (Orange)	TCM	Upper Driver Leg Room
G103	Battery	Left Battery
G105	Battery	Under Start Motor
G201	I.P	Left I.P Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

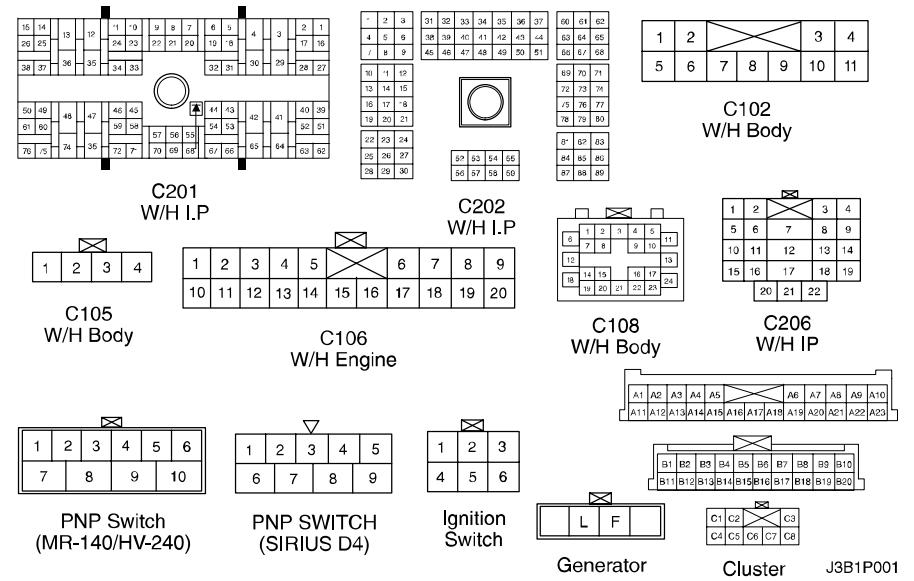


c. POSITION OF CONNECTORS AND GROUNDS

- W/H BATTERY
MR-140/HV-240

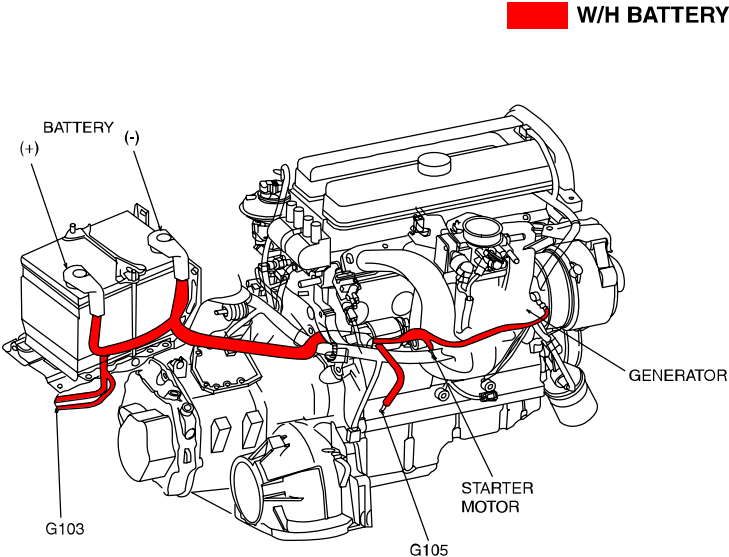

J3B12012


Sirius D4

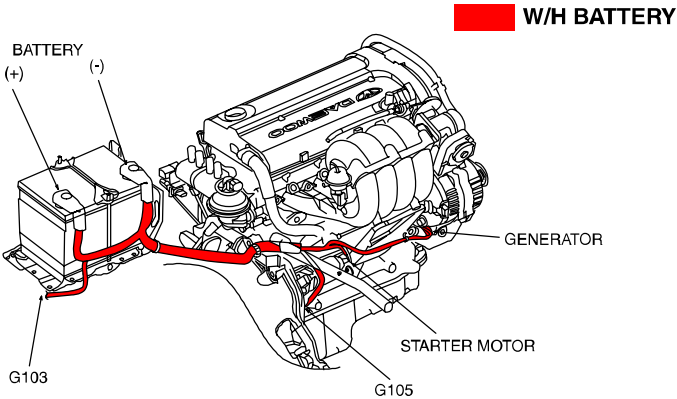

J3B12011

d. SPLICE PACK


S205 : MR-140/HV-240

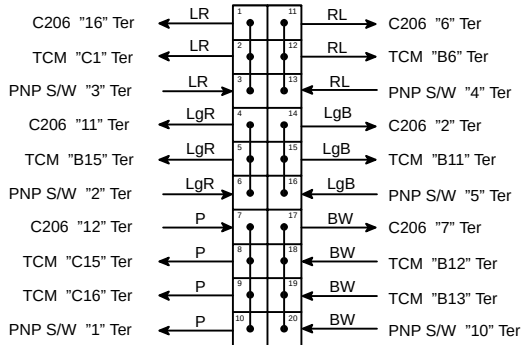

J3B1S007

2. ECM (ENGINE CONTROL MODULE) : MR – 140


1) BATTERY POWER SUPPLY, GROUND, EI SYSTEM & CKP SENSOR CIRCUIT

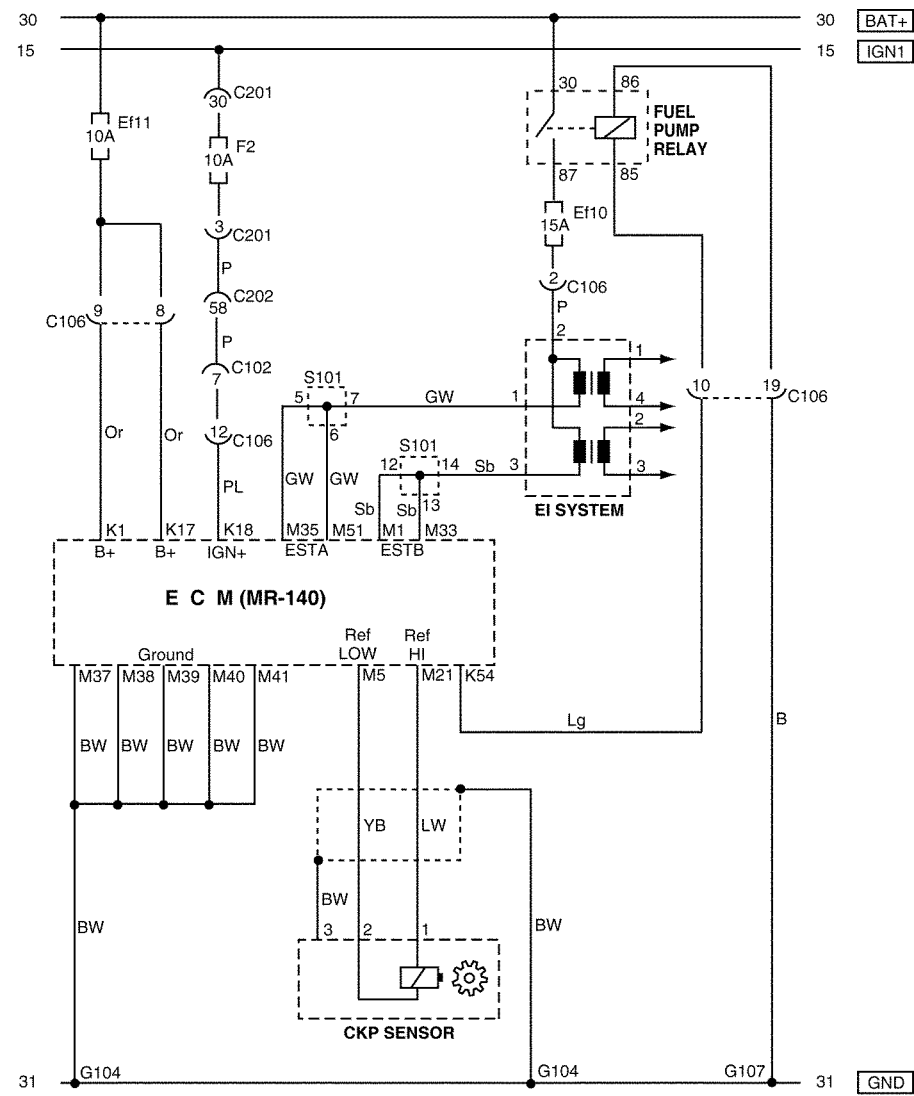

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S101 (Black)	Engine (MR-140/HV-240)	Upper Transmission
G104	Engine	Under Start Motor
G107	Engine (MR-140/HV-240)	Under Start Motor

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

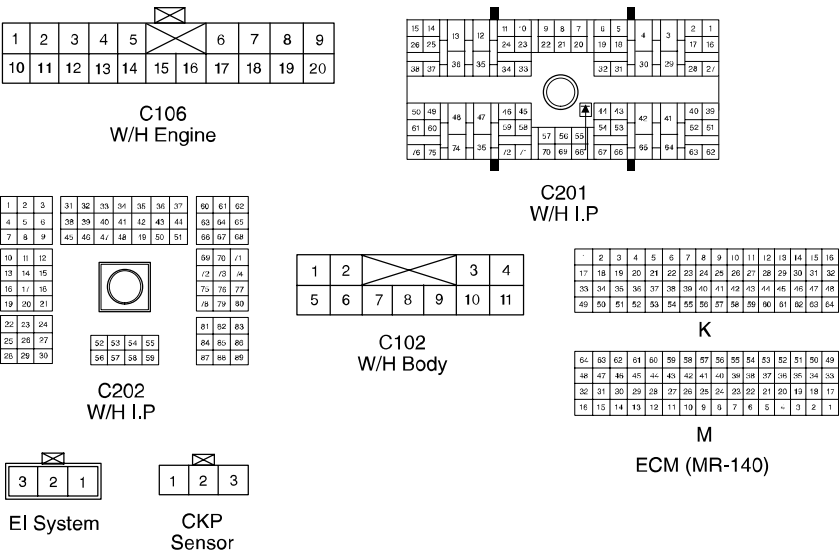


c. POSITION OF CONNECTORS AND GROUNDS


- W/H ENGINE

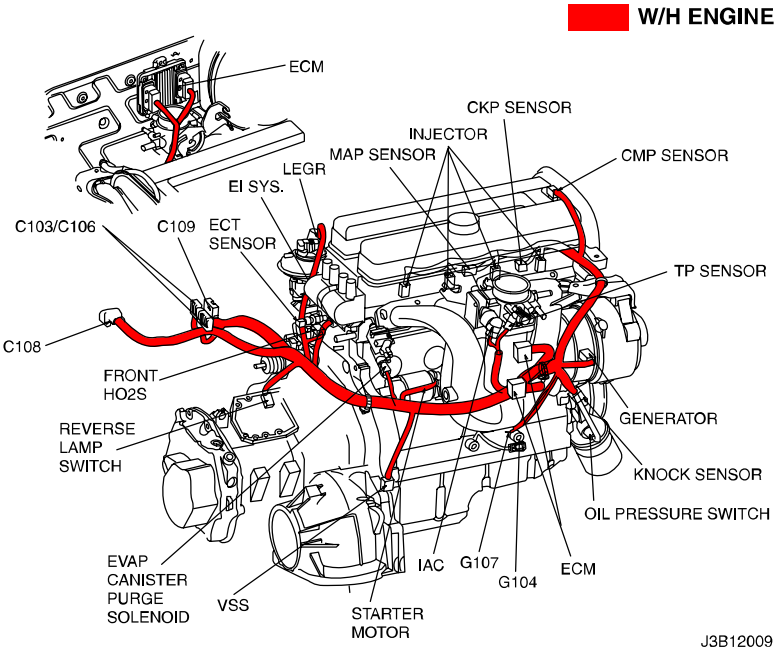


- W/H FRONT

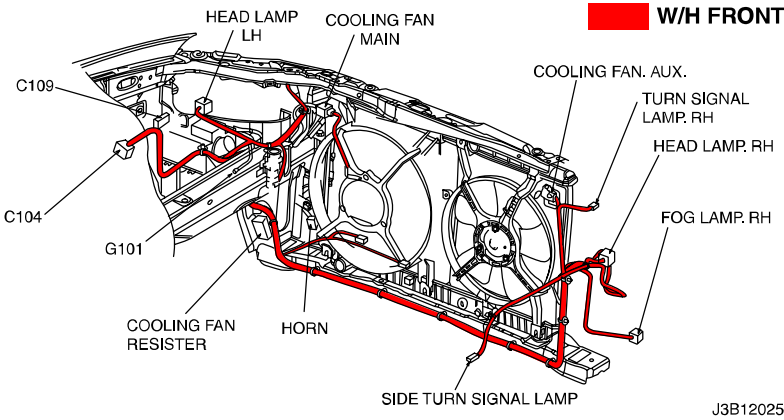

d. SPLICE PACK
S101

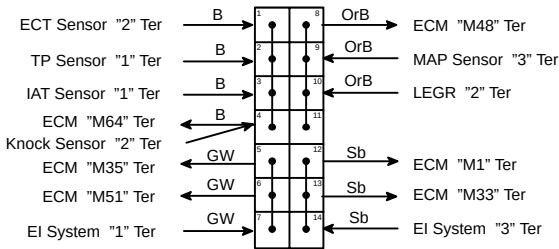


2) FUEL PUMP, INJECTOR & HEATED O2 SENSOR CIRCUIT

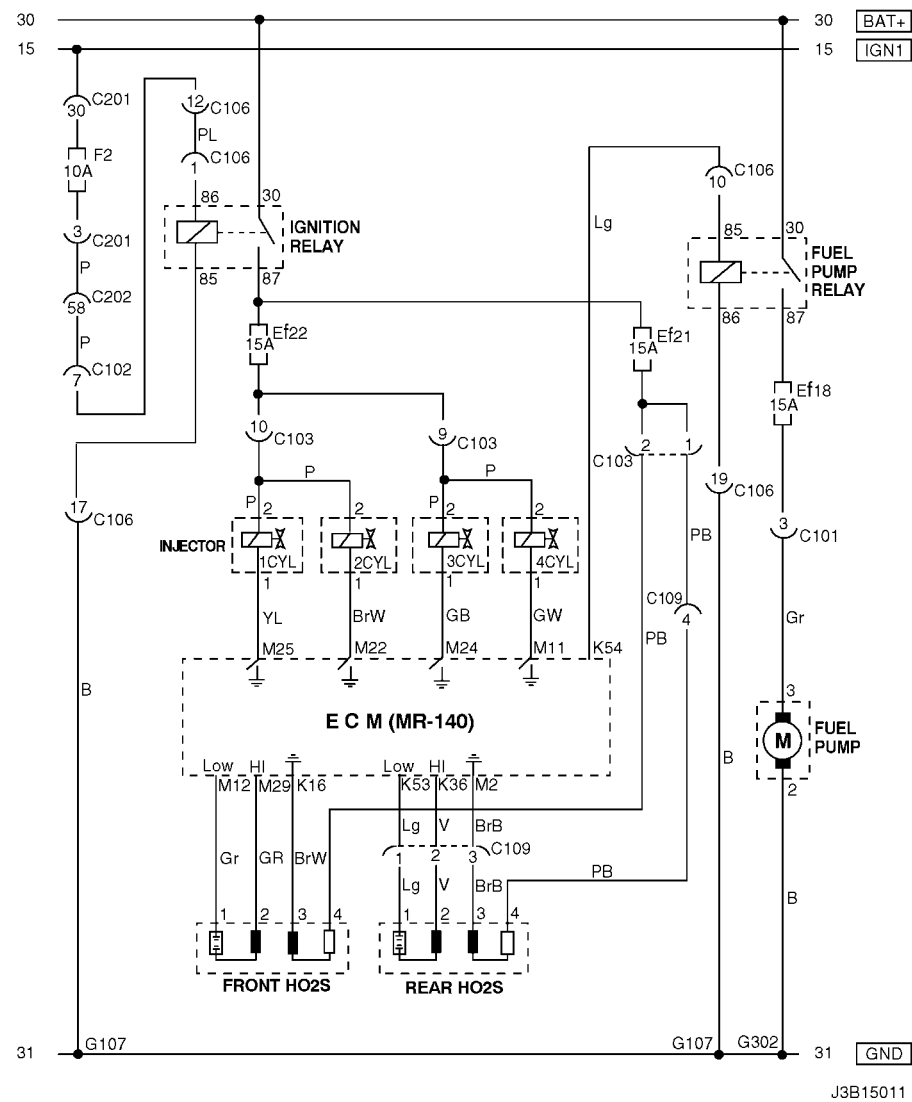

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C109 (4 Pin, White)	Engine – Front	Under Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
G107	Engine (MR-140/HV-240)	Under Start Motor
G302	Body	Below Left C Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

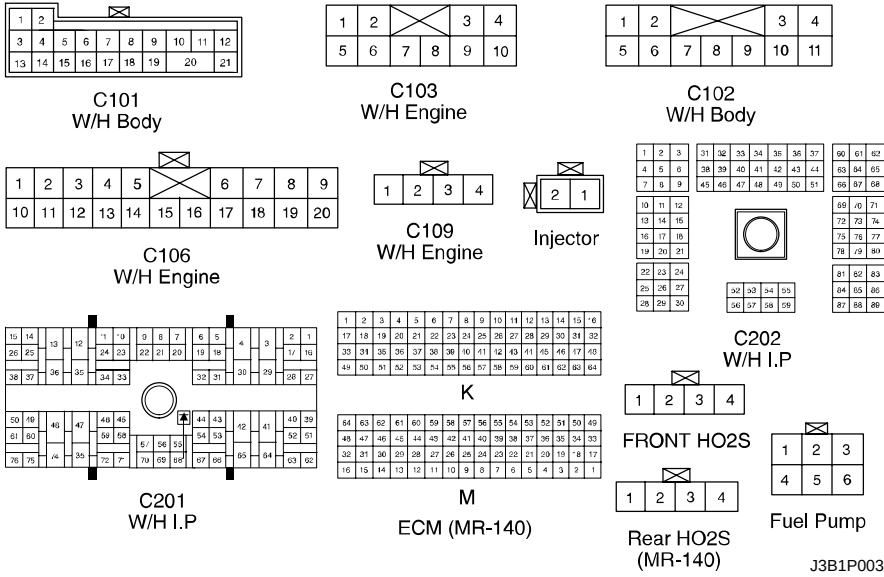


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

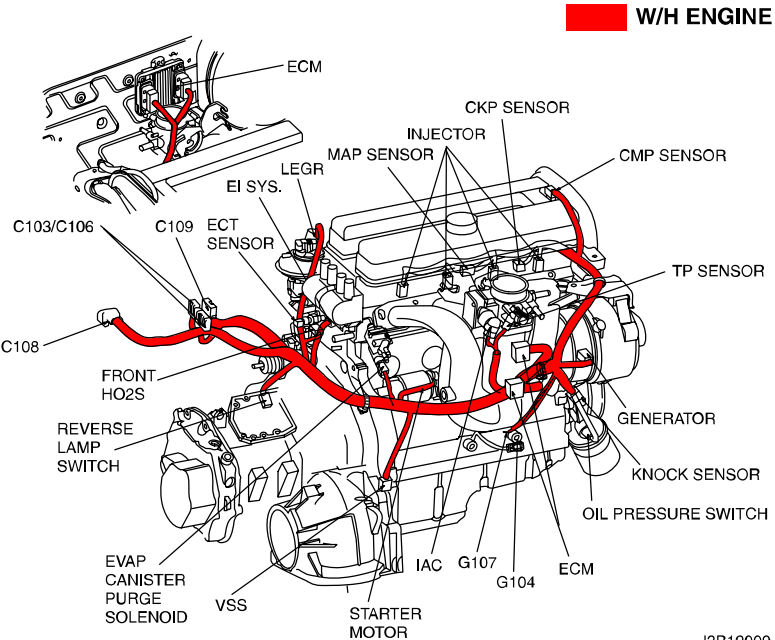


J3B12009

- W/H INSTRUMENT PANEL

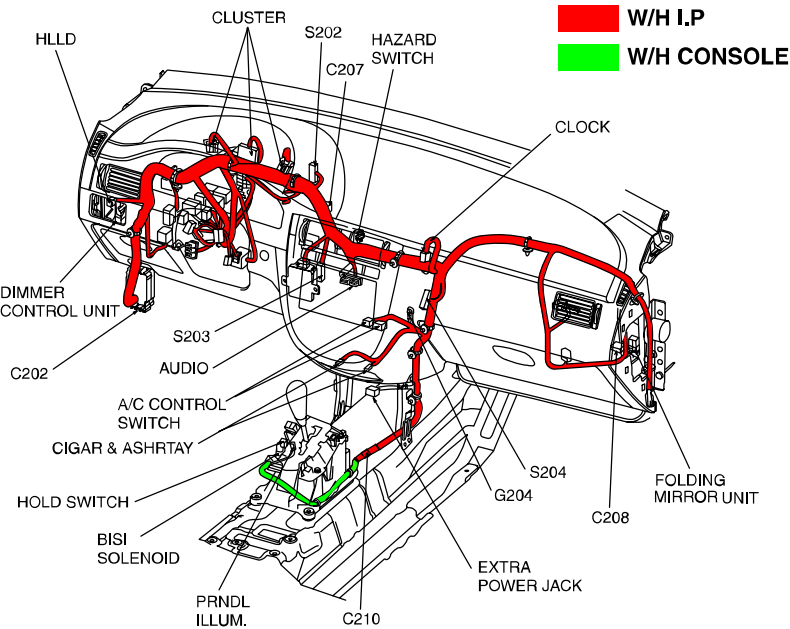

J3B12001


3) IAC, SENSOR (MAP, ECT, TP, IAT, KNOCK, ACP & ROUGH ROAD) & LEGR CIRCUIT

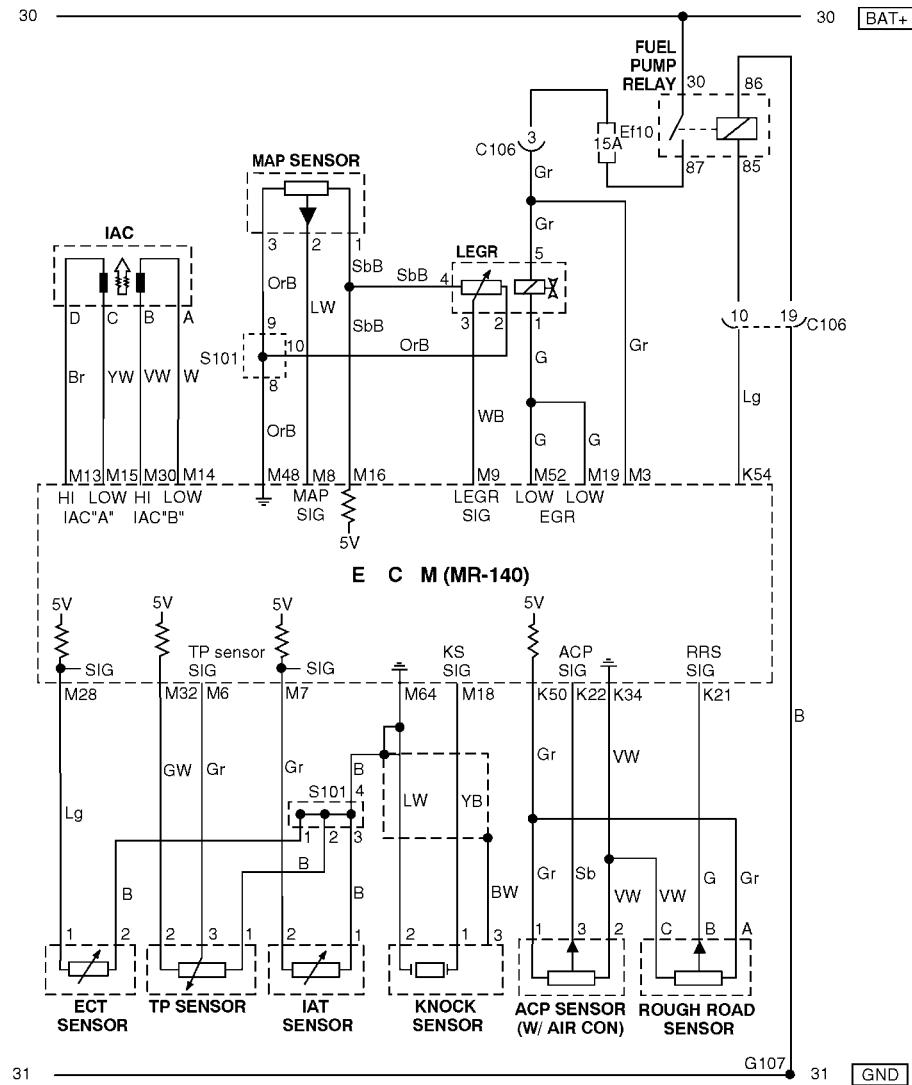

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
S101 (Black)	Engine (MR-140/HV-240)	Upper Transmission
G107	Engine (MR-140/HV-240)	Under Start Motor


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

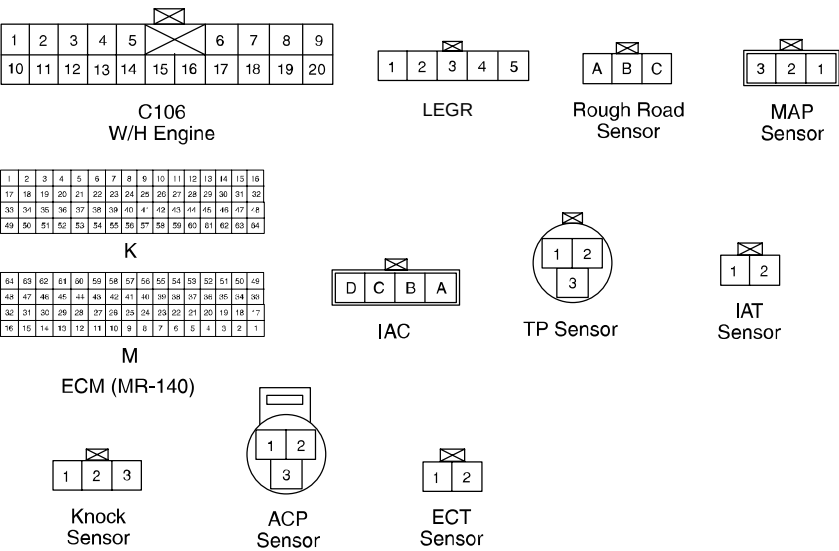

J3B1P004


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

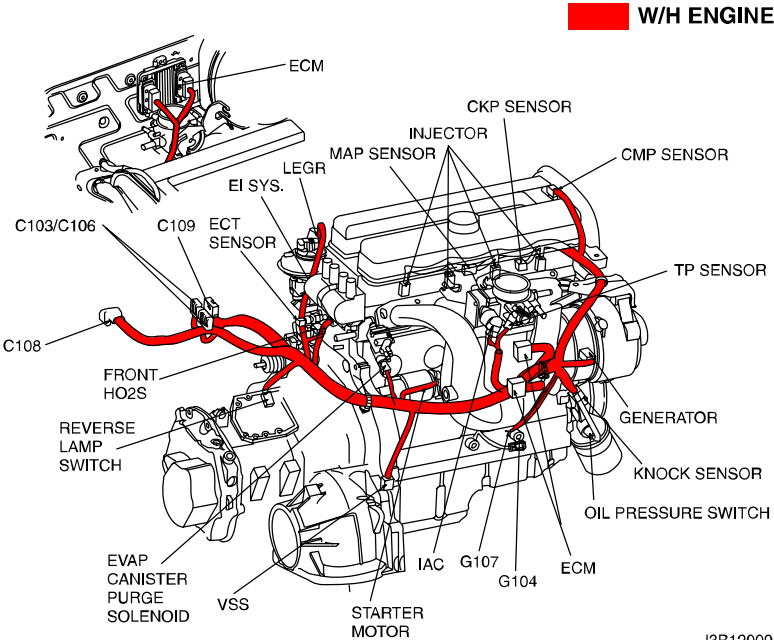

d. SPLICE PACK

S101

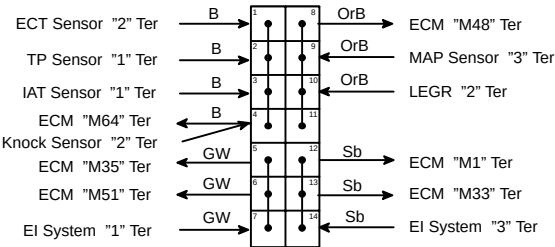

J3B1S001



CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
S202 (Black)	I.P	Behind Cluster
G104	Engine	Under Start Motor
G107	Engine (MR–140/HV–240)	Under Start Motor
G201	I.P	Left I.P Fuse Block

C201
W/H I.P.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40	41	42	43	44	46	48	47	48
49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64

K

64	65	67	61	60	59	58	57	56	55	54	53	52	51	50	/B
48	47	48	45	44	43	42	41	40	39	38	37	36	35	34	33
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1

M
ECM (MR-140)

A	B	C
3	2	1

VSS
(M/T)

CMP
Sensor

C108
W/H Body

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

C113
W/H Body

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

C102
W/H I.P.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

C103
W/H Engine

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

C206
W/H IP

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

EVAP
Canister
Purge
Solenoid

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

C101
W/H Body

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

C106
W/H Engine


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Cluster
J3D1P00


J3D1P001

c. POSITION OF CONNECTORS AND GROUNDS


- W/H ENGINE

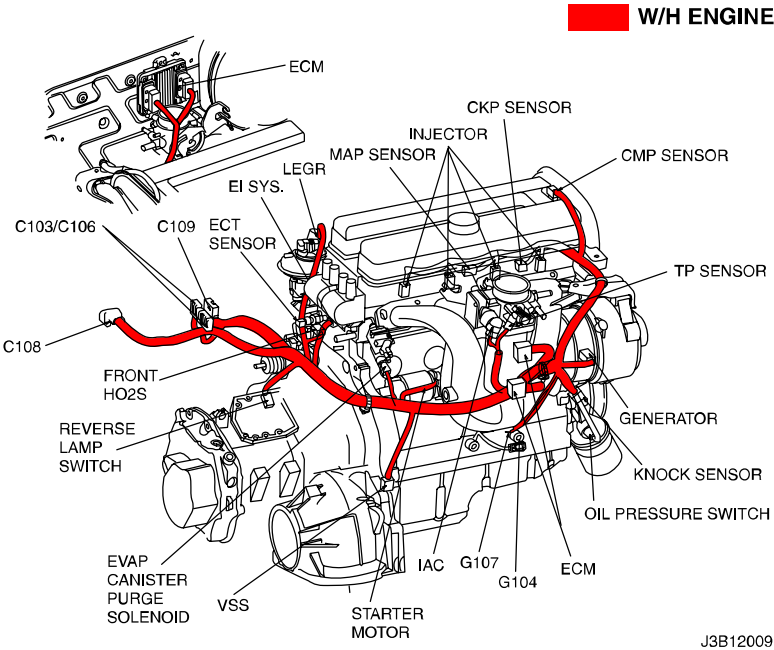

- W/H FRONT

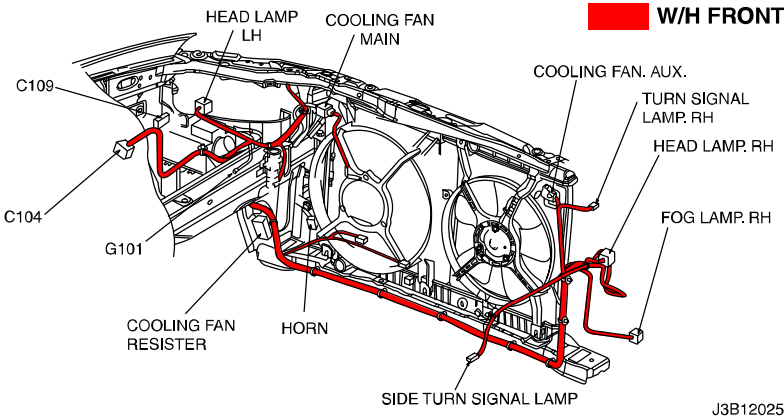

d. SPLICE PACK
S202

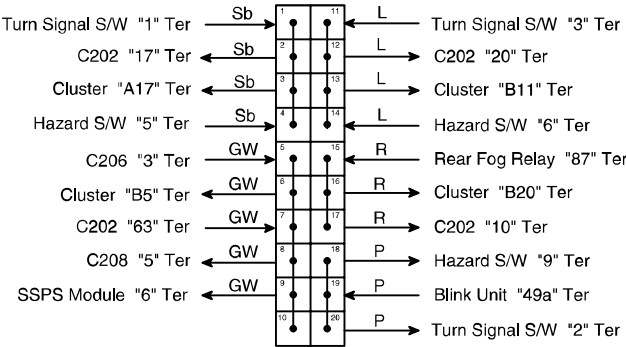




CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C208 (15 Pin, White)	I.P – FATC	Behind Glove Box
C209 (20 Pin, Black)	FATC – FATC.Aux	Between Heater Core and Evaporator Core
G201	I.P	Left I.P Fuse Block


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

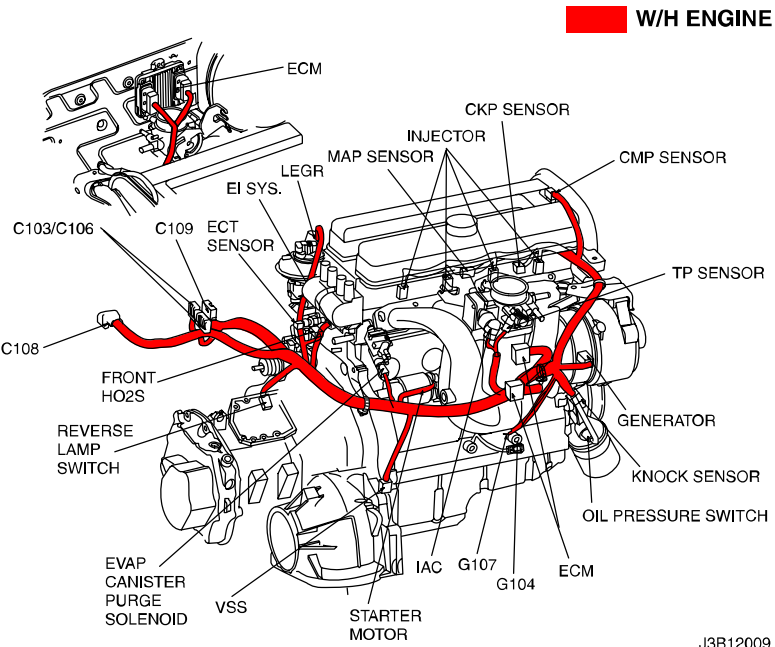

J3B12009


- W/H TCM

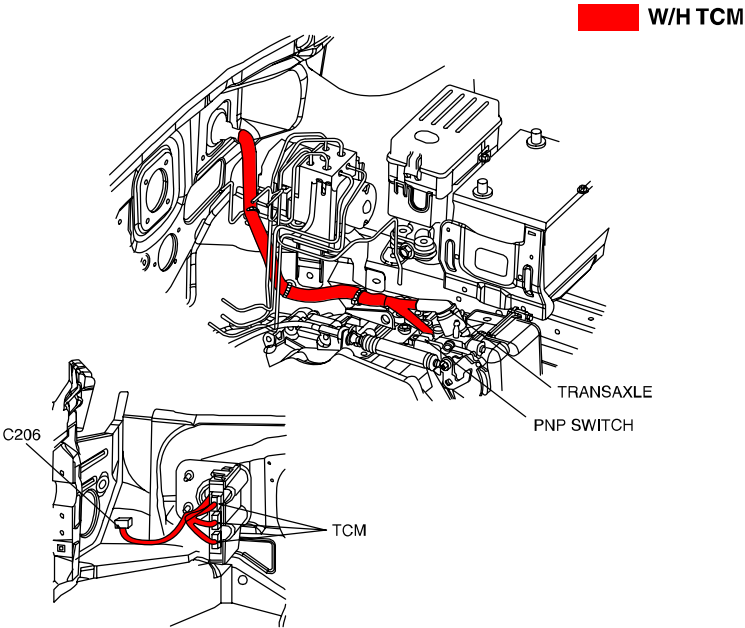

J3B12019


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

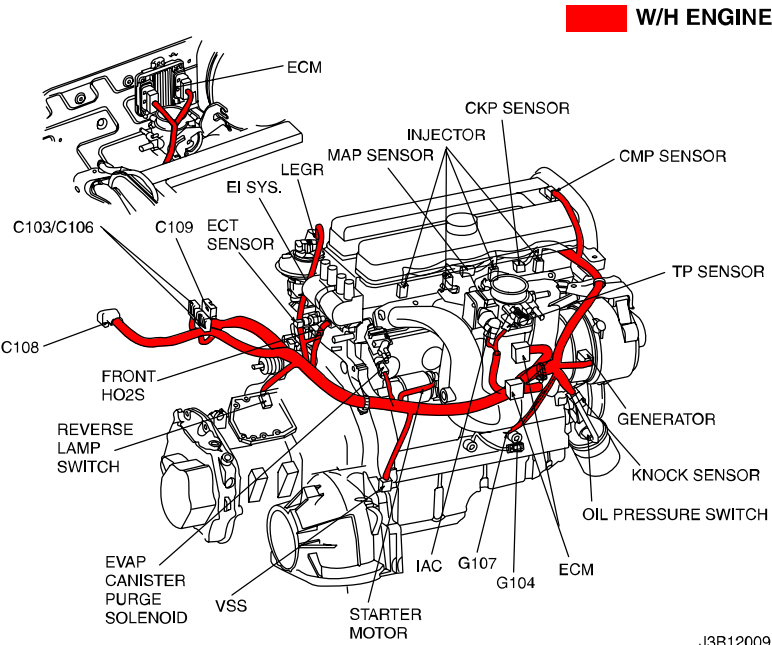

J3B12009


- W/H INSTRUMENT PANEL

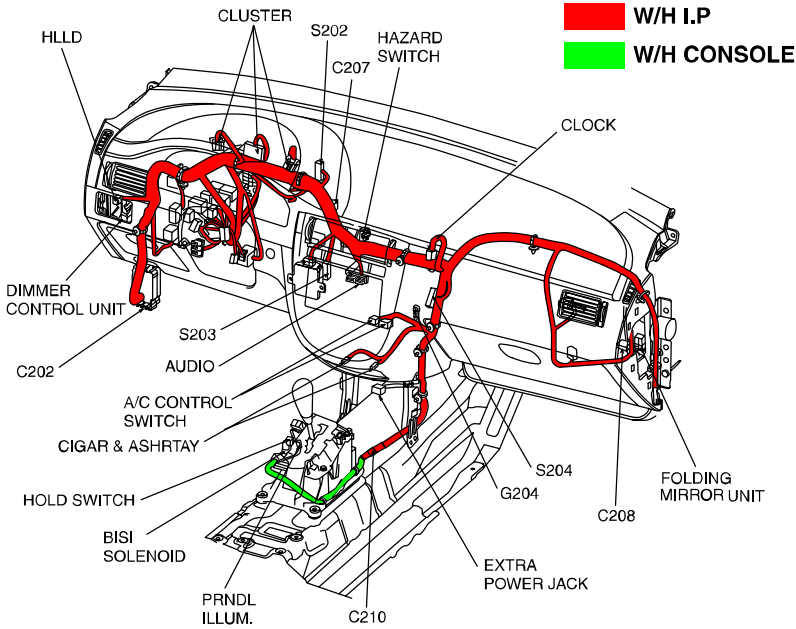

J3B12001

3. ECM (ENGINE CONTROL MODULE) : HV – 240


1) BATTERY POWER SUPPLY, GROUND, EI SYSTEM & CKP SENSOR CIRCUIT

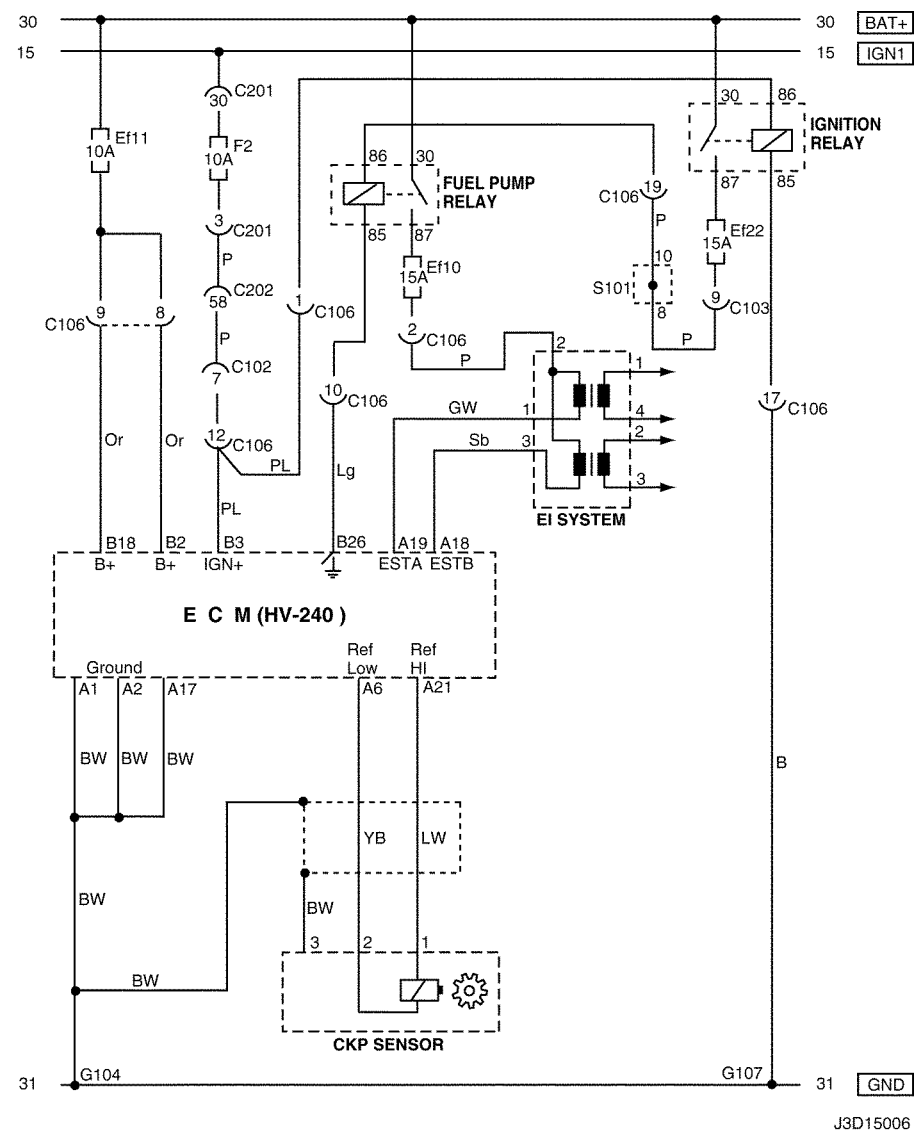

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S101 (Black)	Engine (MR-140/HV-240)	Upper Transmission
G104	Engine	Under Start Motor
G107	Engine (MR-140/HV-240)	Under Start Motor

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

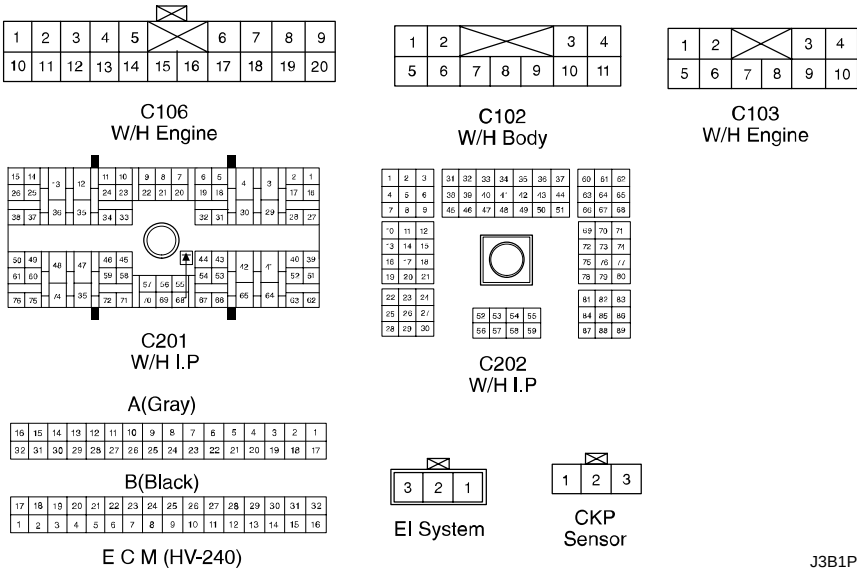


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

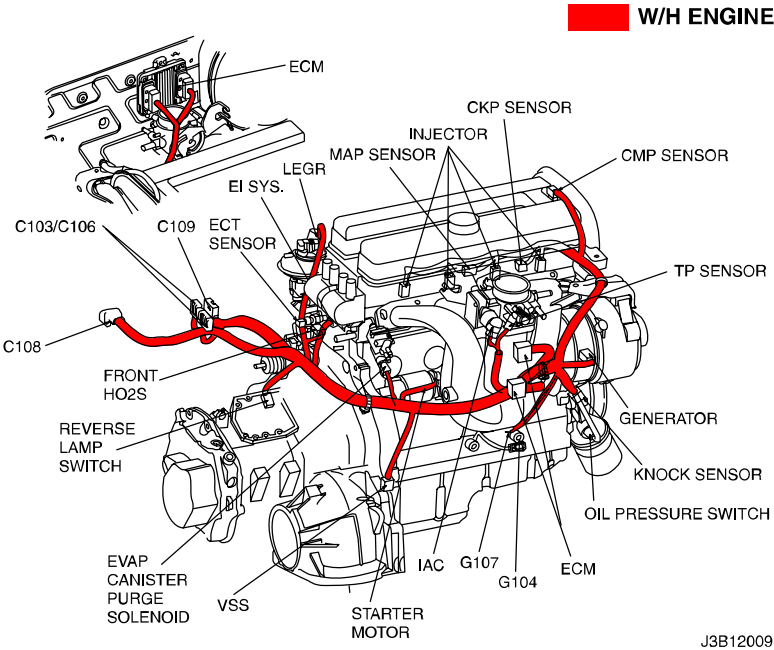


- W/H FRONT

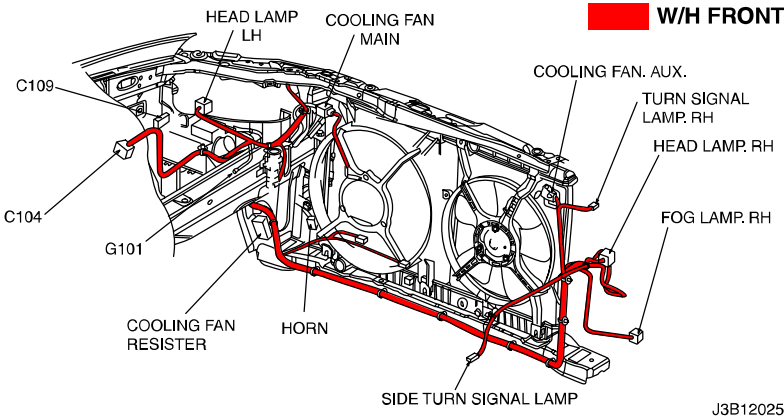


d. SPLICE PACK

S101

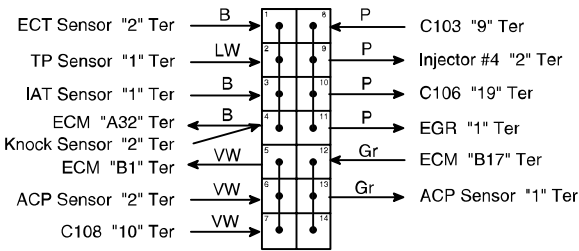

J3D1S001


2) FUEL PUMP, INJECTOR & O2 SENSOR CIRCUIT

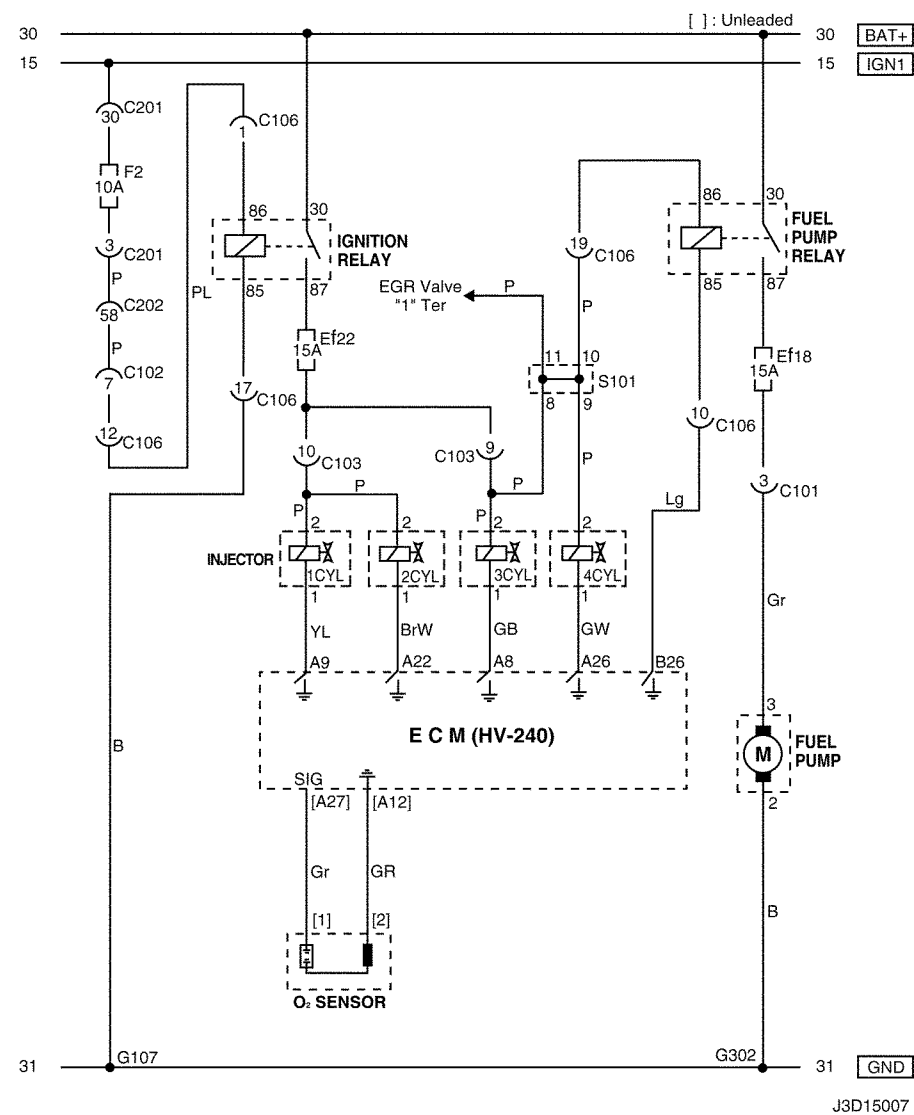

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S101 (Black)	Engine (MR-140/HV-240)	Upper Transmission
G107	Engine (MR-140/HV-240)	Under Start Motor
G302	Body	Below Left C Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

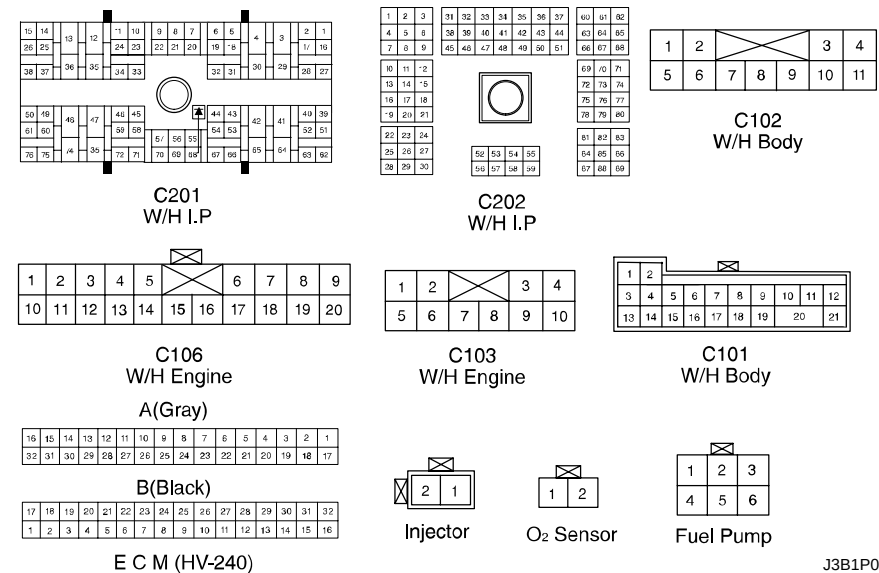

c. POSITION OF CONNECTORS AND GROUNDS


- W/H ENGINE

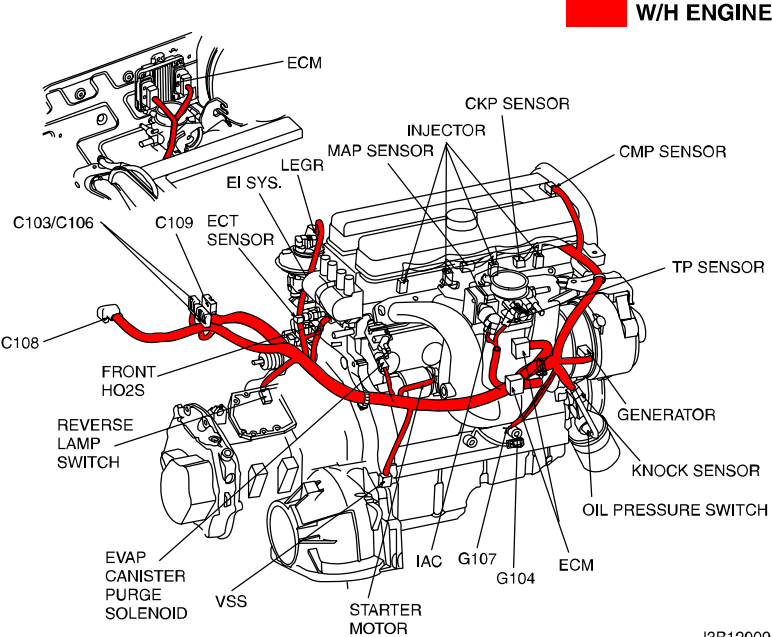

J3B12009


d. SPLICE PACK

S101

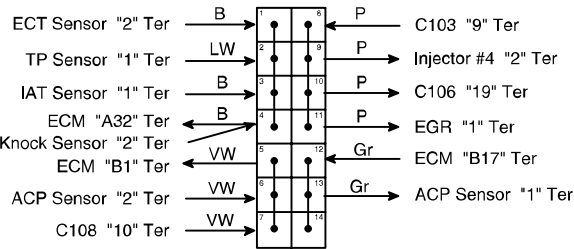

J3D1S001


3) IAC, SENSOR (MAP, ECT, TP, IAT, KNOCK & ACP) & EGR VALVE CIRCUIT

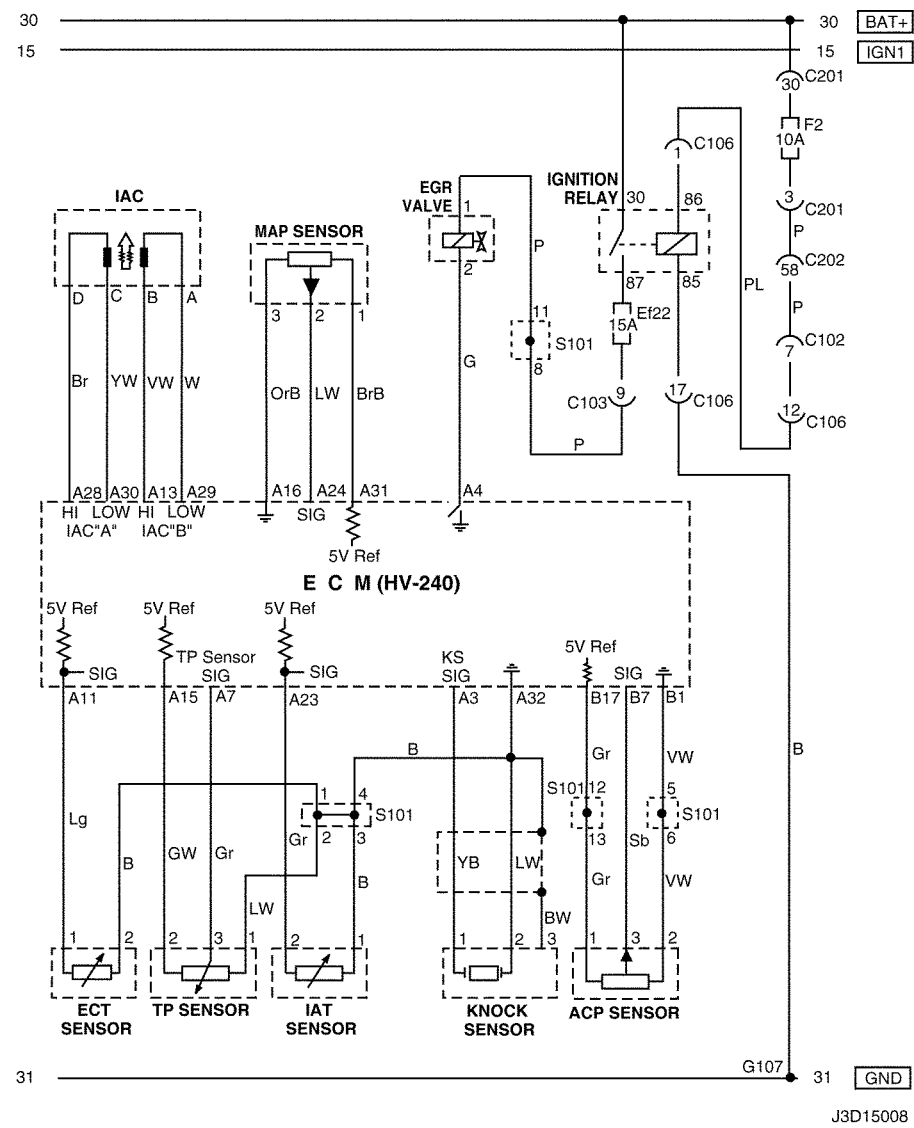

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S101 (Black)	Engine (MR-140/HV-240)	Upper Transmission
G107	Engine (MR-140/HV-240)	Under Start Motor

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

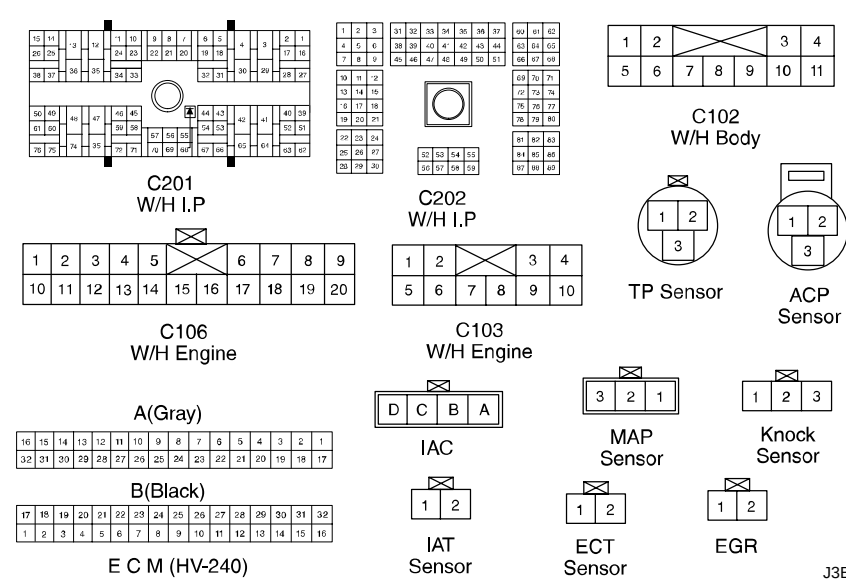

c. POSITION OF CONNECTORS AND GROUNDS


- W/H ENGINE

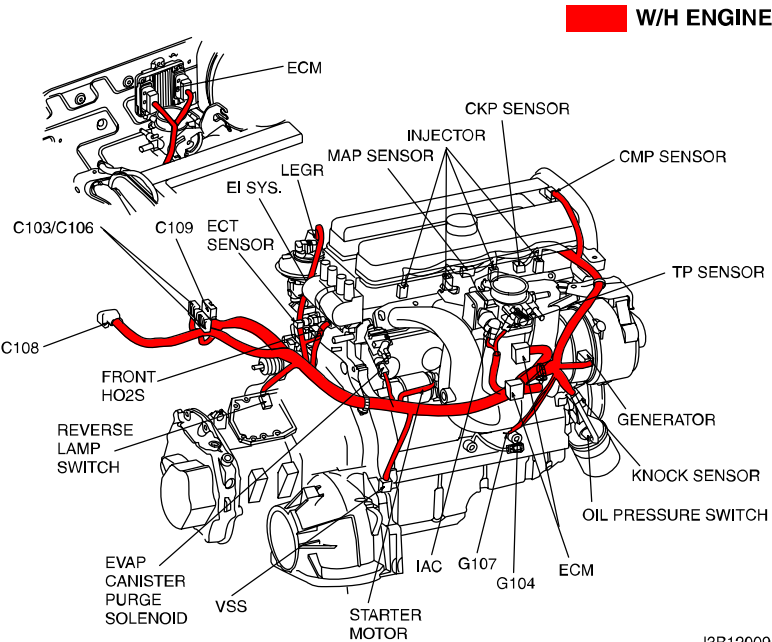

J3B12009

d. SPLICE PACK

S101

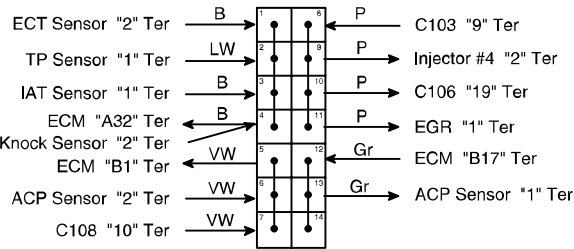

J3D1S001




CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
S202 (Black)	I.P	Behind Cluster
G104	Engine	Under Start Motor
G107	Engine (MR–140/HV–240)	Under Start Motor
G201	I.P	Left I.P Fuse Block


[illegible]

c. POSITION OF CONNECTORS AND GROUNDS


- W/H ENGINE

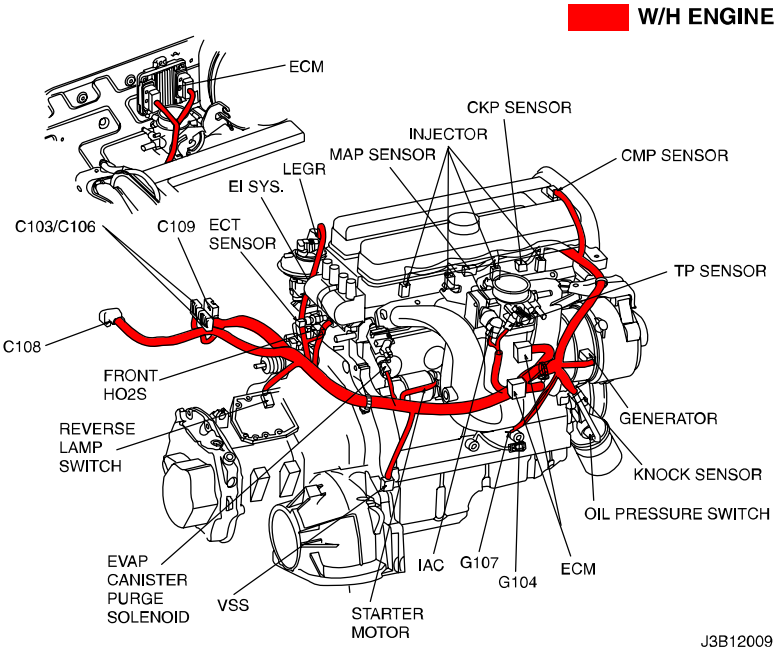


- W/H FRONT

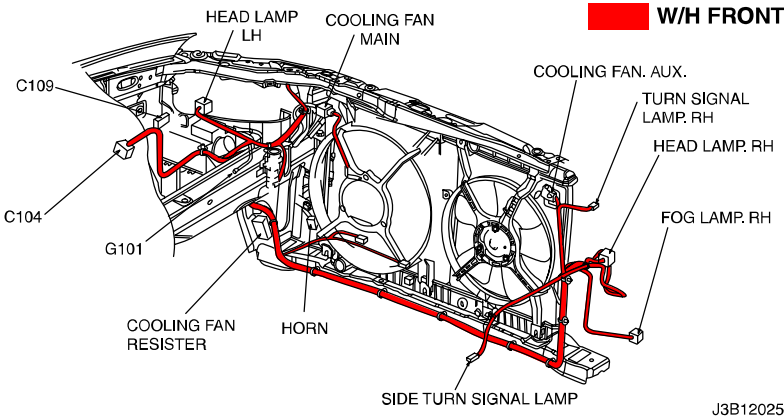

d. SPLICE PACK
S202

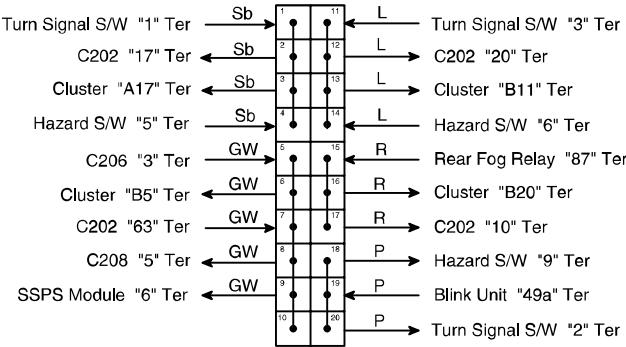

5) CLUSTER, FUEL PUMP & TCM CIRCUIT

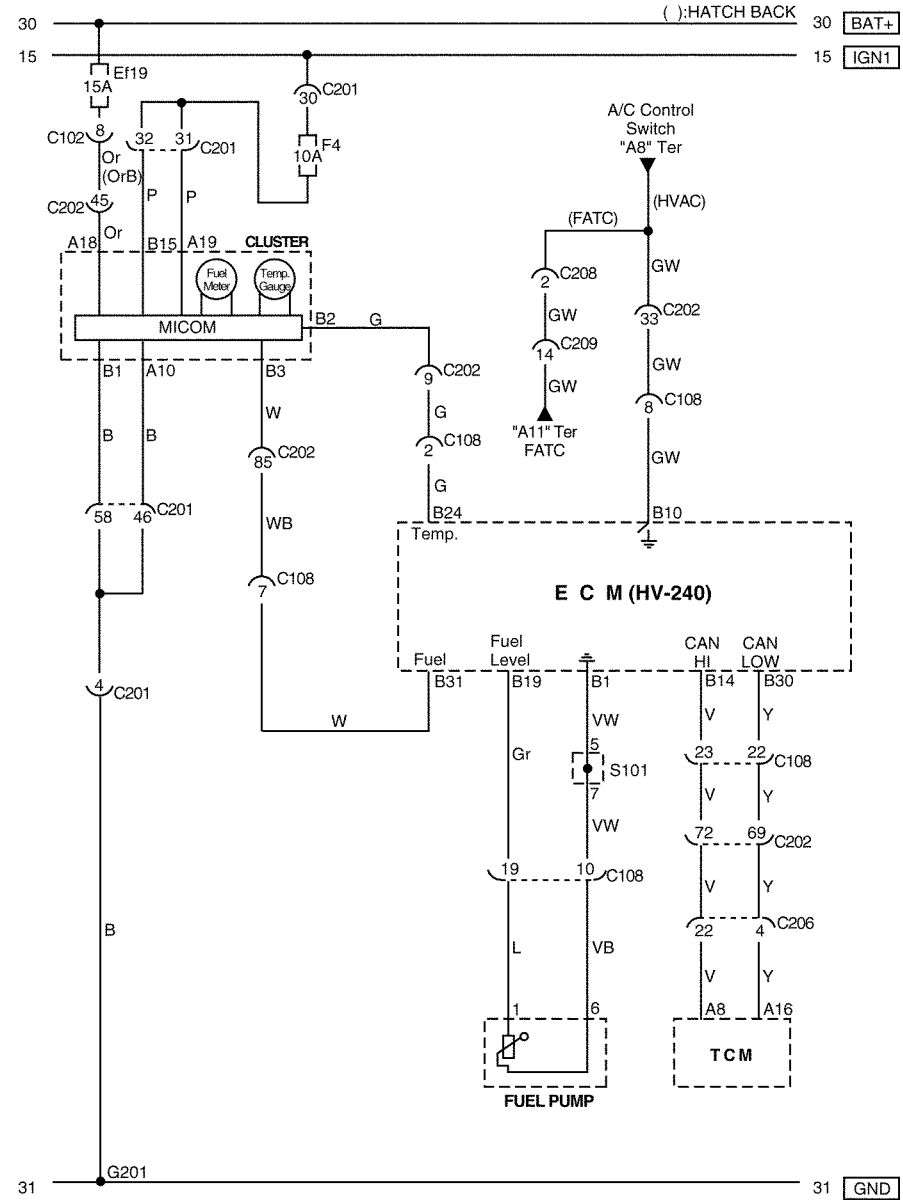


J3D15010

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C208 (15 Pin, White)	I.P – FATC	Behind Glove Box
C209 (20 Pin, Black)	FATC – FATC.Aux	Between Heater Core and Evaporator Core
S101 (Black)	Engine (MR-140/HV-240)	Upper Transmission
G201	I.P	Left I.P Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

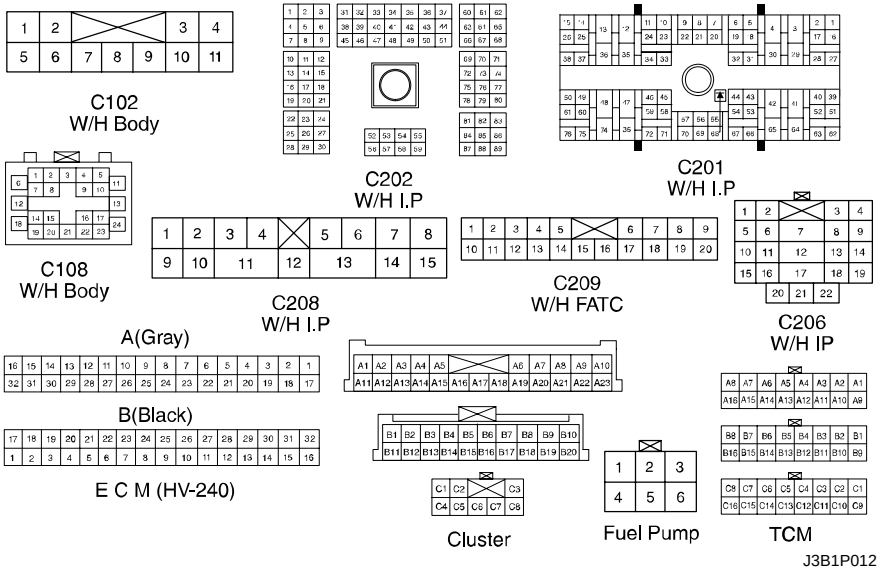


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

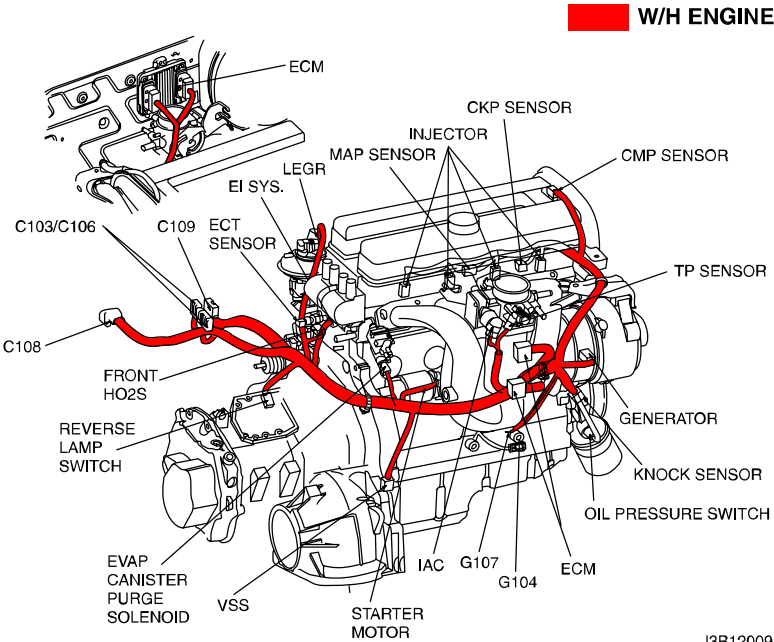


- W/H TCM

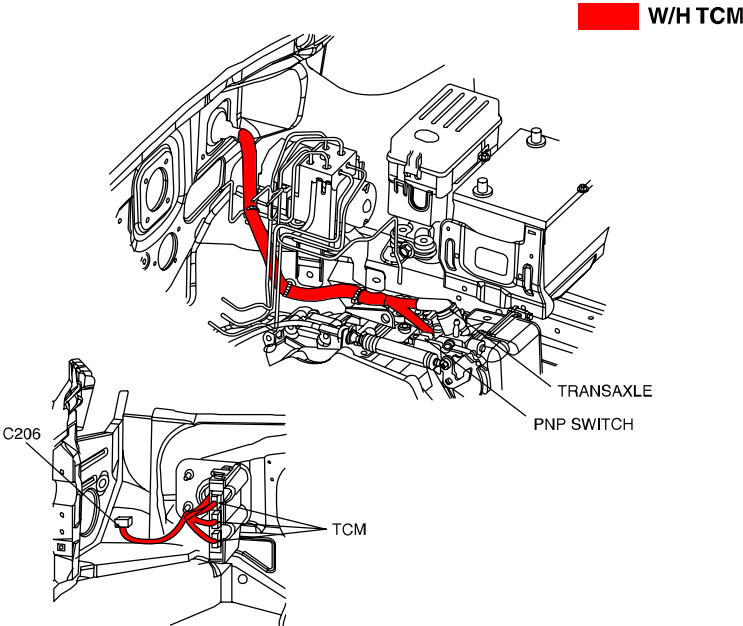

d. SPLICE PACK

S101

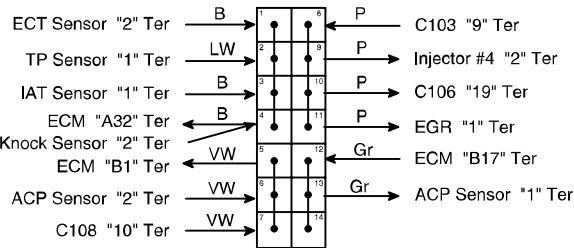

J3D1S001




CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C207 (6 Pin, White)	Air Bag – I.P	Upper Right Driver Leg Room
G104	Engine	Under Start Motor
G201	I.P	Left I.P Fuse Block

[illegible]

J3B1P013


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

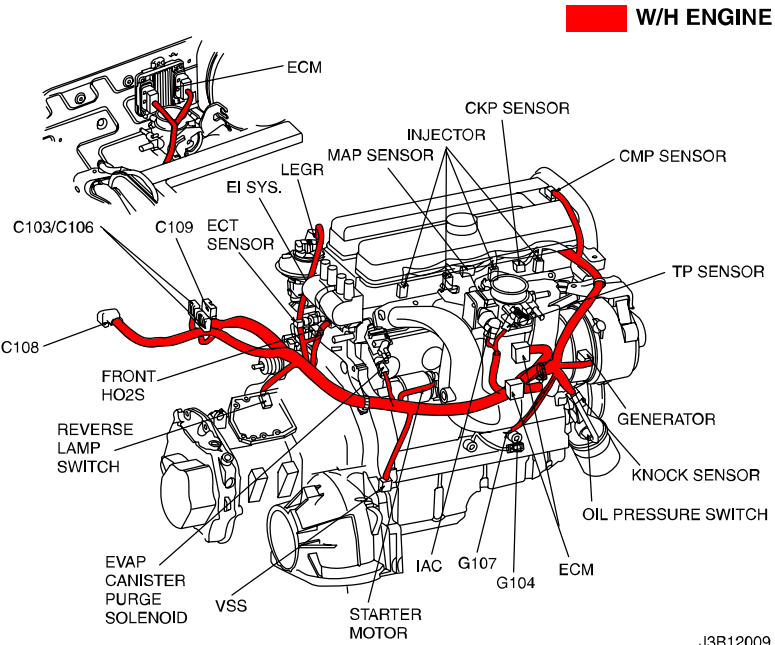

J3B12009


- W/H INSTRUMENT PANEL

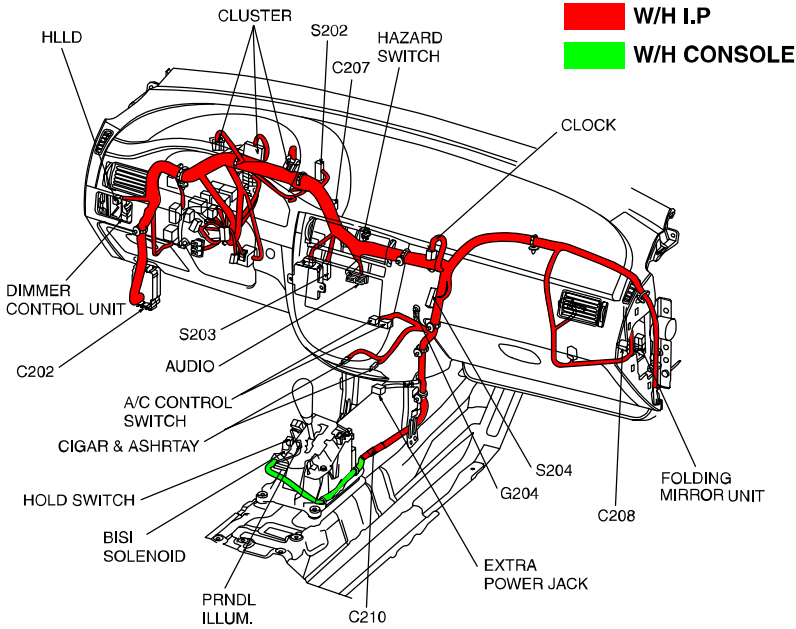

J3B12001

4. ECM (ENGINE CONTROL MODULE) : SIRIUS D4


1) BATTERY POWER SUPPLY, GROUND, EI SYSTEM & CKP SENSOR CIRCUIT

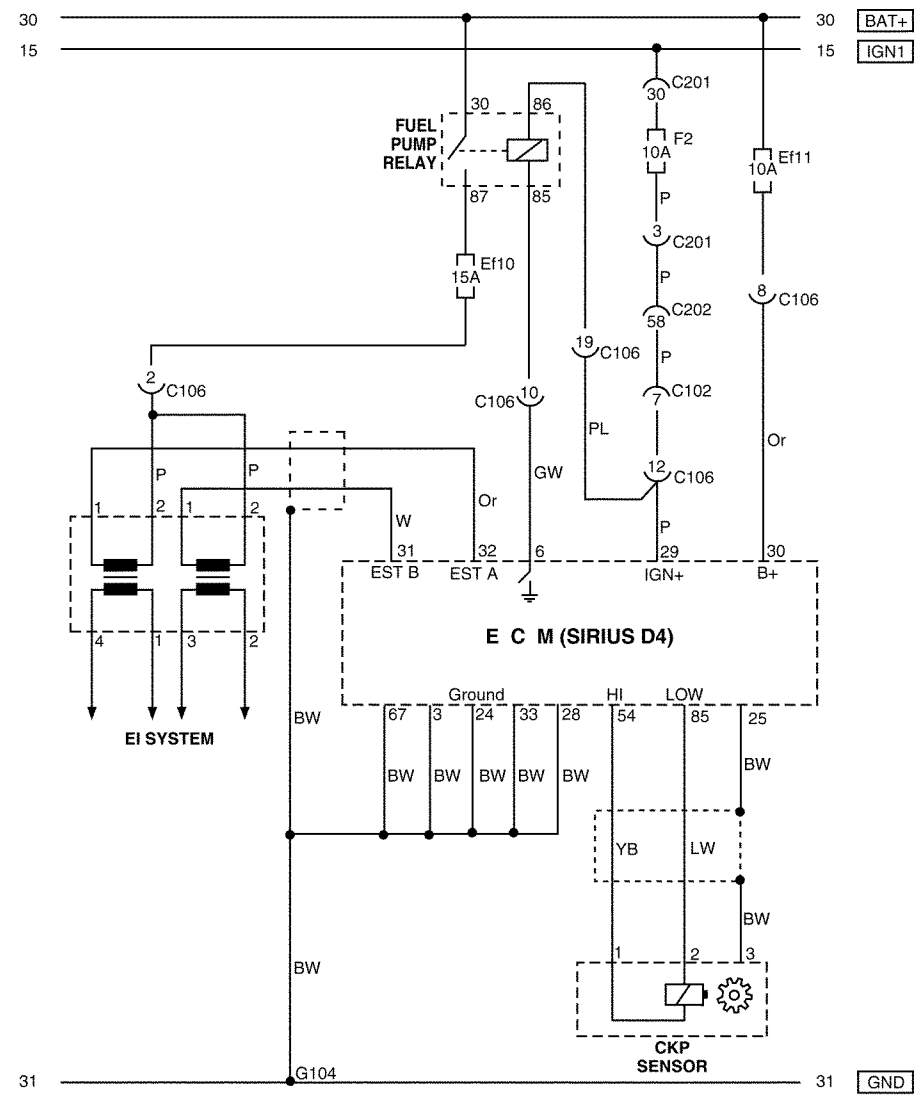

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
G104	Engine	Under Start Motor

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

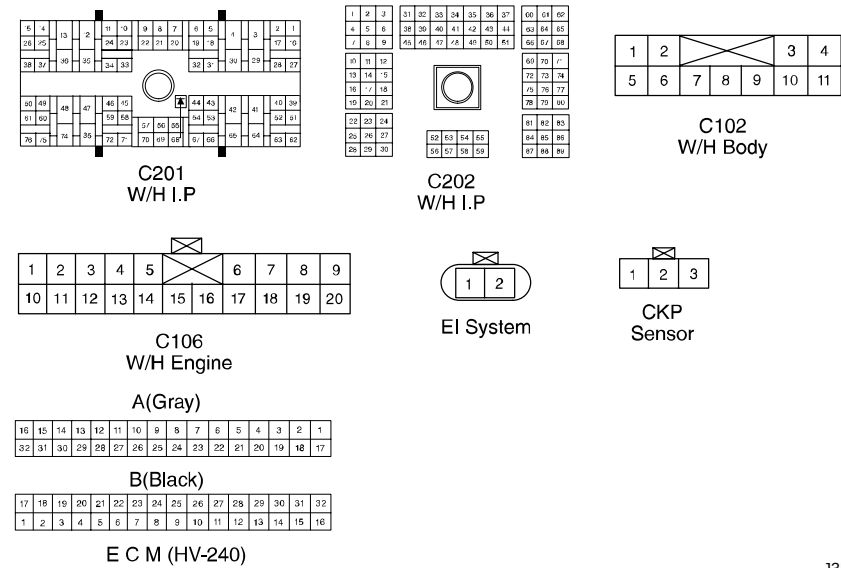


c. POSITION OF CONNECTORS AND GROUNDS


- W/H ENGINE

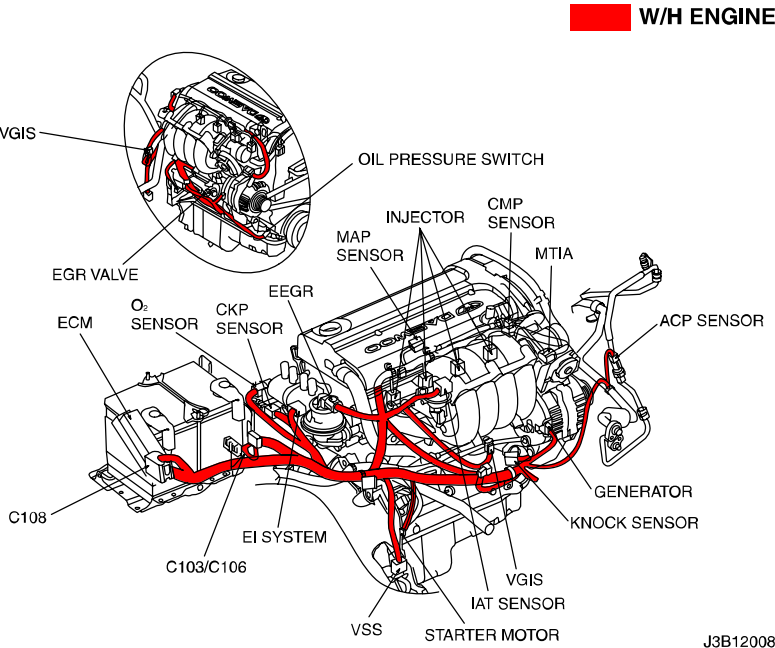

- W/H INSTRUMENT PANEL

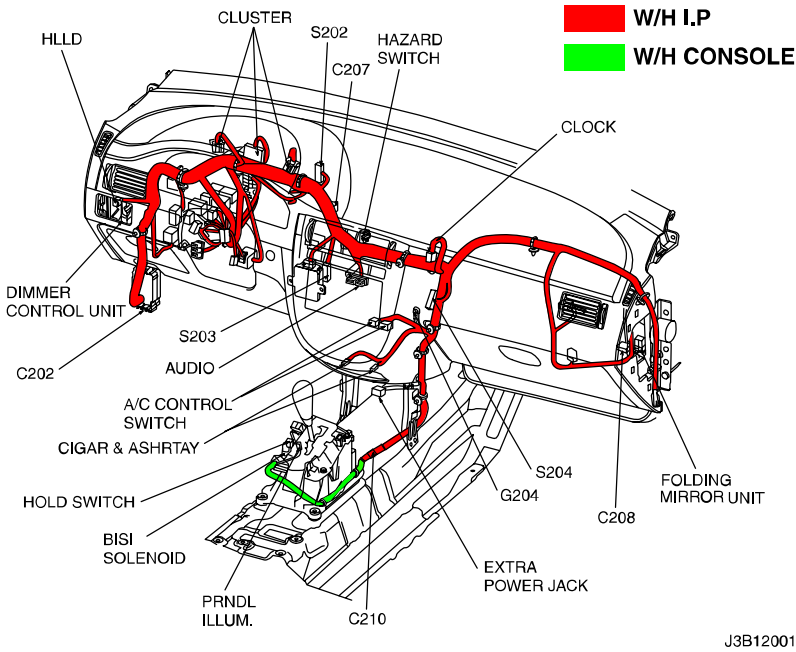

2) FUEL PUMP, INJECTOR, FUEL CONNECTOR & CMP SENSOR CIRCUIT

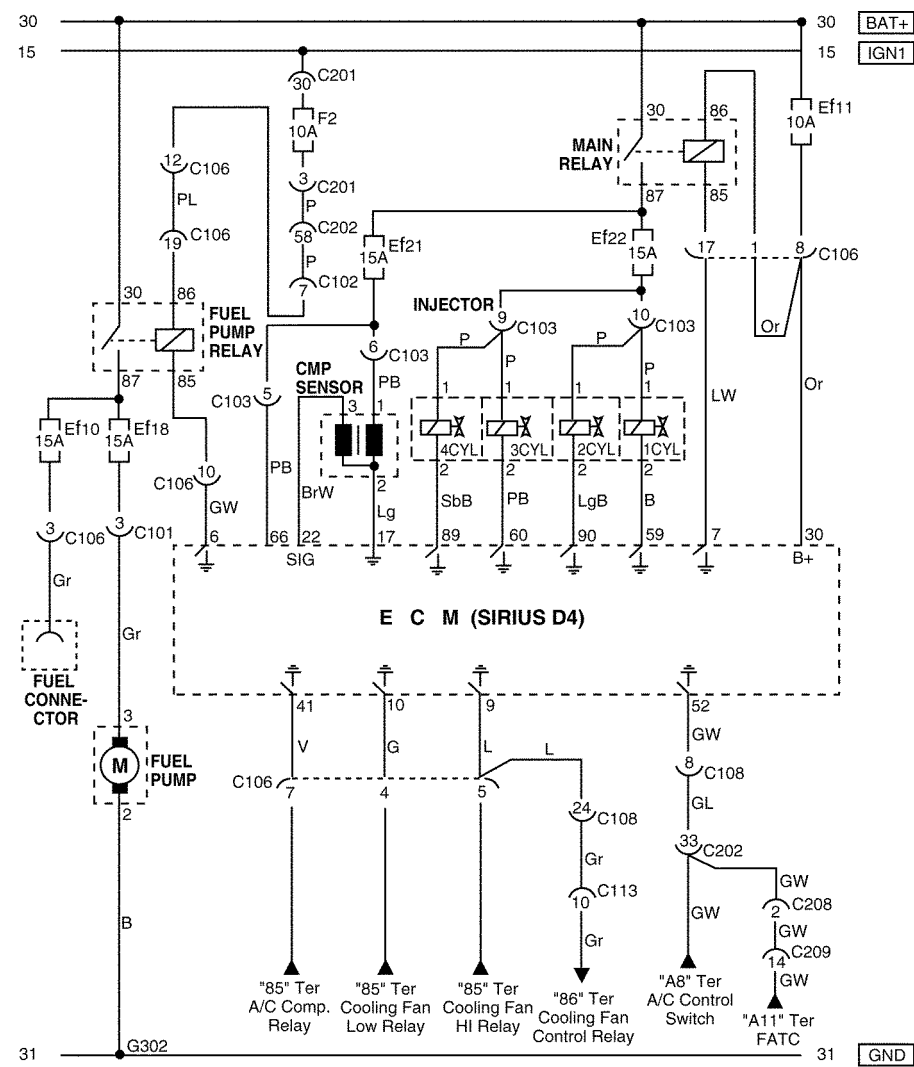


J3D15013

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C208 (15 Pin, White)	I.P – FATC	Behind Glove Box
C209 (20 Pin, Black)	FATC – FATC.Aux	Between Heater Core and Evaporator Core
G302	Body	Below Left C Pillar


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

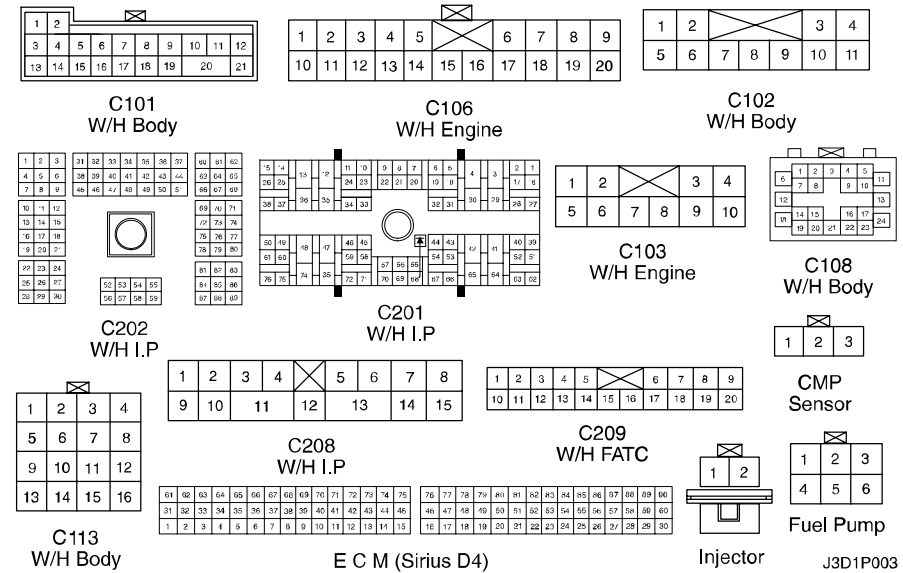


J3D1P003

c. POSITION OF CONNECTORS AND GROUNDS


- W/H ENGINE

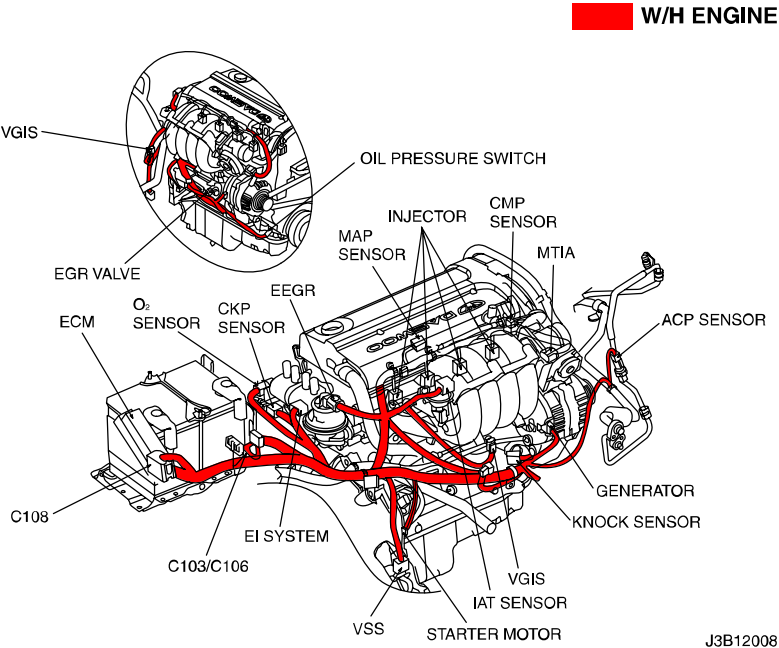

- W/H FRONT

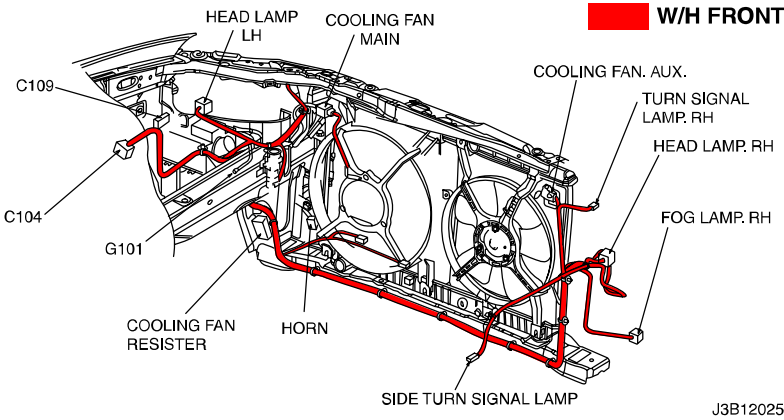


3) MTIA, SENSOR (ECT, KNOCK, IAT, MAP, ACP & HO2S) & POWER STEERING PRESSURE SWITCH CIRCUIT : EOB

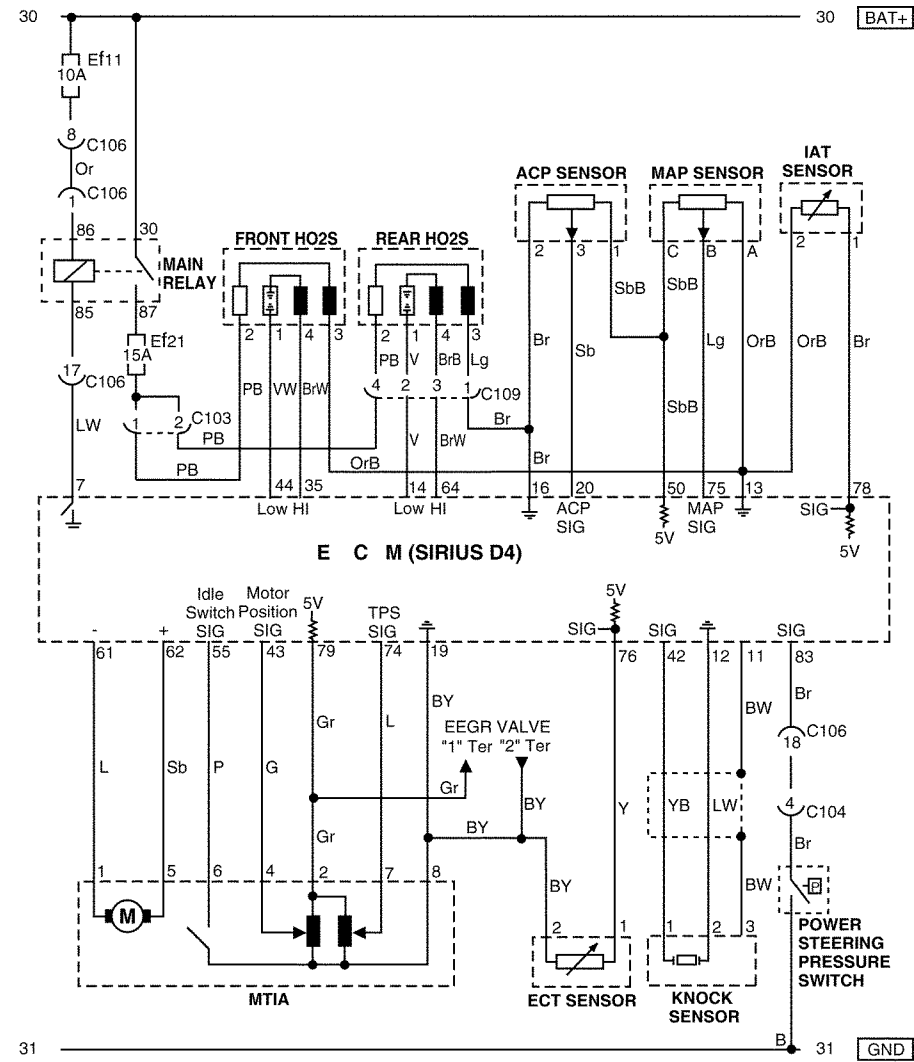

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C109 (4 Pin, White)	Engine – Front	Under Engine Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

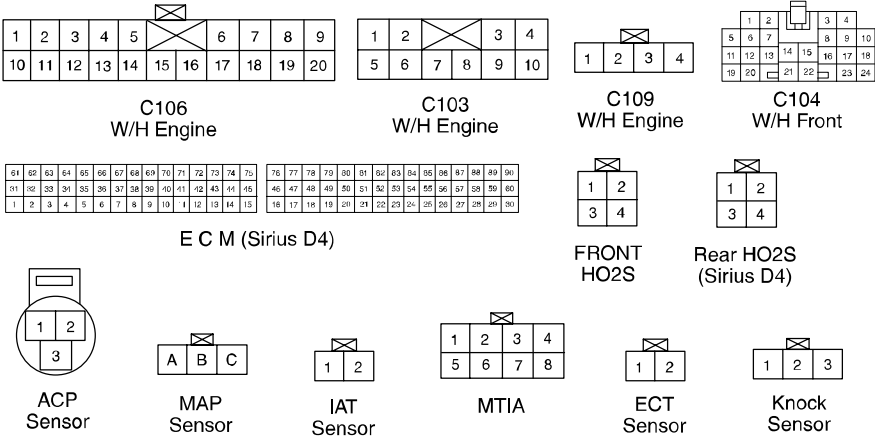


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

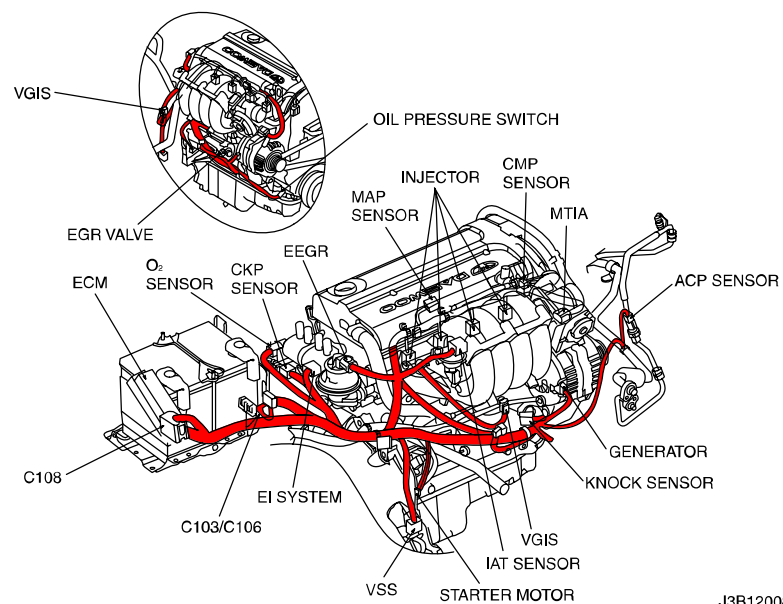 W/H ENGINE

J3B12008


4) MTIA, SENSOR (ECT, KNOCK, IAT, MAP, ACP & O2) & POWER STEERING PRESSURE SWITCH CIRCUIT : NON EOBD

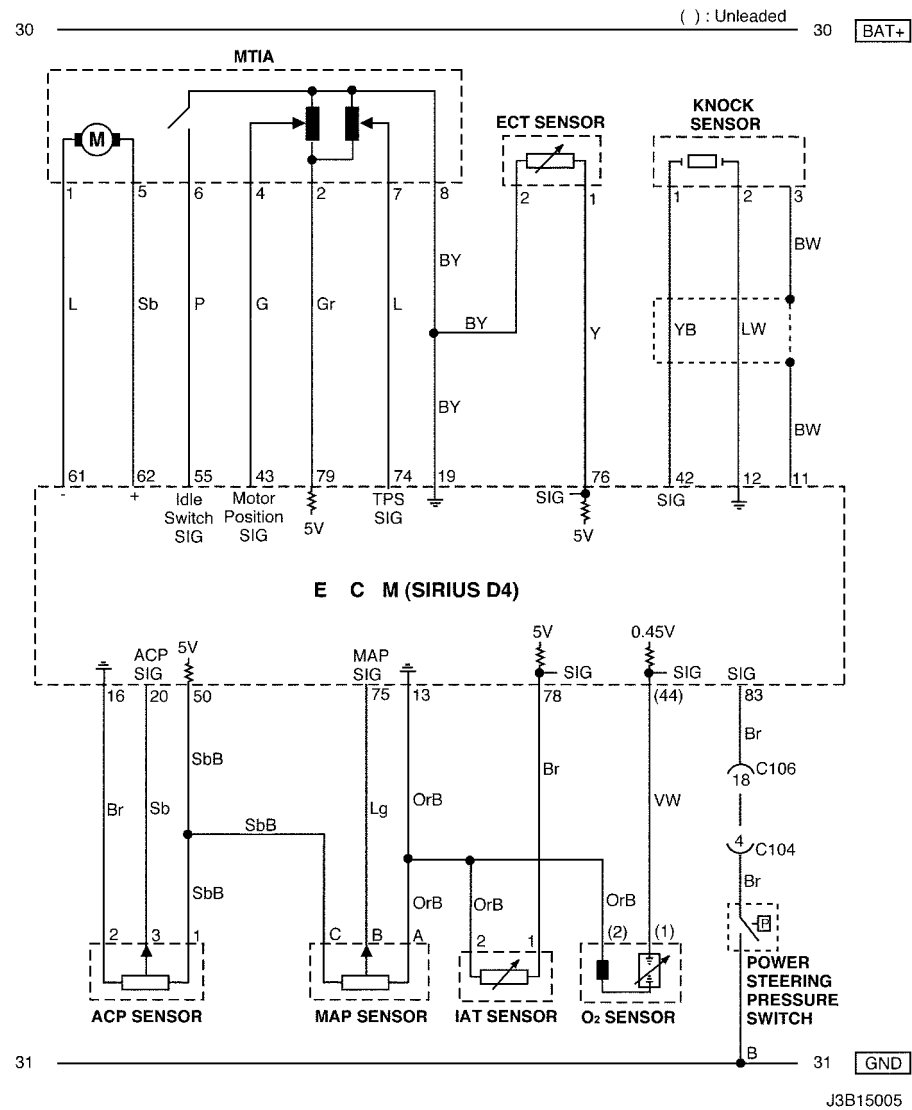

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

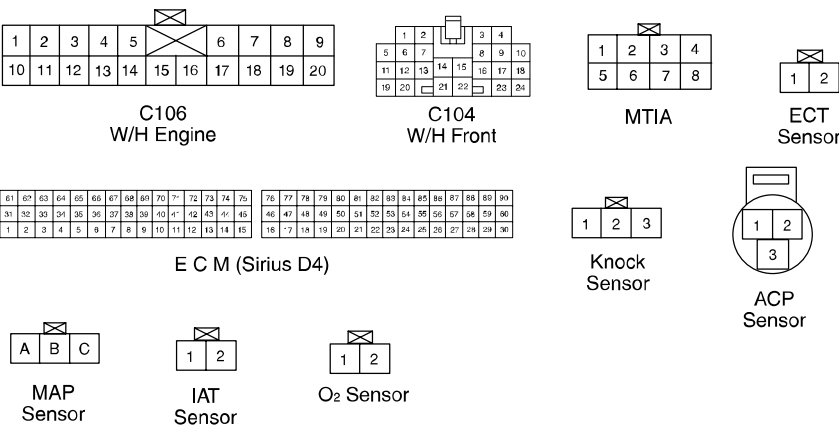

J3B1P017


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

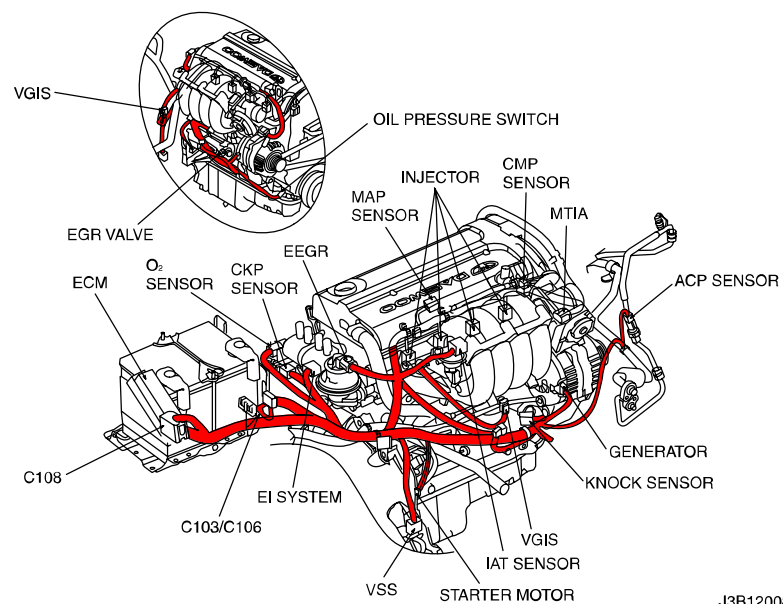 W/H ENGINE

J3B12008


5) EEGR VALVE, VR SENSOR, CLUSTER & FUEL PUMP CIRCUIT : EOBD

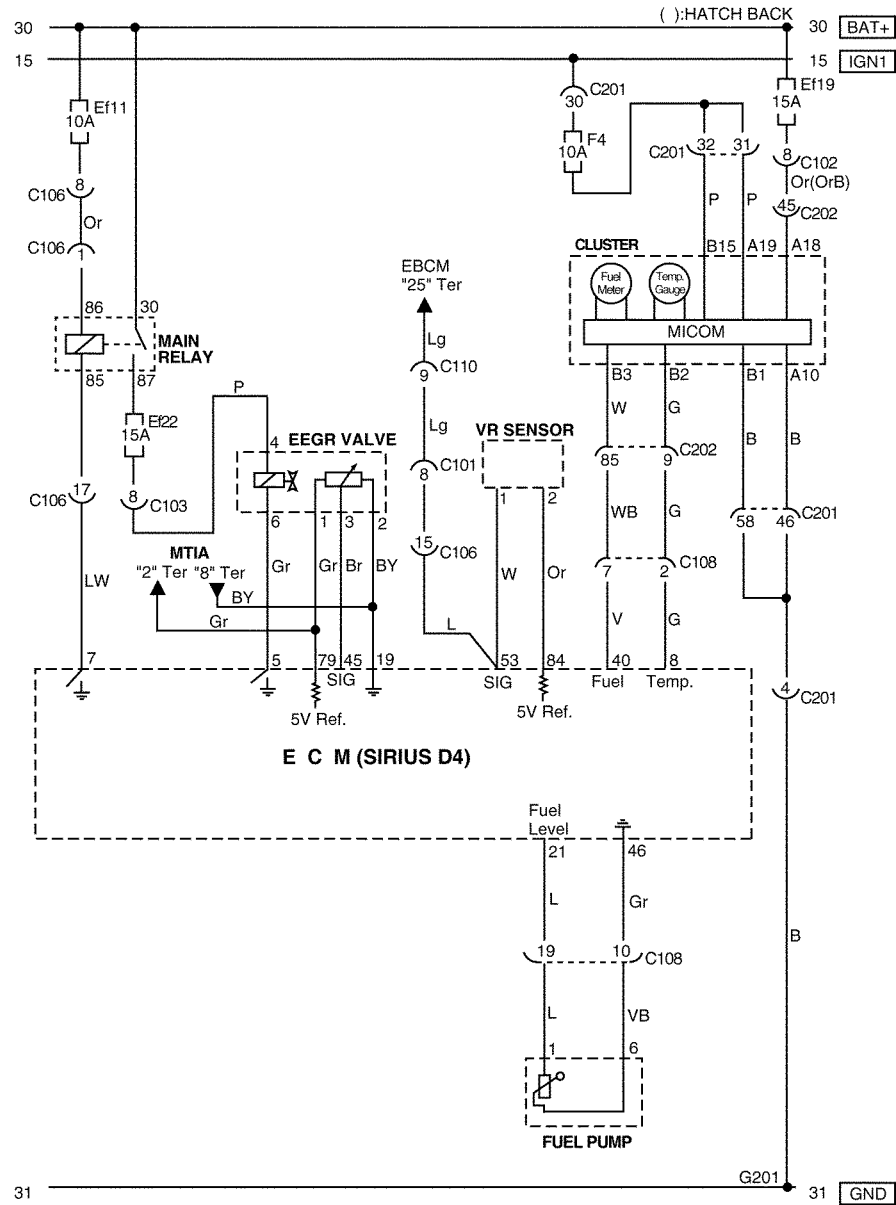

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
G201	I.P	Left I.P Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

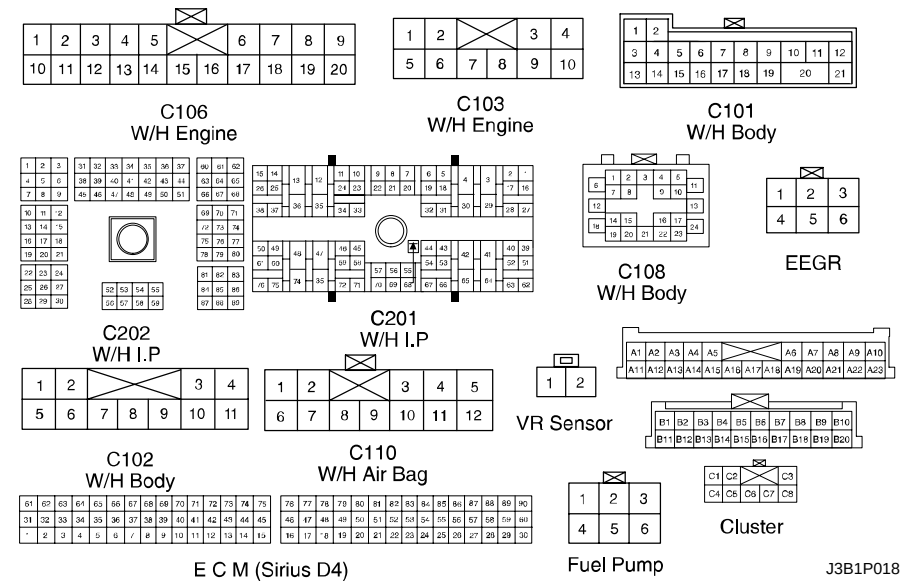


c. POSITION OF CONNECTORS AND GROUNDS


- W/H ENGINE

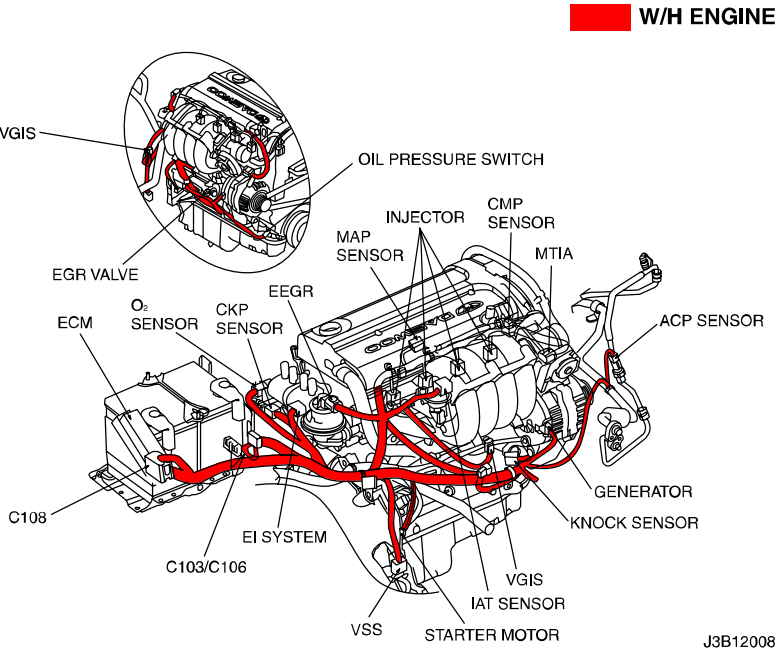

- W/H INSTRUMENT PANEL

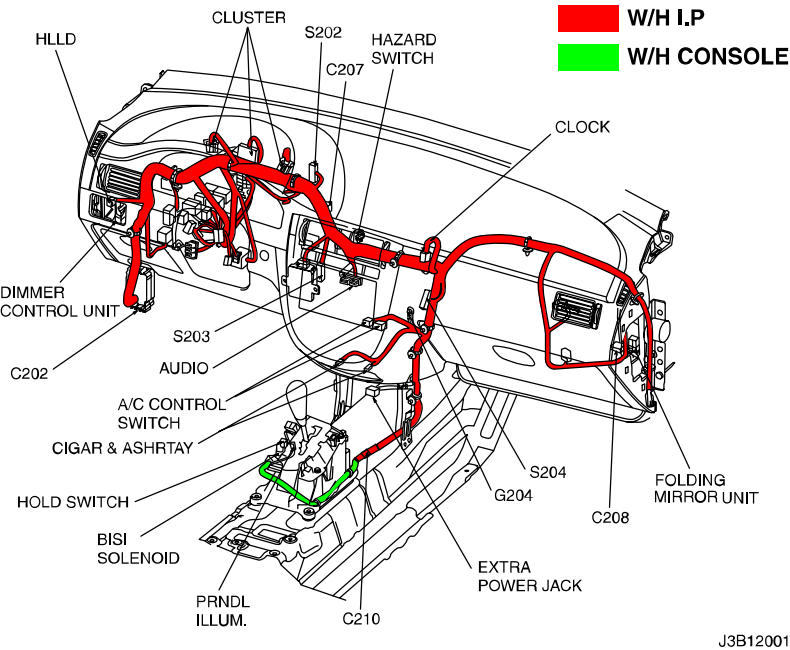


6) EGR VALVE, CLUSTER & FUEL PUMP CIRCUIT : NON EOBD

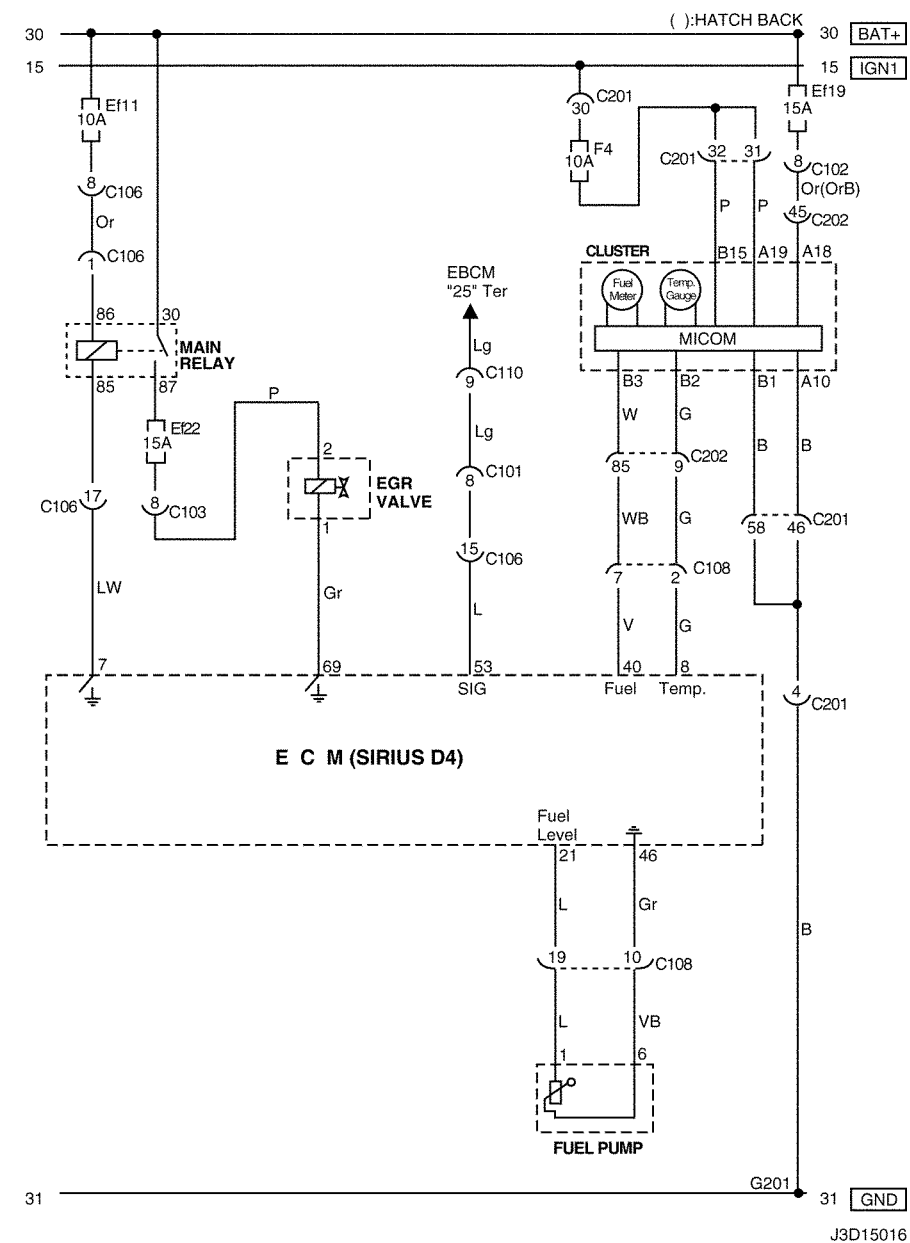

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
G201	I.P	Left I.P Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

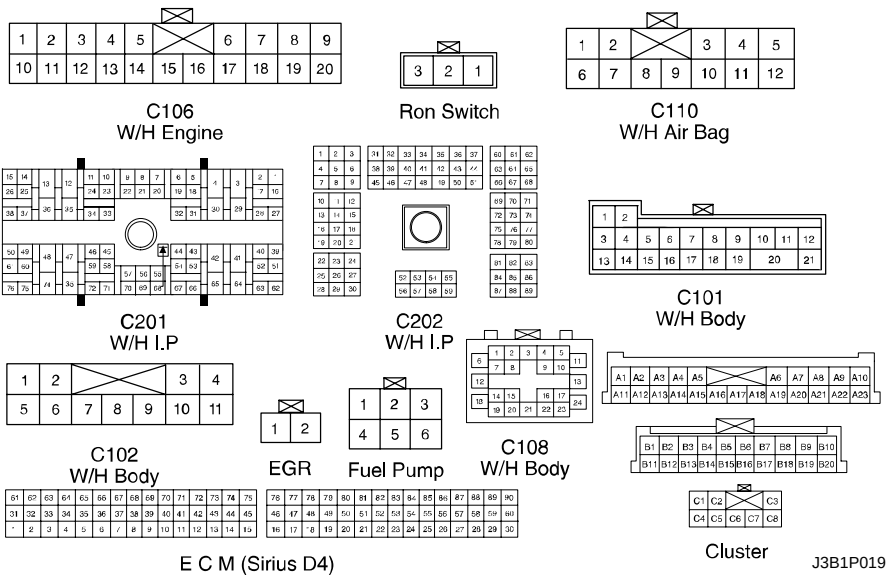


c. POSITION OF CONNECTORS AND GROUNDS


- W/H ENGINE

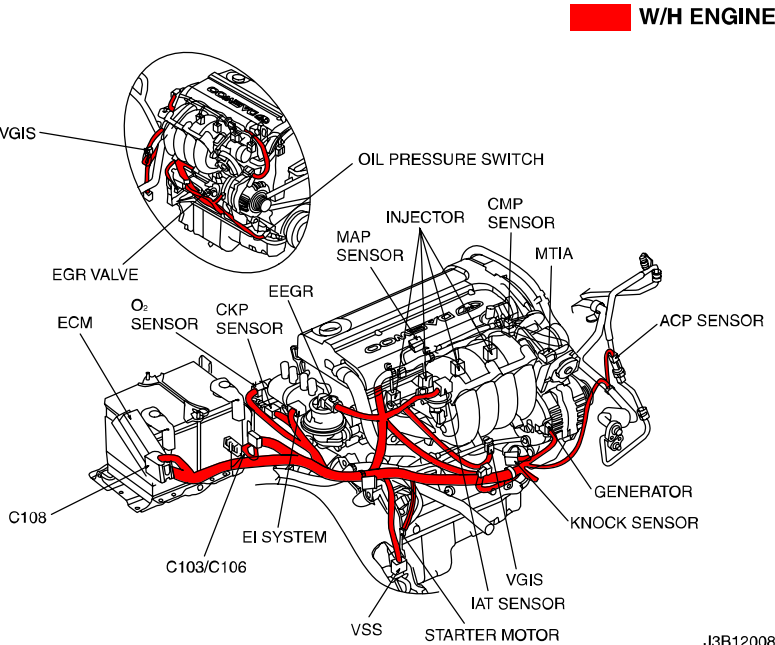

- W/H INSTRUMENT PANEL

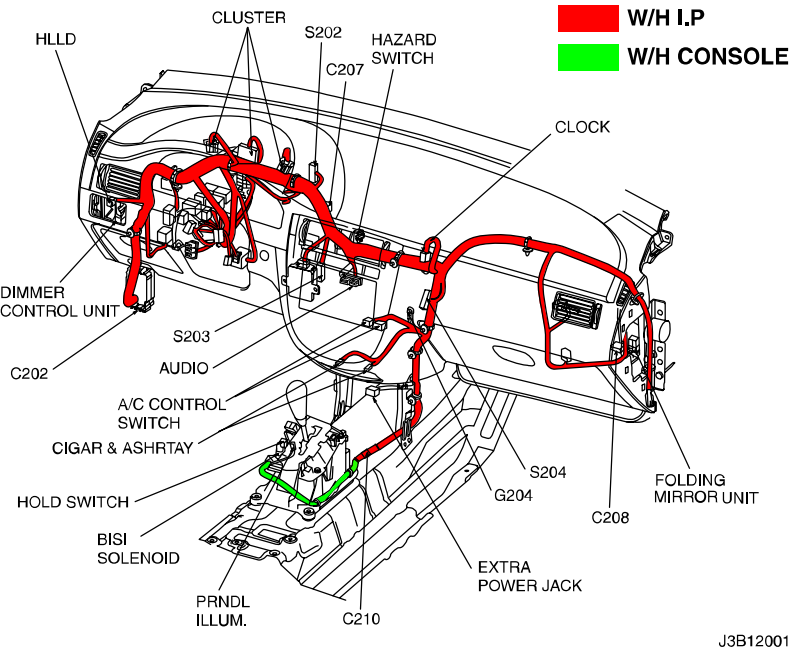


7) EVAP CANISTER PURGE SOLENOID, VGIS, CLUSTER, VSS, TCM & RON SWITCH CIRCUIT

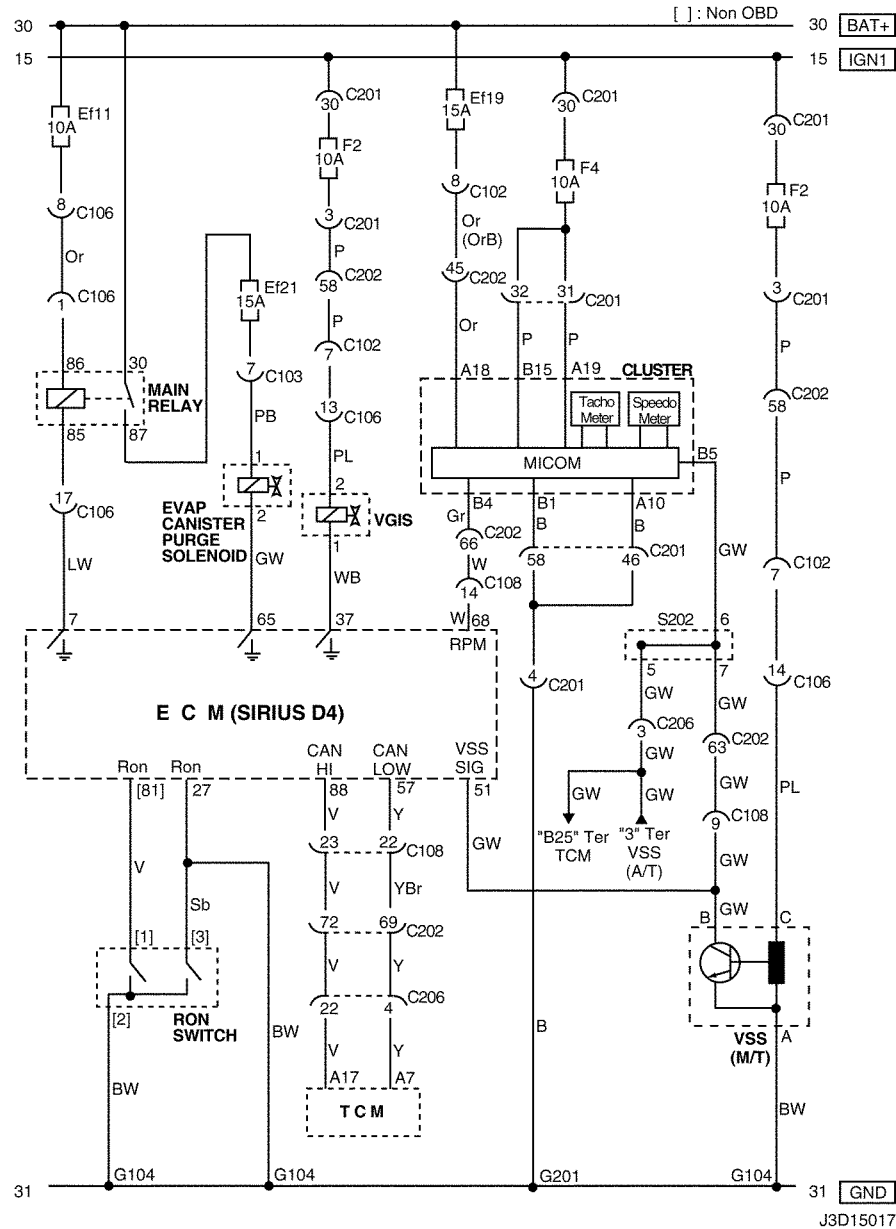

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
S202 (Black)	I.P	Behind Cluster
G104	Engine	Under Start Motor
G201	I.P	Left I.P Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

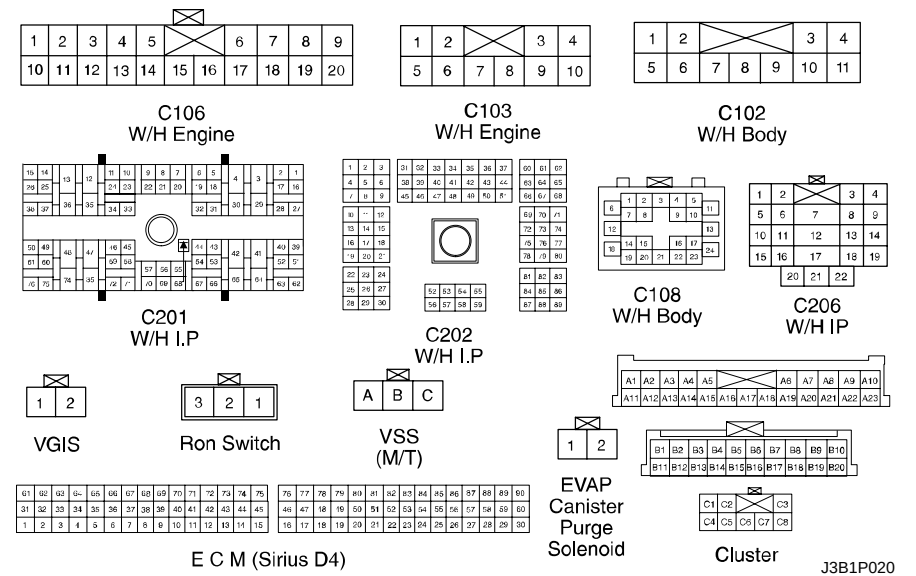


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

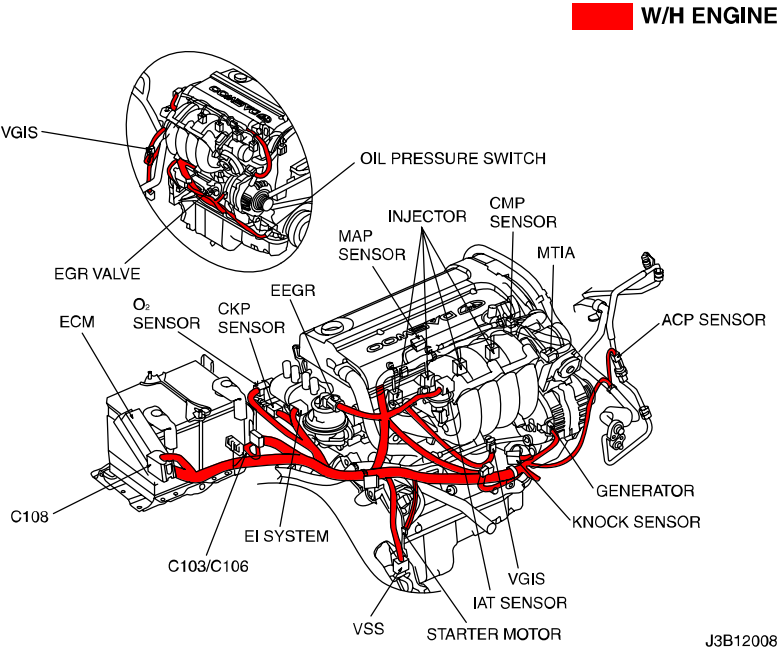


d. SPLICE PACK

S202

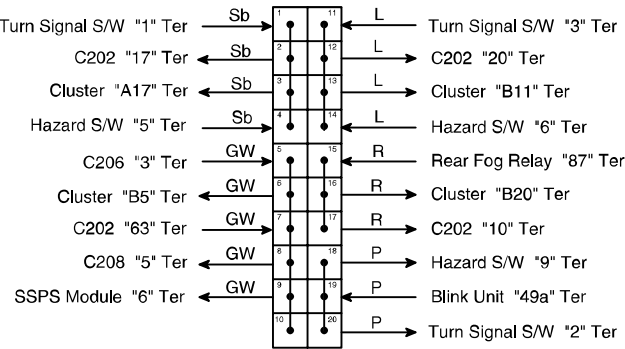

J3D1S003


8) DLC, MIL LAMP & IMMOBILIZER CONTROL CIRCUIT

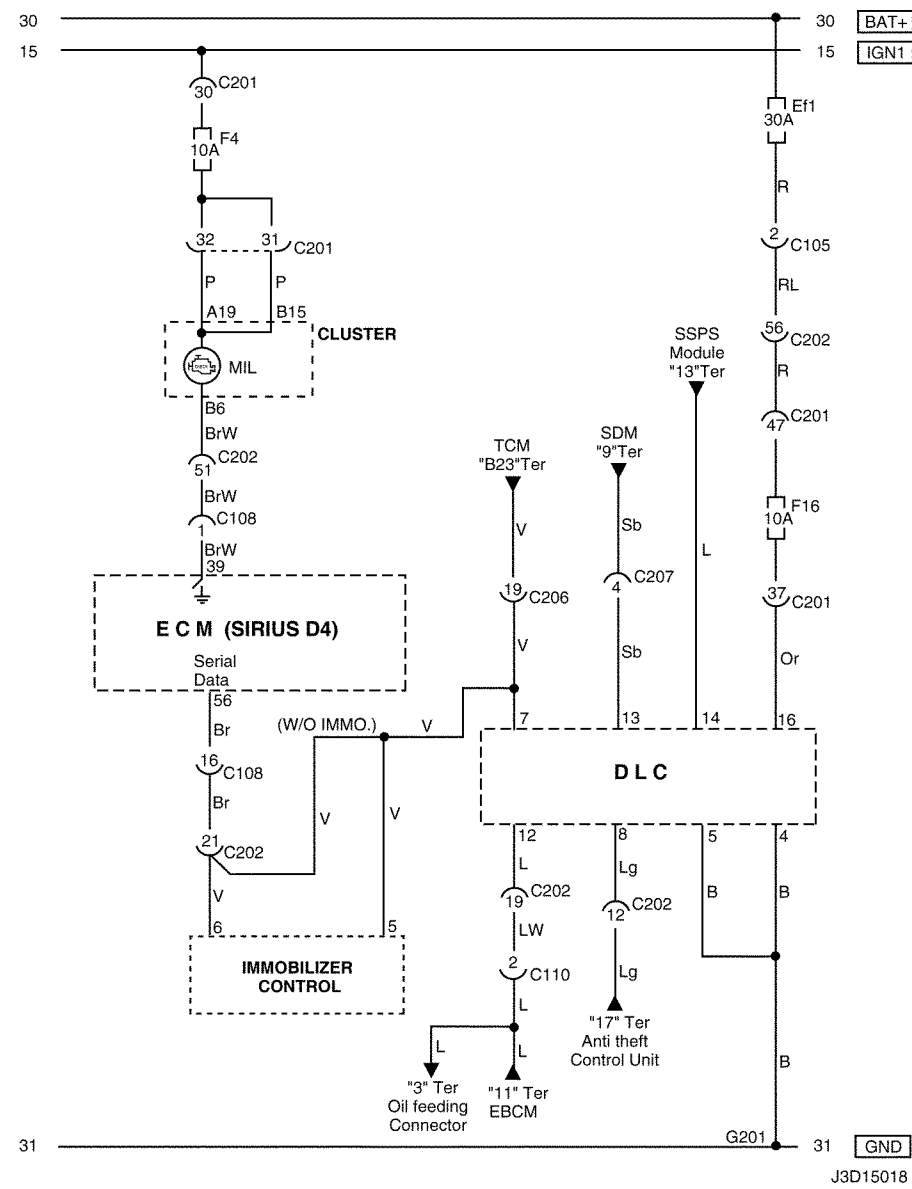

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C207 (6 Pin, White)	Air Bag – I.P	Upper Right Driver Leg Room
G201	I.P	Left I.P Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

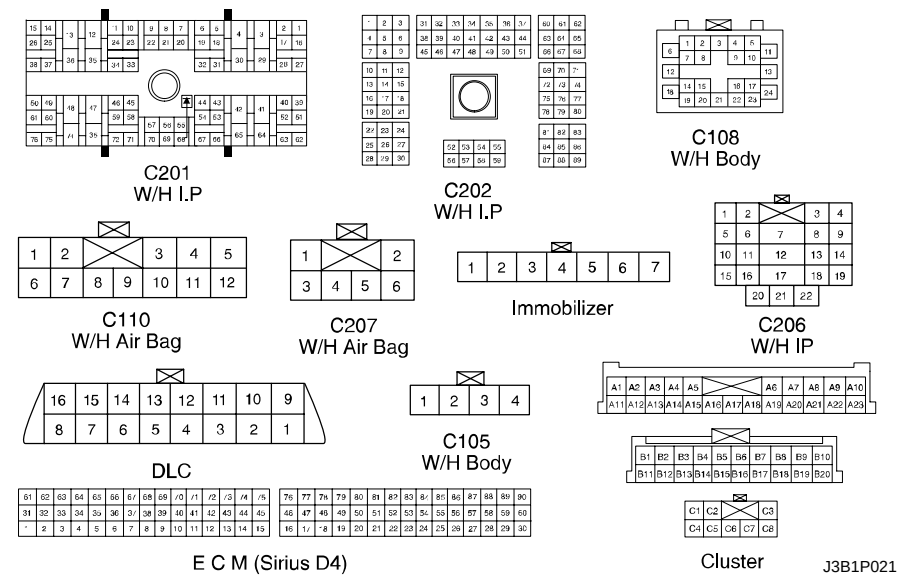


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

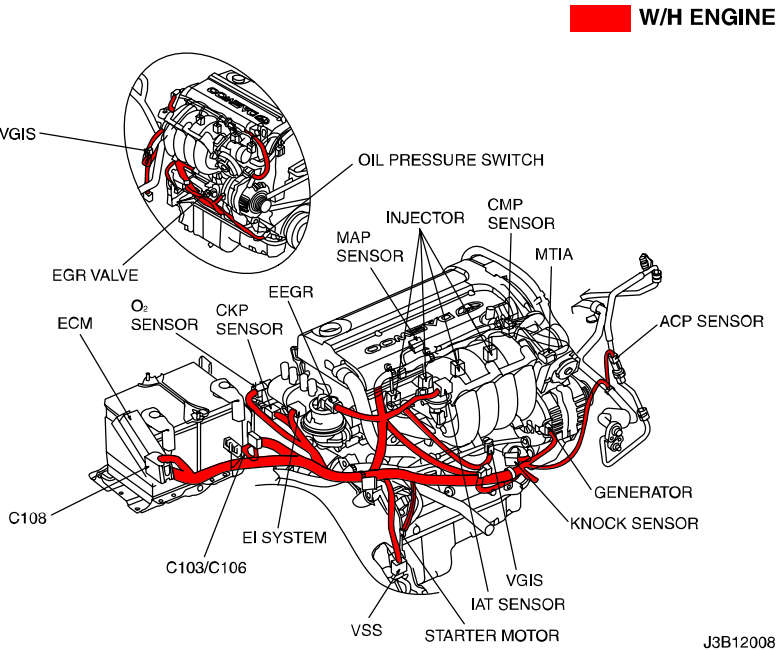


- W/H INSTRUMENT PANEL

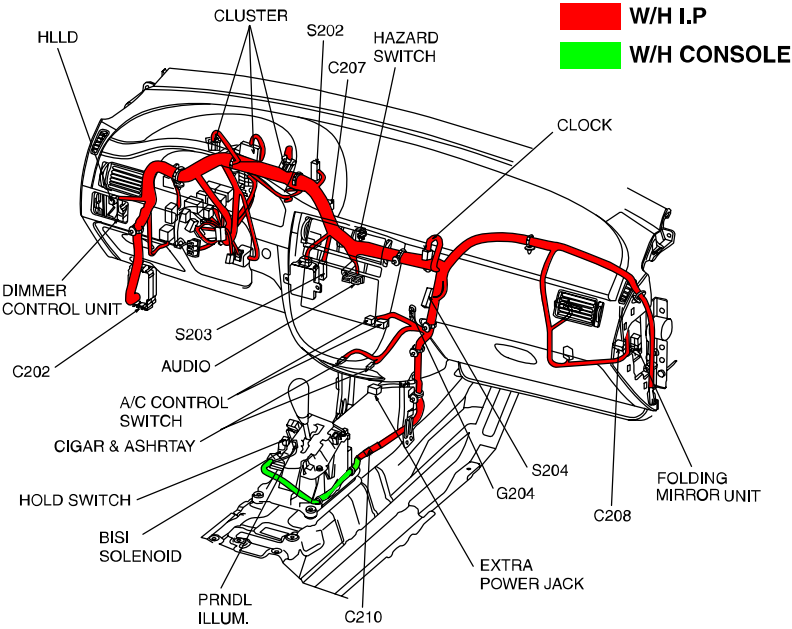

5. TCM (TRANSMISSION CONTROL MODULE) : MR-140/HV-240


1) POWER SUPPLY, GROUND, PNP SWITCH, BRAKE SWITCH & SOLENOID VALVE CIRCUIT

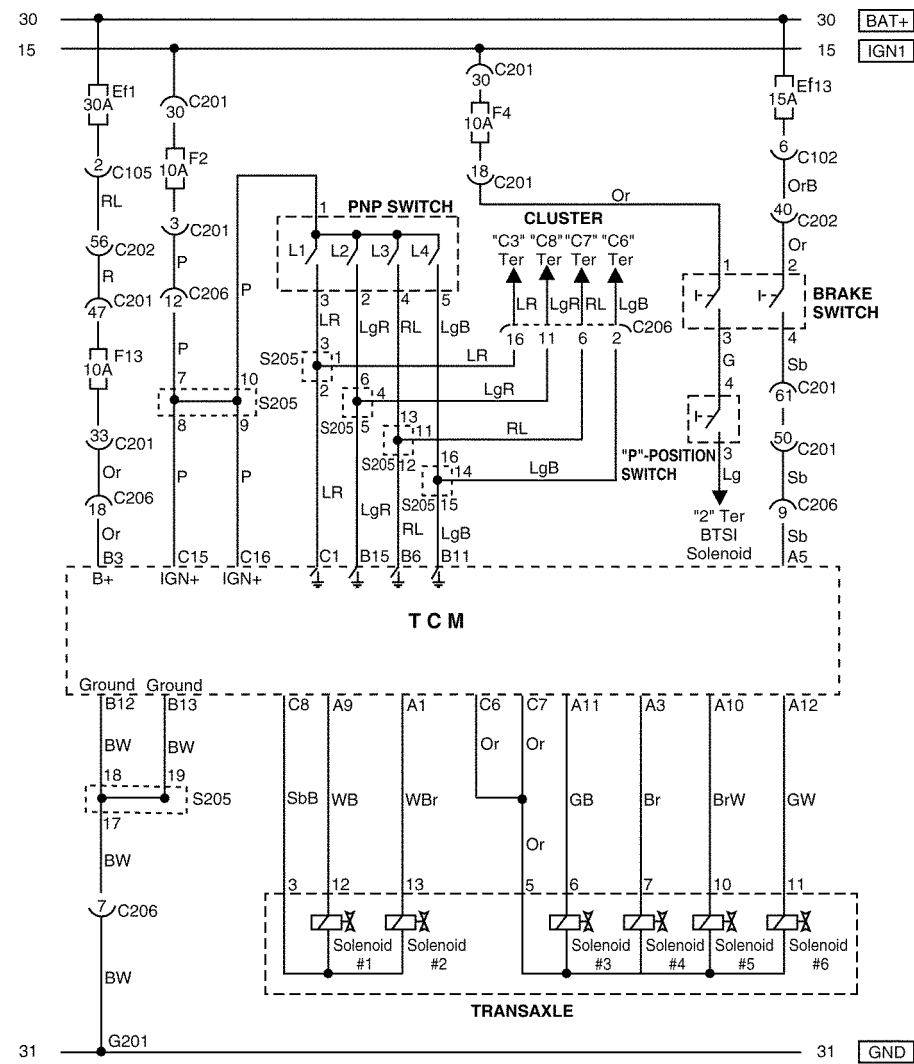

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
S205 (Orange)	TCM	Upper Driver Leg Room
G201	I.P	Left I.P Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

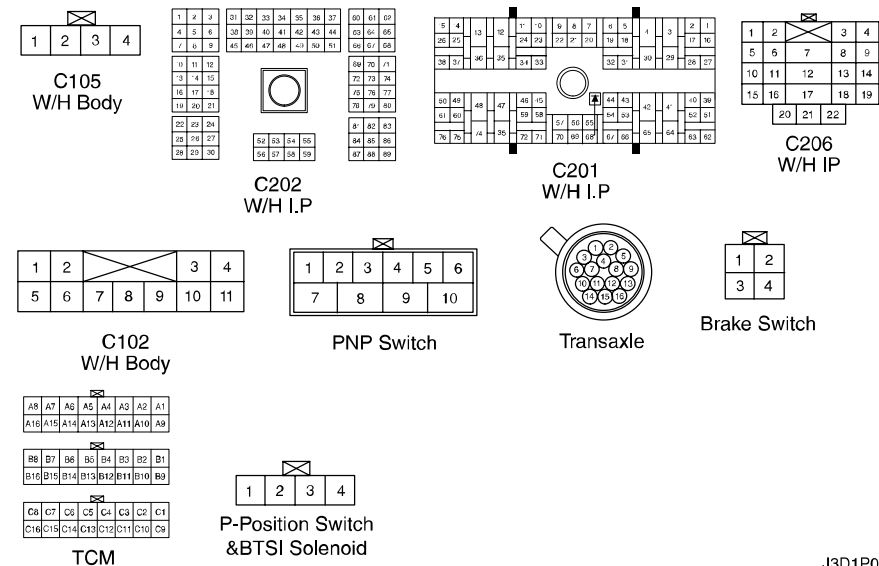


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TCM

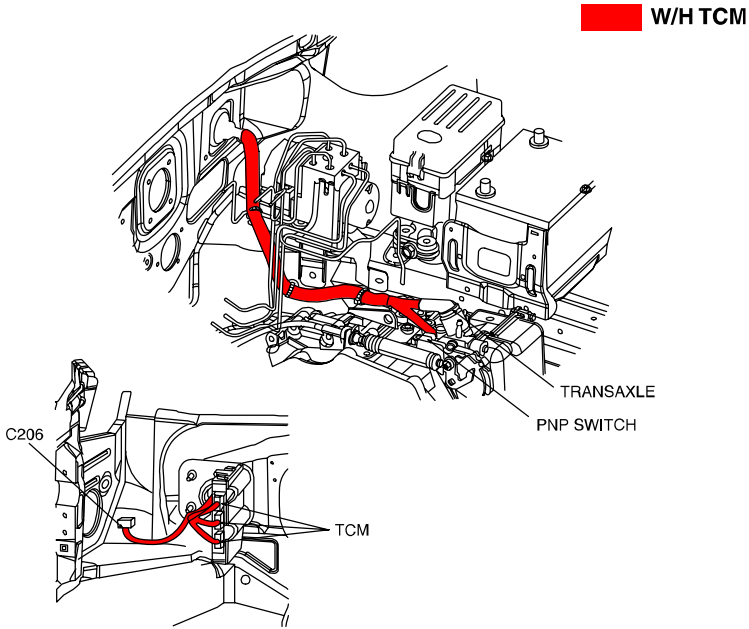


J3B12019

- W/H INSTRUMENT PANEL

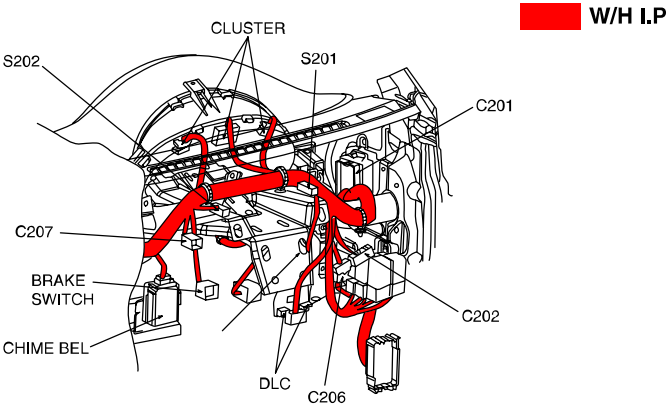

J3B12002

d. SPLICE PACK
S205

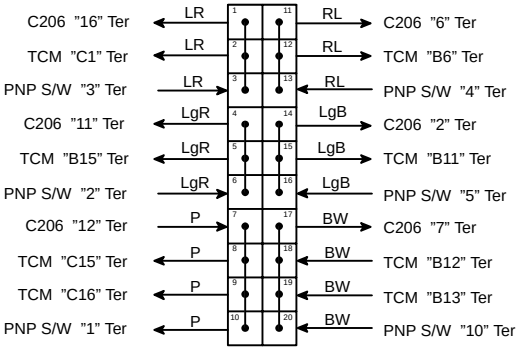

J3B1S007



CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C210 (6 Pin, White)	I.P – Console	Below Console Box
S202 (Black)	I.P	Behind Cluster
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket

C102 W/H Body

1	2	3	4
5	6	7	8
9	10	11	12

C206 W/H IP

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24

C108 W/H Body

A8	A7	A6	A5	A4	A3	A2	A1
A16	A15	A14	A13	A12	A11	A10	A9

C201 W/H I.P

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24

Hold Mode Switch

1	2	3	4
---	---	---	---

Transaxle

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64

K

64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92
93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121
122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150

M

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---

B(Black)

17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16

E C M (HV-240)

TCM


C8	C7	C6	C5	C4	C3	C2	C1
C16	C15	C14	C13	C12	C11	C10	C9

ECM (MR-140)

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---

c. POSITION OF CONNECTORS AND GROUNDS


- W/H TCM

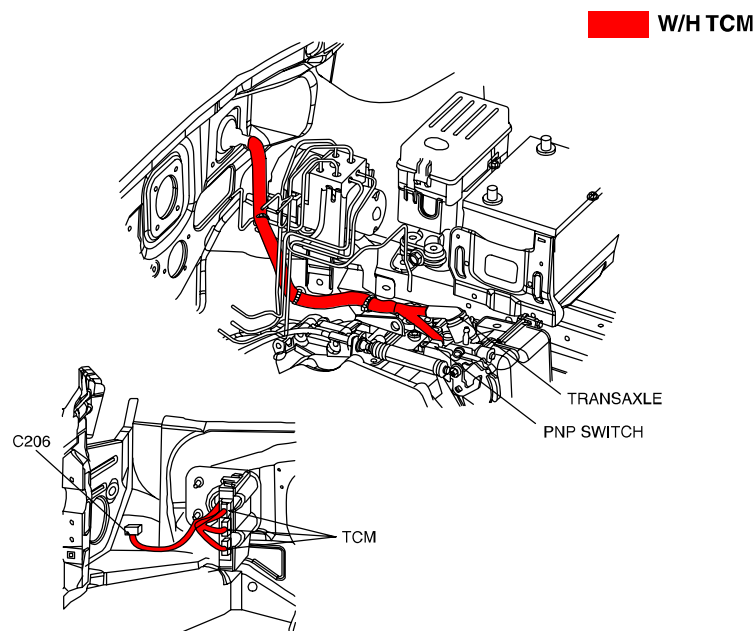

J3B12019


d. SPLICE PACK

S202

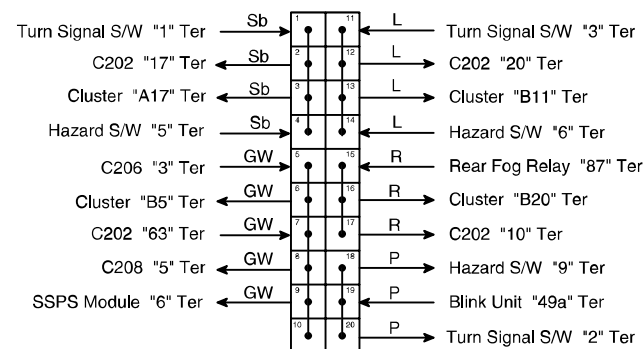


J3D1S003

S203

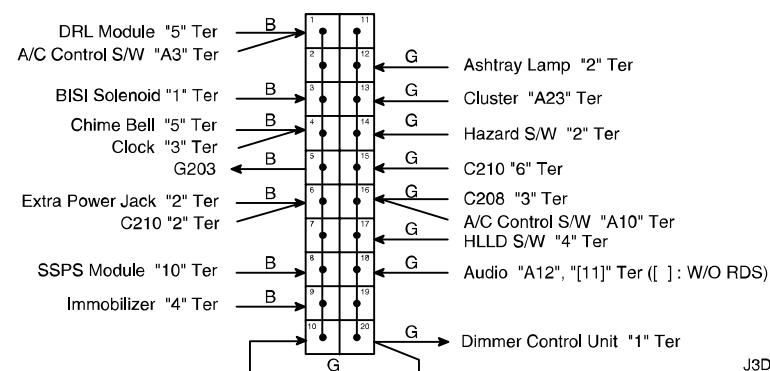


J3D1S004

S204

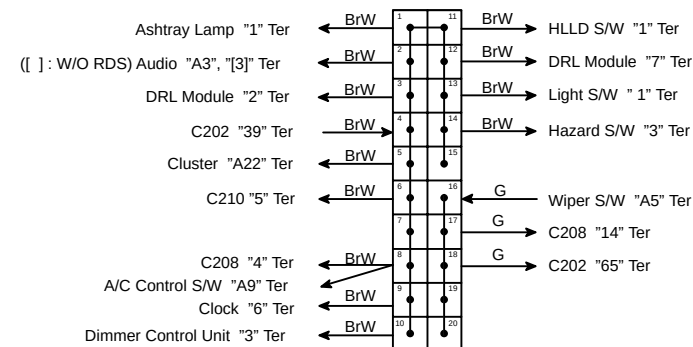

J3B1S006






3) PNP SWITCH & CLUSTER CIRCUIT

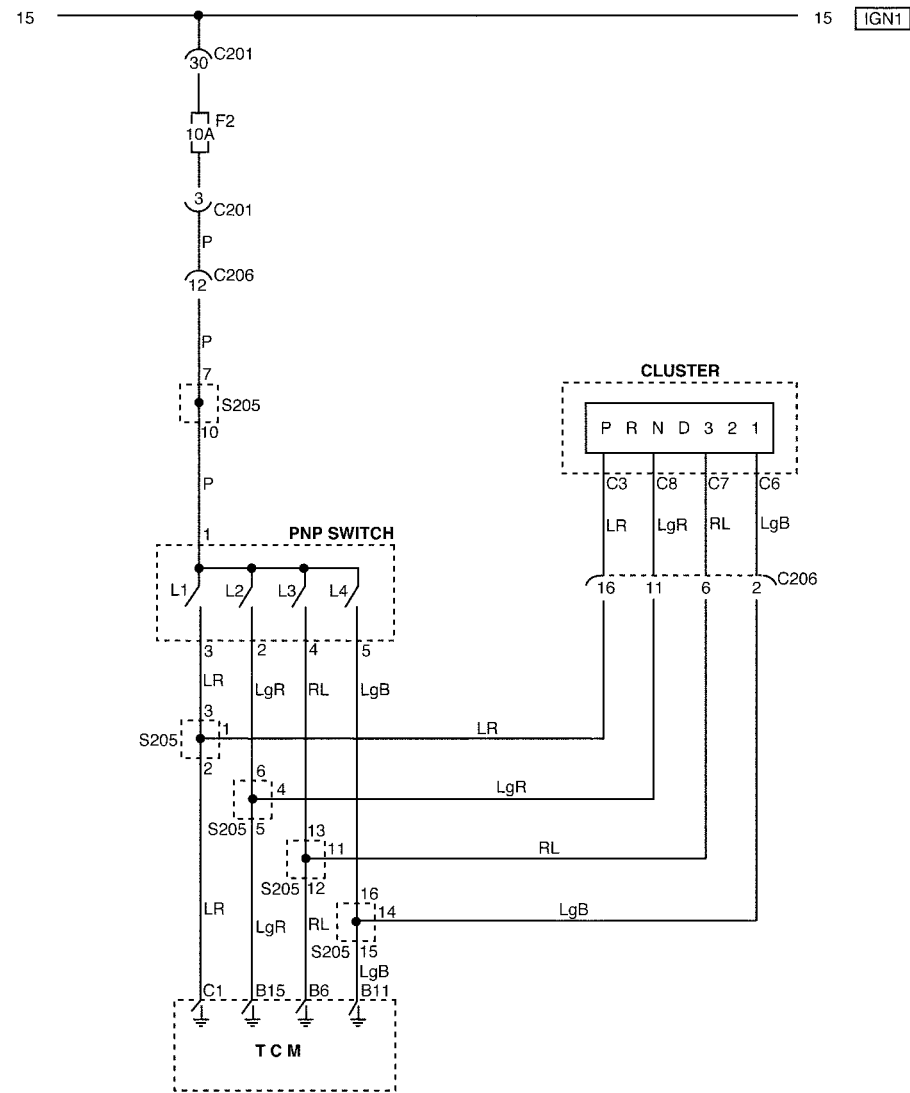

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
S205 (Orange)	TCM	Upper Driver Leg Room


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

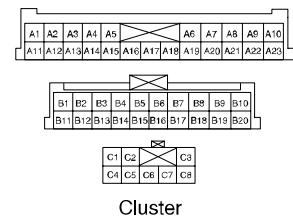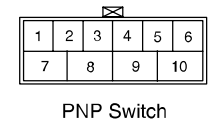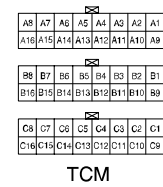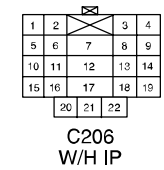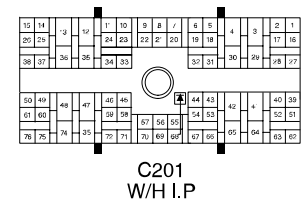

J3B1P024


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TCM

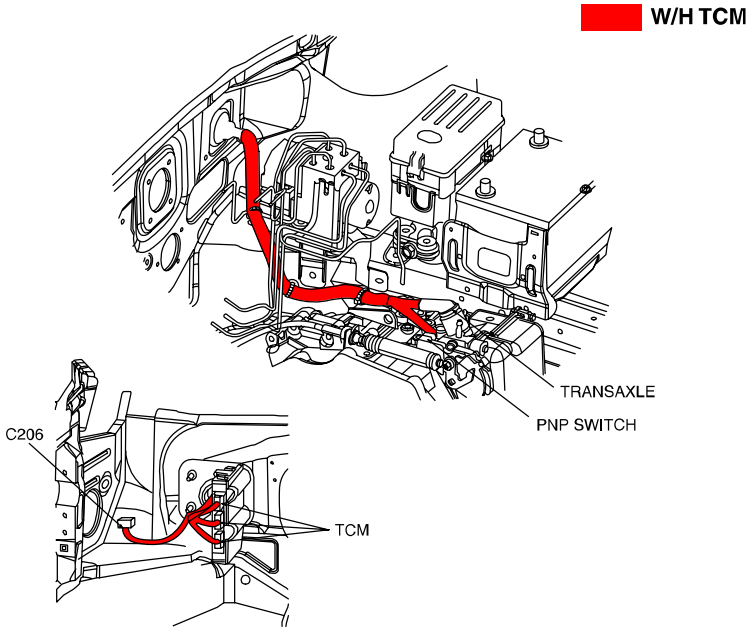


J3B12019

- W/H INSTRUMENT PANEL

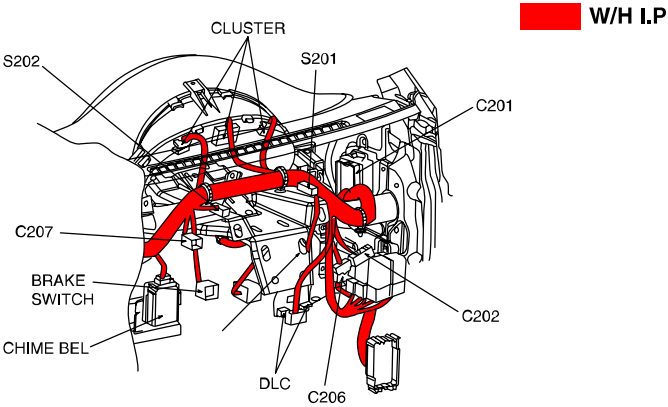


J3B12002

d. SPLICE PACK
S205

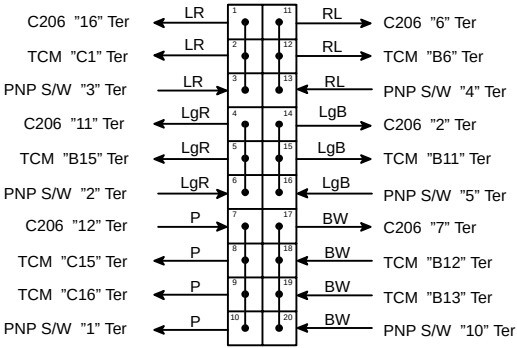

J3B1S007

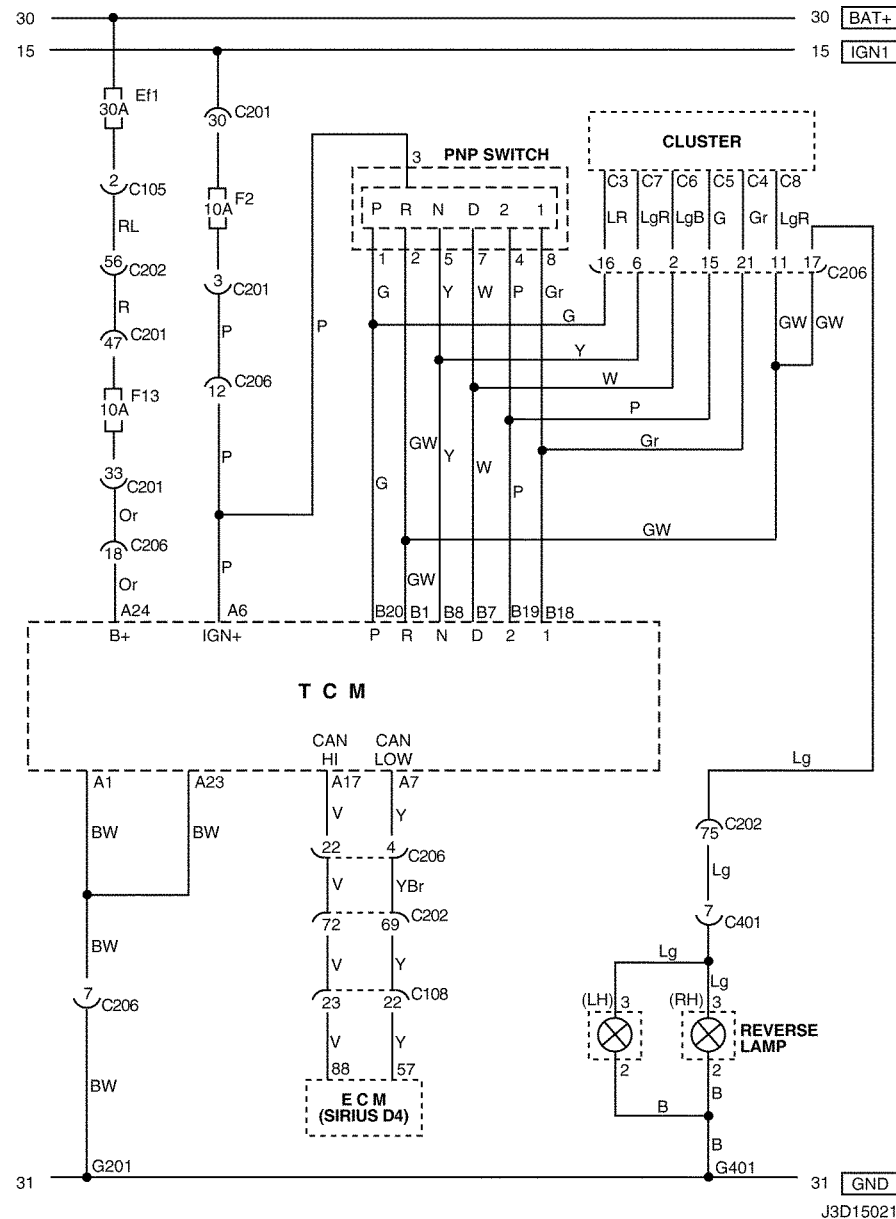

CONNECTOR(No.) (Pin No. Color)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C401 (8 Pin, White)	Trunk – Body	Inside Right Trunk Side Cover
G201	I.P	Left I.P Fuse Block
G401	Trunk	Center Trunk Lower Back Panel

B1	B2	B3	B4	B5	B6
B7	B8	B9	B10	B11	B12
B13	B14	B15	B16	B17	
B18	B19	B20	B21	B22	B23
B24	B25	B26			

A1	A2	A3	A4	A5	A6
A7	A8	A9	A10	A11	A12
A13	A14	A15	A16		
A17	A18	A19	A20	A21	A22
A23	A24				

61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59
-	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29



Rear Combination Lamp

A1	A2	A3	A4	A5				A6	A7	A8	A9	A10
A11	A12	A13	A14	A15	A16	A17	A18	A19	A20	A21	A22	A23

X									
B1	B2	B3	B4	B5	B6	B7	B8	B9	B10
B11	B12	B13	B14	B15	B16	B17	B18	B19	B20


C1	C2				C3
C4	C5	C6	C7	C8	

1	2	3	4	5
6	7	8	9	


PNP SWITCH

c. POSITION OF CONNECTORS AND GROUNDS


- W/H TCM

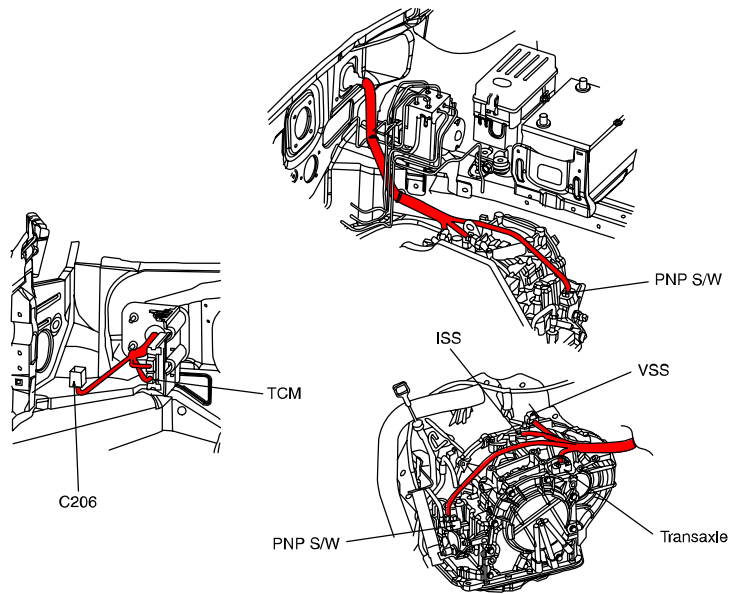

- W/H INSTRUMENT PANEL

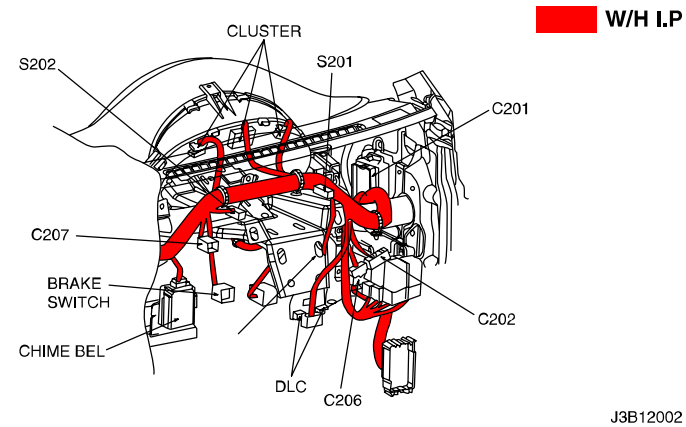

2) POWER SUPPLY, GROUND, PNP SWITCH, CLUSTER & ECM CIRCUIT : HATCH BACK

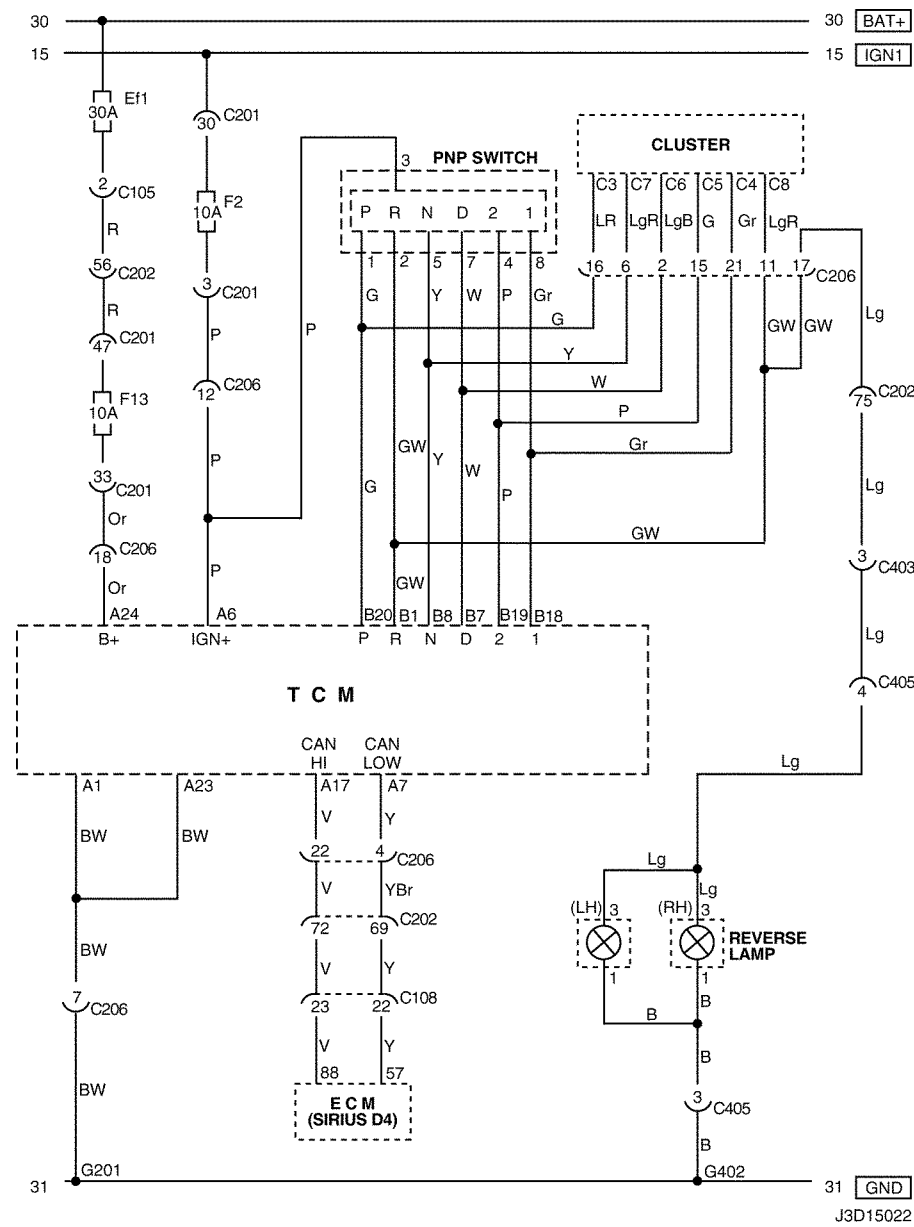

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C403 (6 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C405 (8 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
G201	I.P	Left I.P Fuse Block
G402	T/Gate. EXT.	Inside Driver C Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

B1			B2			B3		B4		B5			B6			A1			A2			A3		A4		A5			A6												
B7		B8		B9		B10		B11		B12		B13		B14		B15		B16		B17		A7		A8		A9		A10		A11		B12		A13		A14		A15		A16	
B18		B19		B20		B20						B22		B23		B24		B25		B26		A17		A18		A19		A20						A21		A22		A23		A24	

TCM(AISIN)

61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30

ECM (Sirius D4)

A1	A2	A3	A4	A5				A6	A7	A8	A9	A10
A11	A12	A13	A14	A15	A16	A17	A18	A19	A20	A21	A22	A23

B1	B2	B3	B4	B5	B6	B7	B8	B9	B10
B11	B12	B13	B14	B15	B16	B17	B18	B19	B20

C1	C2			C3
C4	C5	C6	C7	C8

Cluster

1	2	3	4	5
6	7	8	9	

PNP SWITCH

			
1			2
3	4	5	6

Rear Combination Lamp

1	2			3	
4	5	6	7	8	


C405 W/H T/Gate EXT.

1			2
3	4	5	6


C403 W/H Tate EXT.

c. POSITION OF CONNECTORS AND GROUNDS


- W/H TCM

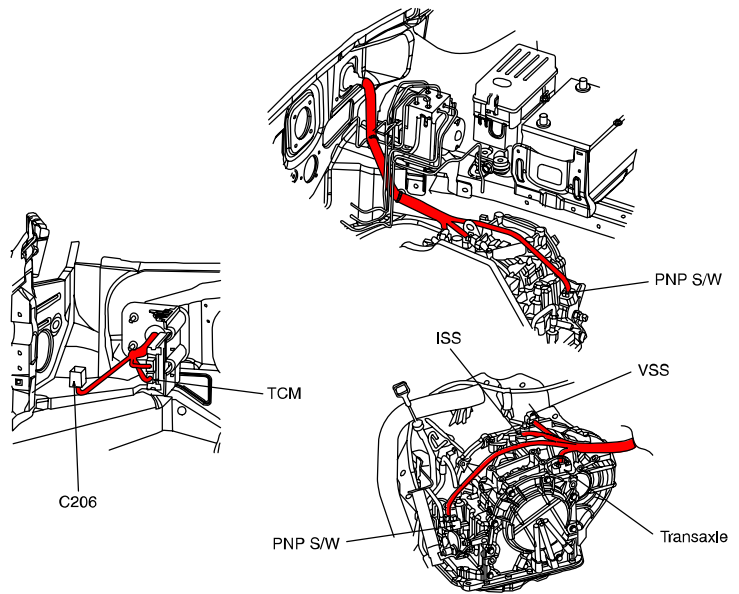

- W/H INSTRUMENT PANEL

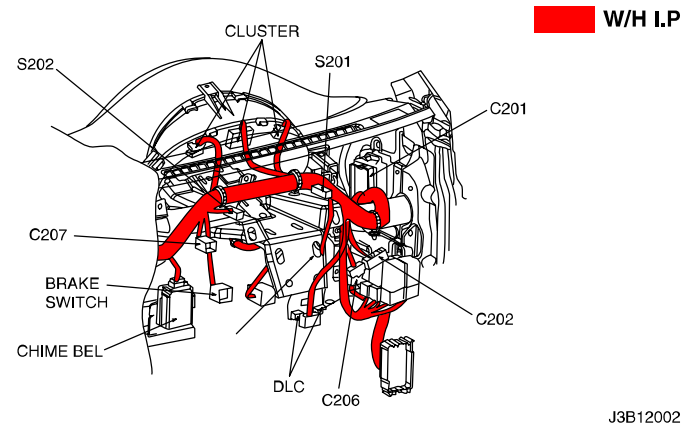


3) BRAKE SWITCH, BTSI SOLENOID, ISS SENSOR & TRANSAXLE CIRCUIT

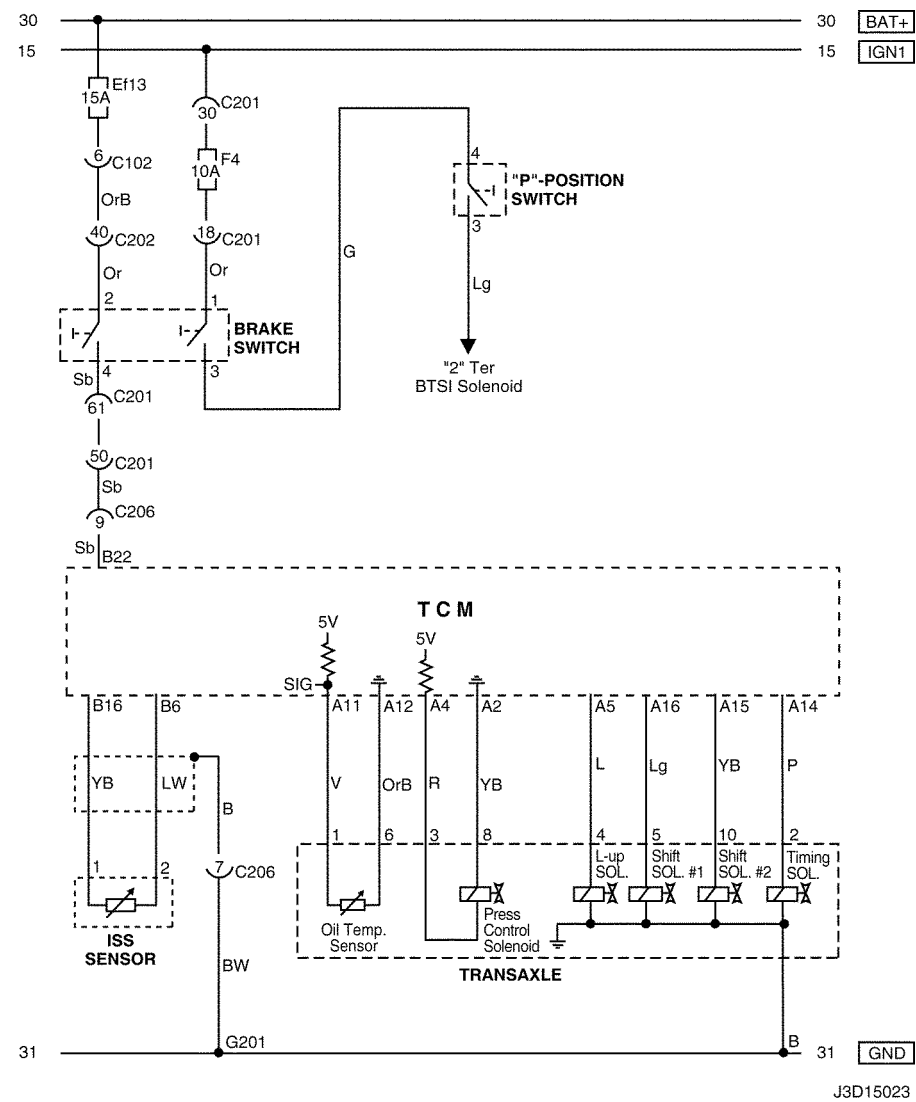

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
G201	I.P	Left I.P Fuse Block

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

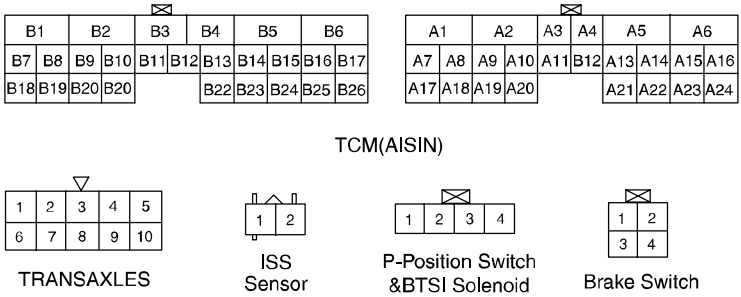


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TCM

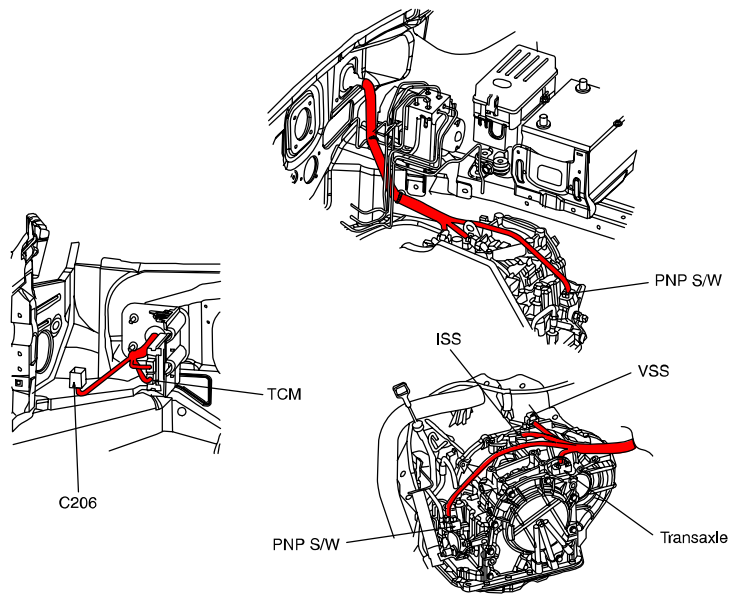


J3B12018

- W/H INSTRUMENT PANEL

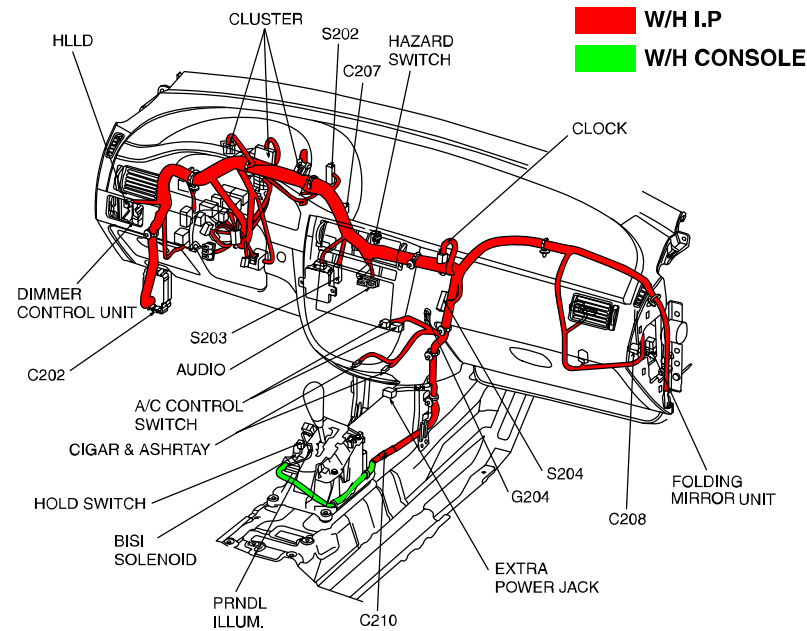

J3B12001

4) HOLD MODE SWITCH, VSS & DLC CIRCUIT

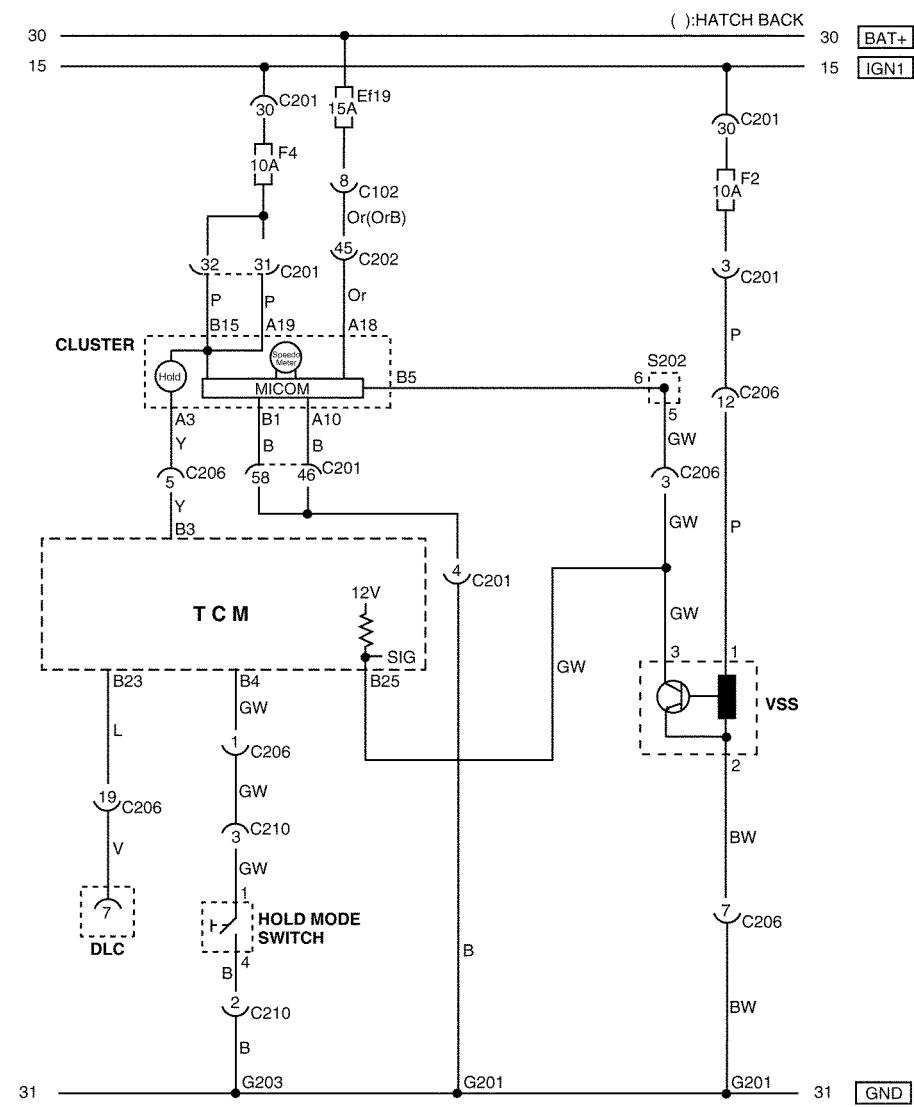


J3D15024

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C210 (6 Pin, White)	I.P – Console	Below Console Box
S202 (Black)	I.P	Behind Cluster
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

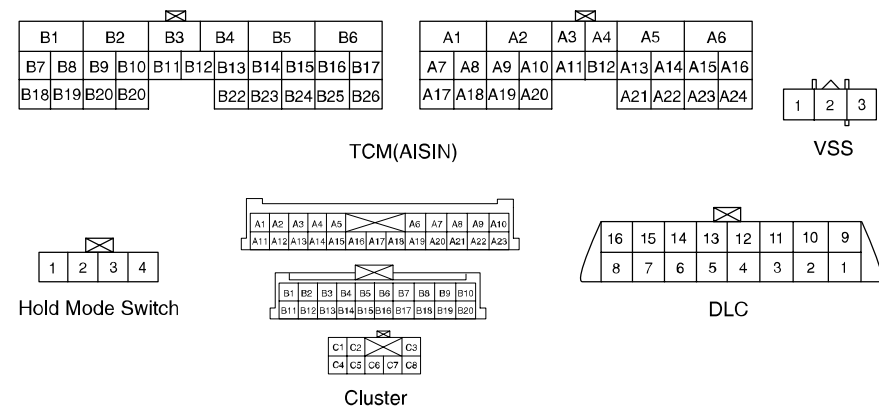

J3B1P076


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TCM

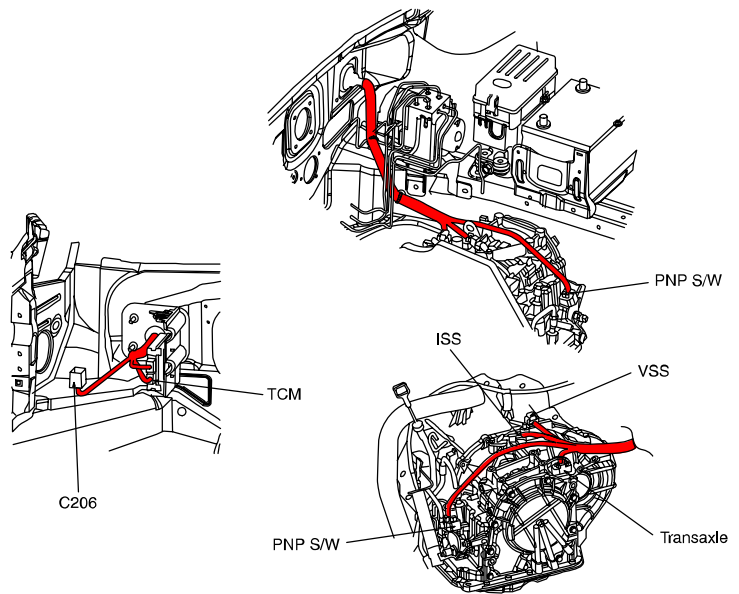

J3B12018


- W/H INSTRUMENT PANEL

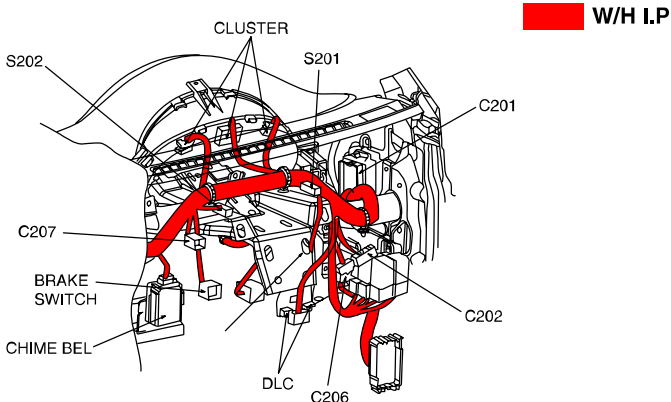

J3B12002

d. SPLICE PACK


S202

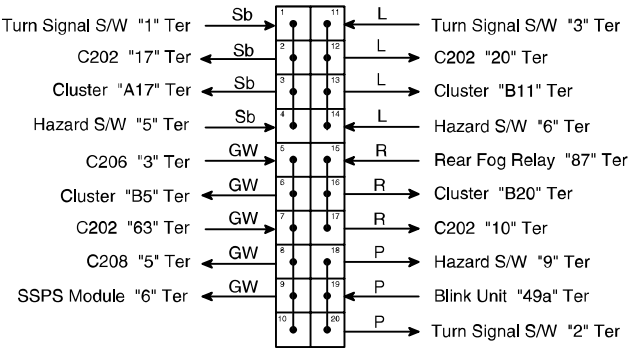

J3D1S003

7. AIR CONDITIONER


1) AIR CONDITIONER CONTROL SWITCH, BLOWER MOTOR RESISTER & BLOWER MOTOR CIRCUIT

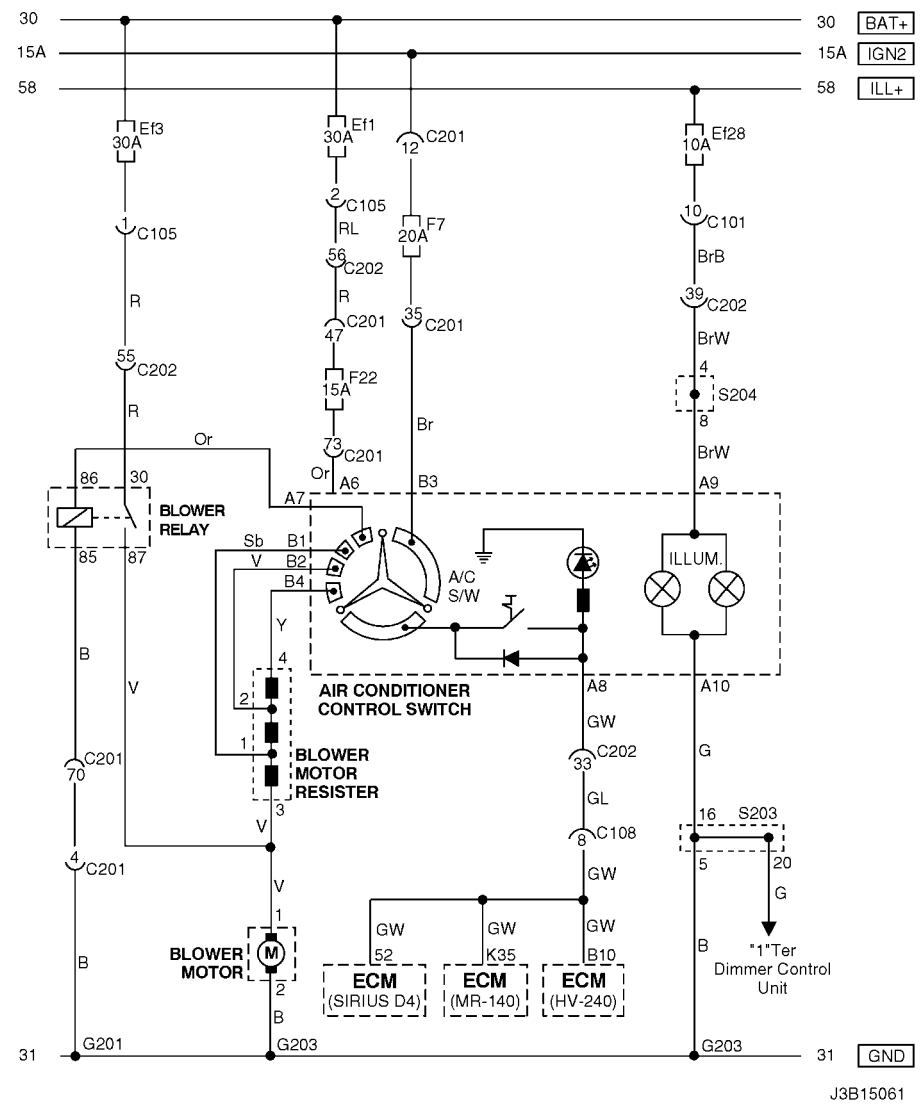

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

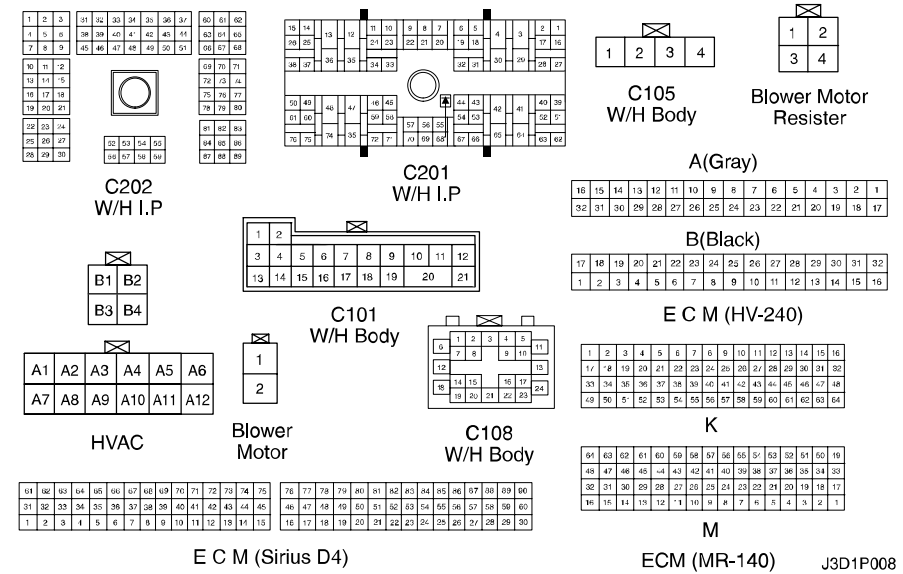


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

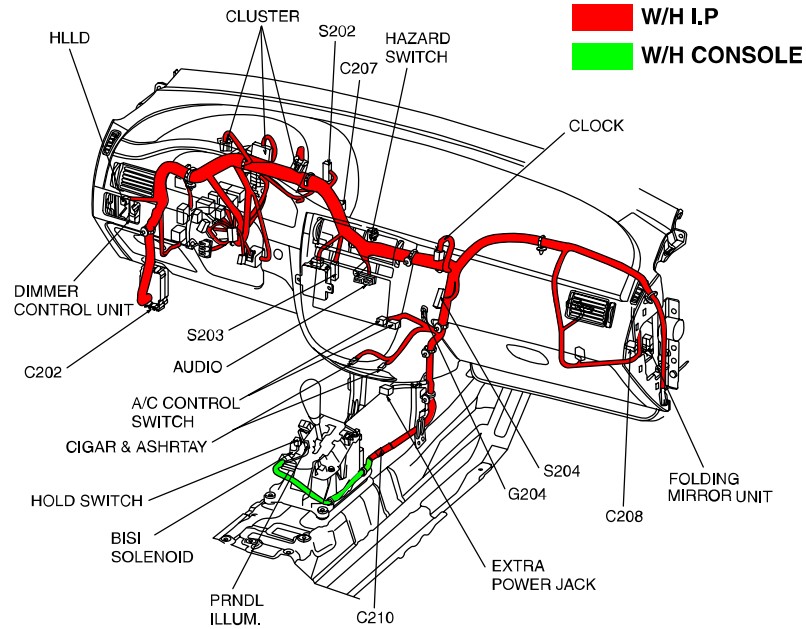


d. SPLICE PACK


S203

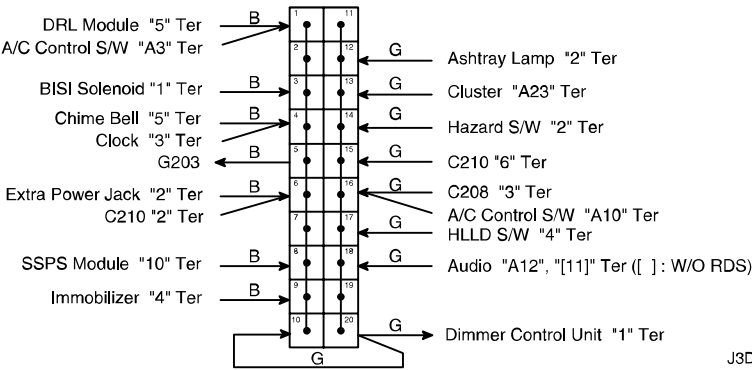

S204

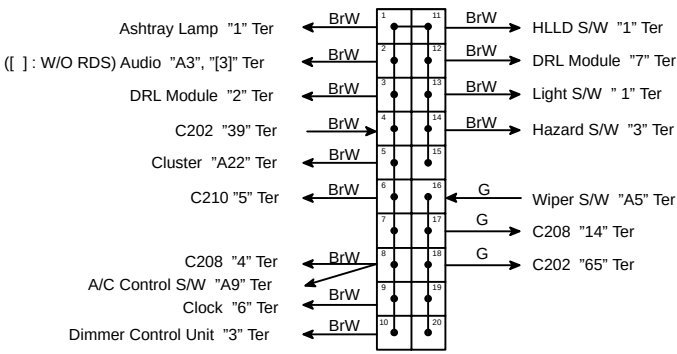


2) AIR CONDITIONER CONTROL SWITCH, INTAKE MOTOR & AIR CONDITIONER COMPRESSOR CIRCUIT

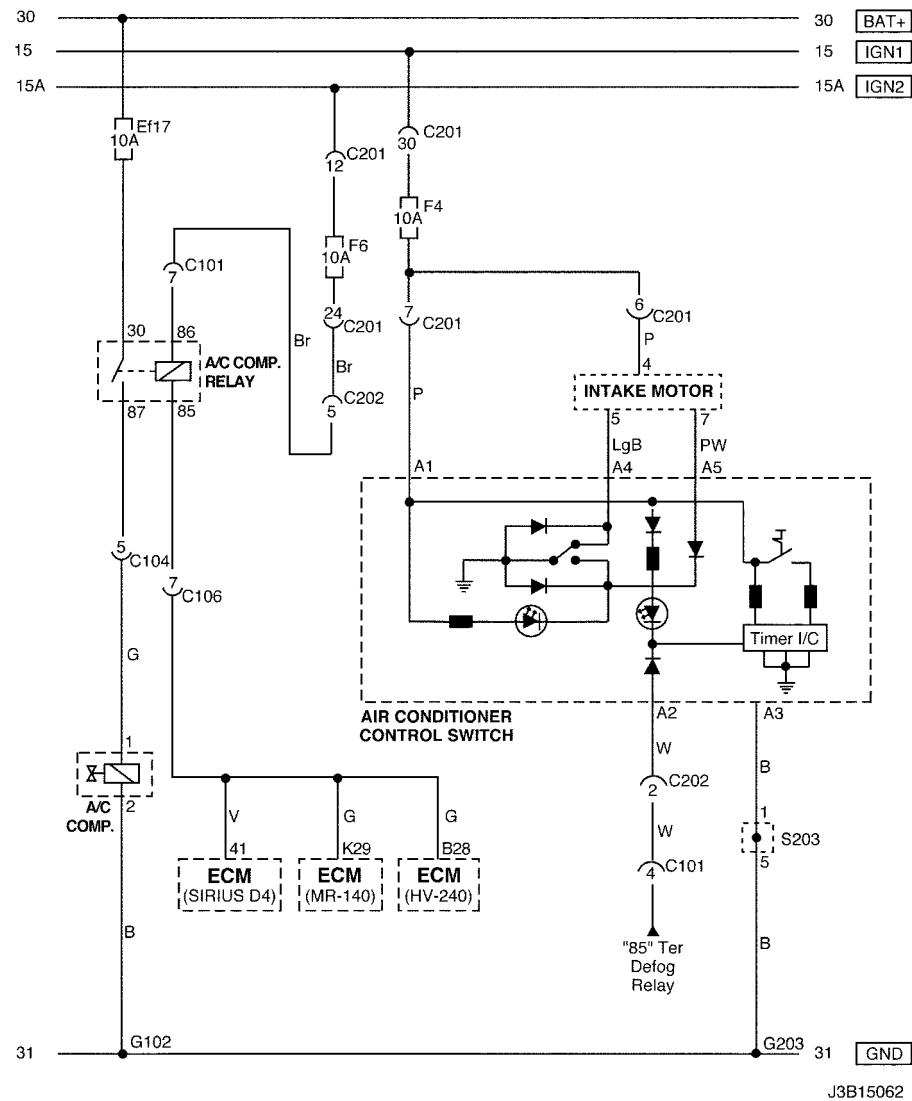

a. CONNECTOR INFORMATION



CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S203 (Red)	I.P	Behind Audio Mounting
G102	Front	Behind Right Head Lamp
G203	I.P	Behind Left Audio Bracket

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

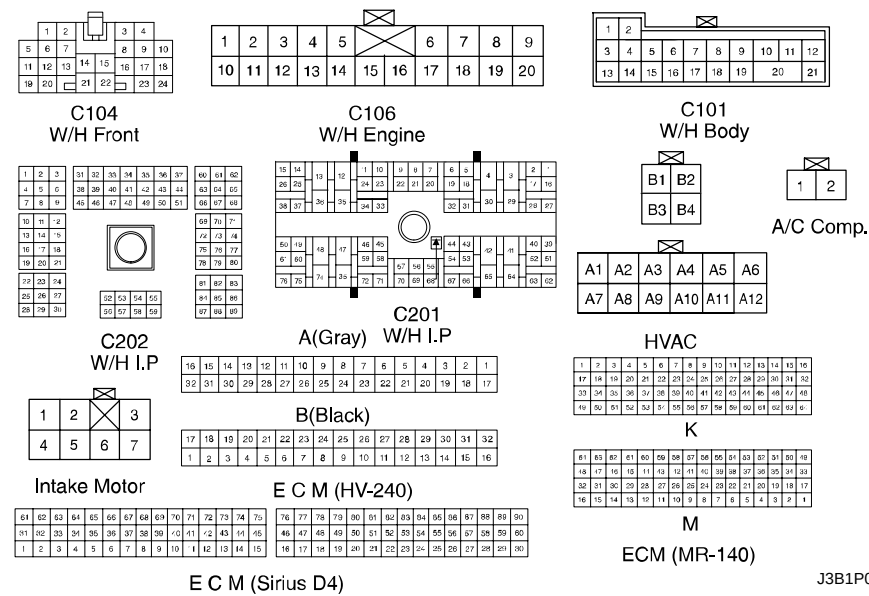


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

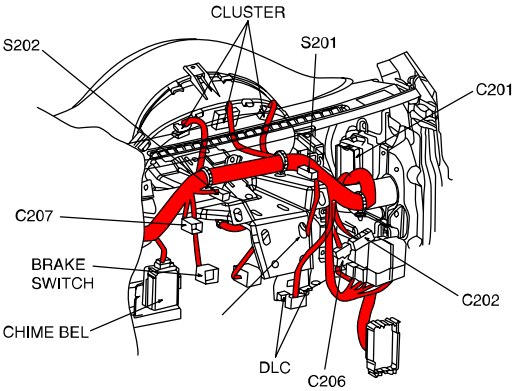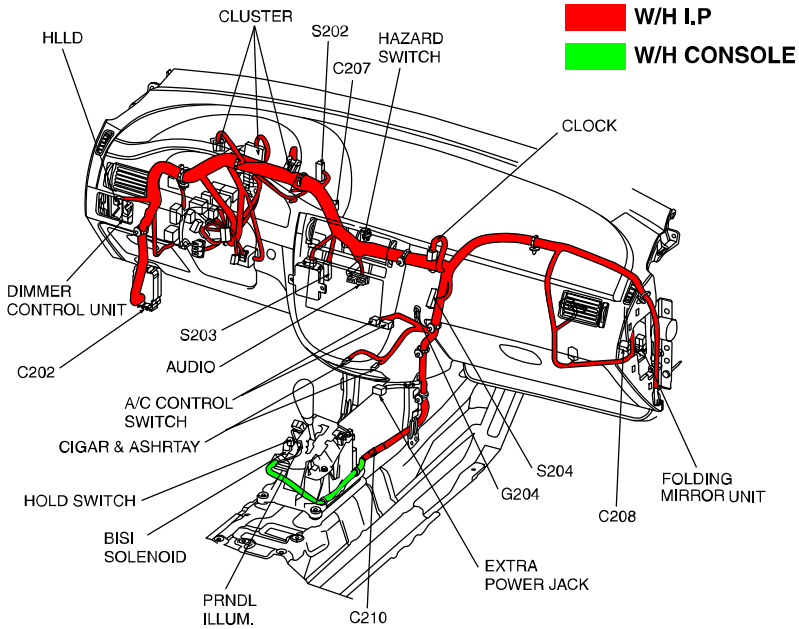


d. SPLICE PACK

S203

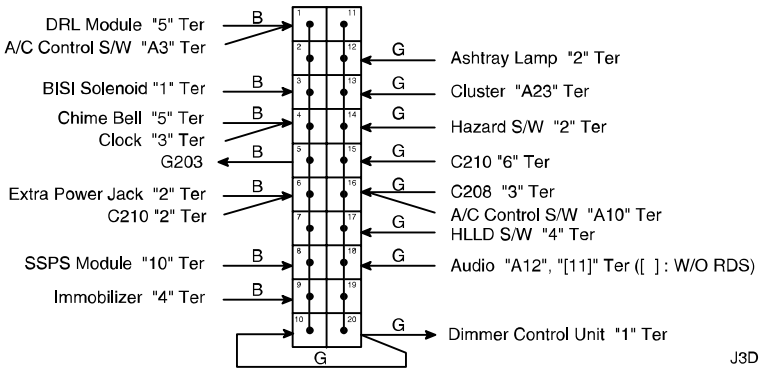

a. CONNECTOR INFORMATION

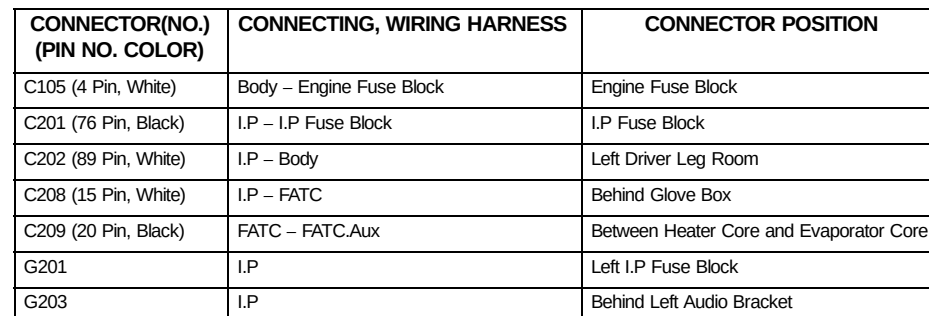

C201
W/H I.P.

C202
W/H I.P.




C208
W/H I.P.

C209
W/H FATC

FATC


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

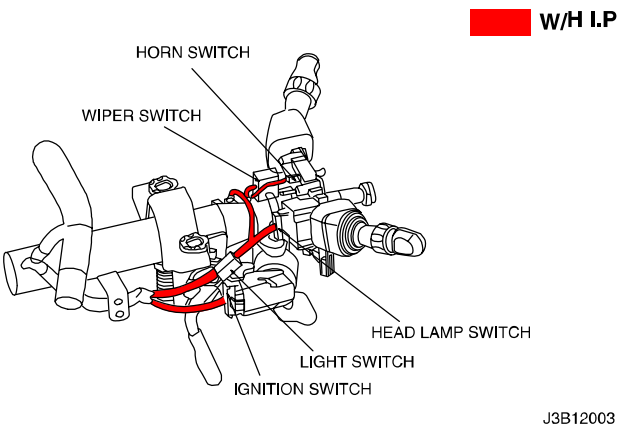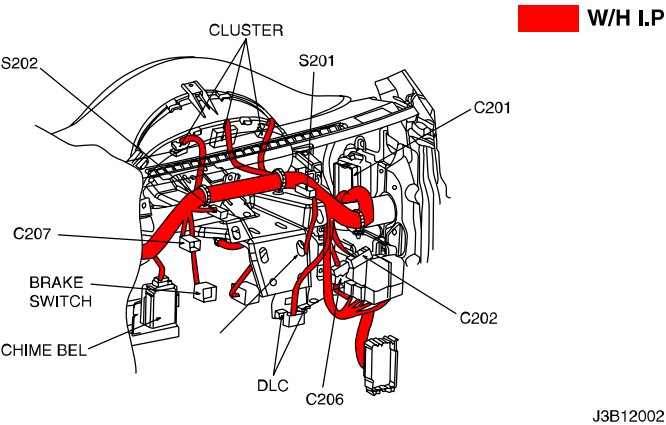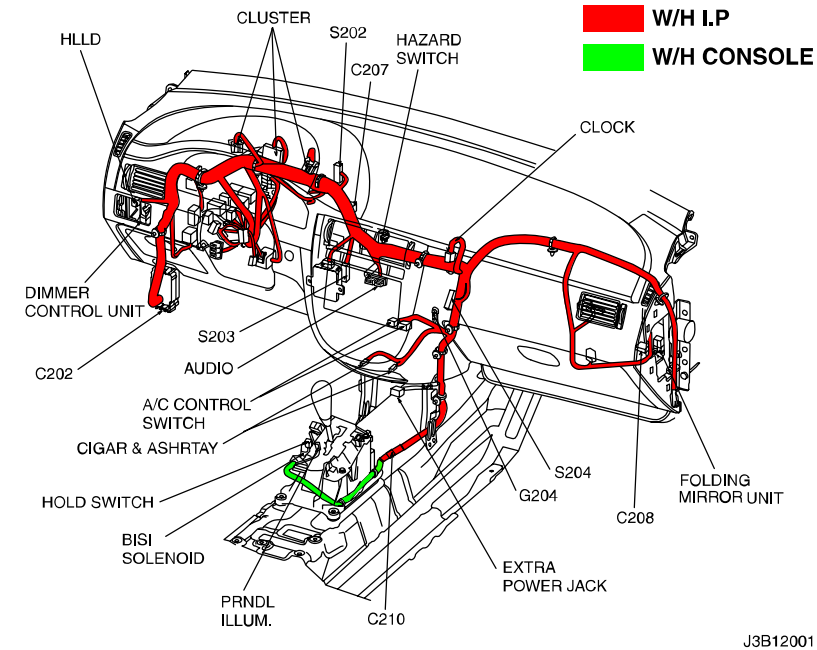

2) SENSOR (AMBIENT, INCAR, SUN & WATER), AIR MIX DOOR MOTOR, A/C COMPRESSOR & ECM CIRCUIT


2-1) MR-140/HV-240

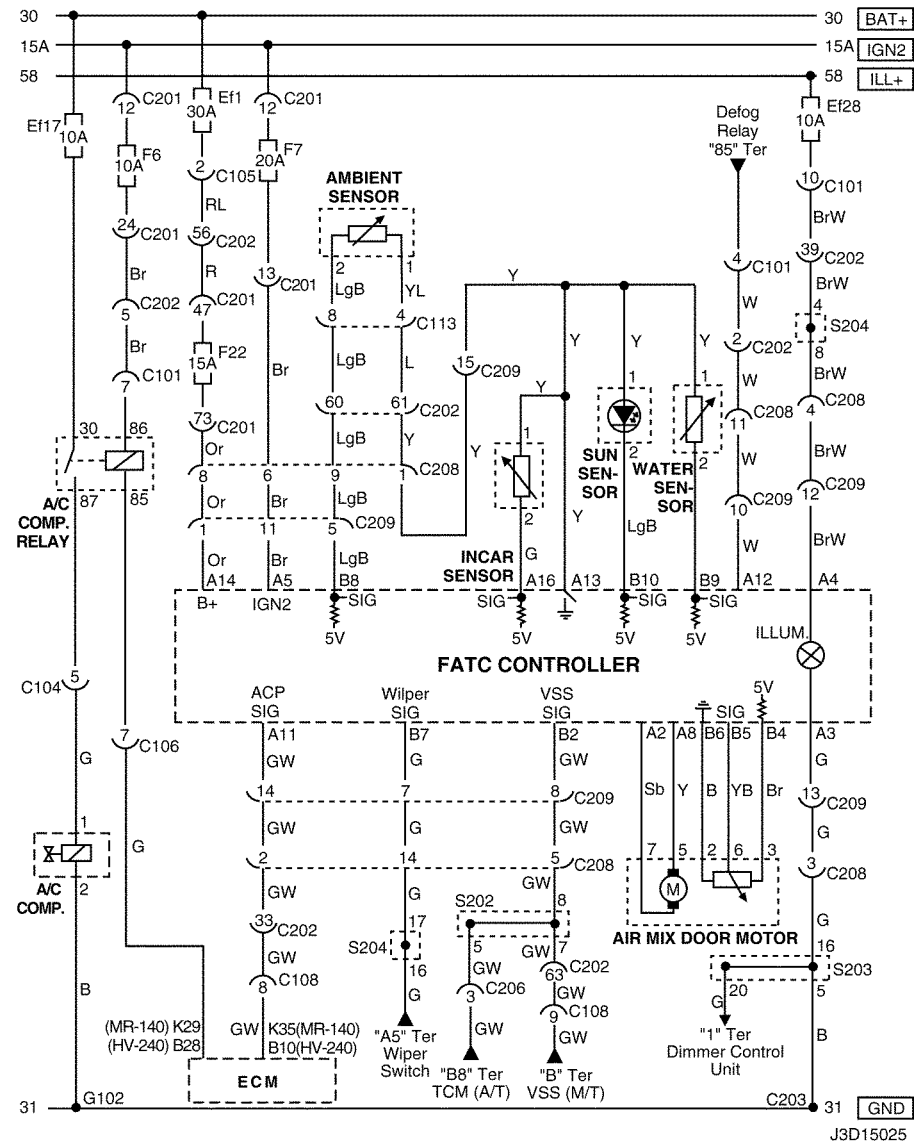

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C208 (15 Pin, White)	I.P – FATC	Behind Glove Box
C209 (20 Pin, Black)	FATC – FATC.Aux	Between Heater Core and Evaporator Core
S202 (Black)	I.P	Behind Cluster
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G102	Front	Behind Right Head Lamp
G203	I.P	Behind Left Audio Bracket

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

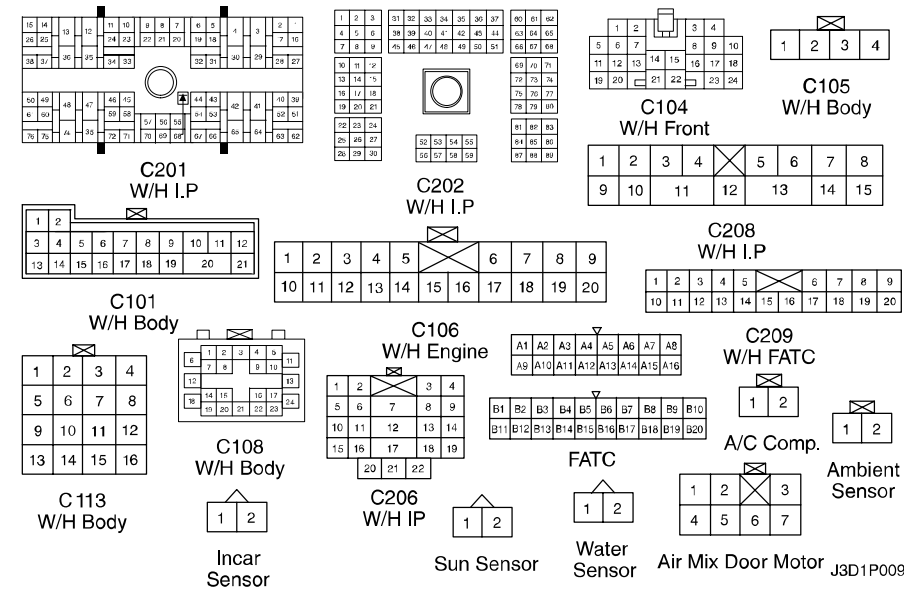

c. POSITION OF CONNECTORS AND GROUNDS


- W/H INSTRUMENT PANEL

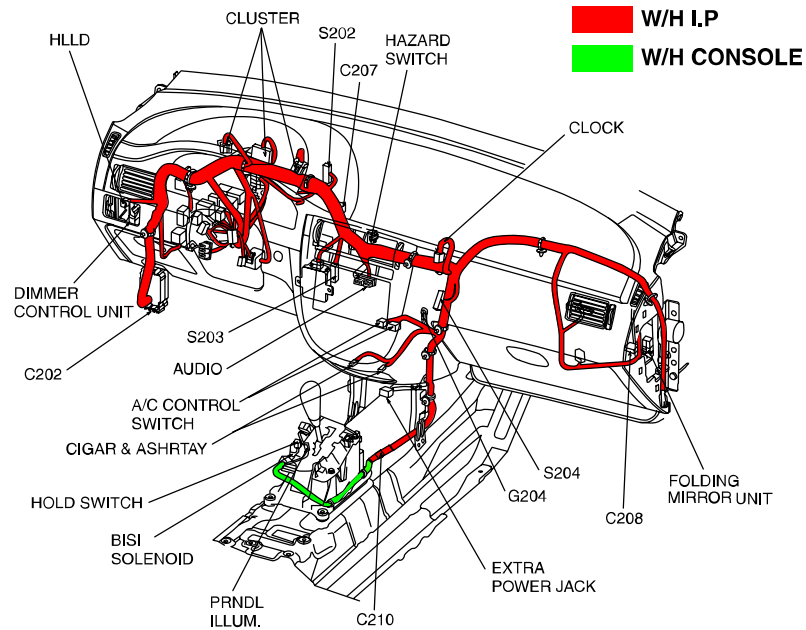

J3B12001


d. SPLICE PACK

S202

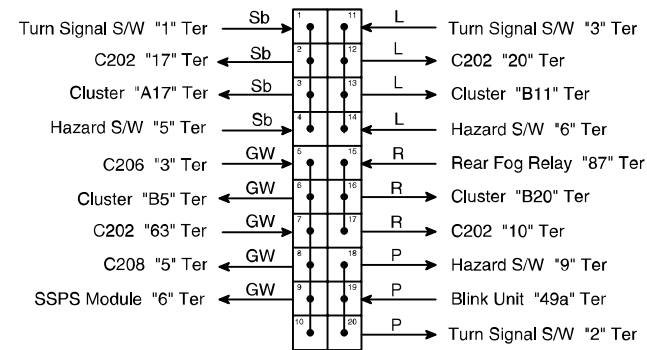


J3D1S003

S203

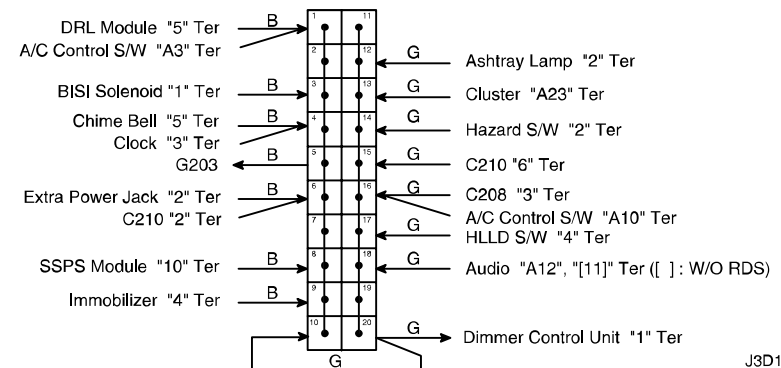


J3D1S004

S204

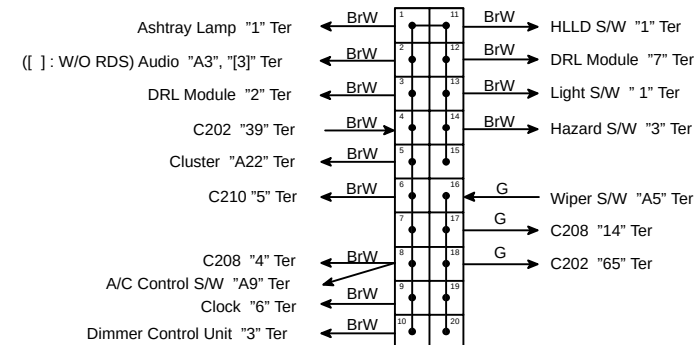

J3B1S006


2-2) SIRIUS D4

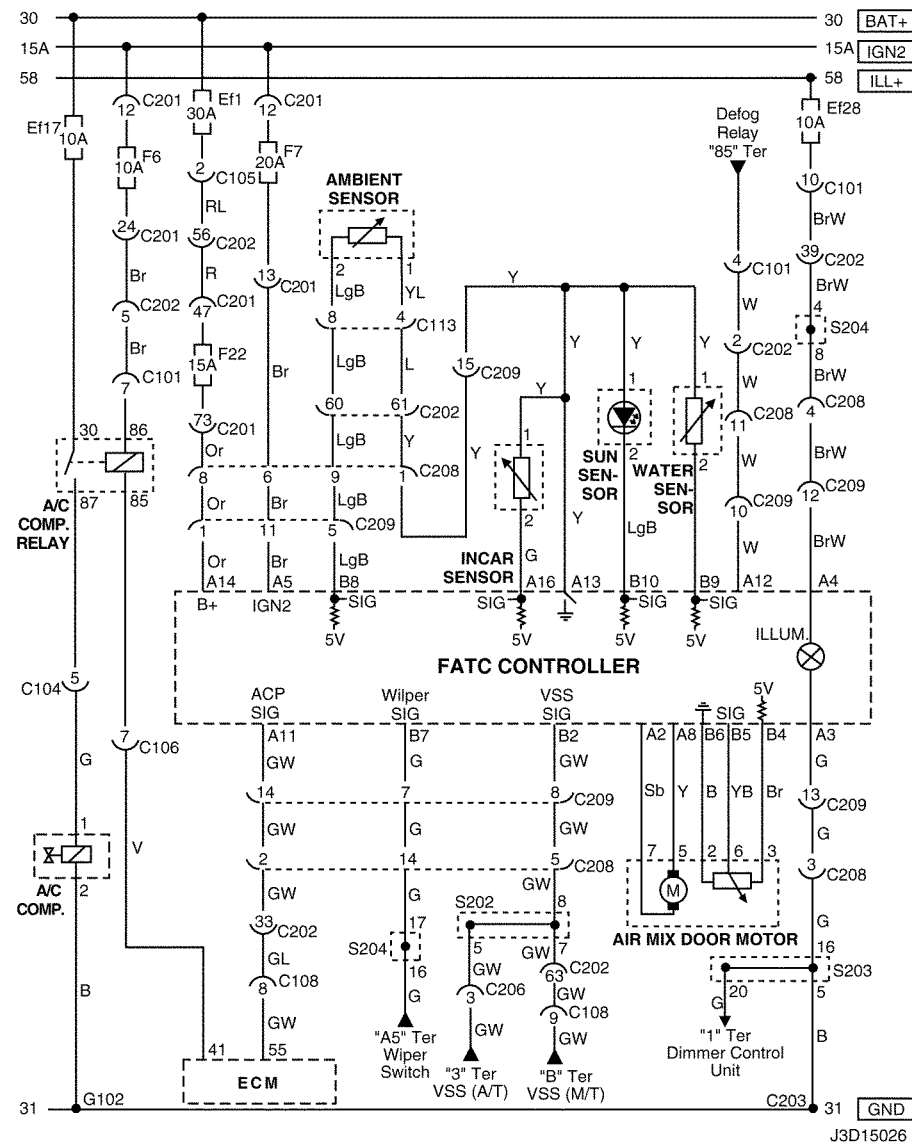

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C208 (15 Pin, White)	I.P – FATC	Behind Glove Box
C209 (20 Pin, Black)	FATC – FATC.Aux	Between Heater Core and Evaporator Core
S202 (Black)	I.P	Behind Cluster
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G102	Front	Behind Right Head Lamp
G203	I.P	Behind Left Audio Bracket

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

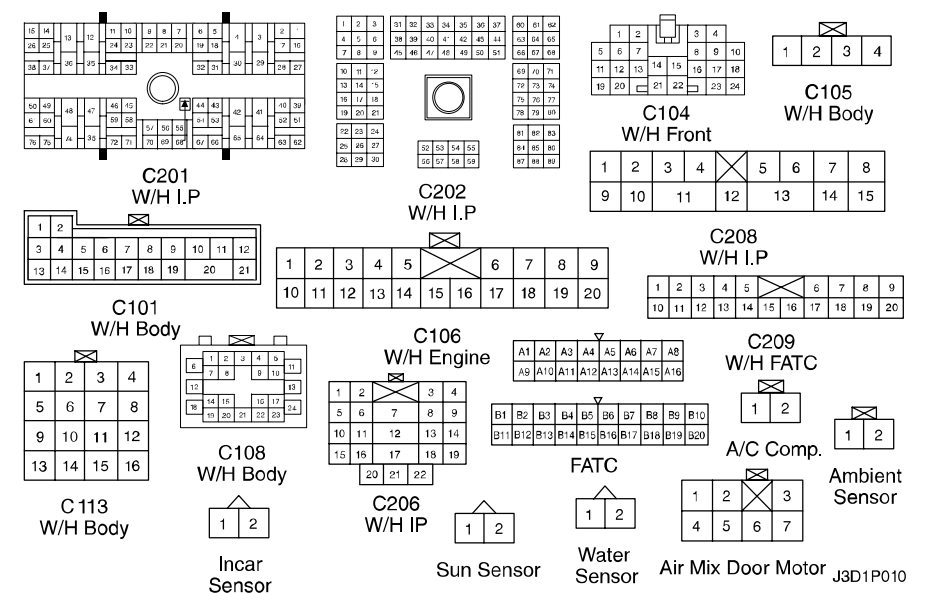

c. POSITION OF CONNECTORS AND GROUNDS


- W/H INSTRUMENT PANEL

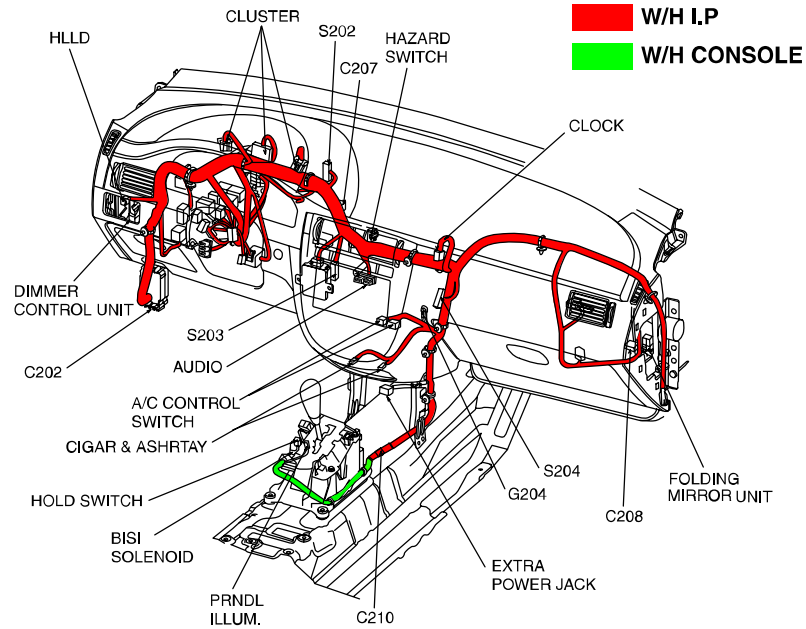

J3B12001


d. SPLICE PACK

S202

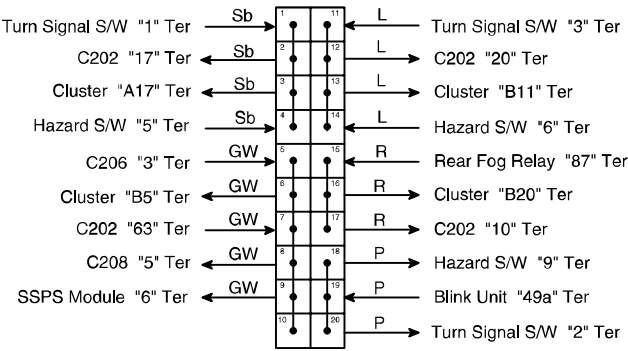


J3D1S003

S203

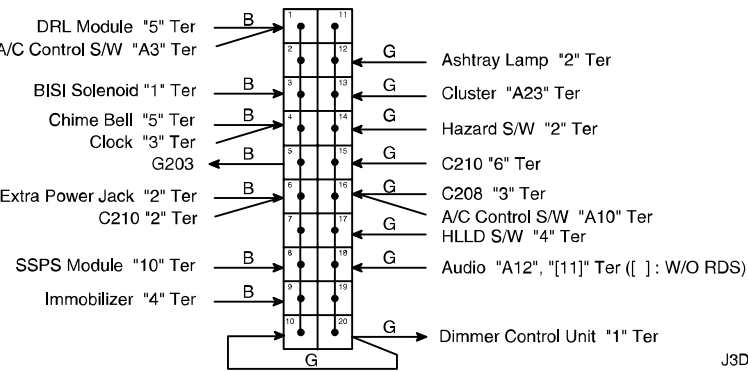

J3D1S004


S204

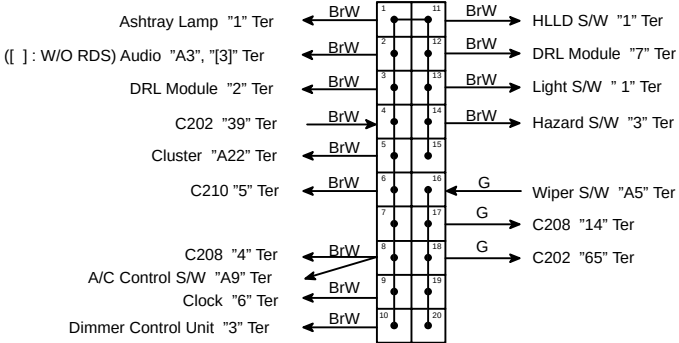

J3B1S006

9. RADIATOR COOLING FAN CIRCUIT


1) COOLING FAN CIRCUIT (MR-140/HV-240) : DUAL

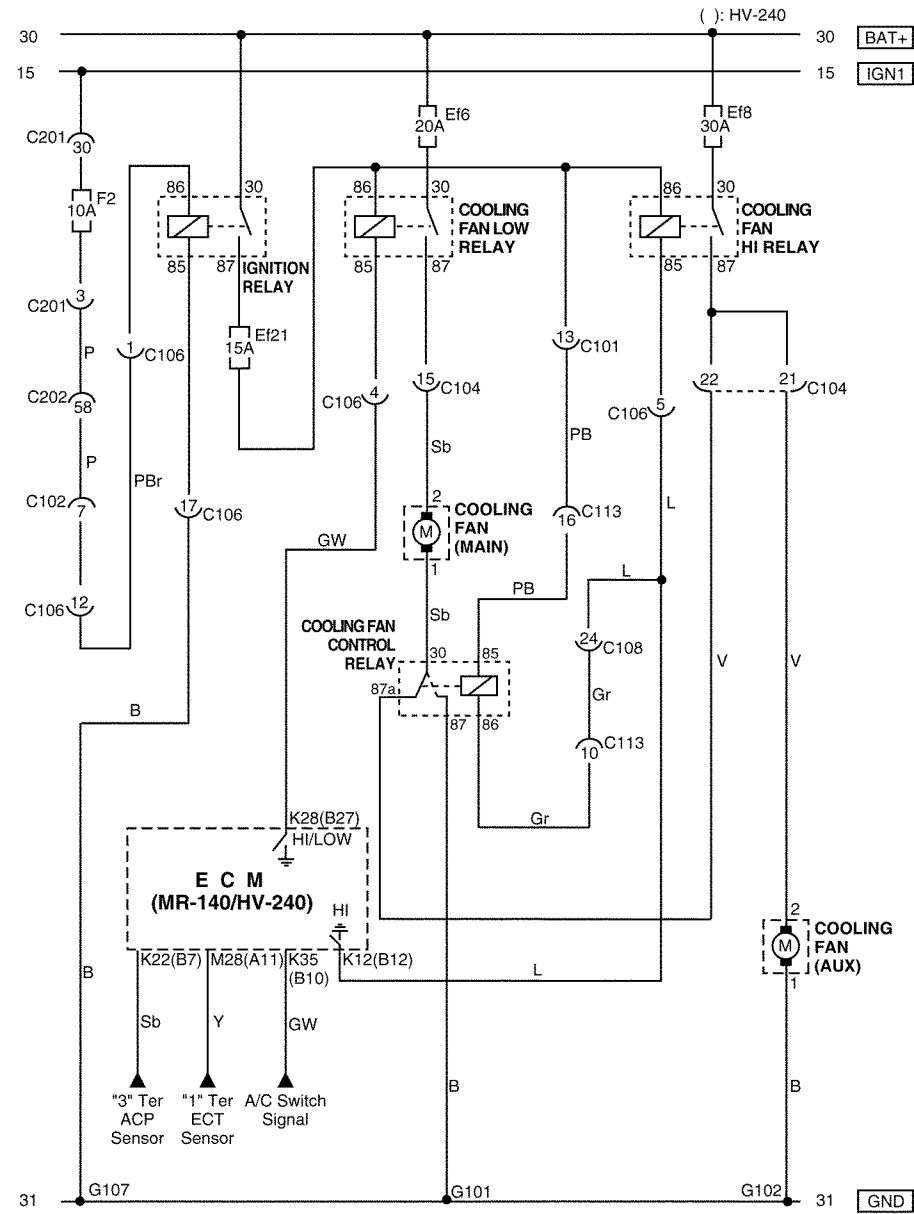

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
G101	Front	Behind Left Head Lamp
G102	Front	Behind Right Head Lamp
G107	Engine (MR-140/HV-240)	Under Start Motor

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

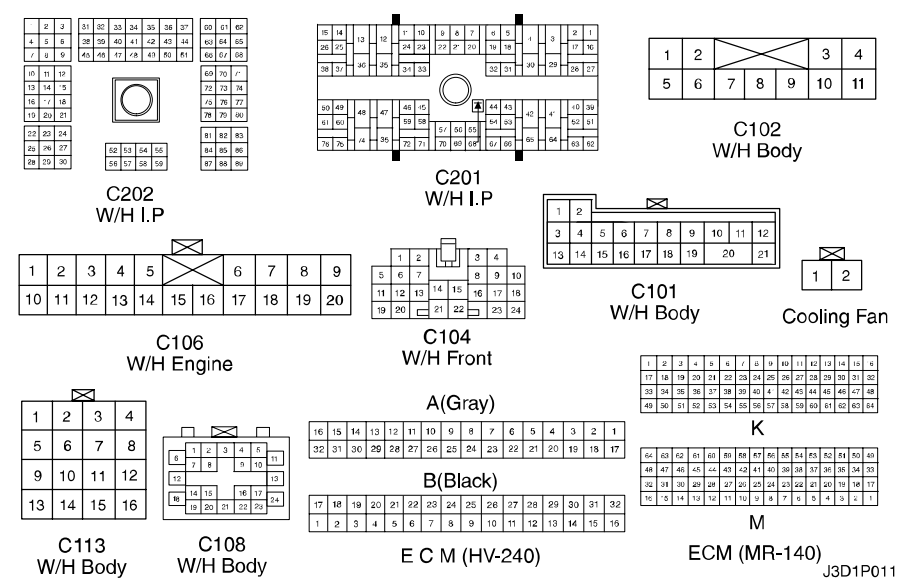


c. POSITION OF CONNECTORS AND GROUNDS


- W/H ENGINE

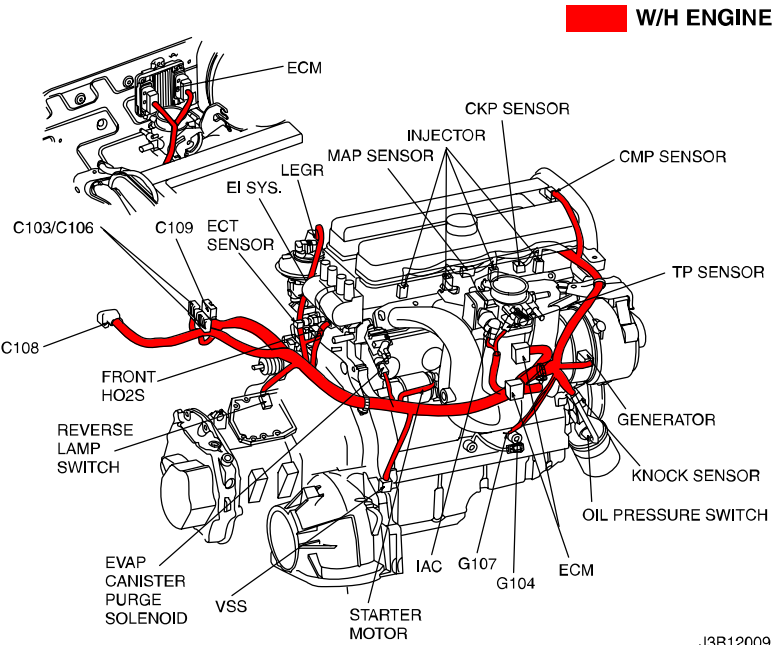

- W/H FRONT

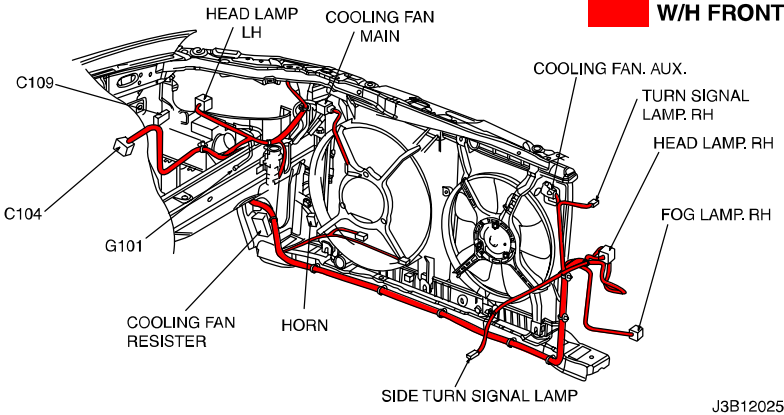

2) COOLING FAN CIRCUIT (MR-140/HV-240) : SINGLE

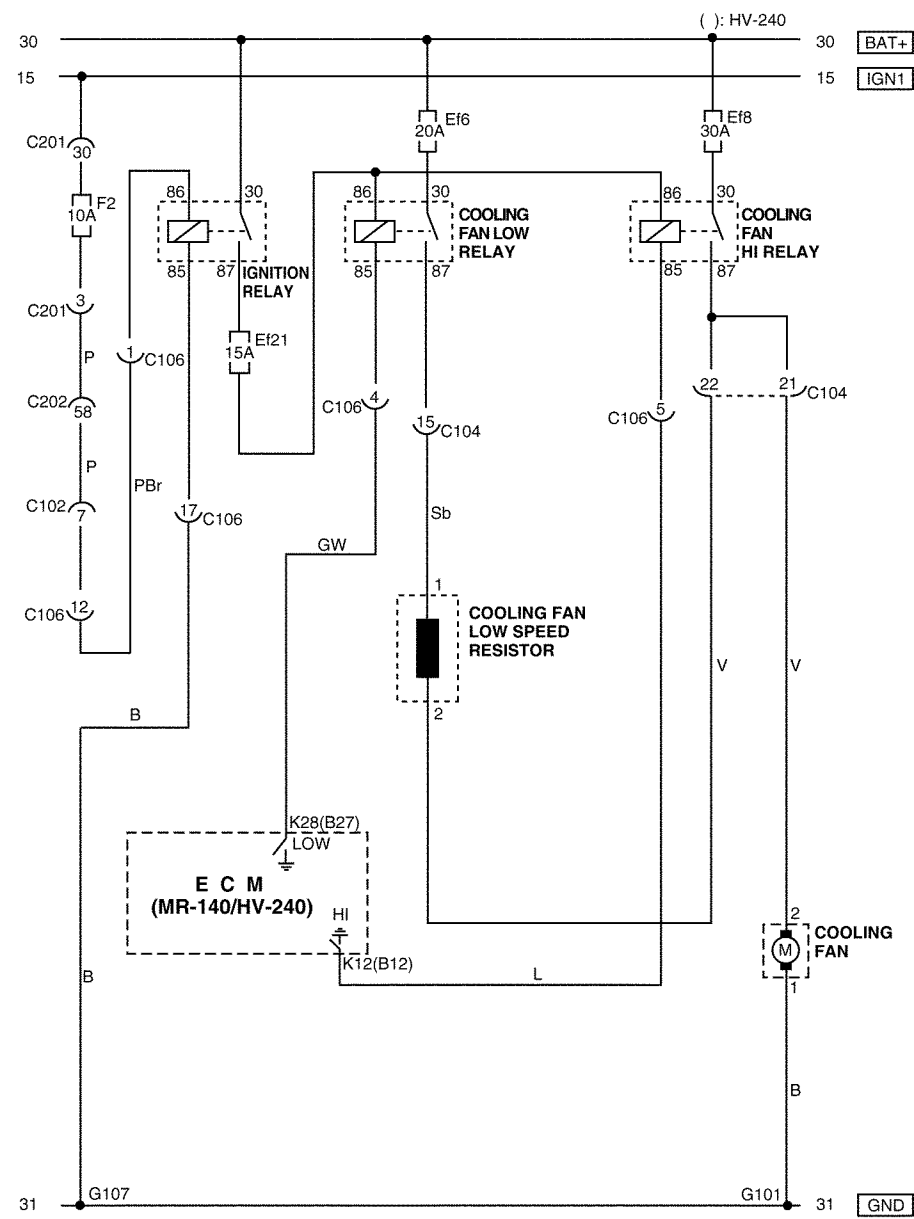

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
G101	Front	Behind Left Head Lamp
G107	Engine (MR-140/HV-240)	Under Start Motor

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

C202
W/H I.P

C201
W/H I.P

C102
W/H Body

C106
W/H Engine

C104
W/H Front

Cooling Fan


Cooling Fan
LOW Speed Resistor

ECM (HV-240)

ECM (MR-140)


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

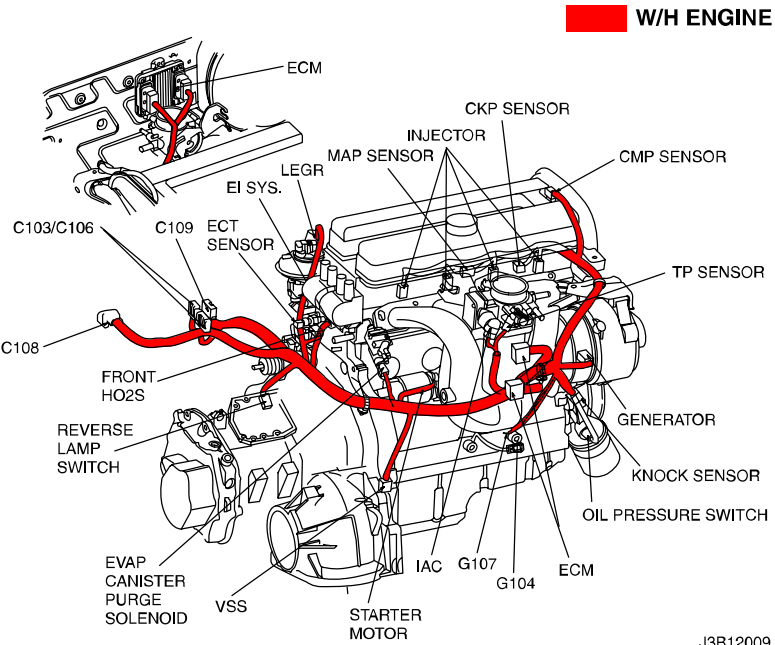


J3B12009

- W/H FRONT

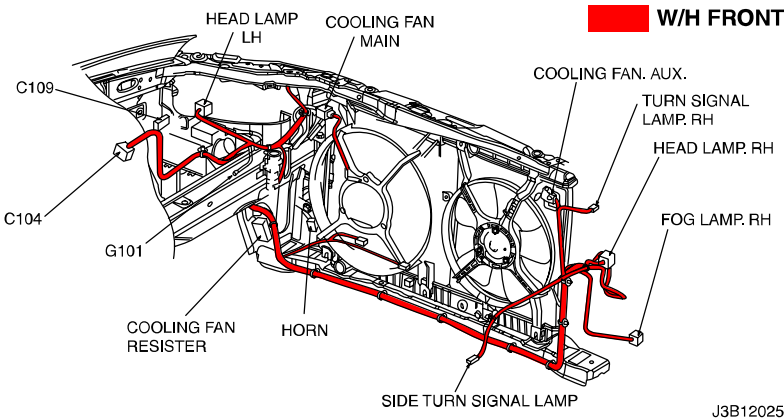

J3B12025


3) COOLING FAN CIRCUIT (SIRIUS D4) : DUAL

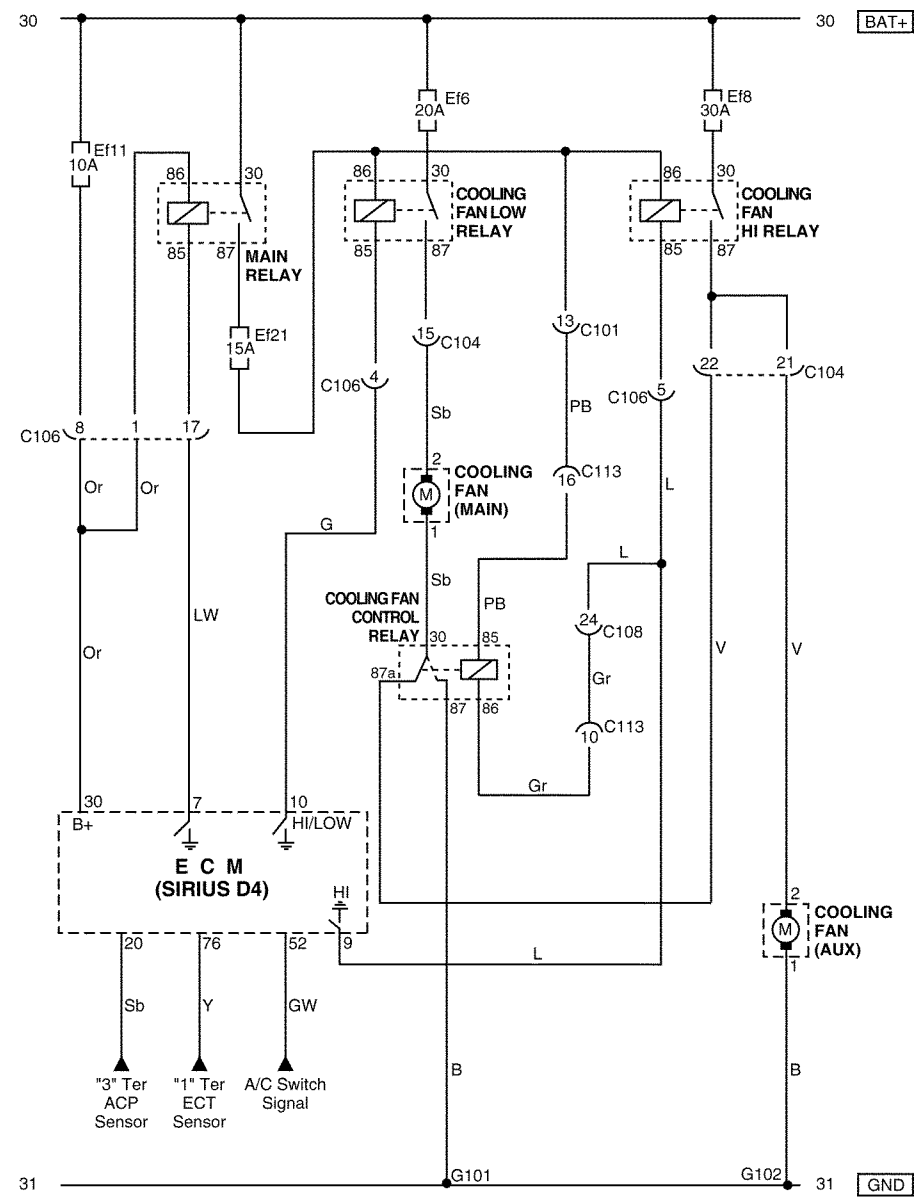

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
G101	Front	Behind Left Head Lamp
G102	Front	Behind Right Head Lamp

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

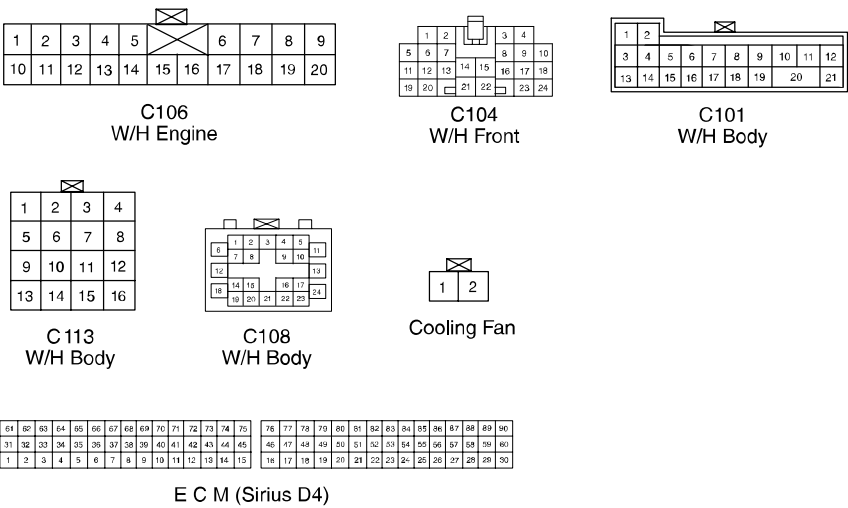


c. POSITION OF CONNECTORS AND GROUNDS


- W/H ENGINE

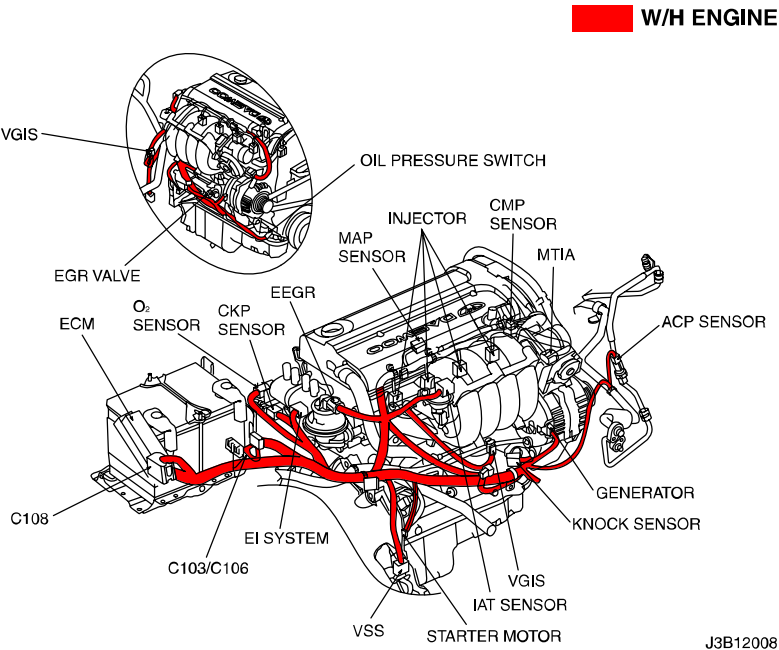

- W/H FRONT

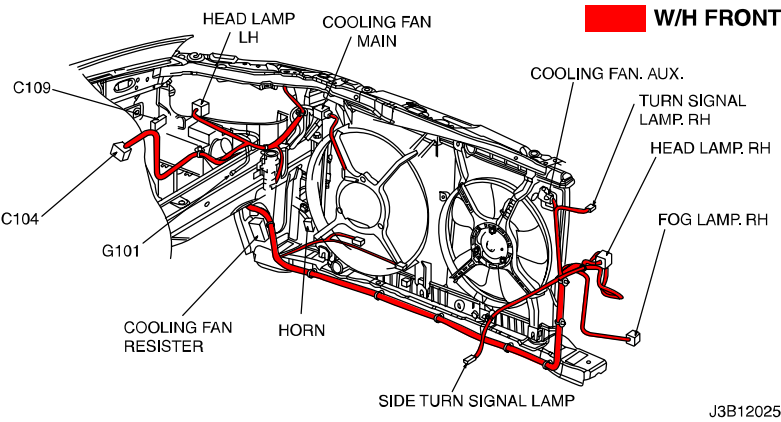


4) COOLIING FAN CIRCUIT (SIRIUS D4) : SINGLE

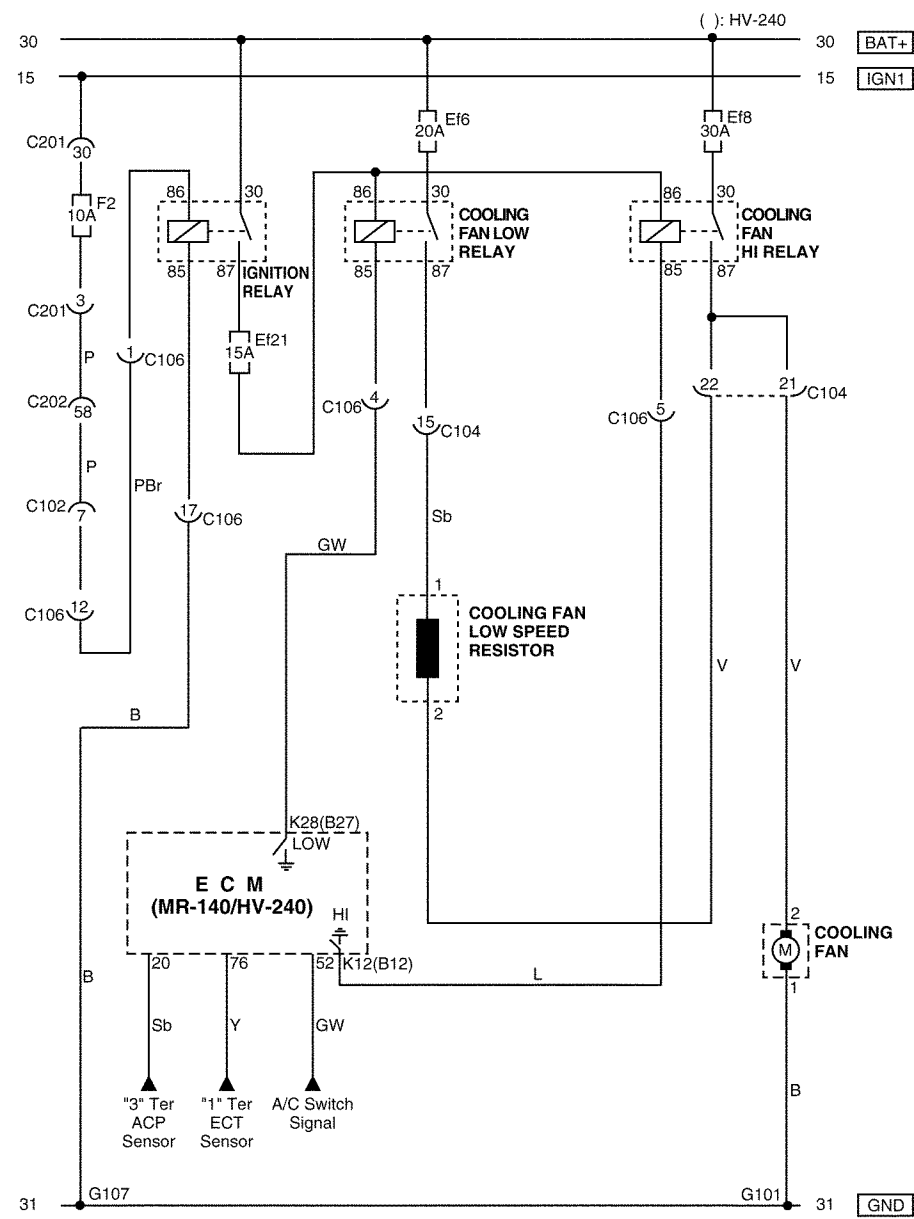

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
G101	Front	Behind Left Head Lamp

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

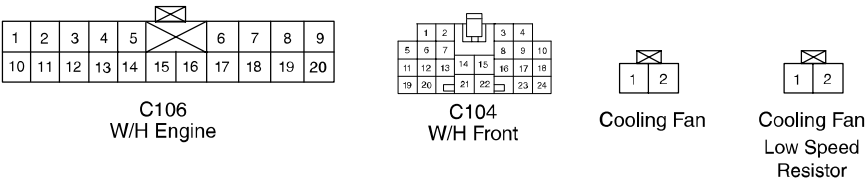


51	52	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30


E C M (Sirius D4)

c. POSITION OF CONNECTORS AND GROUNDS

- W/H ENGINE

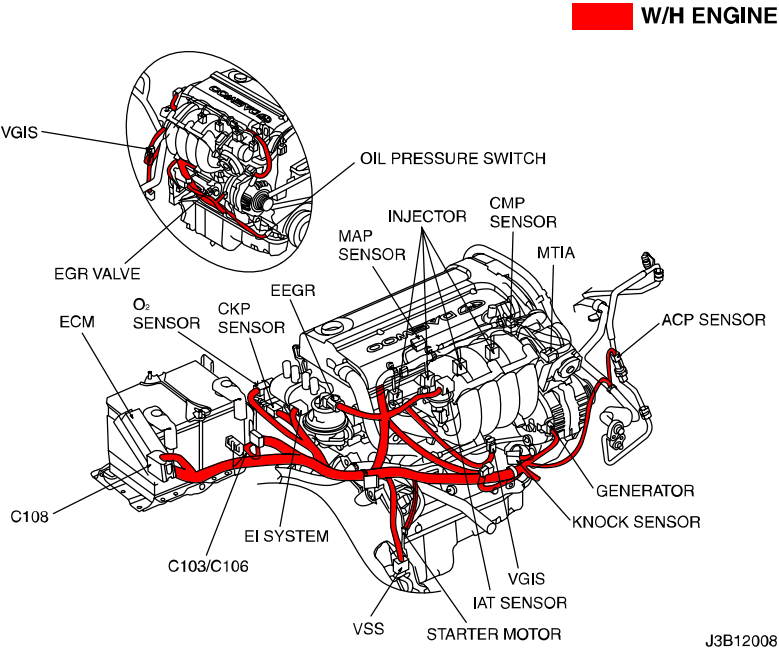


- W/H FRONT

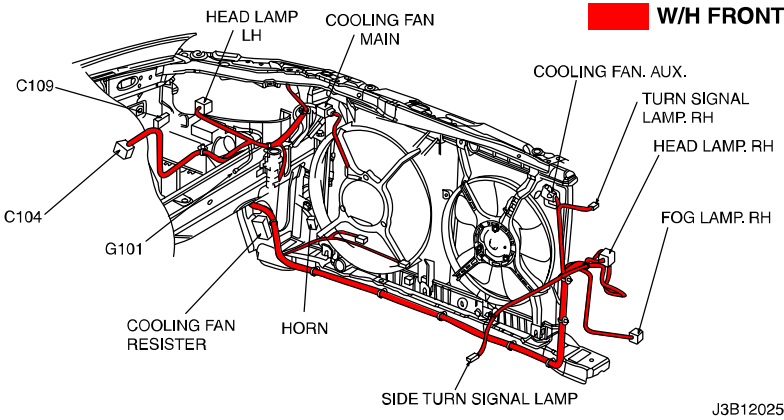

10. HEAD LAMP & HEAD LAMP LEVELING DEVICE (HLLD) CIRCUIT

1) NOTCH BACK

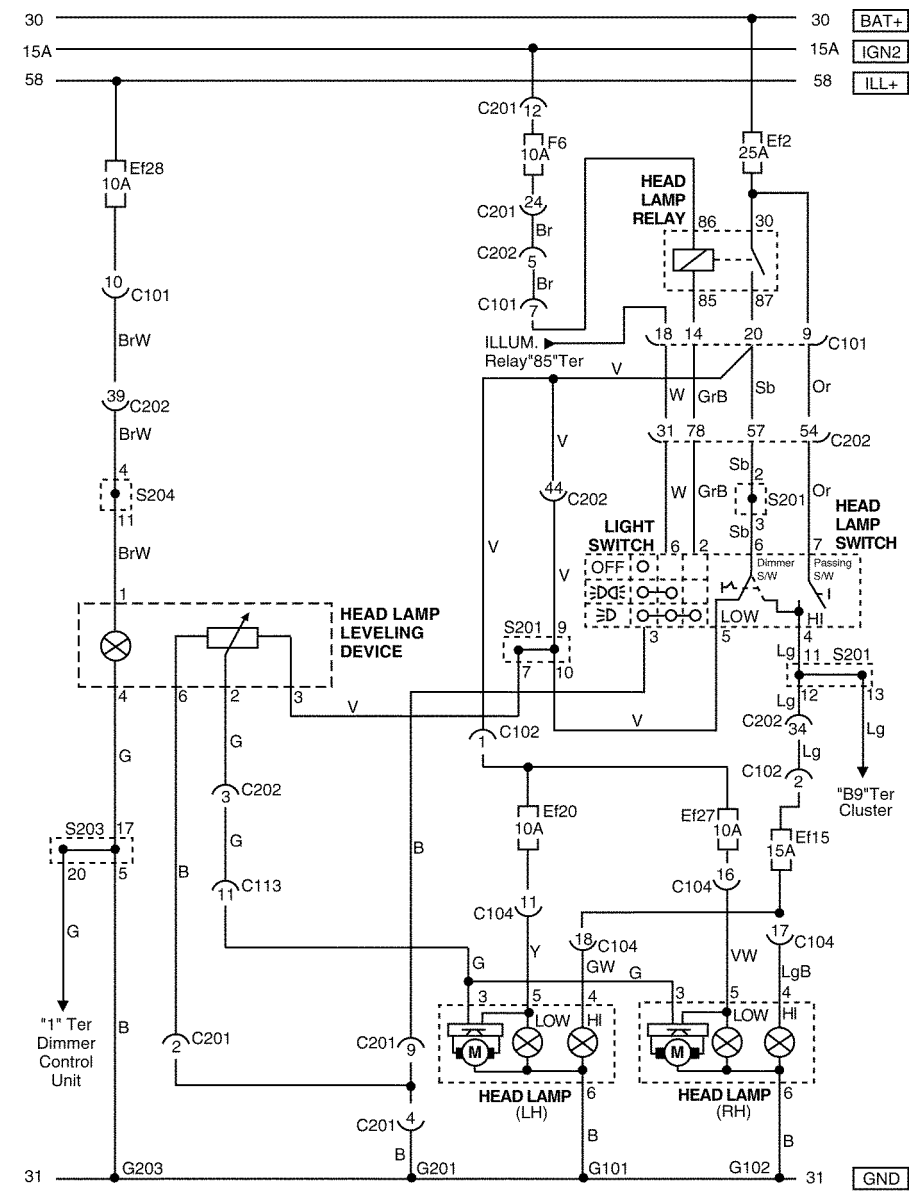


J3D15031

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S201 (Black)	I.P	Behind Cluster
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G101	Front	Behind Left Head Lamp
G102	Front	Behind Right Head Lamp
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

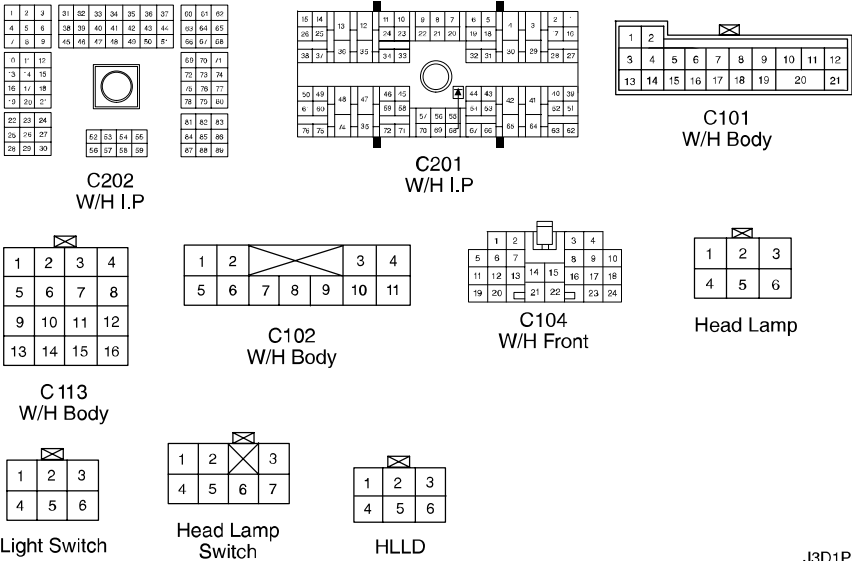


J3D1P015

c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT

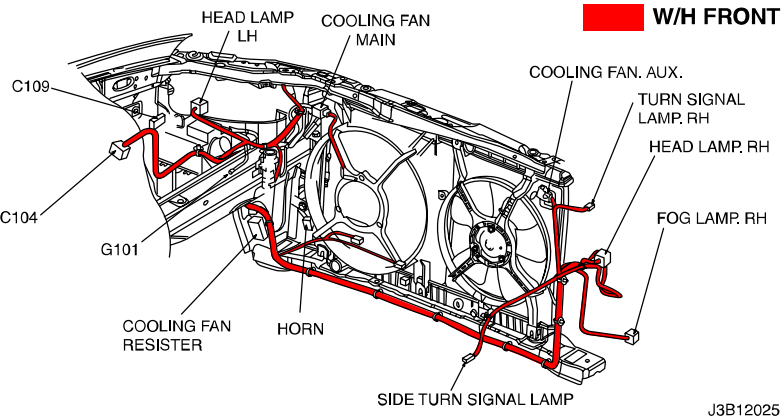


- W/H INSTRUMENT PANEL

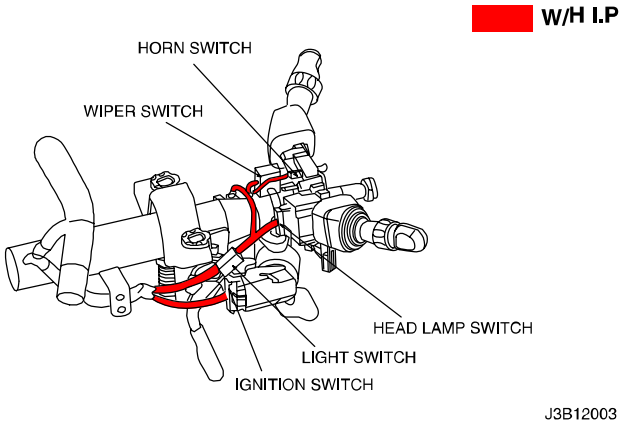


d. SPLICE PACK


S201

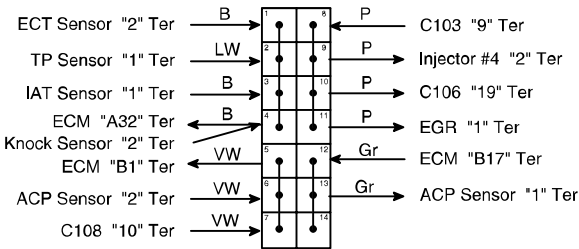


S203

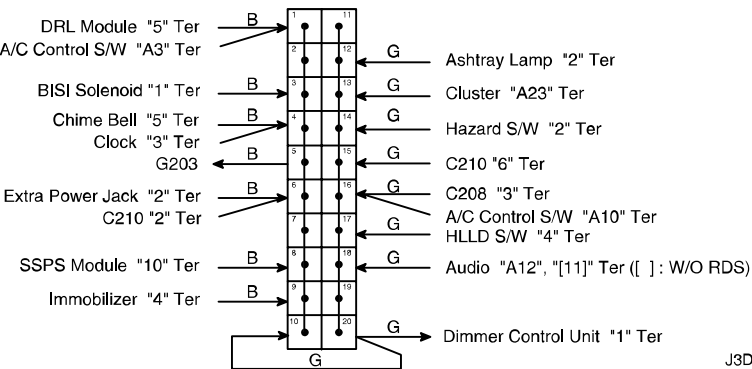

S204

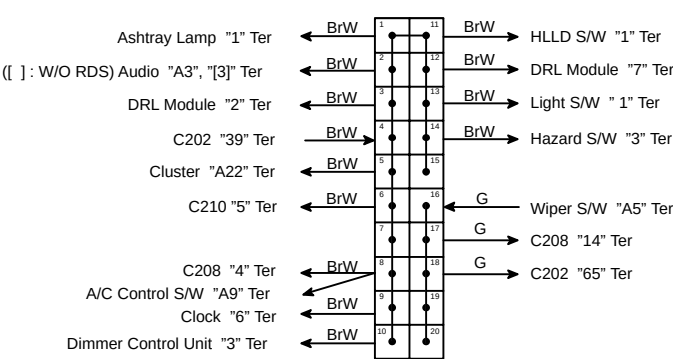

2) HATCH BACK

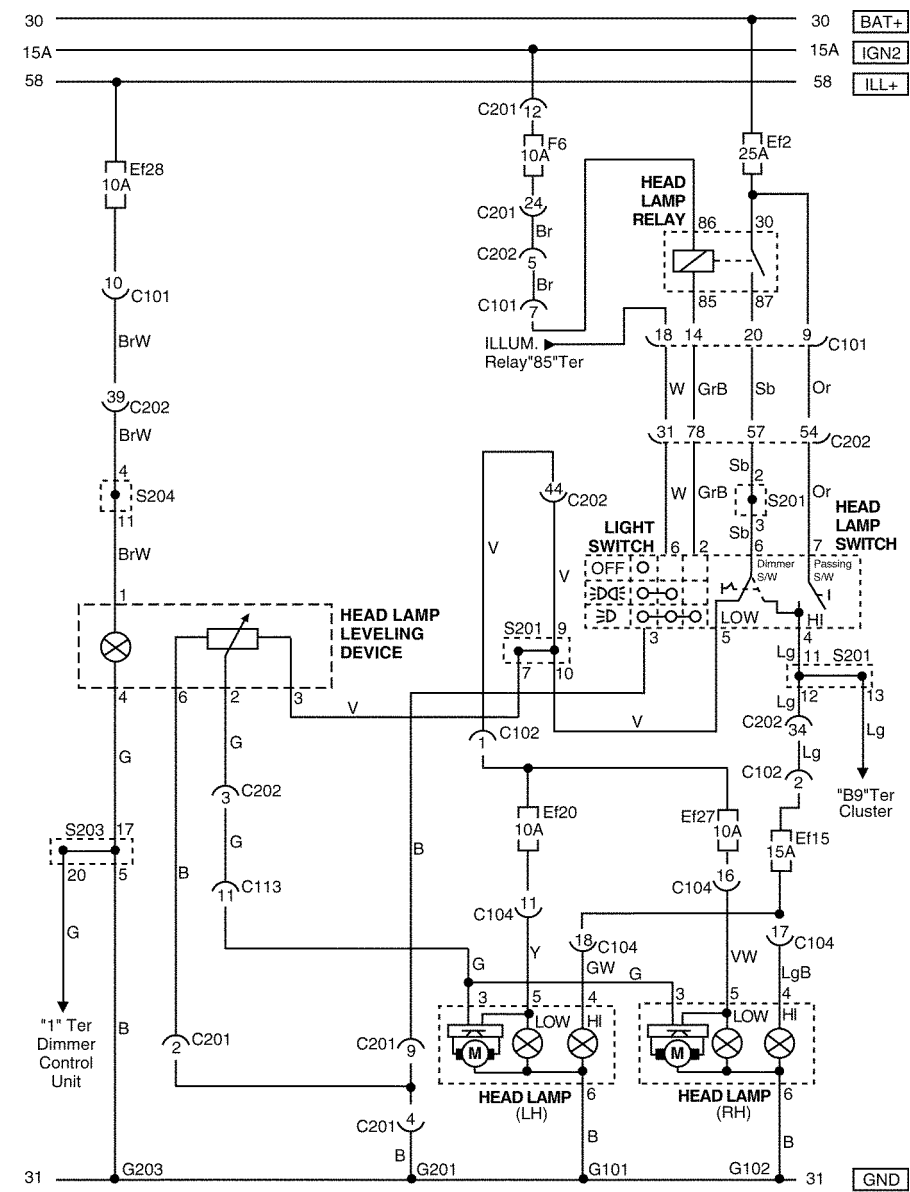


J3D15032

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S201 (Black)	I.P	Behind Cluster
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G101	Front	Behind Left Head Lamp
G102	Front	Behind Right Head Lamp
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

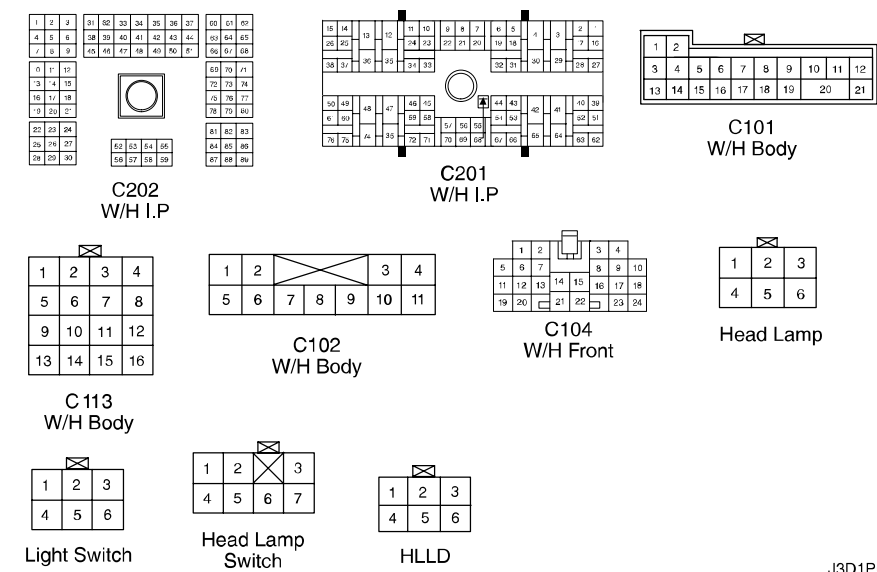


J3D1P016

c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT

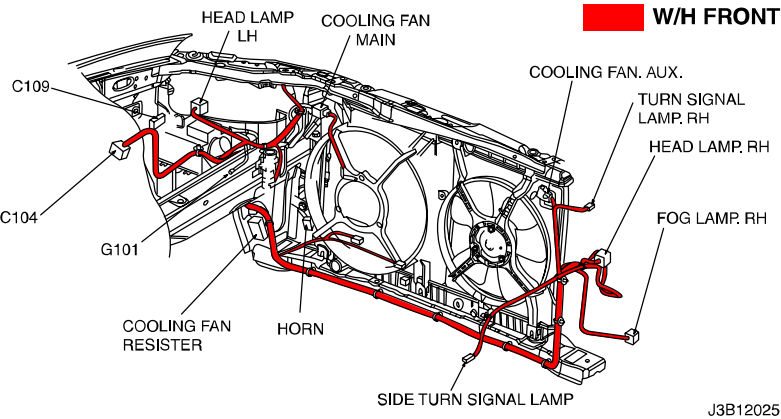


- W/H INSTRUMENT PANEL

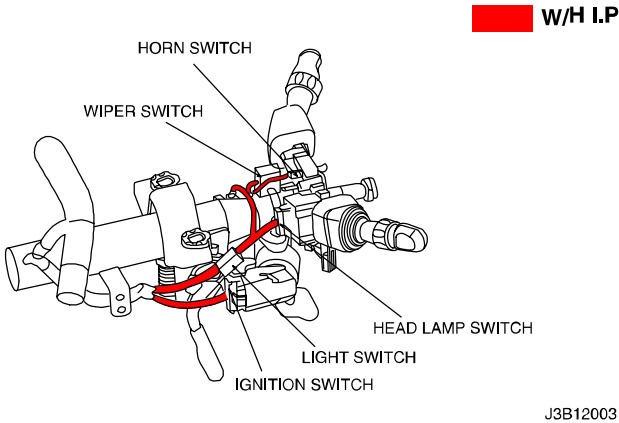


d. SPLICE PACK


S201

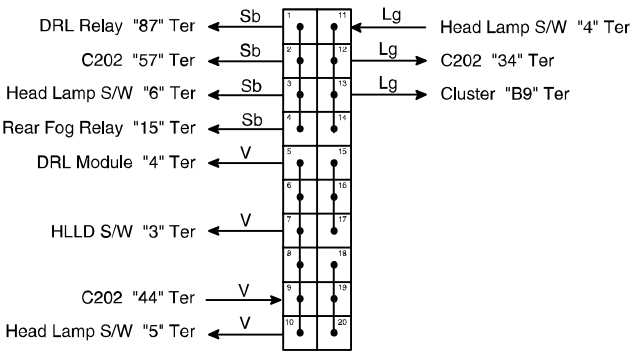

S203

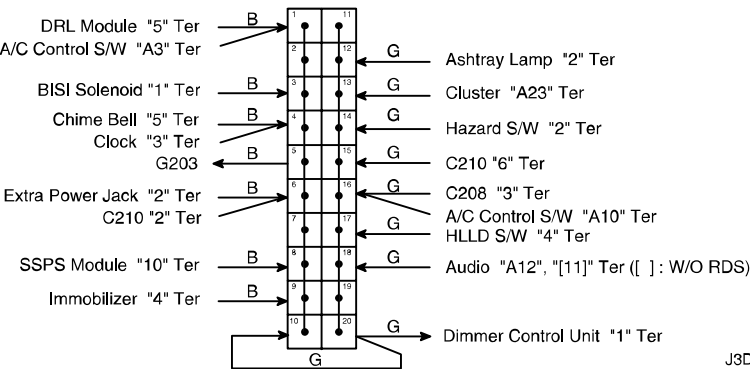


S204

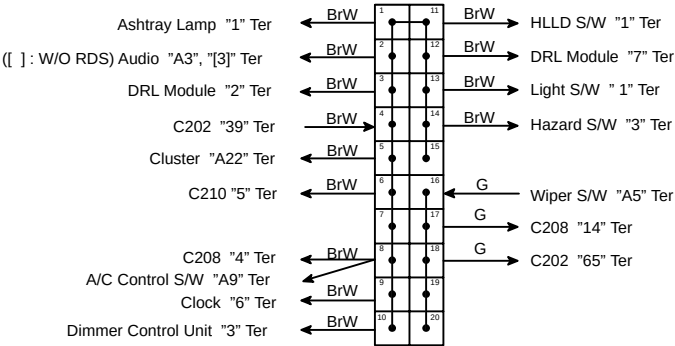

11. DRL (DAY TIME RUNNING LIGHT) CIRCUIT


1) NOTCH BACK

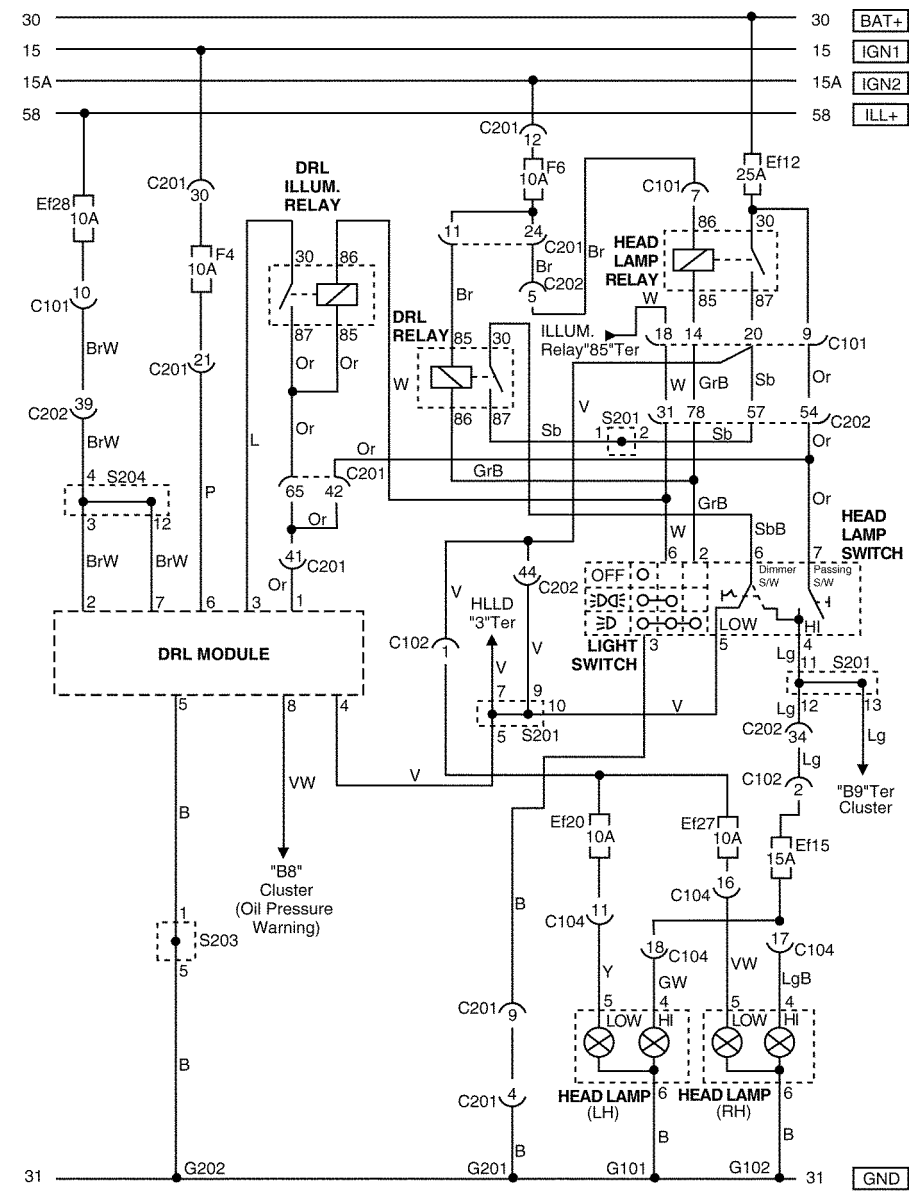

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S201 (Black)	I.P	Behind Cluster
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G101	Front	Behind Left Head Lamp
G102	Front	Behind Right Head Lamp
G201	I.P	Left I.P Fuse Block
G202	Air Bag	Behind Left Audio Bracket

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

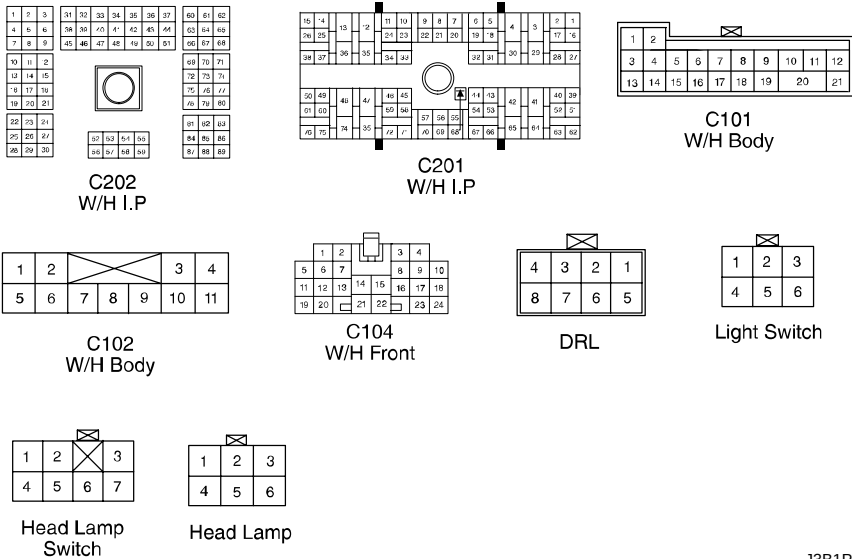


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT

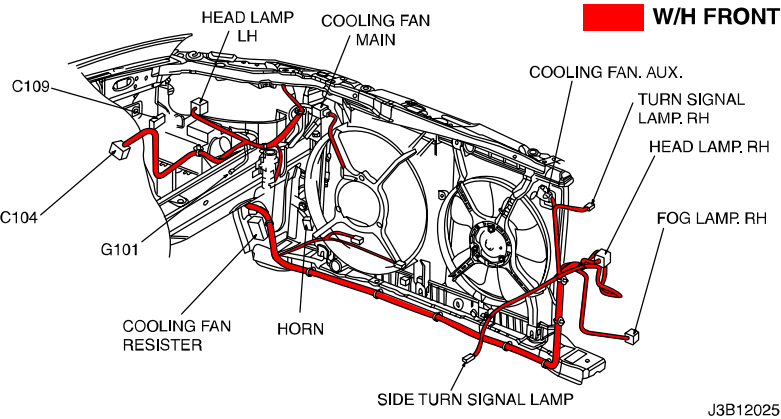


- W/H INSTRUMENT PANEL

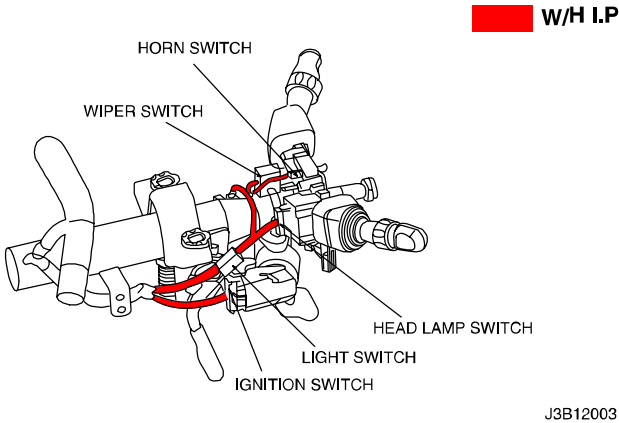


d. SPLICE PACK


S201

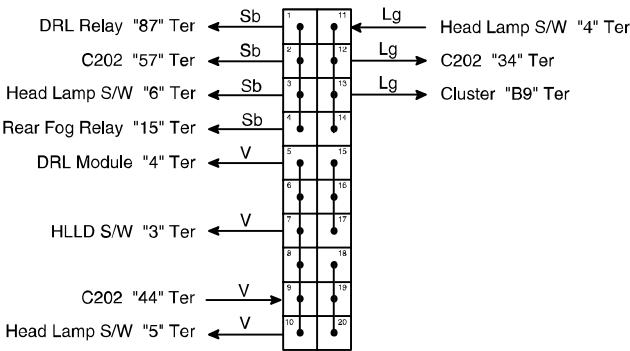


S203

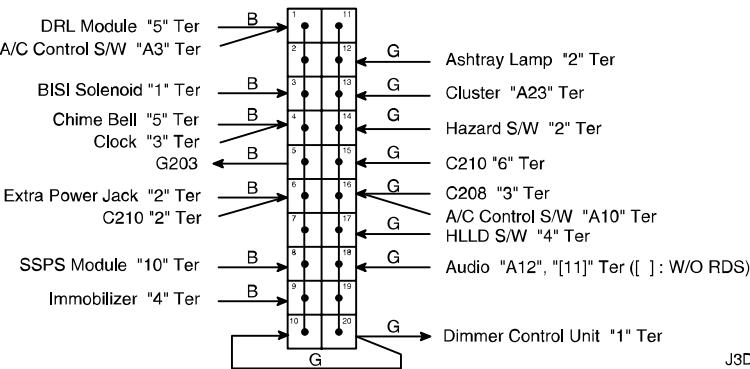

S204

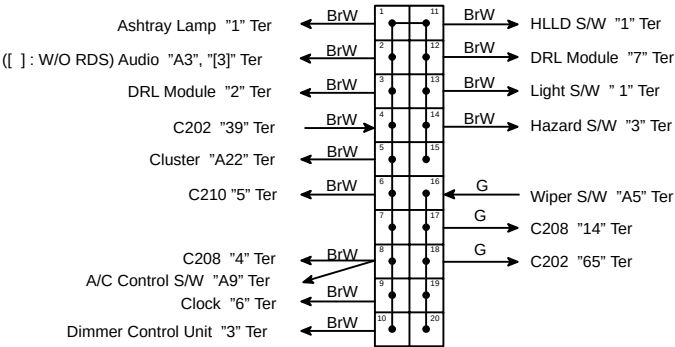


2) HATCH BACK

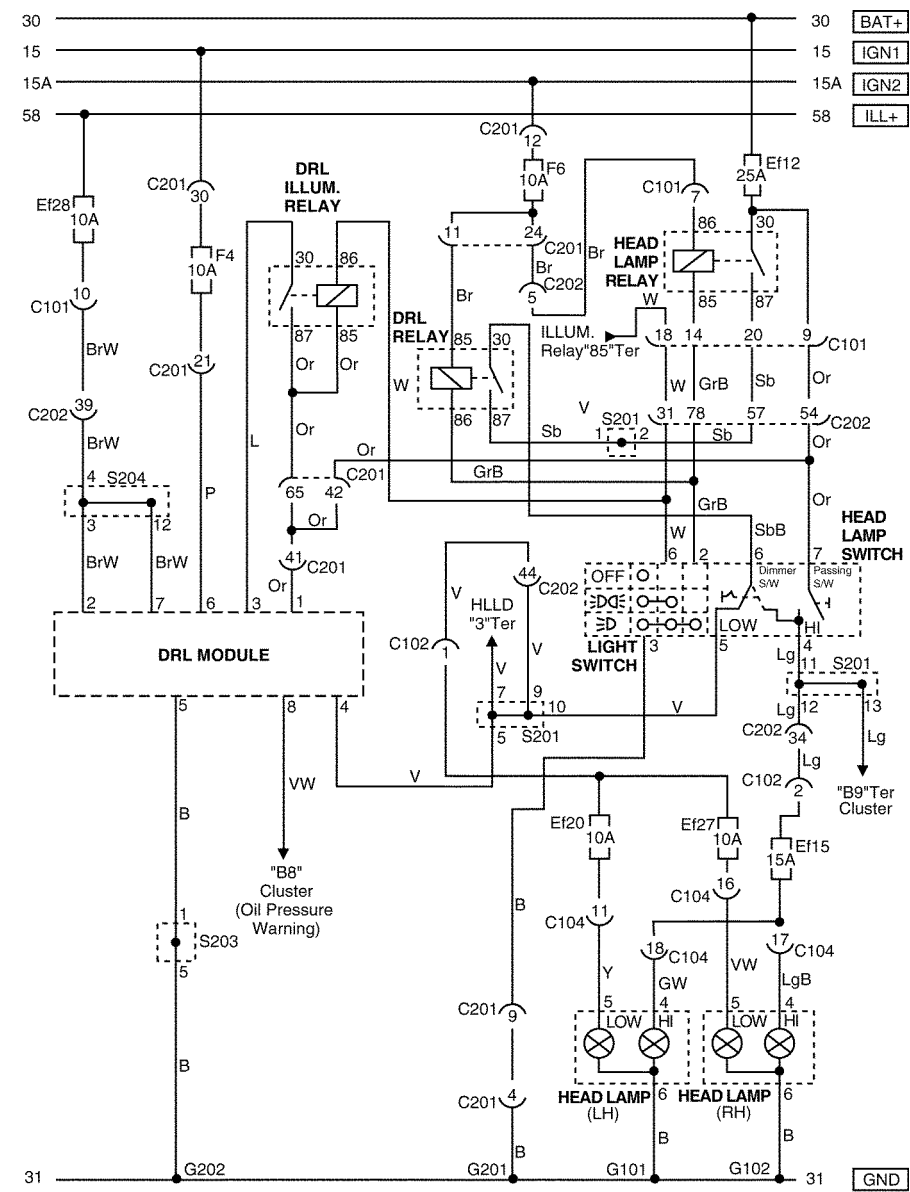

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S201 (Black)	I.P	Behind Cluster
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G101	Front	Behind Left Head Lamp
G102	Front	Behind Right Head Lamp
G201	I.P	Left I.P Fuse Block
G202	Air Bag	Behind Left Audio Bracket

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

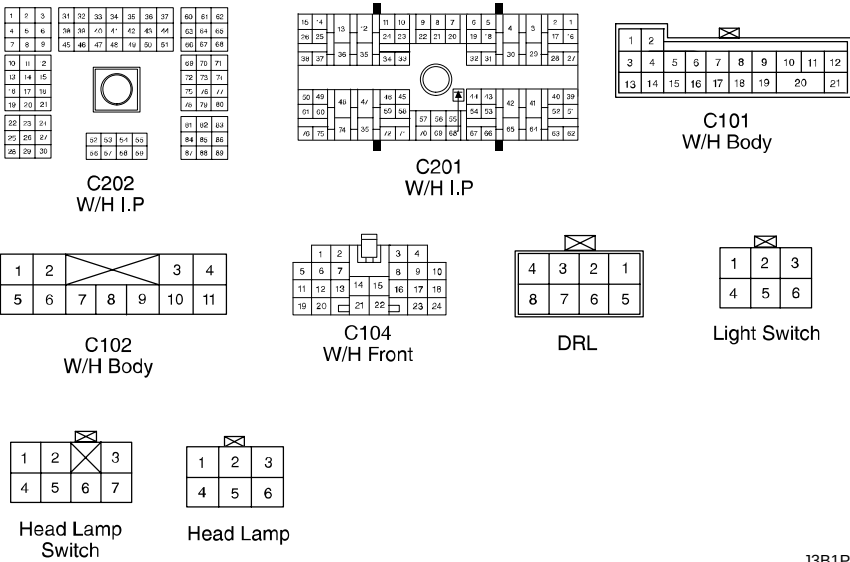


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT

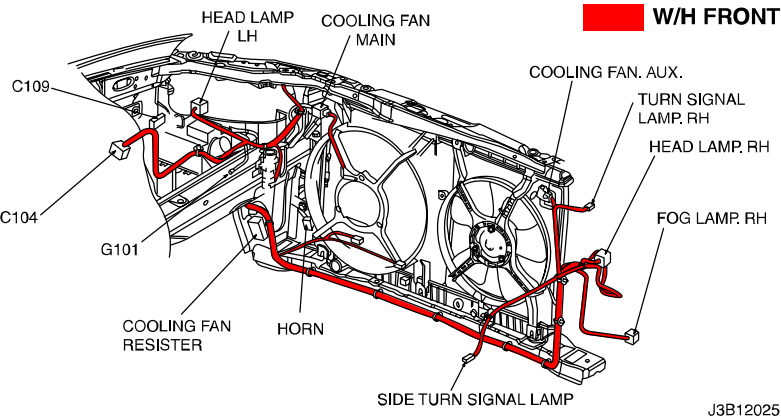


- W/H INSTRUMENT PANEL

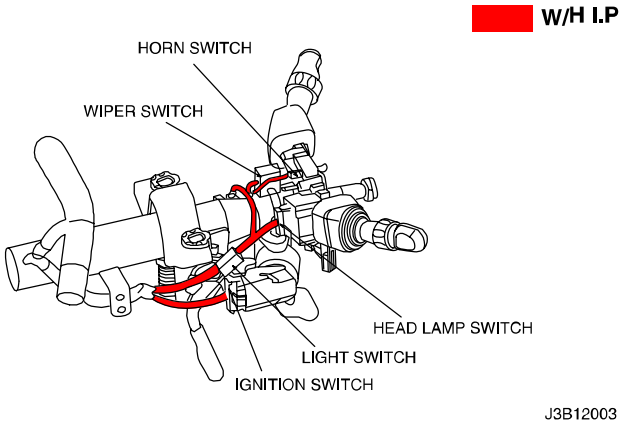


d. SPLICE PACK


S201

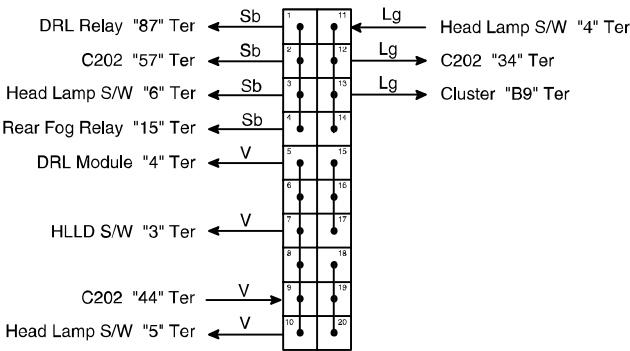

S203

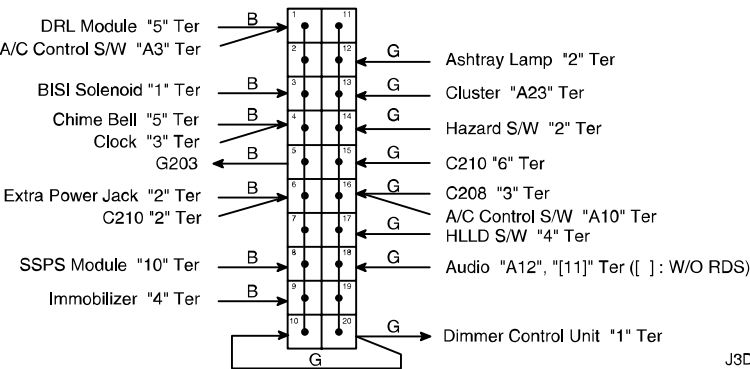


S204

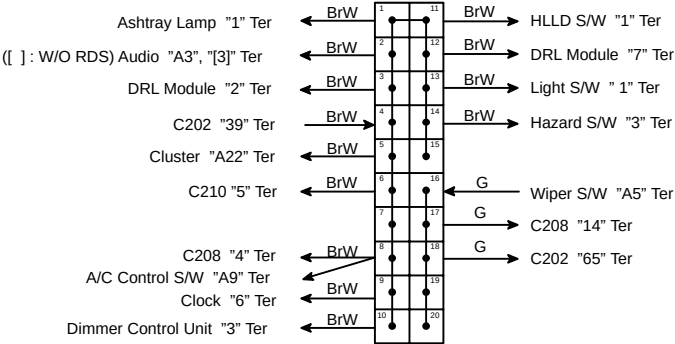

12. ILLUMINATION CIRCUIT


1) ILLUMINATION CIRCUIT – W/O DIMMER CONTROL

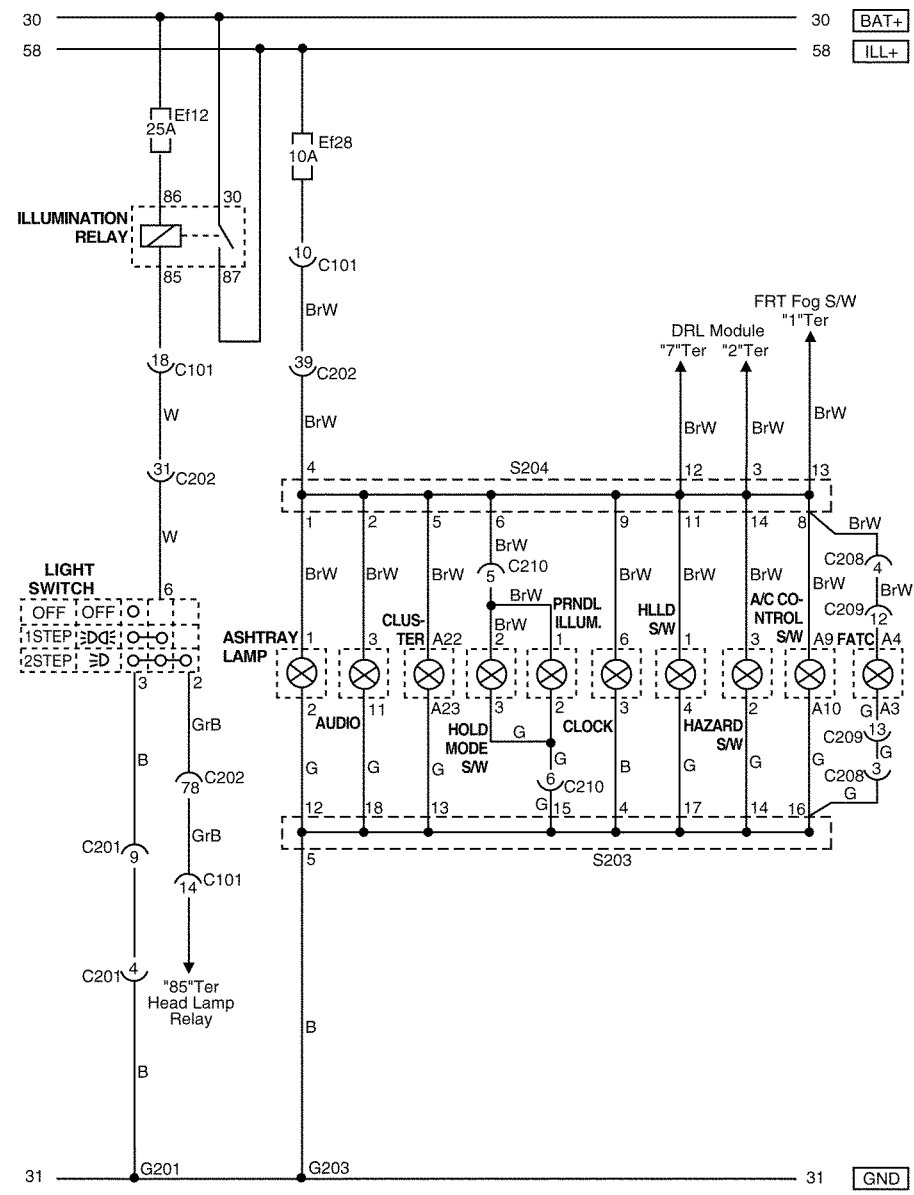

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C208 (15 Pin, White)	I.P – FATC	Behind Glove Box
C209 (20 Pin, Black)	FATC – FATC.Aux	Between Heater Core and Evaporator Core
C210 (6 Pin, White)	I.P – Console	Below Console Box
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

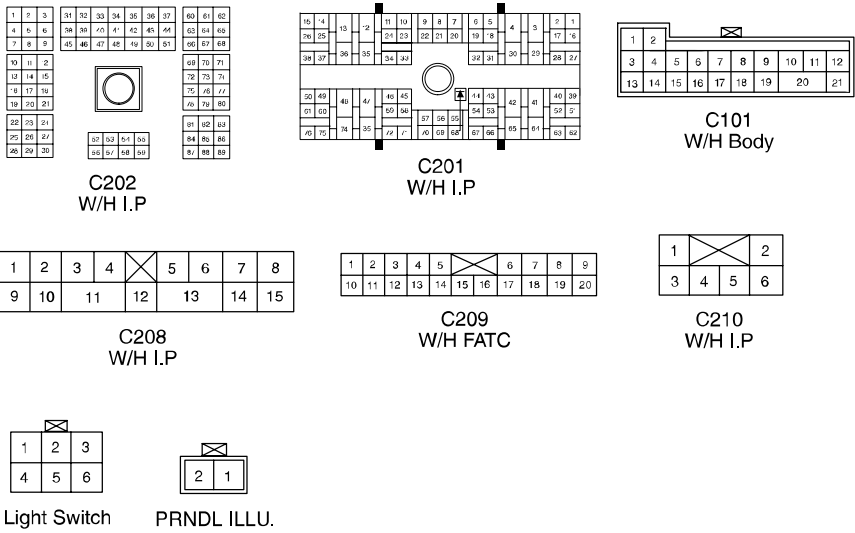


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

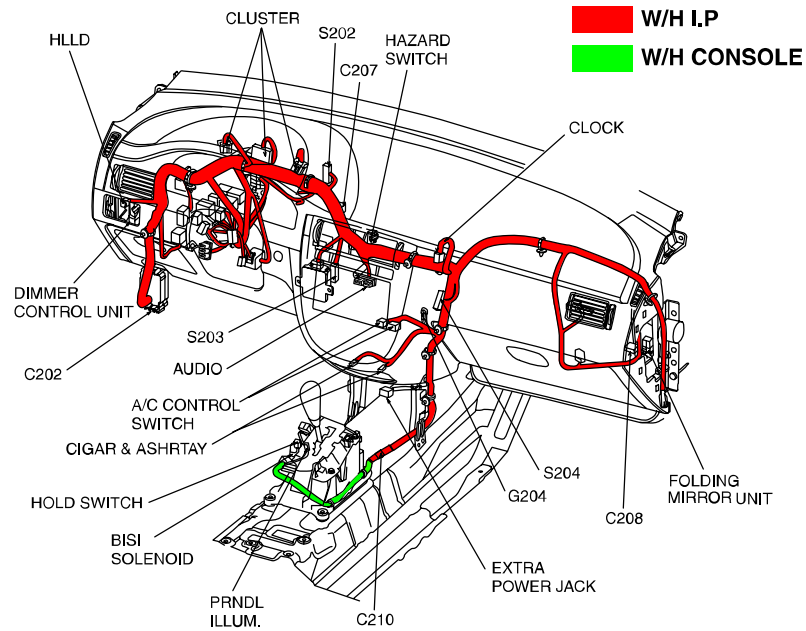


d. SPLICE PACK


S203

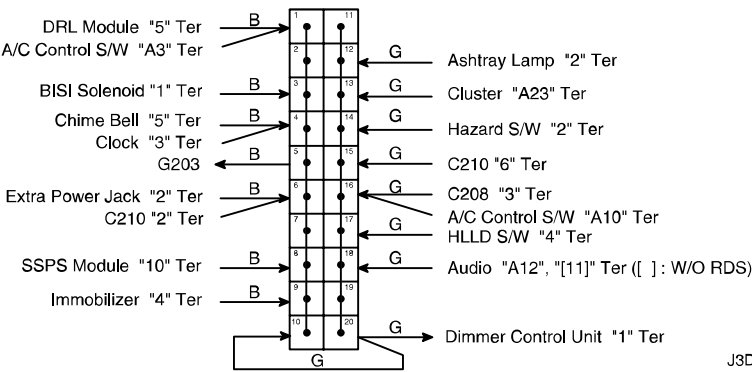

S204

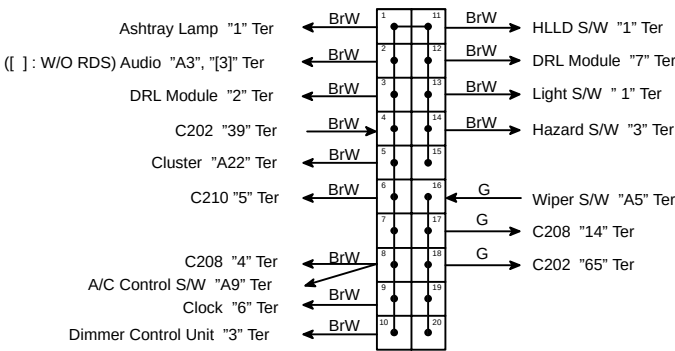


2) ILLUMINATION CIRCUIT – W/ DIMMER CONTROL

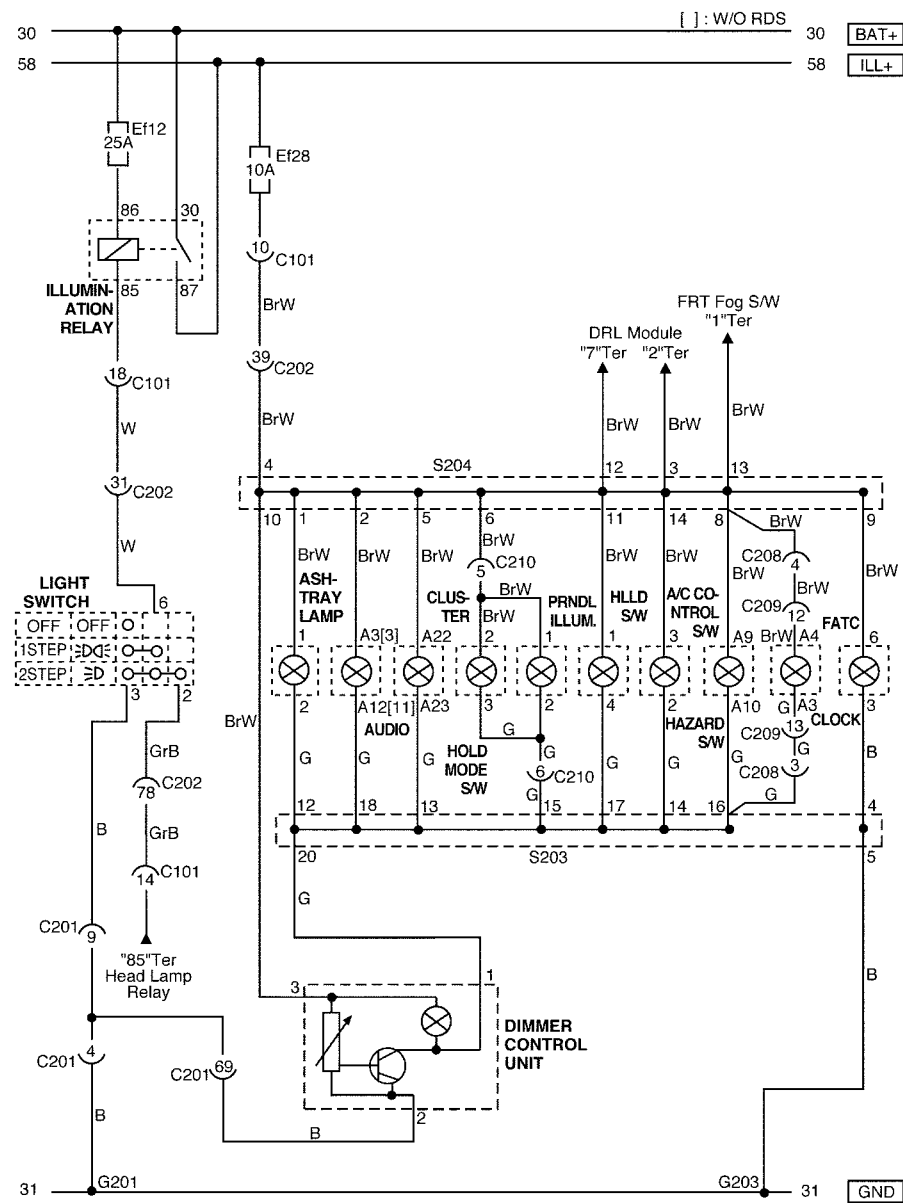

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C208 (15 Pin, White)	I.P – FATC	Behind Glove Box
C209 (20 Pin, Black)	FATC – FATC.Aux	Between Heater Core and Evaporator Core
C210 (6 Pin, White)	I.P – Console	Below Console Box
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

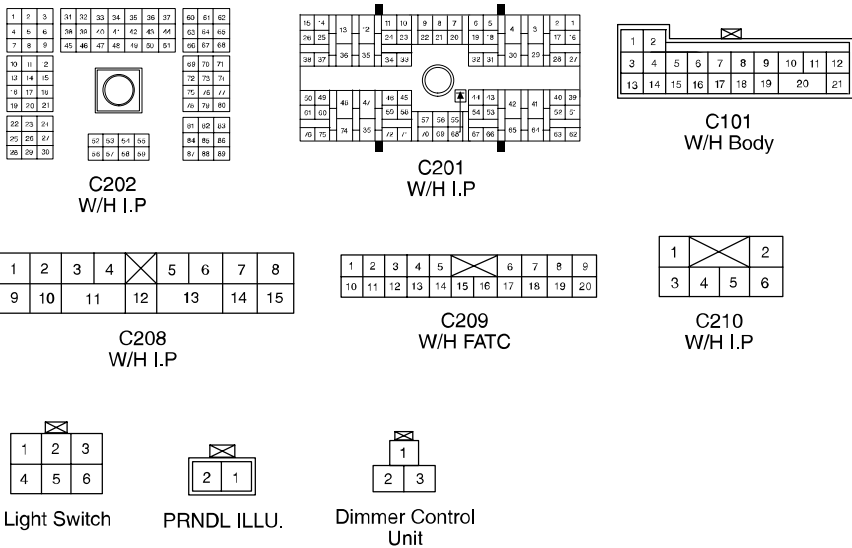


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

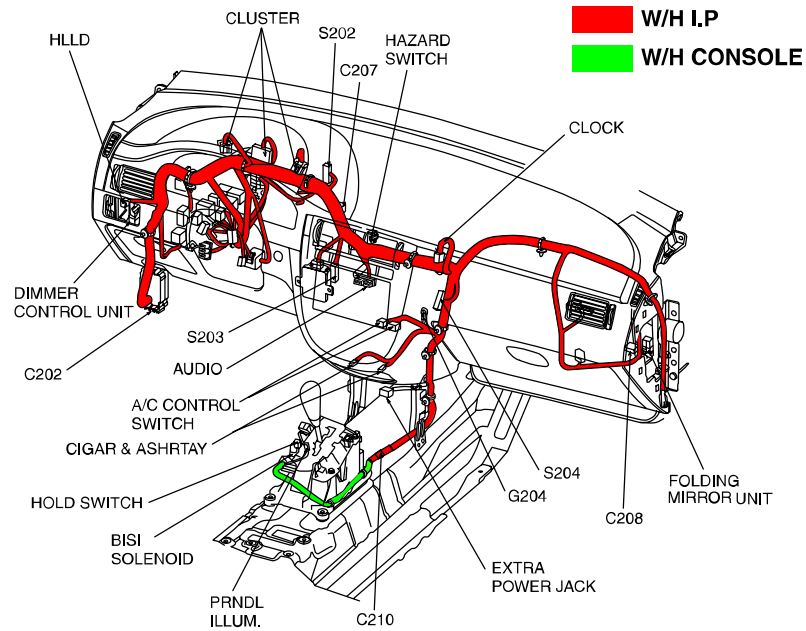


d. SPLICE PACK


S203

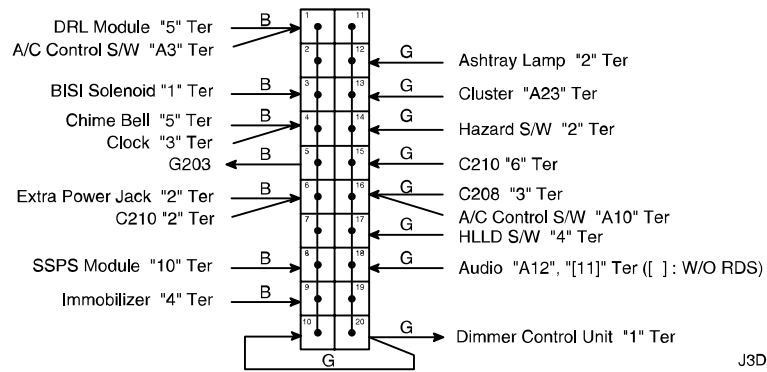

S204

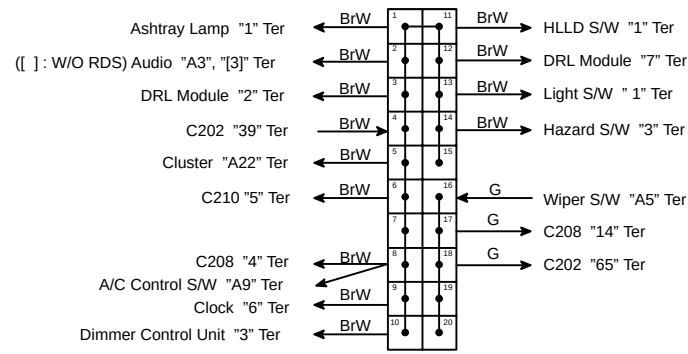


3) LAMP (LICENSE PLATE & FRONT/REAR POSITION) CIRCUIT : NOTCH BACK

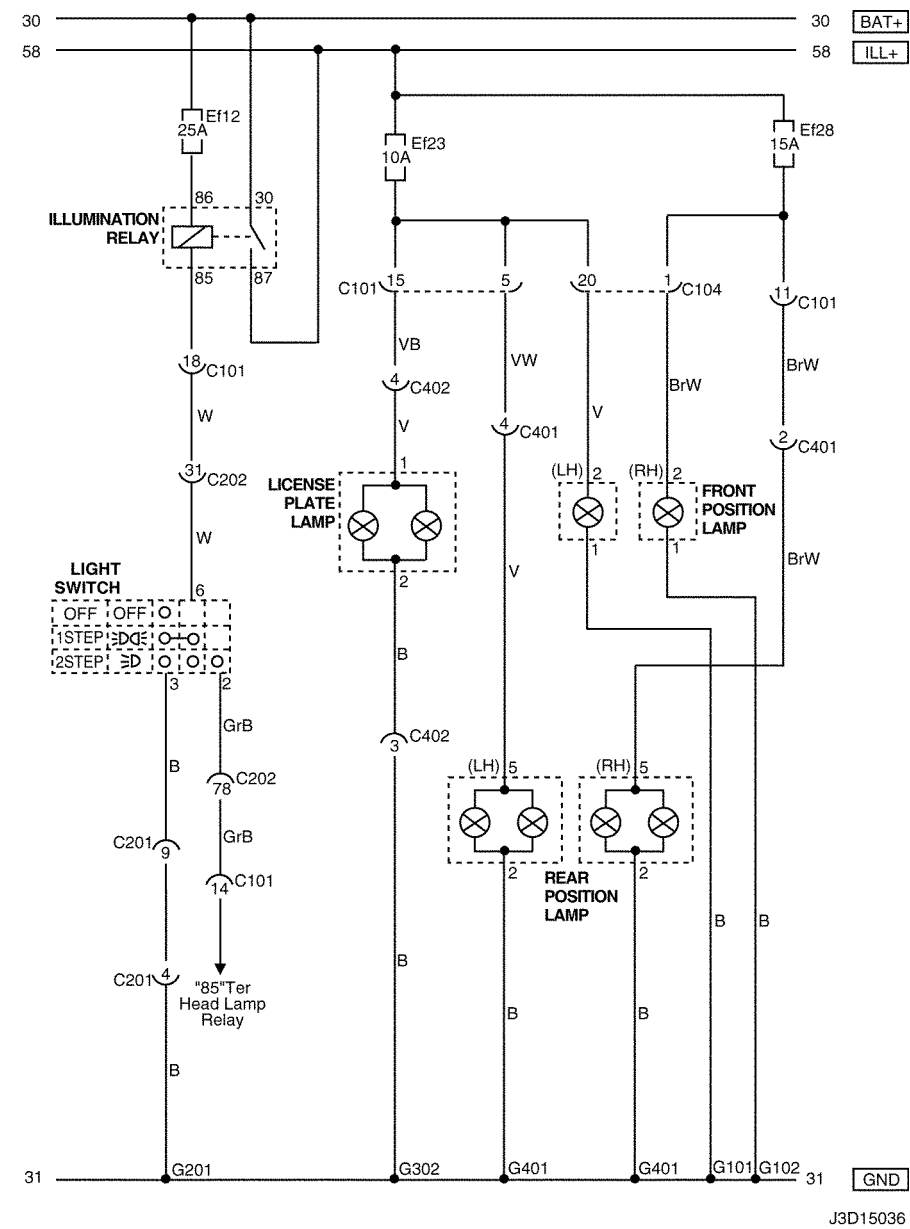

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C401 (8 Pin, White)	Trunk – Body	Inside Right Trunk Side Cover
C402 (6 Pin, White)	Trunk LID – Body	Inside Right Trunk Side Cover
G101	Front	Behind Left Head Lamp
G102	Front	Behind Right Head Lamp
G201	I.P	Left I.P Fuse Block
G302	Body	Below Left C Pillar
G401	Trunk	Center Trunk Lower Back Panel

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

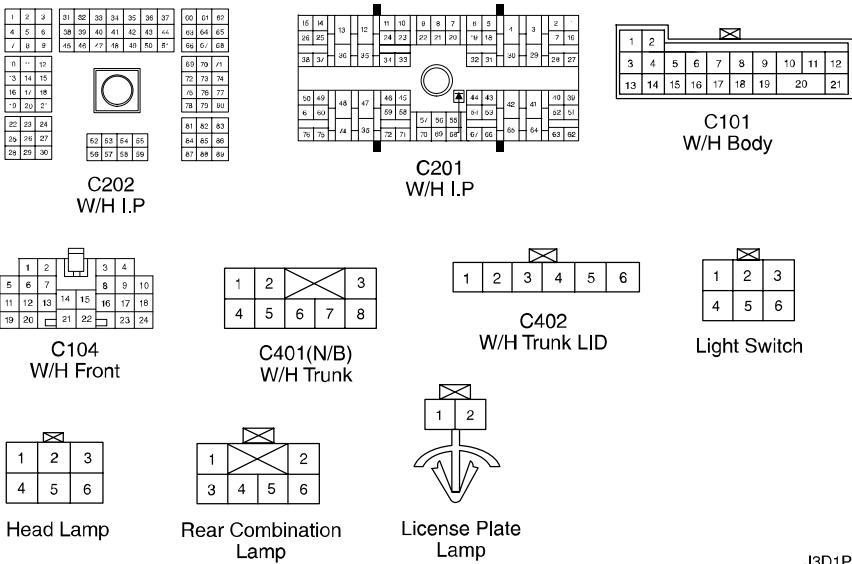


c. POSITION OF CONNECTORS AND GROUNDS


- W/H FRONT

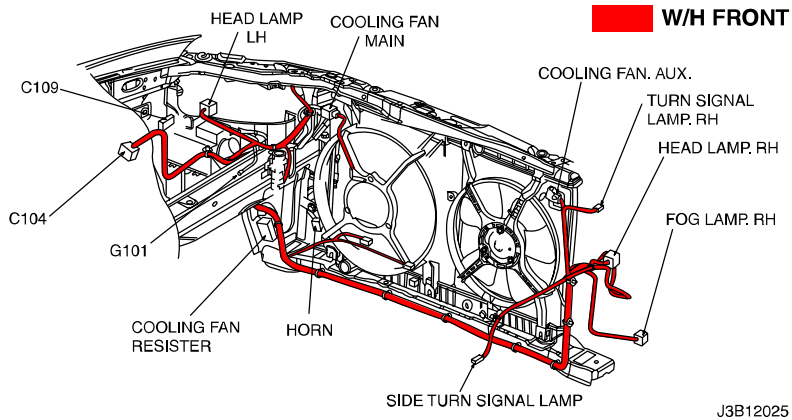


- W/H TRUNK

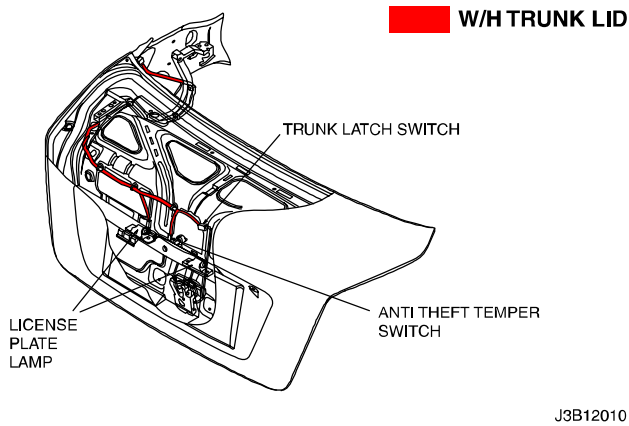

- W/H BODY

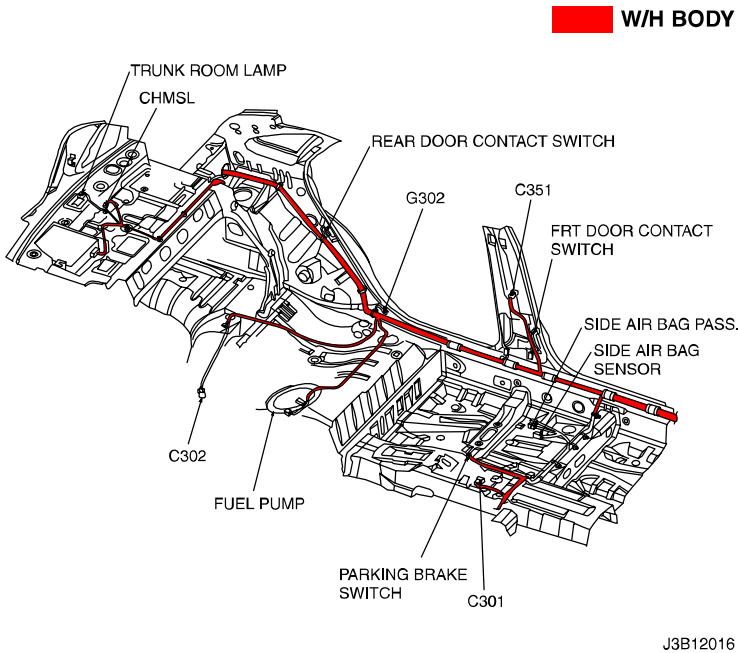

4) LAMP (LICENSE PLATE & FRONT/REAR POSITION) CIRCUIT : HATCH BACK

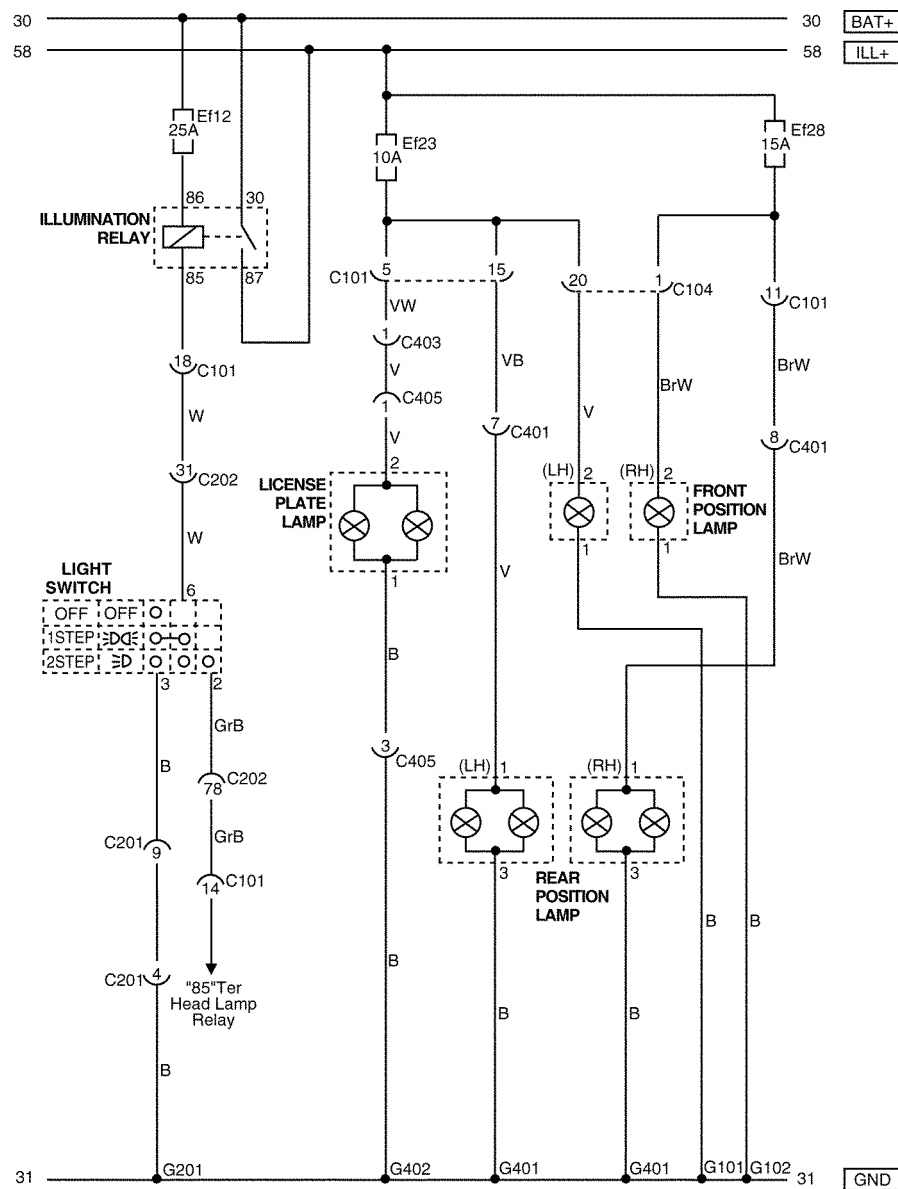


J3D15037

a. CONNECTOR INFORMATION

CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C401 (8 Pin, White)	Trunk – Body	Inside Right Trunk Side Cover
C403 (6 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C405 (8 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
G101	Front	Behind Left Head Lamp
G102	Front	Behind Right Head Lamp
G201	I.P	Left I.P Fuse Block
G302	Body	Below Left C Pillar
G401	Trunk	Center Trunk Lower Back Panel
G402	T/Gate. EXT	Inside Driver C Pillar


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

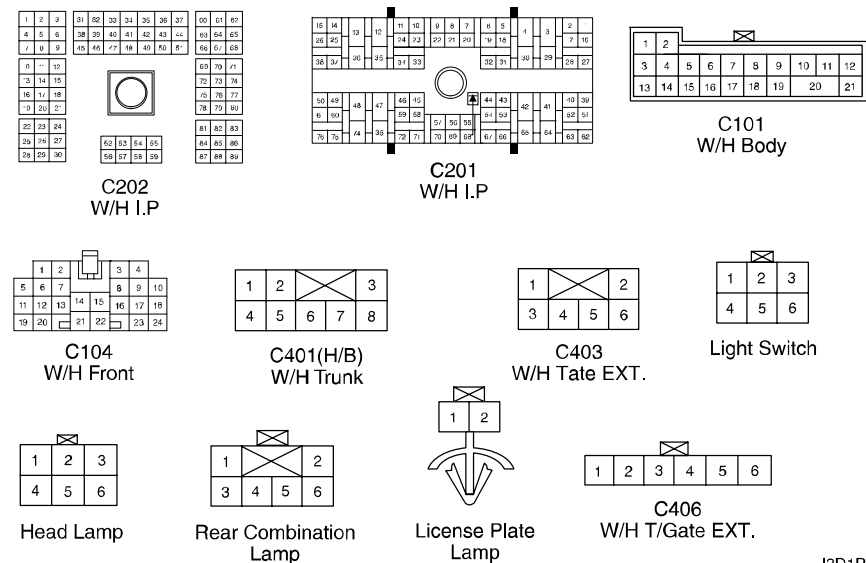


J3D1P018

c. POSITION OF CONNECTORS AND GROUNDS


- W/H FRONT

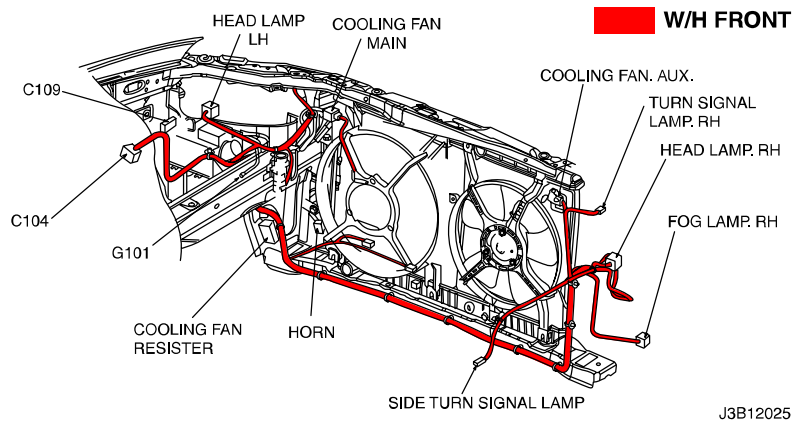


- W/H TAIL GATE

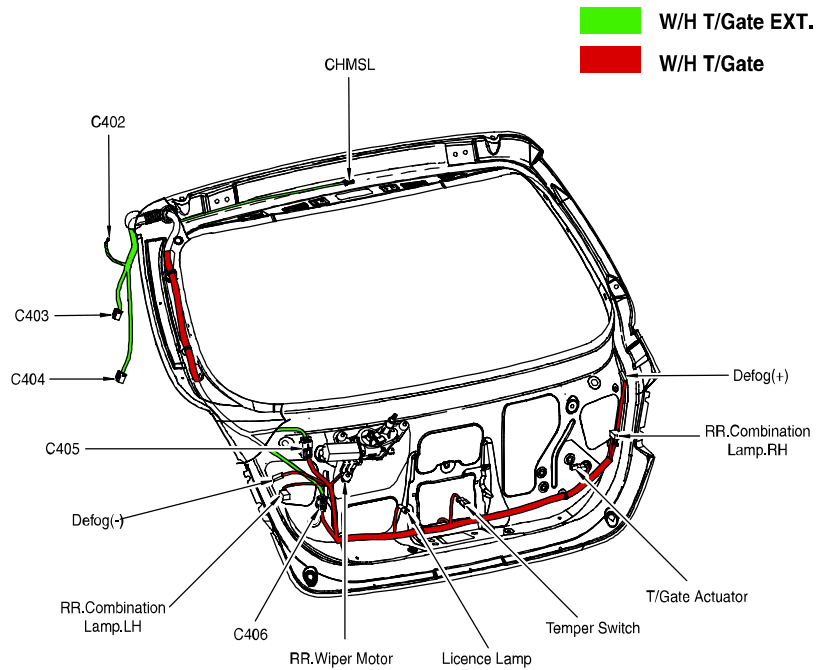

- W/H TRUNK (H/B)

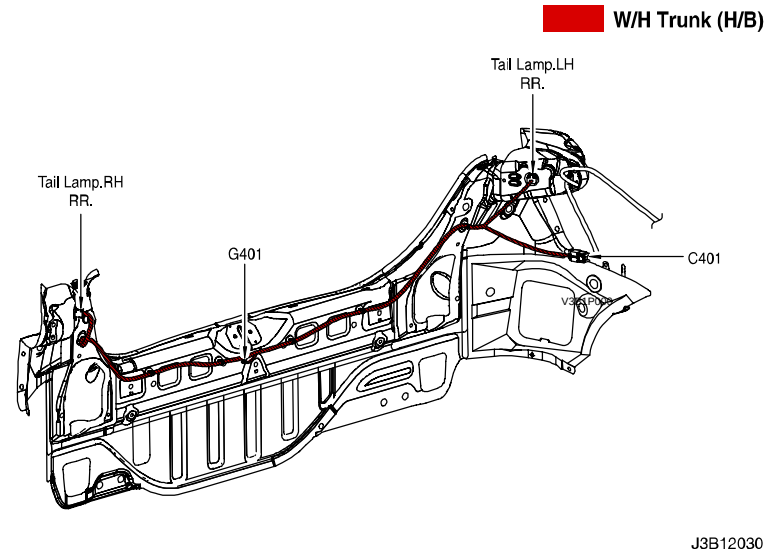


- W/H BODY

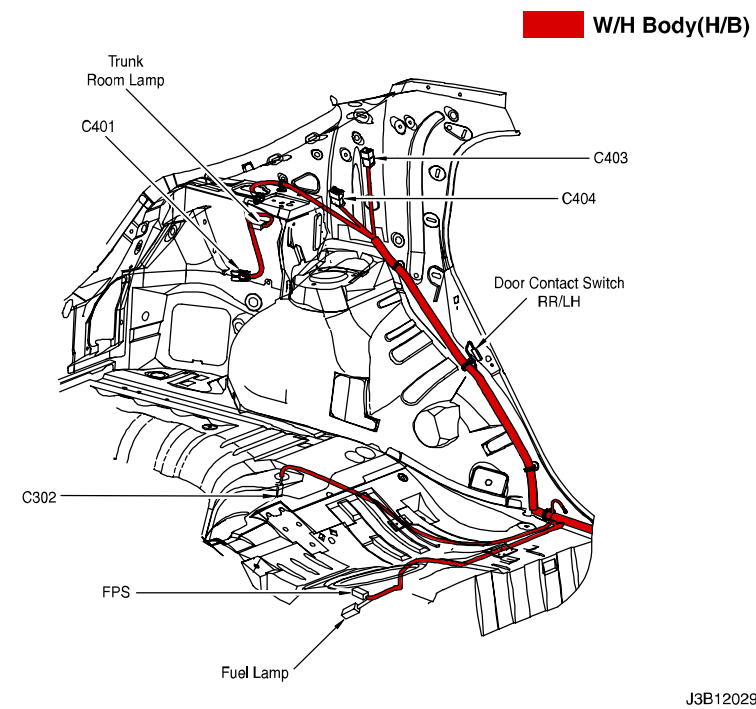

13. FRONT & REAR FOG LAMP CIRCUIT

1) NOTCH BACK

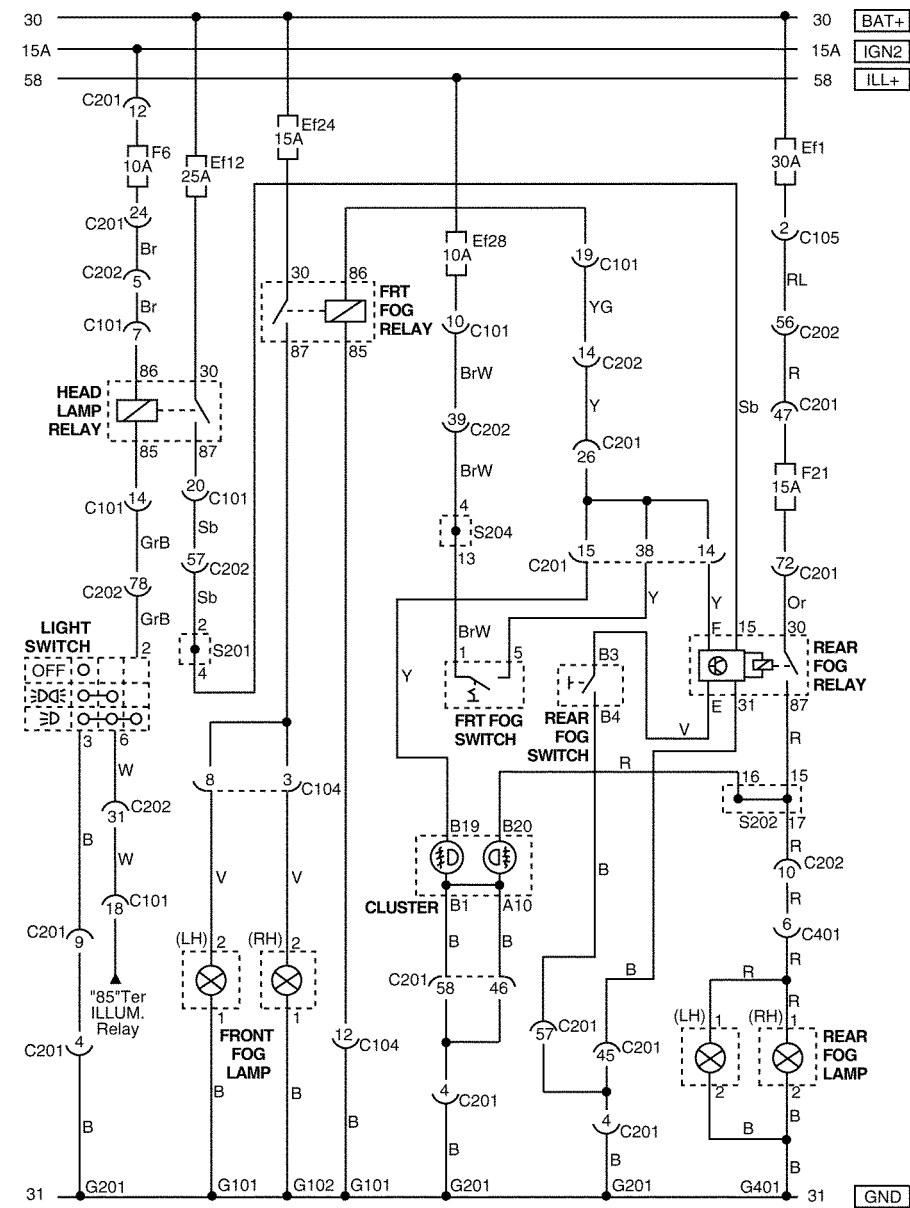


J3D15038

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C401 (8 Pin, White)	Trunk – Body	Inside Right Trunk Side Cover
S201 (Black)	I.P	Behind Cluster
S202 (Black)	I.P	Behind Cluster
S204 (Magenta)	I.P	Behind Audio Mounting
G101	Front	Behind Left Head Lamp
G102	Front	Behind Right Head Lamp
G201	I.P	Left I.P Fuse Block
G401	Trunk	Center Trunk Lower Back Panel


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

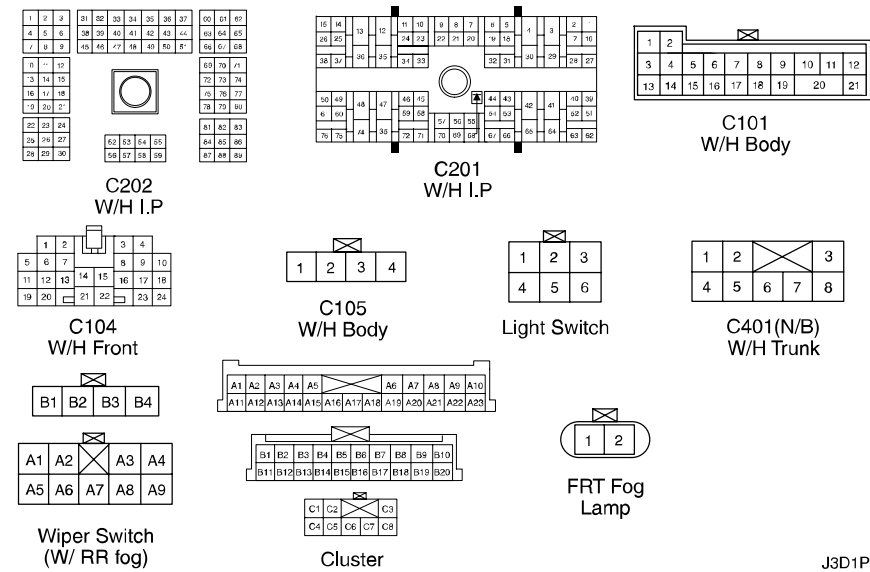

J3D1P019


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TRUNK LID

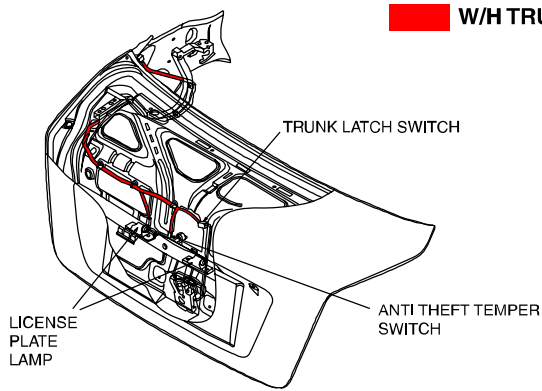

J3B12010


- W/H INSTRUMENT PANEL

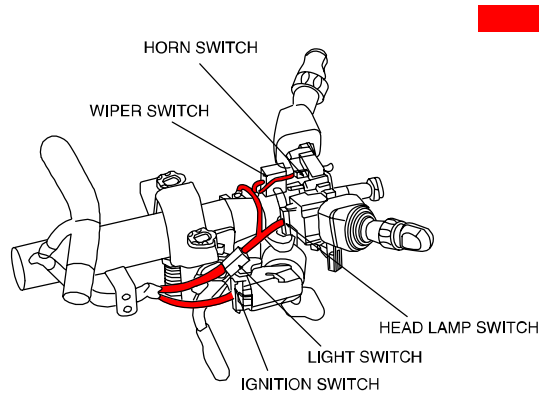

J3B12003


d. SPLICE PACK

S201

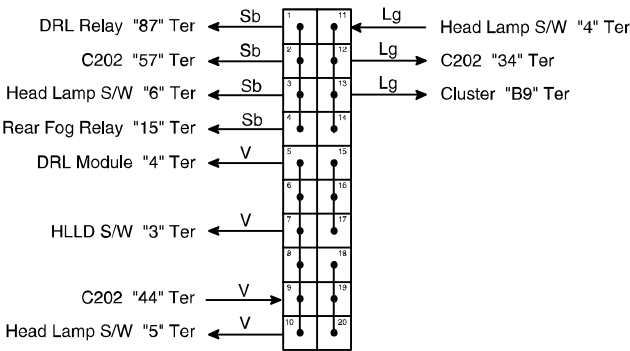


J3D1S002

S202

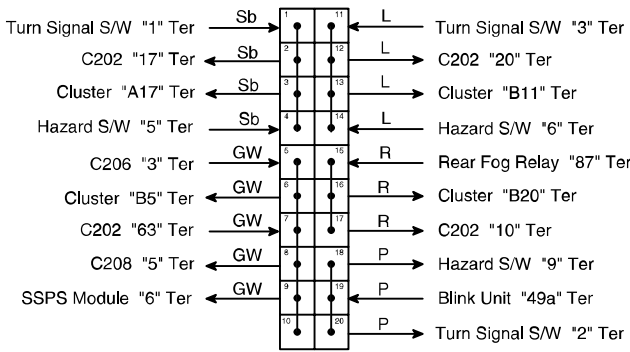

J3D1S003

S204

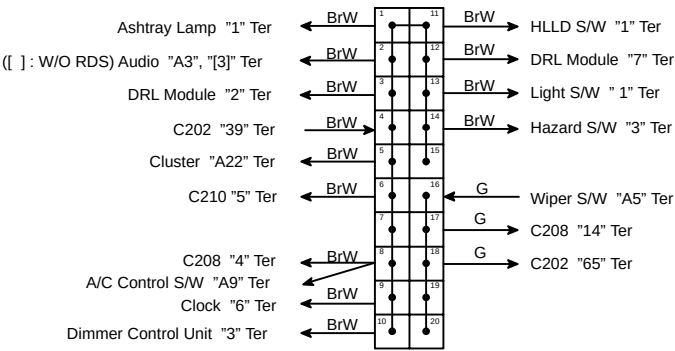

J3B1S006



CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C403 (6 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C405 (8 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
C406 (6 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
S201 (Black)	I.P	Behind Cluster
S202 (Black)	I.P	Behind Cluster
S204 (Magenta)	I.P	Behind Audio Mounting
G101	Front	Behind Left Head Lamp
G102	Front	Behind Right Head Lamp
G201	I.P	Left I.P Fuse Block
G402	T/Gate. EXT	Inside Driver C Pillar

C101 W/H Body

C201 W/H I.P.

C104 W/H Front

C105 W/H Body

C403 W/H Tate EXT.

C405 W/H T/Gate EXT.

FRT Fog Lamp


Rear Combination Lamp

Wiper Switch (W/ RR fog)


Cluster

c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

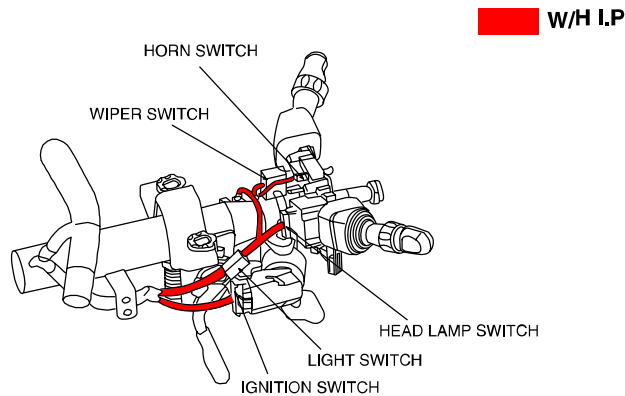


- W/H TAIL GATE

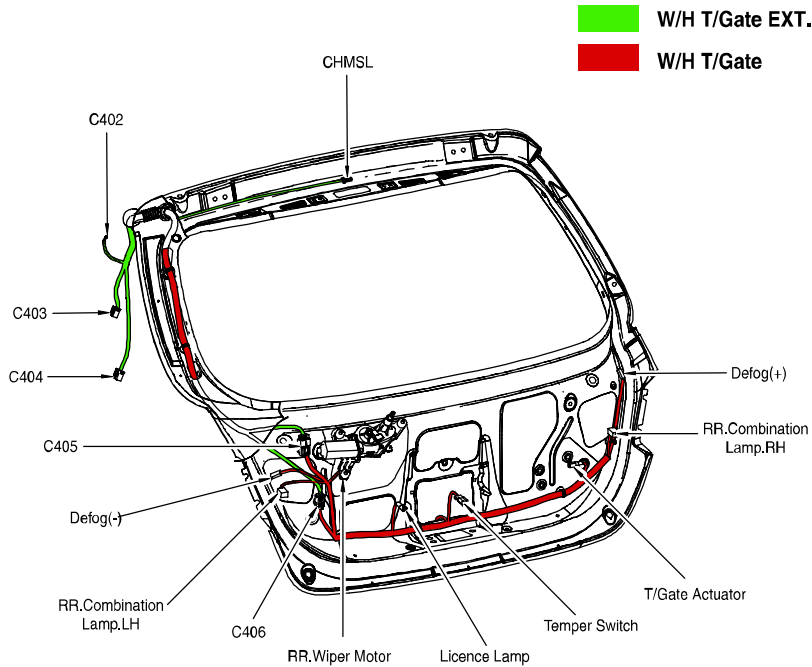


d. SPLICE PACK

S201

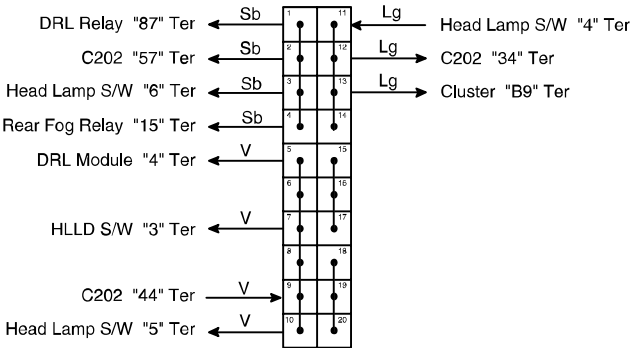


J3D1S002

S202

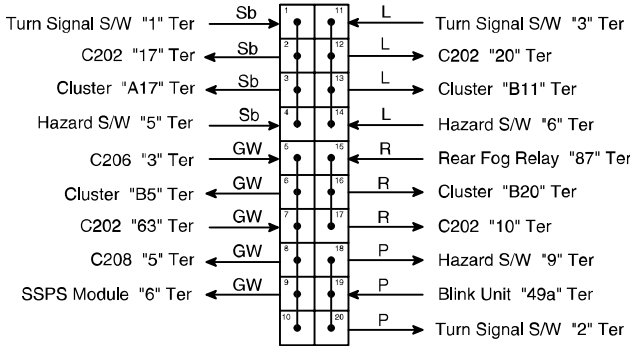

J3D1S003


S204

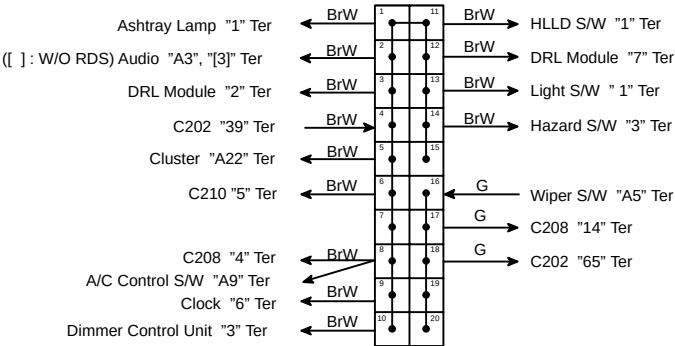

J3B1S006

14. HAZARD & TURN SIGNAL LAMP CIRCUIT

1) NOTCH BACK

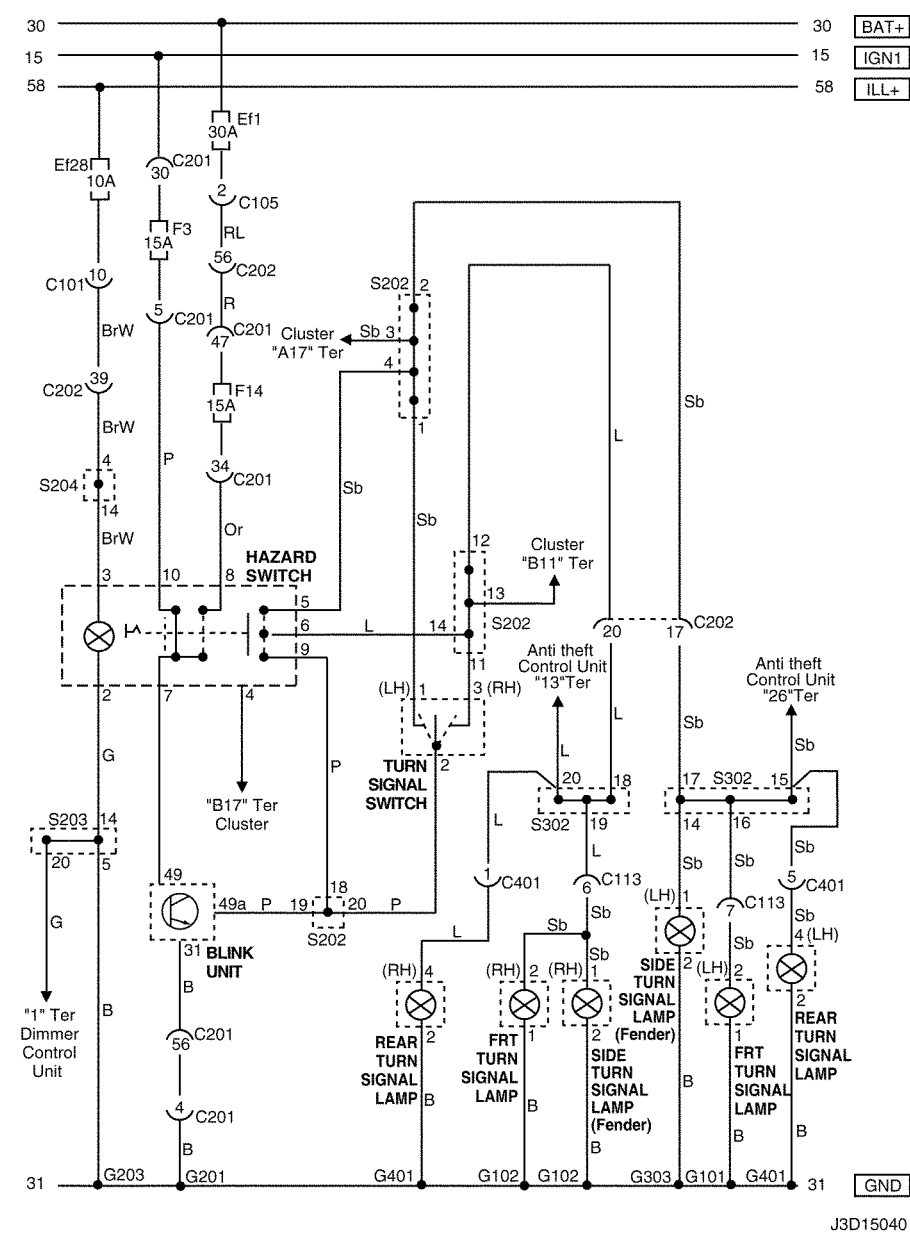


J3D15040

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C401 (8 Pin, White)	Trunk – Body	Inside Right Trunk Side Cover
S202 (Black)	I.P	Behind Cluster
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
S302 (Brown)	Body	Left Driver Leg Room
G101	Front	Behind Left Head Lamp
G102	Front	Behind Right Head Lamp
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket
G303	Body	Below Left Driver Leg Room
G401	Trunk	Center Trunk Lower Back Panel


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

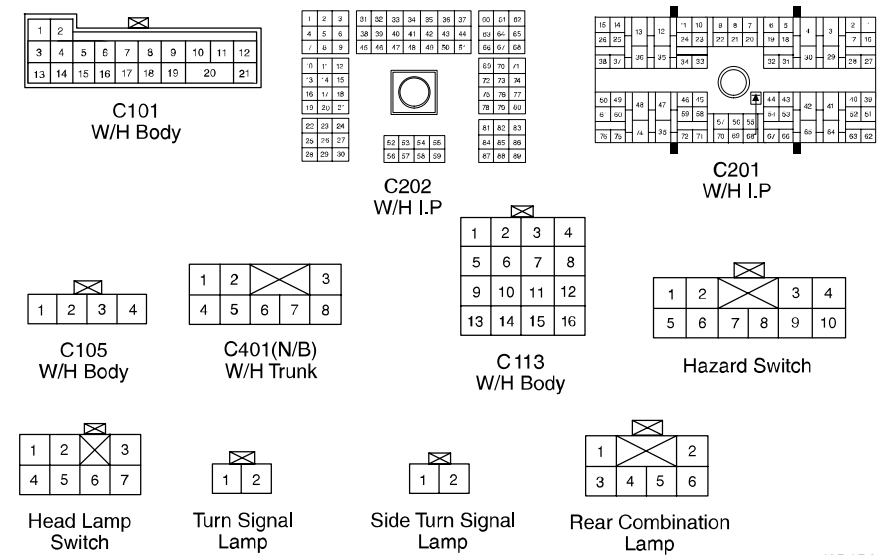

J3D1P021


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT

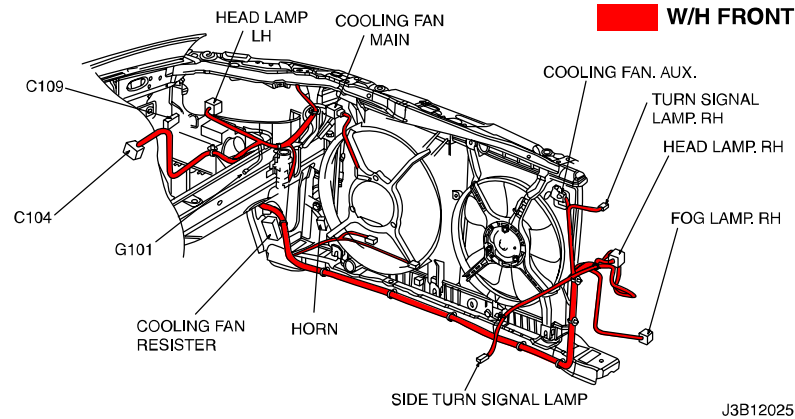


d. SPLICE PACK


S202

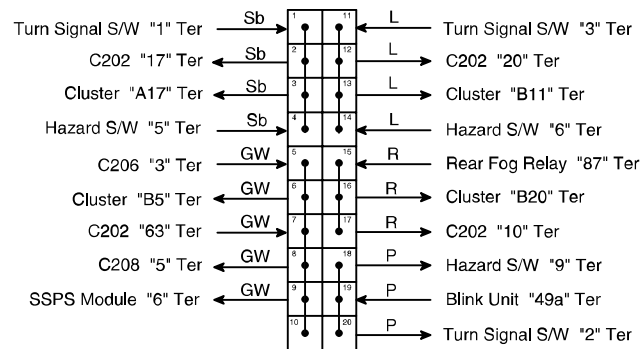


S203

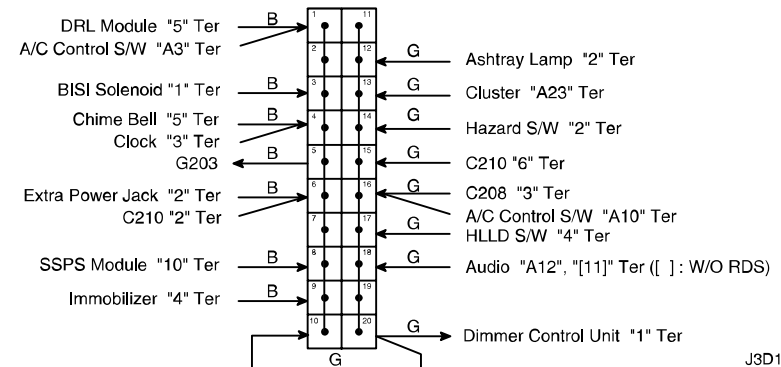


S204

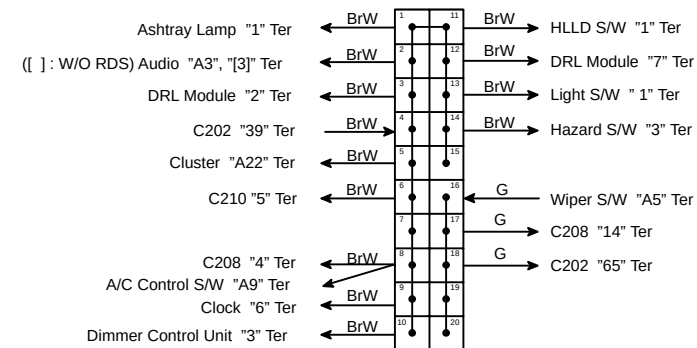

S302

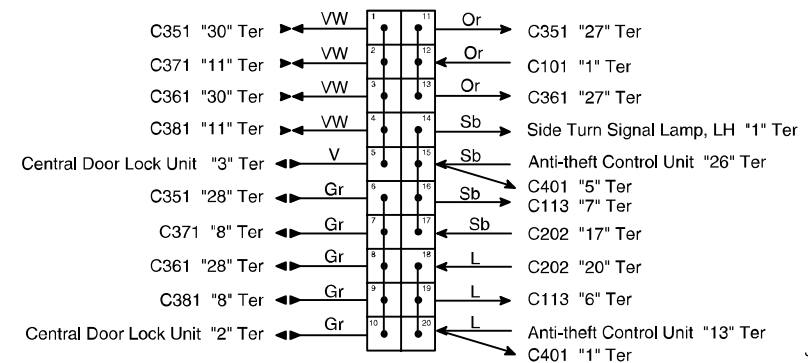


2) HATCH BACK

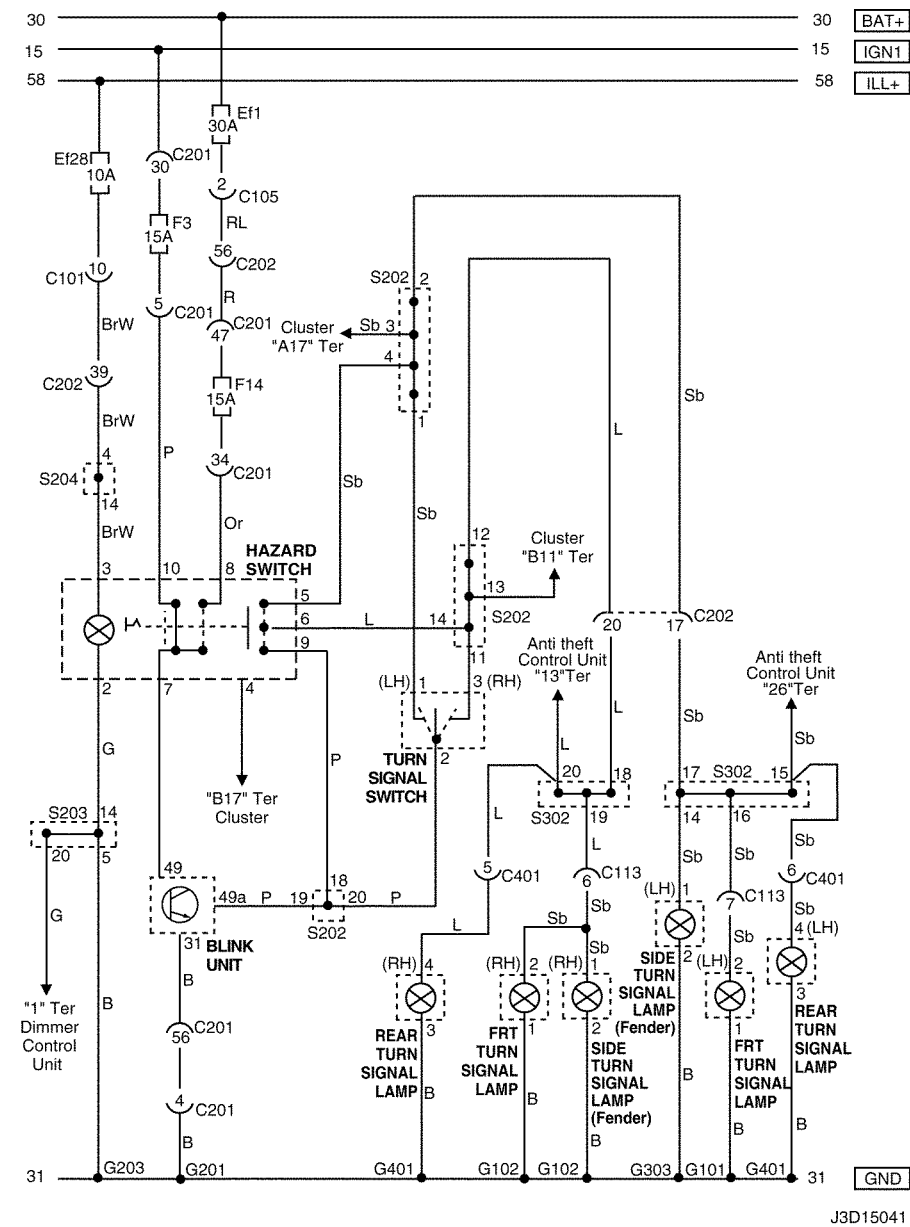

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C401 (8 Pin, White)	Trunk – Body	Inside Right Trunk Side Cover
S202 (Black)	I.P	Behind Cluster
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
S302 (Brown)	Body	Left Driver Leg Room
G101	Front	Behind Left Head Lamp
G102	Front	Behind Right Head Lamp
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket
G303	Body	Below Left Driver Leg Room
G401	Trunk	Center Trunk Lower Back Panel

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

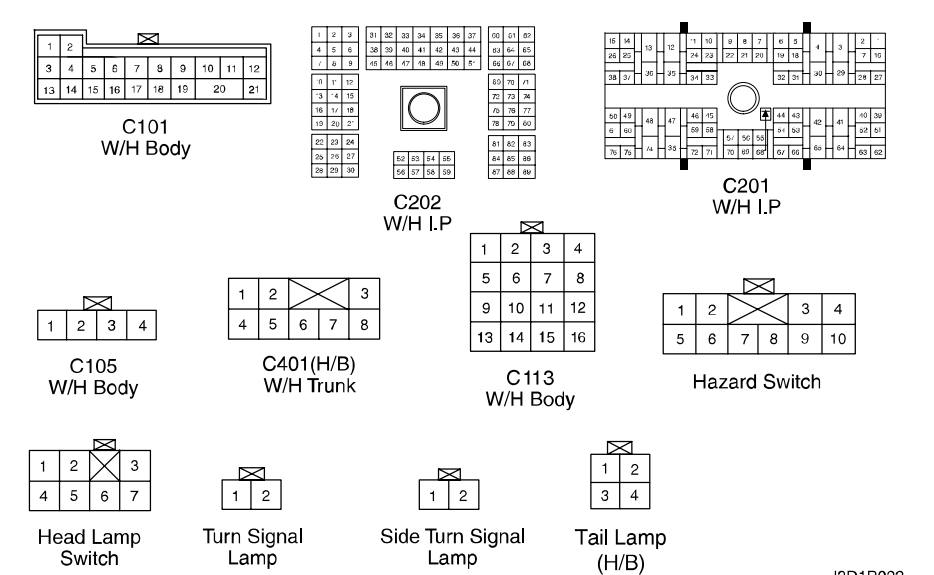

c. POSITION OF CONNECTORS AND GROUNDS


- W/H FRONT

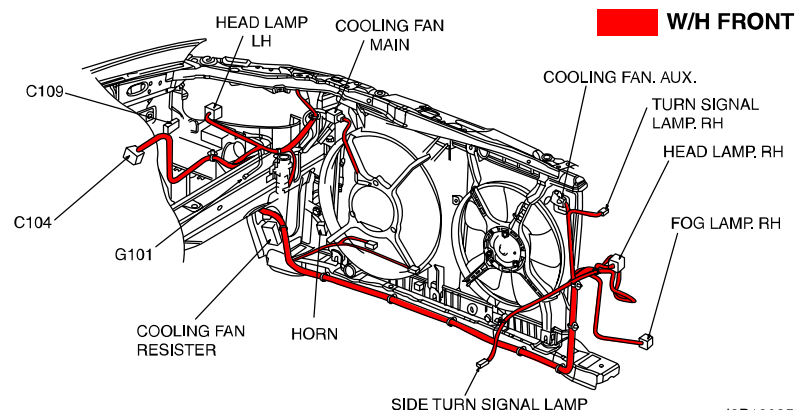

J3B12025


d. SPLICE PACK

S202

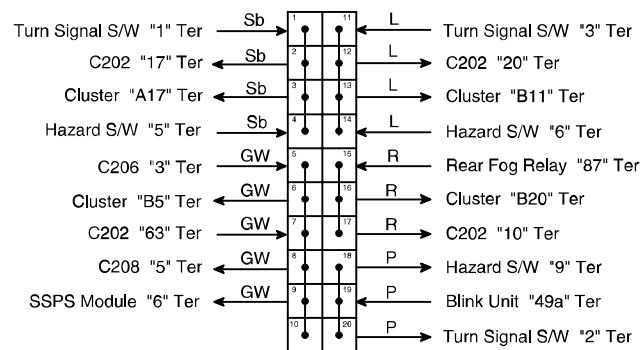


J3D1S003

S203

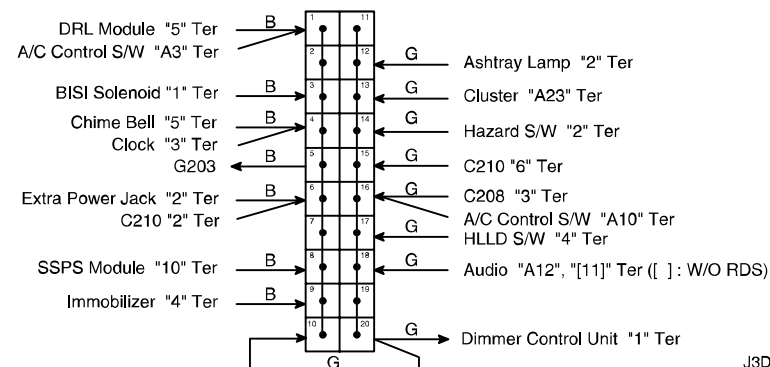


J3D1S004

S204

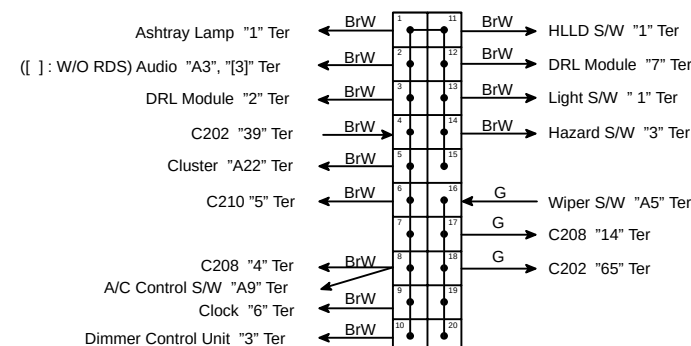

J3B1S006


S302

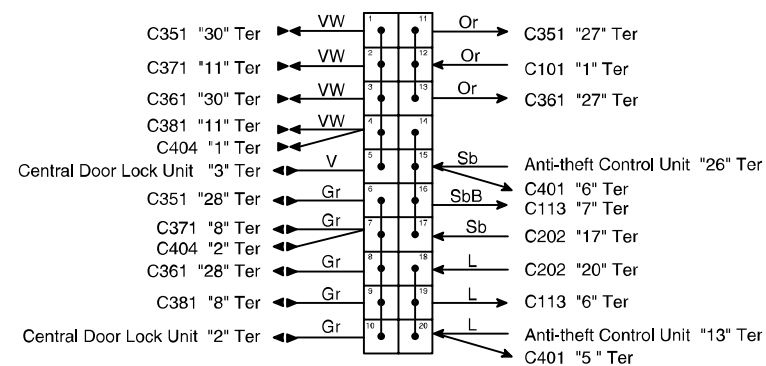

J3D1S007

15. STOP LAMP, CENTER HIGH MOUNT STOP LAMP (CHMSL) & REVERSE LAMP CIRCUIT

1) MR-140/HV-240 : NOTCH BACK

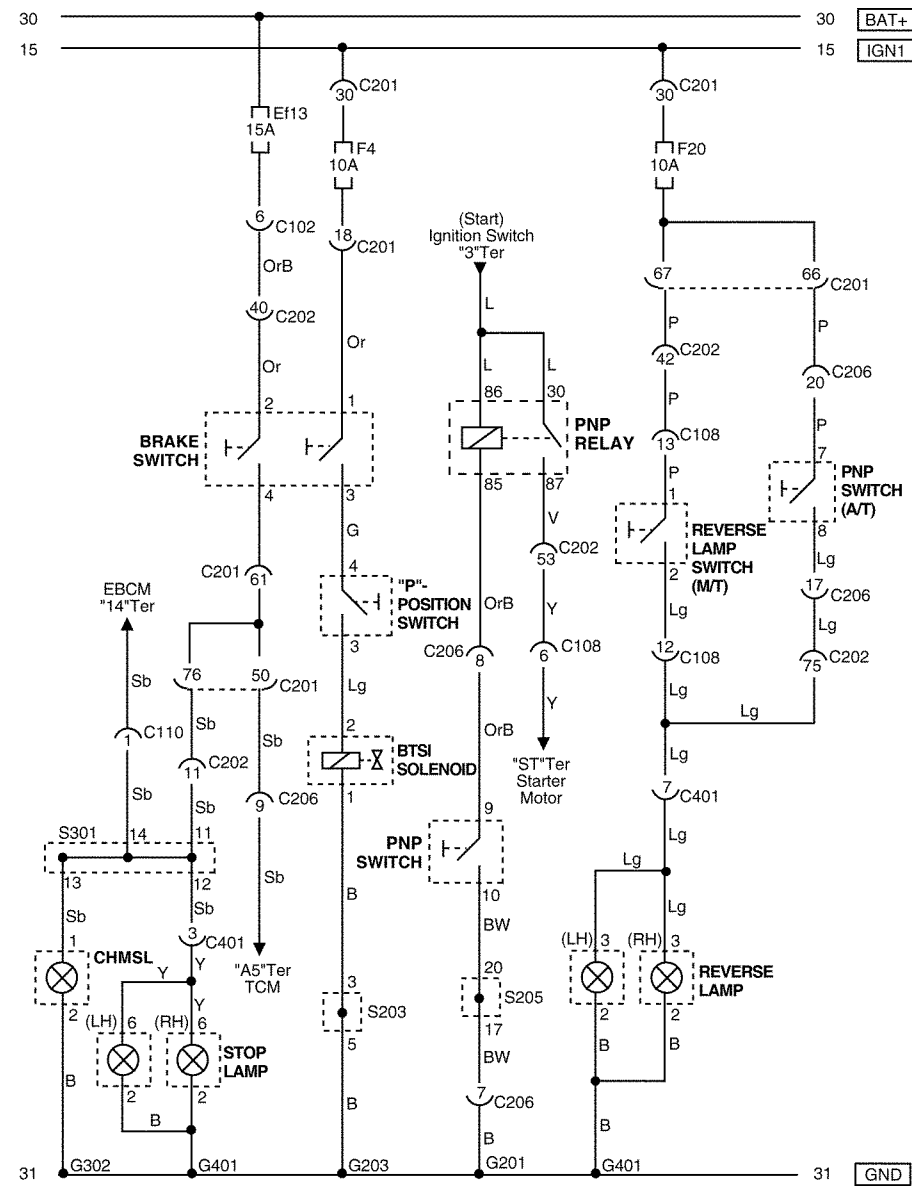


J3D15042

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C401 (8 Pin, White)	Trunk – Body	Inside Right Trunk Side Cover
S203 (Red)	I.P	Behind Audio Mounting
S205 (Orange)	TCM	Upper Driver Leg Room
S301 (Blue)	Body	Left Driver Leg Room
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket
G302	Body	Below Left C Pillar
G401	Trunk	Center Trunk Lower Back Panel


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

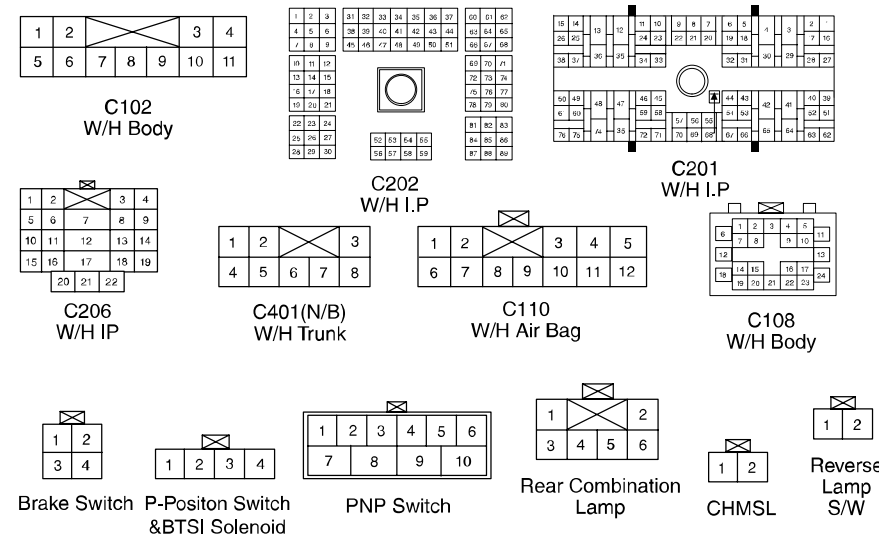

J3D1P023

c. POSITION OF CONNECTORS AND GROUNDS


- W/H BODY

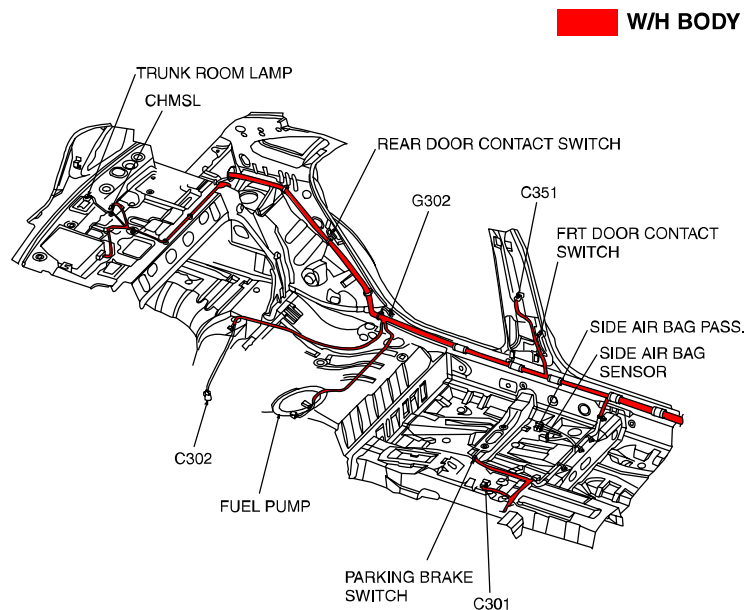

J3B12016


d. SPLICE PACK

S203

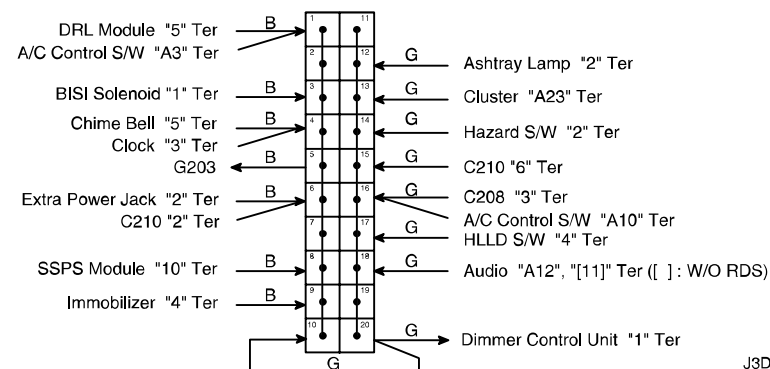


J3D1S004

S205

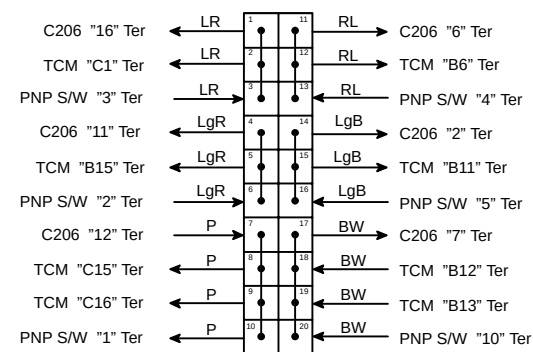


J3B1S007

S301

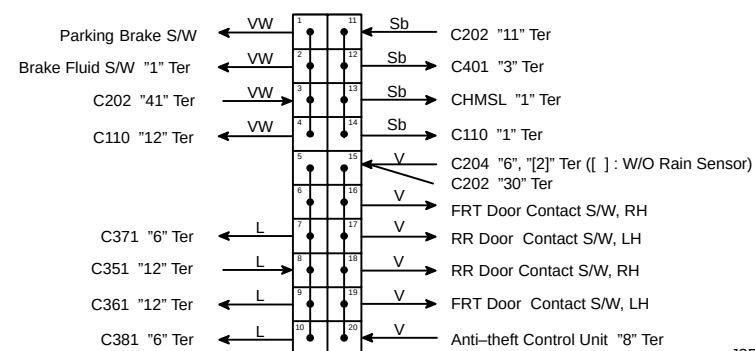

J3B1S008

2) MR-140/HV-240 : HATCH BACK

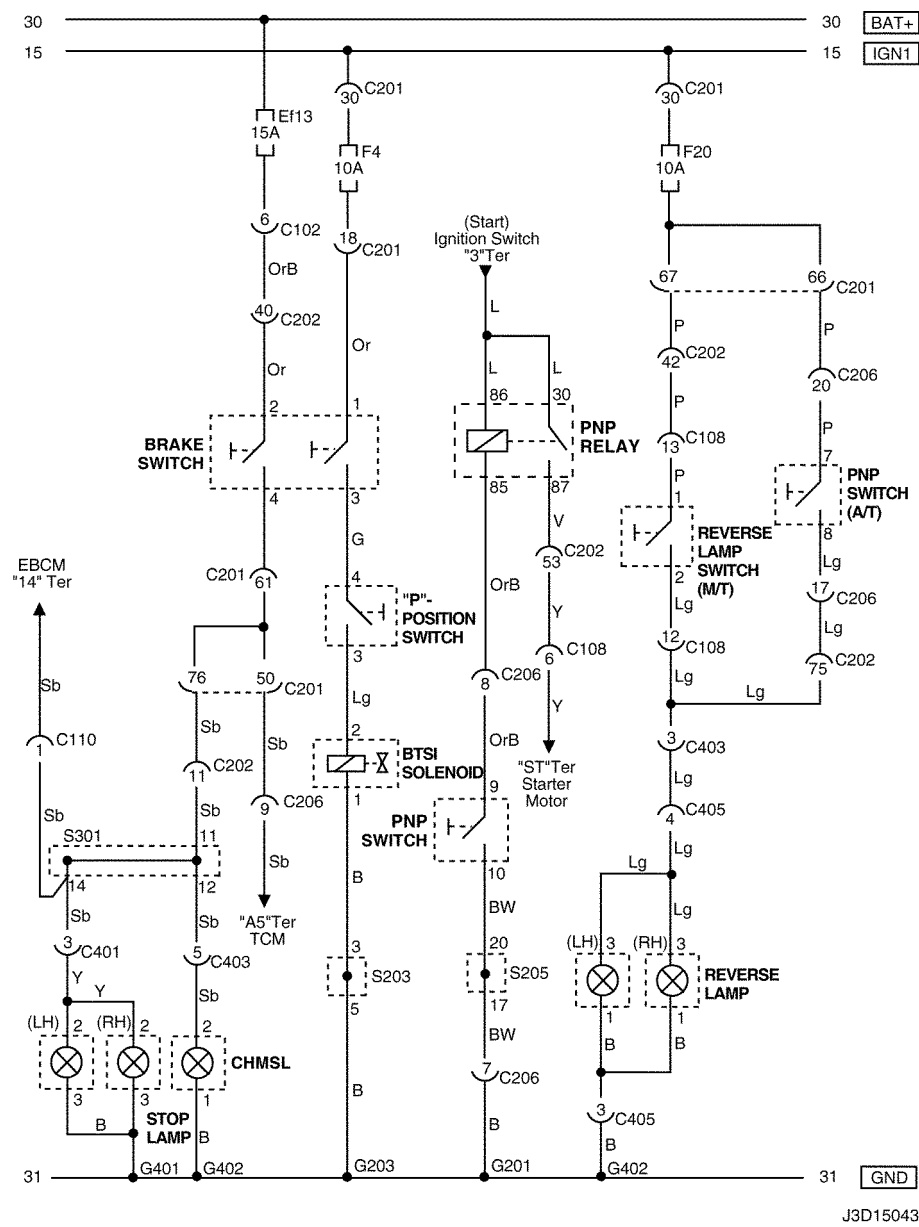


J3D15043

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C401 (8 Pin, White)	Trunk – Body	Inside Right Trunk Side Cover
C403 (6 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C405 (8 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
S203 (Red)	I.P	Behind Audio Mounting
S205 (Orange)	TCM	Upper Driver Leg Room
S301 (Blue)	Body	Left Driver Leg Room
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket
G302	Body	Below Left C Pillar
G401	Trunk	Center Trunk Lower Back Panel
G402	T/Gate. EXT	Inside Driver C Pillar


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

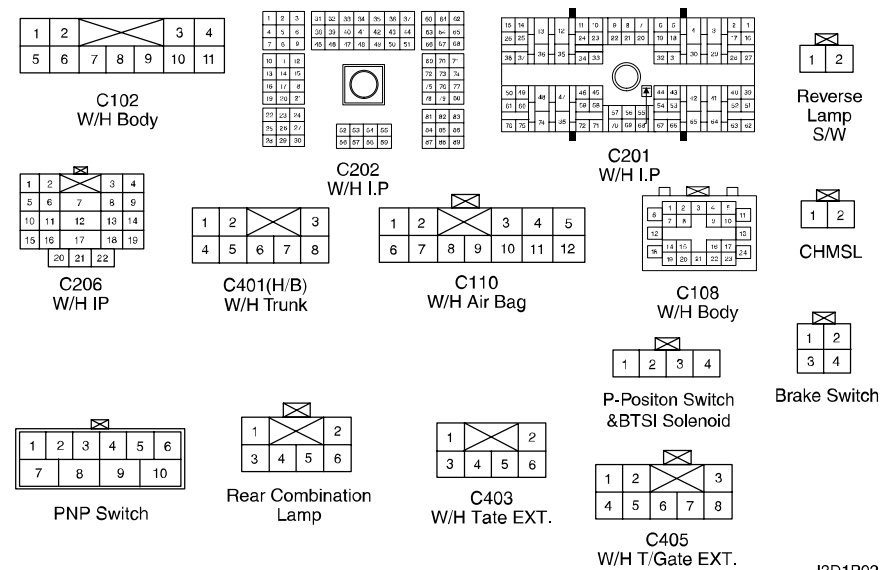

J3D1P024

c. POSITION OF CONNECTORS AND GROUNDS


- W/H TAIL GATE

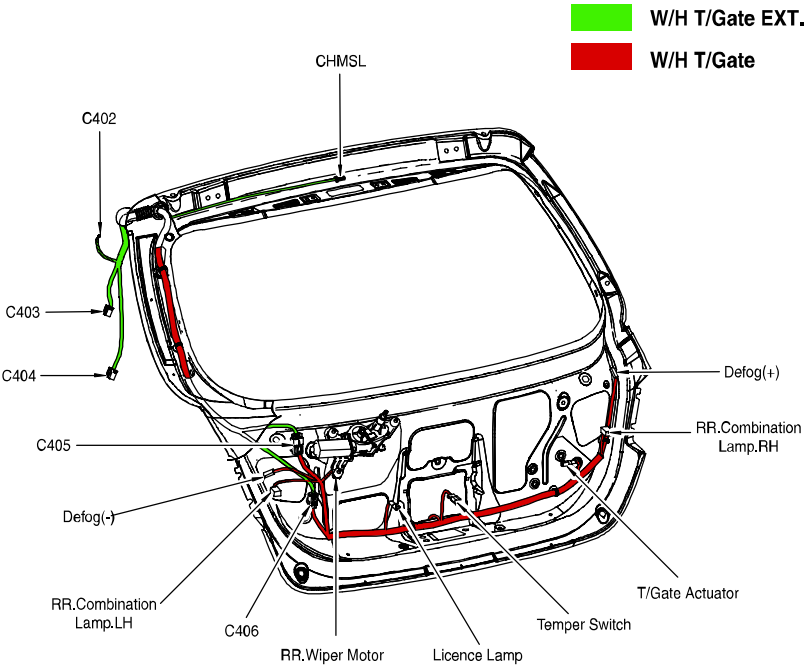

J3B12031


d. SPLICE PACK

S203

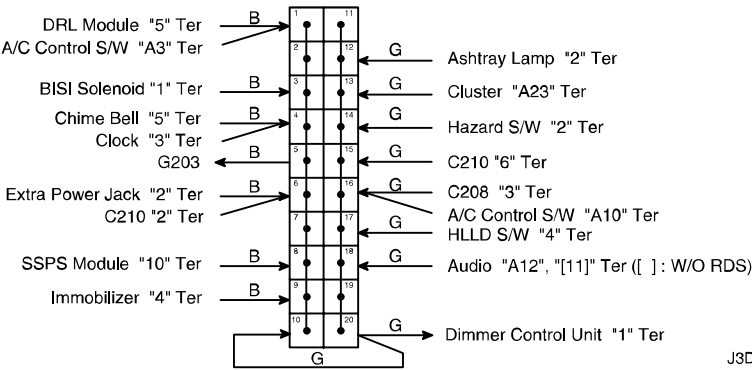


J3D1S004

S205

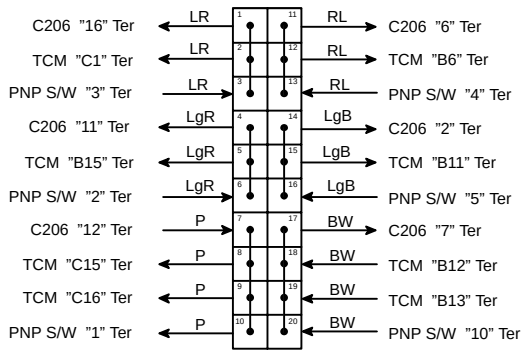


J3B1S007

S301

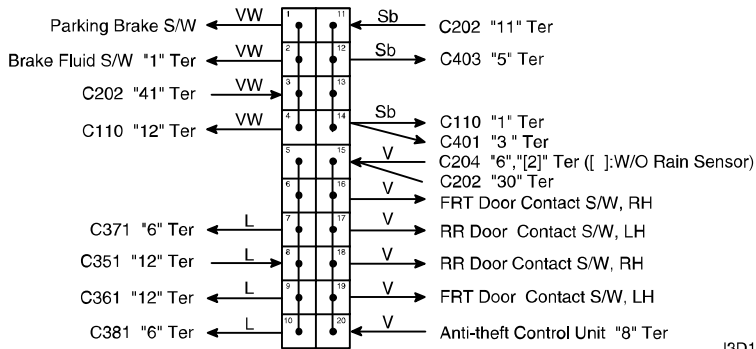

J3D1S006


3) SIRIUS D4 : NOTCH BACK

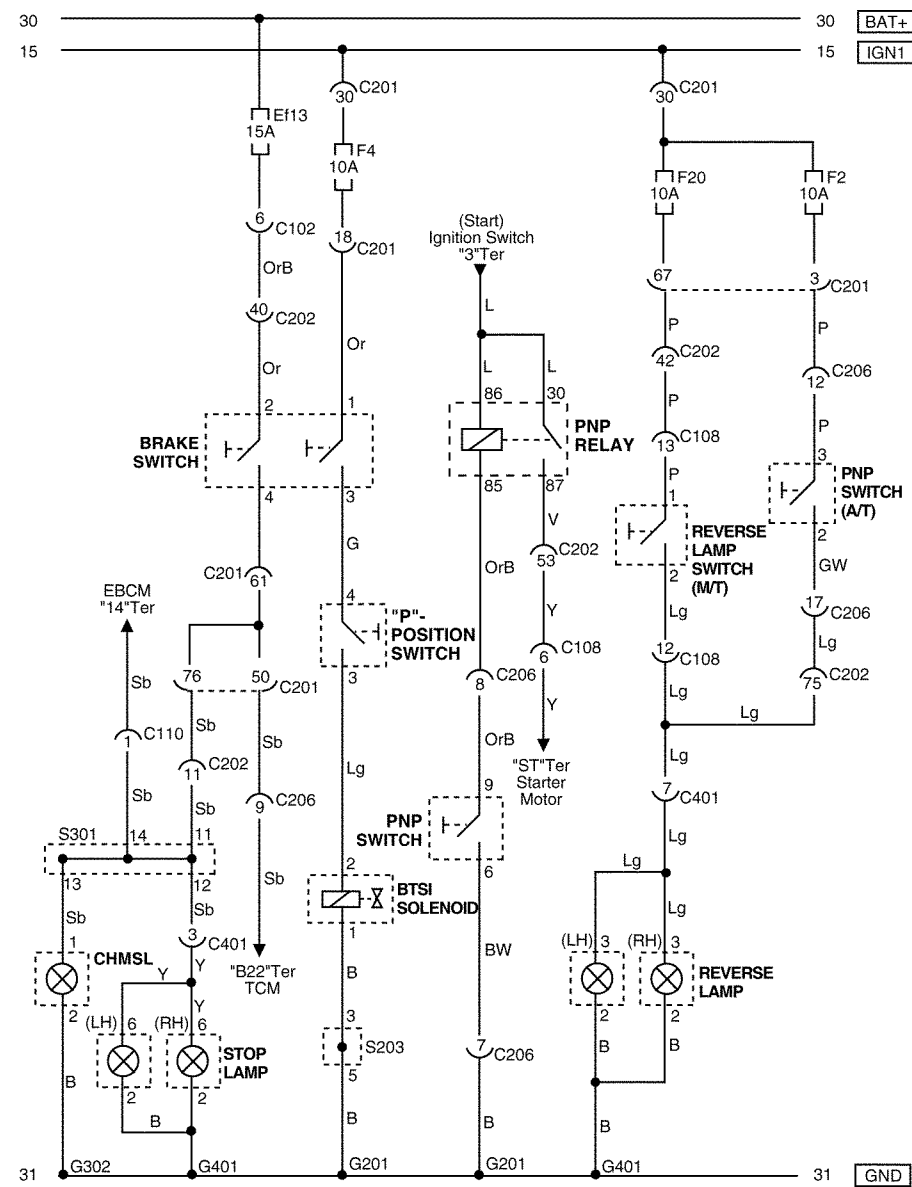

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C401 (8 Pin, White)	Trunk – Body	Inside Right Trunk Side Cover
S203 (Red)	I.P	Behind Audio Mounting
S301 (Blue)	Body	Left Driver Leg Room
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket
G302	Body	Below Left C Pillar
G401	Trunk	Center Trunk Lower Back Panel

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

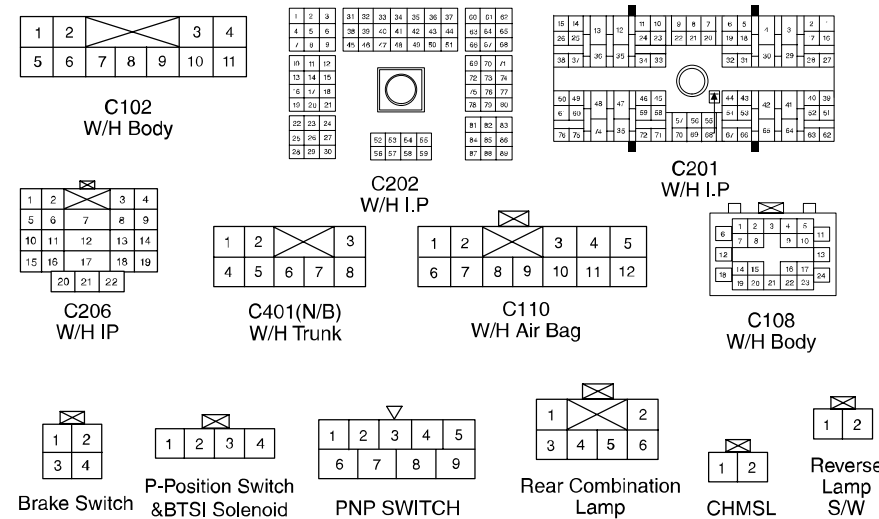

c. POSITION OF CONNECTORS AND GROUNDS


- W/H BODY

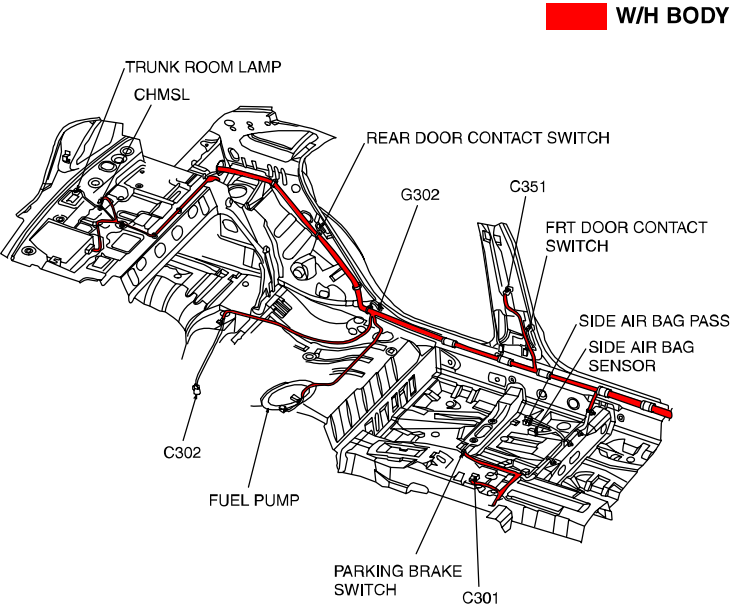


J3B12016

d. SPLICE PACK


S203

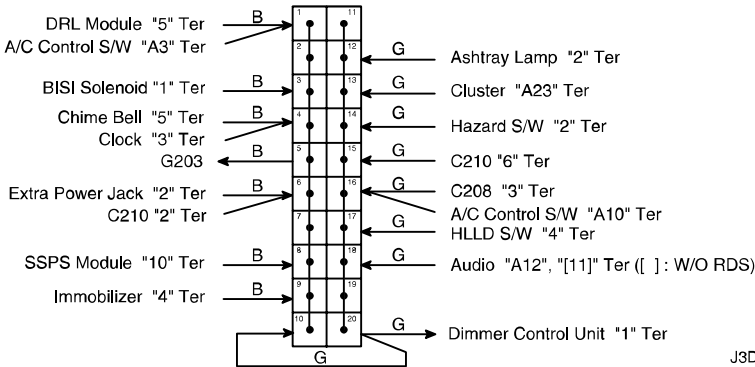

S301

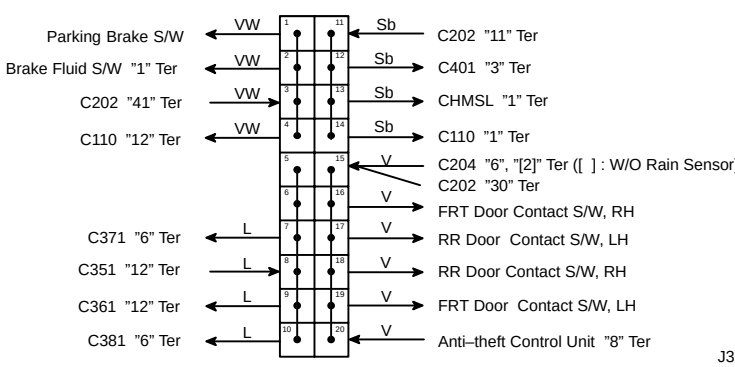

4) SIRIUS D4 : HATCH BACK

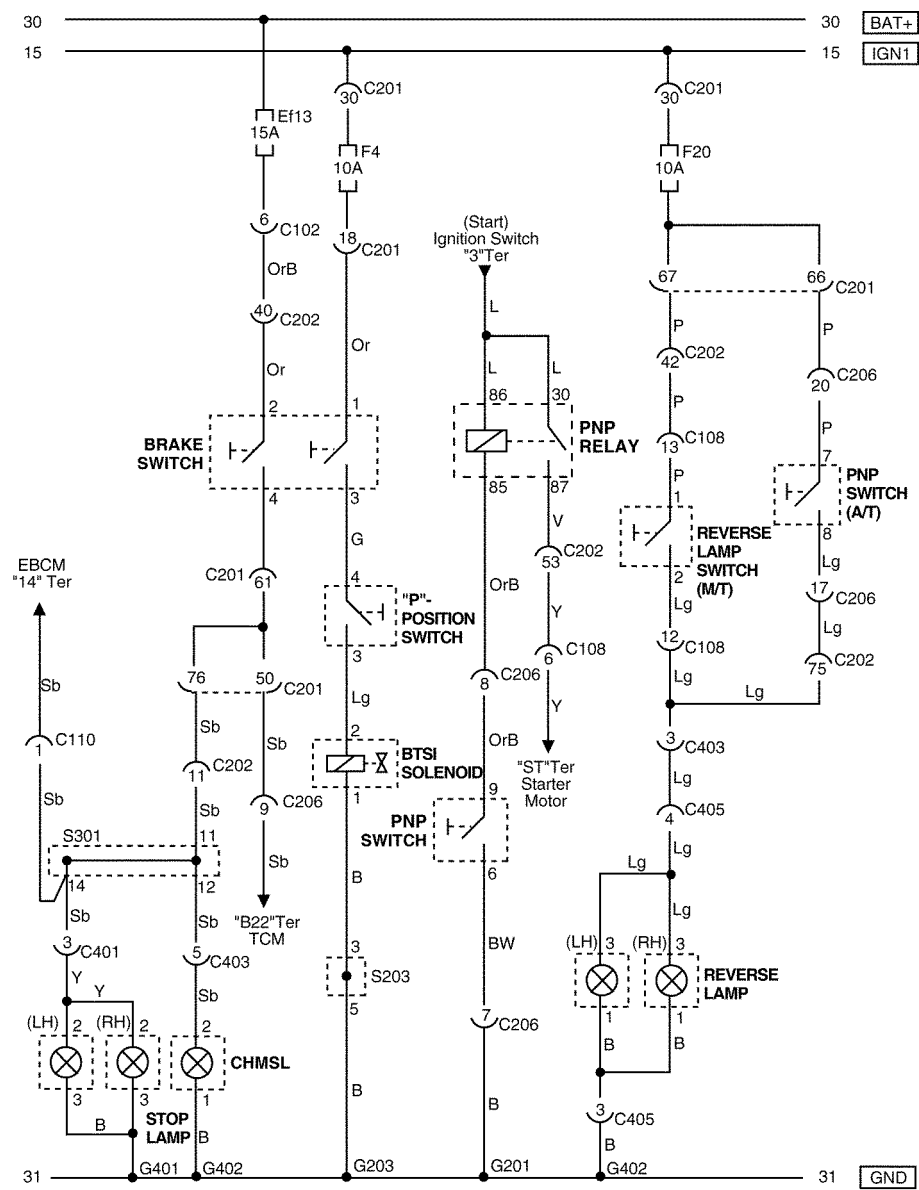


J3D15045

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C401 (8 Pin, White)	Trunk – Body	Inside Right Trunk Side Cover
C403 (6 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C405 (8 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
S203 (Red)	I.P	Behind Audio Mounting
S301 (Blue)	Body	Left Driver Leg Room
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket
G302	Body	Below Left C Pillar
G401	Trunk	Center Trunk Lower Back Panel
G402	T/Gate. EXT	Inside Driver C Pillar


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

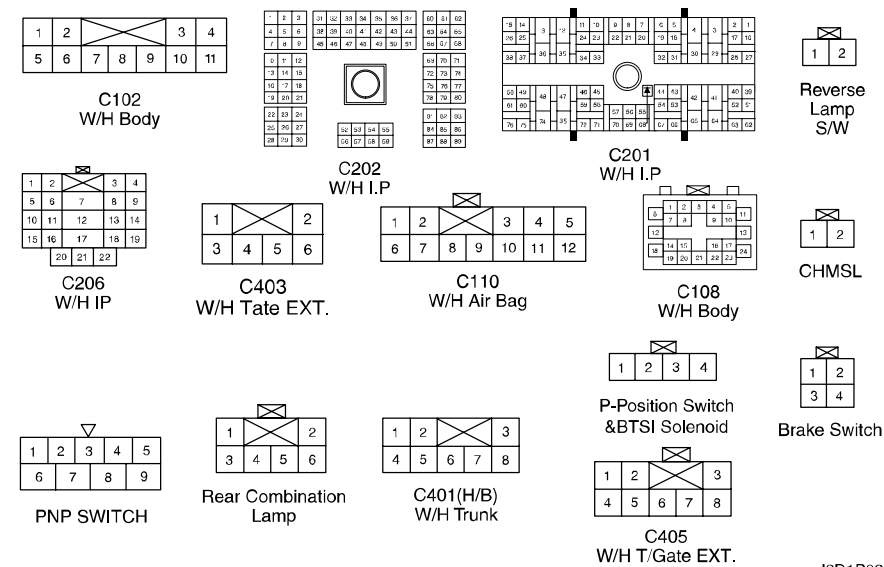

J3D1P026


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TAIL GATE

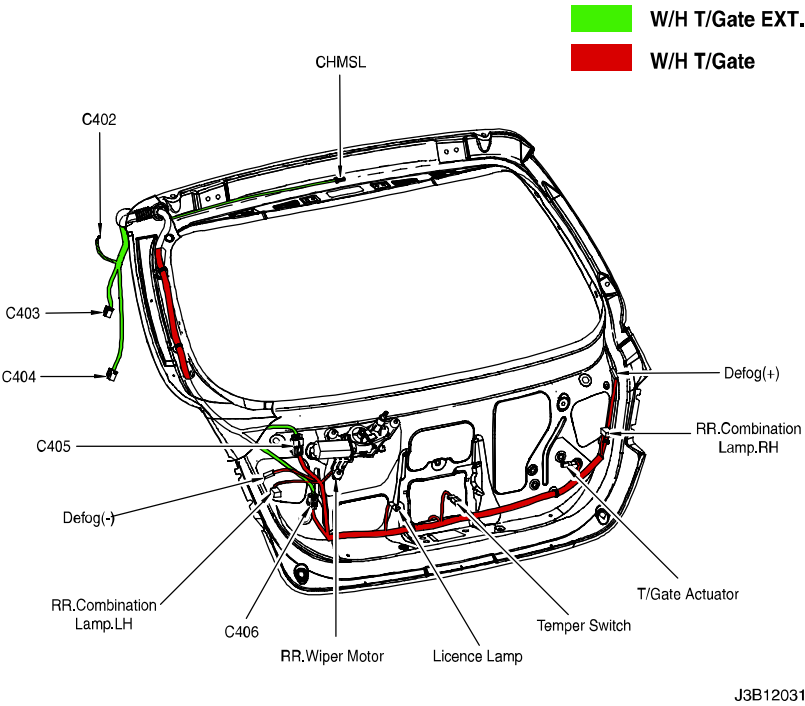


d. SPLICE PACK

S203

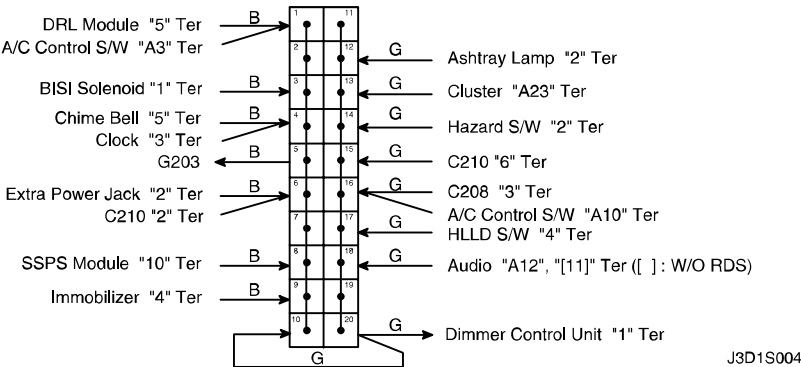

S301

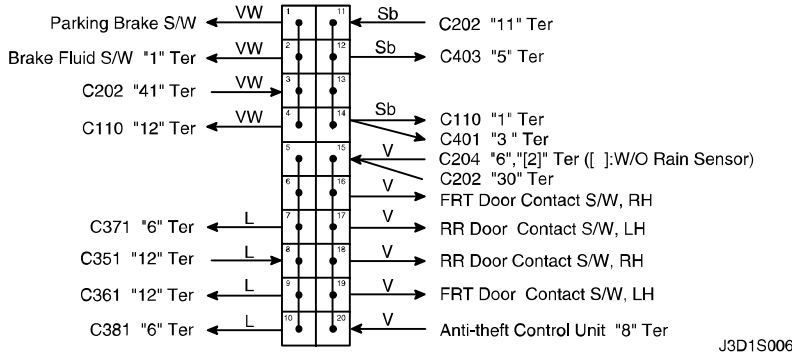


a. CONNECTOR INFORMATION




CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C112 (2 Pin, Black)	Front – Horn	Center Cross Member Panel
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C402 (6 Pin, White)	Trunk LID – Body	Inside Right Trunk Side Cover
C404 (8 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C406 (6 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
G101	Front	Behind Left Head Lamp
G302	Body	Below Left C Pillar
G402	T/Gate. EXT	Inside Driver C Pillar

c. POSITION OF CONNECTORS AND GROUNDS


• W/H TRUNK

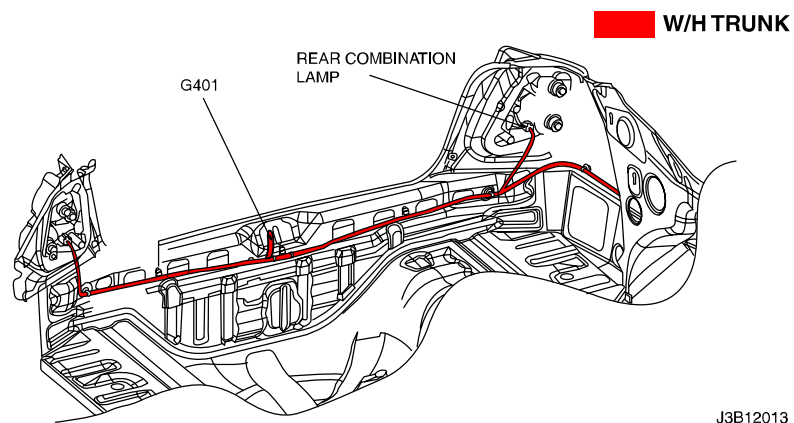


• W/H FRONT

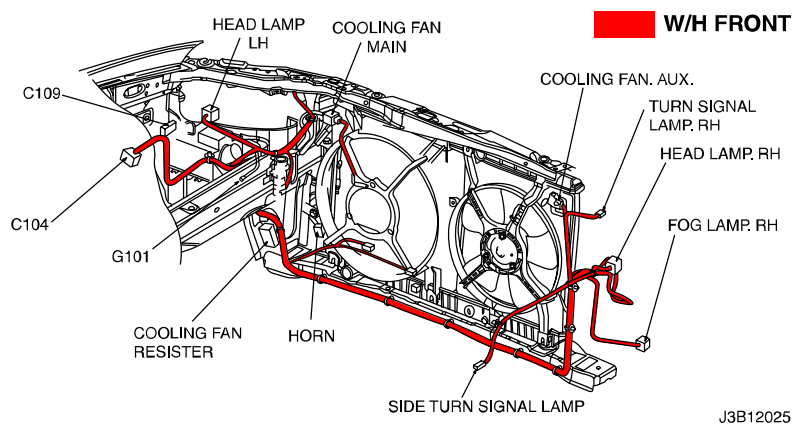


• W/H DRIVE DOOR

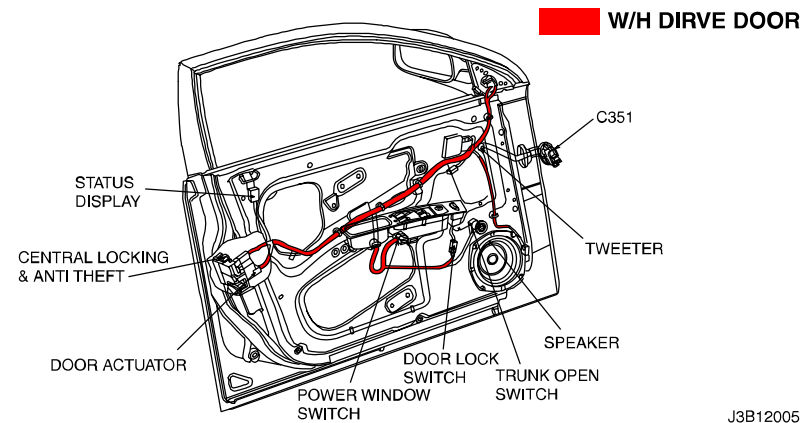

• W/H INSTRUMENT PANEL

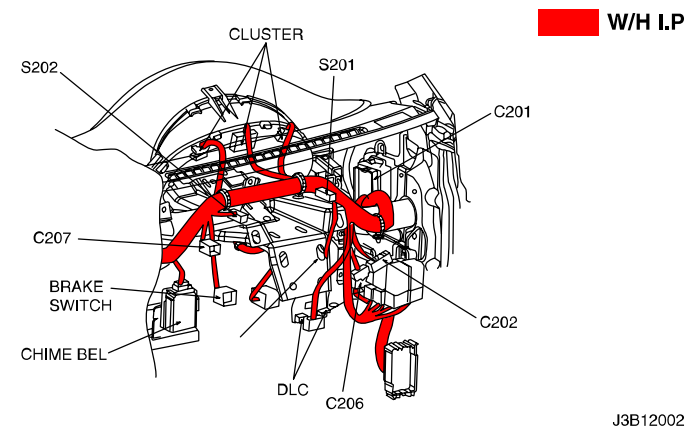


2) SINGLE HORN

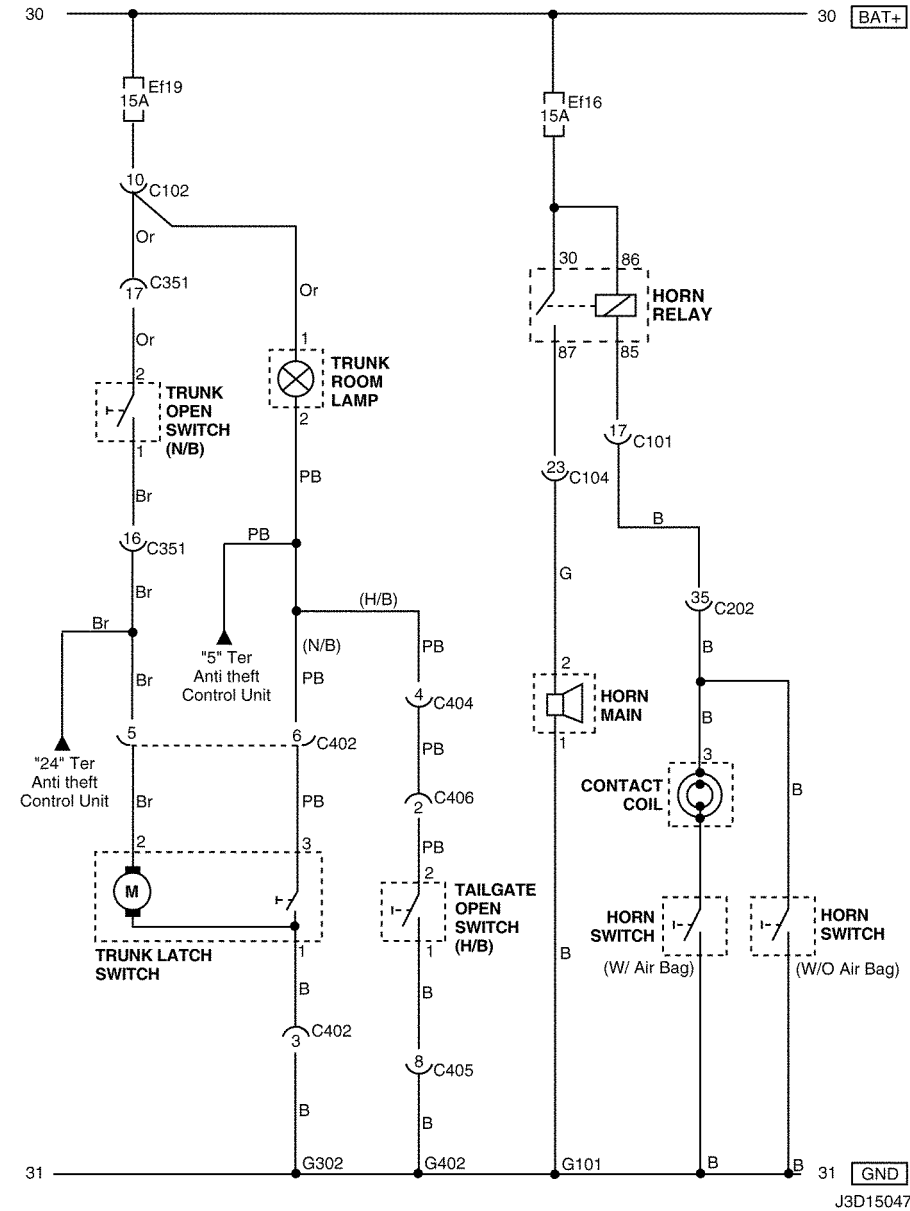

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C402 (6 Pin, White)	Trunk LID – Body	Inside Right Trunk Side Cover
C404 (8 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C406 (6 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
G101	Front	Behind Left Head Lamp
G302	Body	Below Left C Pillar
G402	T/Gate. EXT	Inside Driver C Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

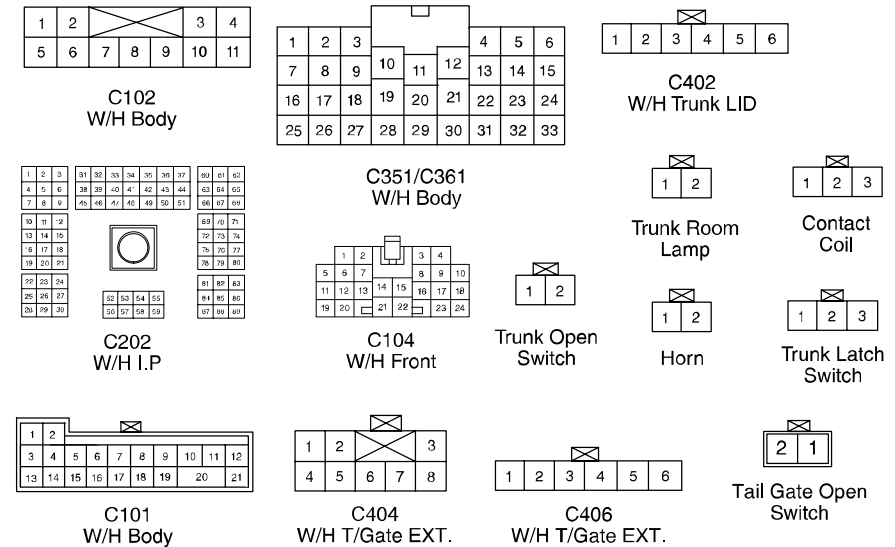


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TAIL GATE

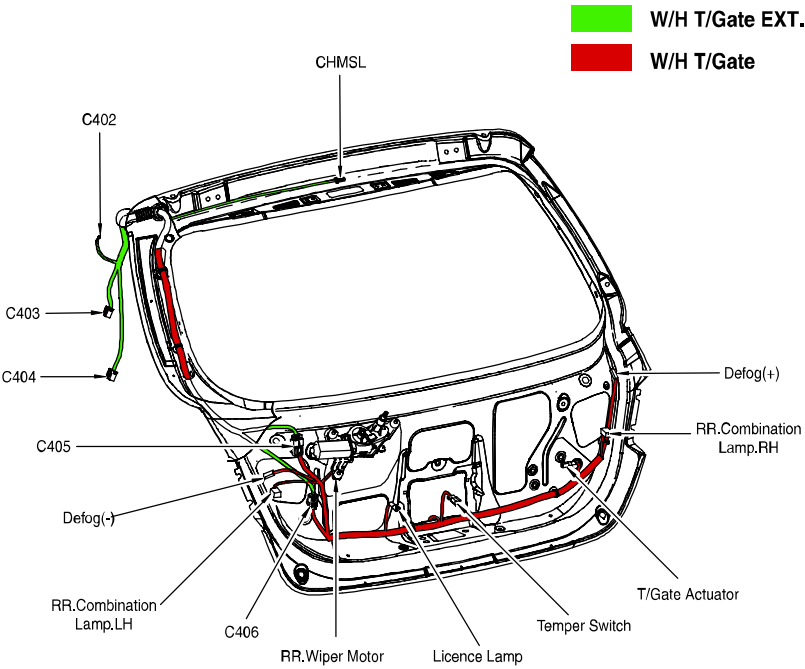


J3B12031

- W/H FRONT

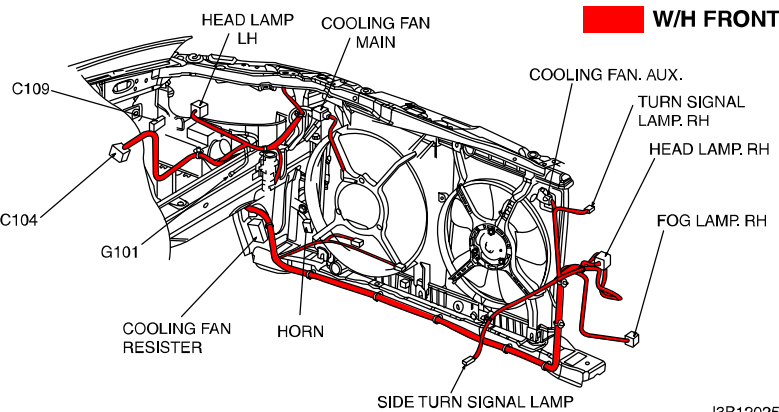


J3B12025

- W/H DRIVE DOOR

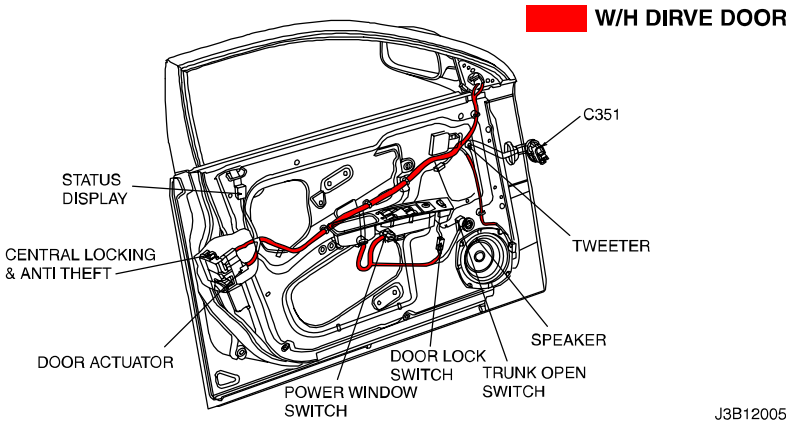

J3B12005


- W/H INSTRUMENT PANEL

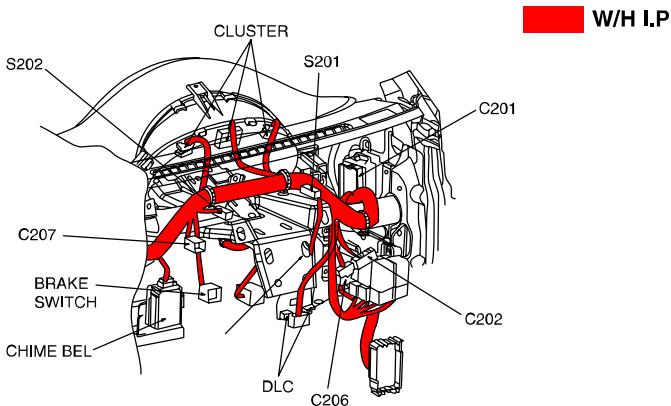

J3B12002

17. LAMP (MAP & ROOM) CIRCUIT


1) W/O SUN ROOF & W/ DECAY

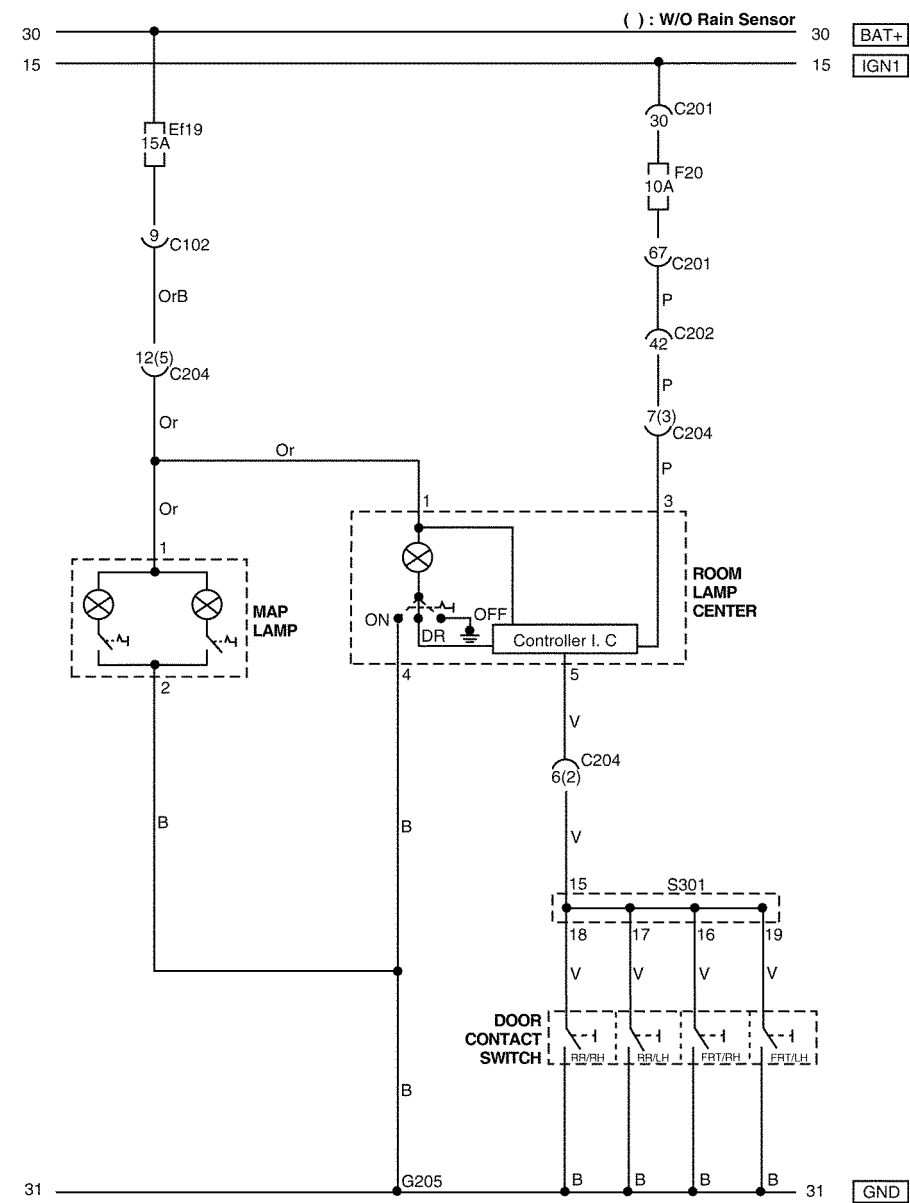


a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C204 (14 Pin, White)	Roof – Body (W/ Rain Sensor)	Left Driver Leg Room
C204 (8 Pin, White)	Roof – Body (W/O Rain Sensor)	Left Driver Leg Room
S301 (Blue)	Body	Left Driver Leg Room
G205	Roof	Inside Driver A Pillar

 
b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




C102
W/H Body

 


C204
W/H Roof
(W/ Rain Sensor)

 


C204
W/H Roof
(W/O Rain Sensor)

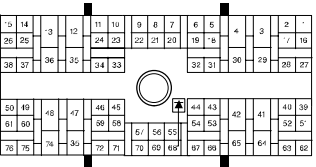

C201
W/H I.P

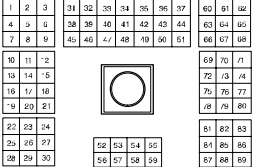

C202
W/H I.P

 


Room Lamp Center
(W/ Decay)



MAP LAMP


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ROOF

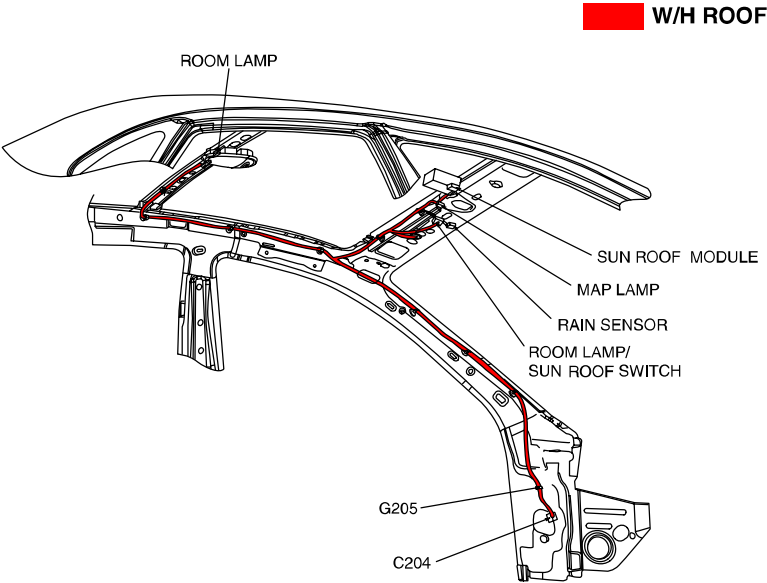

J3B12007


- W/H INSTRUMENT PANEL

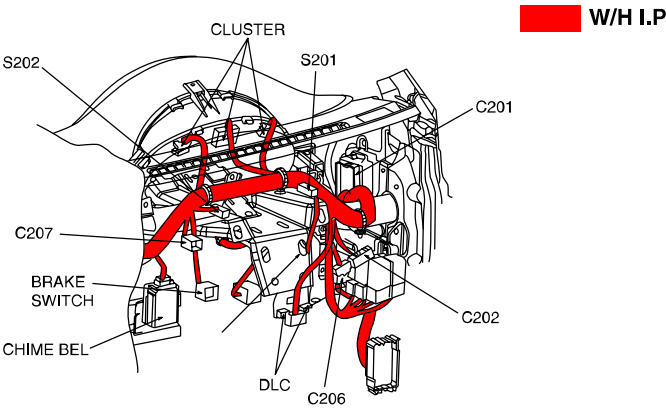

J3B12002


d. SPLICE PACK

S301 (NOTCH BACK)

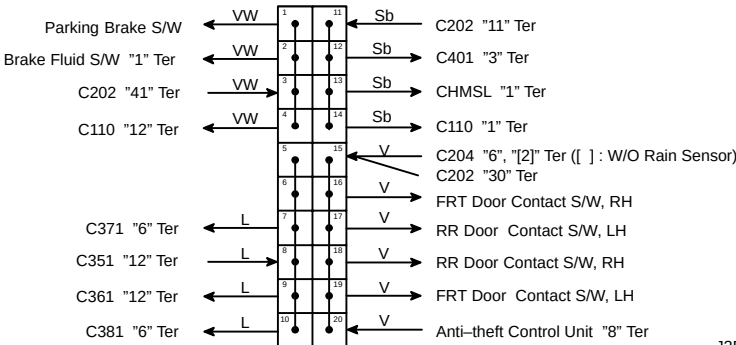


J3B1S008

S301 (HATCH BACK)

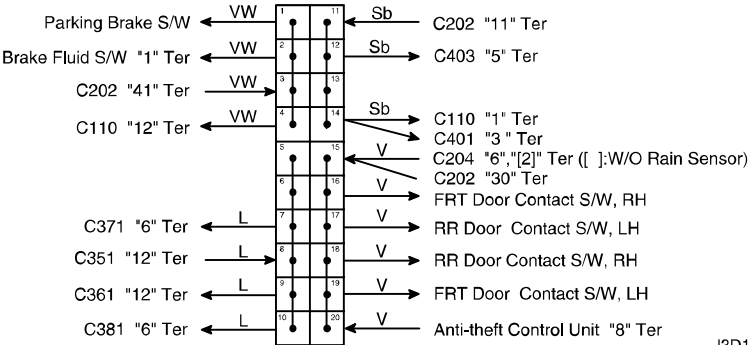

J3D1S006

2) W/ SUN ROOF & W/ DECAY

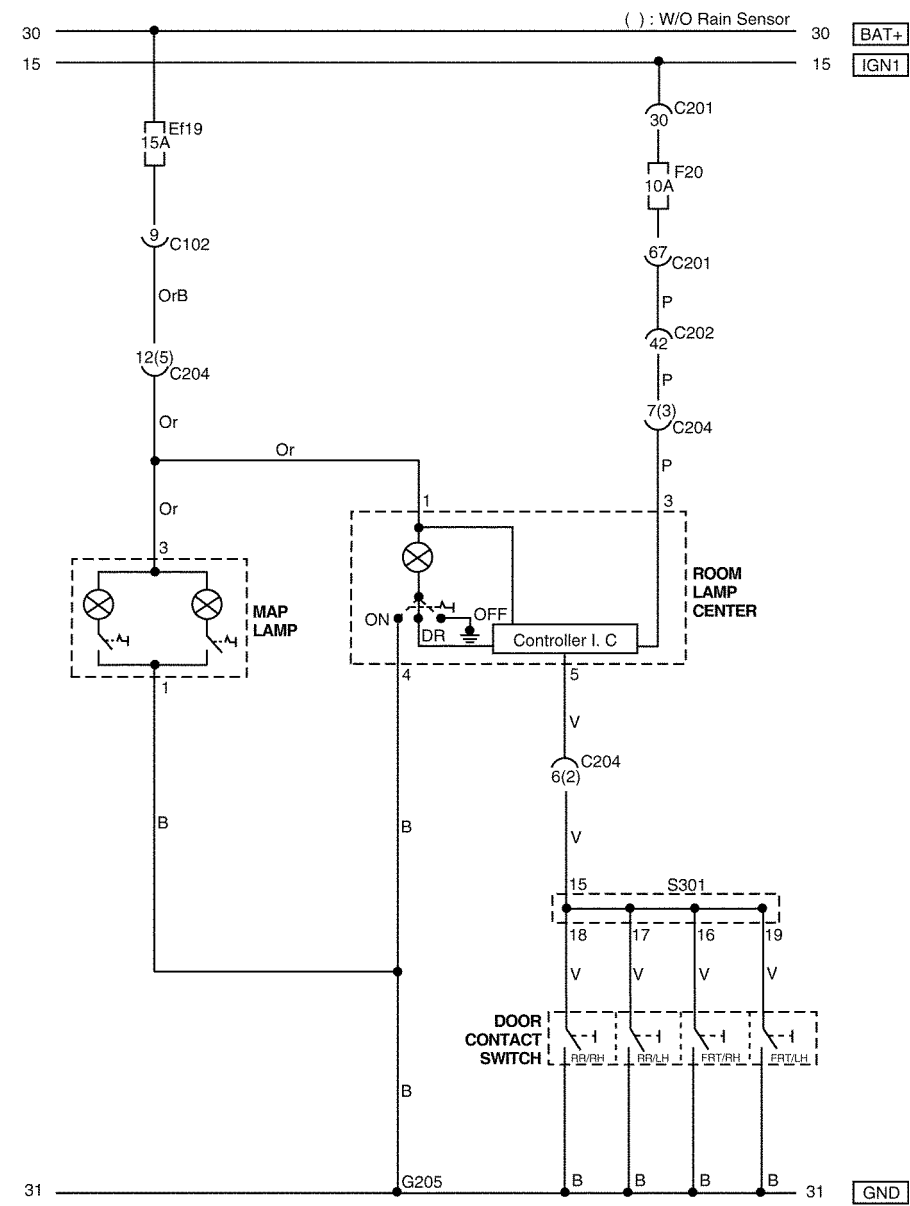


J3D15049


a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C204 (14 Pin, White)	Roof – Body (W/ Rain Sensor)	Left Driver Leg Room
C204 (8 Pin, White)	Roof – Body (W/O Rain Sensor)	Left Driver Leg Room
S301 (Blue)	Body	Left Driver Leg Room
G205	Roof	Inside Driver A Pillar

 
b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




C102
W/H Body

 


C204
W/H Roof
(W/ Rain Sensor)

 


C204
W/H Roof
(W/O Rain Sensor)

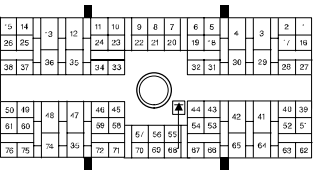


C201
W/H I.P

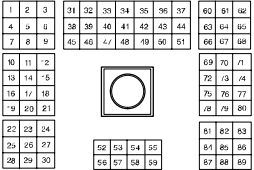

C202
W/H I.P

 

Room Lamp/Sun Roof
Switch

 


Room Lamp Center
(W/ Decay)

J3B1P042


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ROOF

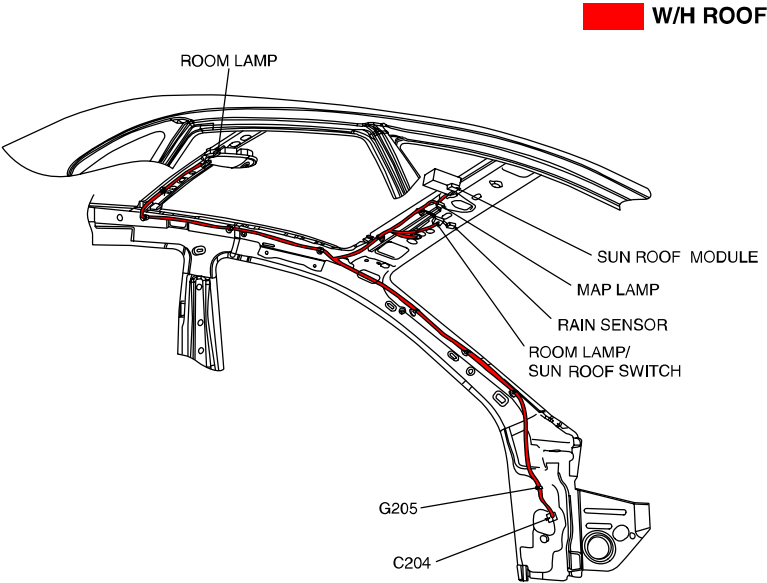

J3B12007


- W/H INSTRUMENT PANEL

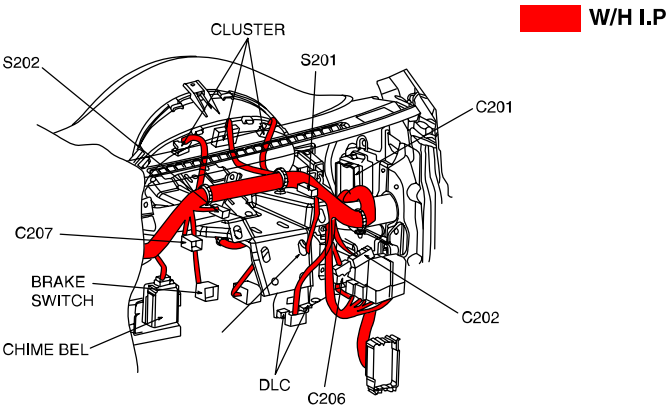

J3B12002


d. SPLICE PACK

S301 (NOTCH BACK)

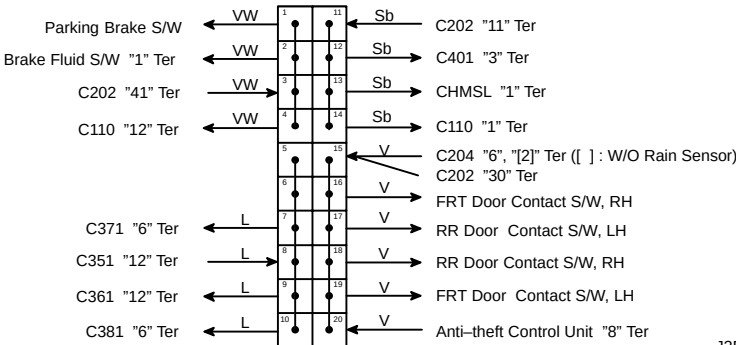


J3B1S008

S301 (HATCH BACK)

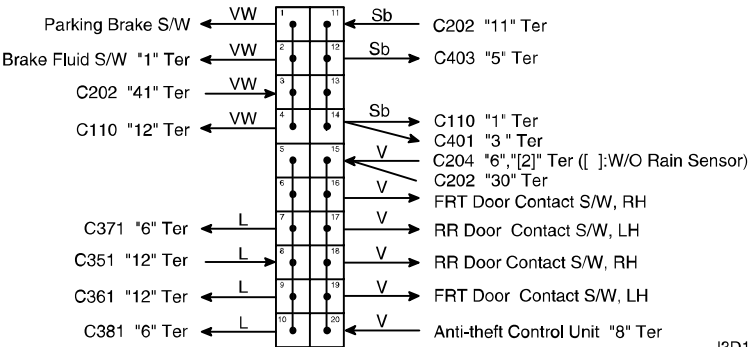

J3D1S006


3) W/O SUN ROOF & W/O DECAY

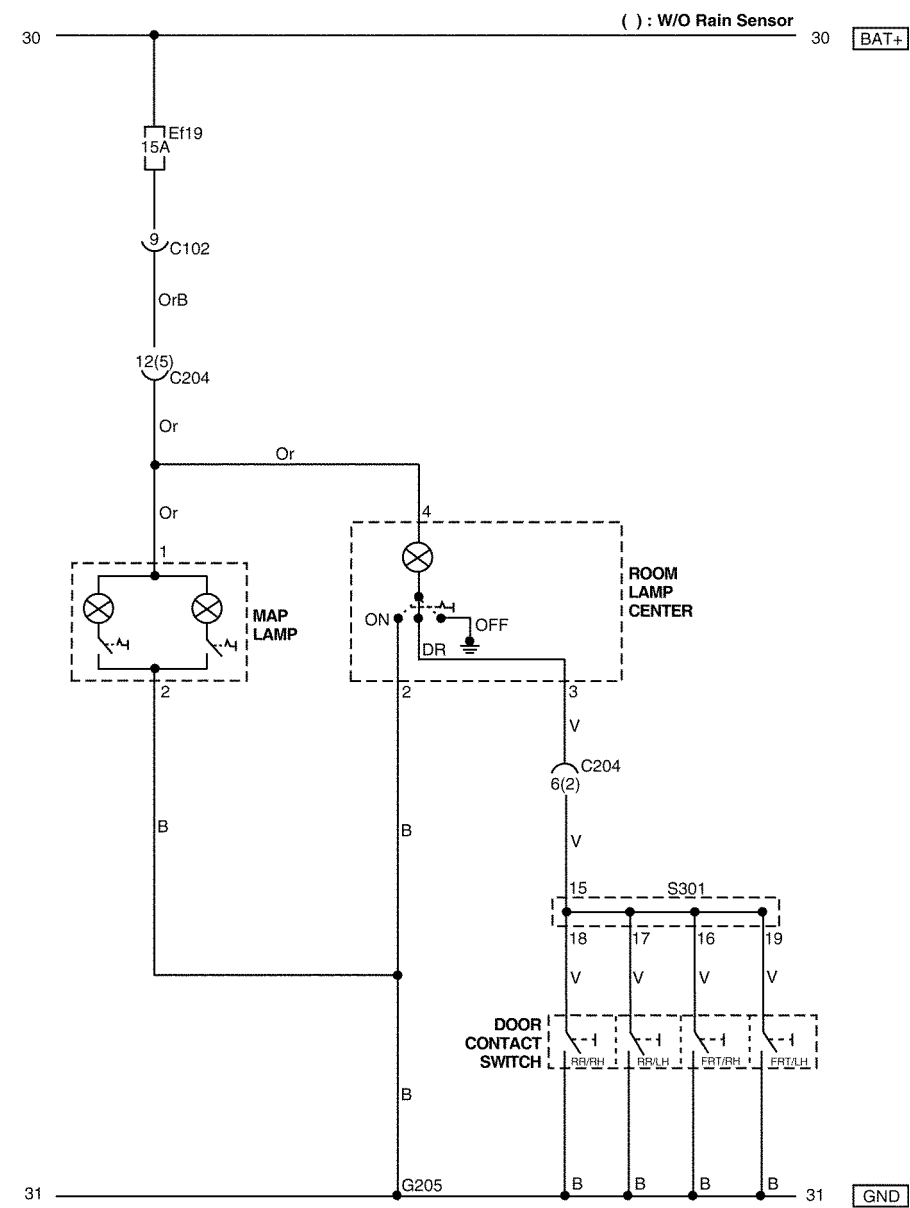

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C204 (14 Pin, White)	Roof – Body (W/ Rain Sensor)	Left Driver Leg Room
C204 (8 Pin, White)	Roof – Body (W/O Rain Sensor)	Left Driver Leg Room
S301 (Blue)	Body	Left Driver Leg Room
G205	Roof	Inside Driver A Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

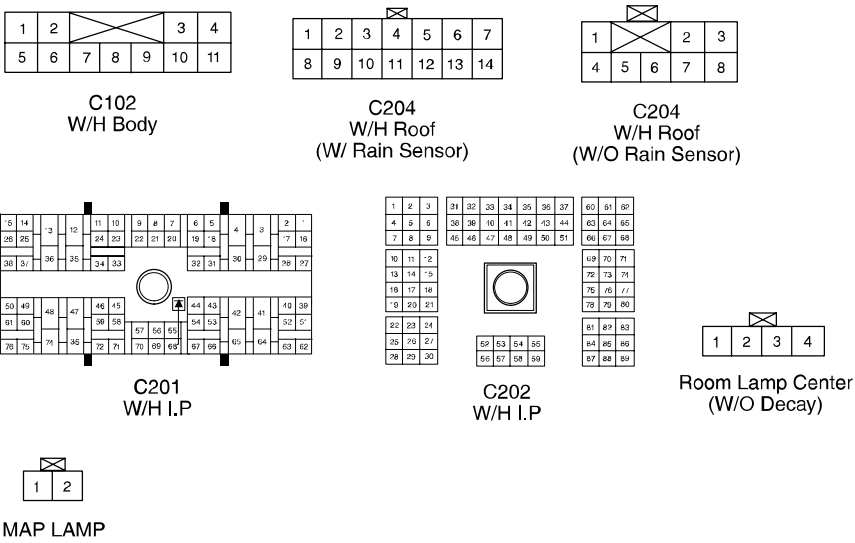


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ROOF

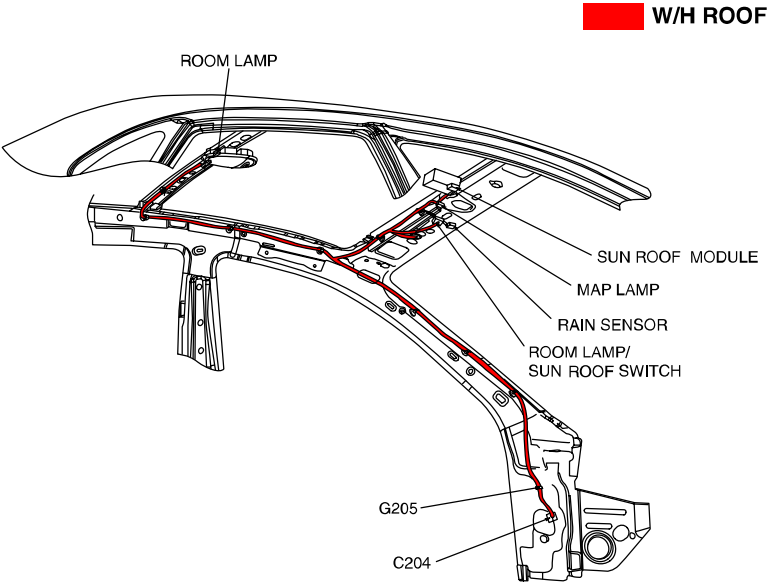

J3B12007


- W/H INSTRUMENT PANEL

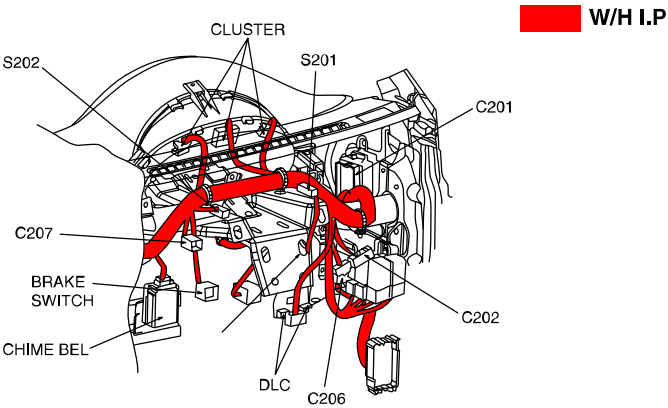

J3B12002


d. SPLICE PACK

S301 (NOTCH BACK)

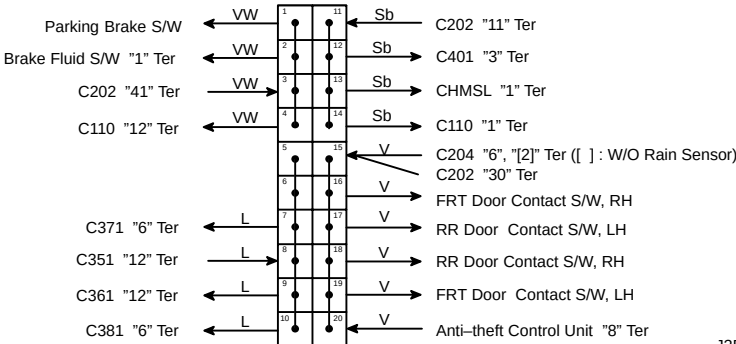


J3B1S008

S301 (HATCH BACK)

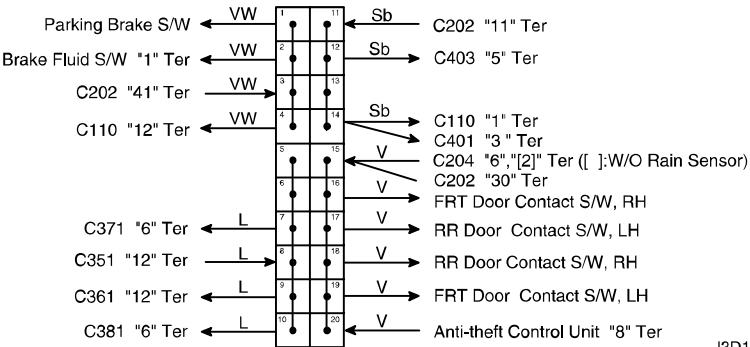

J3D1S006


4) W/ SUN ROOF & W/O DECAY

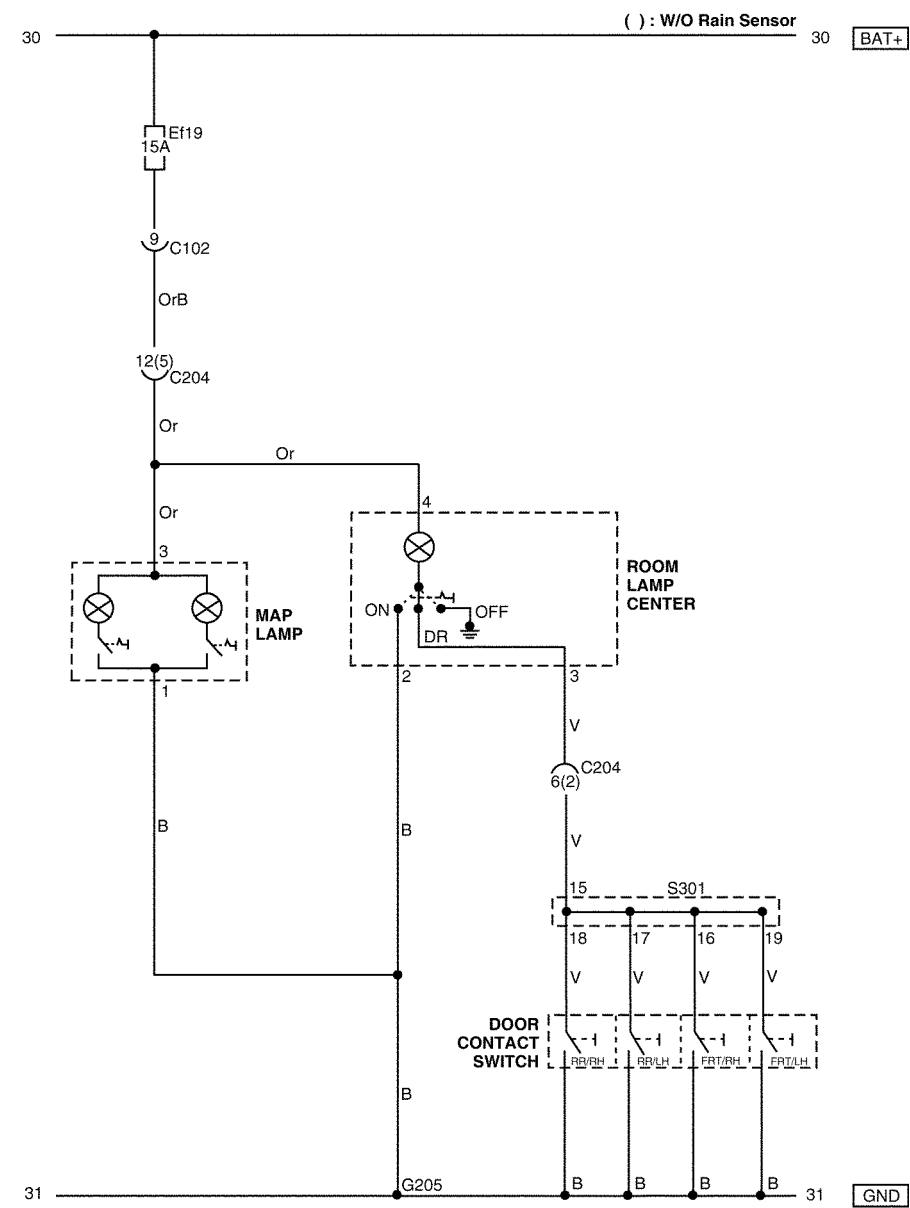

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C204 (14 Pin, White)	Roof – Body (W/ Rain Sensor)	Left Driver Leg Room
C204 (8 Pin, White)	Roof – Body (W/O Rain Sensor)	Left Driver Leg Room
S301 (Blue)	Body	Left Driver Leg Room
G205	Roof	Inside Driver A Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

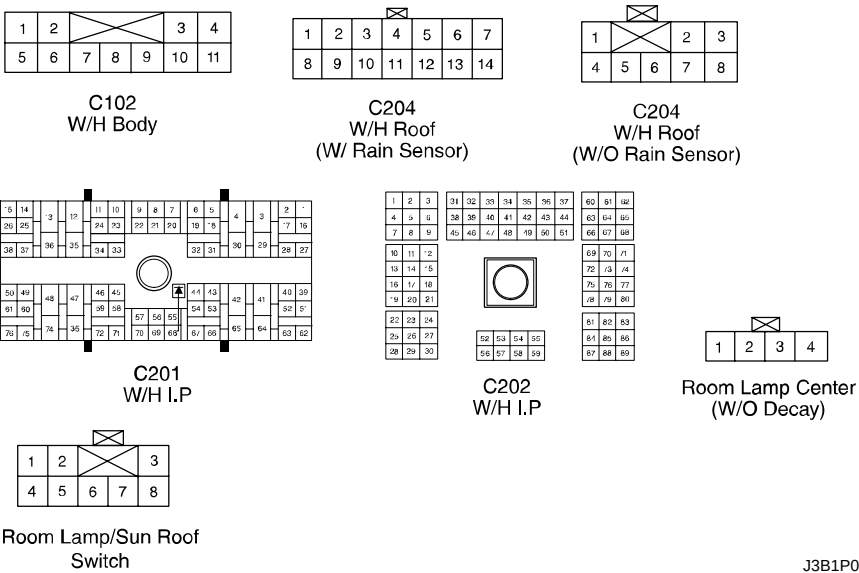


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ROOF

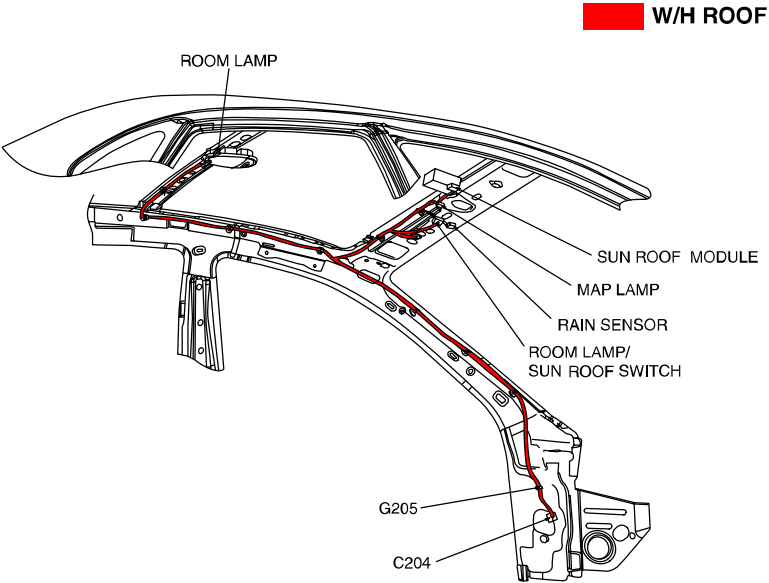

J3B12007


- W/H INSTRUMENT PANEL

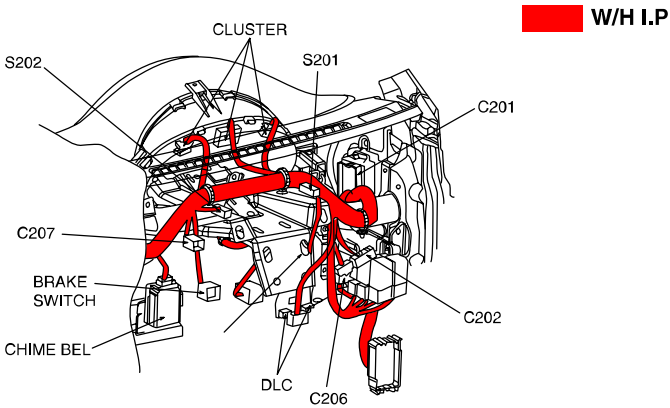

J3B12002


d. SPLICE PACK

S301 (NOTCH BACK)

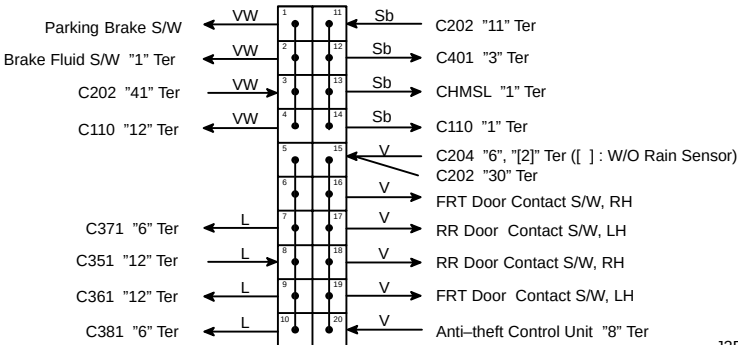

J3B1S008


S301 (HATCH BACK)

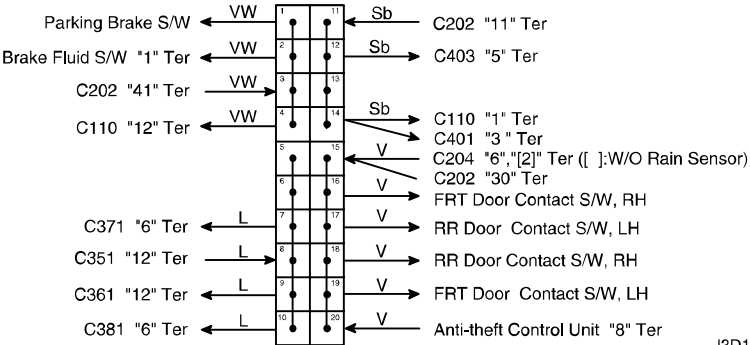

J3D1S006

18. CLOCK, CIGAR LIGHTER, ASHTRAY ILLUM. LAMP & EXTRA POWER JACK CIRCUIT

1) M/T

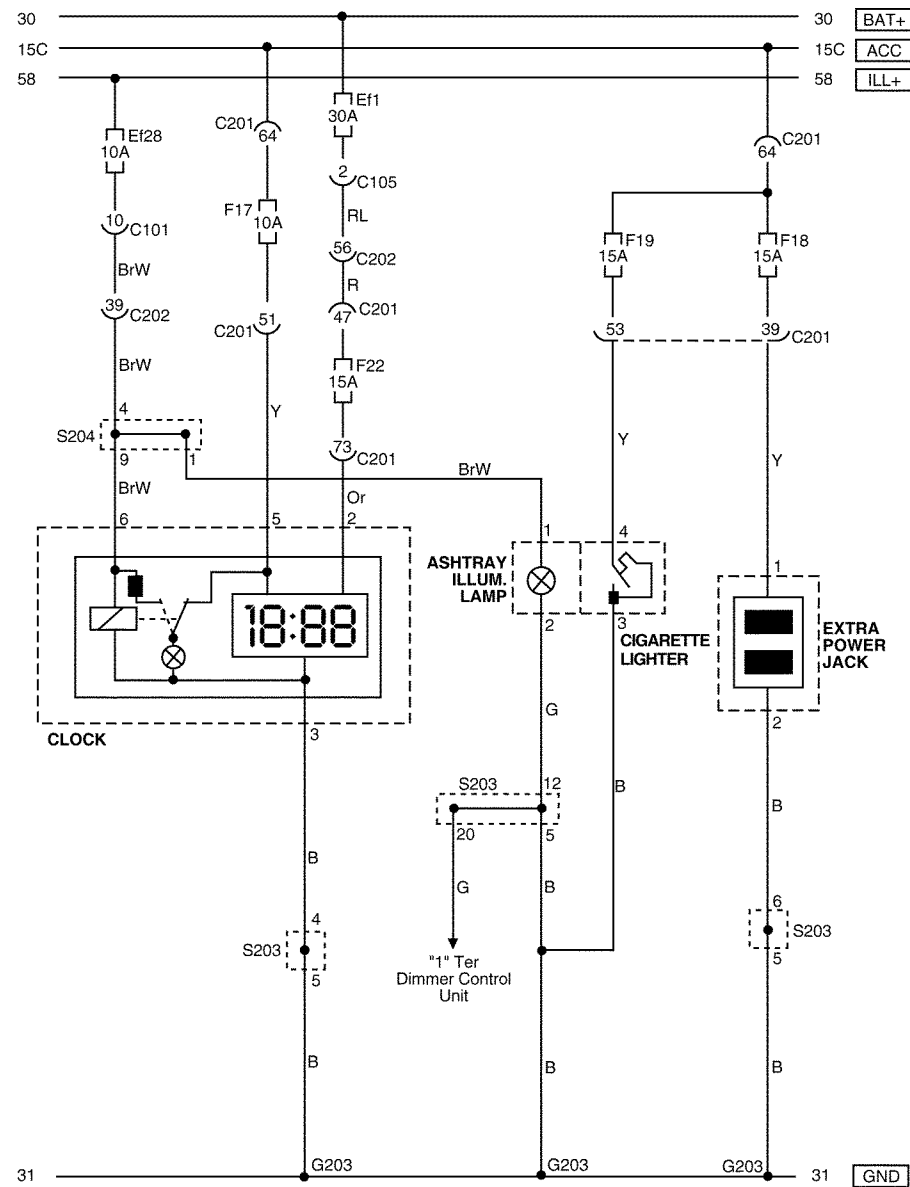


J3D15052

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G203	I.P	Behind Left Audio Bracket


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

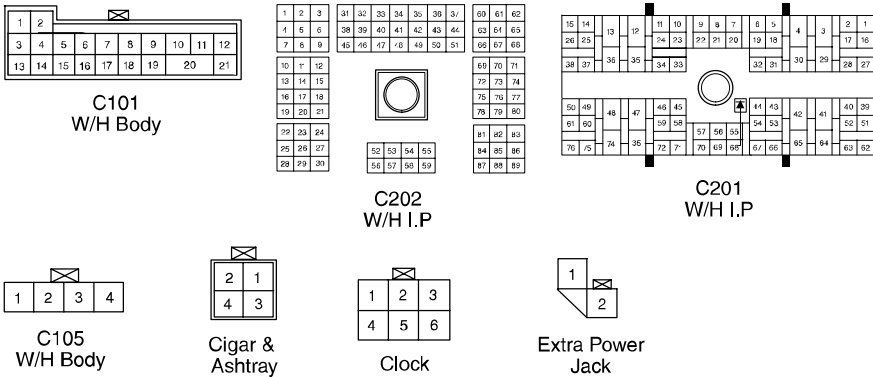

J3B1P045

c. POSITION OF CONNECTORS AND GROUNDS


- W/H INSTRUMENT PANEL

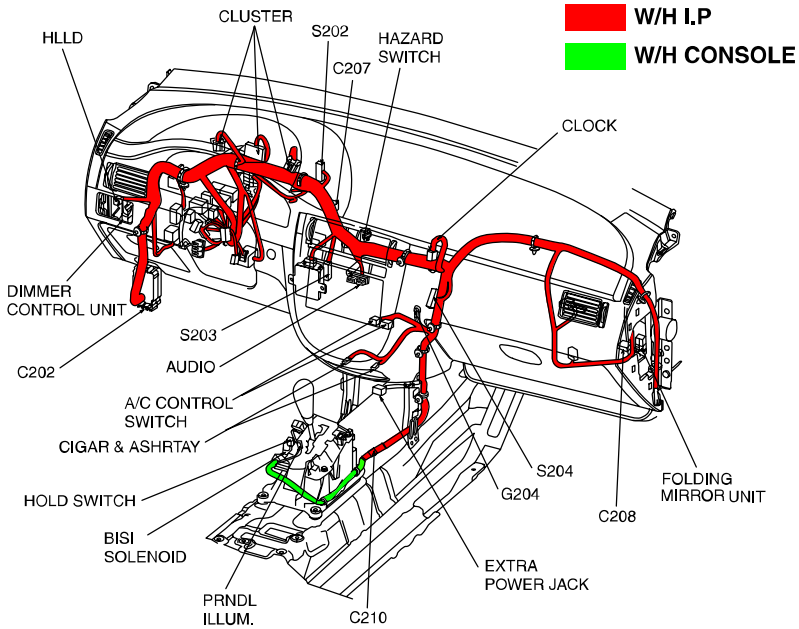

J3B12001


d. SPLICE PACK

S203

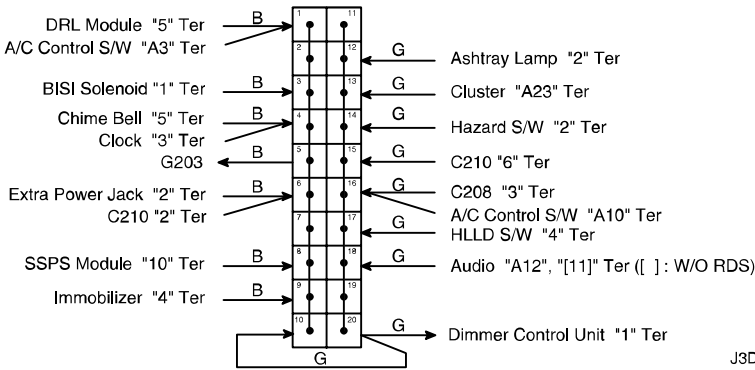


J3D1S004

S204

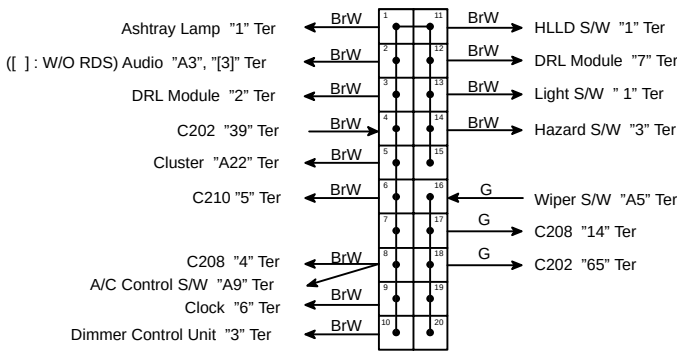

J3B1S006


2) A/T

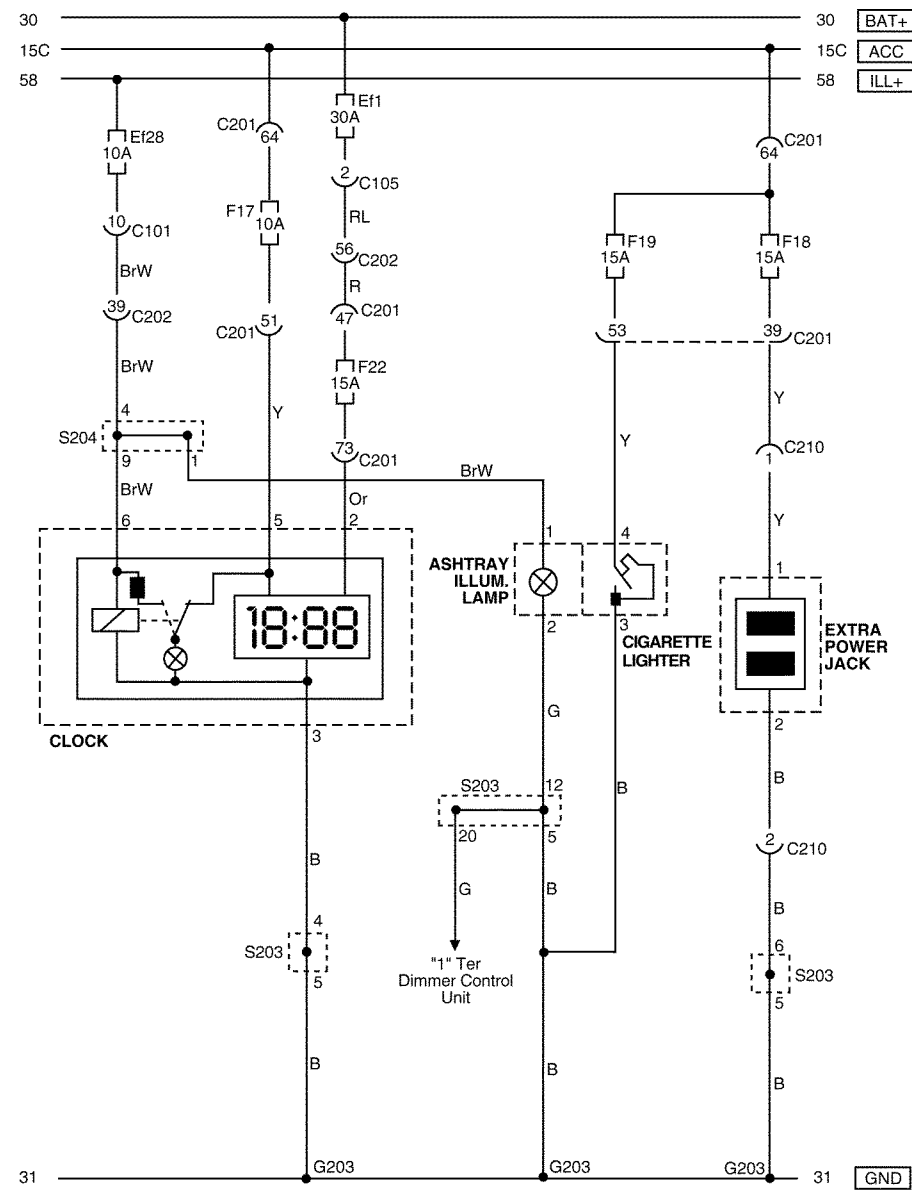

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C210 (6 Pin, White)	I.P – Console	Below Console Box
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G203	I.P	Behind Left Audio Bracket

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

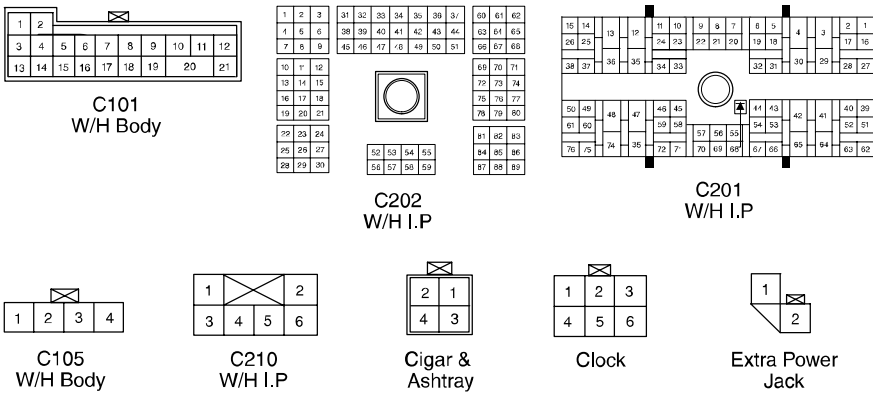


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

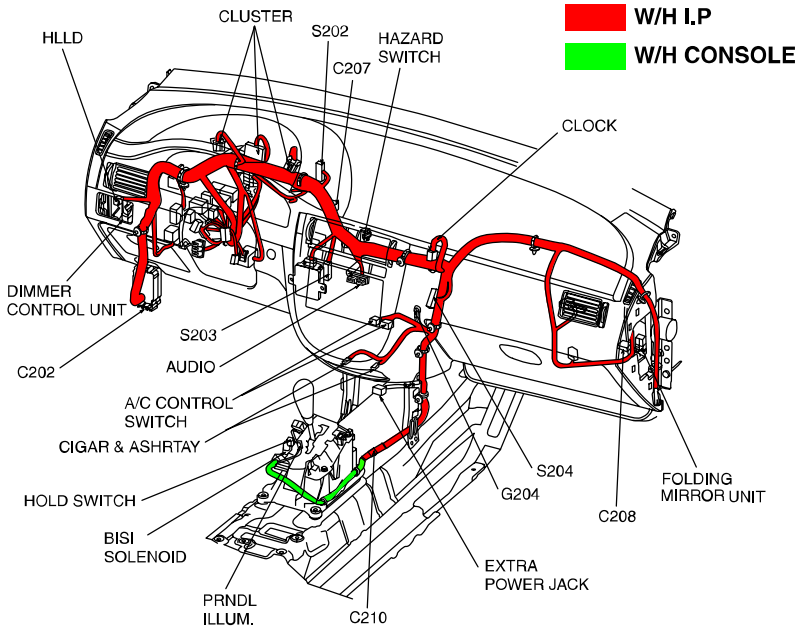


d. SPLICE PACK


S203

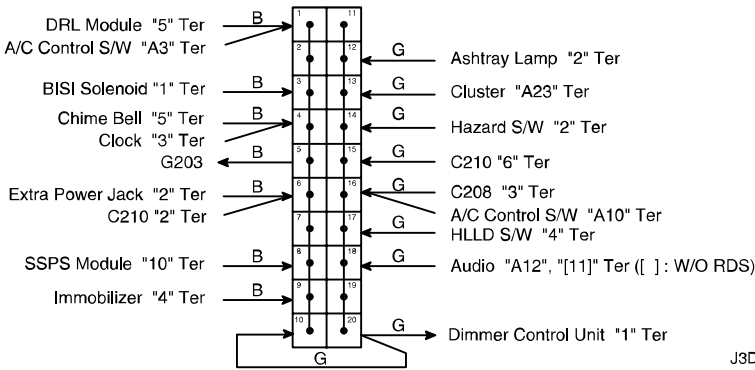

S204

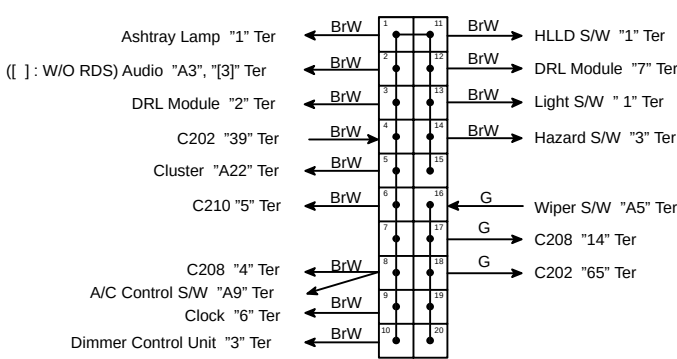


19. CHIME BELL, SEAT BELT & KEY REMIND SWITCH CIRCUIT

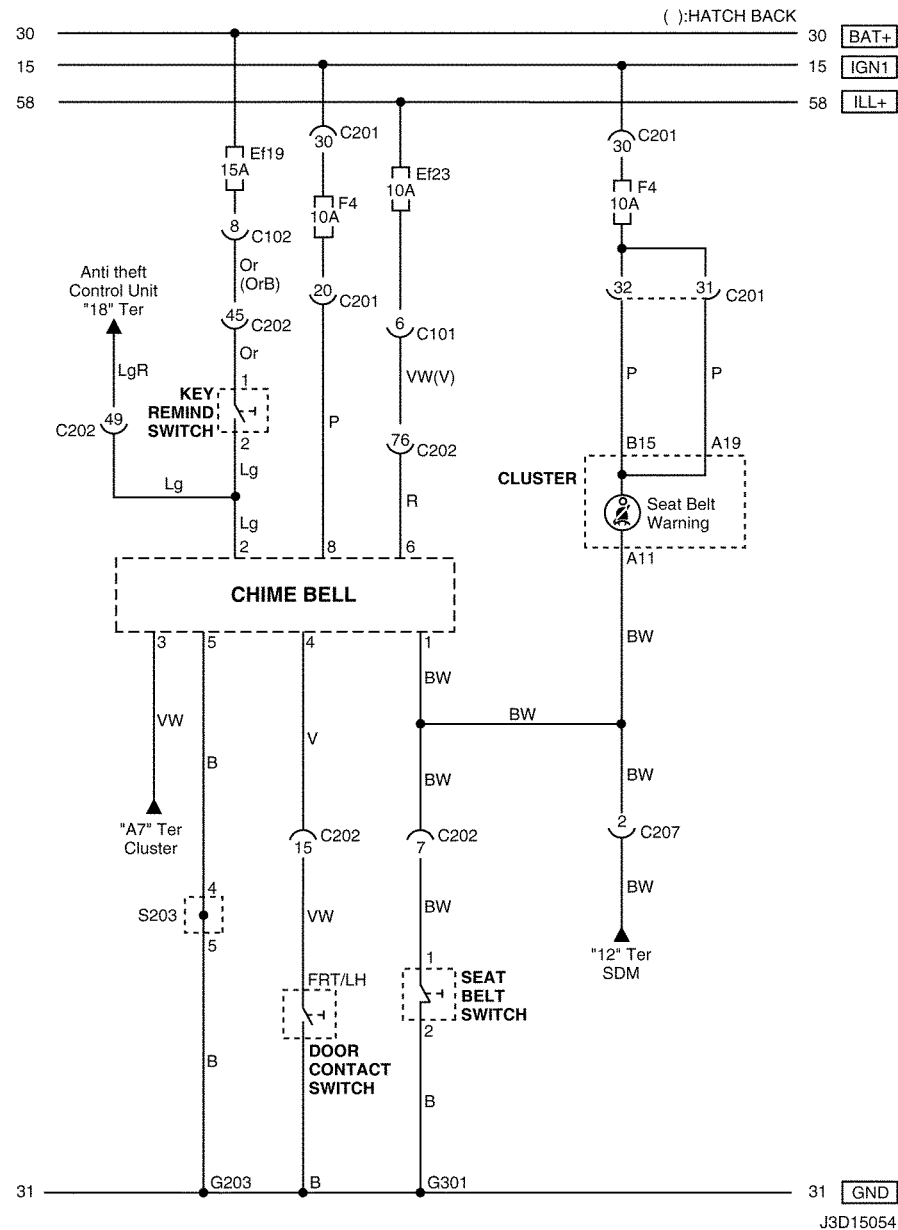

a. CONNECTOR INFORMATION


CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C207 (6 Pin, White)	Air Bag – I.P	Upper Right Driver Leg Room
S203 (Red)	I.P	Behind Audio Mounting
G203	I.P	Behind Left Audio Bracket
G301	Body	Below Co–Driver Cross Member Floor Panel

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

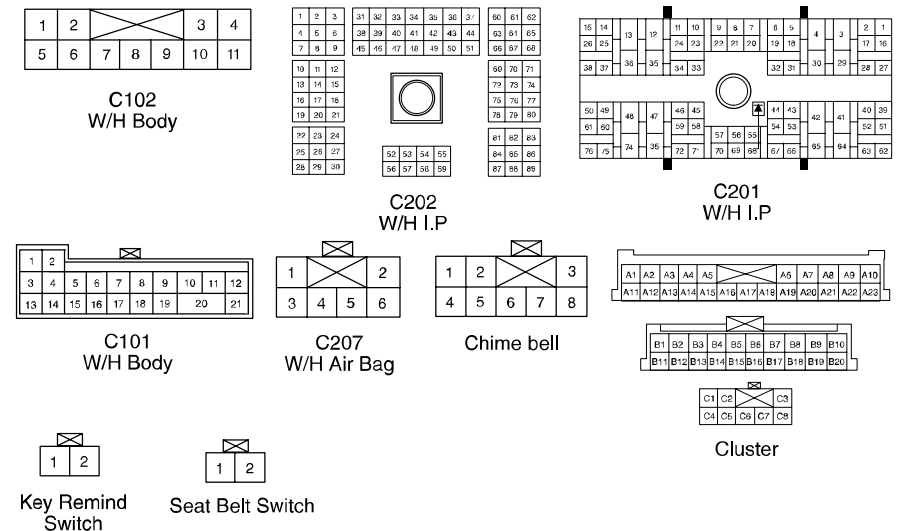


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

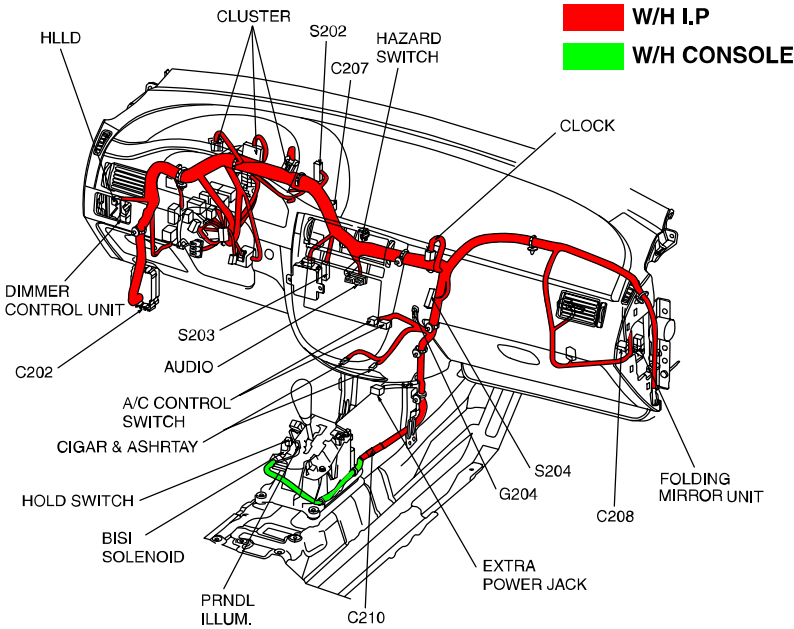


J3B12001

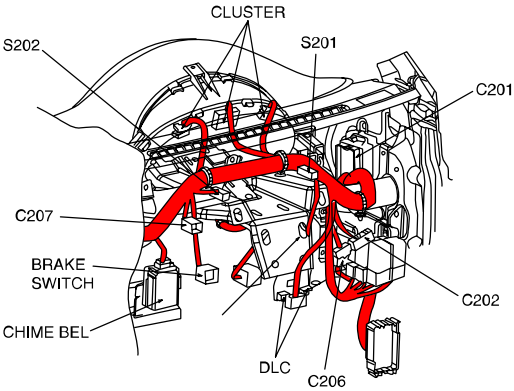

J3B12002

d. SPLICE PACK


S203

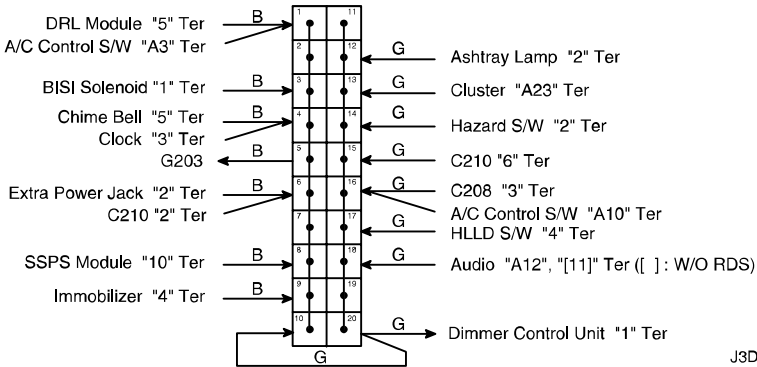

J3D1S004

20. WIPER CIRCUIT

1) W/O RAIN SENSOR & AIR CONDITIONER : NOTCH BACK

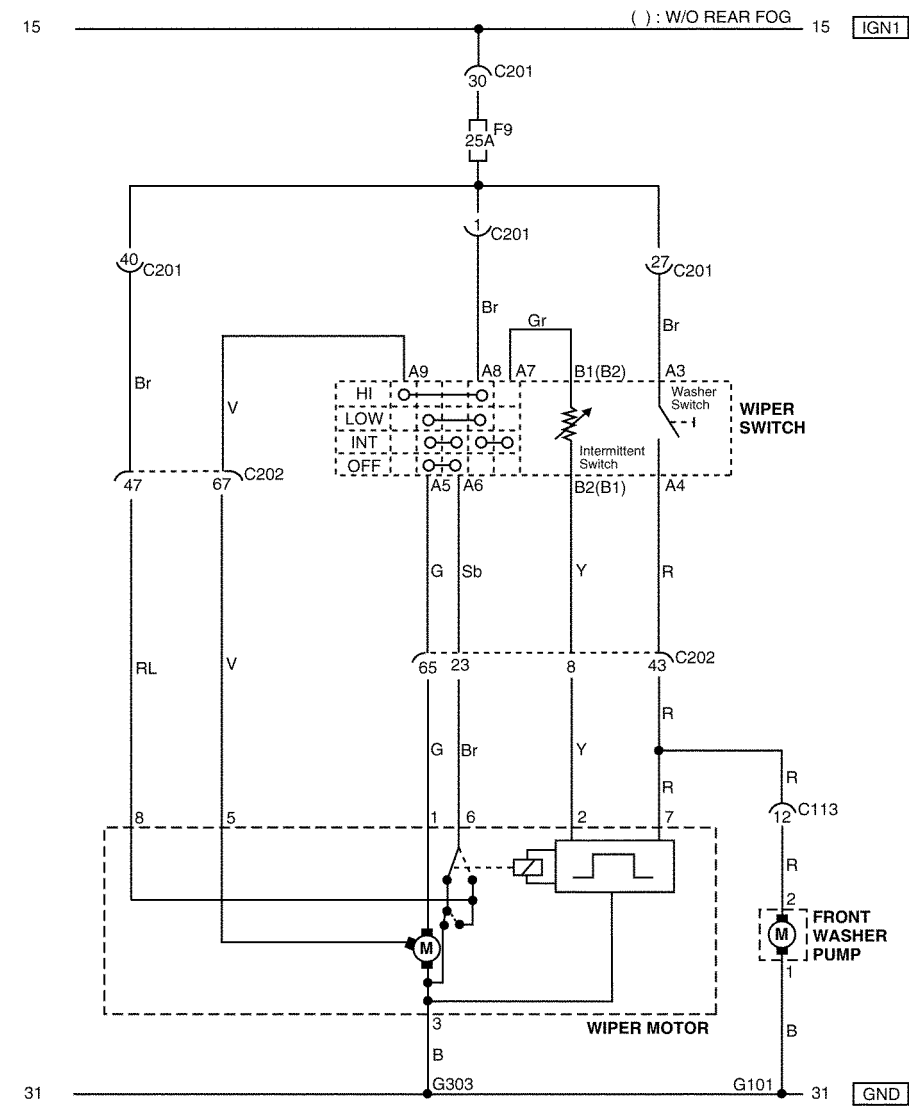


J3D15055

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
G101	Front	Behind Left Head Lamp
G303	Body	Below Left Driver Leg Room


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

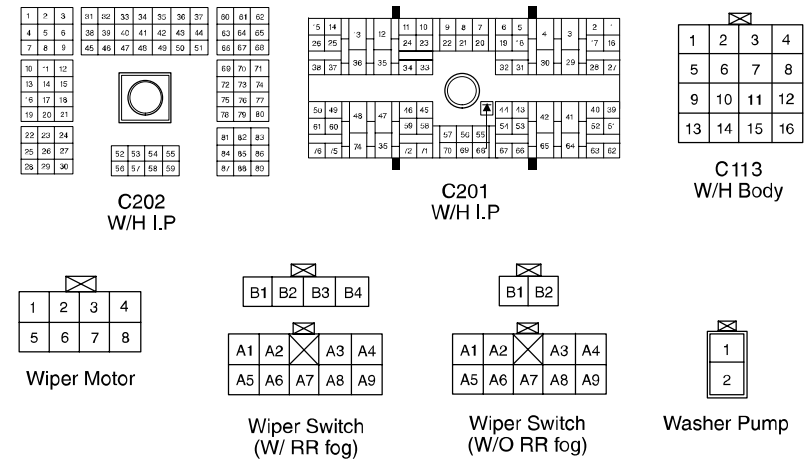


J3D1P029

c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

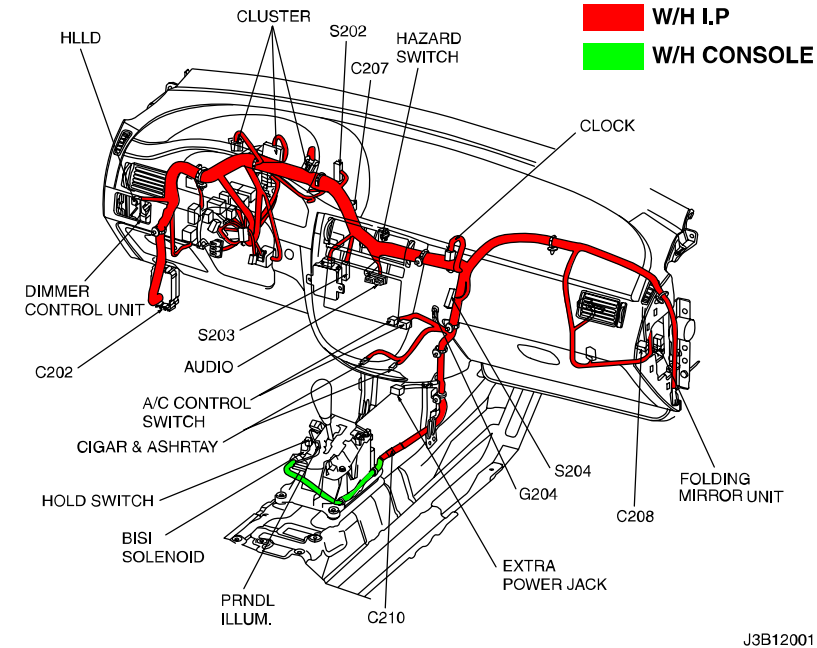


W/H I.P

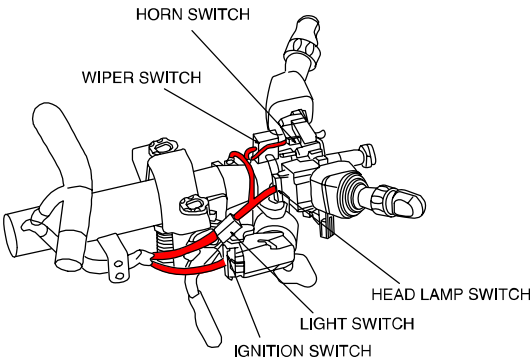


- W/H BODY

W/H BODY

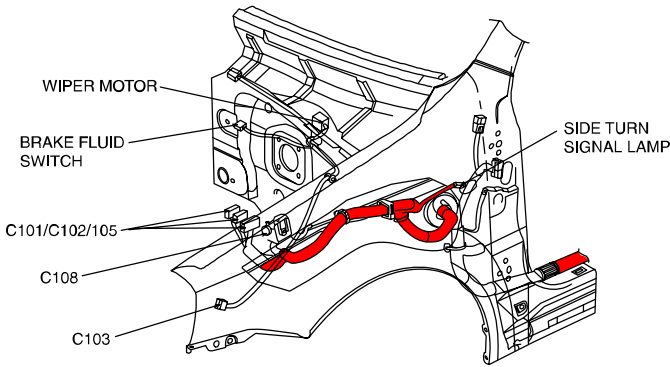

2) W/O RAIN SENSOR & AIR CONDITIONER : HATCH BACK

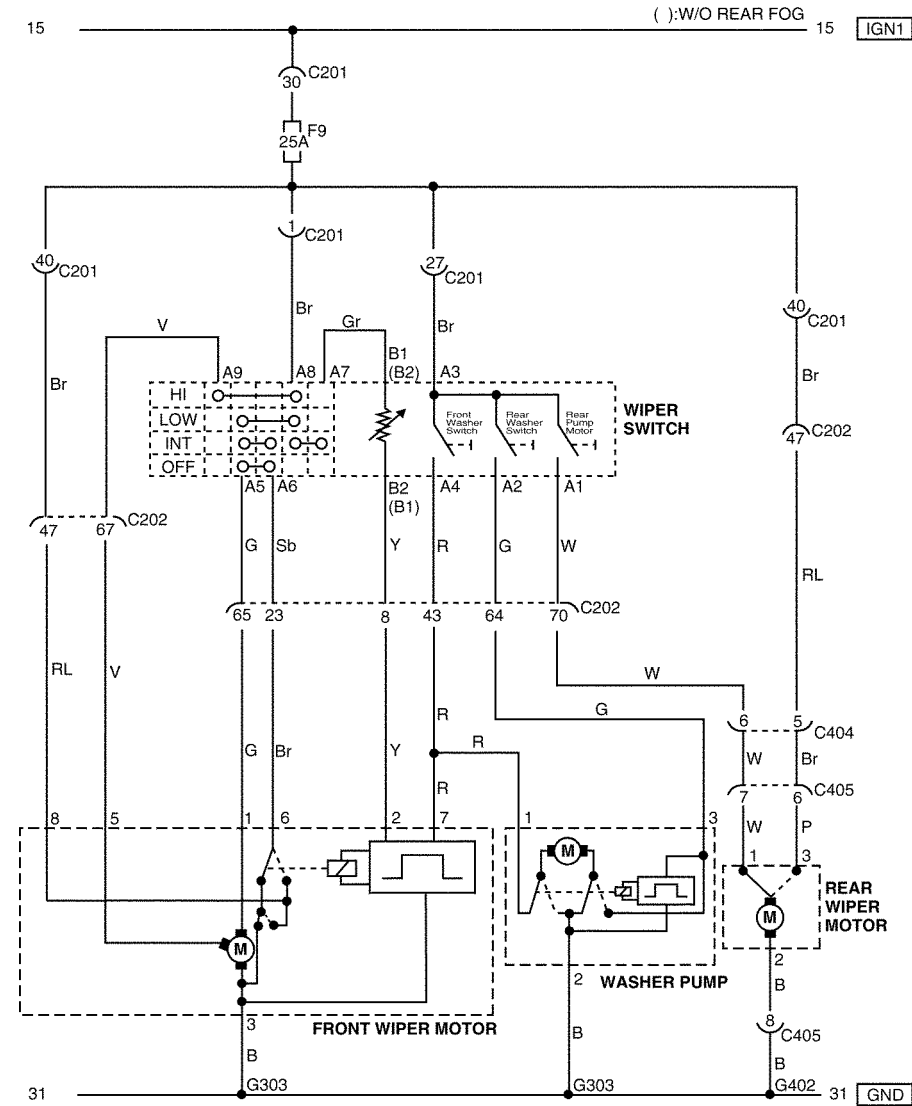


J3D15056

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C404 (8 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C405 (8 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
G303	Body	Below Left Driver Leg Room
G402	T/Gate. EXT	Inside Driver C Pillar


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

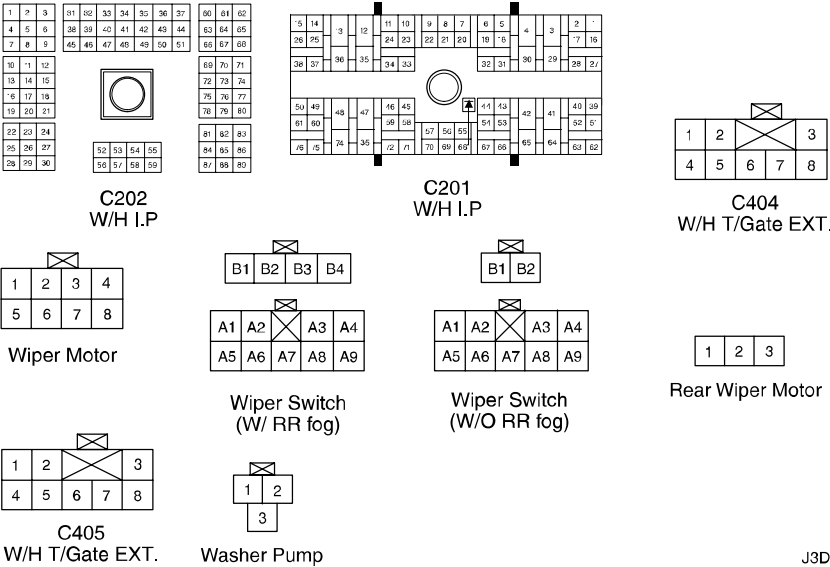

J3D1P030


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TAIL GATE

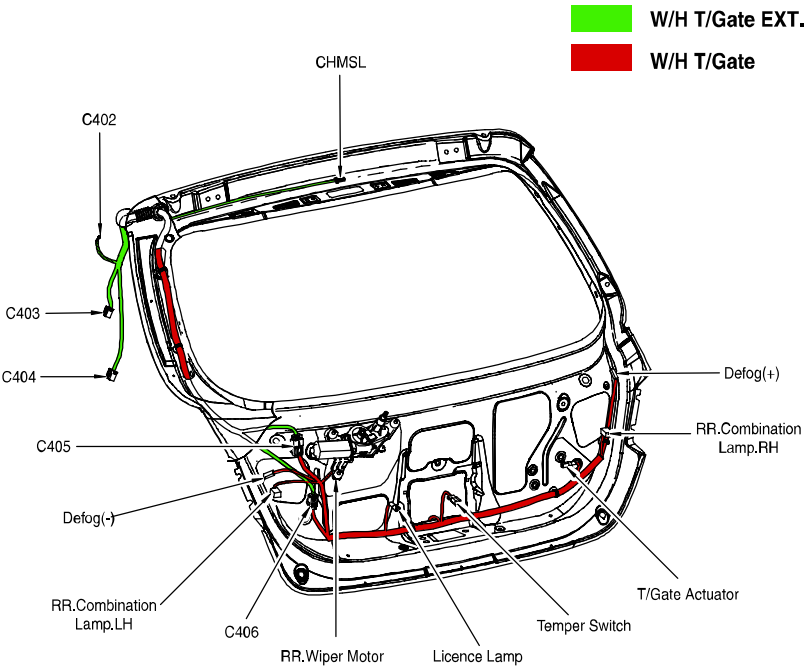


J3B12031

- W/H INSTRUMENT PANEL

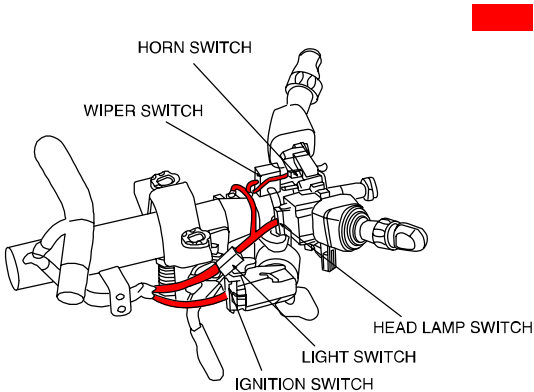


J3B12003

- W/H BODY

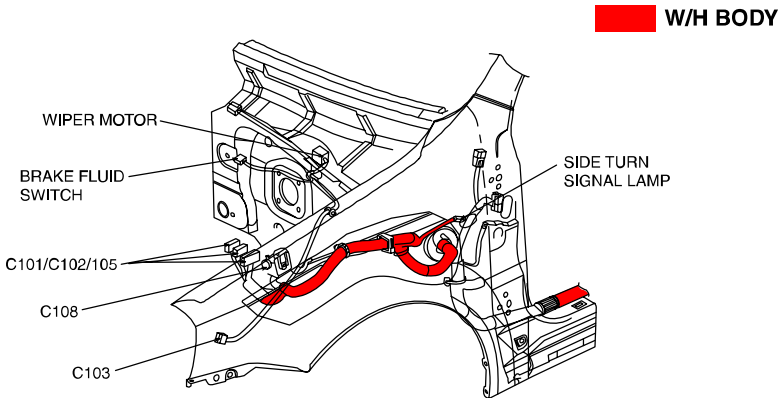

J3B12020

3) W/ RAIN SENSOR & AIR CONDITIONER : NOTCH BACK

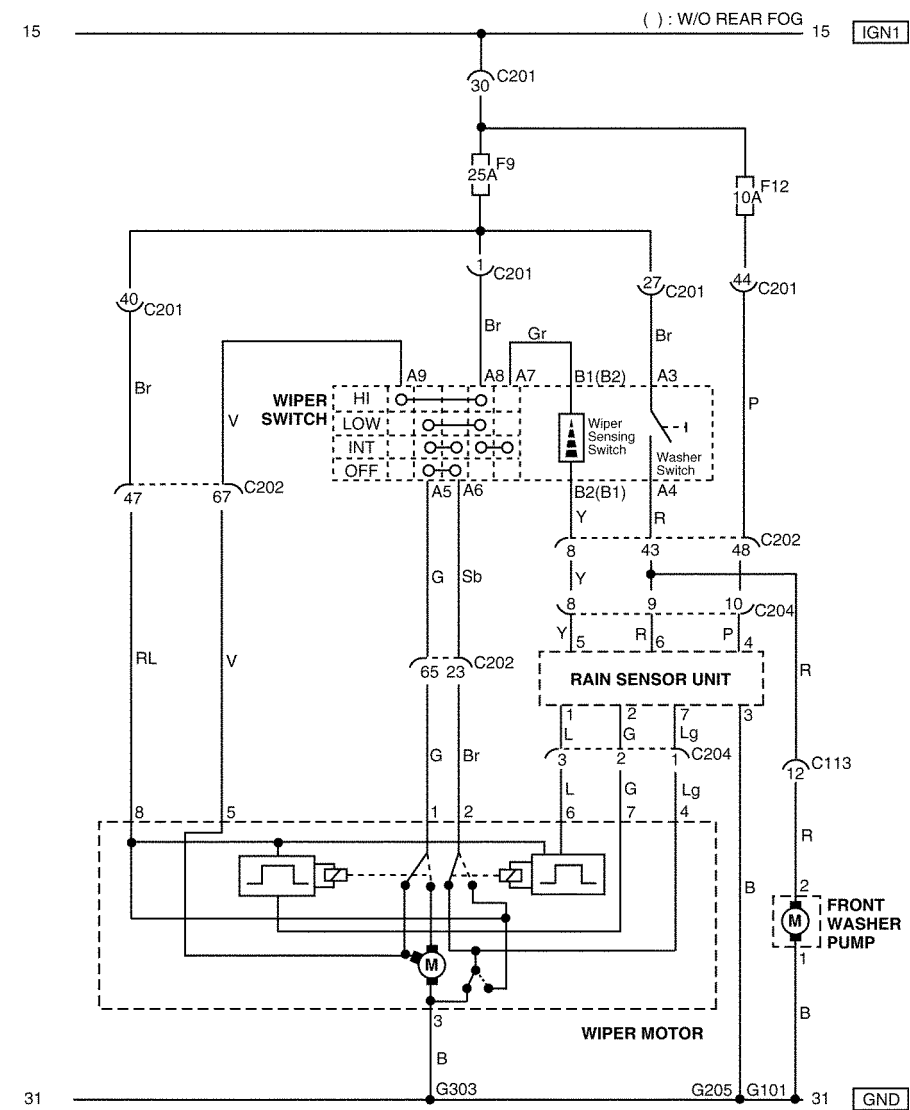


J3D15057

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C204 (14 Pin, White)	Roof – Body (W/ Rain Sensor)	Left Driver Leg Room
C204 (8 Pin, White)	Roof – Body (W/O Rain Sensor)	Left Driver Leg Room
G101	Front	Behind Left Head Lamp
G205	Roof	Inside Driver A Pillar
G303	Body	Below Left Driver Leg Room


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

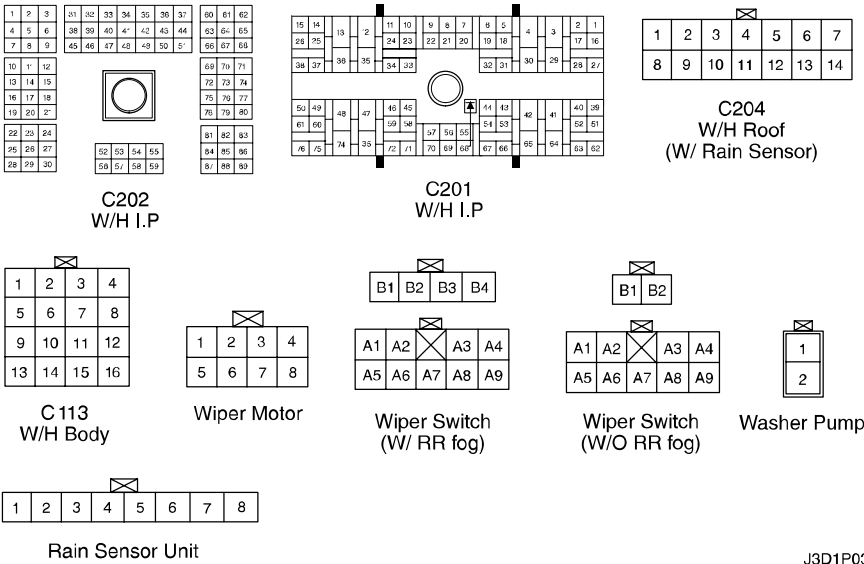


J3D1P031

c. POSITION OF CONNECTORS AND GROUNDS

• W/H INSTRUMENT PANEL

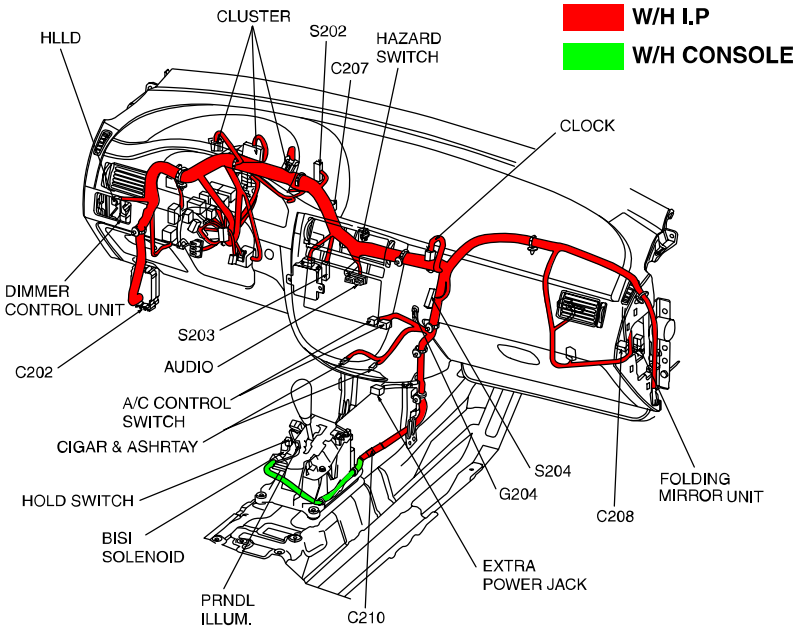


J3B12001

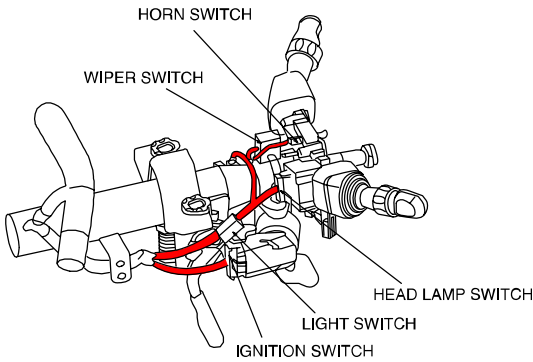


J3B12003

• W/H BODY

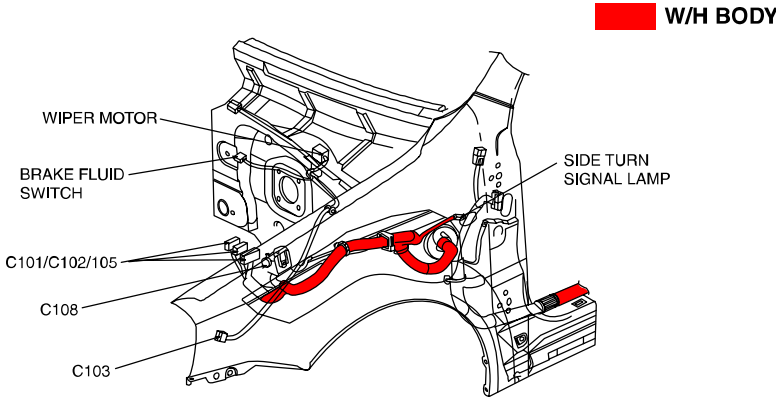

J3B12020

4) W/ RAIN SENSOR & AIR CONDITIONER : HATCH BACK

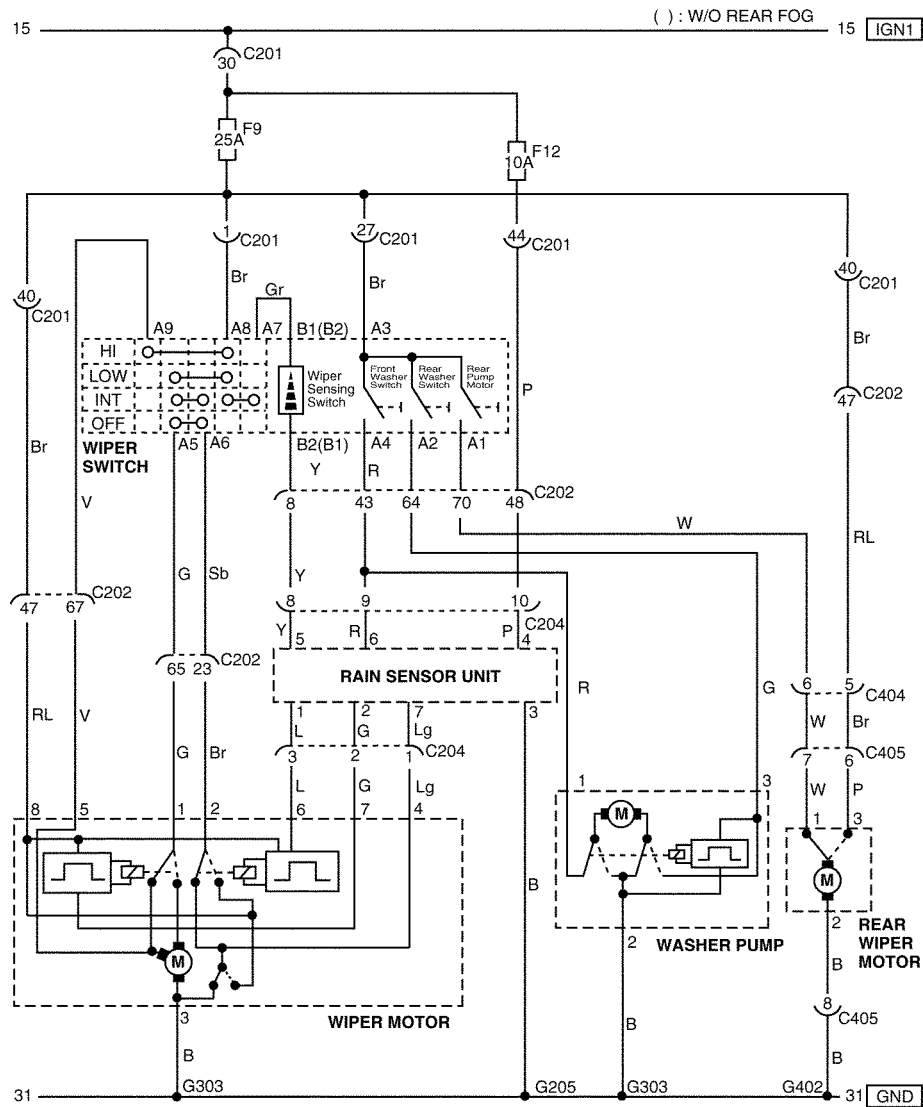


J3D15058

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C204 (14 Pin, White)	Roof – Body (W/ Rain Sensor)	Left Driver Leg Room
C204 (8 Pin, White)	Roof – Body (W/O Rain Sensor)	Left Driver Leg Room
C404 (8 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C405 (8 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
G205	Roof	Inside Driver A Pillar
G303	Body	Below Left Driver Leg Room
G402	T/Gate. EXT	Inside Driver C Pillar


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

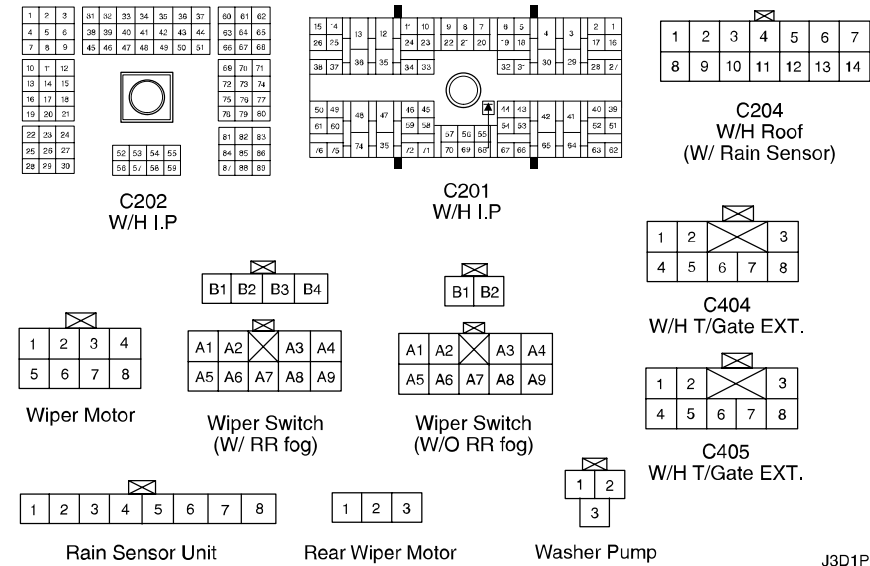

J3D1P032


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TAIL GATE

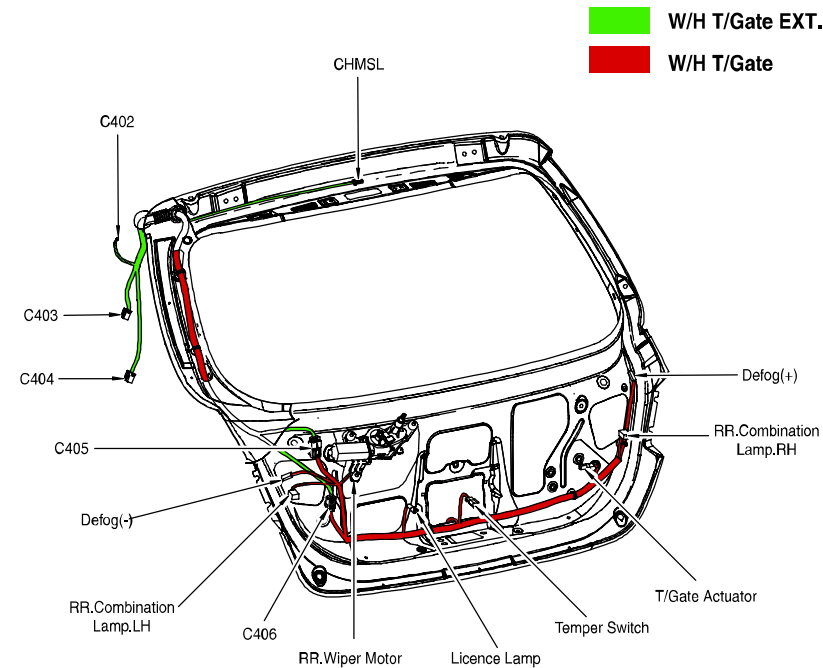


J3B12031

- W/H INSTRUMENT PANEL

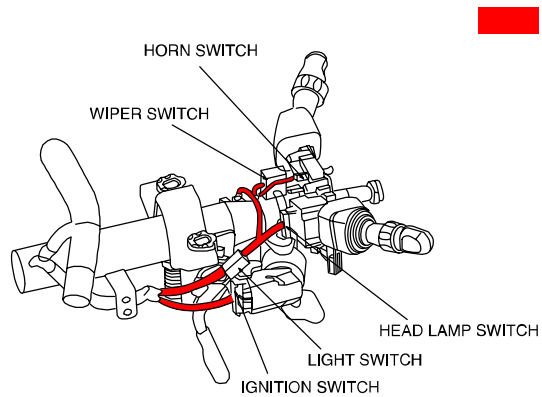


J3B12003

- W/H BODY

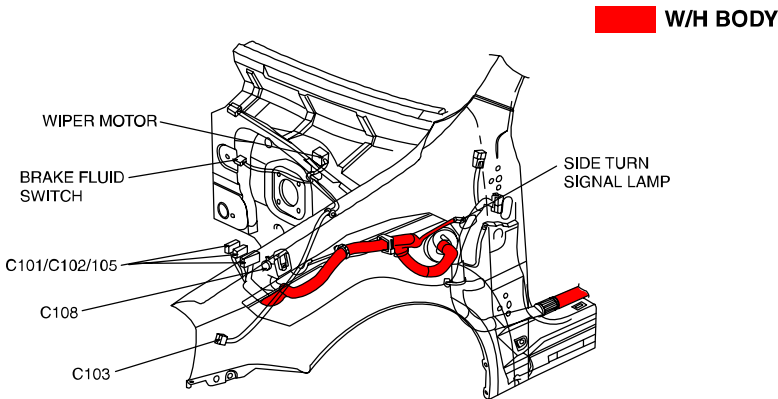

J3B12020

5) W/O RAIN SENSOR & FATC : NOTCH BACK

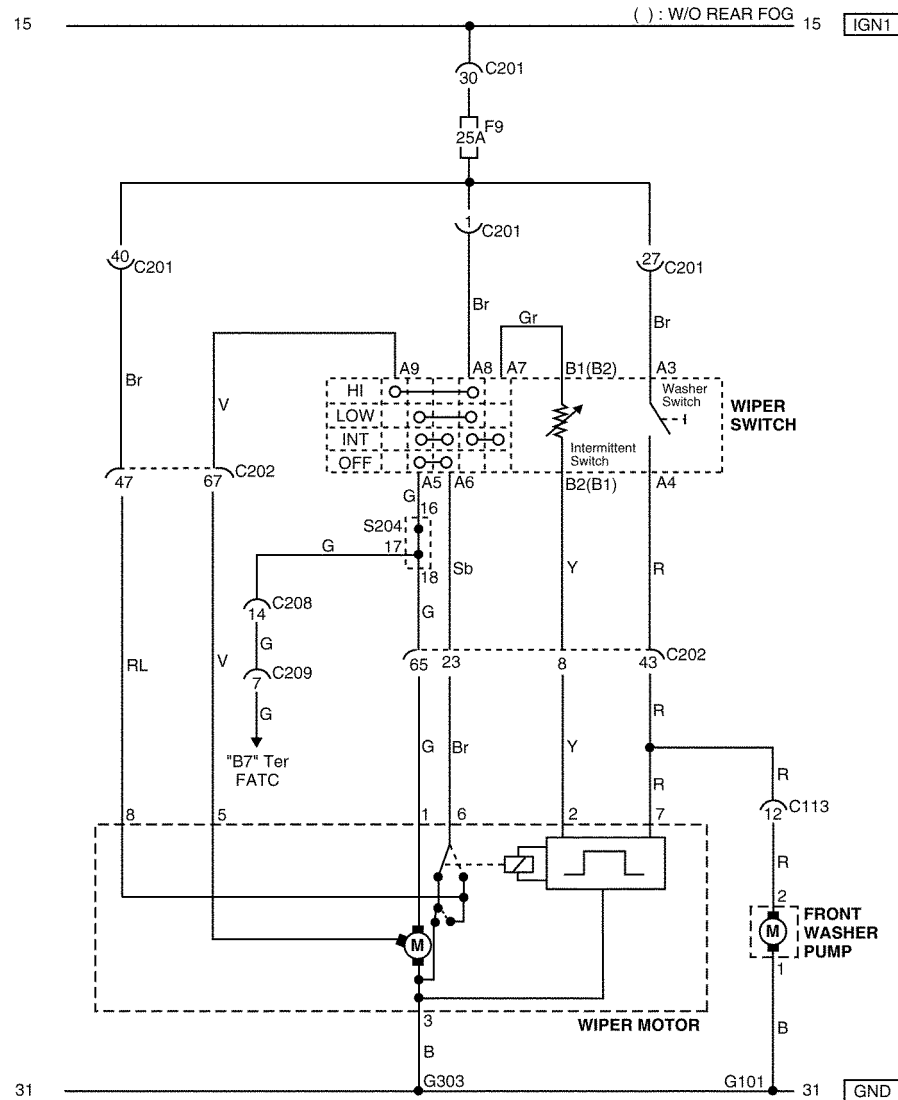


J3D15059

a. CONNECTOR INFORMATION

CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C208 (15 Pin, White)	I.P – FATC	Behind Glove Box
C209 (20 Pin, Black)	FATC – FATC.Aux	Between Heater Core and Evaporator Core
S204 (Magenta)	I.P	Behind Audio Mounting
G101	Front	Behind Left Head Lamp
G303	Body	Below Left Driver Leg Room

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

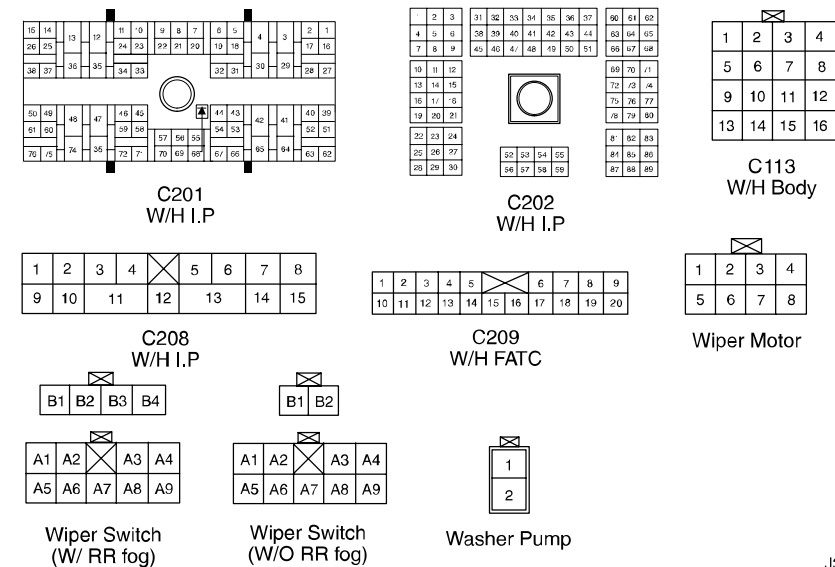


J3D1P033


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

 W/H I.P

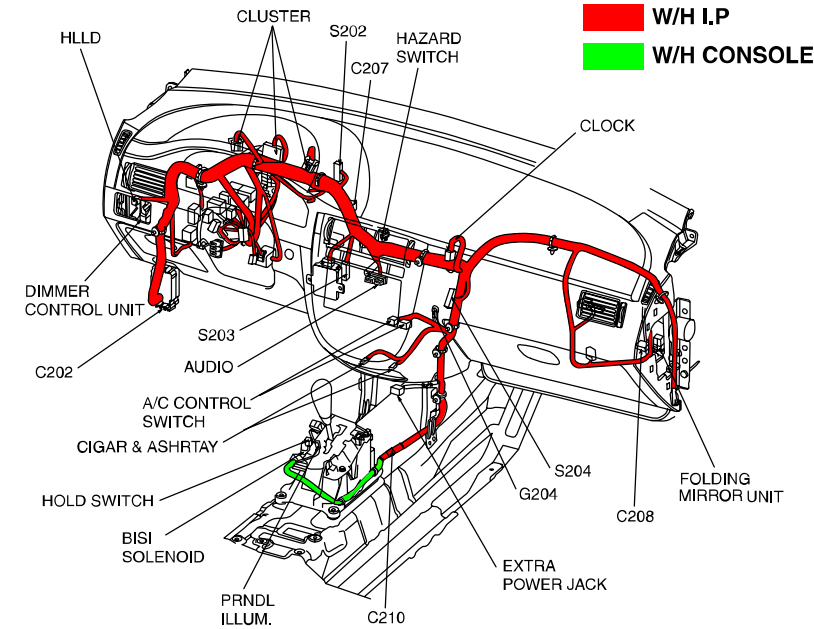


J3B12001

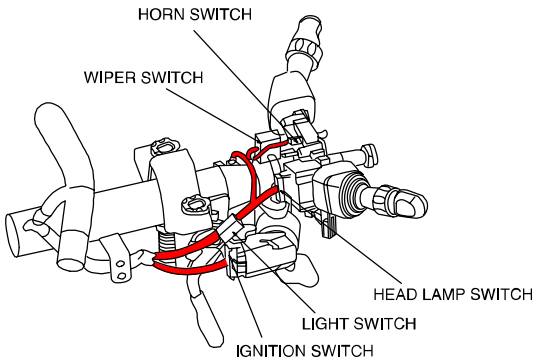


J3B12003

d. SPLICE PACK
S204

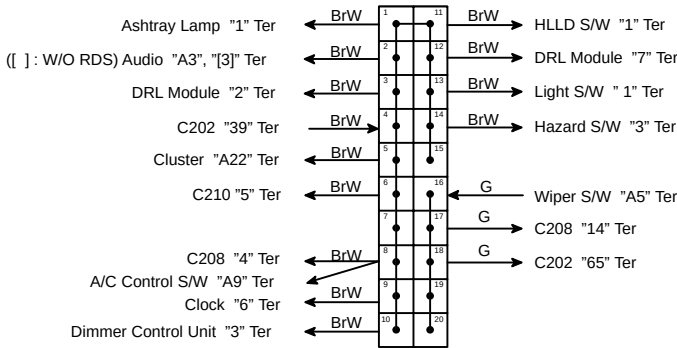

J3B1S006


6) W/O RAIN SENSOR & FATC : HATCH BACK

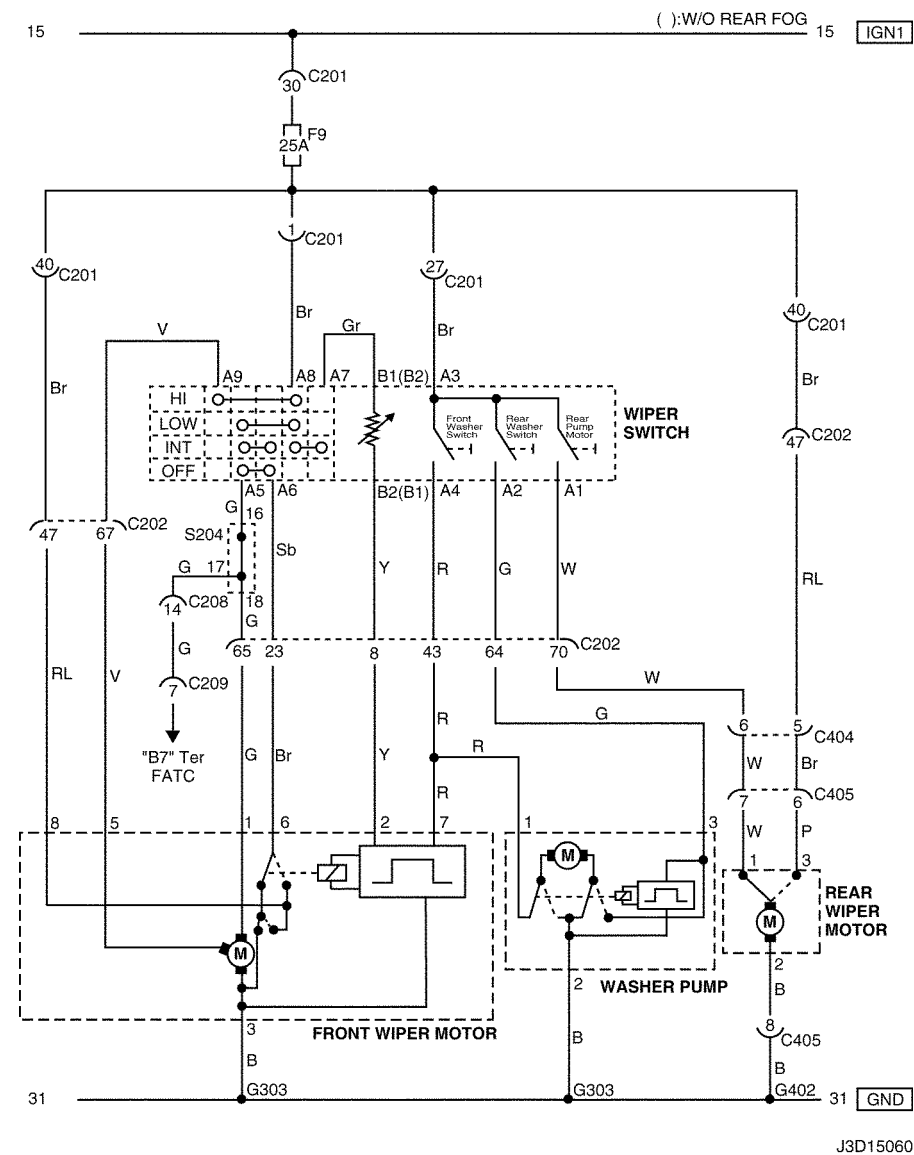

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C208 (15 Pin, White)	I.P – FATC	Behind Glove Box
C209 (20 Pin, Black)	FATC – FATC.Aux	Between Heater Core and Evaporator Core
C404 (8 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C405 (8 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
S204 (Magenta)	I.P	Behind Audio Mounting
G303	Body	Below Left Driver Leg Room
G402	T/Gate. EXT	Inside Driver C Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

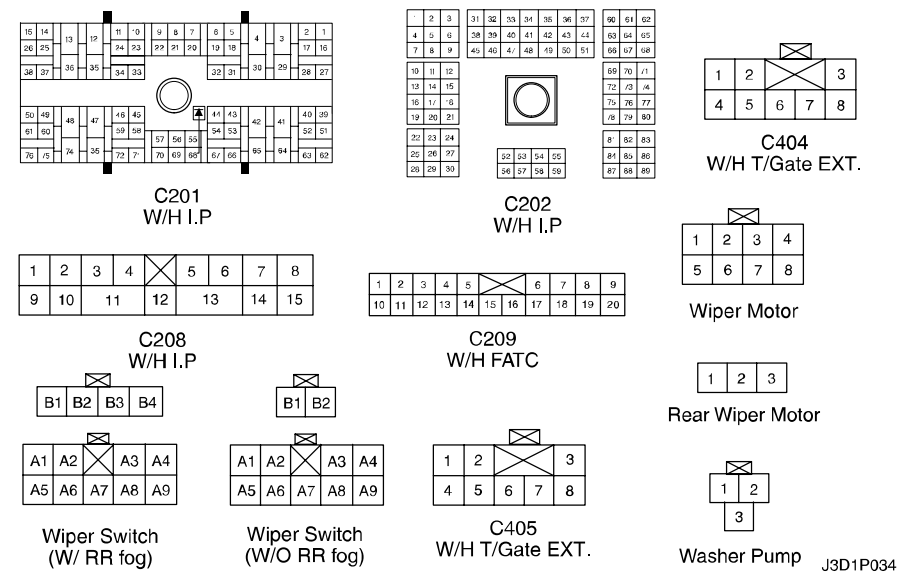


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TAIL GATE

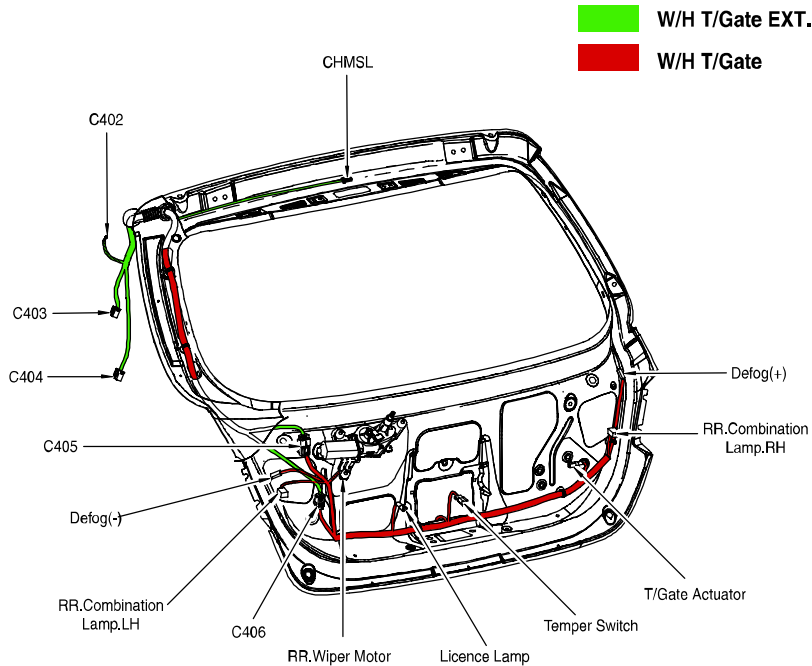

J3B12031


- W/H INSTRUMENT PANEL

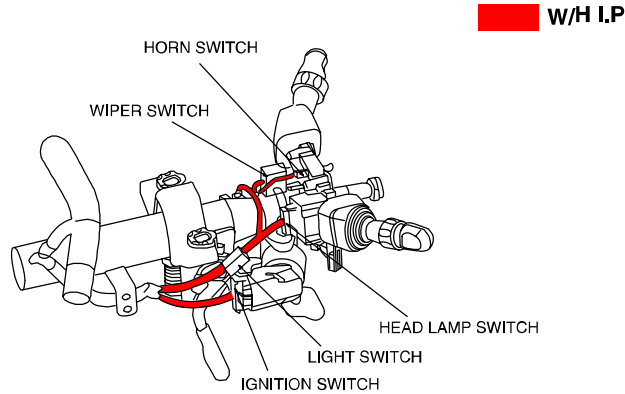

J3B12003

d. SPLICE PACK

S204

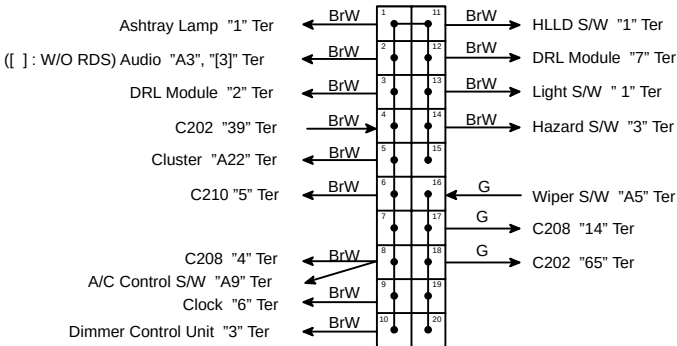

J3B1S006



CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C204 (14 Pin, White)	Roof – Body (W/ Rain Sensor)	Left Driver Leg Room
C204 (8 Pin, White)	Roof – Body (W/O Rain Sensor)	Left Driver Leg Room
C208 (15 Pin, White)	I.P – FATC	Behind Glove Box
C209 (20 Pin, Black)	FATC – FATC.Aux	Between Heater Core and Evaporator Core
S204 (Magenta)	I.P	Behind Audio Mounting
G101	Front	Behind Left Head Lamp
G205	Roof	Inside Driver A Pillar
G303	Body	Below Left Driver Leg Room

C202
W/H I.P.

C207
W/H I.P.

C208
W/H I.P.

C209
W/H FATC

C204
W/H Roof
(W/ Rain Sensor)

C113
W/H Body

Washer Pump

Wiper Motor

Wiper Switch
(W/ RR fog)


Wiper Switch
(W/O RR fog)

Rain Sensor Unit


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

W/H I.P

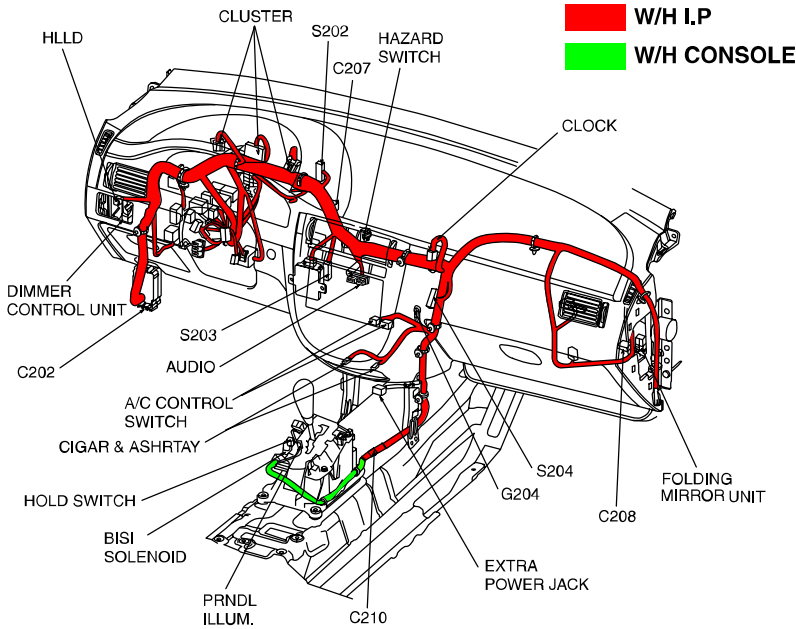


J3B12001

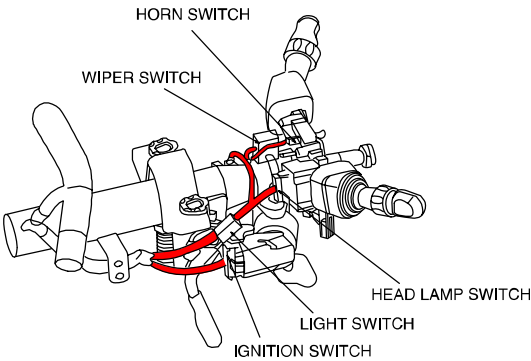


J3B12003

d. SPLICE PACK
S204

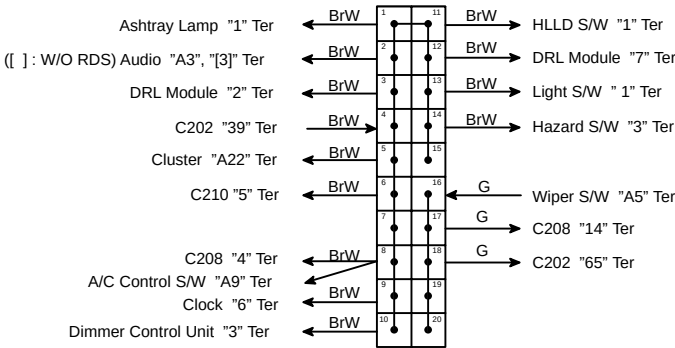

J3B1S006

8) W/ RAIN SENSOR & FATC : HATCH BACK

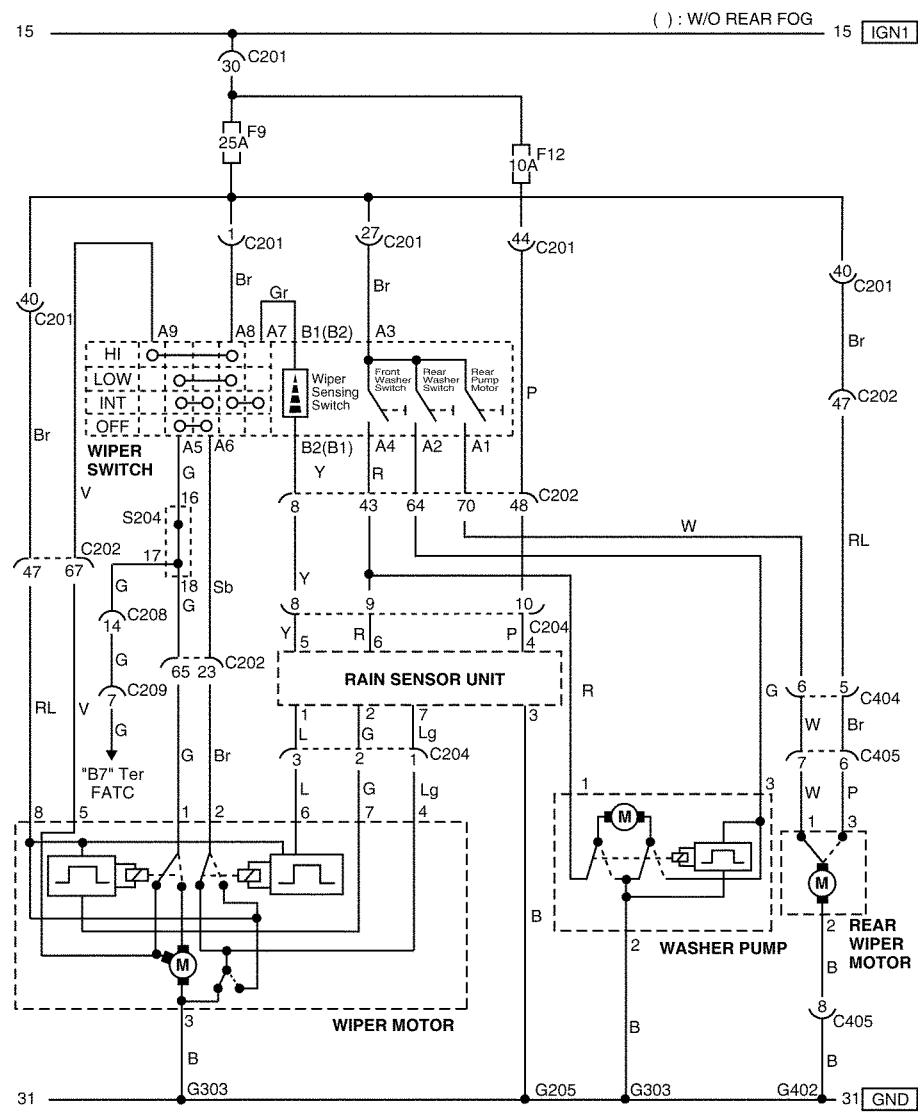


J3D15062

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C204 (14 Pin, White)	Roof – Body (W/ Rain Sensor)	Left Driver Leg Room
C204 (8 Pin, White)	Roof – Body (W/O Rain Sensor)	Left Driver Leg Room
C208 (15 Pin, White)	I.P – FATC	Behind Glove Box
C209 (20 Pin, Black)	FATC – FATC.Aux	Between Heater Core and Evaporator Core
C404 (8 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C405 (8 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
S204 (Magenta)	I.P	Behind Audio Mounting
G205	Roof	Inside Driver A Pillar
G303	Body	Below Left Driver Leg Room
G402	T/Gate. EXT	Inside Driver C Pillar


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

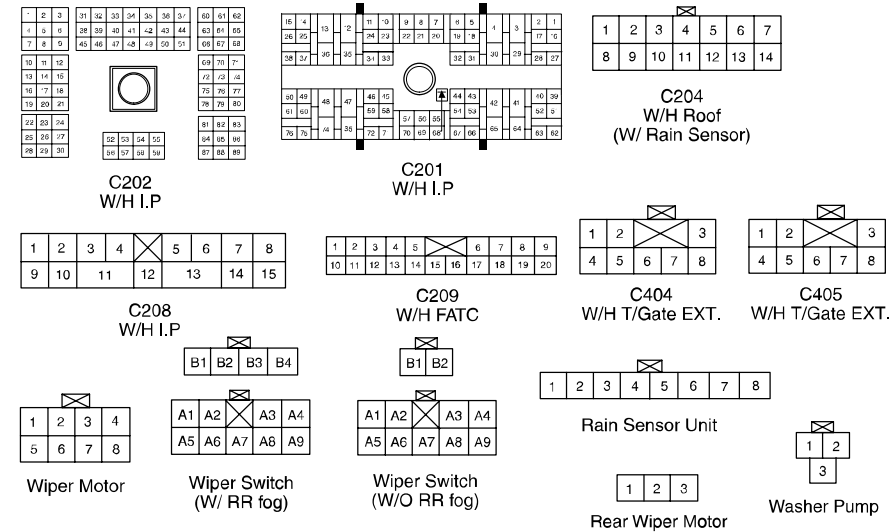

J3D1P036


c. POSITION OF CONNECTORS AND GROUNDS

- W/H TAIL GATE

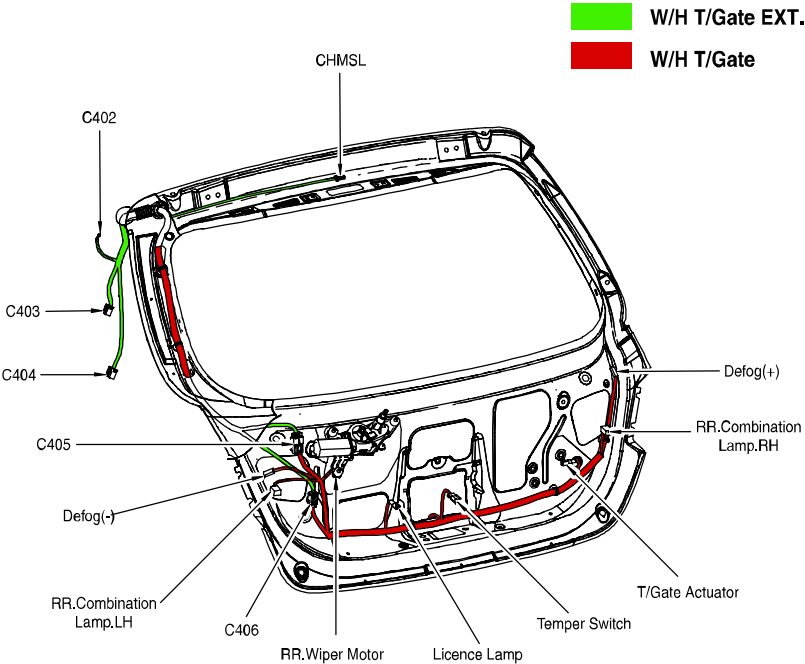

J3B12031


- W/H INSTRUMENT PANEL

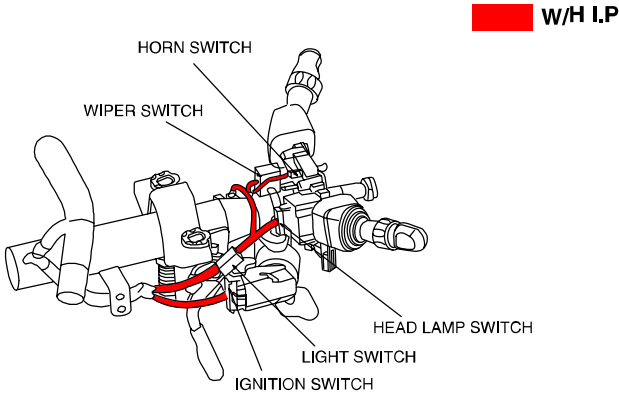

J3B12003


d. SPLICE PACK

S204

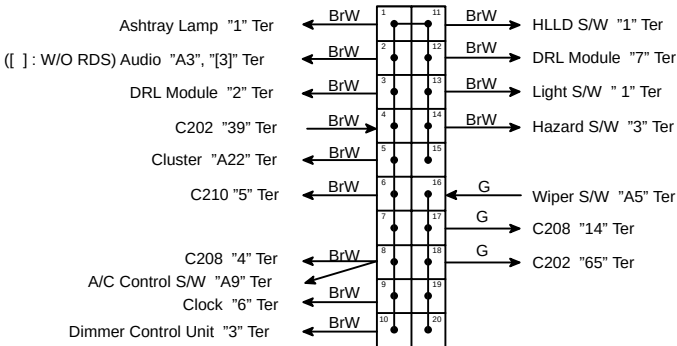

J3B1S006

21. REAR WINDOW DEFROSTER & OSRV MIRROR HEATING SYSTEM
CIRCUIT

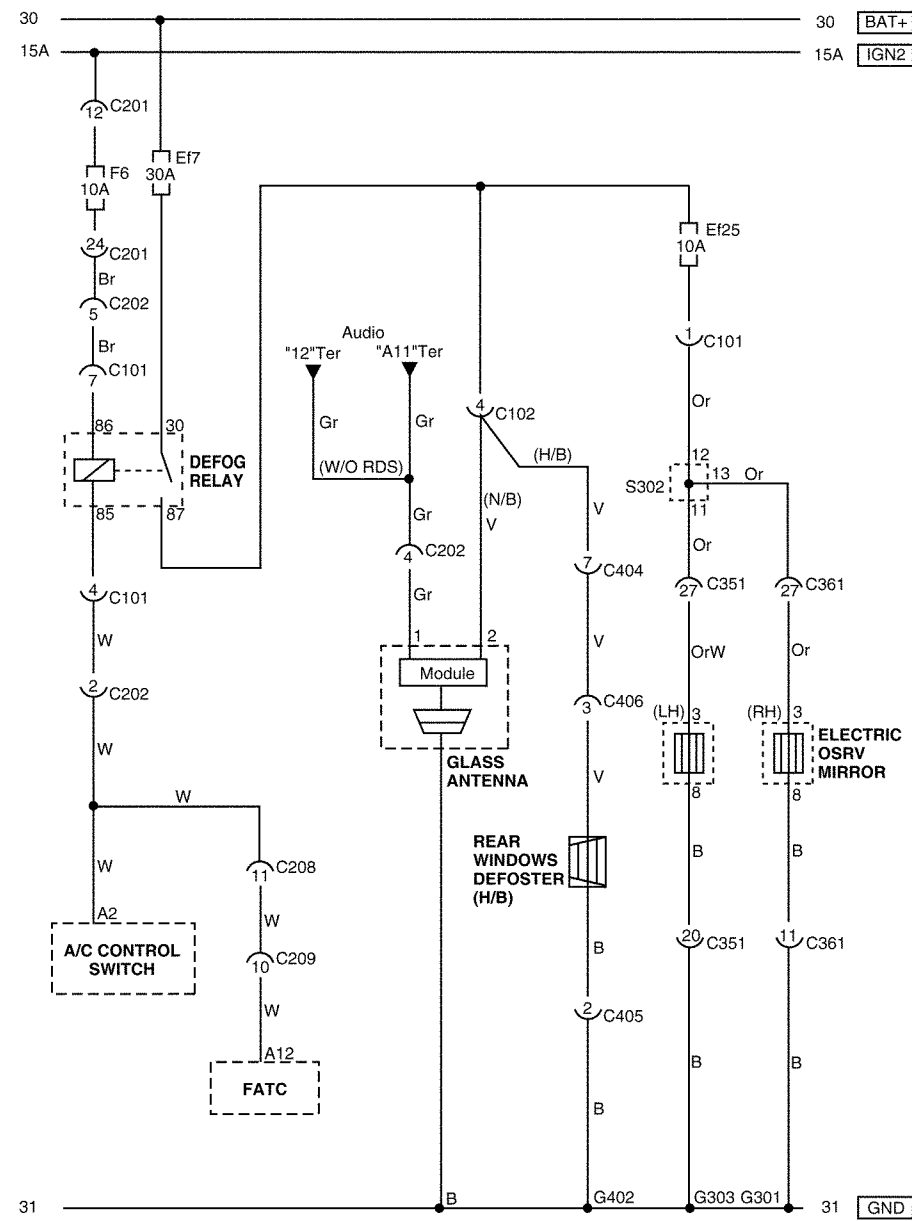


J3D15063

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C208 (15 Pin, White)	I.P – FATC	Behind Glove Box
C209 (20 Pin, Black)	FATC – FATC.Aux	Between Heater Core and Evaporator Core
C404 (8 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C405 (8 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
C406 (6 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C361 (33 Pin, Gray)	Body – Front Right Door	Under Co-Driver A Pillar
S302 (Brown)	Body	Left Driver Leg Room
G301	Body	Below Co-Driver Cross Member Floor Panel
G303	Body	Below Left Driver Leg Room
G402	T/Gate. EXT	Inside Driver C Pillar


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

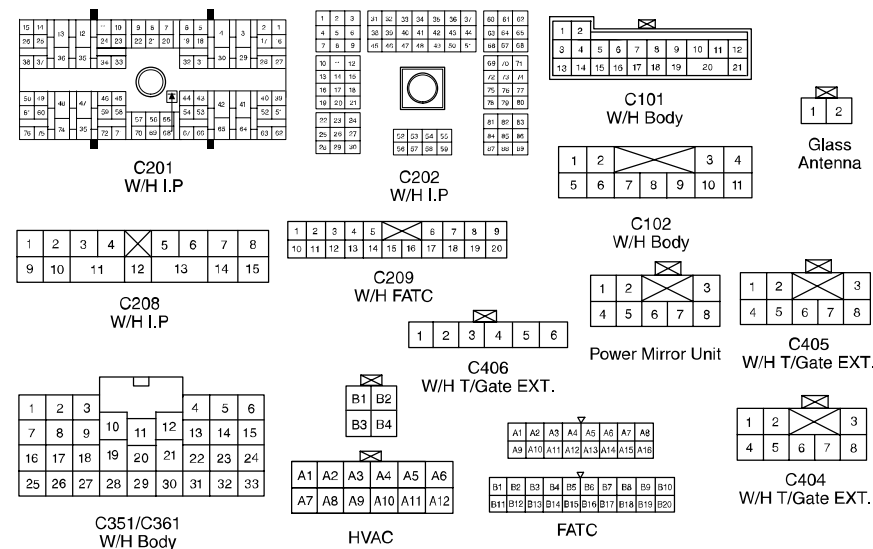


J3D1P037

c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

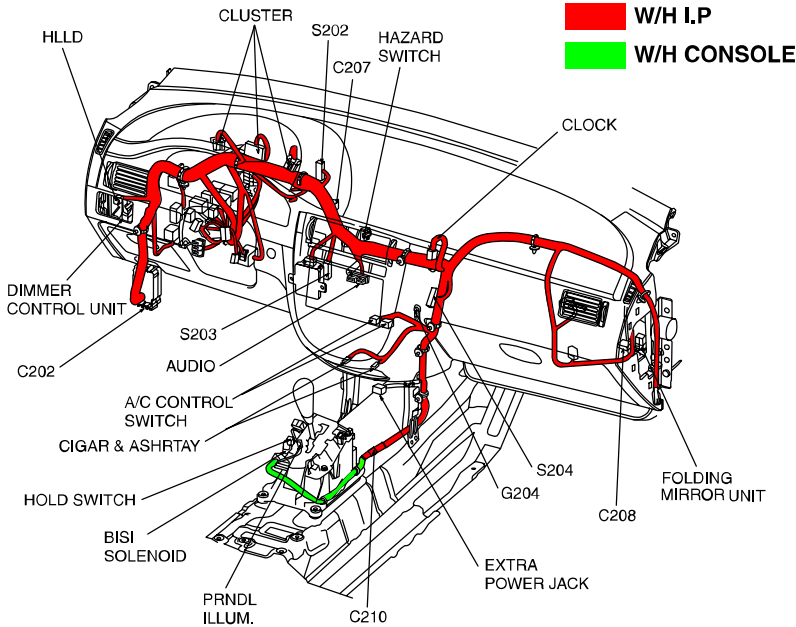


- W/H DRIVE DOOR

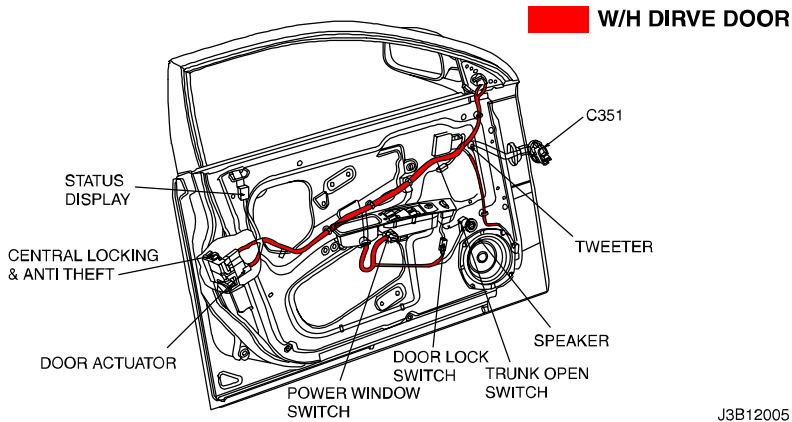


d. SPLICE PACK

S302 (NOTCH BACK)

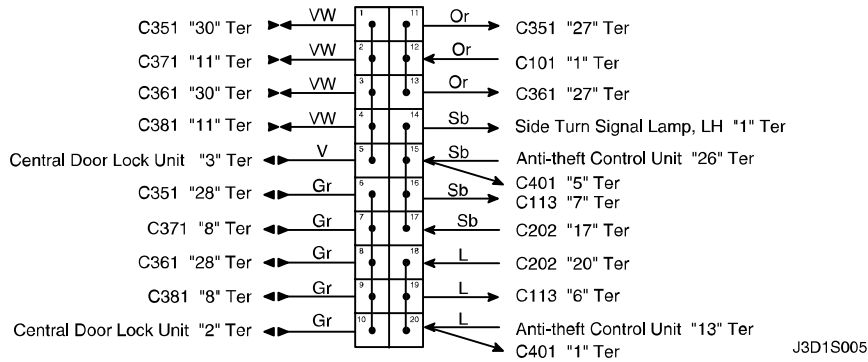

S302 (HATCH BACK)

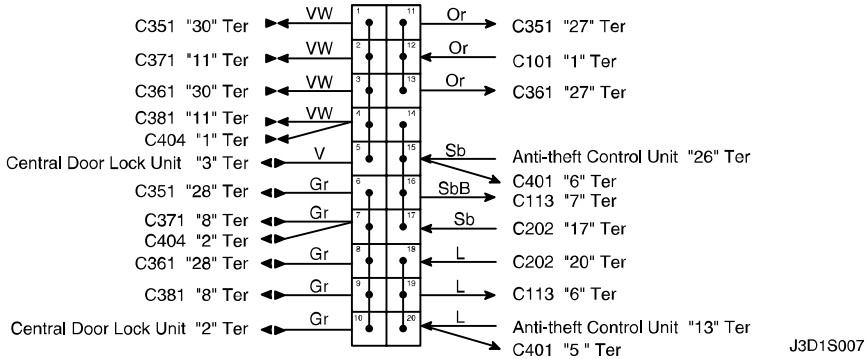




CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C361 (33 Pin, Gray)	Body – Front Right Door	Under Co–Driver A Pillar
S302 (Brown)	Body	Left Driver Leg Room
G301	Body	Below Co–Driver Cross Member Floor Panel
G303	Body	Below Left Driver Leg Room


J3B1P053

c. POSITION OF CONNECTORS AND GROUNDS

- W/H DRIVE DOOR

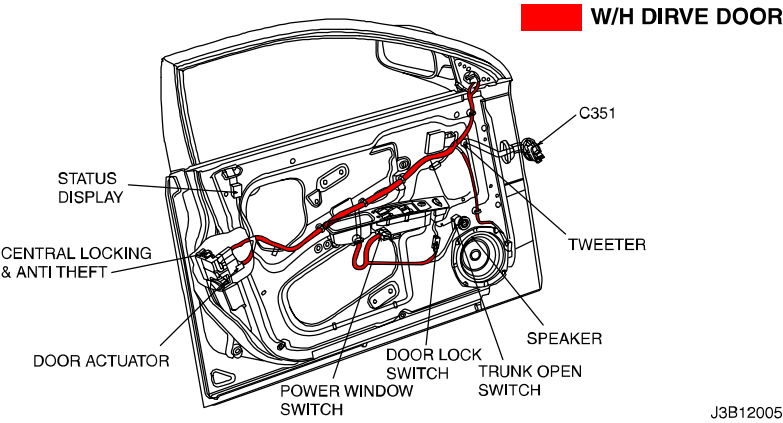


- W/H INSTRUMENT PANEL

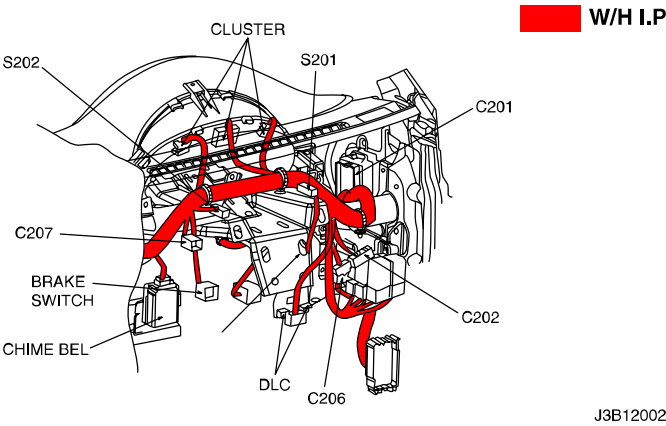


d. SPLICE PACK


S302 (NOTCH BACK)

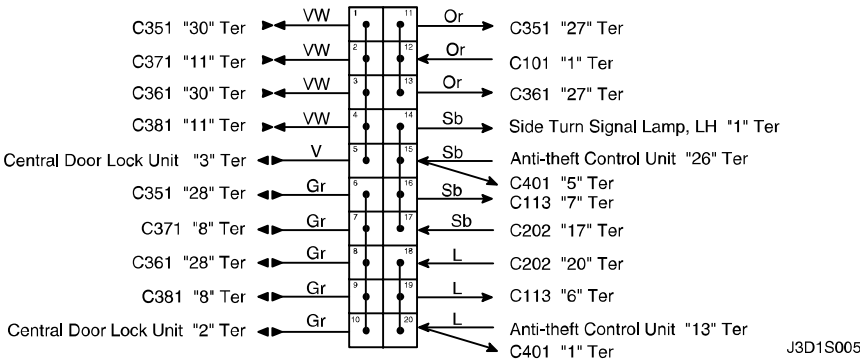

S302 (HATCH BACK)

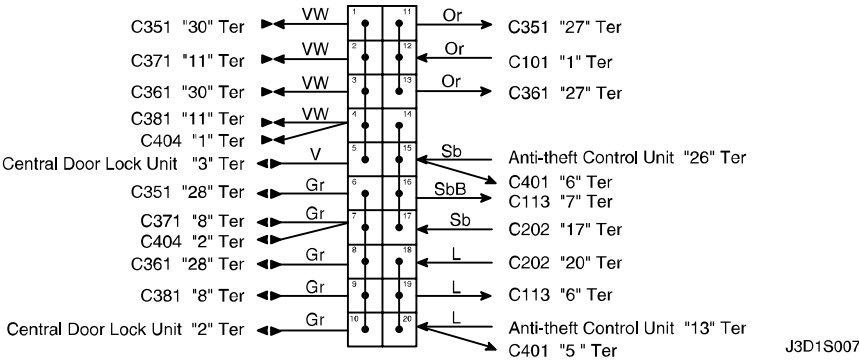

23. FOLDING MIRROR UNIT CIRCUIT

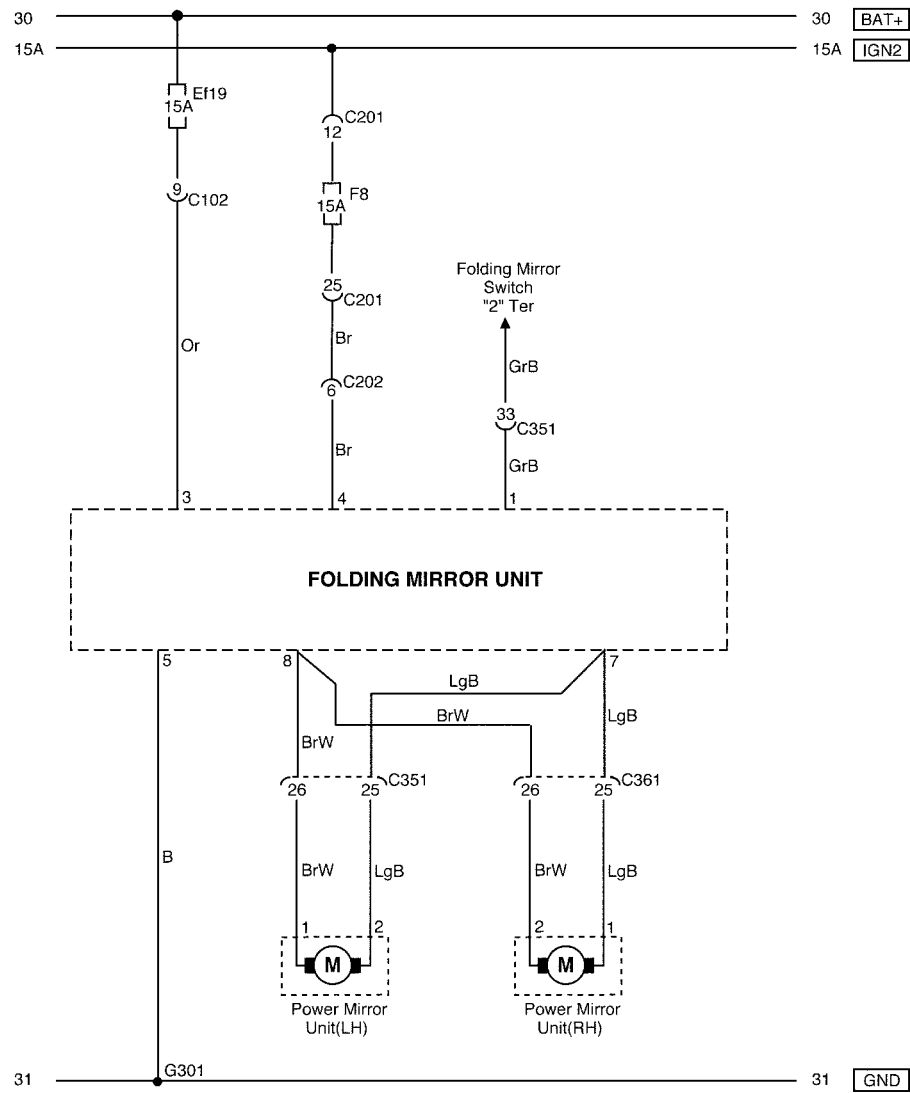


J3B15043

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C361 (33 Pin, Gray)	Body – Front Right Door	Under Co-Driver A Pillar
G301	Body	Below Co-Driver Cross Member Floor Panel


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

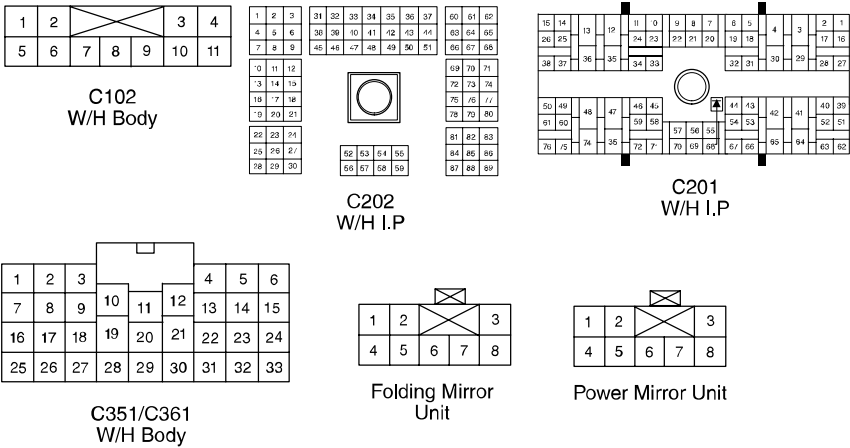

J3B1P054


c. POSITION OF CONNECTORS AND GROUNDS

• W/H INSTRUMENT PANEL

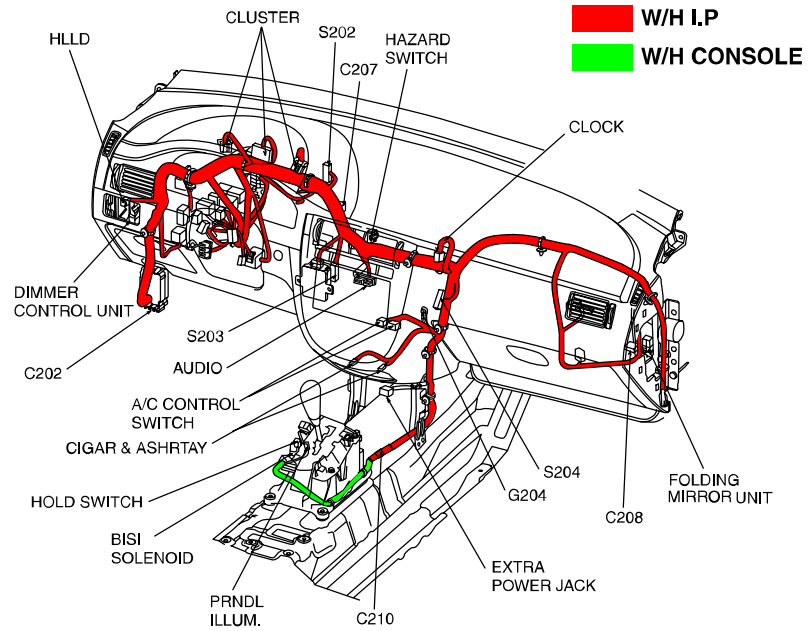

J3B12001


• W/H DRIVE DOOR

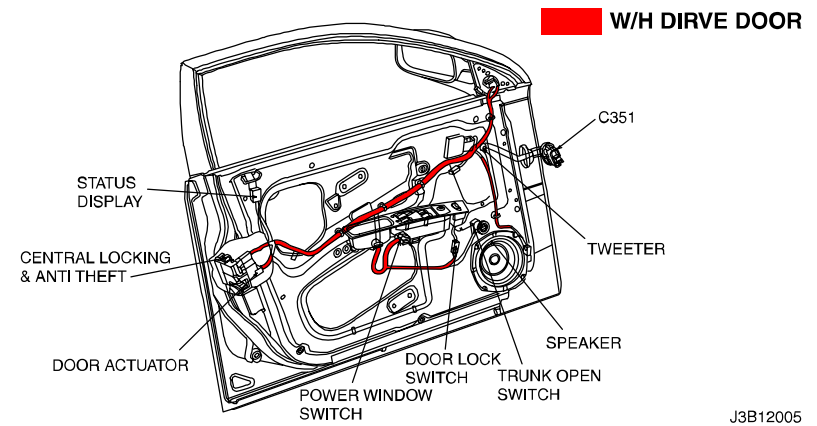

J3B12005

24. POWER WINDOW CIRCUIT

1) ONLY FRONT POWER WINDOW CIRCUIT

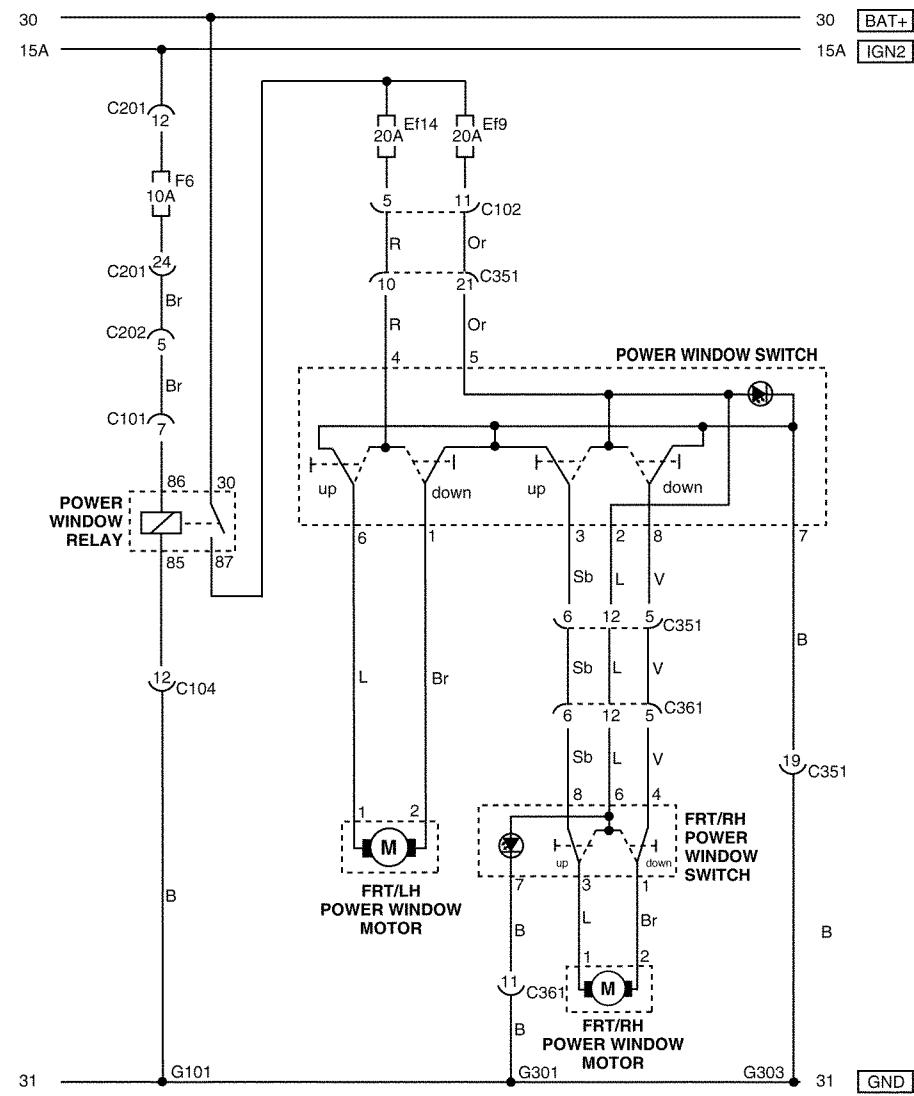


J3D15065

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C107 (2 Pin, White)	ABS – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C361 (33 Pin, Gray)	Body – Front Right Door	Under Co-Driver A Pillar
G101	Front	Behind Left Head Lamp
G303	Body	Below Left Driver Leg Room


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

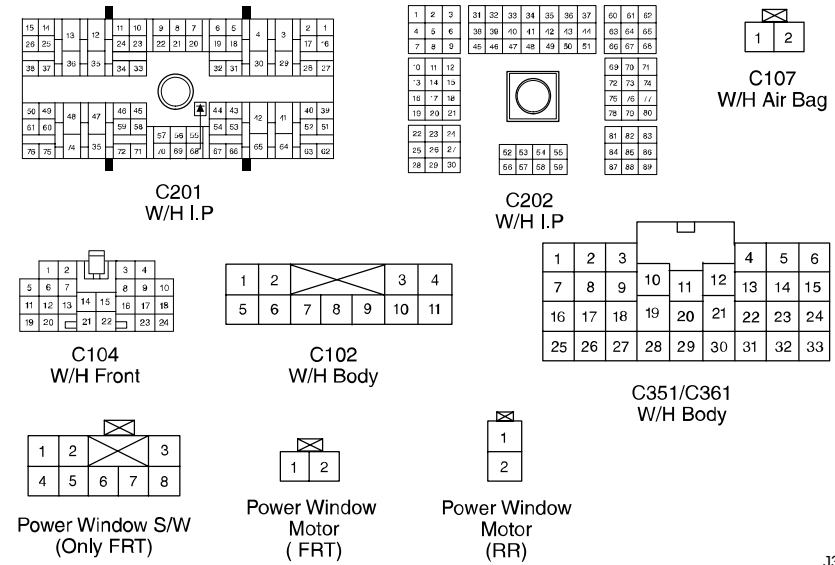

J3B1P055


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

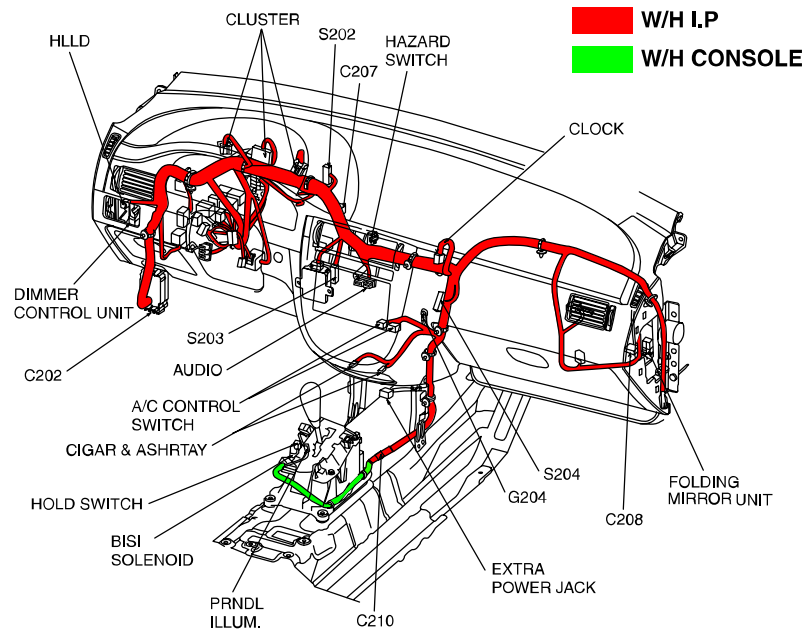


J3B12001

- W/H DRIVE DOOR

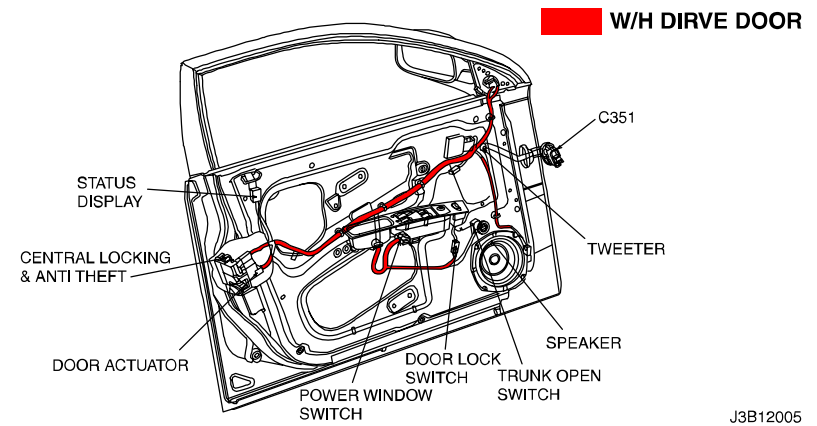

J3B12005


2) FRONT & REAR POWER WINDOW CIRCUIT

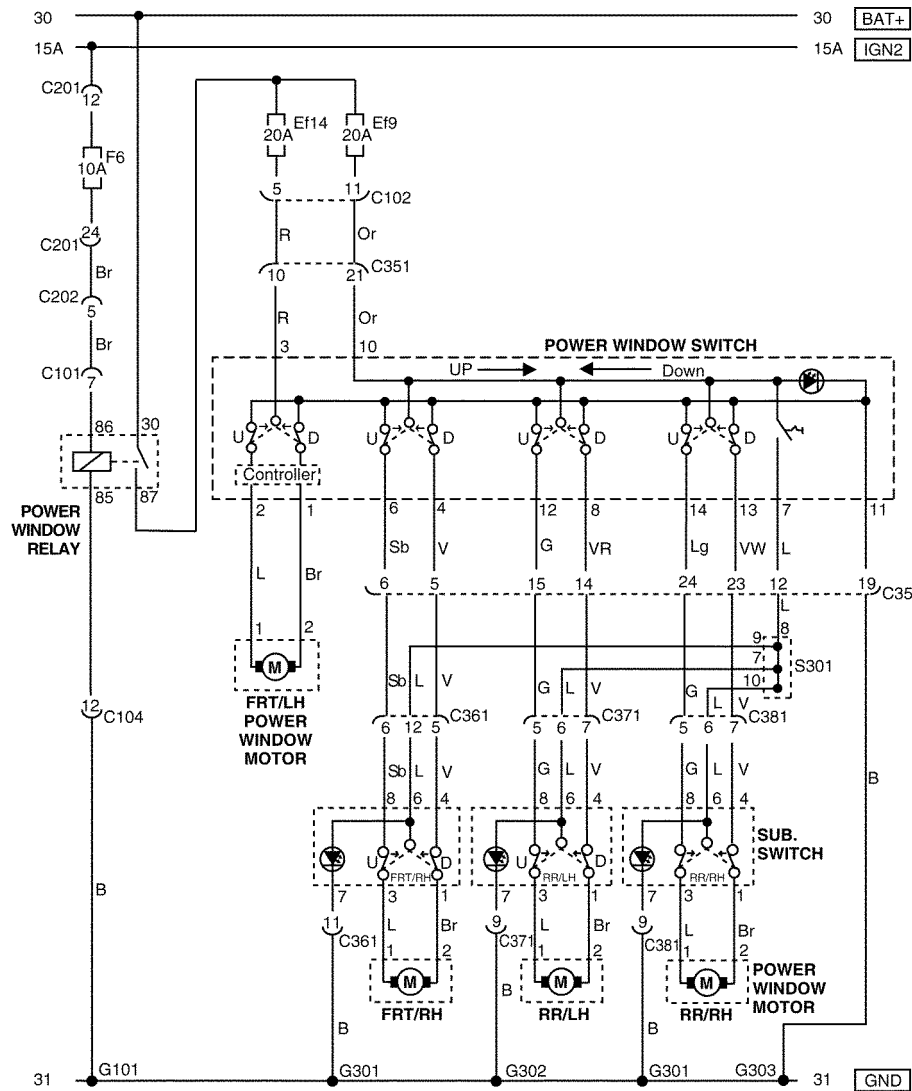

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C361 (33 Pin, Gray)	Body – Front Right Door	Under Co-Driver A Pillar
C371 (12 Pin, White)	Body – Rear Light Door	Under Left B Pillar
C381 (12 Pin, White)	Body – Rear Right Door	Under Right B Pillar
S301 (Blue)	Body	Left Driver Leg Room
G101	Front	Behind Left Head Lamp
G303	Body	Below Left Driver Leg Room

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

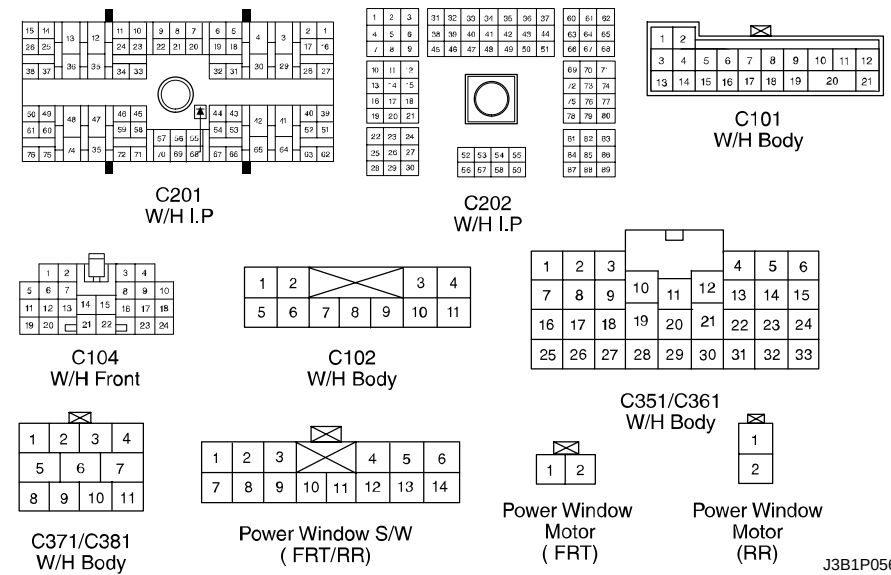


c. POSITION OF CONNECTORS AND GROUNDS

- W/H DRIVE DOOR

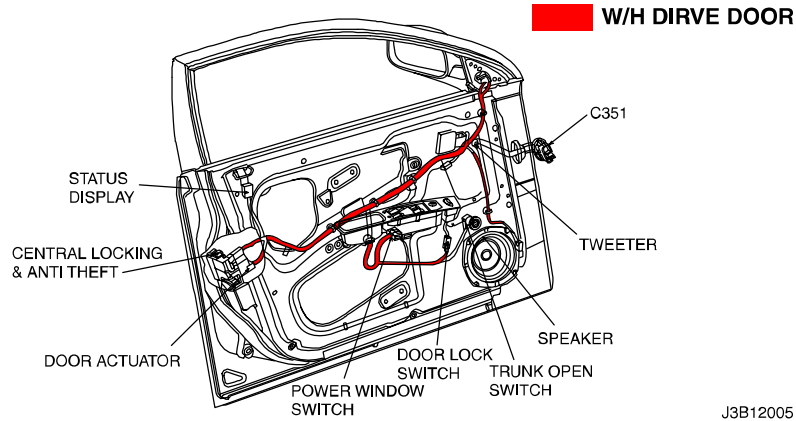

J3B12005


- W/H REAR DOOR

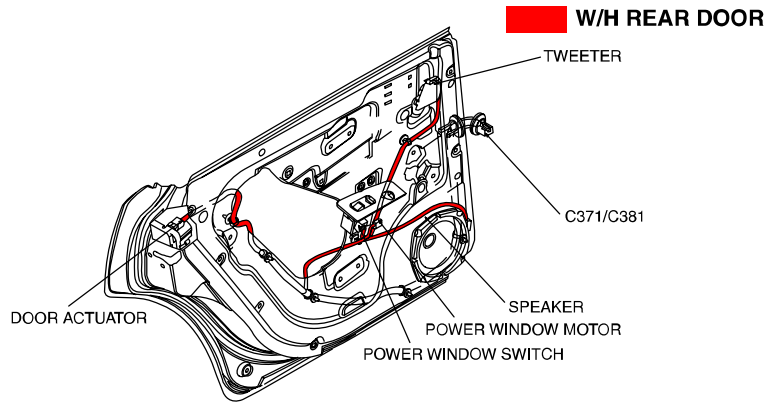

J3B12006


d. SPLICE PACK

S301 (NOTCH BACK)

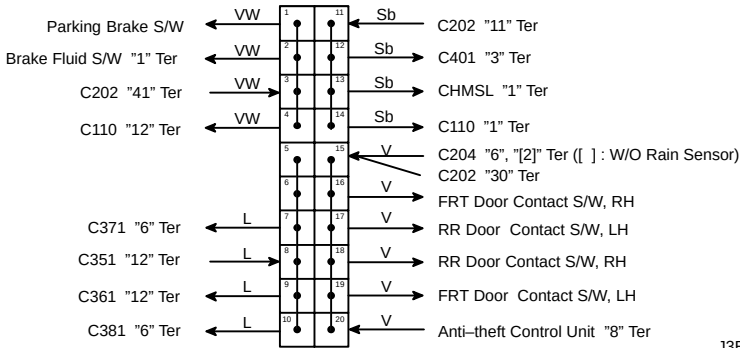

J3B1S008


S301 (HATCH BACK)

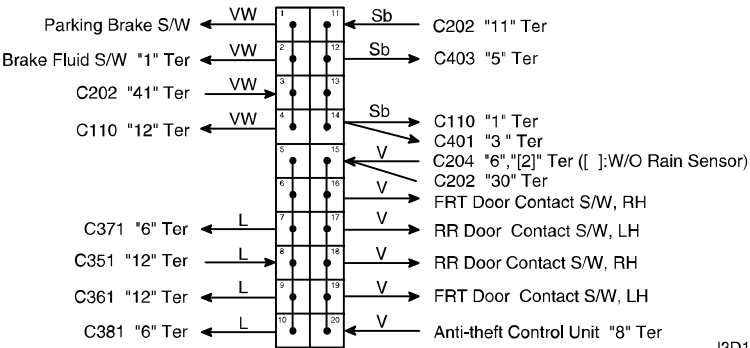

J3D1S006

25. CENTRAL DOOR LOCKING SYSTEM CIRCUIT

1) NOTCH BACK

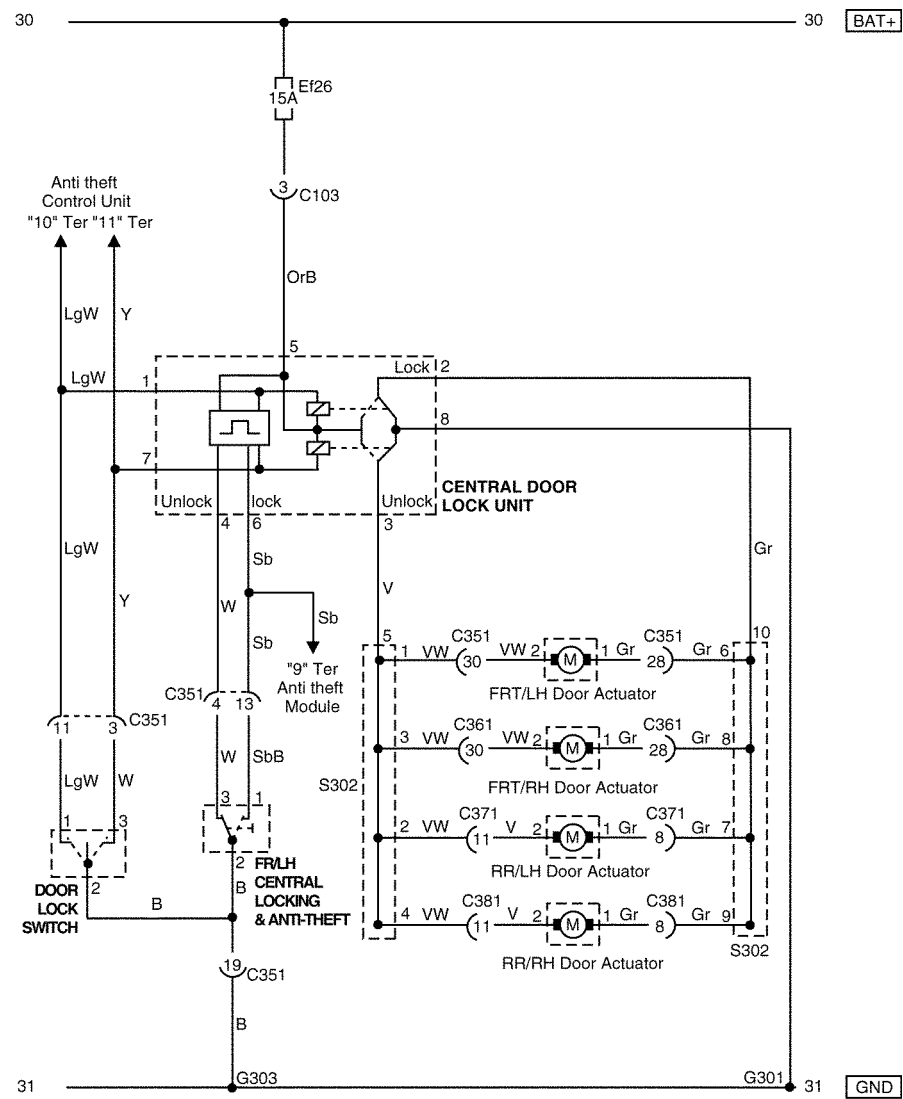


J3D15067


a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C361 (33 Pin, Gray)	Body – Front Right Door	Under Co-Driver A Pillar
C371 (12 Pin, White)	Body – Rear Light Door	Under Left B Pillar
C381 (12 Pin, White)	Body – Rear Right Door	Under Right B Pillar
S302 (Brown)	Body	Left Driver Leg Room
G301	Body	Below Co-Driver Cross Member Floor Panel
G303	Body	Below Left Driver Leg Room

 
b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




C103
W/H Engine

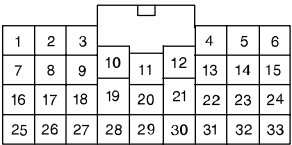

C351/C361
W/H Body

 


C371/C381
W/H Body

 

Central Door
Lock Unit



 Door Actuator




Central Locking
& Anti theft




Door Lock Switch

c. POSITION OF CONNECTORS AND GROUNDS


- W/H DRIVE DOOR

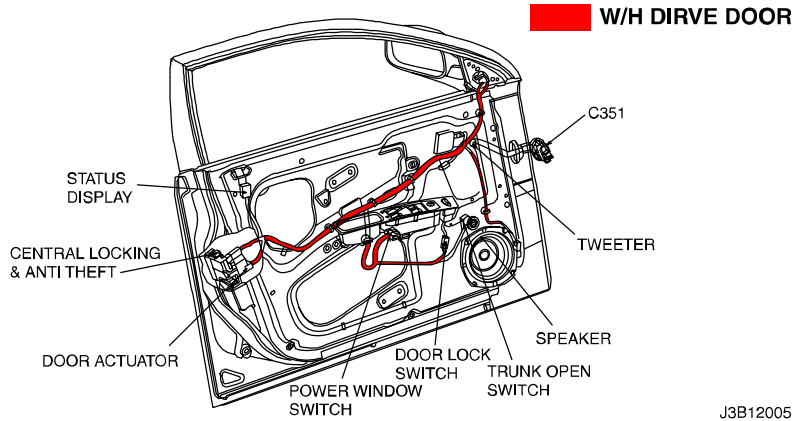

- W/H REAR DOOR

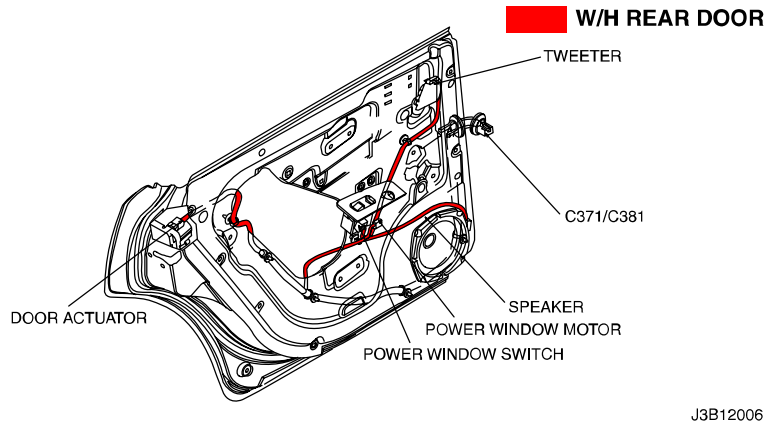


- W/H INSTRUMENT PANEL

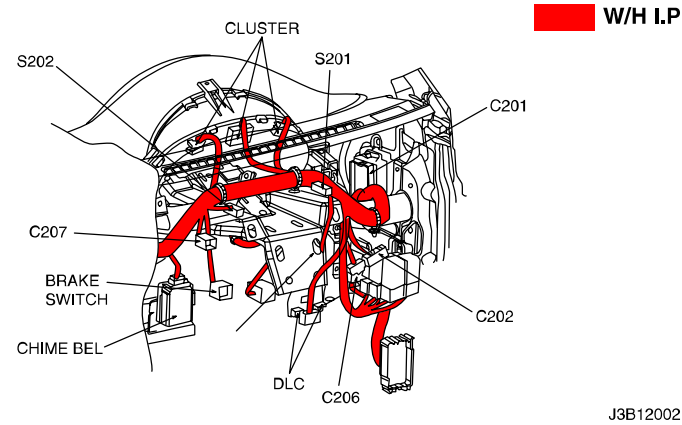


d. SPLICE PACK

S302

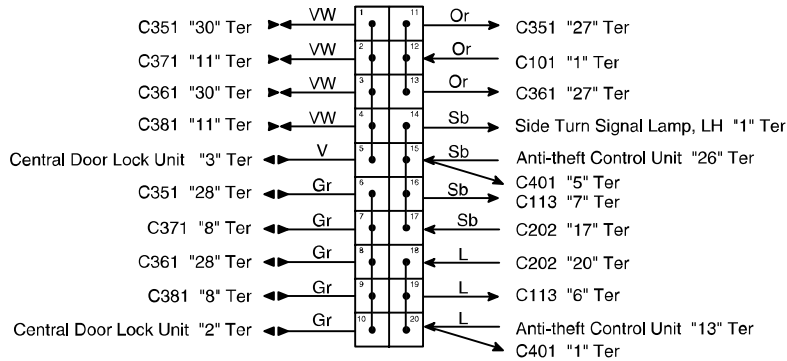

2) HATCH BACK

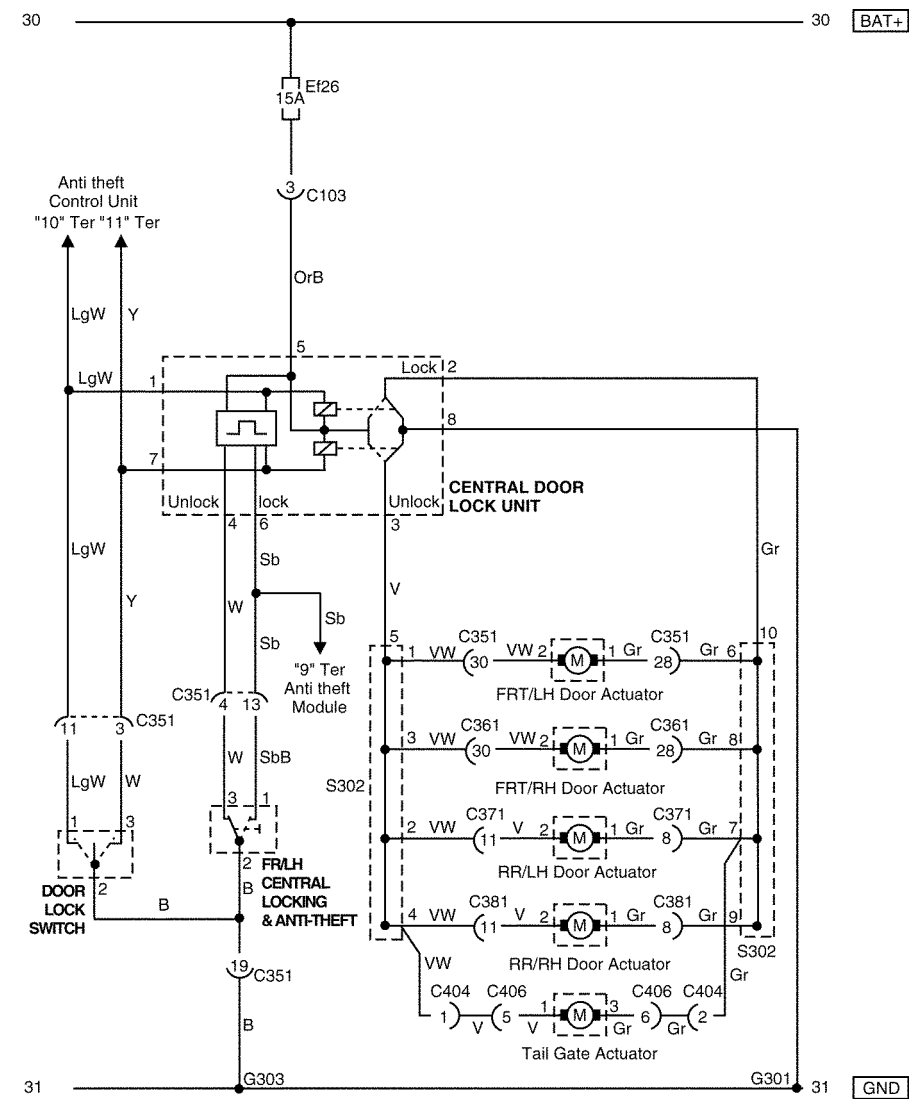


J3D15068


a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C103 (10 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C361 (33 Pin, Gray)	Body – Front Right Door	Under Co-Driver A Pillar
C371 (12 Pin, White)	Body – Rear Light Door	Under Left B Pillar
C381 (12 Pin, White)	Body – Rear Right Door	Under Right B Pillar
C404 (8 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C406 (6 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
S302 (Brown)	Body	Left Driver Leg Room
G301	Body	Below Co-Driver Cross Member Floor Panel
G303	Body	Below Left Driver Leg Room


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

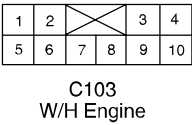

C103
W/H Engine

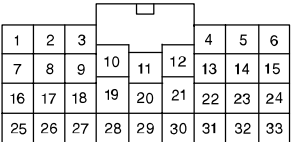

C351/C361
W/H Body

 


C371/C381
W/H Body



Central Door
Lock Unit



 
Door Actuator




Central Locking
& Anti theft



 Door Lock Switch



C404
W/H T/Gate EXT.

 


C406
W/H T/Gate EXT.


J3D1P048

c. POSITION OF CONNECTORS AND GROUNDS


- W/H DRIVE DOOR

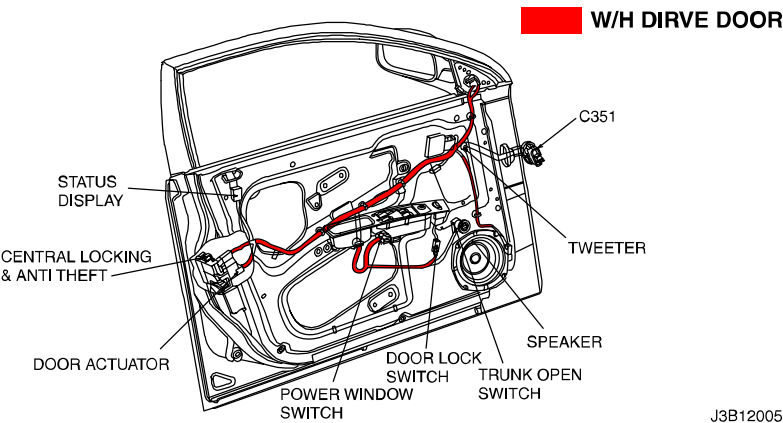

- W/H REAR DOOR

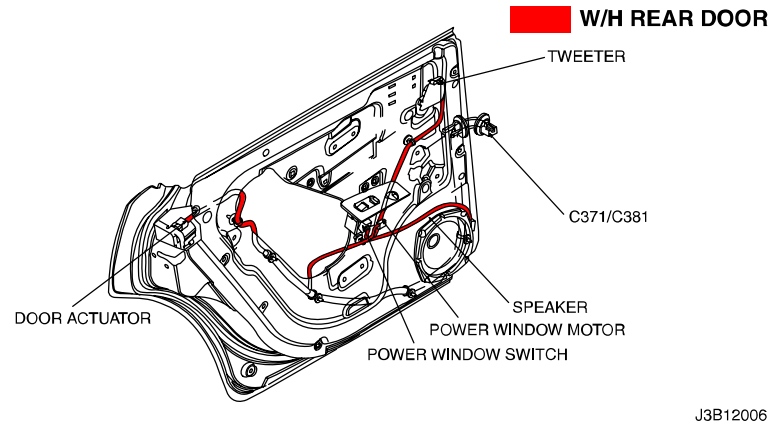


- W/H INSTRUMENT PANEL

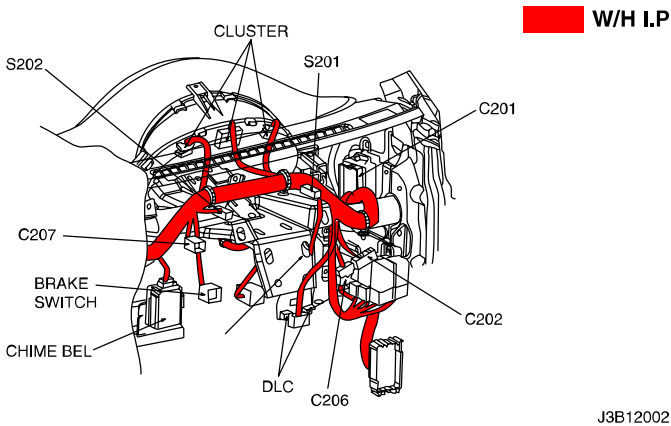

d. SPLICE PACK


S302

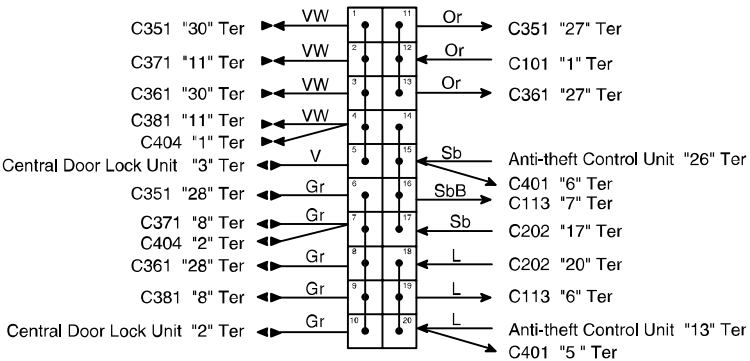

J3D1S007

26. CLUSTER


1) TEMPERATURE GAUGE, TACHOMETER, FUEL GAUGE, ODDOMETER, SPEEDOMETER & FUEL WARNING LAMP CIRCUIT: MR-140/HV-240

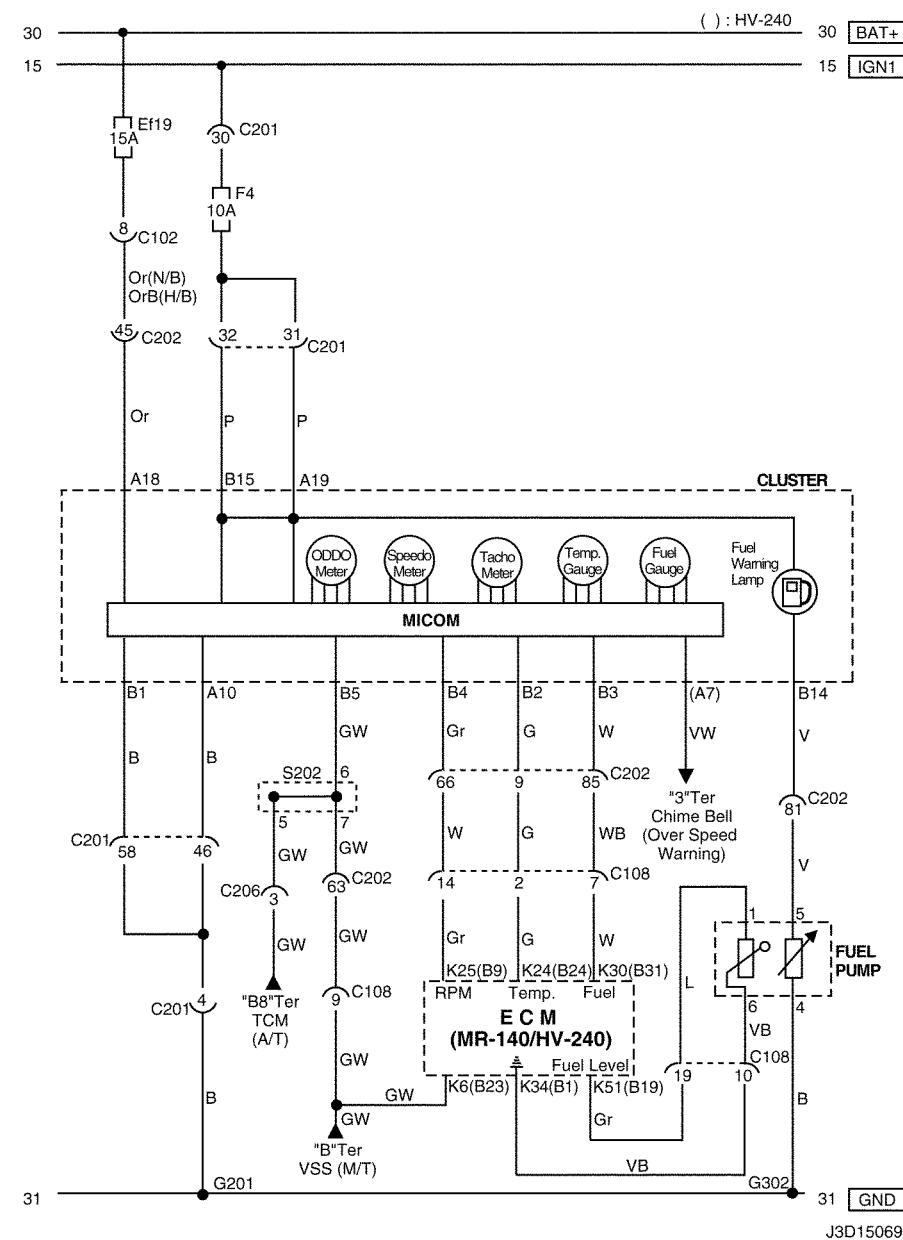

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
S202 (Black)	I.P	Behind Cluster
G201	I.P	Left I.P Fuse Block
G302	Body	Below Left C Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

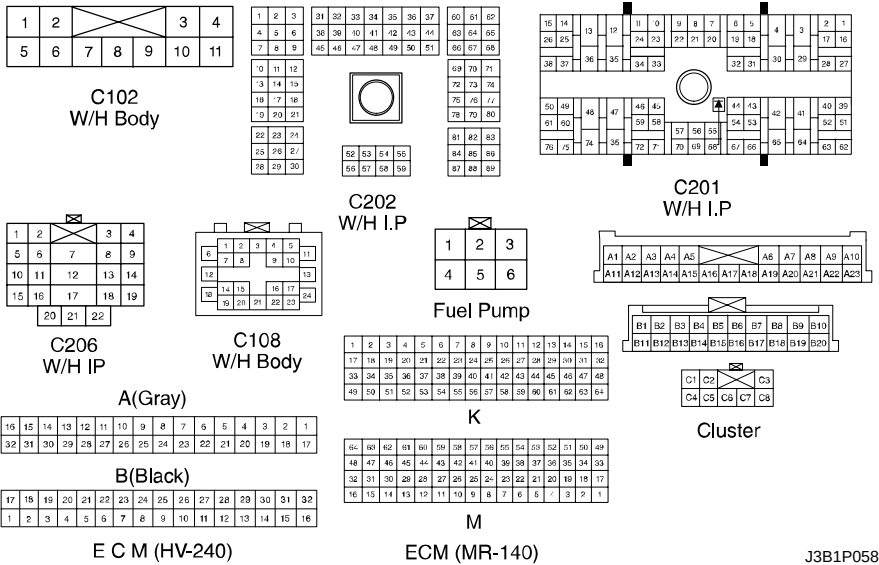


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

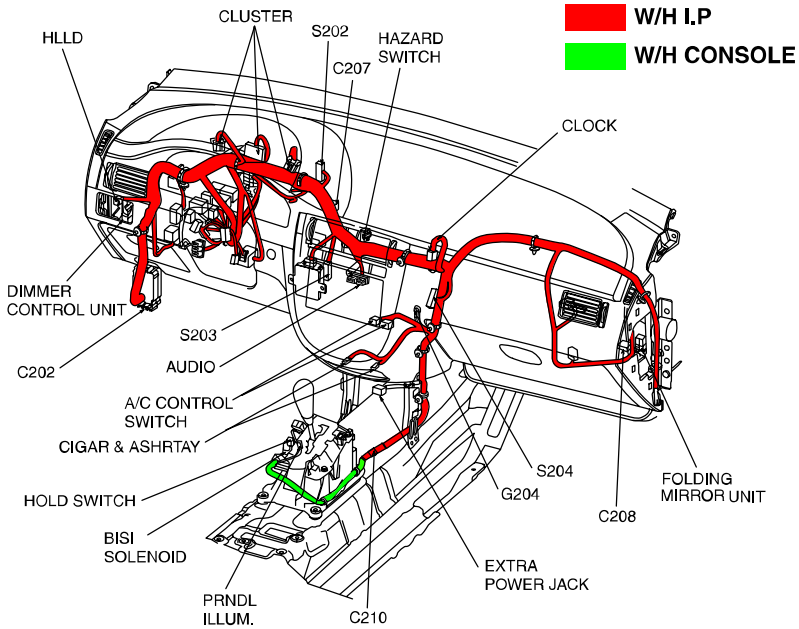


J3B12001

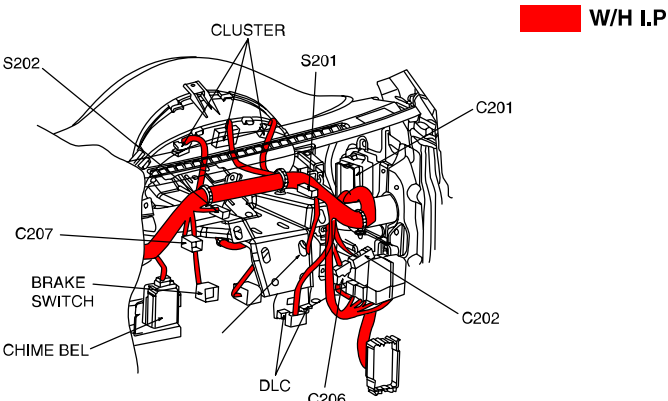

J3B12002


d. SPLICE PACK

S202

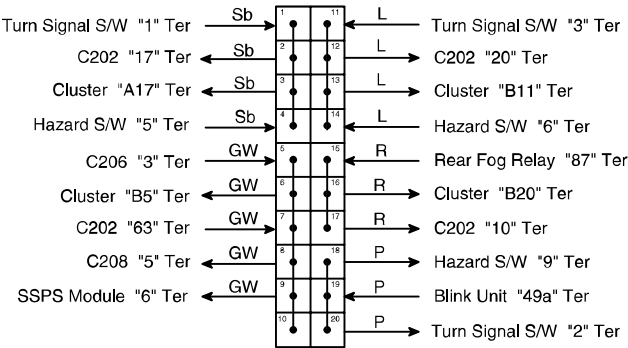

J3D1S003


2) TEMPERATURE GAUGE, TACHOMETER, FUEL GAUGE, ODDOMETER, SPEEDOMETER & FUEL WARNING LAMP CIRCUIT: SIRIUS D4

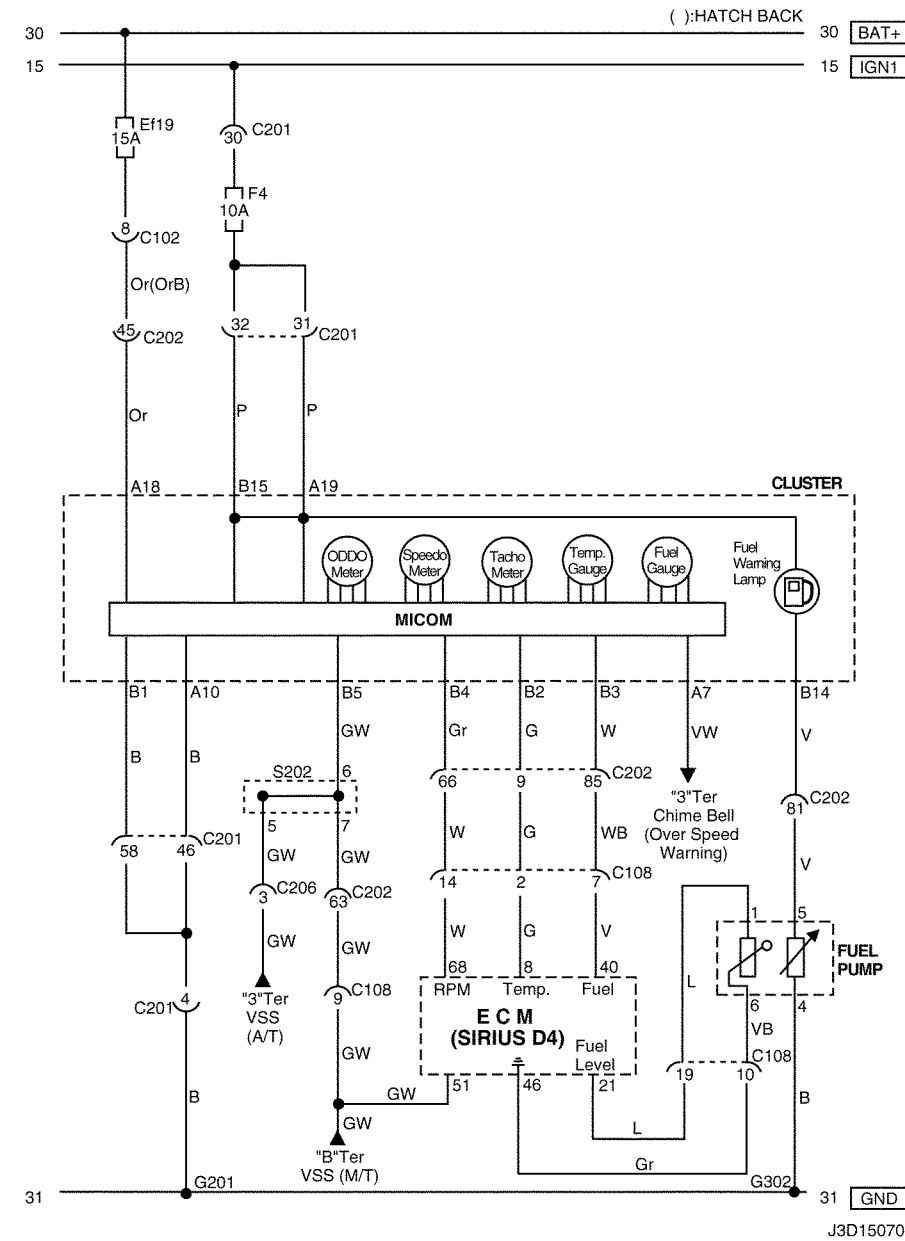

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S202 (Black)	I.P	Behind Cluster
G201	I.P	Left I.P Fuse Block
G302	Body	Below Left C Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

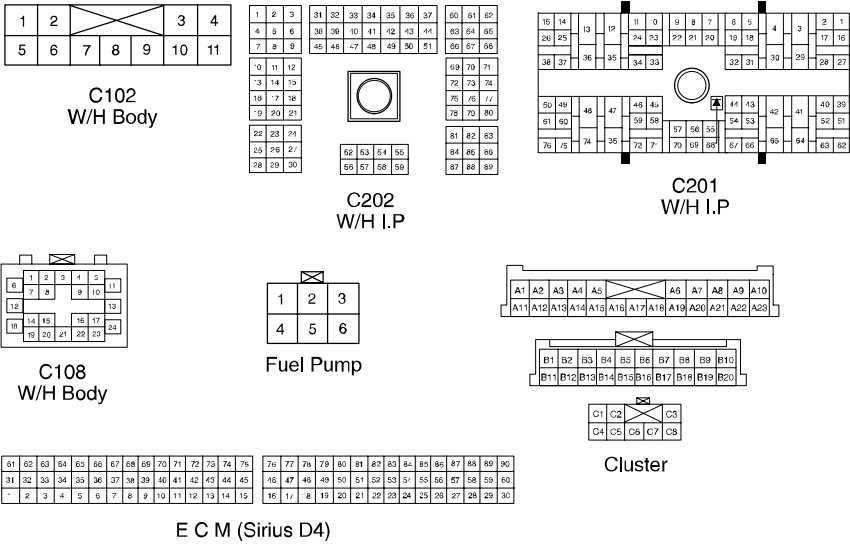


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

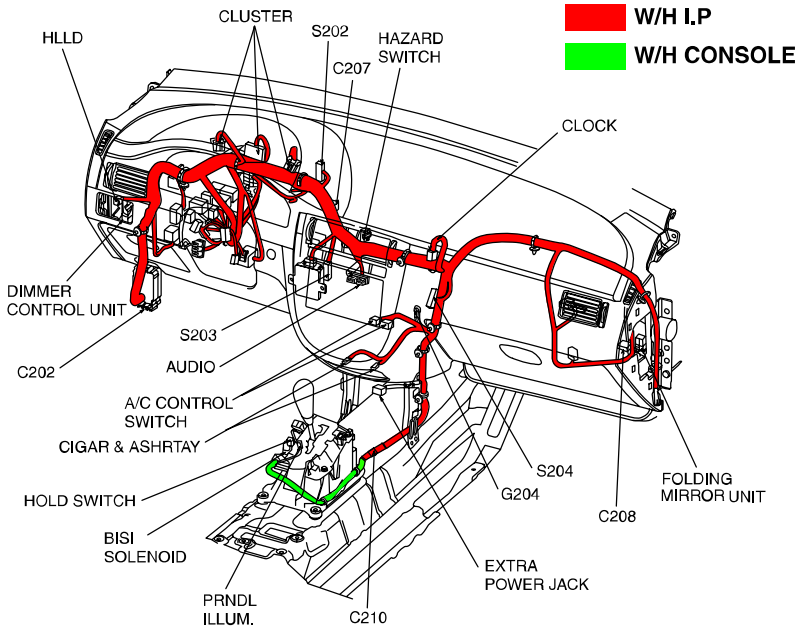


J3B12001

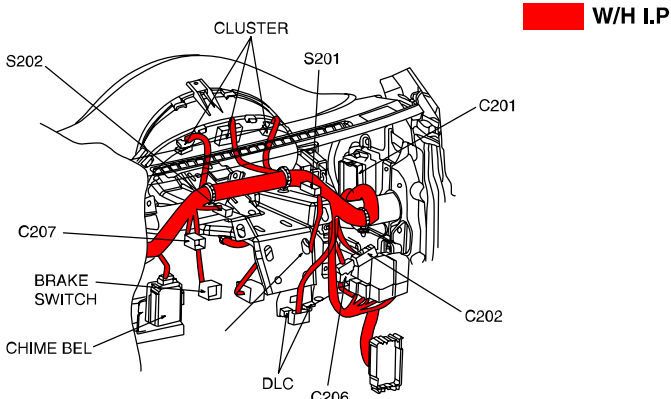

J3B12002


d. SPLICE PACK

S202

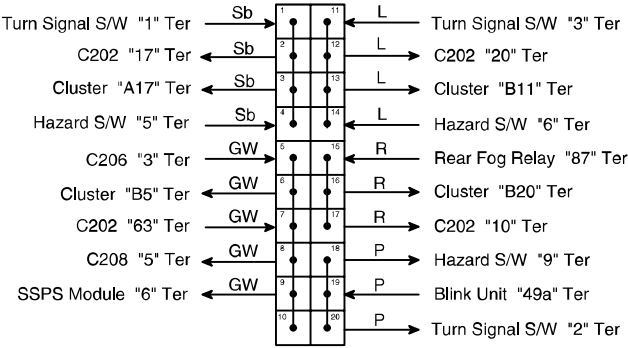

J3D1S003


3) WARNING (MIL, ABS, TCS, PARKING BRAKE & CHARGING) LAMP CIRCUIT

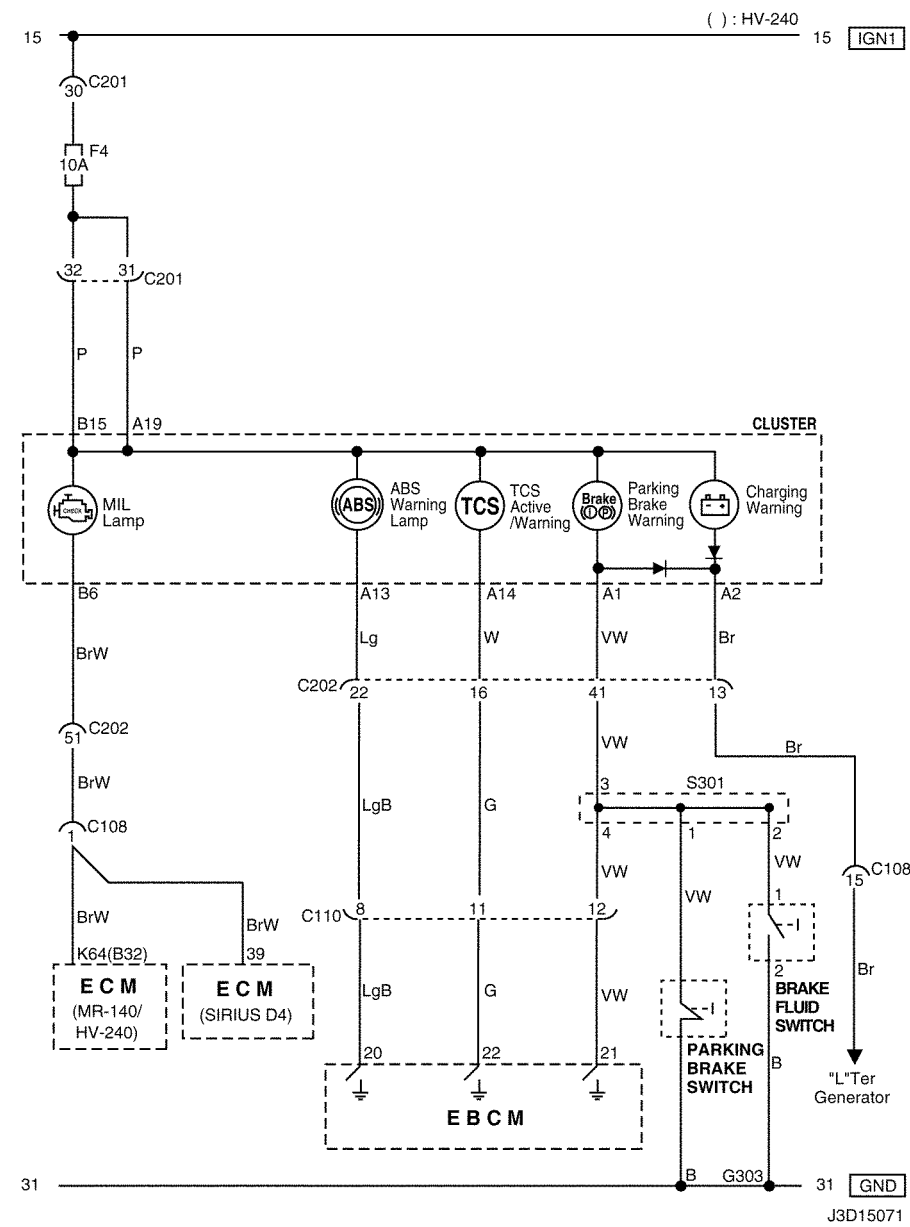

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S301 (Blue)	Body	Left Driver Leg Room
G303	Body	Below Left Driver Leg Room

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

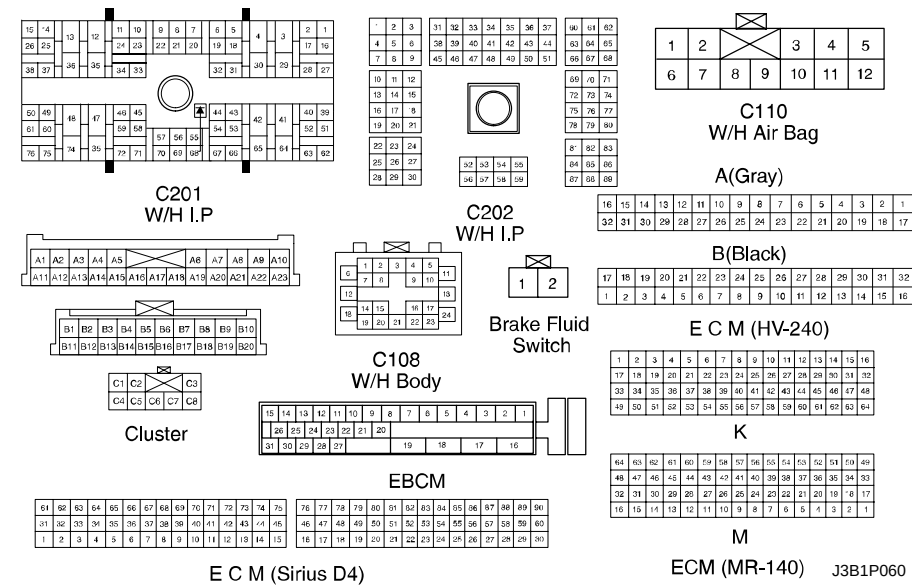


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

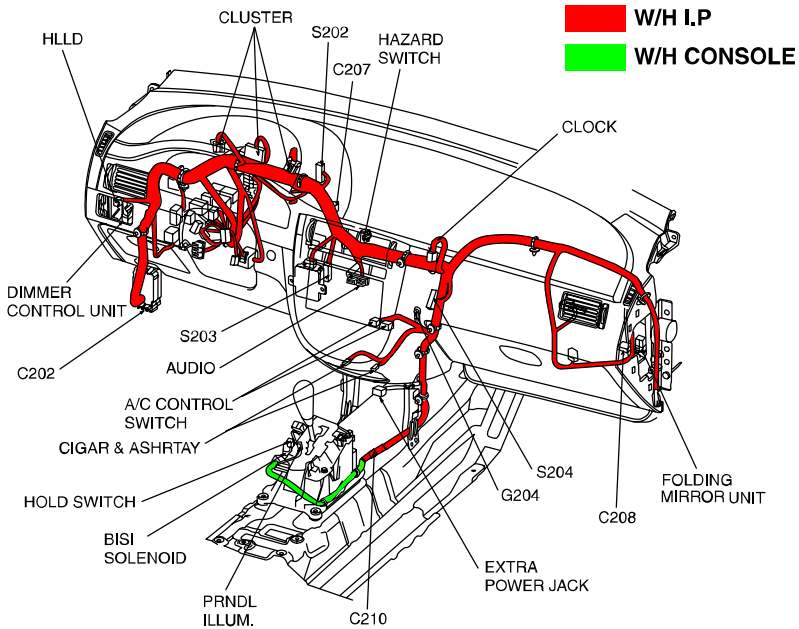

J3B12001


- W/H ABS

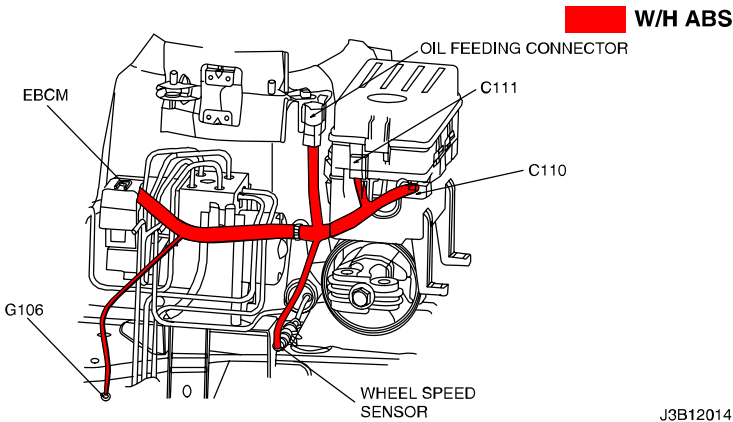

J3B12014


d. SPLICE PACK

S301 (NOTCH BACK)

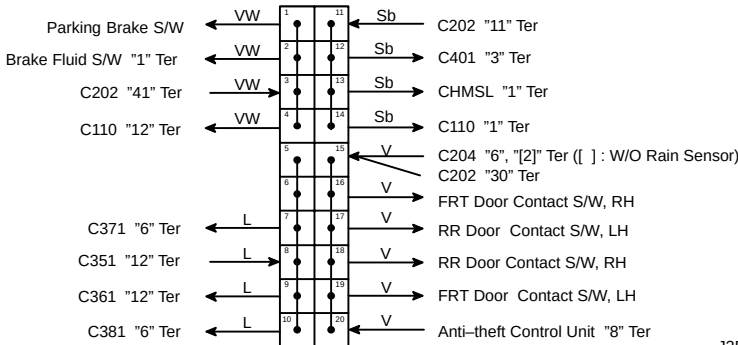


J3B1S008

S301 (HATCH BACK)

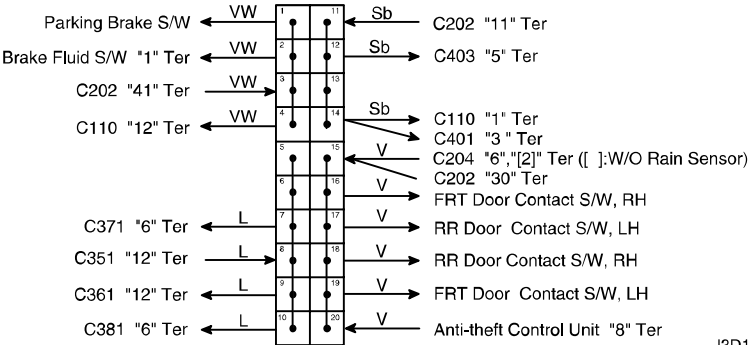

J3D1S006


4) WARNING (SSPS, AIR BAG, OIL PRESSURE & SEAT BELT) LAMP & HOLD MODE LAMP CIRCUIT

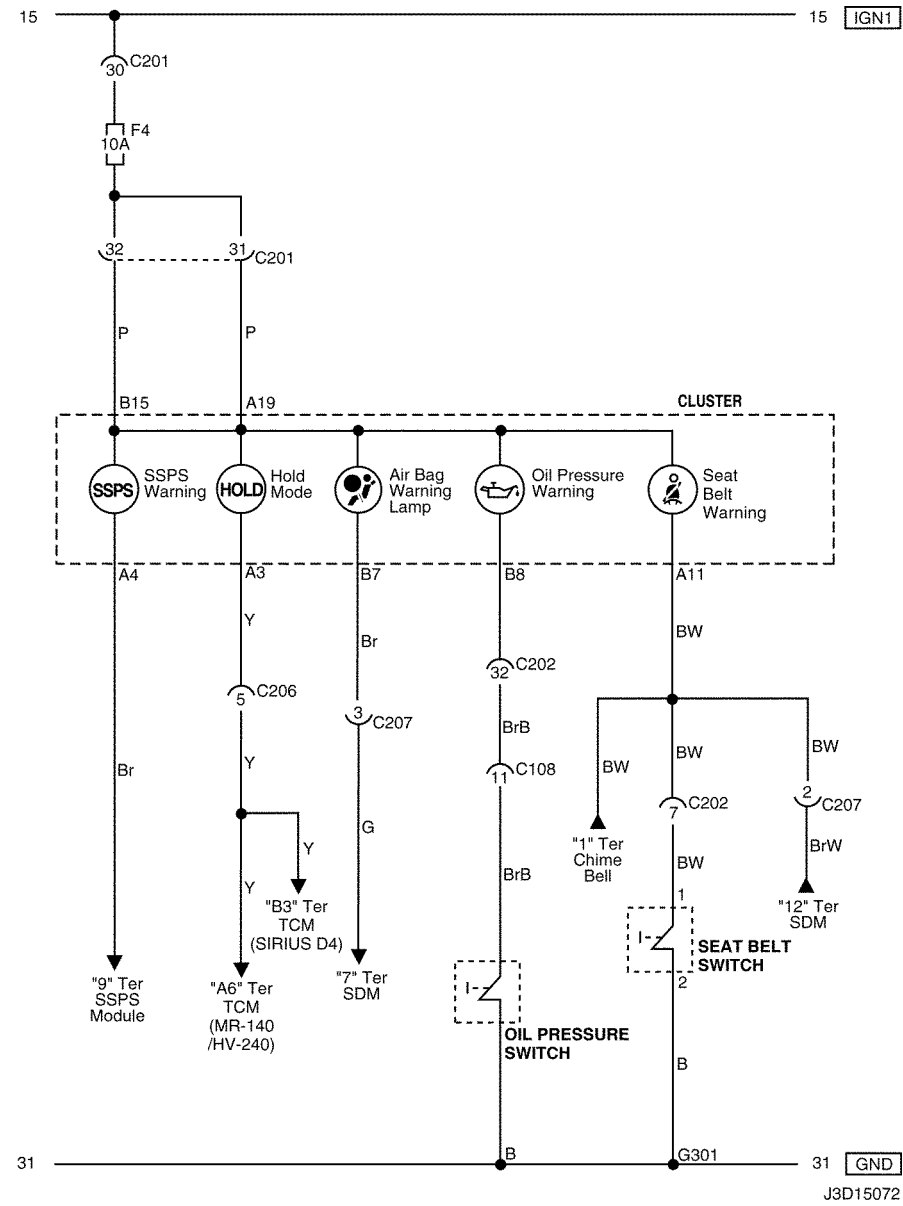

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
C207 (6 Pin, White)	Air Bag – I.P	Upper Right Driver Leg Room
G301	Body	Below Co-Driver Cross Member Floor Panel

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

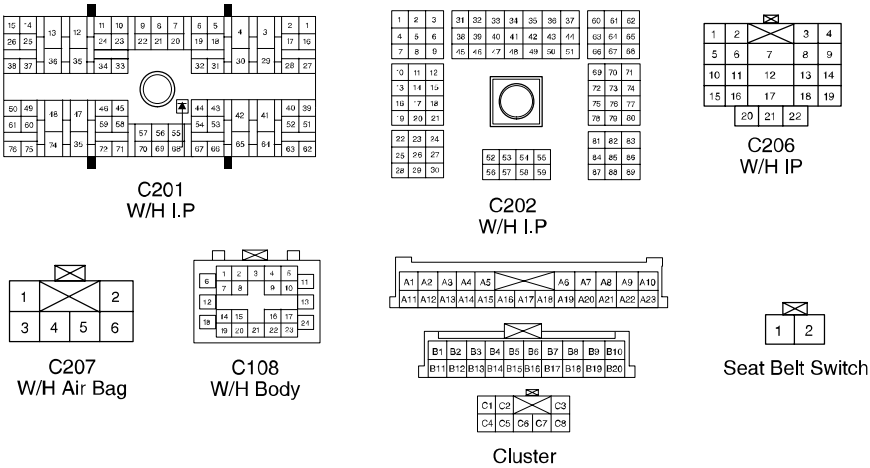


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

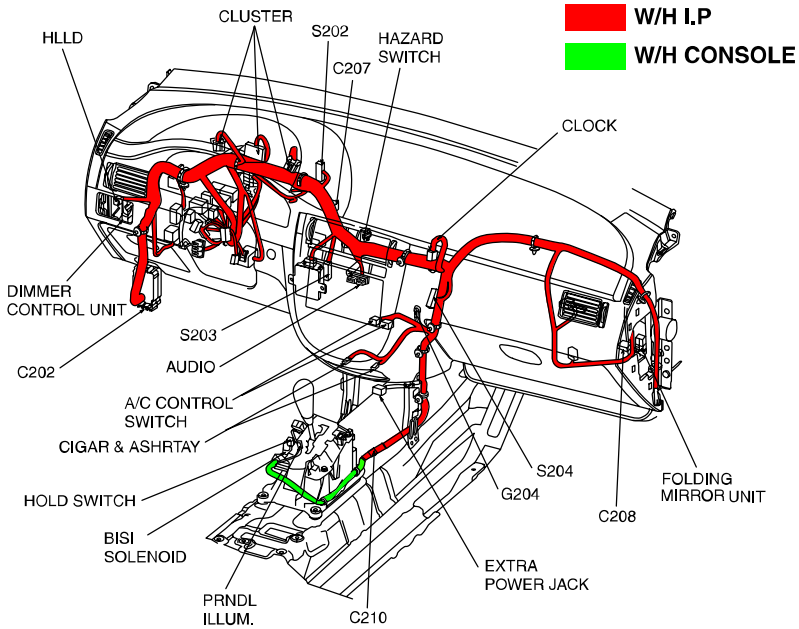

J3B12001

- W/H BODY

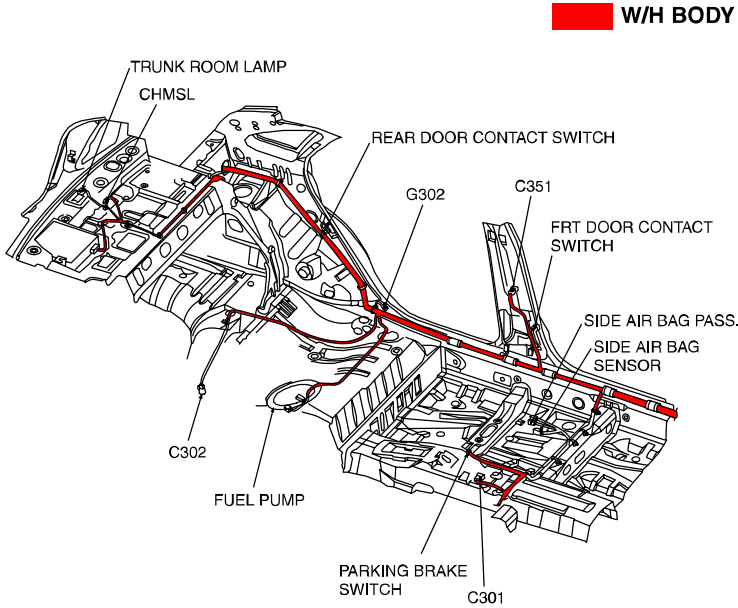

J3B12016




CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C204 (14 Pin, White)	Roof – Body (W/ Rain Sensor)	Left Driver Leg Room
C204 (8 Pin, White)	Roof – Body (W/O Rain Sensor)	Left Driver Leg Room
S202 (Black)	I.P	Behind Cluster
S301 (Blue)	Body	Left Driver Leg Room
G201	I.P	Left I.P Fuse Block

The diagram illustrates 12 different wiring configurations for the 13B1P06 module, categorized into four groups:


- C102 W/H Body:** A 13-pin connector (pins 1-13) is connected to a 13B1P06 module. Pins 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, and 13 are connected to the module's pins 1 through 13 respectively.
- C201 W/H I.P:** A 13-pin connector (pins 1-13) is connected to a 13B1P06 module. Pins 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, and 13 are connected to the module's pins 1 through 13 respectively.
- C101 W/H Body:** A 13-pin connector (pins 1-13) is connected to a 13B1P06 module. Pins 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, and 13 are connected to the module's pins 1 through 13 respectively.
- C202 W/H I.P:** A 13-pin connector (pins 1-13) is connected to a 13B1P06 module. Pins 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, and 13 are connected to the module's pins 1 through 13 respectively.
- C204 W/H Roof (W/ Rain Sensor):** A 13-pin connector (pins 1-13) is connected to a 13B1P06 module. Pins 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, and 13 are connected to the module's pins 1 through 13 respectively. A rain sensor symbol is connected to pin 4.
- C204 W/H Roof (W/O Rain Sensor):** A 13-pin connector (pins 1-13) is connected to a 13B1P06 module. Pins 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, and 13 are connected to the module's pins 1 through 13 respectively.

c. POSITION OF CONNECTORS AND GROUNDS

- W/H BODY

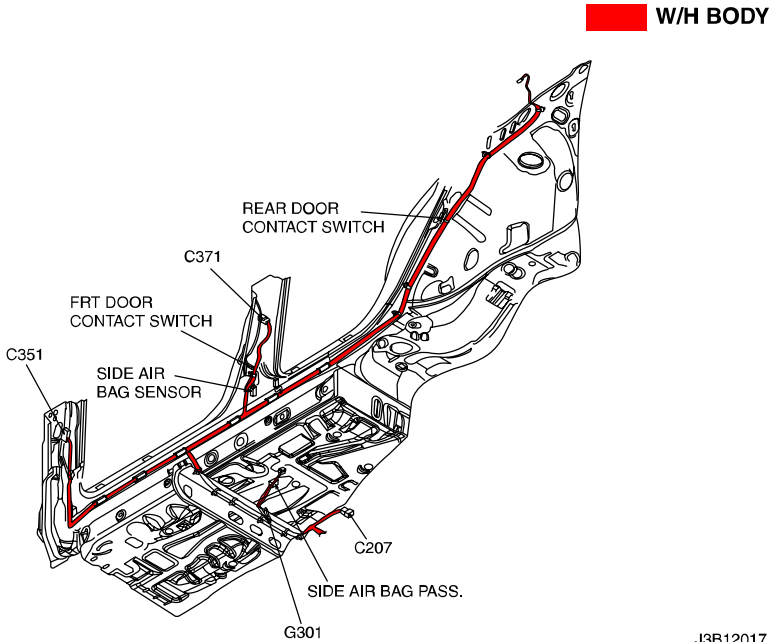


W/H Body(H/B)

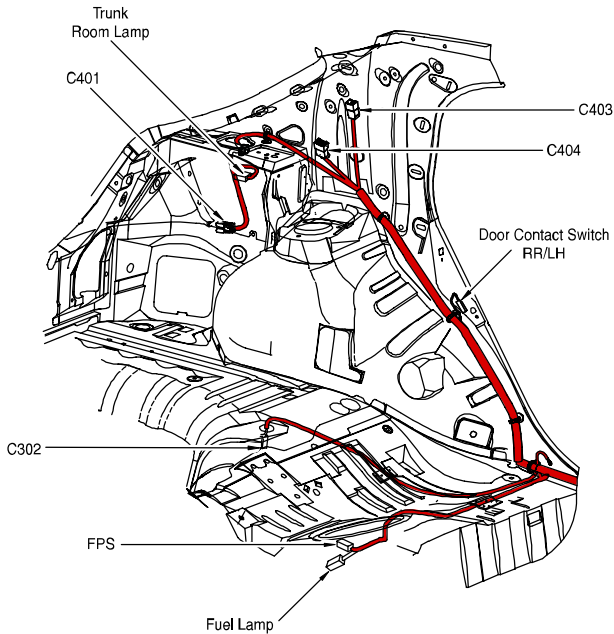


d. SPLICE PACK


S202

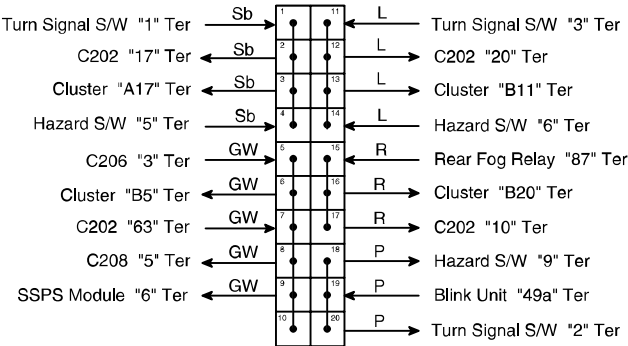


S301 (NOTCH BACK)

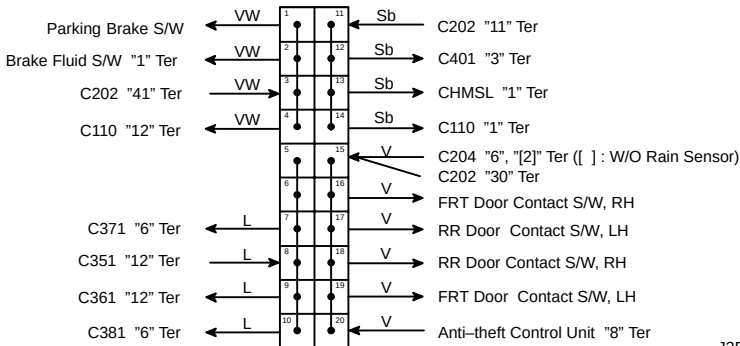

S301 (HATCH BACK)

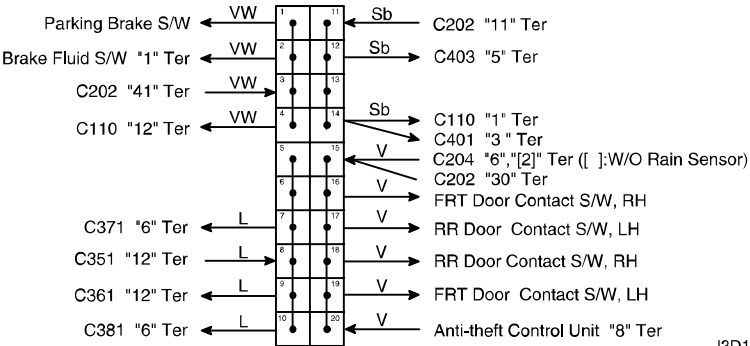

 

CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S202 (Black)	I.P	Behind Cluster
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G201	I.P	Left I.P Fuse Block
G203	I.P	Behind Left Audio Bracket

C101
W/H Body


C202
W/H I.P.

C201
W/H I.P.

Cluster

c. POSITION OF CONNECTORS AND GROUNDS


- W/H INSTRUMENT PANEL

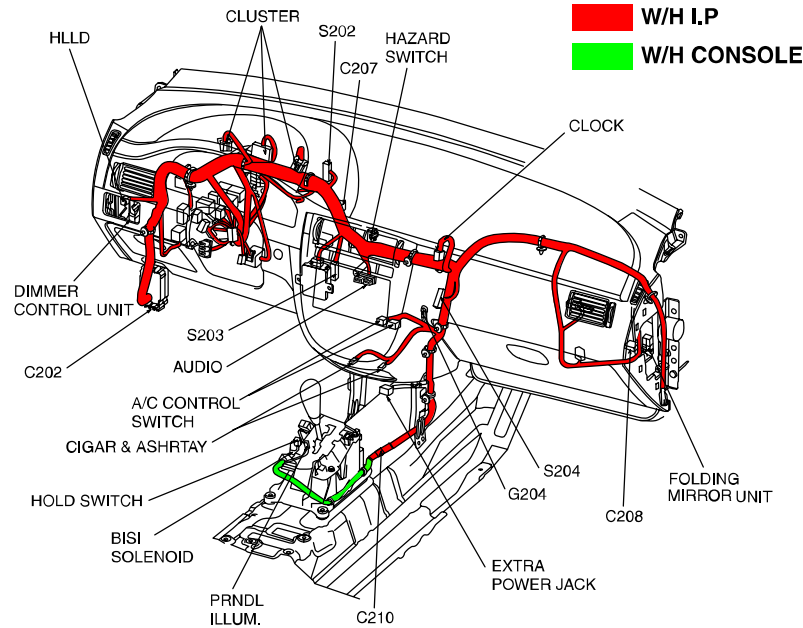

J3B12001


d. SPLICE PACK

S202

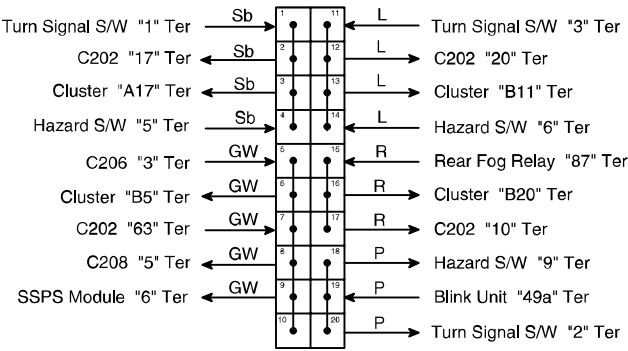


J3D1S003

S203

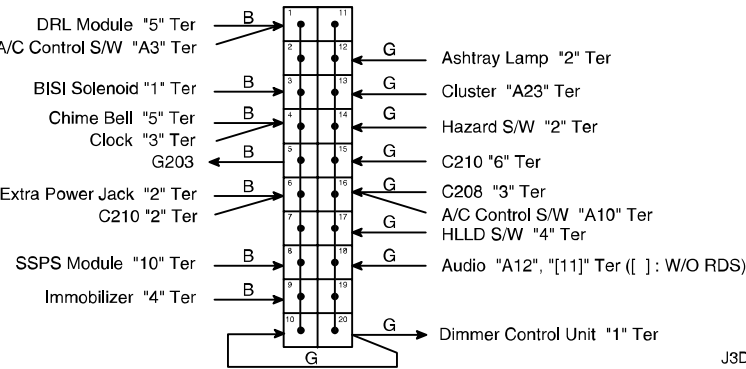

J3D1S004


S204

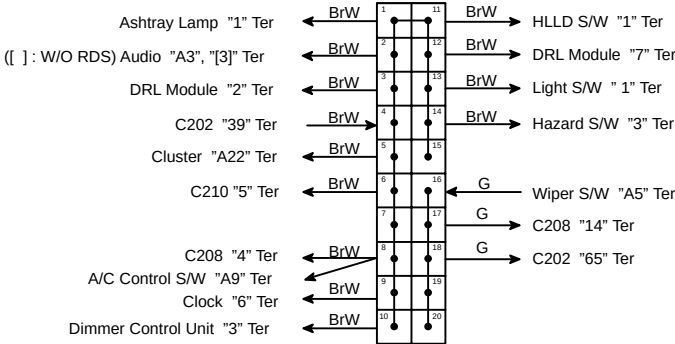

J3B1S006

27. AUDIO CIRCUIT

1) NOTCH BACK

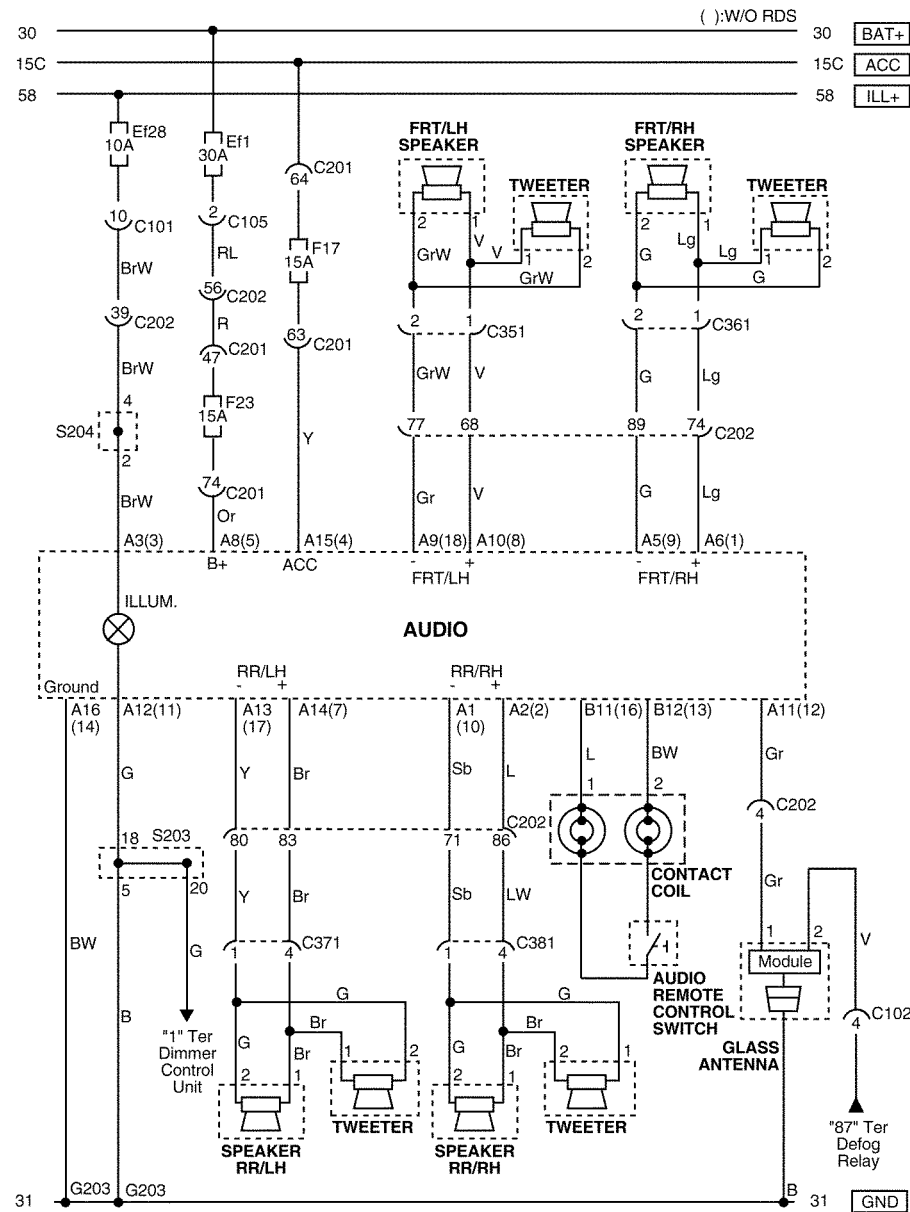


J3D15075

a. CONNECTOR INFORMATION

CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C361 (33 Pin, Gray)	Body – Front Right Door	Under Co–Driver A Pillar
C371 (12 Pin, White)	Body – Rear Light Door	Under Left B Pillar
C381 (12 Pin, White)	Body – Rear Right Door	Under Right B Pillar
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G203	I.P	Behind Left Audio Bracket


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

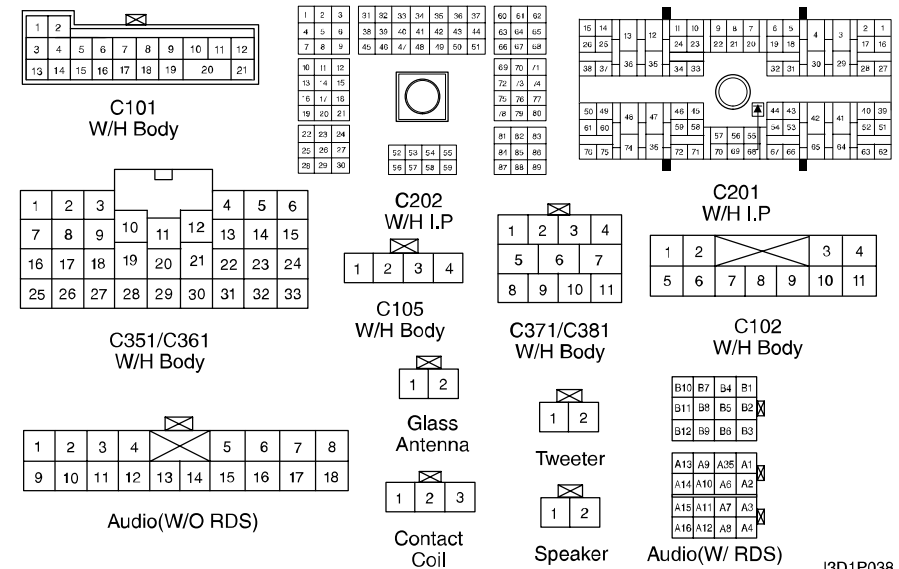

J3D1P038


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

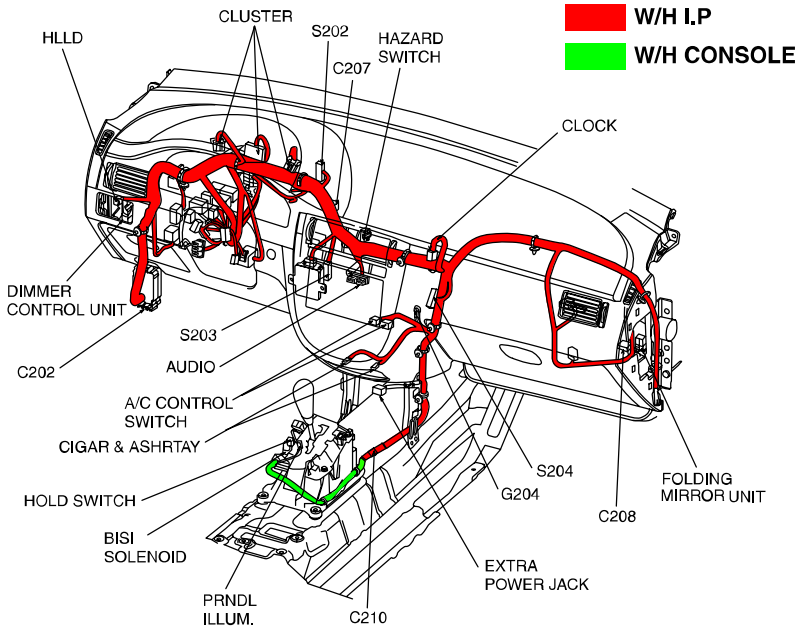


d. SPLICE PACK


S203

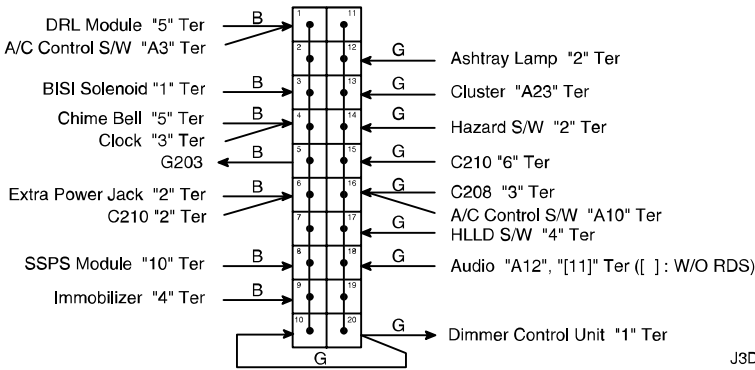

S204

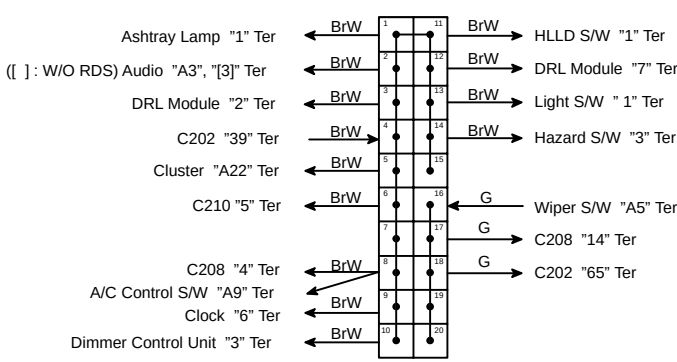

2) HATCH BACK

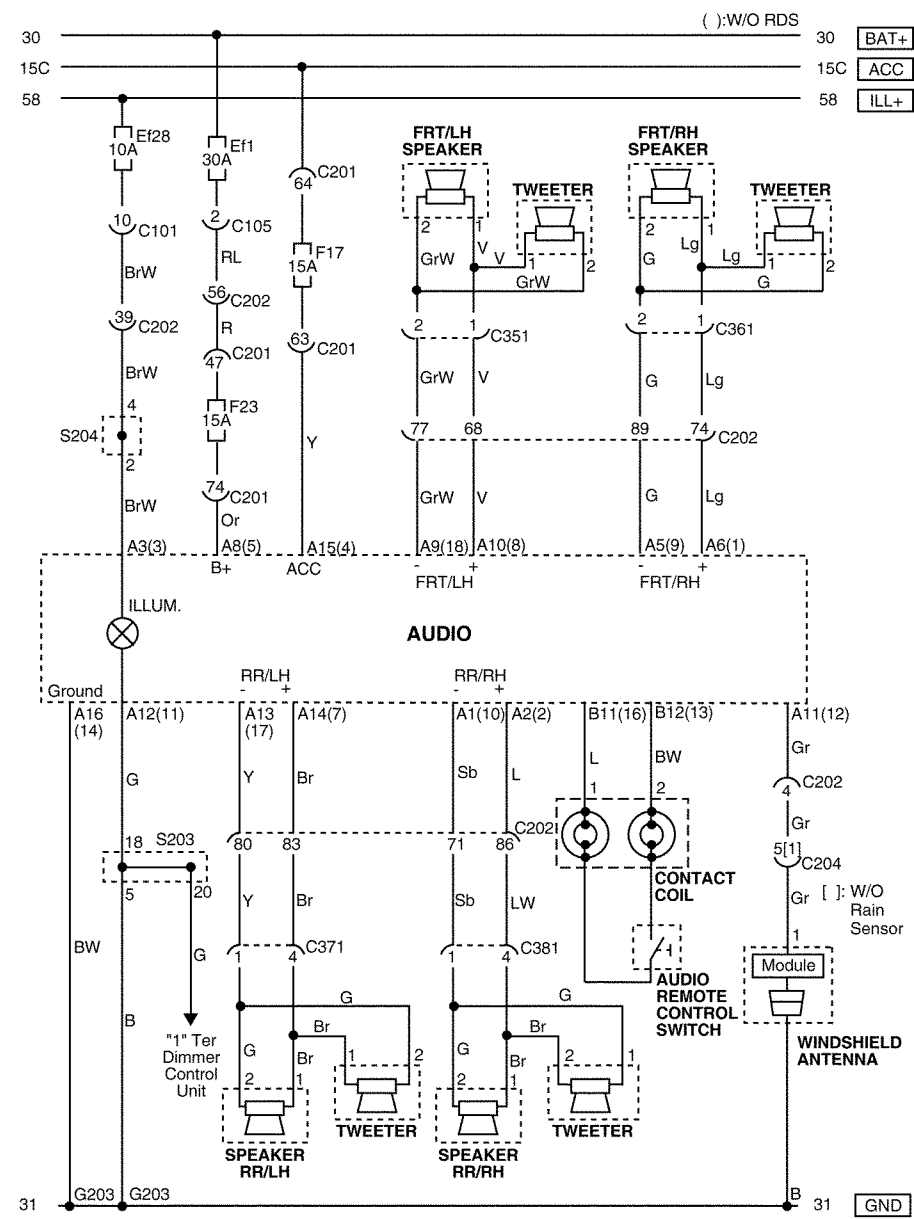


J3D15076

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C204 (14 Pin, White)	Roof – Body (W/ Rain Sensor)	Left Driver Leg Room
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C361 (33 Pin, Gray)	Body – Front Right Door	Under Co-Driver A Pillar
C371 (12 Pin, White)	Body – Rear Light Door	Under Left B Pillar
C381 (12 Pin, White)	Body – Rear Right Door	Under Right B Pillar
S203 (Red)	I.P	Behind Audio Mounting
S204 (Magenta)	I.P	Behind Audio Mounting
G203	I.P	Behind Left Audio Bracket


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

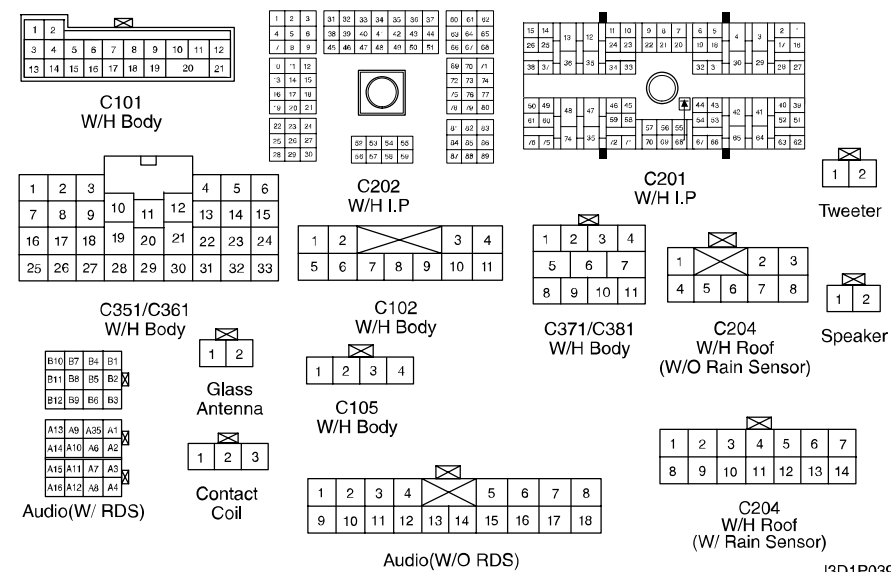


J3D1P039

c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

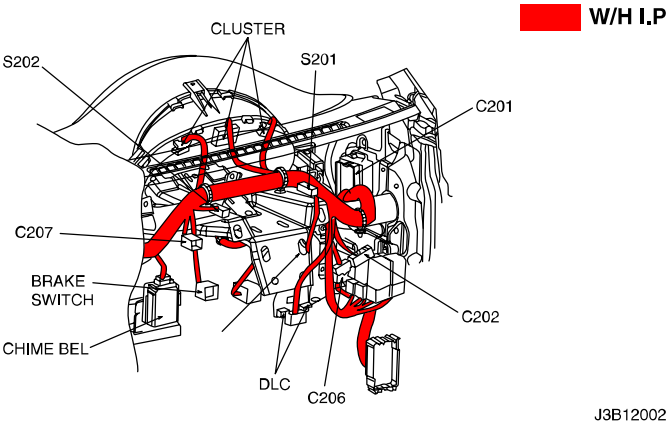


- W/H DRIVE DORR

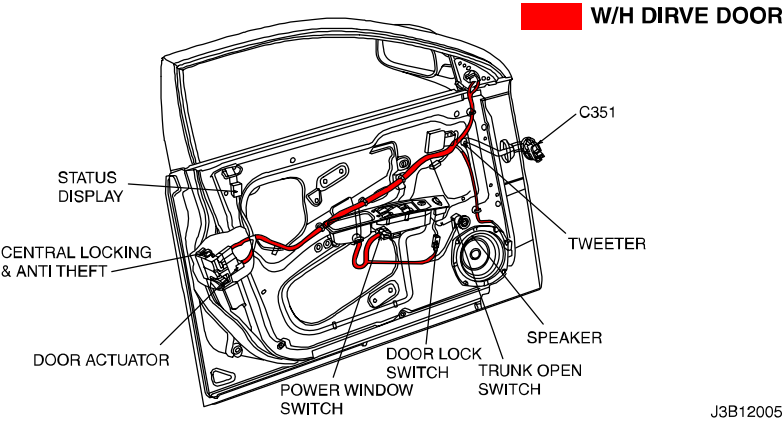


d. SPLICE PACK

S203

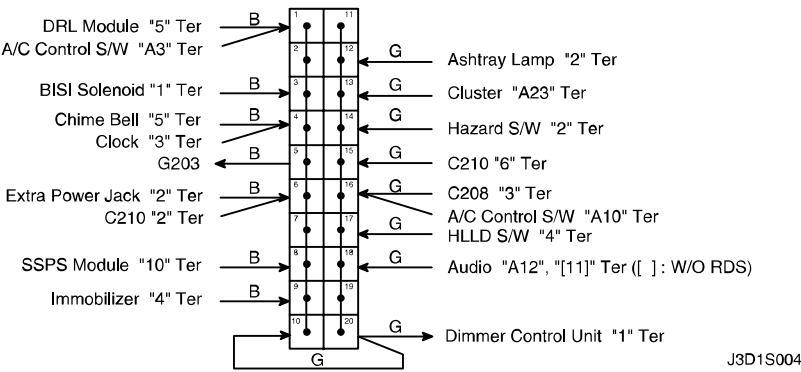


S204

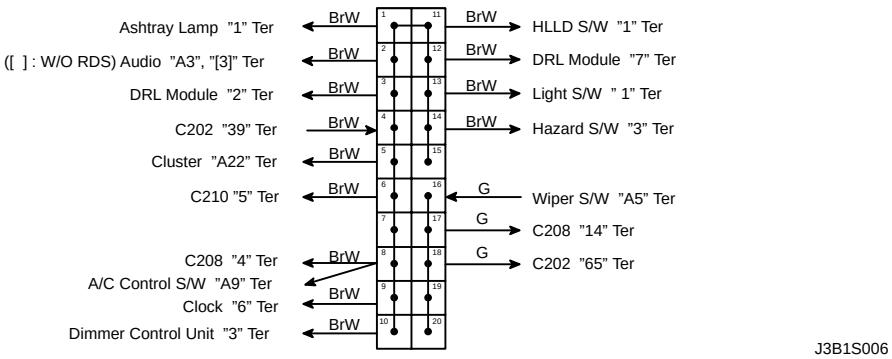

28. ABS (ANTILOCK BRAKE SYSTEM)


1) POWER SUPPLY, WHEEL SPEED SENSOR & BRAKE SWITCH CIRCUIT

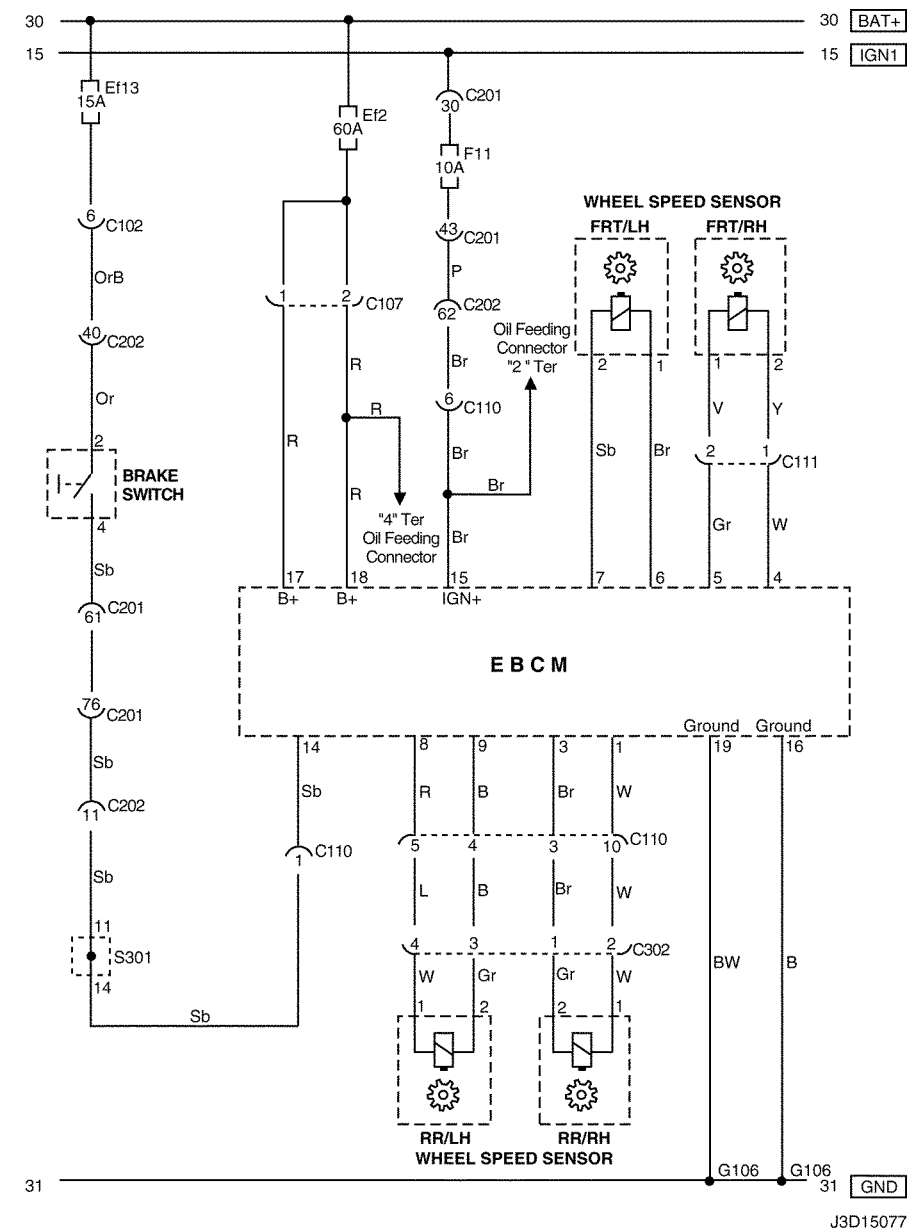

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C107 (2 Pin, White)	ABS – Engine Fuse Block	Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C111 (2 Pin, Black)	ABS – Front	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C302 (4 Pin, Black)	RR. ABS – Body	Center Rear Cross member
S301 (Blue)	Body	Left Driver Leg Room
G106	ABS	Below EBCM

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

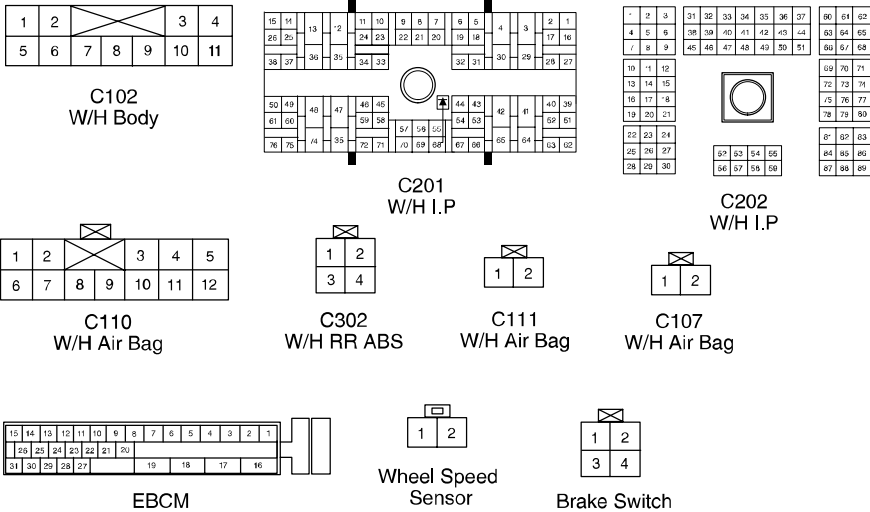


c. POSITION OF CONNECTORS AND GROUNDS


- W/H BODY

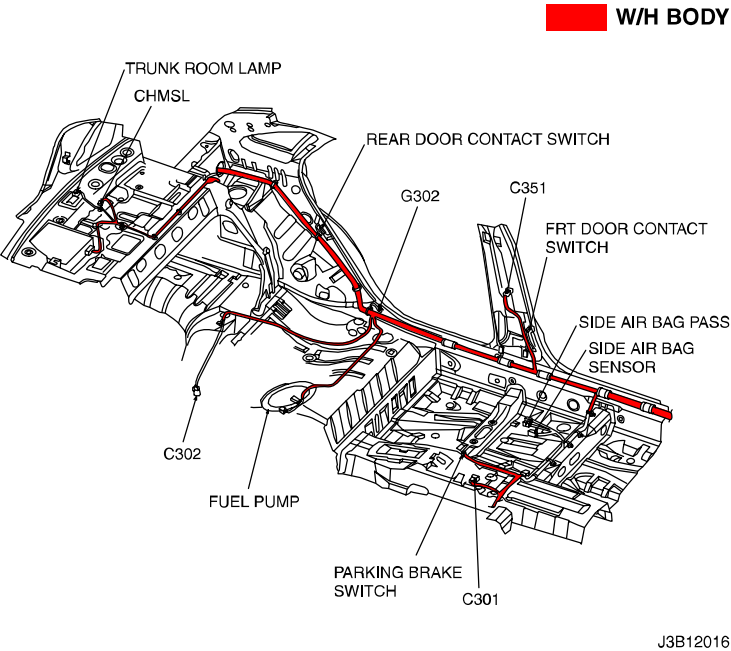


- W/H ABS

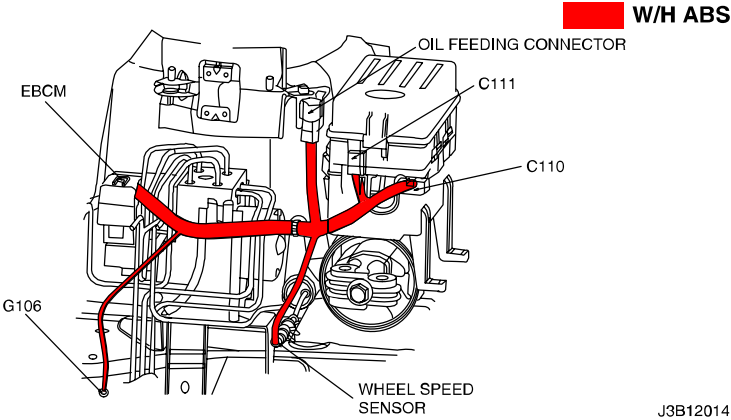


- W/H REAR ABS

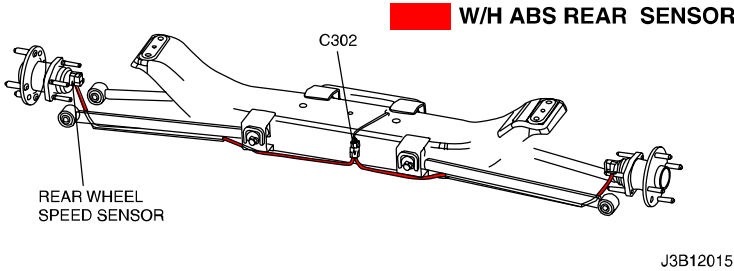

d. SPLICE PACK
S301 (NOTCH BACK)

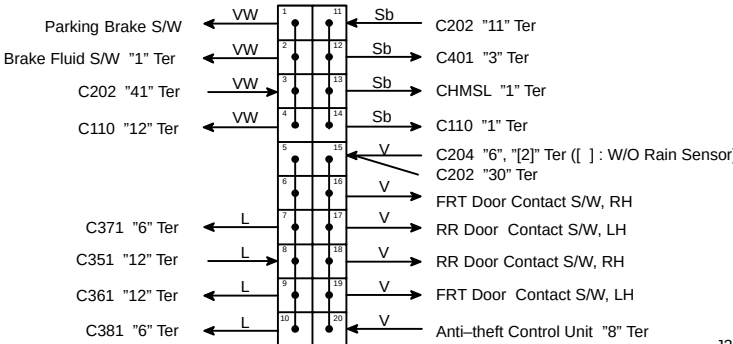

S301 (HATCH BACK)

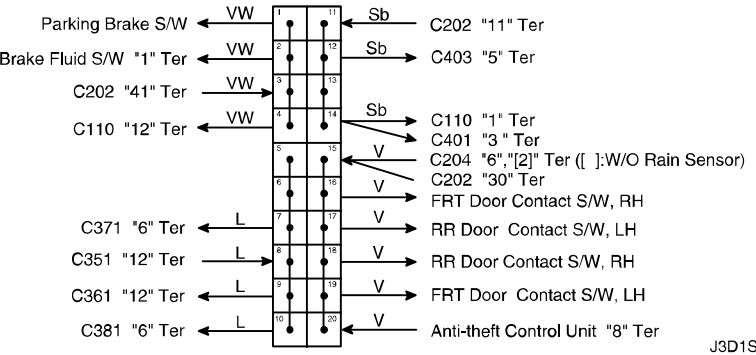



CONNECTOR(No.) (Pin No. Color)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C101 (21 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C107 (2 Pin, White)	ABS – Engine Fuse Block	Engine Fuse Block
C110 (12 Pin, White)	ABS – Body	Below Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
S301 (Blue)	Body	Left Driver Leg Room
G106	ABS	Below EBCM

C201 W/H I.P.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
26	25	24	23	22	21	20	19	18	17	16				
38	37	36	35	34	33	32	31	30	29	28	27			
50	49	48	47	46	45	44	43	42	41	40	39			
61	60	59	58	57	56	55	54	53	52	51	50	49	48	47
76	75	74	73	72	71	70	69	68	67	66	65	64	63	62

C101 W/H Body

1	2													
3	4	5	6	7	8	9	10	11	12					
13	14	15	16	17	18	19	20	21						

EBCM

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
26	25	24	23	22	21	20								
31	30	29	28	27			19	18	17	16				

C202 W/H I.P.

1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24
25	26	27	28	29	30						

C106 W/H Engine

16	15	14	13	12	11	10	9
8	7	6	5	4	3	2	1

DLC

1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24
25	26	27	28	29	30						

C110 W/H Air Bag

1	2	3	4	5
6	7	8	9	10
11	12			

C107 W/H Air Bag

1	2
4	3

Oil feeding Connector


2	1
4	3

Cluster


C1	C2	C3
C4	C5	C6
C7	C8	

c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

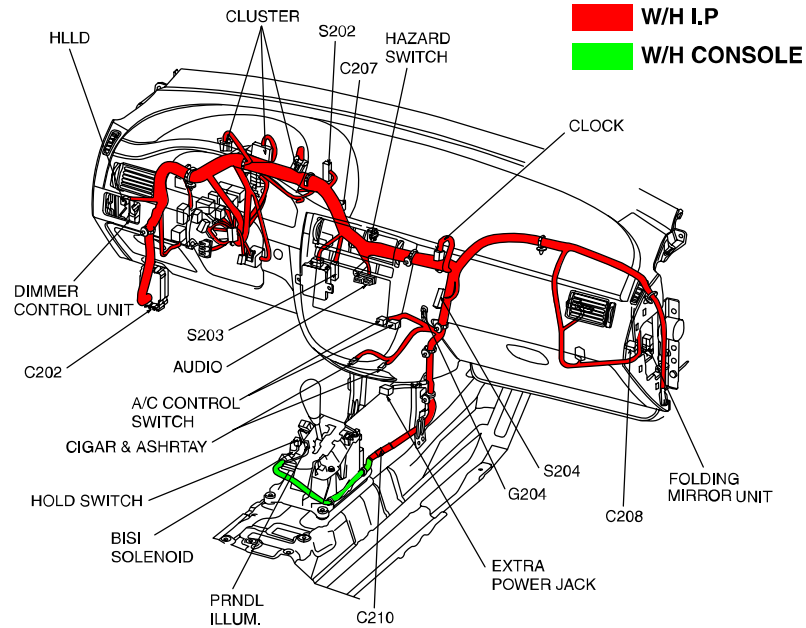


- W/H ABS

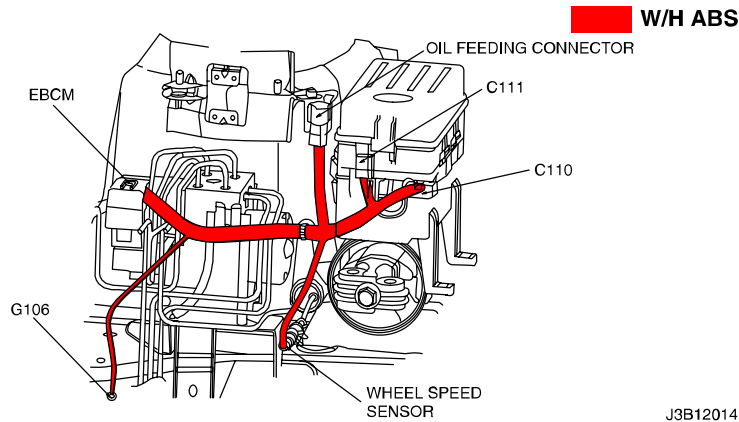


d. SPLICE PACK


S301 (NOTCH BACK)

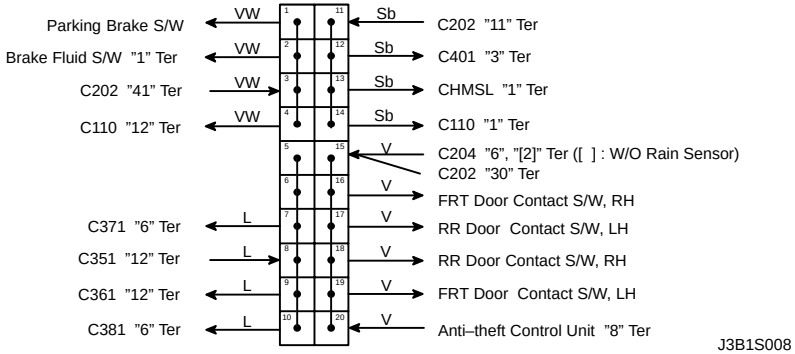

S301 (HATCH BACK)

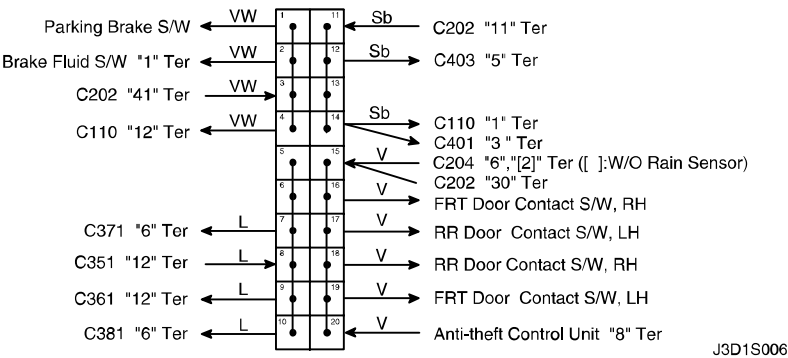


29. AIR BAG (SDM: SENSING & DIAGNOSTIC MODULE) CIRCUIT

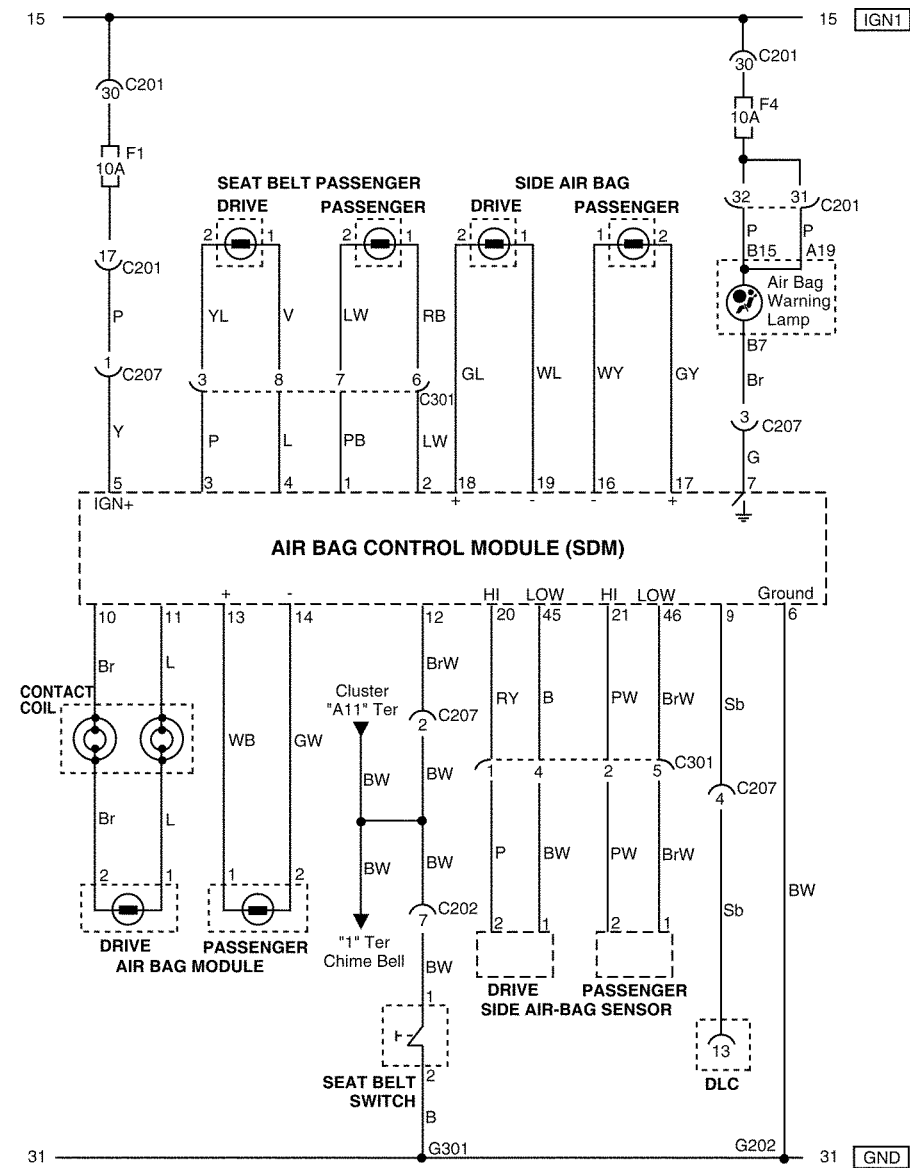

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C207 (6 Pin, White)	Air Bag – I.P	Upper Right Driver Leg Room
C301 (8 Pin, White)	Air Bag – Body	Front SDM
G202	Air Bag	Behind Left Audio Bracket
G301	Body	Below Co-Driver Cross Member Floor Panel

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

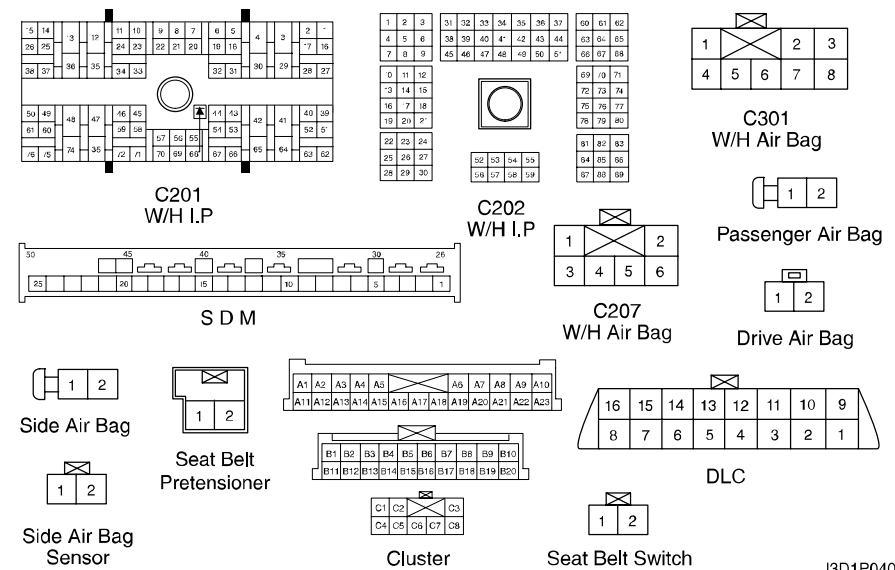


c. POSITION OF CONNECTORS AND GROUNDS

- W/H AIR BAG

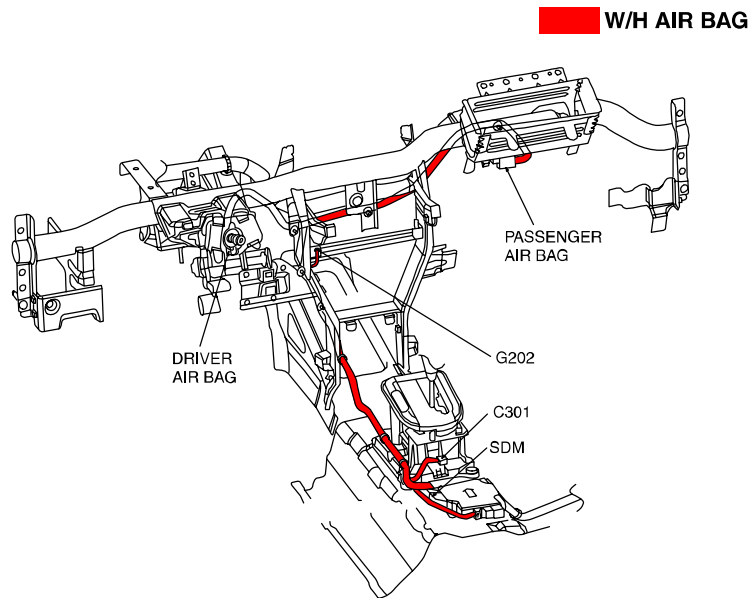


J3B12004

- W/H INSTRUMENT PANEL

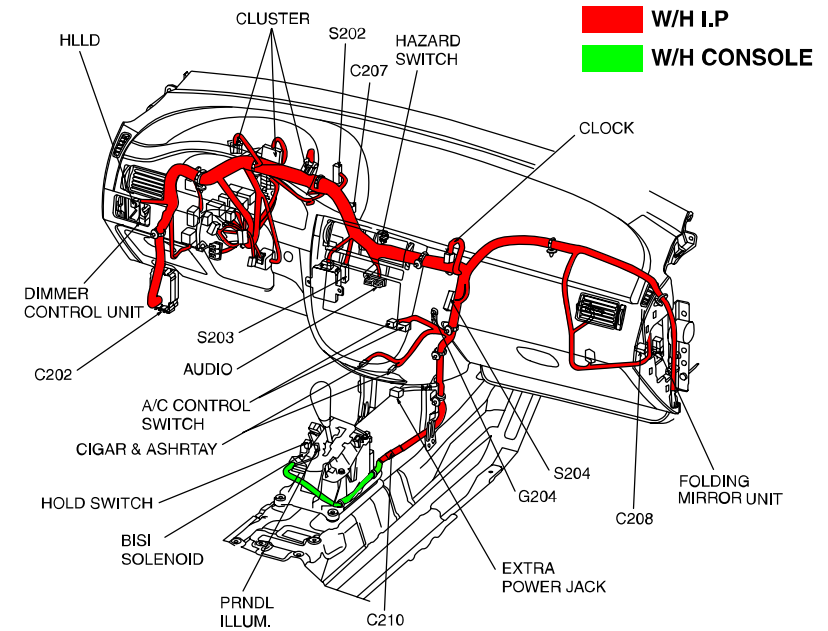

J3B12001


30. SUN ROOF CIRCUIT

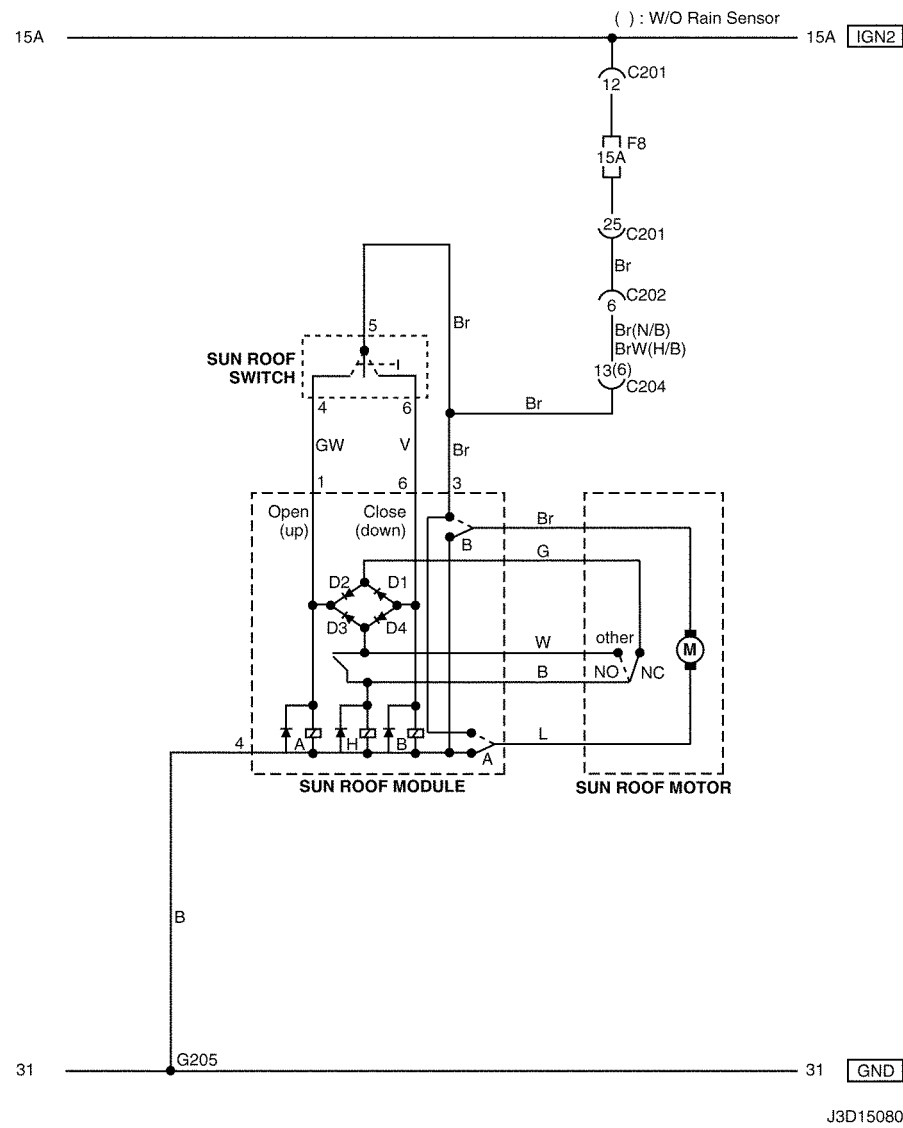

a. CONNECTOR INFORMATION


CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C204 (14 Pin, White)	Roof – Body (W/ Rain Sensor)	Left Driver Leg Room
C204 (8 Pin, White)	Roof – Body (W/O Rain Sensor)	Left Driver Leg Room
G205	Roof	Inside Driver A Pillar

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

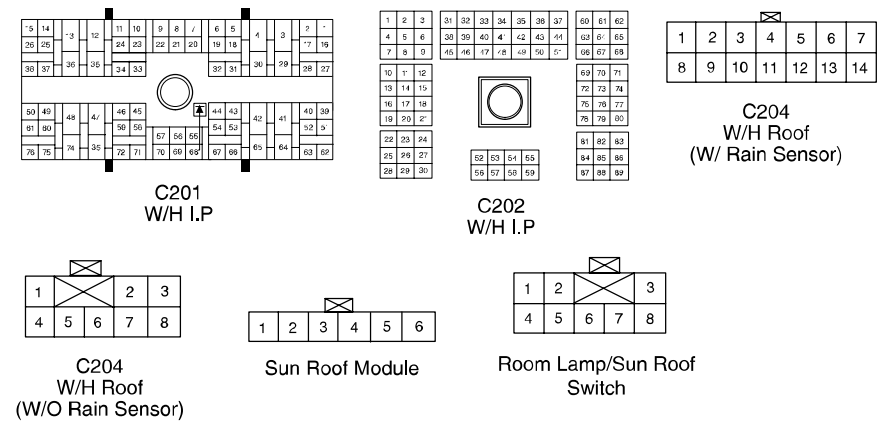


c. POSITION OF CONNECTORS AND GROUNDS

- W/H ROOF

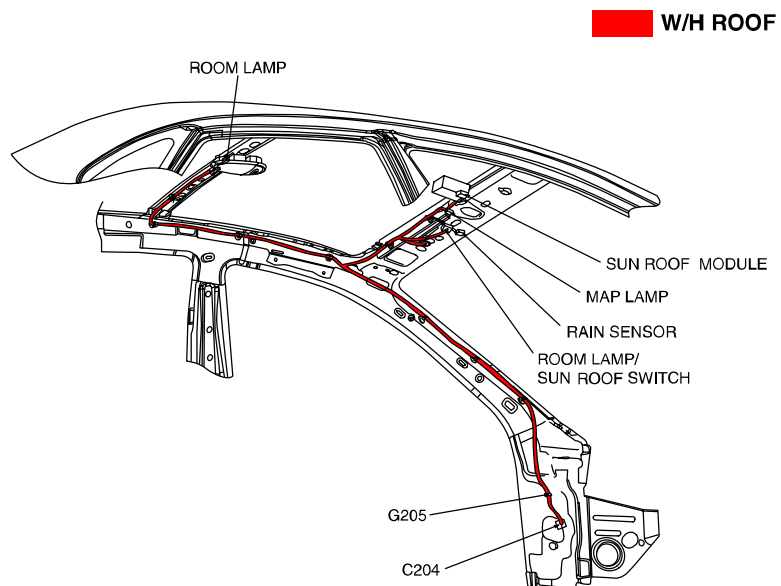

J3B12007

- W/H INSTRUMENT PANEL

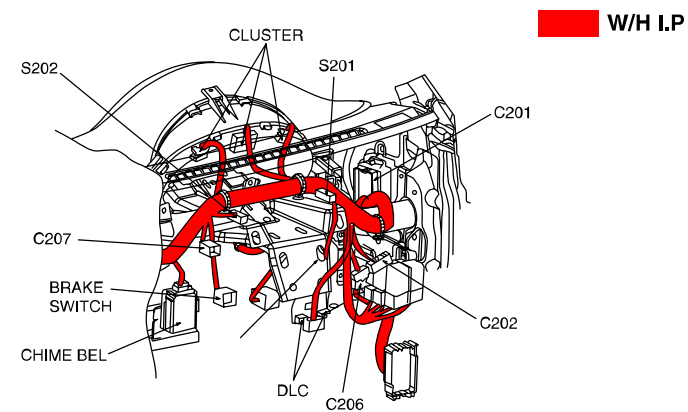

J3B12002




CONNECTOR(NO.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C106 (20 Pin, White)	Engine – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C206 (22 Pin, White)	I.P – TCM	Upper Driver Leg Room
S202 (Black)	I.P	Behind Cluster
S203 (Red)	I.P	Behind Audio Mounting
G104	Engine	Under Start Motor
G203	I.P	Behind Left Audio Bracket

The diagram illustrates the component layout on the J3D1P041 PCB. Components are represented by numbered rectangles and labeled with their names and functions. The layout includes:

- C201 W/H I.P.**: A 4x4 grid of pins, with a central 2x2 area crossed out.
- C202 W/H I.P.**: A 4x4 grid of pins, with a central 2x2 area crossed out.
- C113 W/H Body**: A 4x4 grid of pins, with a central 2x2 area crossed out.
- C102 W/H Body**: A 4x4 grid of pins, with a central 2x2 area crossed out.
- C106 W/H Engine**: A 4x4 grid of pins, with a central 2x2 area crossed out.
- C108 W/H Body**: A 4x4 grid of pins, with a central 2x2 area crossed out.
- C206 W/H IP**: A 4x4 grid of pins, with a central 2x2 area crossed out.
- Steering Wheel Sensor**: A 3x3 grid of pins, with a central 2x2 area crossed out.
- SPSS Module**: A 3x3 grid of pins, with a central 2x2 area crossed out.
- VSS (M/T)**: A 3x3 grid of pins, with a central 2x2 area crossed out.
- SPSS Coil**: A 3x3 grid of pins, with a central 2x2 area crossed out.
- Cluster**: A 3x3 grid of pins, with a central 2x2 area crossed out.


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

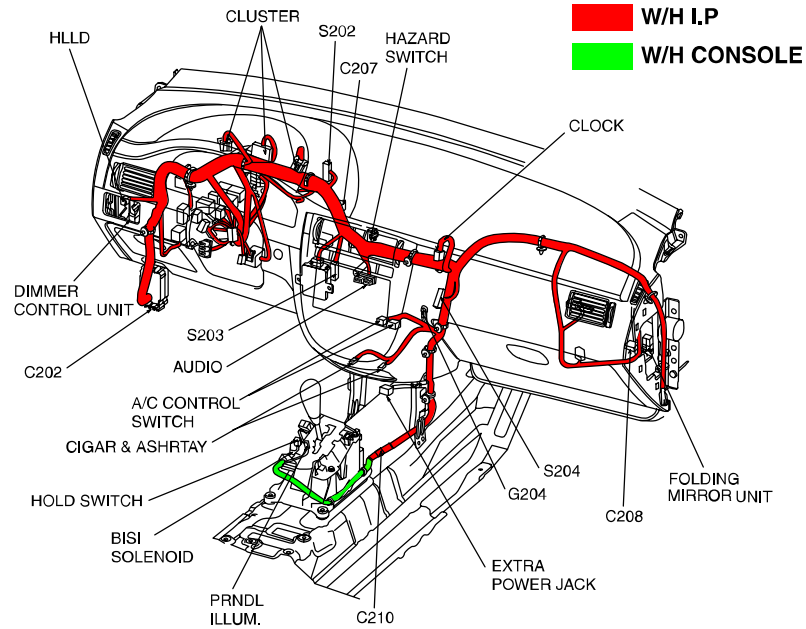


d. SPLICE PACK


S202

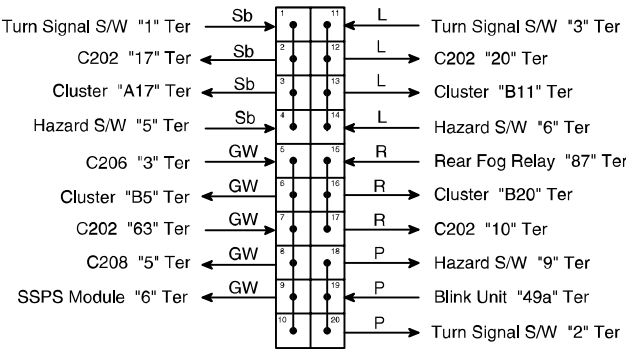

S203

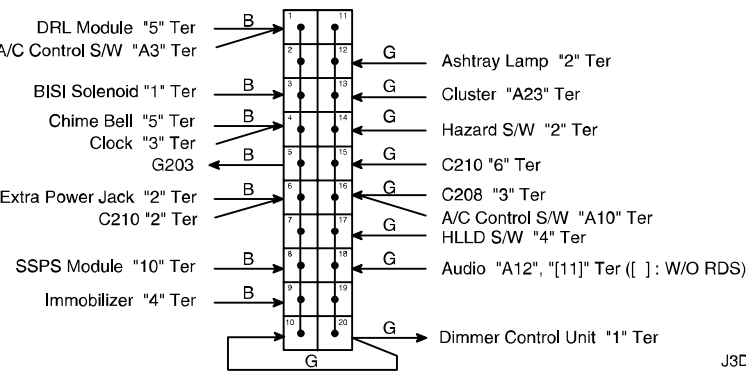

32. IMMOBILIZER SYSTEM CIRCUIT

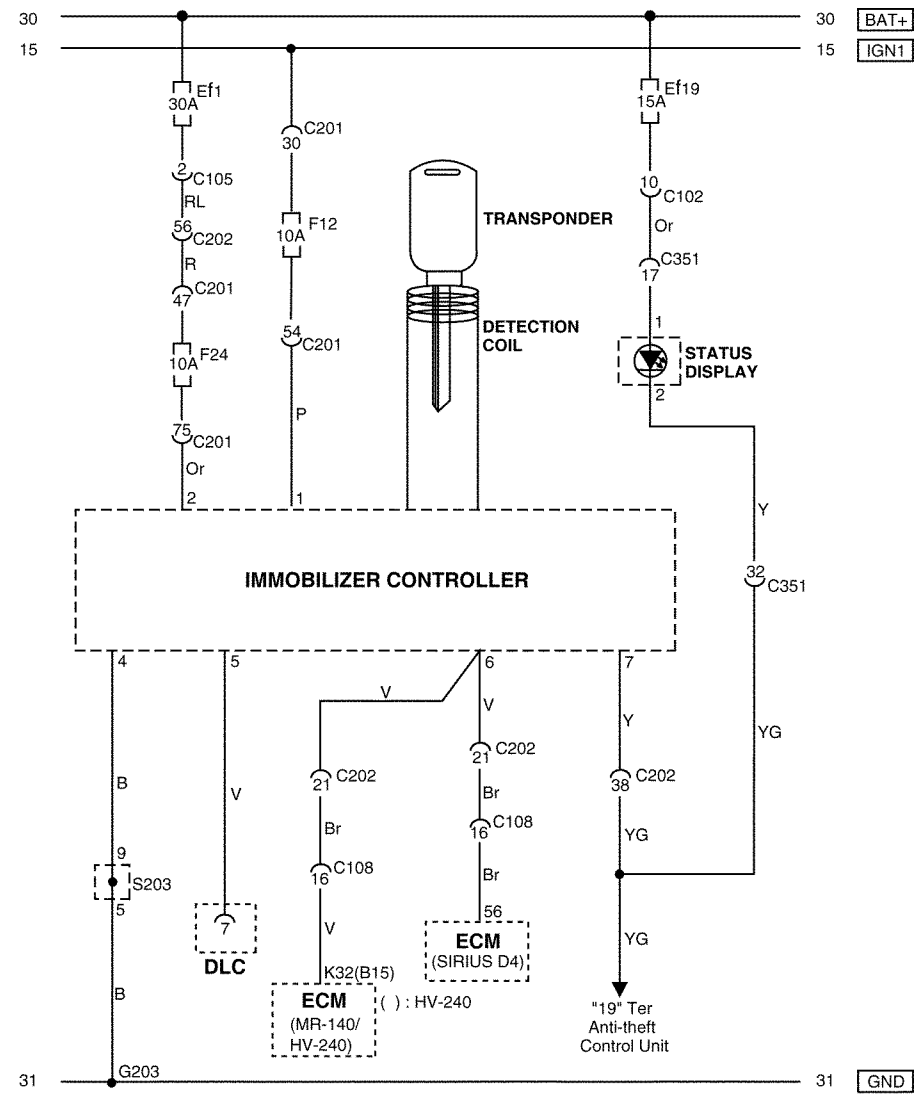


J3D15082

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C108 (24 Pin, Black)	Body – Engine	Left Engine Fuse Block
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
S203 (Red)	I.P	Behind Audio Mounting
G203	I.P	Behind Left Audio Bracket


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

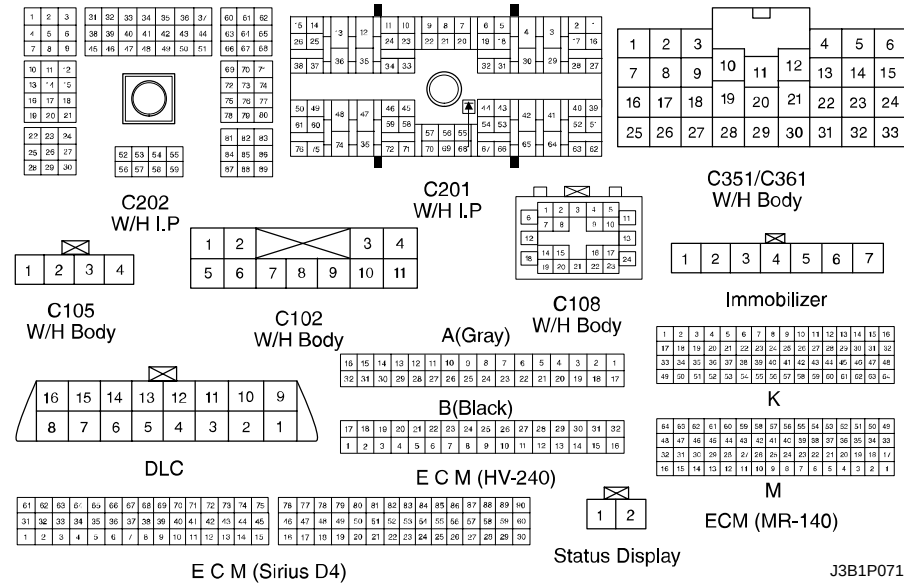


J3B1P071

c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

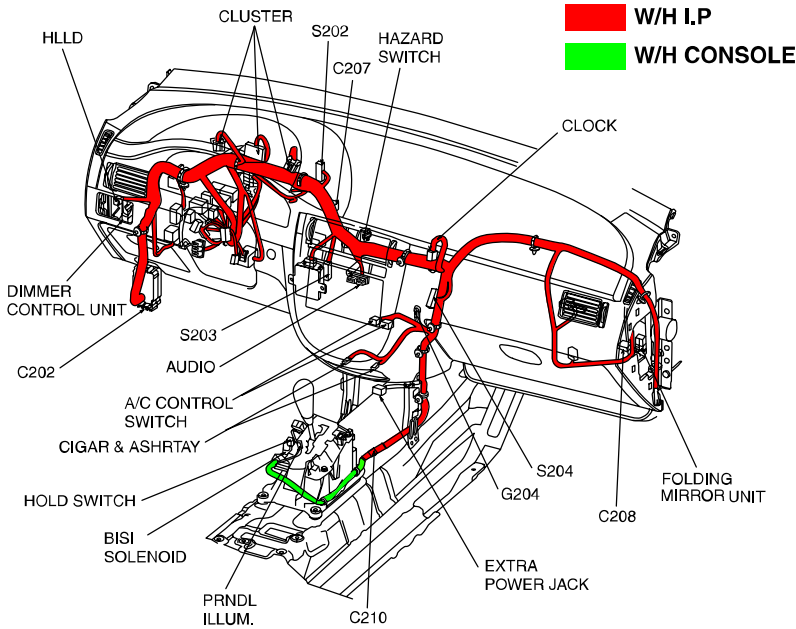


J3B12001

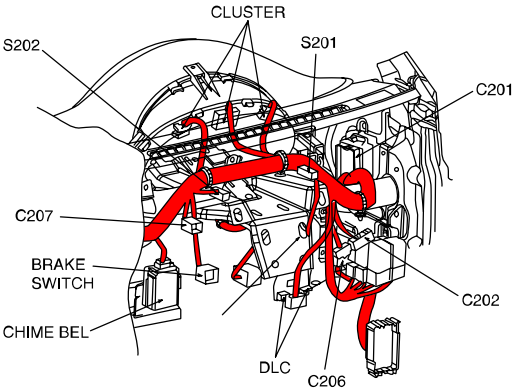

J3B12002

d. SPLICE PACK


S203

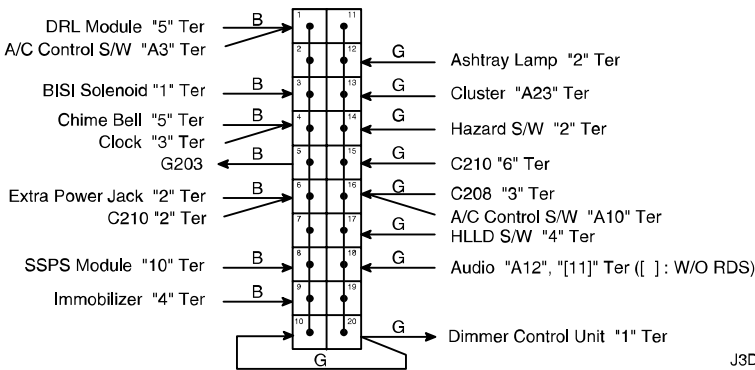

J3D1S004

33. ANTI THEFT CONTROL SYSTEM CIRCUIT

1) NOTCH BACK

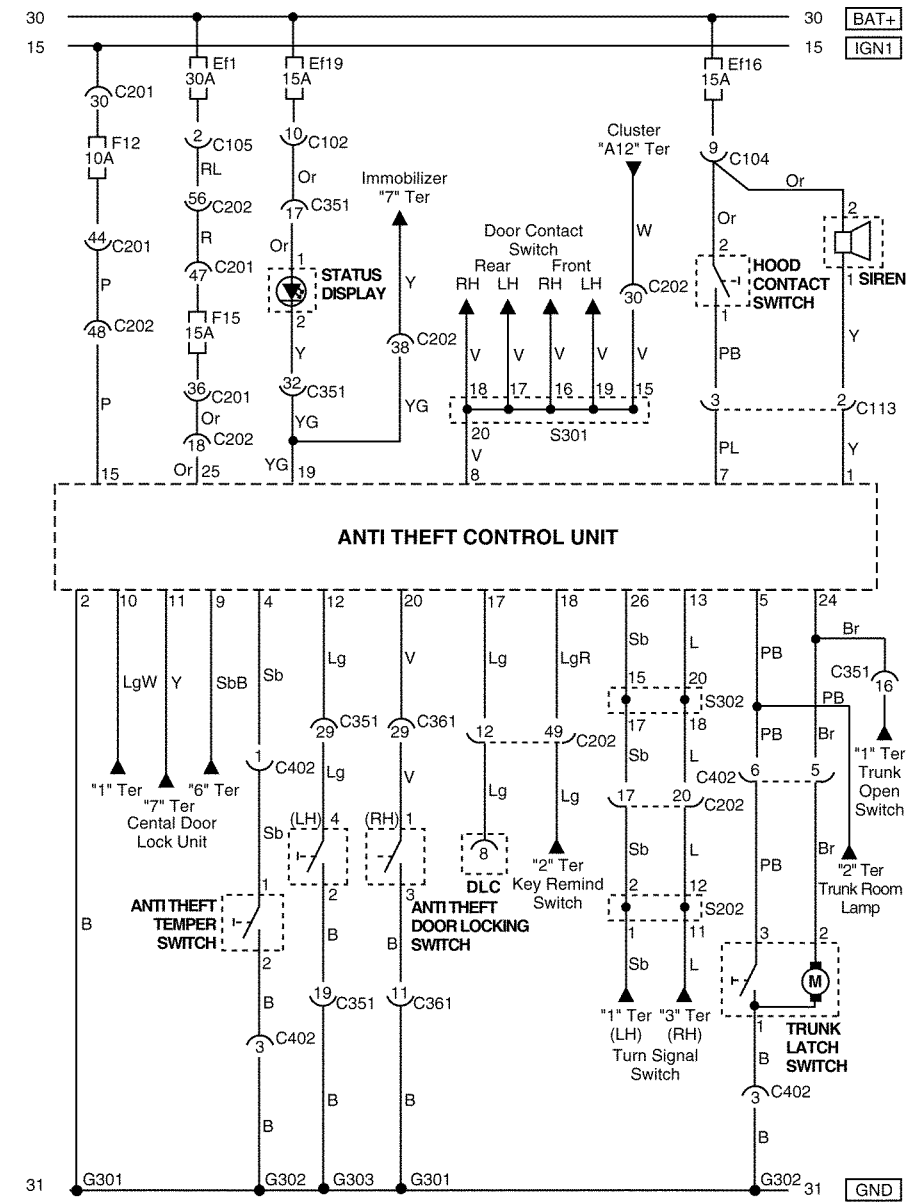


J3D15083

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C361 (33 Pin, Gray)	Body – Front Right Door	Under Co-Driver A Pillar
C402 (6 Pin, White)	Trunk LID – Body	Inside Right Trunk Side Cover
S202 (Black)	I.P	Behind Cluster
S301 (Blue)	Body	Left Driver Leg Room
S302 (Brown)	Body	Left Driver Leg Room
G301	Body	Below Co-Driver Cross Member Floor Panel
G302	Body	Below Left C Pillar
G303	Body	Below Left Driver Leg Room


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

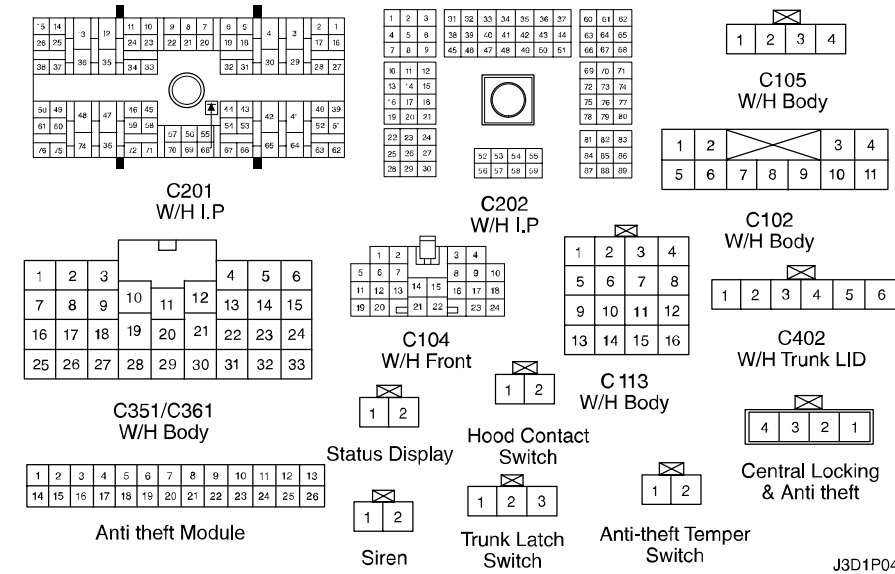

J3D1P042

c. POSITION OF CONNECTORS AND GROUNDS


- W/H BODY

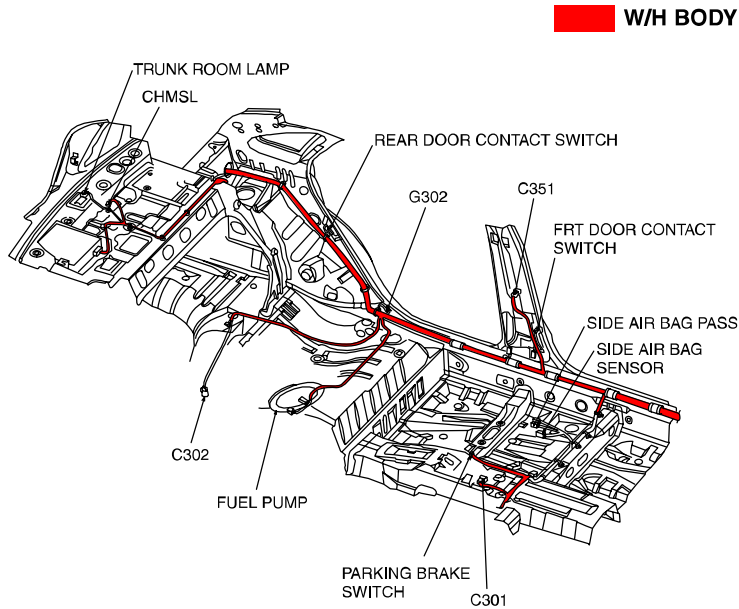

J3B12016


d. SPLICE PACK

S202

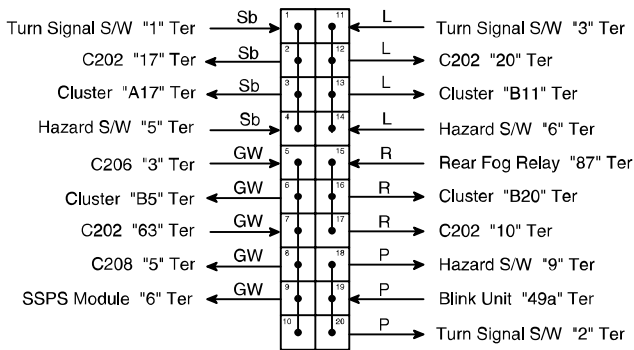


J3D1S003

S301

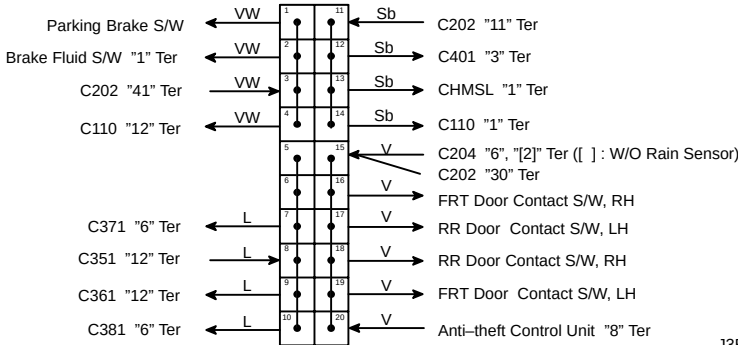


J3B1S008

S302

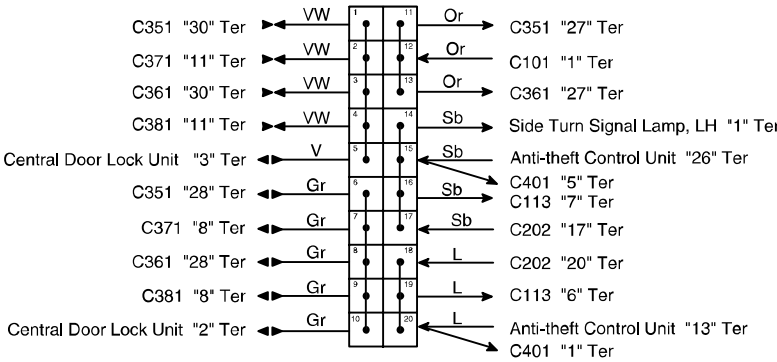

J3D1S005

2) HATCH BACK

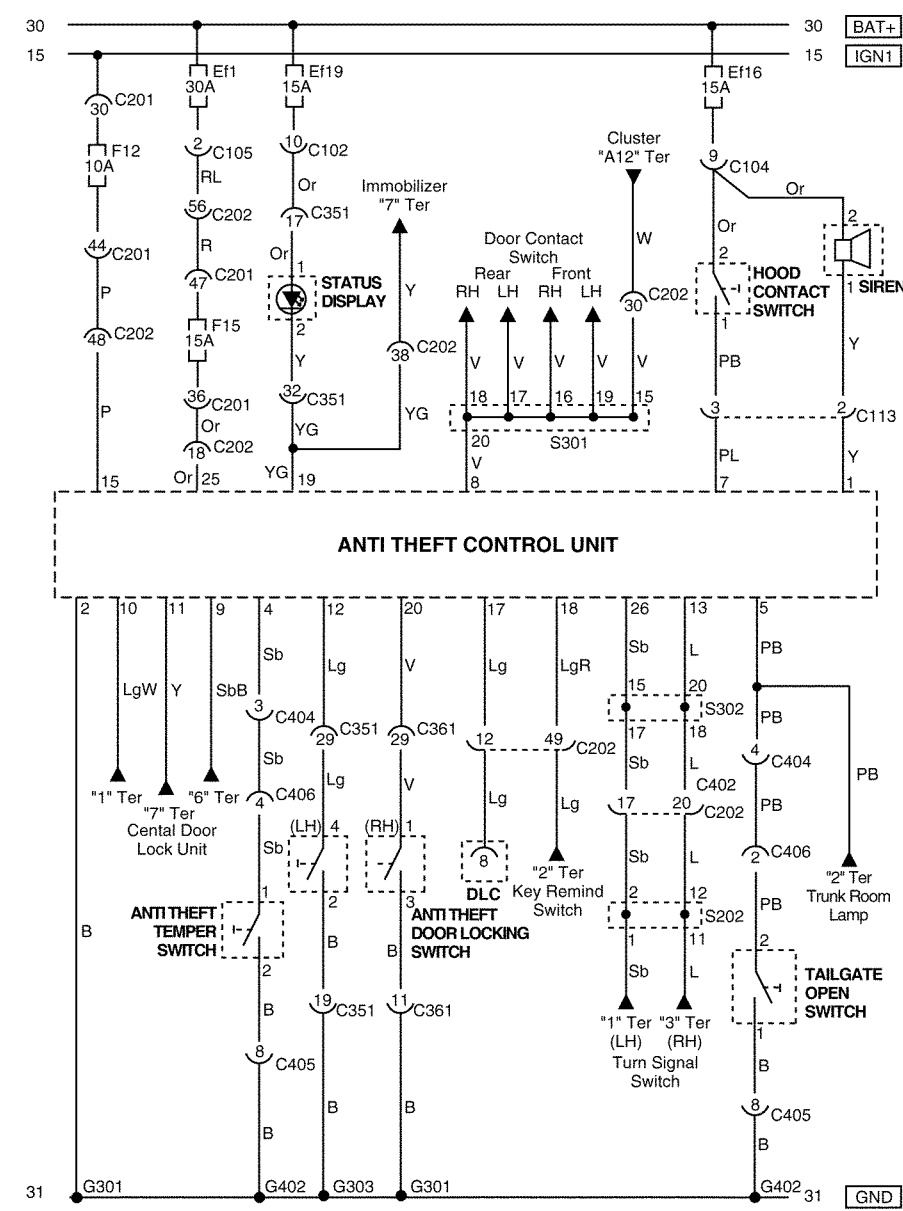


J3D15084

a. CONNECTOR INFORMATION

CONNECTOR(No.) (PIN NO. COLOR)	CONNECTING, WIRING HARNESS	CONNECTOR POSITION
C102 (11 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C104 (24 Pin, White)	Front – Engine Fuse Block	Engine Fuse Block
C105 (4 Pin, White)	Body – Engine Fuse Block	Engine Fuse Block
C113 (16 Pin, Black)	Body – Front	Behind ECM Bracket
C201 (76 Pin, Black)	I.P – I.P Fuse Block	I.P Fuse Block
C202 (89 Pin, White)	I.P – Body	Left Driver Leg Room
C351 (33 Pin, Gray)	Body – Front Light Door	Under Driver A Pillar
C361 (33 Pin, Gray)	Body – Front Right Door	Under Co-Driver A Pillar
C404 (8 Pin, White)	T/Gate. EXT. – Body	Inside Left C Pillar
C405 (8 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
C406 (6 Pin, White)	T/Gate. EXT. – T/Gate	Beside Left Rear Wiper Motor
S202 (Black)	I.P	Behind Cluster
S301 (Blue)	Body	Left Driver Leg Room
S302 (Brown)	Body	Left Driver Leg Room
G301	Body	Below Co-Driver Cross Member Floor Panel
G303	Body	Below Left Driver Leg Room
G402	T/Gate. EXT	Inside Driver C Pillar


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

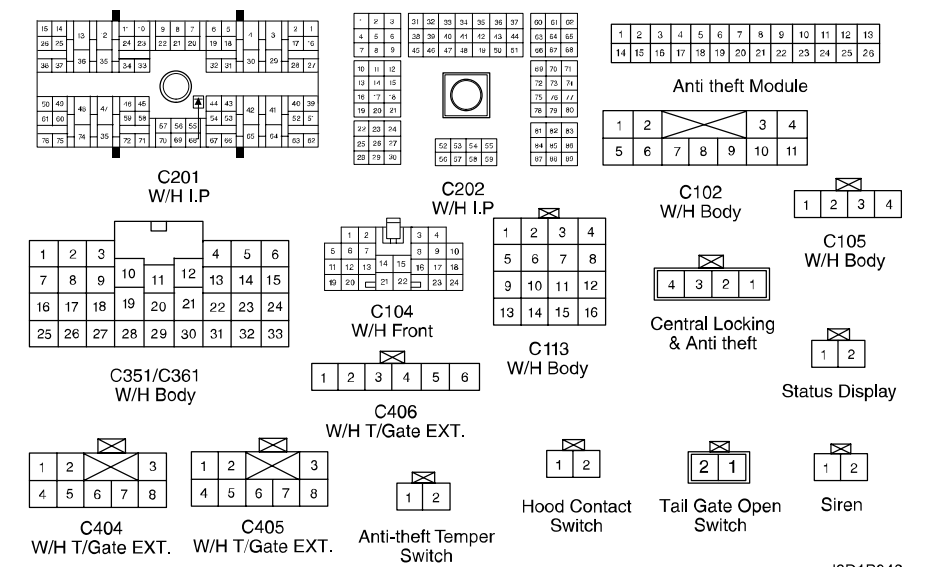


J3D1P043

c. POSITION OF CONNECTORS AND GROUNDS

- W/H BODY

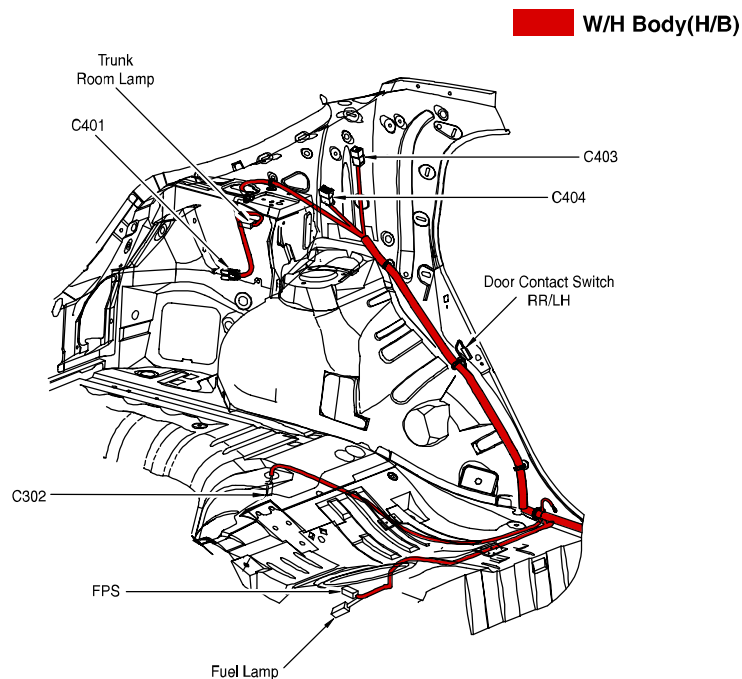


J3B12029

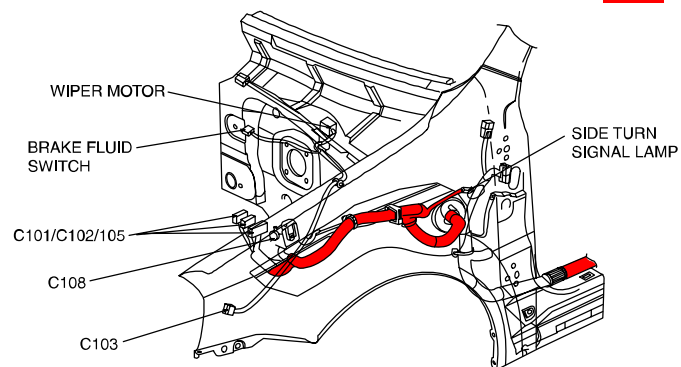

J3B12020


d. SPLICE PACK

S202

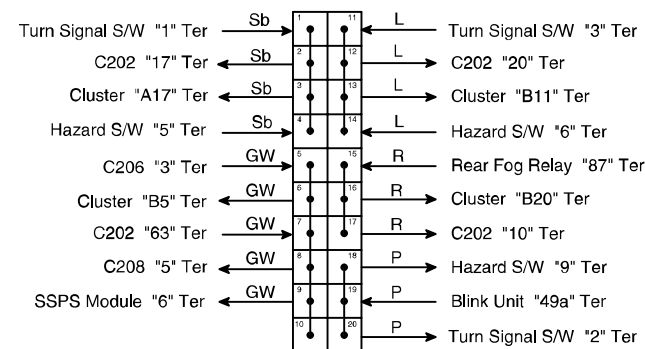


J3D1S003

S301

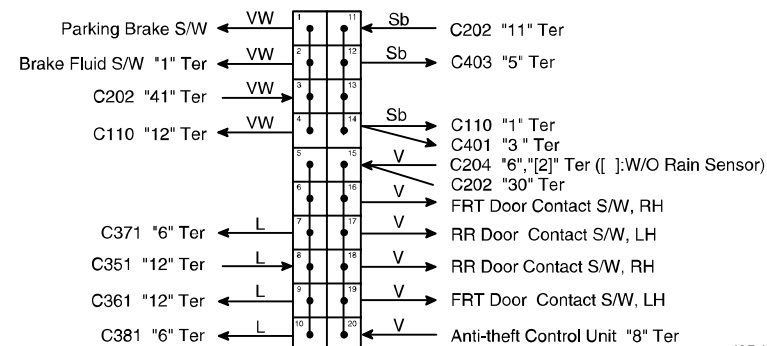

J3D1S006

S302

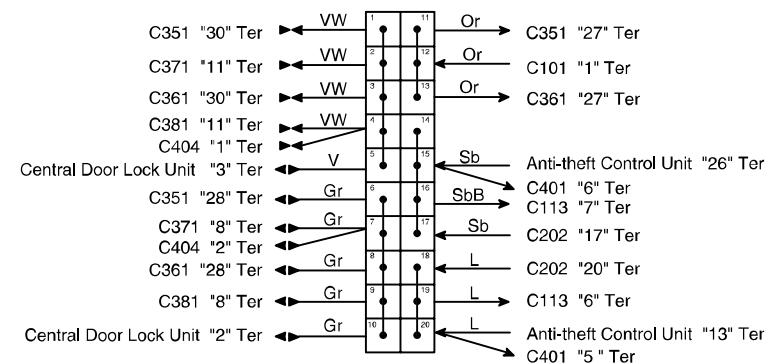

J3D1S007