 
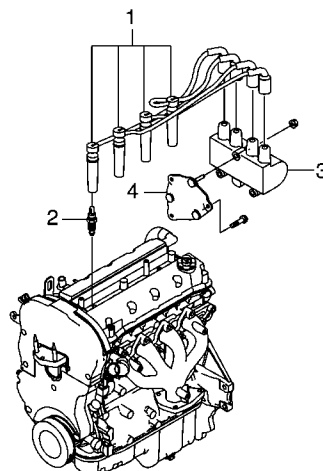 
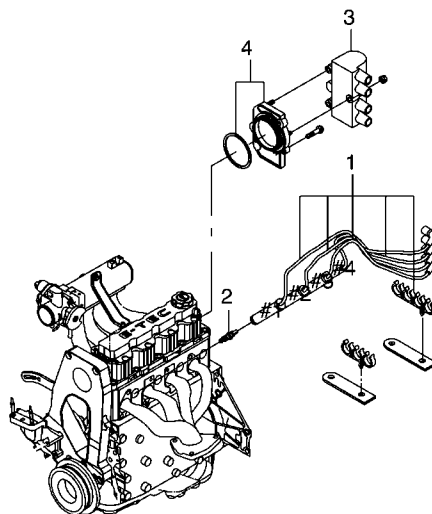 




SECTION 1E**ENGINE (ENGINE ELECTRICAL)**

151. IGNITION CABLE	1E – 3
154. ALTERNATOR UNIT	1E – 5
156. STARTER	1E – 7
157. BATTERY	1E – 9
158. FUSE & RELAY	1E – 11

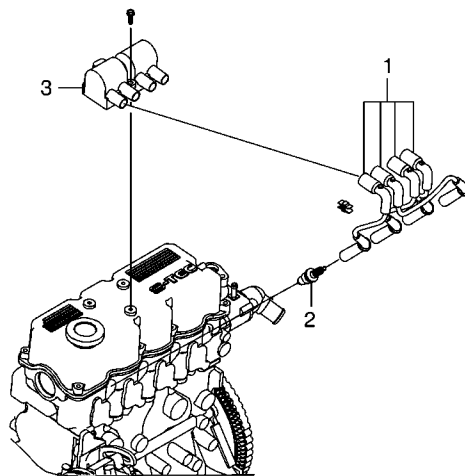


ENGINE ELECTRICAL – IGNITION CABLE (151)


NO.	OPERATION DESCRIPTION	OPERATION CODE	MODEL		
			S	N	L
1	WIRES, SPARK PLUG – REPLACE (ONE OR TWO)	SOHC	1510100	0.2	—
		DOHC	1510200	0.2	0.2
	WIRES, SPARK PLUG – REPLACE (ALL)	SOHC	1510400	0.2	—
		DOHC	1510500	0.2	0.1
		SOHC	1510800	0.2	—
		DOHC	1510900	0.3	0.3
2	PLUGS, SPARK – REPLACE (ONE OR TWO)	SOHC	1510800	0.2	—
		DOHC	1510900	0.3	0.2
	PLUGS, SPARK – REPLACE (ALL)	SOHC	1511100	0.3	—
		DOHC	1511200	0.3	0.3
3	COIL, ELECTRONIC IGNITION CONTROL – REPLACE	SOHC	1511300	0.2	—
		DOHC	1511400	0.2	0.3
4	ADAPTER, COIL AND/OR GASKET – REPLACE	SOHC	1511600	0.3	—
		DOHC	1511700	0.4	0.5

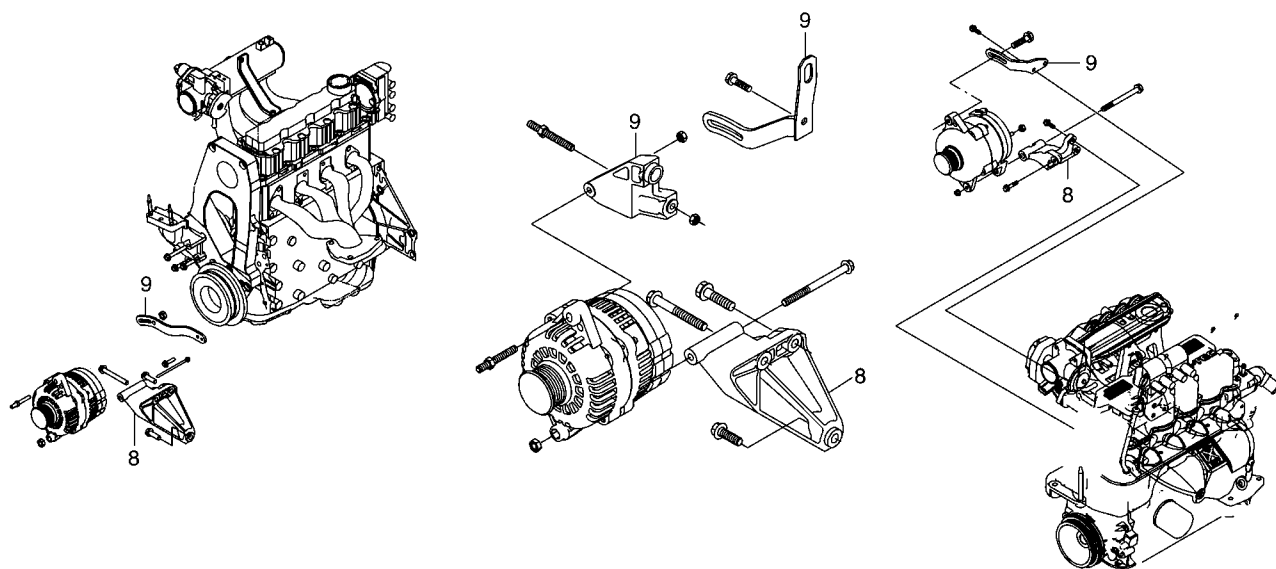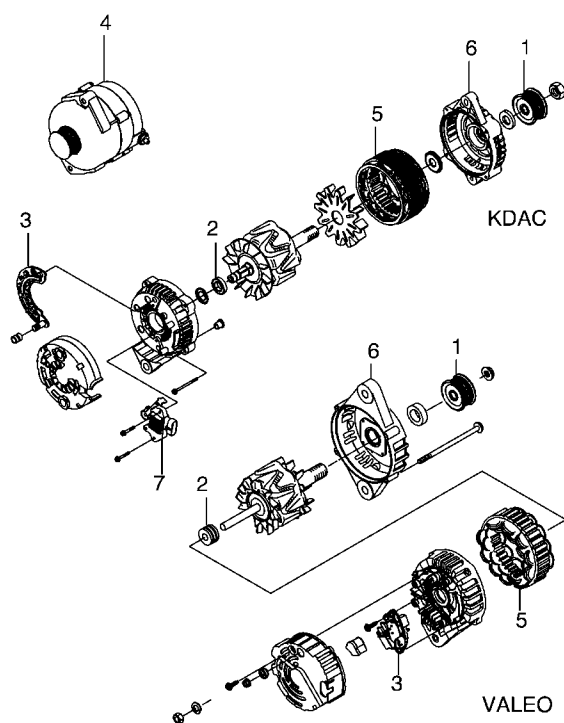  

ENGINE ELECTRICAL – ALTERNATOR UNIT (154)					
NO.	OPERATION DESCRIPTION	OPERATION CODE	MODEL		
			S	N	L
1	PULLEY AND/OR FAN, ALTERNATOR – REPLACE	SOHC 1540100	0.3	—	—
		DOHC 1540200	1.1	0.8	0.3
2	BEARING, REAR ALTERNATOR – REPLACE	SOHC 1540500	0.9	—	—
		DOHC 1540600	1.6	1.2	0.9
3	RECTIFIER, ALTERNATOR – TEST AND REPLACE	SOHC 1541300	0.8	—	—
		DOHC 1541400	1.9	1.5	0.8
4	ALTERNATOR ASSEMBLY – REPLACE	SOHC 1541700	0.6	—	—
		DOHC 1541800	1.1	0.7	0.6
5	STATOR, ALTERNATOR – REPLACE	SOHC 1542100	0.9	—	—
		DOHC 1542200	1.3	1.3	0.9
6	FRAME & BEARING – REPLACE	1542400	0.9	1.1	—
7	REGULATOR, ALTERNATOR – REPLACE	SOHC 1542600	0.8	—	—
		DOHC 1542700	1.9	1.5	0.8
8	BRACKET, ALTERNATOR MOUNTING – REPLACE	SOHC 1544100	0.6	—	—
		DOHC 1544200	0.6	0.7	0.6
9	SHACKLE, ALTERNATOR – REPLACE	SOHC 1544500	0.3	—	—
		DOHC 1544600	0.3	0.4	0.3

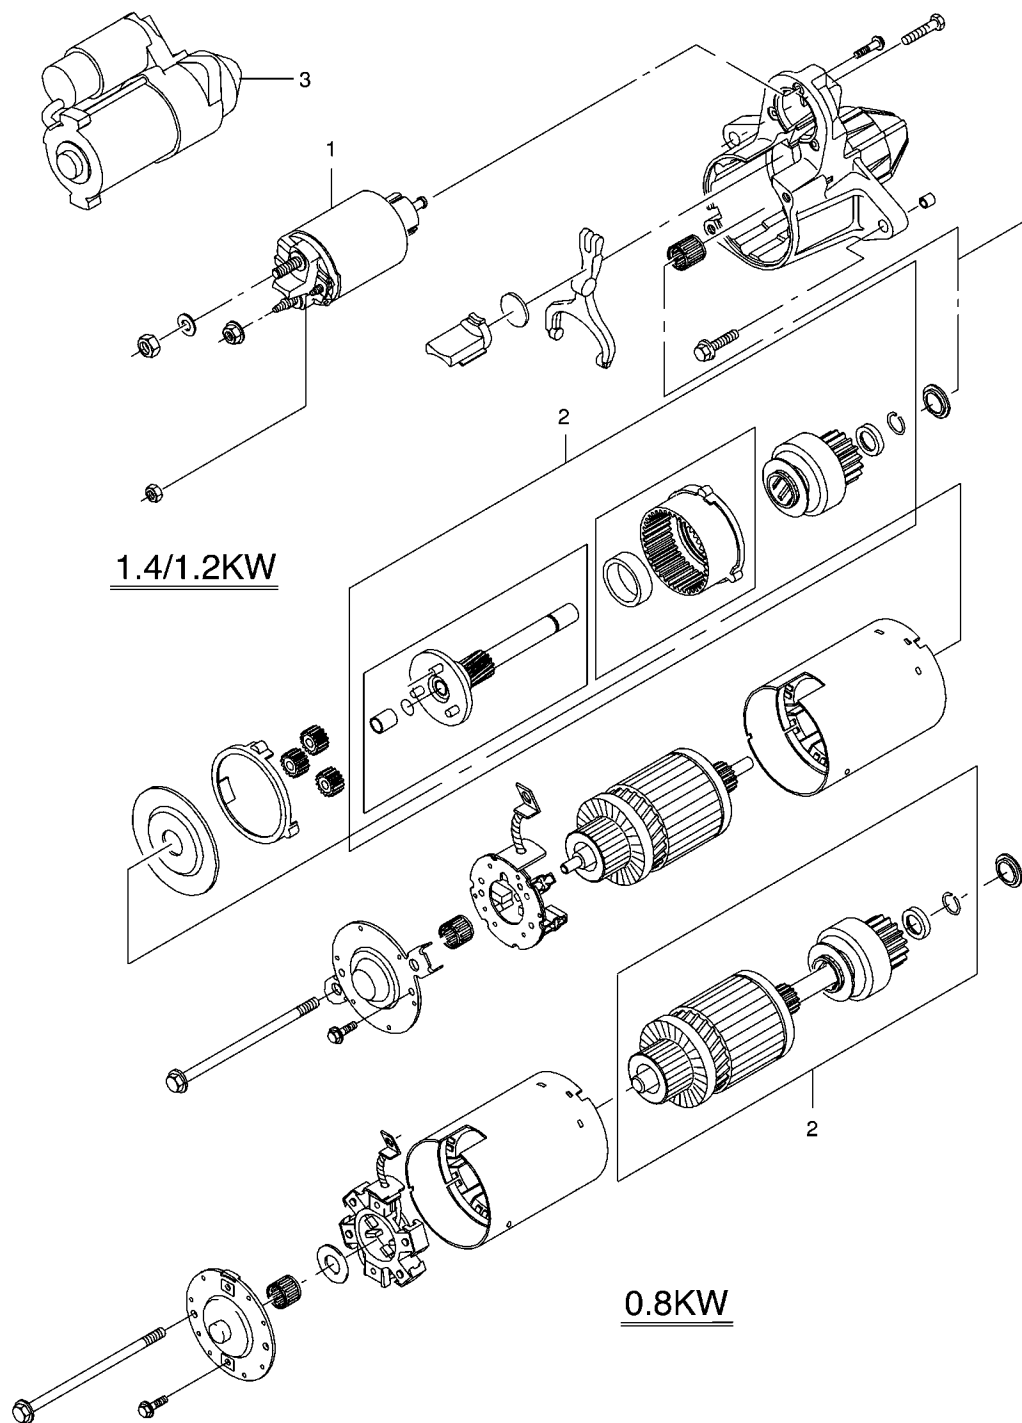 


ENGINE ELECTRICAL – STARTER (156)					
NO.	OPERATION DESCRIPTION	OPERATION CODE	MODEL		
			S	N	L
1	SOLENOID, STARTER MOTOR – REPLACE	SOHC	1560100	0.9	—
		DOHC	1560200	0.9	0.8
	SOLENOID, STARTER MOTOR (RHD, A/T) – REPLACE	DOHC	1560300	—	2.0
2	DRIVE ASSEMBLY, STARTER MOTOR – REPLACE	SOHC	1560400	0.7	—
		DOHC	1560500	0.7	0.6
	DRIVE ASSEMBLY, STARTER MOTOR (RHD, A/T) – REPLACE	DOHC	1560600	—	1.8
3	MOTOR ASSEMBLY, STARTER – REPLACE	SOHC	1560800	0.6	—
		DOHC	1560900	0.6	0.5
	MOTOR ASSEMBLY, STARTER (RHD, A/T) – REPLACE	DOHC	1561100	—	1.7

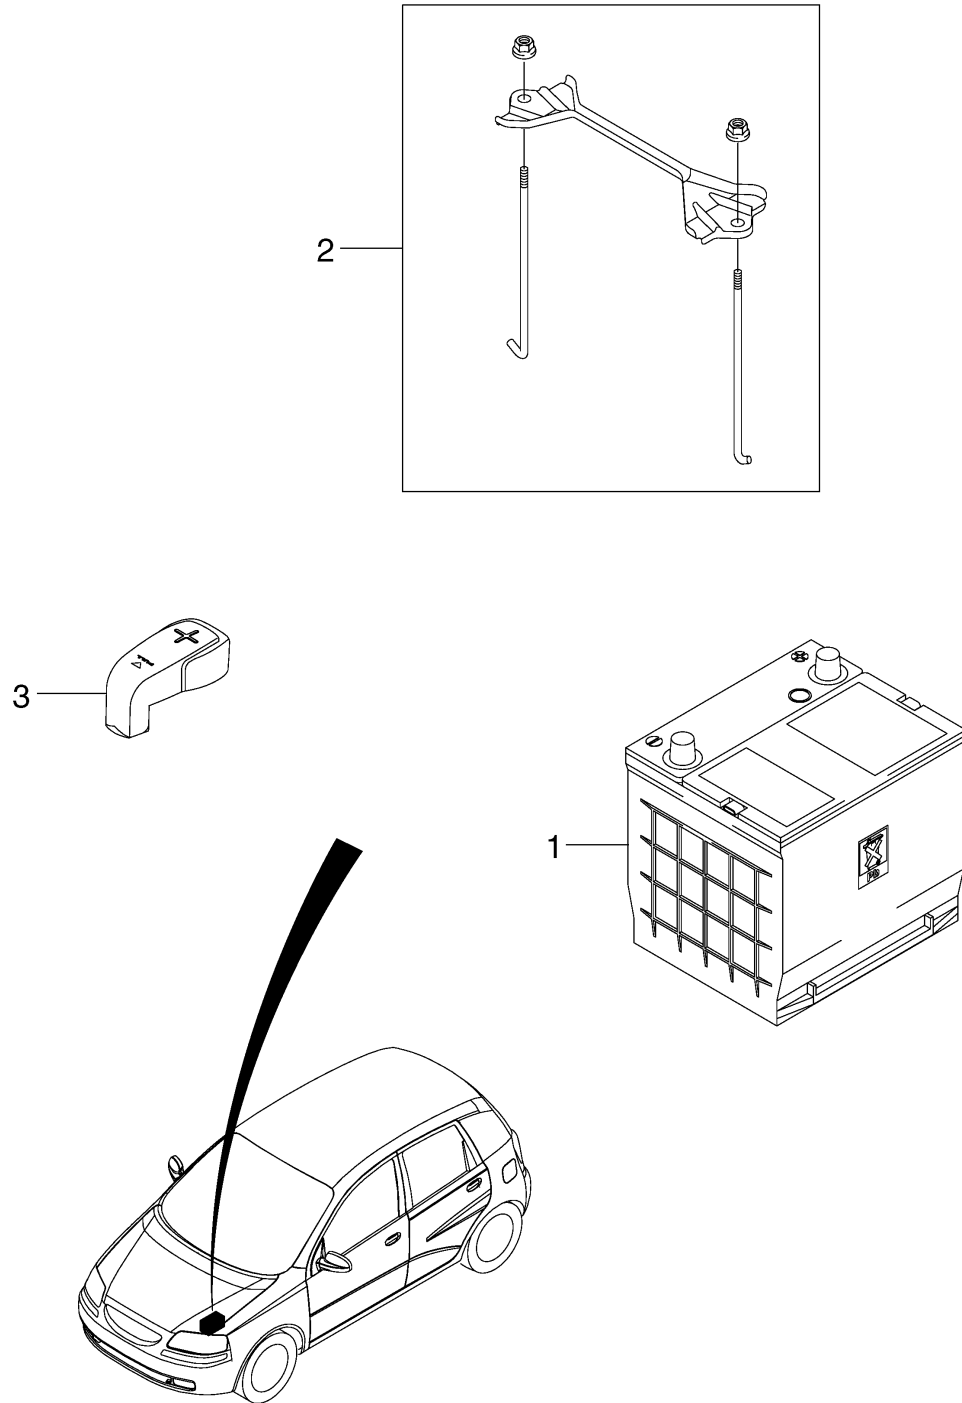 

ENGINE ELECTRICAL – BATTERY (157)

NO.	OPERATION DESCRIPTION	OPERATION CODE	MODEL		
			S	N	L
1	BATTERY Charge and Test Replace	1570200	0.3	0.3	0.3
		1570300	0.3	0.2	0.2
2	RETAINER AND/OR BOLTS, BATTERY – REPLACE	1570500	0.2	0.2	0.2
3	COVER, BATTERY TERMINAL (ONE OR TWO) – REPLACE	1570900	0.2	0.2	0.2
4	CARRIER, BATTERY – REPLACE	1571100	0.3	0.3	0.3

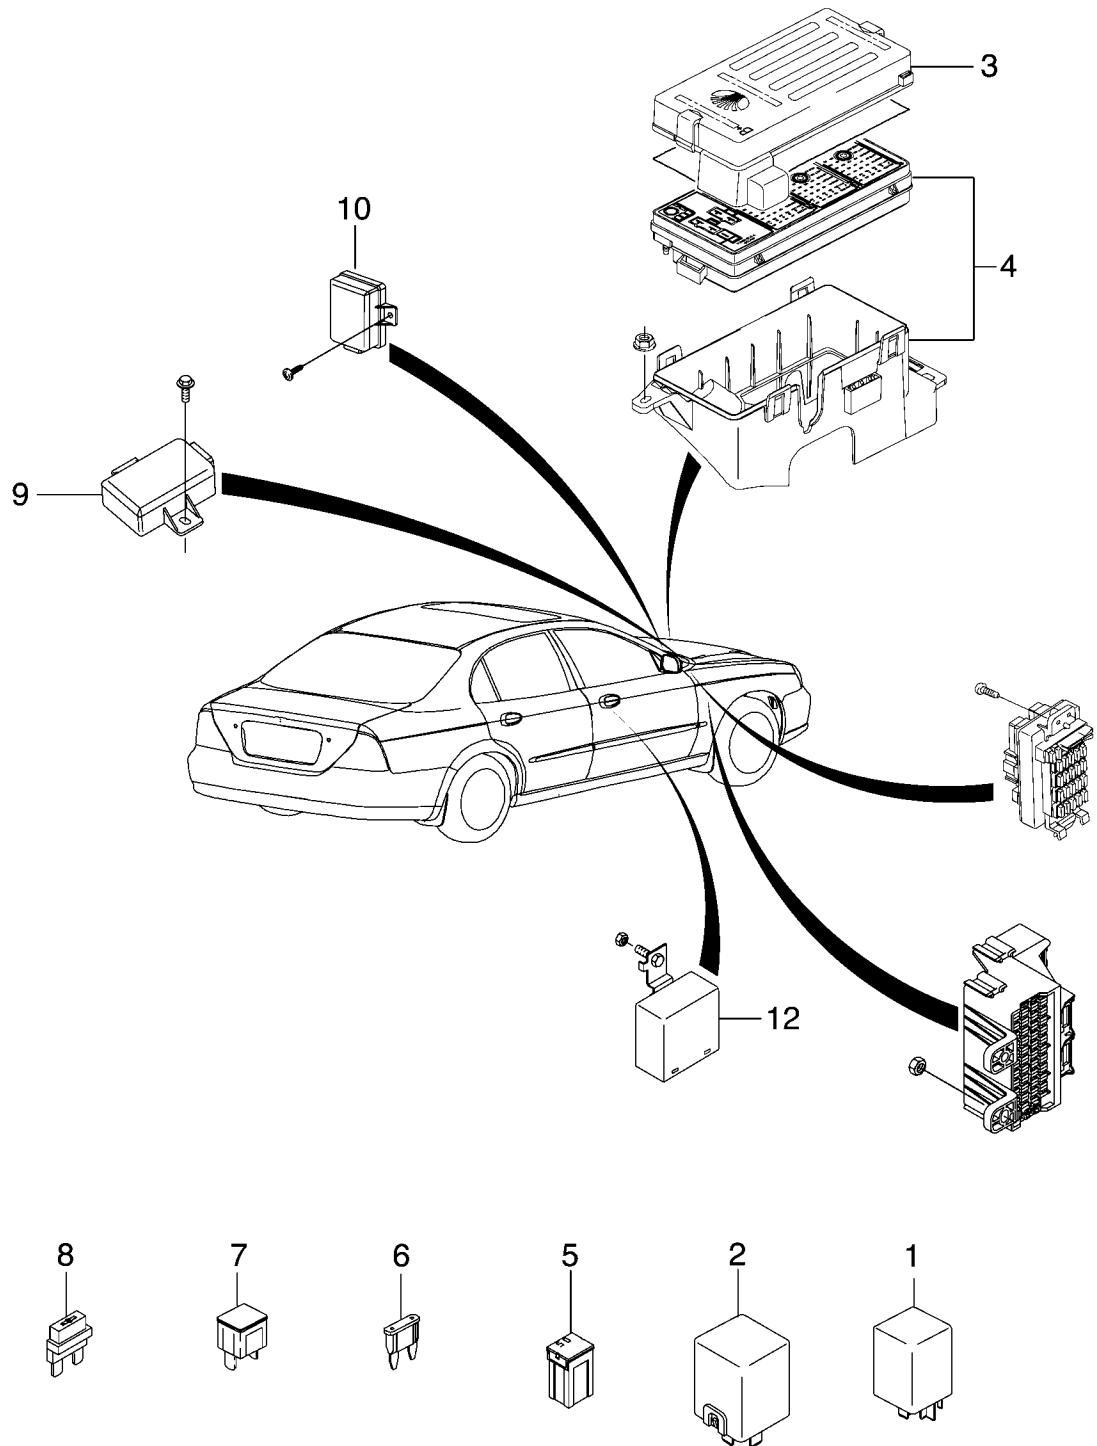 

ENGINE ELECTRICAL – FUSE & RELAY (158)

NO.	OPERATION DESCRIPTION	OPERATION CODE	MODEL		
			S	N	L
1	RELAY – REPLACE				
	Engine Coolant Fan	1580100	0.2	0.2	0.2
	Fog Lamp	1580200	0.2	0.2	0.2
	Horn	1580300	0.2	0.2	0.2
	Fuel Pump	1580400	0.2	0.2	0.2
	Enable (ABS)	1580500	0.2	0.2	0.2
	Blower Motor	1580600	0.2	0.2	0.2
	Comp Cut – OFF	1580700	0.2	0.2	0.2
	Condenser Fan Motor	1580800	0.2	0.2	0.2
	Wind Wiper Motor, Timing	1580900	0.2	0.5	0.2
	Head Lamp	1581100	0.2	0.2	0.2
	Heated Rear Window	1581300	0.2	0.2	0.2
	Other Relays	1581500	0.2	0.2	0.2
2	RELAY – REPLACE				
	Turn Signal	1582100	0.2	0.2	0.2
3	COVER, FUSE BLOCK – REPLACE	1582300	0.2	0.2	0.2
4	BOX, RELAY & FUSE – REPLACE	1582700	—	0.6	0.6
5	MAIN FUSE – REPLACE	1583500	—	0.2	0.2
6	FUSE – REPLACE	1583700	0.2	0.2	0.2
7	CIRCUIT BREAKER – REPLACE	1583800	—	0.2	0.2
8	A/C DIODE – REPLACE	1583900	0.2	0.2	0.2
9	UNIT, AUTO DOOR LOCK – REPLACE	1584200	0.3	0.3	0.3
10	MODULE, CHIME BELL – REPLACE	1584400	0.3	0.3	0.3
	MODULE, DAYTIME RUNNING LAMP – REPLACE	1584500	0.3	0.6	0.3
11	UNIT, KEY INTERLOCK – REPLACE	1584700	0.2	0.2	0.2
12	MODULE, FOLDING MIRROR – REPLACE	1584800	—	—	0.3