

## SECTION 6

---

# APPEARANCE

---

1. INSPECT CONDITION AND PERFORM DETAIL OPERATION
2. CHECK FOR PROPER ASSEMBLY, FIT AND RETENTION OF PARTS AND COMPONENTS
3. EXTERIOR FINISH
4. INTERIOR TRIM AND CARPETS PROTECTIVE COVERINGS
5. SPARE WHEEL, JACK AND VEHICLE TOOLS
6. BATTERY


## 1. INSPECT CONDITION AND PERFORM DETAIL OPERATION

- Remove exterior protective shipping material(s), and check that protective shipping material should be completely removed. The removal operation should be performed as the attached directions.
- Wash vehicle  
Check the washing condition of vehicle.  
If required, perform the following steps to insure exterior washing.
  - Rinse the loose dirt from the vehicle with a fine spray or water.
  - Wash the vehicle using a sponge and water mixed with a mild detergent.
  - Rinse the soap with a fine spray of water.
  - Rinse the vehicle completely with water.
  - Wipe the vehicle dry from top to bottom using a clean chamois or soft, absorbent towel.

## 2. CHECK FOR PROPER ASSEMBLY, FIT AND RETENTION OF PARTS AND COMPONENTS

Check for proper assembly, fit and retention of following parts and component.

- Bumpers
- Moldings
- Grille
- Sill plates
- Emblems
- Mud guard
- Roof rack(option)

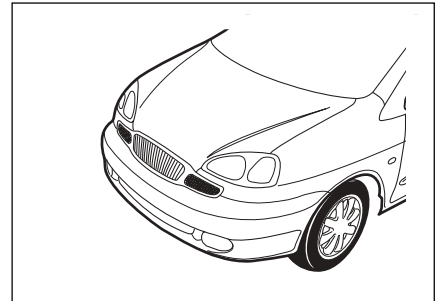

## 3. EXTERIOR FINISH

Check exterior and perform the remedial actions if defects are found, and then finish work is required as follows.

- Detail clean up – remove over spray, cement, weatherstrip sealer, etc.
- Touch up – chipped paint (brush or aerosol spray)
- Hand polish – minor paint imperfections by wet sanding with 600-grit paper or hand compounding.


## 4. INTERIOR TRIM AND CARPETS PROTECTIVE COVERINGS

Inspect the followings clean, as required.

- Instrument panel and sun visor.
- Kick pads, seats and carpet.
- Door trim panels, consoles and headliner.
- Interior moldings and hard trim for fit, over spray, polish, sealer and adhesive clean as required.
- Trunk trim.

## 5. SPARE WHEEL, JACK AND VEHICLE TOOLS

Check for the spare wheel, jack and vehicle tools which are accommodated in the luggage/load compartment. The spare wheel is retained by a bolt under a floor cover. The jack and vehicle tools are located at the very rear of spare wheel compartment.

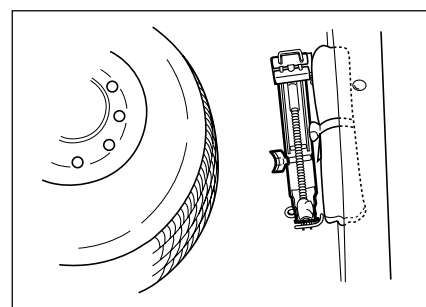

| DESCRIPTION        |
|--------------------|
| Spare wheel        |
| Bag - Tool         |
| Wrench - Wheel nut |
| Tool - Spanner     |
| Jack               |
| Jack Lever         |
| Tool - Driver      |

## 6. BATTERY

Check the battery condition through the hydrometer(test indicator) in the top of the battery.

| GREEN DOT                                                                           | 'BLACK' DARK                                                                        | TRANSPARENCY                                                                        |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |
| normal                                                                              | discharged<br>→charging                                                             | If the engine is not started, replace the battery and check the charging system     |

BUILT-IN HYDROMETER

