




Fastener Tightening Specifications

Application	Specification	
	Metric	English
Instrument Panel Cluster Assembly Screws	3 N·m	27 lb in
Drivers Information Display Switch Screws	2 N·m	18 lb in


Instrument Cluster Schematics

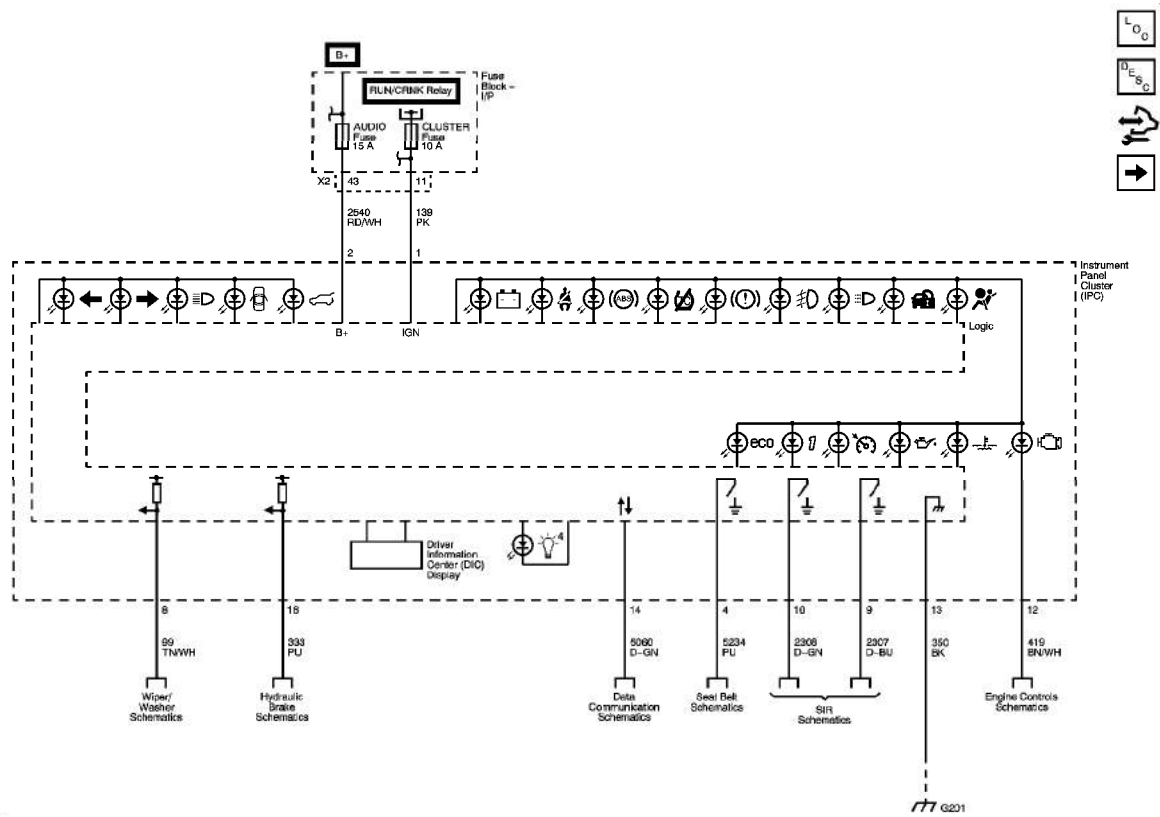

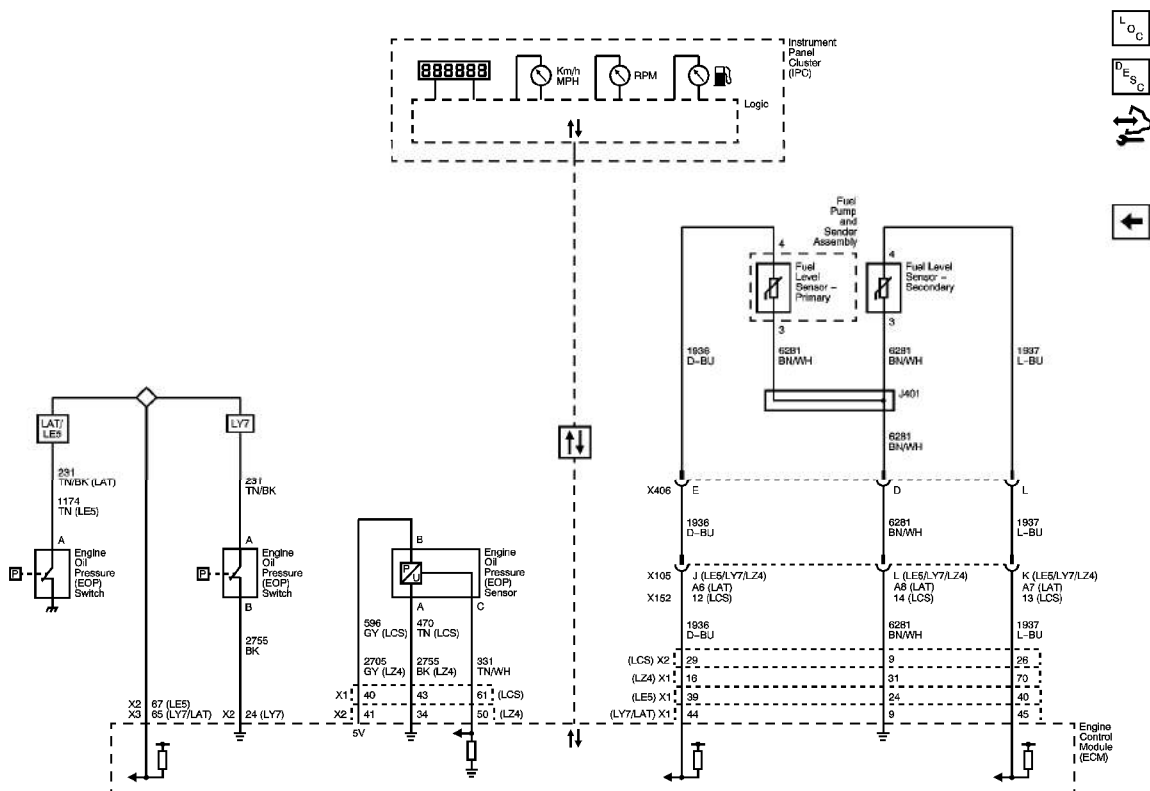


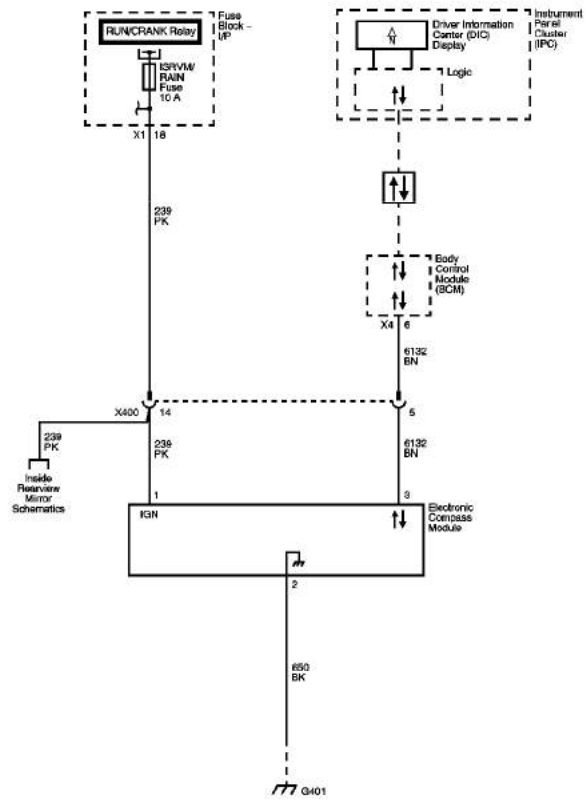


Driver Information Center (DIC) Switch

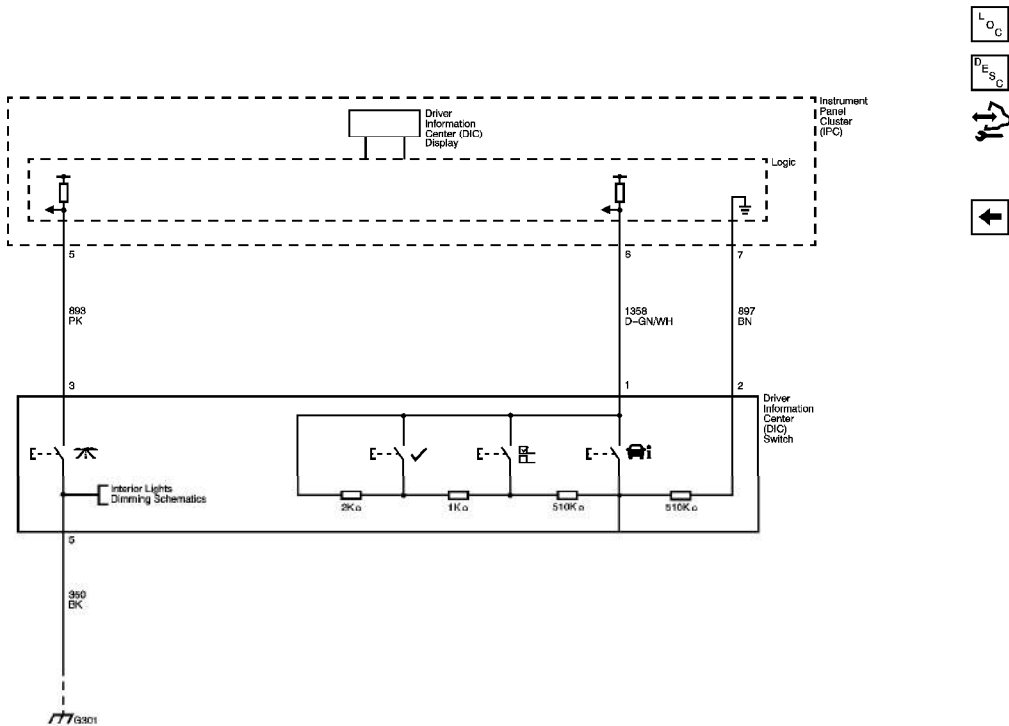


Audible Warnings Schematics

 Audible Warnings Schematics

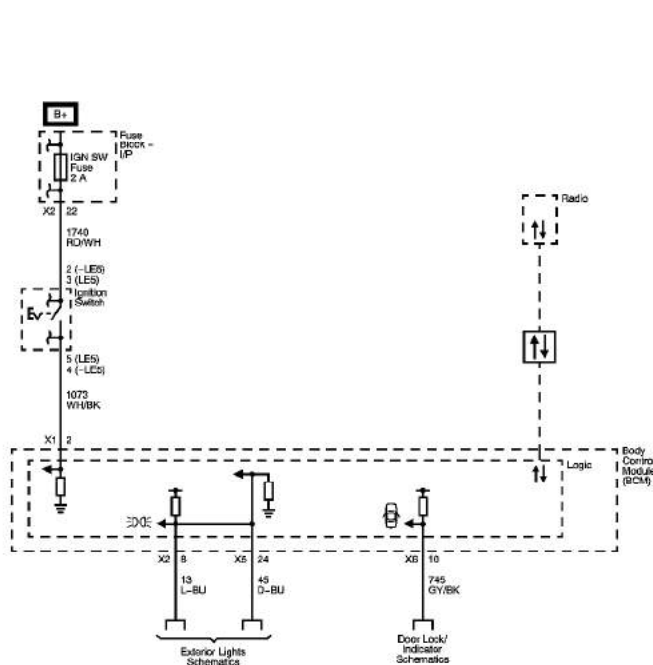


Electronic Compass Module Replacement

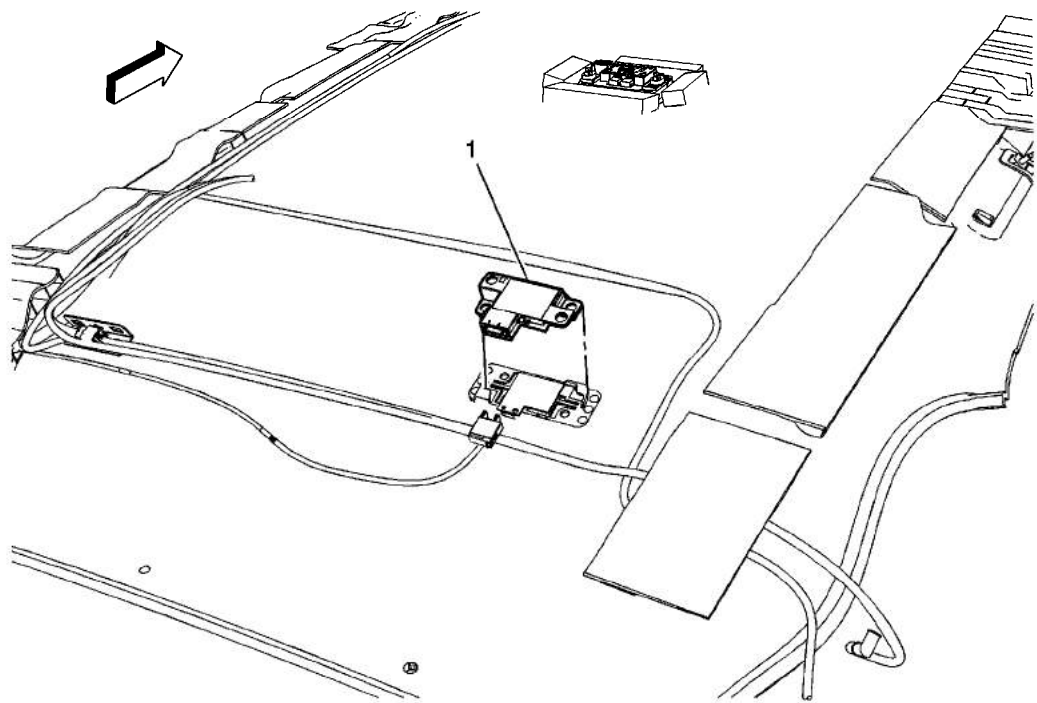


Callout	Component Name
Preliminary Procedure	
Lower the Headlining Trim Panel. Refer to Headlining Trim Panel Replacement .	
1	Electronic Compass Module Procedure 1. Disconnect the electrical connectors. 2. For programming and set up information, refer to Control Module References. 3. Unsnap the electronic compass module from the bracket.

Driver Information Display Switch Replacement

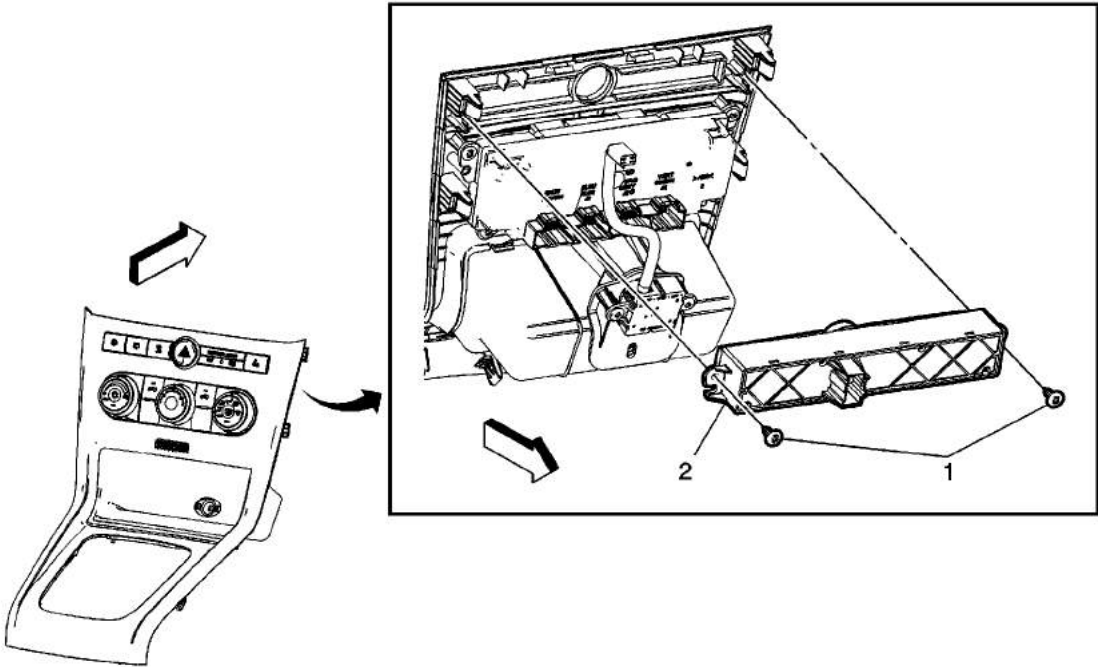

Callout	Component Name
Preliminary Procedure	
Remove the front floor console trim plate. Refer to Front Floor Console Accessory Trim Plate Replacement .	
1	Driver Information Display Switch Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Driver Information Display Assembly

Instrument Cluster Replacement

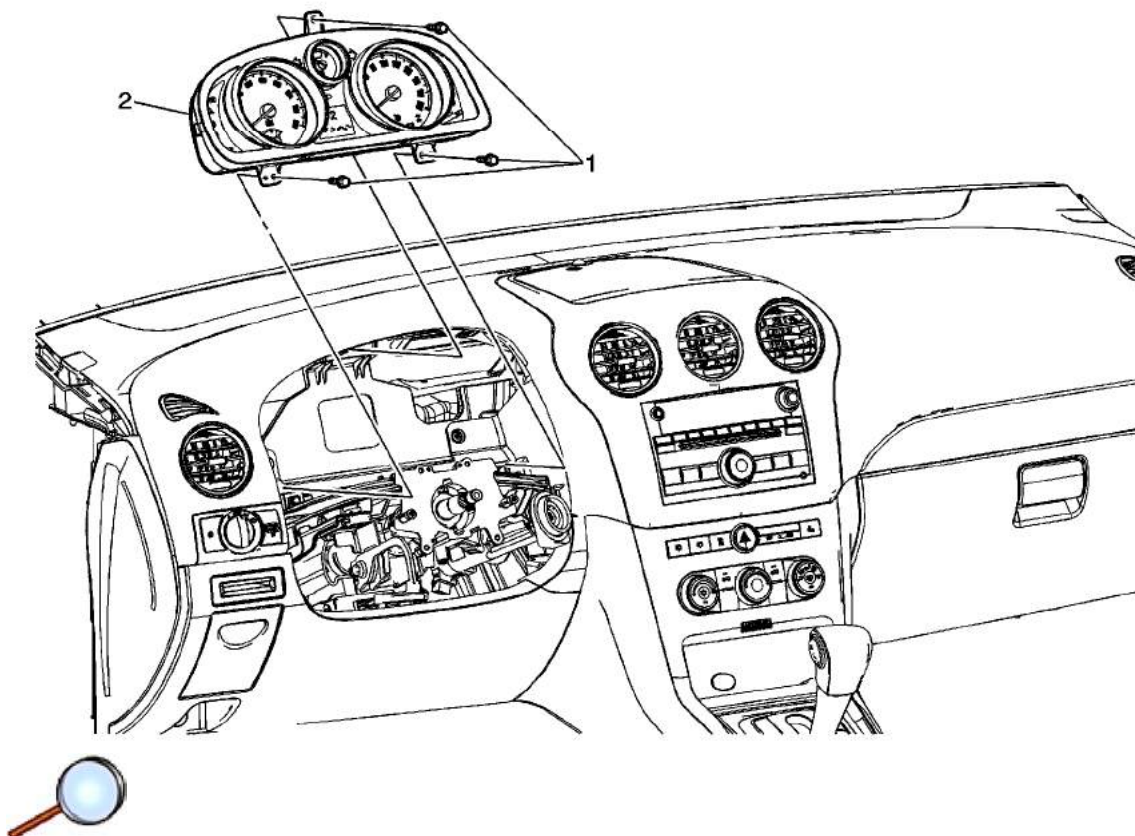

Callout	Component Name
Preliminary Procedure	
Remove the upper steering column trim cover assembly. Refer to Steering Column Upper Trim Cover Replacement .	
1	Instrument Panel Cluster Screw (Qty: 3) Caution: Refer to Fastener Caution in the Preface section. Tighten 3 N·m (27 lb in)
2	Instrument Panel Cluster Assembly Procedure 1. Disconnect the electrical connections. 2. When replacing the cluster assembly, refer to Control Module References for programing and setup information.