


Fastener Tightening Specifications


Application	Specification	
	Metric	English
Front Floor Console Armrest Screws	2 N·m	18 lb in
Front Floor Console Armrest Hinge Screws	2 N·m	18 lb in
Front Floor Console Armrest Inner Screws	2 N·m	18 lb in
Front Floor Console Bolts/Screws	7 N·m	62 lb in
Front Floor Console Bracket Bolts	10 N·m	89 lb in
Front Floor Console Cupholder Screws	2 N·m	18 lb in
Front Floor Console Front Trim Plate Screws	2 N·m	18 lb in
Instrument Panel Carrier to Body Bolts	25 N·m	18 lb ft
Instrument Panel Carrier to HVAC Module Bolts	4 N·m	35 lb in
Instrument Panel Center Support Bracket Bolts	10 N·m	89 lb in
Instrument Panel Compartment Dampener Screws	2 N·m	18 lb in
Instrument Panel Compartment Inner Panel Screws	2 N·m	18 lb in
Instrument Panel Compartment Latch Screws	2 N·m	18 lb in
Instrument Panel Lower Trim Panel Bolts/Screws	2 N·m	18 lb in
Instrument Panel Trim Plate Screws	2 N·m	18 lb in
Instrument Panel Upper Trim Pad Bolts/Screws	2 N·m	18 lb in
Knee Bolster Bracket to Carrier Bolts	10 N·m	89 lb in
Knee Bolster Bracket to HVAC Module Bolts	4 N·m	35 lb in
Knee Bolster Reinforcement Bolts	2 N·m	18 lb in

Instrument Panel Insulator Panel Replacement - Right Side

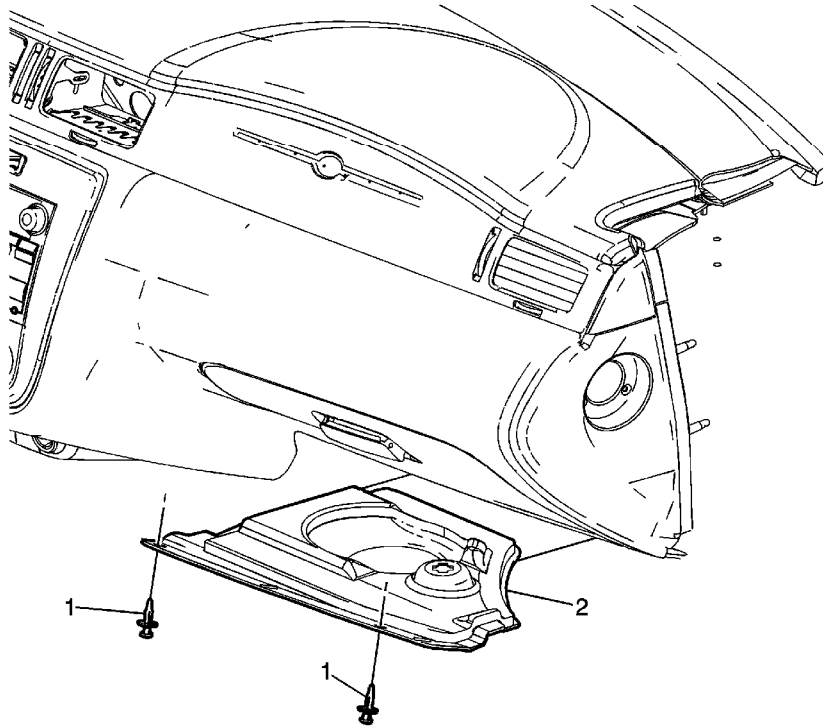


Callout	Component Name
1	Push Pin Retainer (Qty: 2)
2	Instrument Panel Closeout/Insulator Panel Tip Remove the courtesy lamp, if equipped.

Instrument Panel Insulator Panel Replacement - Left Side

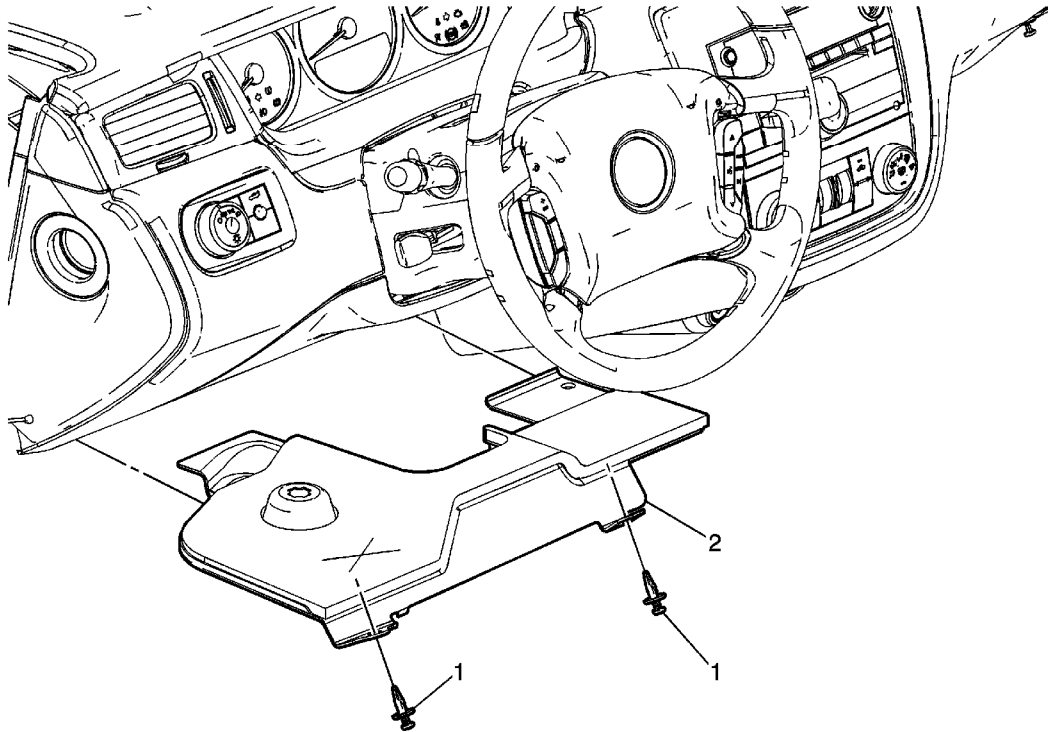


Callout	Component Name
1	Push Pin Retainer (Qty: 2)
2	Instrument Panel Closeout/Insulator Panel Tip Remove the courtesy lamp, if equipped.

Steering Column Opening Filler Replacement

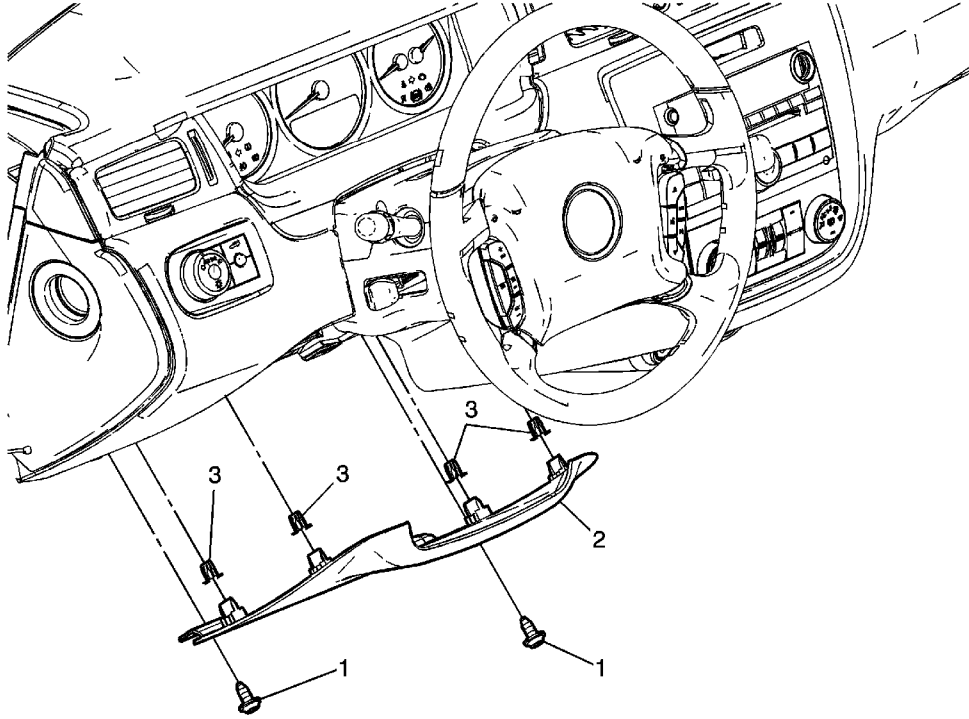


Callout	Component Name
1	Steering Column Filler Panel Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Steering Column Filler Panel Assembly
3	Retainer Clip (Qty: 4)

Instrument Panel Lower Center Trim Replacement

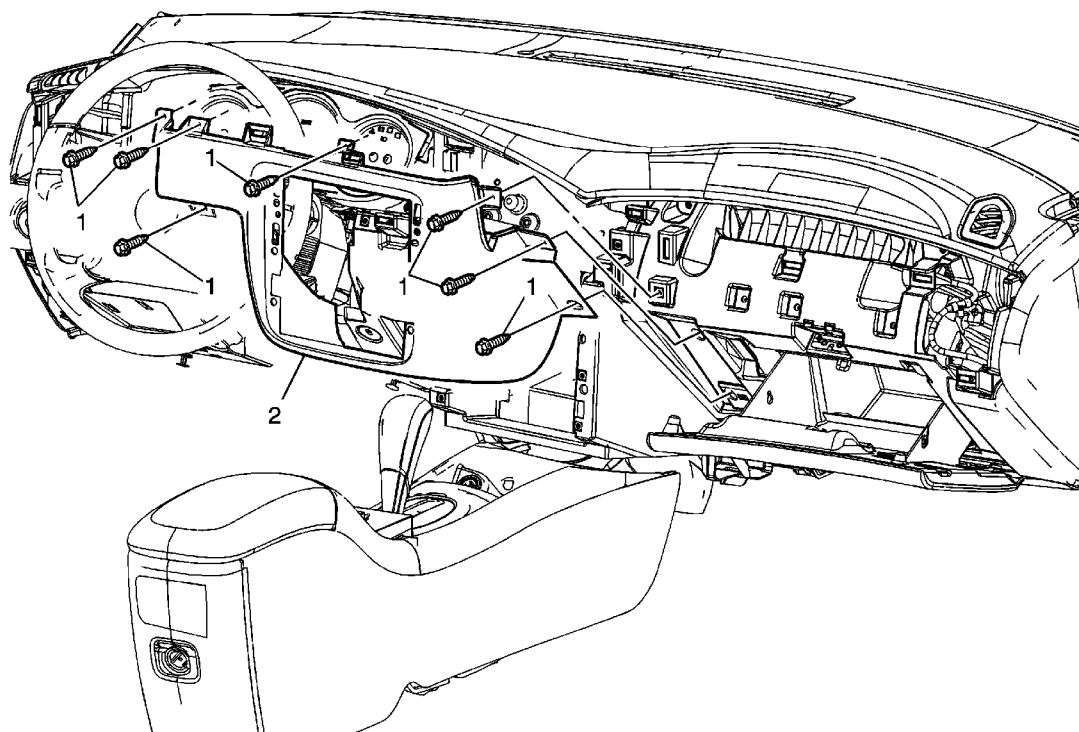


Callout	Component Name
Preliminary Procedures 1. Remove the instrument panel trim plate. Refer to Instrument Panel Trim Plate Replacement. 2. Remove the radio. Refer to Radio Replacement. 3. Remove the HVAC control module. Refer to Heater and Air Conditioning Control Replacement.	
1	Instrument Panel Center Lower Trim Panel Screw (Qty: 7) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Instrument Panel Center Lower Trim Panel

Instrument Panel Extension Trim Plate Replacement

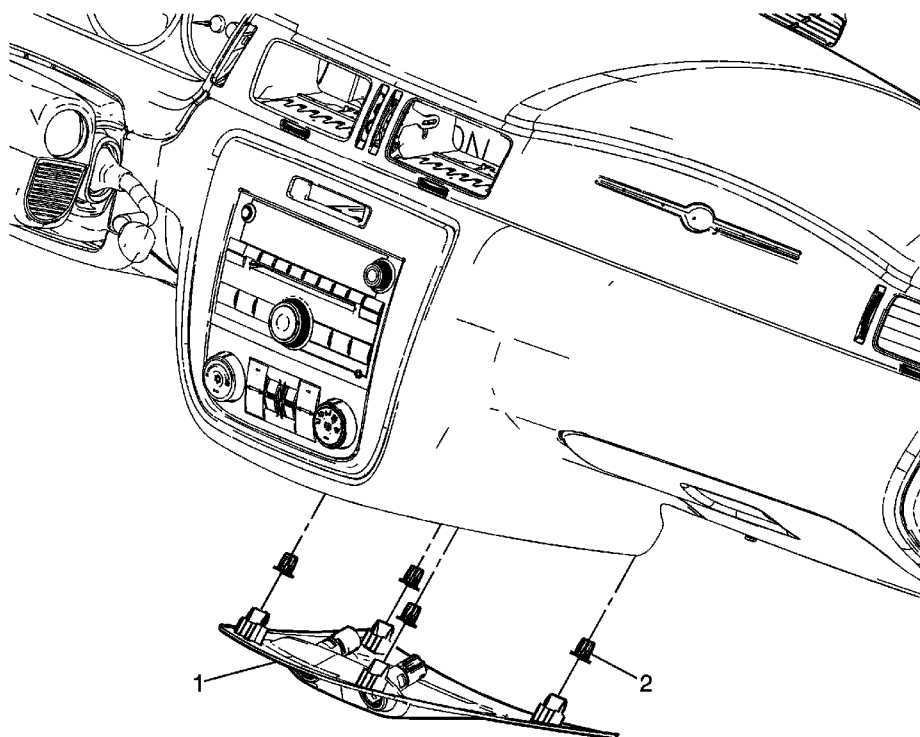


Callout	Component Name
1	Instrument Panel Extension Panel Assembly Tip 1. Disconnect electrical connectors. 2. Remove the 12-volt accessory power receptacles. Refer to Cigar Lighter Receptacle or 12-Volt Accessory Power Receptacle Replacement .
2	Retainer Clips (Qty 4)

Passenger Knee Bolster Bracket Replacement

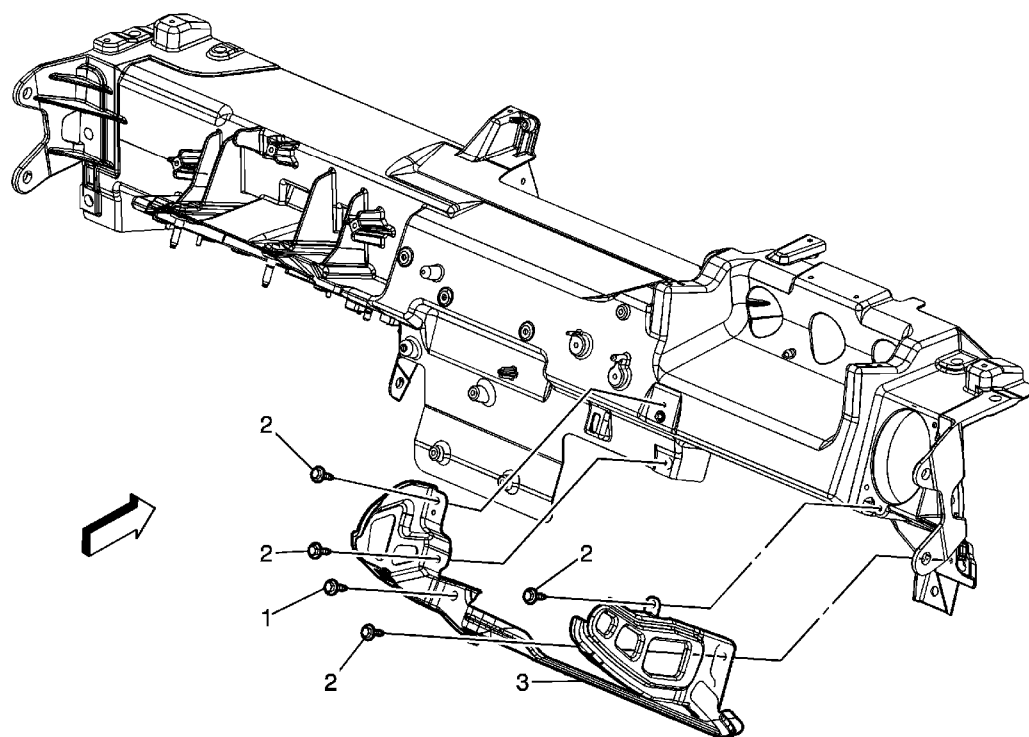


Callout	Component Name
Preliminary Procedure	
Remove the instrument panel lower trim panel. Refer to Instrument Panel Lower Trim Panel Replacement .	
1	Passenger Knee Bolster Bracket to HVAC Module Bolt Caution: Refer to Fastener Caution in the Preface section. Tighten 4 N·m (35 lb in)
2	Passenger Knee Bolster Bracket Bolt (Qty: 4) Tighten 10 N·m (89 lb in)
3	Passenger Knee Bolster Bracket Assembly

Driver Knee Bolster Bracket Replacement

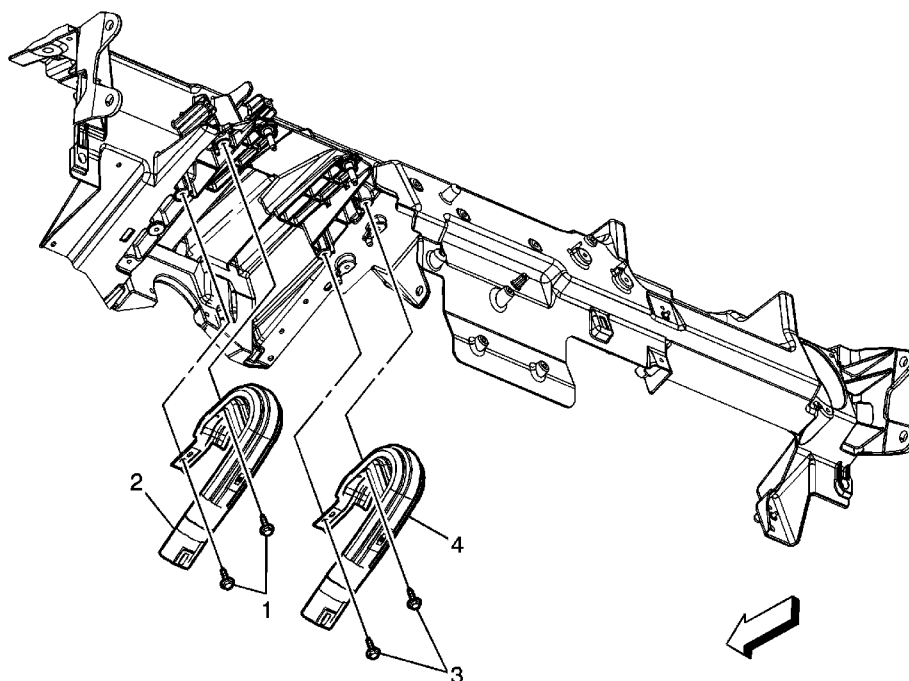


Callout	Component Name
Preliminary Procedure	
Remove the instrument panel lower trim panel. Refer to Instrument Panel Lower Trim Panel Replacement .	
1	Driver Knee Bolster Bracket Bolt (Qty 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in)
2	Driver Knee Bolster - Left Bracket Assembly
3	Driver Knee Bolster Bracket Bolt (Qty 2) Tighten 10 N·m (89 lb in)
4	Driver Knee Bolster - Right Bracket Assembly

Driver Knee Bolster Reinforcement Replacement

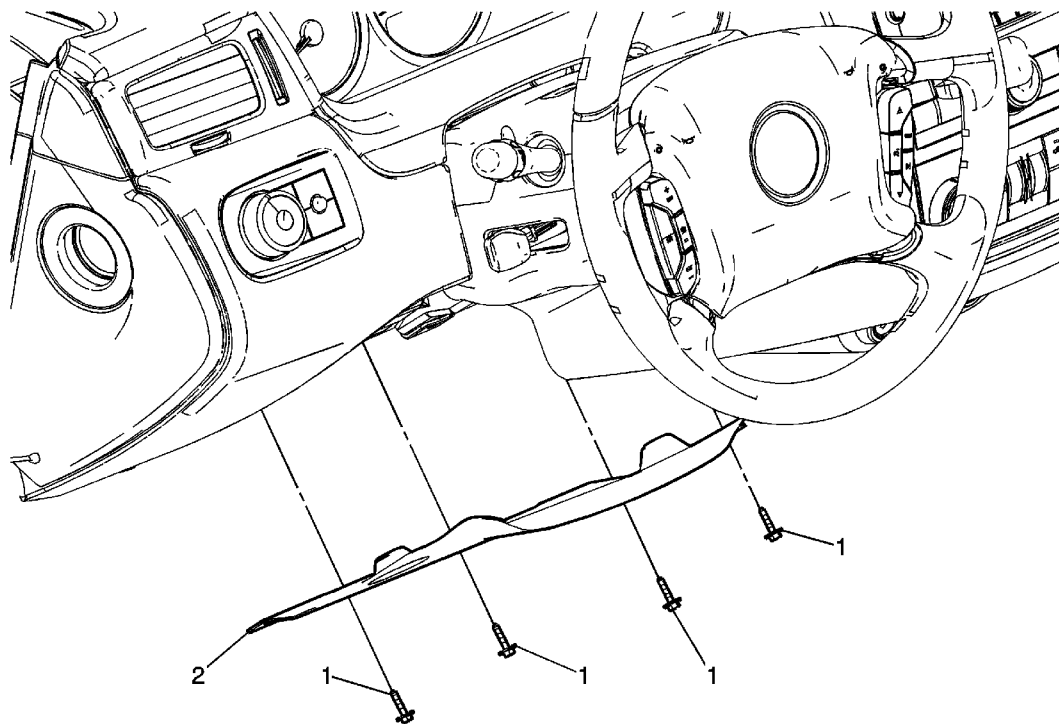

Callout	Component Name
Preliminary Procedure	
Remove the steering column filler panel. Refer to Steering Column Opening Filler Replacement .	
1	Knee Bolster Reinforcement Bolt (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Instrument Panel Drivers Knee Bolster Reinforcement

Instrument Panel Trim Plate Replacement

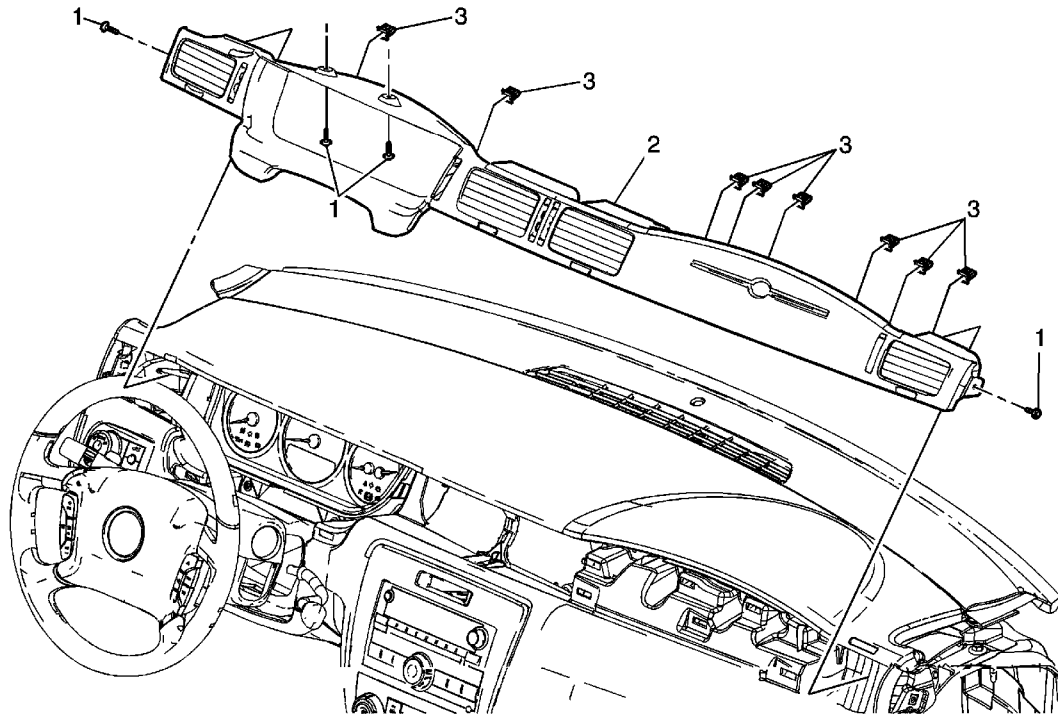


Callout	Component Name
Preliminary Procedure	
Remove the instrument panel (I/P) outer trim covers. Refer to Instrument Panel Outer Trim Cover Replacement - Left Side and Instrument Panel Outer Trim Cover Replacement - Right Side .	
1	Instrument Panel Trim Plate Screw (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Instrument Panel Trim Plate Assembly Procedure 1. Disconnect the electrical connector. 2. Tilt the steering column to the lowest position. 3. Remove the driver information center switch. Refer to Driver Information Display Switch Replacement.

© 2010 General Motors Corporation. All rights reserved.

3


Retainer Clip (Qty: 8)

Instrument Panel Lower Trim Plate Replacement

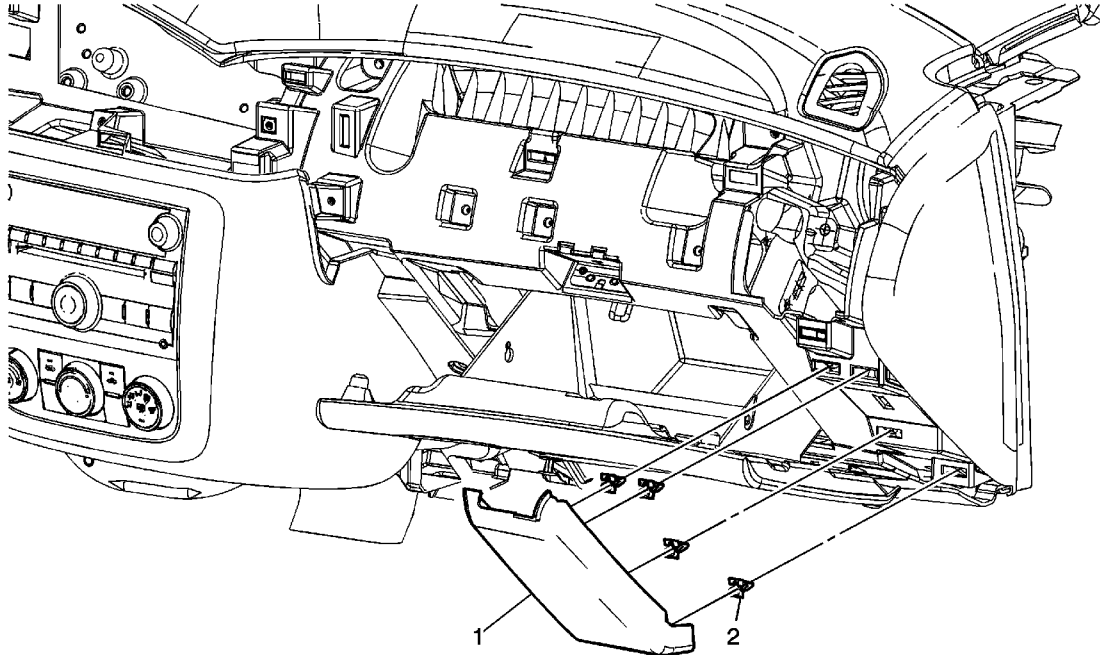


Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
Preliminary Procedure	
Remove the instrument panel trim plate. Refer to Instrument Panel Trim Plate Replacement .	
1	Instrument Panel Lower Trim Plate
2	Retainer Clips (Qty: 4)

Instrument Panel Accessory Trim Plate Replacement

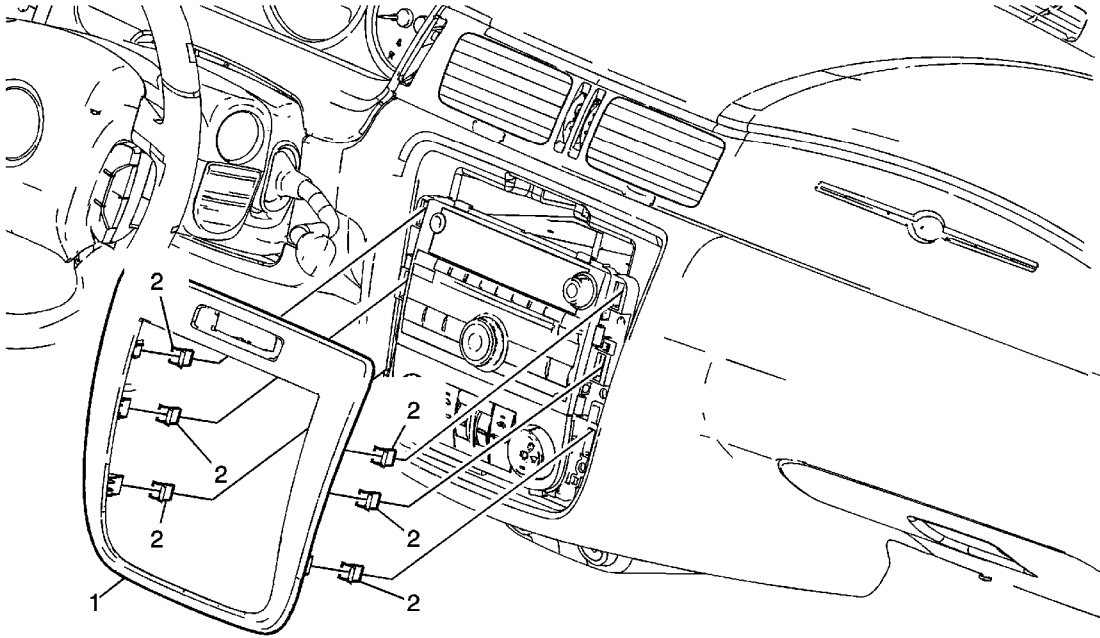


Callout	Component Name
1	Instrument Panel Accessory Plate Assembly Procedure 1. Disconnect electrical connectors. 2. Remove the inflatable restraint indicator. Refer to Inflatable Restraint Instrument Panel Module Indicator Replacement .
2	Retainer Clip (Qty 6)

Instrument Panel Upper Trim Panel Replacement

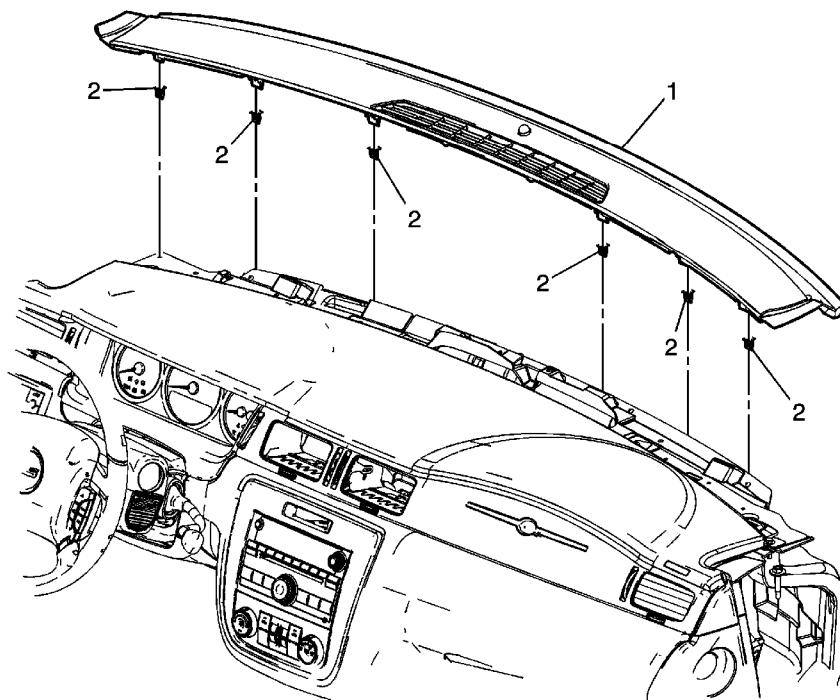


Callout	Component Name
Preliminary Procedure	
Remove the windshield garnish moldings. Refer to Windshield Pillar Garnish Molding Replacement .	
1	Instrument Panel Upper Trim Panel Assembly Procedure 1. Disconnect electrical connectors. 2. Remove the ambient light sensor.
2	Retainer Clip (Qty: 6)

Instrument Panel Outer Trim Cover Replacement - Right Side

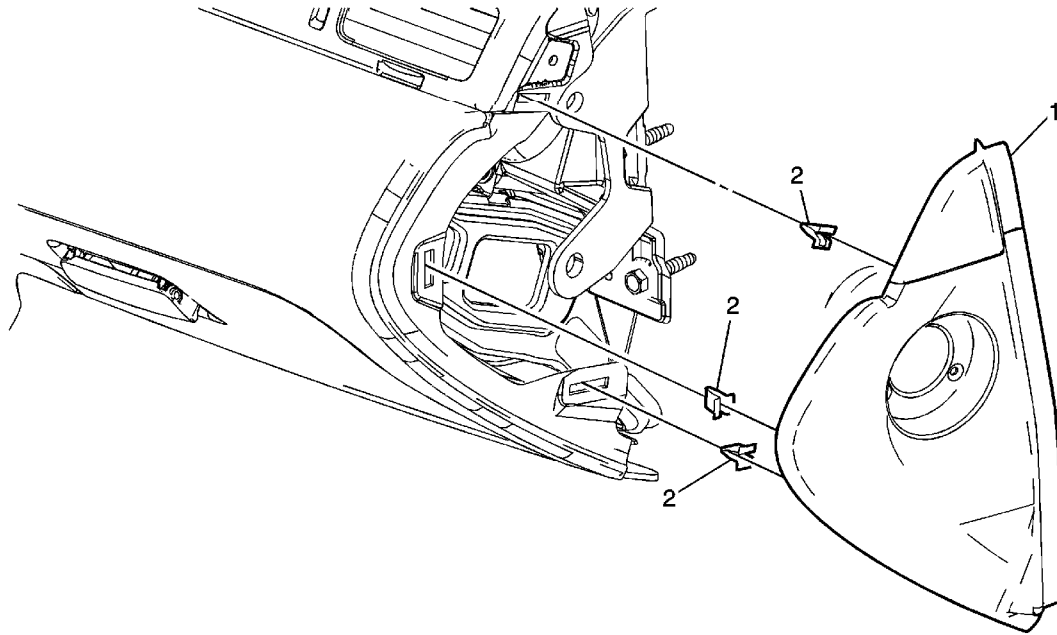


Callout	Component Name
1	Instrument Panel Outer Trim Cover
2	Retainer Clip (Qty: 3)

Instrument Panel Outer Trim Cover Replacement - Left Side

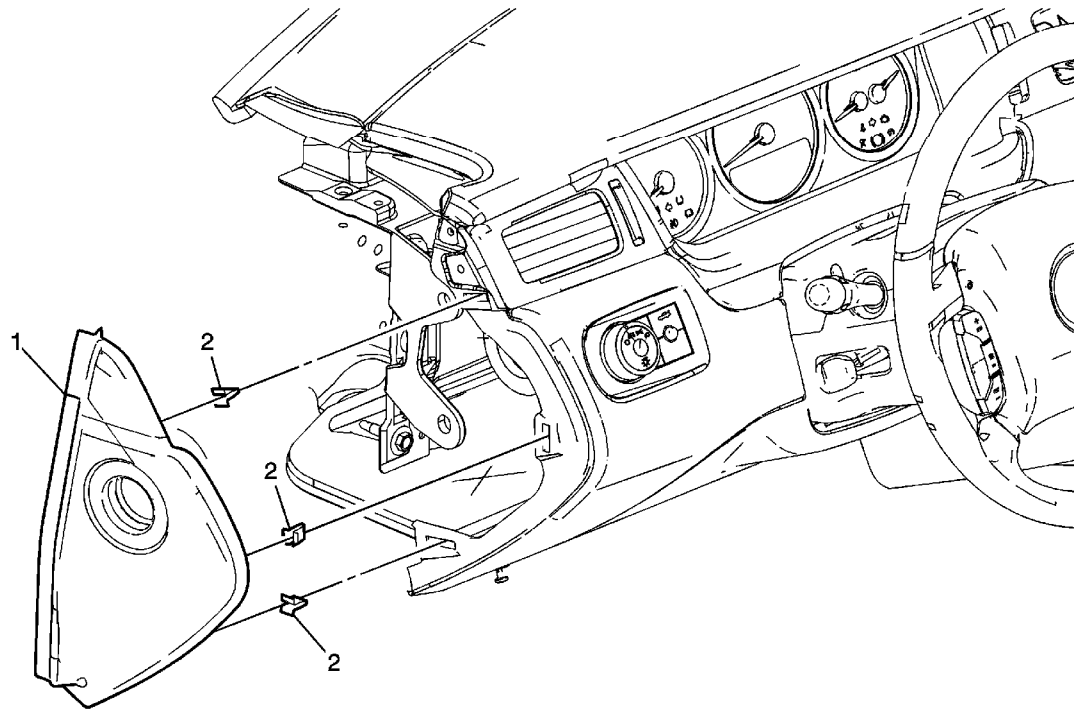

Callout	Component Name
1	Instrument Panel Outer Trim Cover
2	Retainer Clip (Qty: 3)

Instrument Panel Lower Trim Panel Replacement

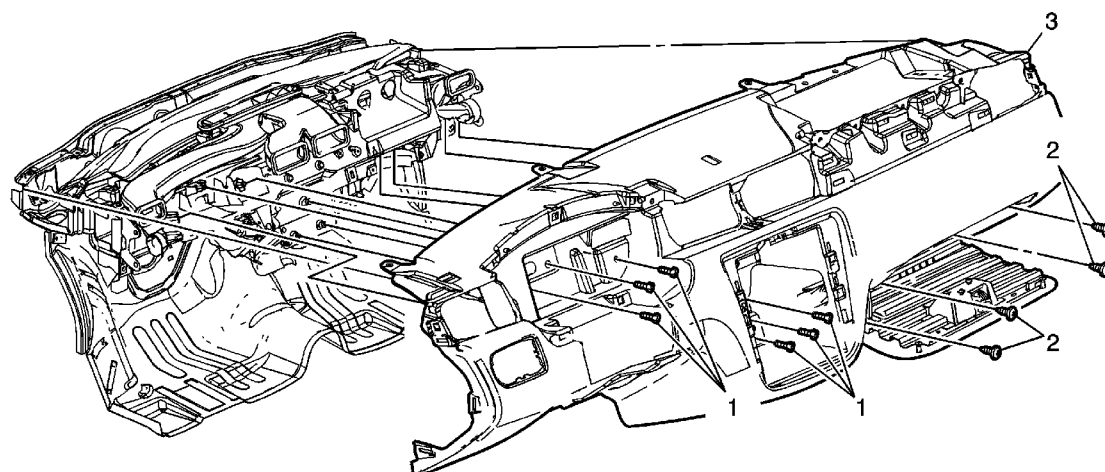


Callout	Component Name
Preliminary Procedure	
1. Remove the instrument panel (I/P) upper trim pad. Refer to Instrument Panel Upper Trim Pad Replacement. 2. Remove the I/P cluster assembly. Refer to Instrument Cluster Replacement. 3. Remove the headlamp switch assembly. Refer to Headlamp Switch Replacement. 4. Remove the right and left insulator panels. Refer to Instrument Panel Insulator Panel Replacement - Right Side and Instrument Panel Insulator Panel Replacement - Left Side. 5. Remove the I/P inflatable restraint. Refer to Inflatable Restraint Instrument Panel Module Replacement. 6. Remove the drivers knee bolster reinforcement. Refer to Driver Knee Bolster Reinforcement Replacement. 7. Remove the steering column. Refer to Steering Column Replacement. 8. Remove the radio. Refer to Radio Replacement. 9. Remove the HVAC control module. Refer to Heater and Air Conditioning Control Replacement.	
1	Instrument Panel Lower Trim Panel Bolt (Qty 6) Caution: Refer to Fastener Caution in the Preface section.

© 2010 General Motors Corporation. All rights reserved.


	Tighten 10 N·m (88 lb in)
2	Instrument Panel Lower Trim Panel Screw (Qty 4) Tighten 2 N·m (18 lb in)
3	Instrument Panel Lower Trim Panel Assembly Procedure 1. Note routing of the wiring harness prior to removal to aid in the reinstallation. 2. Disconnect all electrical connections to the trim panel.

Instrument Panel Compartment Door Lock Striker Replacement

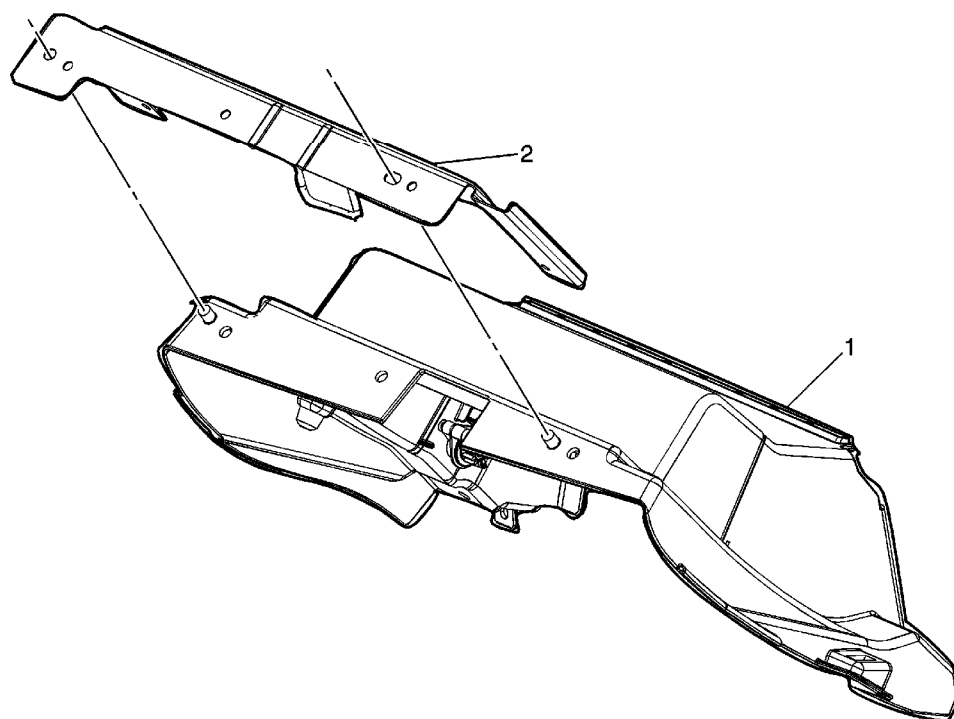


Callout	Component Name
1	Instrument Panel Compartment Inner Panel Assembly Refer to Instrument Panel Compartment Inner Panel Replacement .
2	Instrument Panel Compartment Striker Assembly

Instrument Panel Compartment Door Replacement

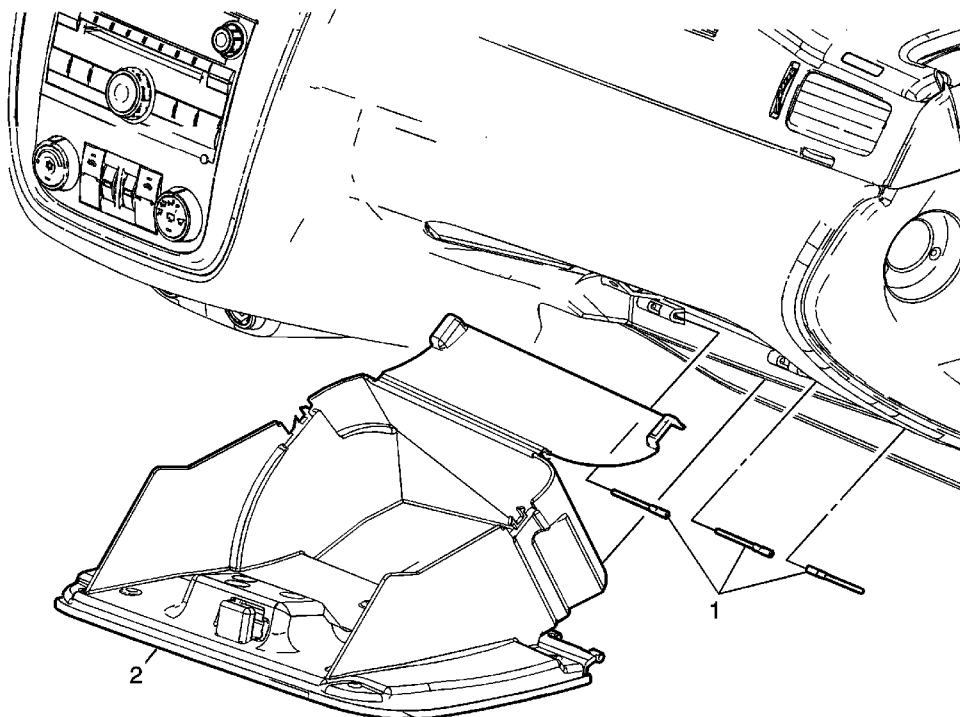


Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Pin, Compartment Door Hinge (Qty 3) Tip Use a small pointed tool in order to drive the pins out of the hinge.
2	Door Assembly, Instrument Panel Compartment Tip 1. Squeeze the compartment bin enough to pull the door and bin assembly out the opening past the stops and the dampener. 2. Remove the compartment Latch Assembly. Refer to Instrument Panel Compartment Door Latch Replacement.

Instrument Panel Compartment Door Latch Replacement

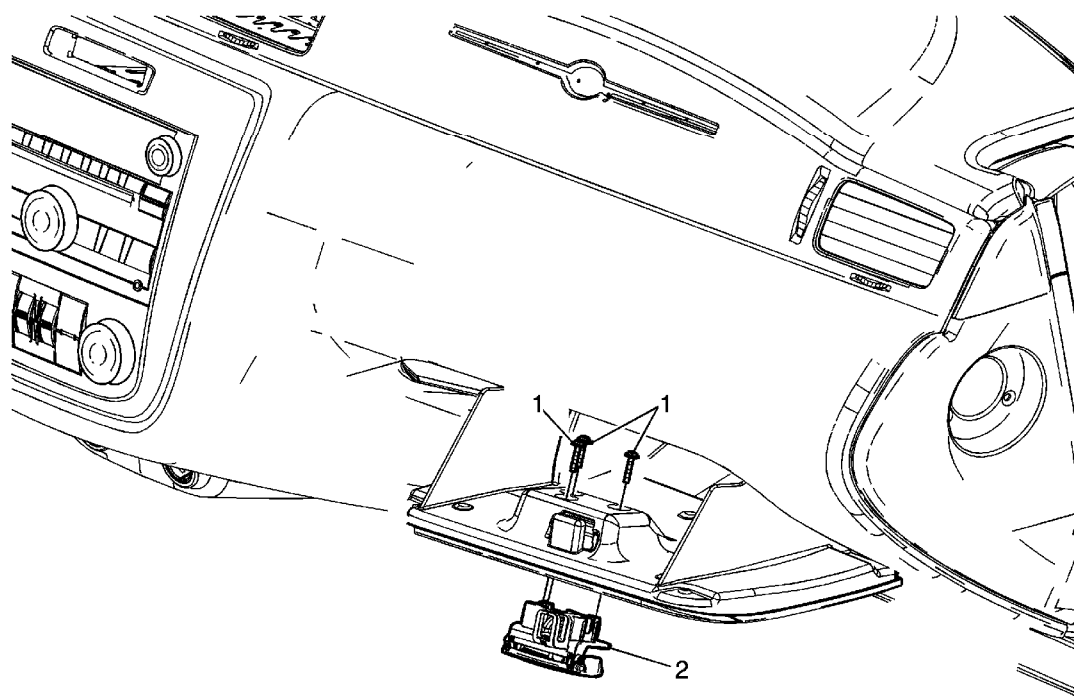


Callout	Component Name
1	Instrument Panel Compartment Latch Screw (Qty 3) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Instrument Panel Compartment Latch Assembly

Instrument Panel Compartment Door Dampener Replacement

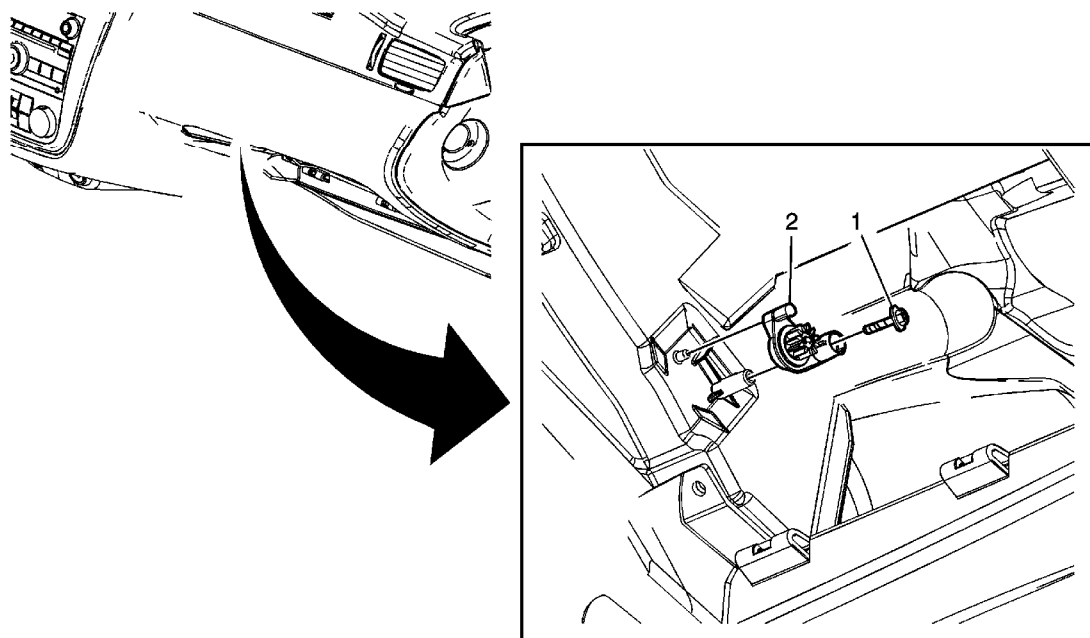

Callout	Component Name
Preliminary Procedure	
Remove the instrument panel compartment door assembly. Refer to Instrument Panel Compartment Door Replacement .	
1	Instrument Panel Compartment Striker Screw (Qty 1) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Instrument Panel Compartment Dampener Assembly

Instrument Panel Compartment Inner Panel Replacement

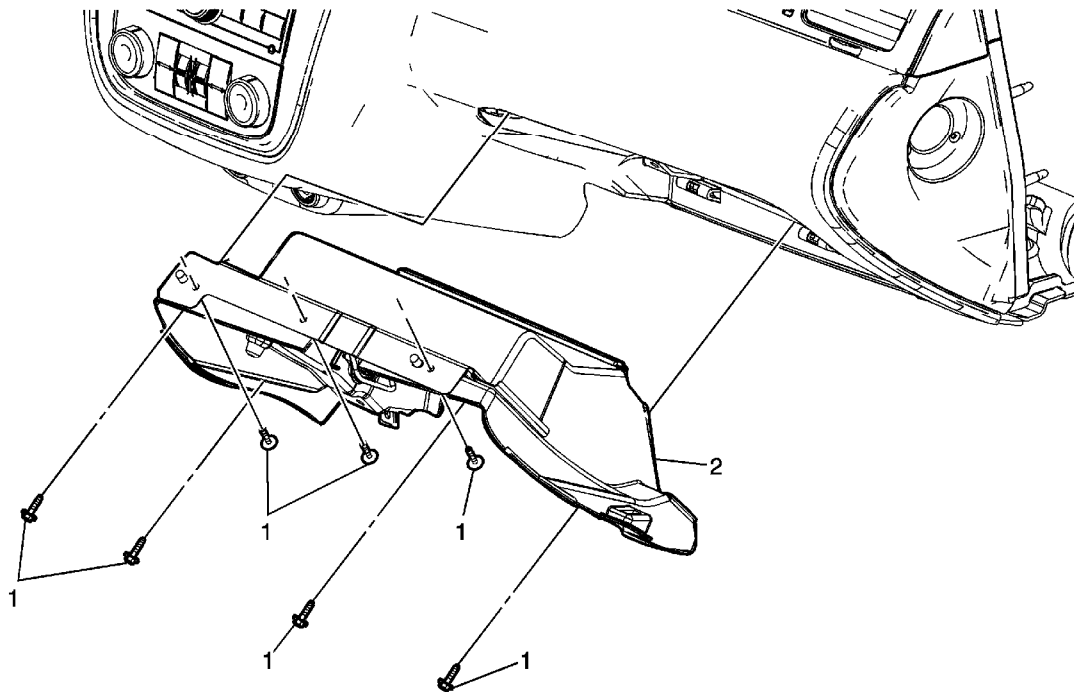

Callout	Component Name
Preliminary Procedures	
1. Remove the instrument panel compartment door assembly. Refer to Instrument Panel Compartment Door Replacement. 2. Remove the right side instrument panel closeout/insulator. Refer to Instrument Panel Insulator Panel Replacement - Right Side. 3. Remove the right side carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement. 4. Remove the instrument panel right hand outer trim cover. Refer to Instrument Panel Outer Trim Cover Replacement - Right Side. 5. Remove the instrument panel trim plate right outer screw. Refer to Instrument Panel Trim Plate Replacement.	
1	Instrument Panel Compartment Inner Panel Screw (Qty 7) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
© 2010 General Motors Corporation. All rights reserved.	


2

Instrument Panel Compartment Inner Panel Assembly

Tip

Flex the bottom right hand corner of the instrument panel in order to remove the instrument panel compartment inner panel assembly.

Instrument Panel Upper Trim Pad Replacement

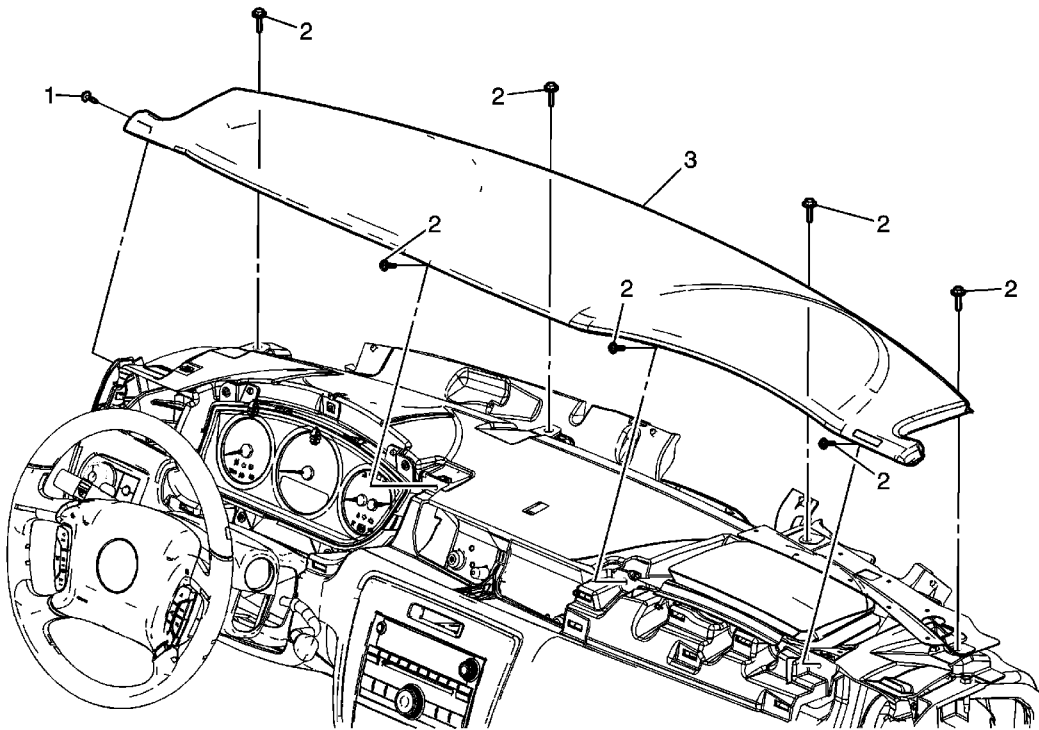


Callout	Component Name
Preliminary Procedure	
1. Remove the instrument panel (I/P) upper trim panel. Refer to Instrument Panel Upper Trim Panel Replacement .	
2. Remove the I/P trim plate. Refer to Instrument Panel Trim Plate Replacement .	
1	Instrument Panel Upper Trim Pad Screw Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Instrument Panel Upper Trim Pad Bolt (Qty: 7) Tighten 10 N·m (88 lb in)
3	Instrument Panel Upper Trim Pad Assembly Procedure

© 2010 General Motors Corporation. All rights reserved.


Disconnect the electrical connector.

Instrument Panel Center Support Bracket Replacement

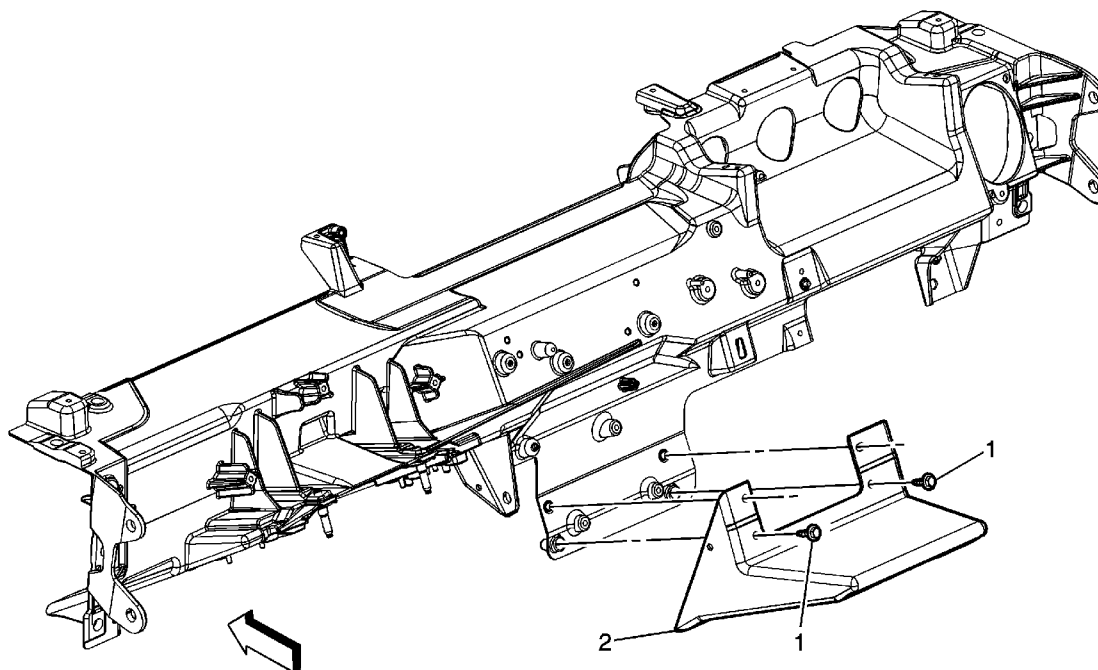

Callout	Component Name
Preliminary Procedure	
Remove the instrument panel lower trim panel. Refer to Instrument Panel Lower Trim Panel Replacement .	
1	Instrument Panel Center Support Bracket Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in)
2	Instrument Panel Center Support Bracket Assembly

Instrument Panel Carrier Replacement

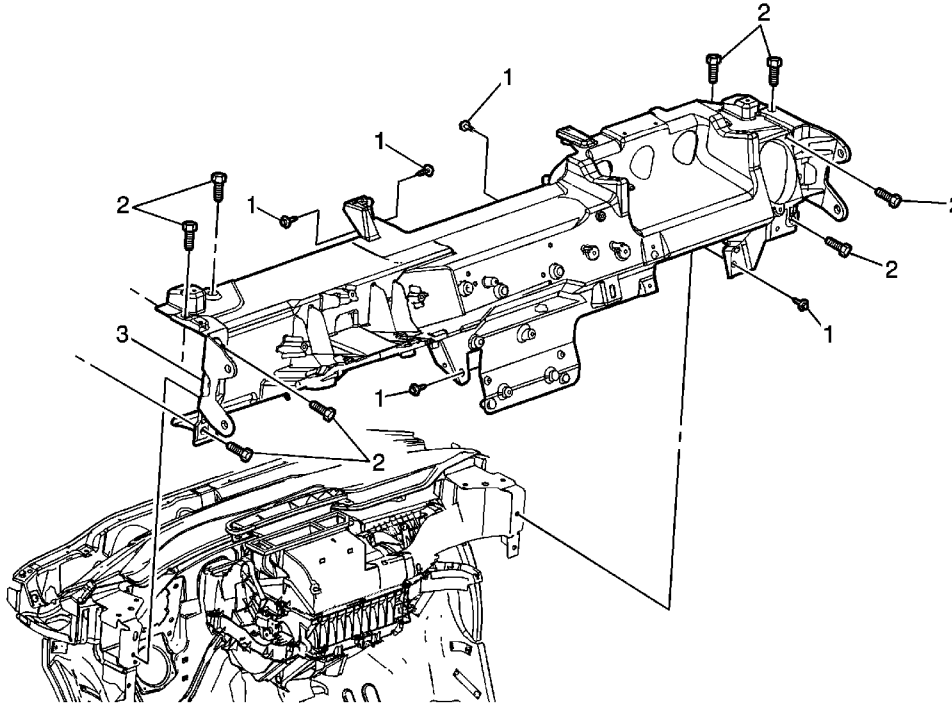


Callout	Component Name
Preliminary Procedure	
1. Remove the instrument panel lower trim panel. Refer to Instrument Panel Lower Trim Panel Replacement. 2. Remove the drivers knee bolster brackets. Refer to Driver Knee Bolster Bracket Replacement. 3. Remove the passenger knee bolster bracket. Refer to Passenger Knee Bolster Bracket Replacement. 4. Remove the brake pedal nut and bolt, and pedal bracket bolts. Refer to Brake Pedal Assembly Replacement. 5. Remove the instrument panel center support bracket. Refer to Instrument Panel Center Support Bracket Replacement. 6. Remove the air distributor duct assembly. Refer to Air Distributor Duct Replacement. 7. Remove the right air outlet duct assembly. Refer to Instrument Panel Outer Air Outlet Upper Duct Replacement - Right Side.	
1	Instrument Panel Carrier to HVAC Module Bolt (Qty: 5) Caution: Refer to Fastener Caution in the Preface section. Tighten

© 2010 General Motors Corporation. All rights reserved.


	4 N·m (35 lb in)
2	Instrument Panel Carrier to Body Bolt (Qty: 8) Tighten 25 N·m (18 lb ft)
3	Instrument Panel Carrier Assembly Tip 1. Note routing of the wiring harness to aid in the reinstallation. 2. With the aid of an assistant, remove the carrier from the vehicle. 3. Remove the defroster air outlet duct assembly. Refer to Defroster Air Outlet Duct Replacement.

Front Floor Console Compartment Door Hinge Replacement

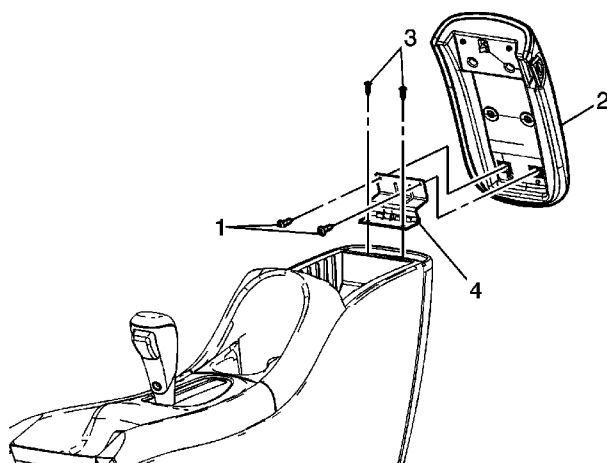


Callout	Component Name
1	Front Floor Console Door Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Front Floor Console Door Assembly
3	Front Floor Console Hinge Screw (Qty: 2) Tighten 2 N·m (18 lb in)
4	Front Floor Console Door Hinge

Front Floor Console Compartment Door Latch Replacement

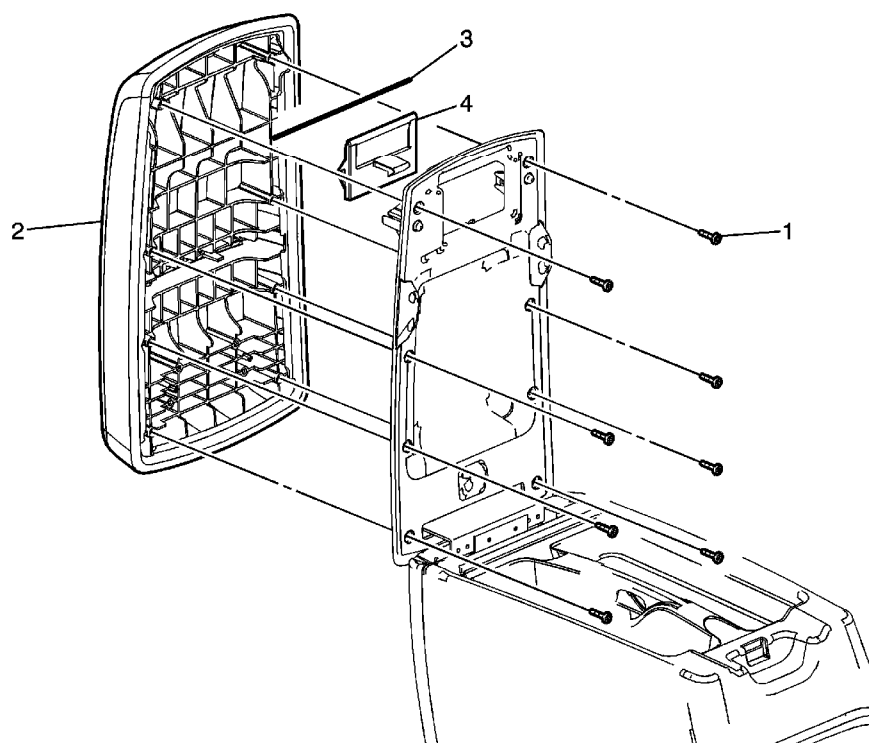


Callout	Component Name
1	Front Floor Console Armrest Inner Screw (Qty 8) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Front Floor Console Armrest Cover Assembly Procedure Separate the armrest cover assembly from the inner panel.
3	Front Floor Console Armrest Latch Spring
4	Front Floor Console Armrest Latch Assembly

Front Floor Upper Console Trim Plate Replacement

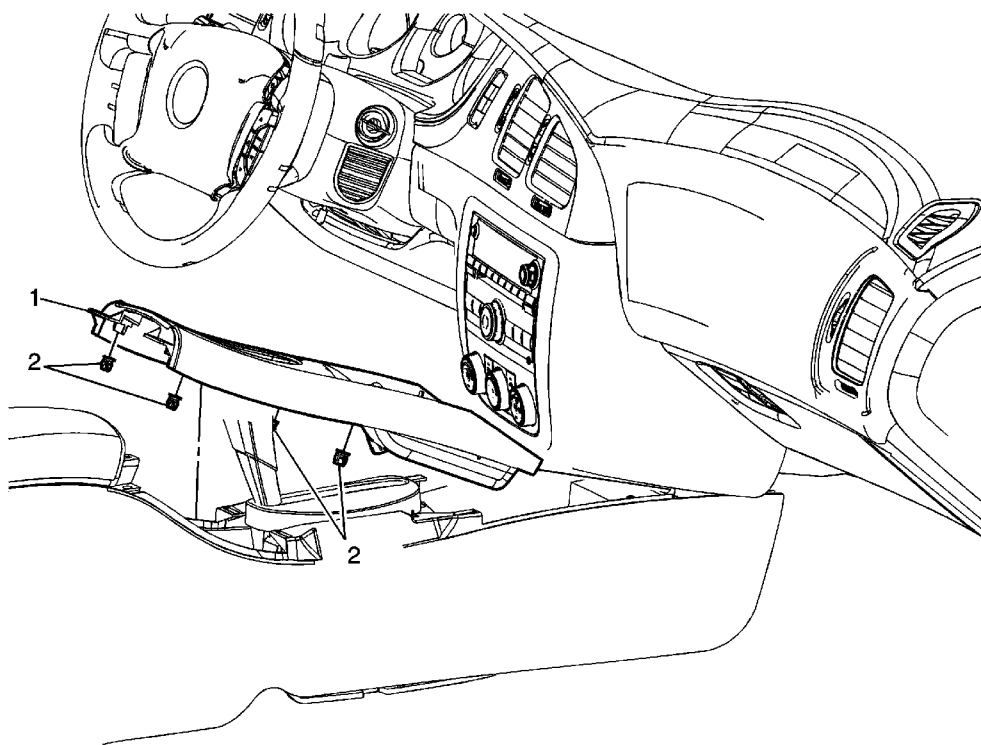


Callout	Component Name
Caution: To prevent component damage, DO NOT use metal tools to remove the trim.	
Preliminary Procedures	
1. Place the front floor shifter in the Neutral position. 2. Remove the front floor console cupholder assembly. Refer to Front Floor Console Cup Holder Replacement.	
Tip	
• For console removal and shift lock actuator access, use ONLY a plastic trim tool to lift the trim plate from the console. Do not use any tool between the trim plate and the shifter. • Apply the park brake and shift lever rearward. The sound deadener must be reinstalled if the wire harness is removed or replaced.	
1	Front Floor Console Trim Plate
2	Retainer Clip (Qty: 4)

Console Rear Trim Plate Replacement

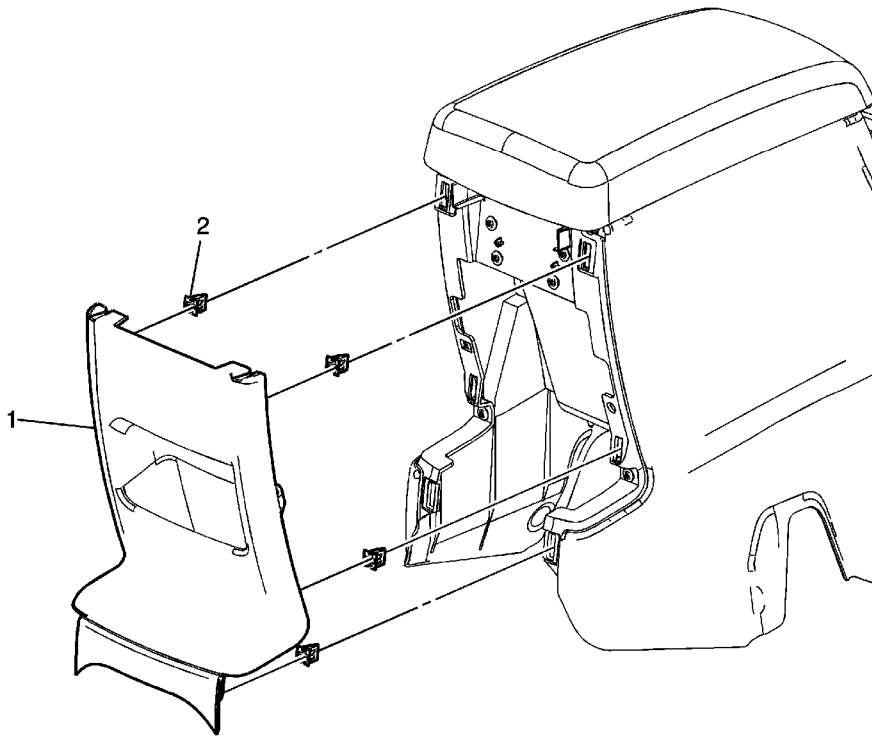


Callout	Component Name
1	Front Floor Console Plate Assembly
2	Retainer Clip (Qty 6)

Console Front Trim Plate Replacement

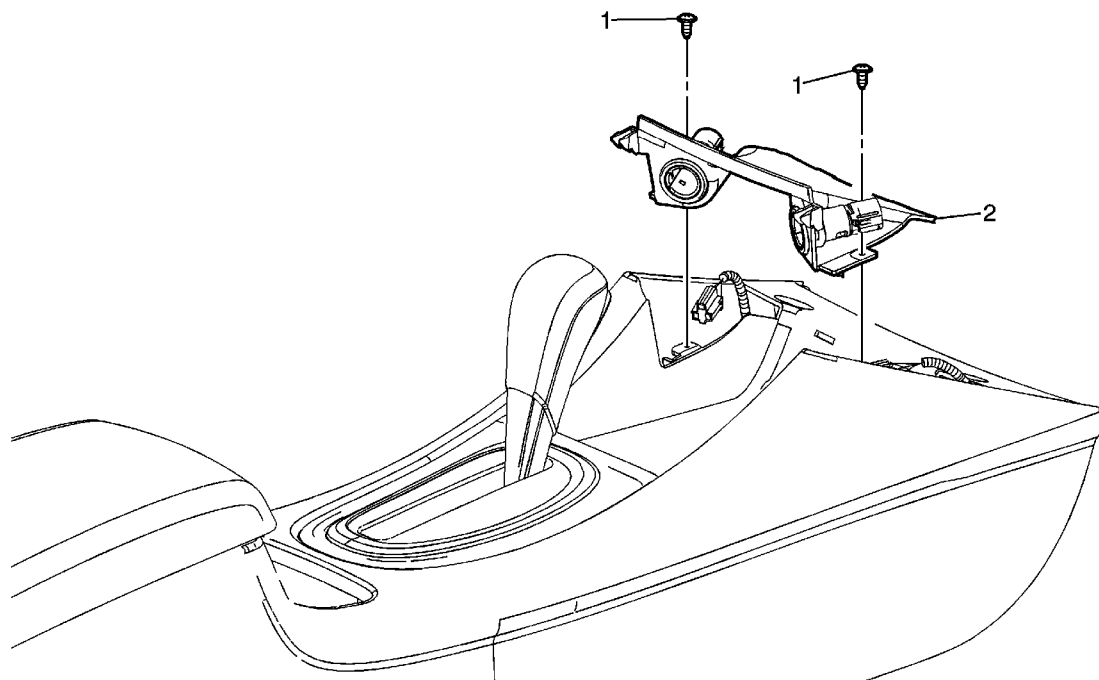


Callout	Component Name
Preliminary Procedure	
Remove the front floor console. Refer to Front Floor Console Replacement .	
1	Front Floor Console Trim Panel Screw (Qty 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Front Floor Console Trim Panel Assembly Tip 1. Disconnect electrical connectors. 2. Remove the 12 volt accessory power receptacles. Refer to Cigar Lighter Receptacle or 12-Volt Accessory Power Receptacle Replacement .

Console Shift Lever Bezel Replacement

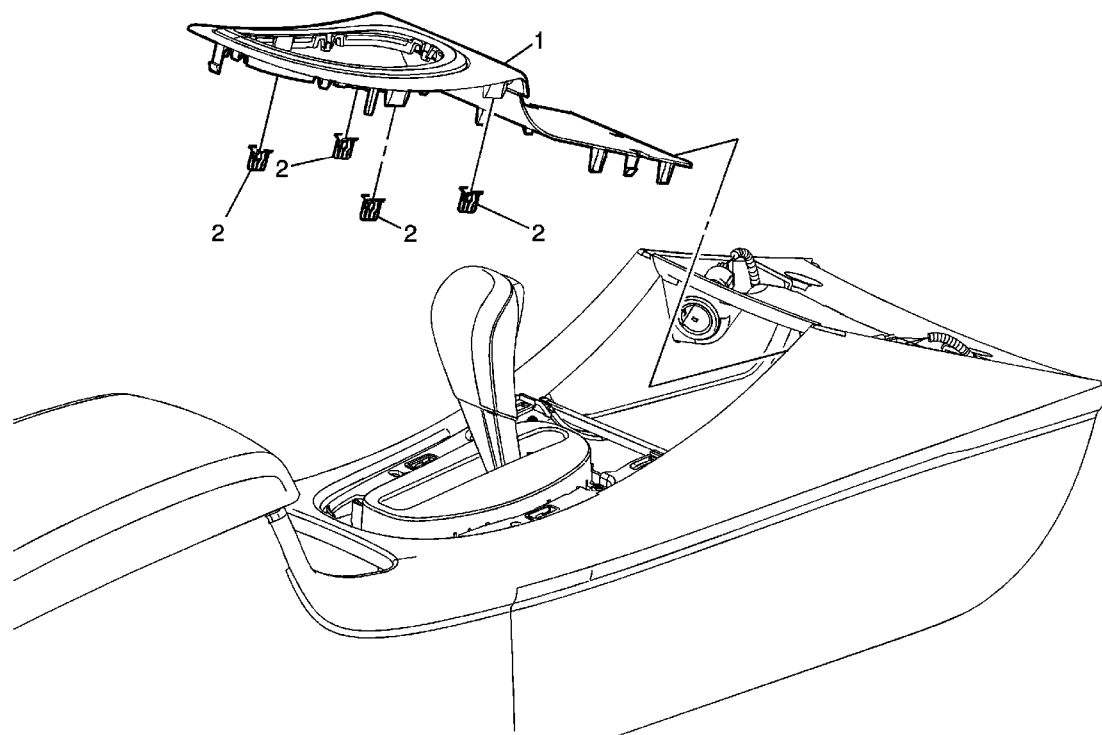

Callout	Component Name
1	Console Shift Lever Bezel Assembly Tip 1. Block the drive wheels. 2. Move shift lever to the neutral position. 3. Use a flat-bladed plastic trim tool to aid in the removal of the shift bezel. 4. For console removal and shift lock actuator access, use ONLY a plastic trim tool to lift the trim bezel from the console. Do not use any tool between the trim bezel and the shifter. 5. Apply the park brake and shift lever rearward. The sound deadener must be reinstalled if the wire harness is removed or replaced.
2	Retainer Clips (Qty: 4)

Front Floor Console Replacement

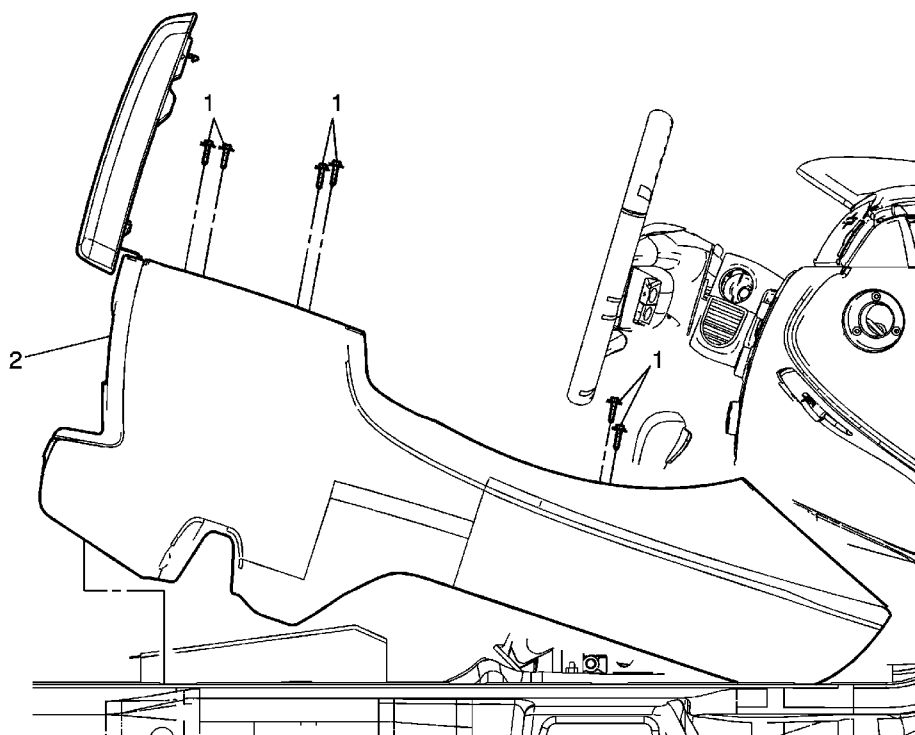


Callout	Component Name
Caution: To prevent component damage, DO NOT use metal tools to remove the trim.	
Preliminary Procedure	
1. Remove the front floor console bin liner. 2. Remove the console shift lever bezel. Refer to Console Shift Lever Bezel Replacement. 3. Use ONLY a plastic trim tool to lift the shift lever bezel from the console. Do not use any tool between the trim bezel and the shifter. 4. Apply the park brake and shift lever rearward. The sound deadener must be reinstalled if the wire harness is removed or replaced.	
1	Front Floor Console Bolt (Qty: 6) Caution: Refer to Fastener Caution in the Preface section. Tighten 7 N·m (62 lb in)
2	Front Floor Console Assembly Procedure

© 2010 General Motors Corporation. All rights reserved.


Disconnect the electrical connector.

Floor Console Bracket Replacement

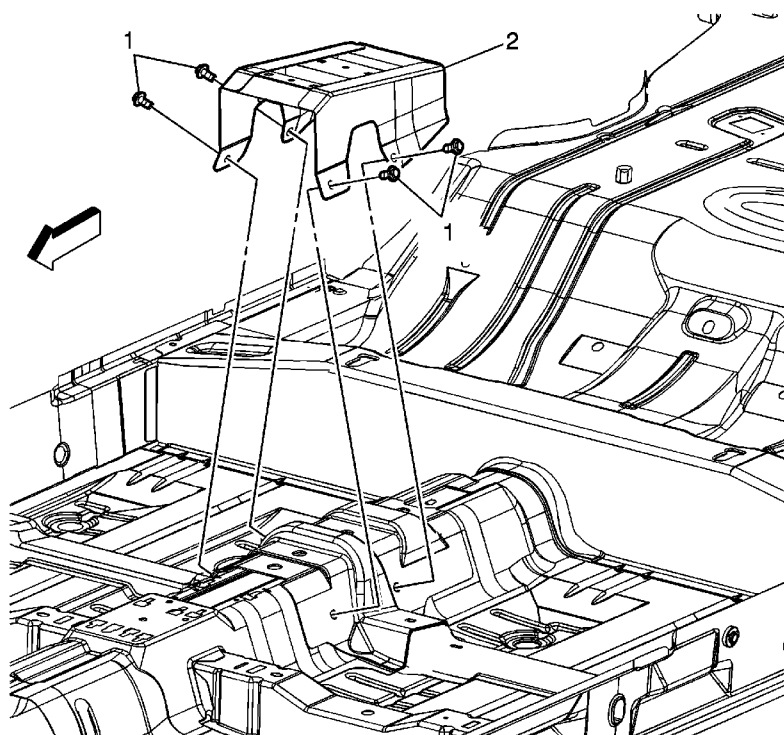


Callout	Component Name
Preliminary Procedure	
Remove the front floor console. Refer to Front Floor Console Replacement .	
1	Front Floor Console Reinforcement Bracket Bolt (Qty 4) Caution: Refer to Fastener Caution in the Preface section. Tip Pull the carpet back enough to access the bolts. Tighten 44 N·m (32 lb ft)
2	Front Floor Console Reinforcement Bracket Assembly

Front Floor Console Armrest Replacement

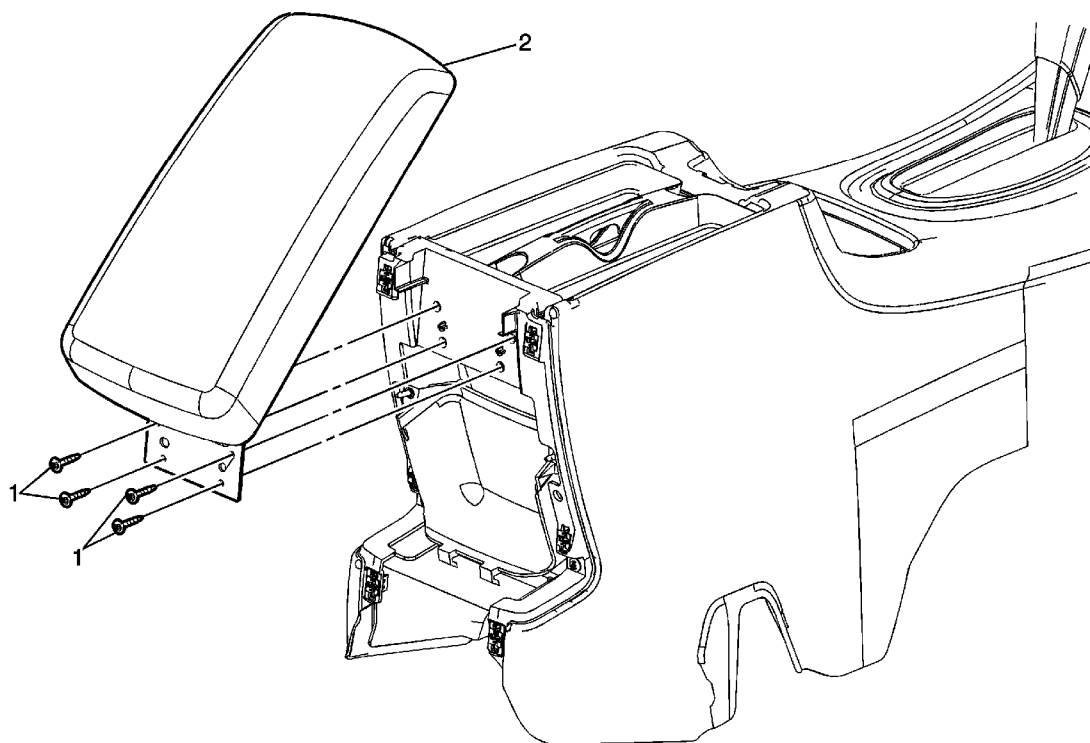

Callout	Component Name
Preliminary Procedure	
Remove the front floor console rear trim plate. Refer to Console Rear Trim Plate Replacement .	
1	Front Floor Console Armrest Hinge Screw (Qty 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Front Floor Console Armrest Assembly

Front Floor Console Armrest Hinge Replacement

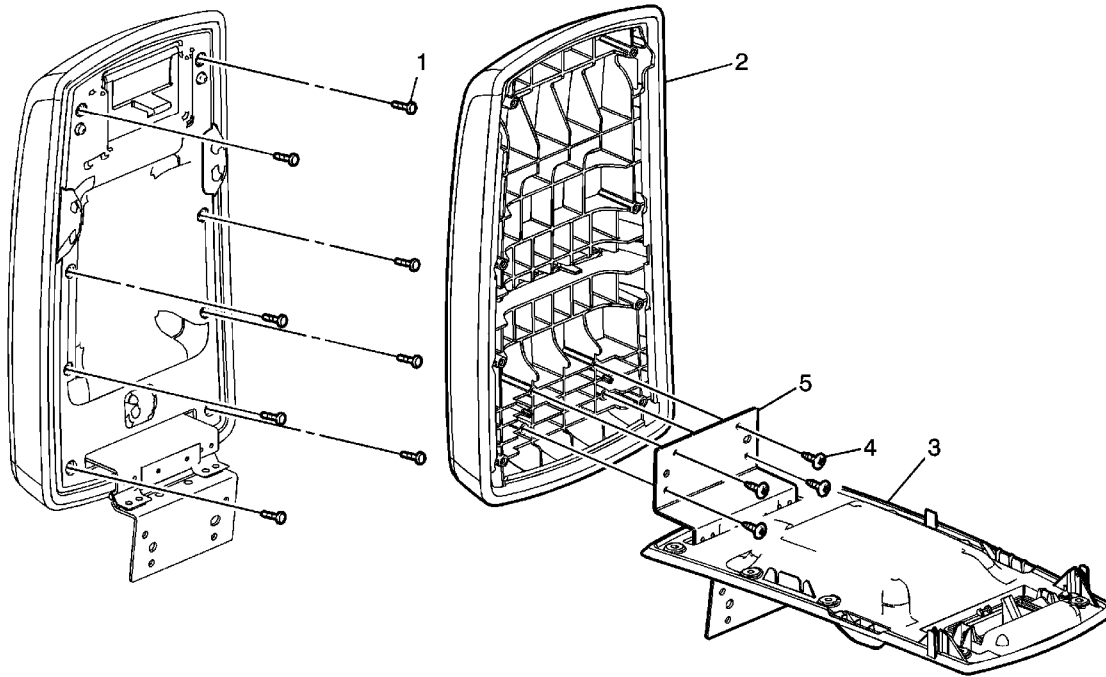


Callout	Component Name
Preliminary Procedure	
Remove the front floor console armrest assembly. Refer to Front Floor Console Armrest Hinge Replacement .	
1	Front Floor Console Armrest Screw (Qty 8) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Front Floor Console Armrest Armrest Assembly Tip Separate the armrest cover assembly from the inner panel.
3	Front Floor Console Armrest Inner Panel Tip Rotate the inner panel in order to access the hinge screws.
	Front Floor Console Armrest Hinge Screw (Qty 4)

© 2010 General Motors Corporation. All rights reserved.

4	Tighten 2 N·m (18 lb in)
5	Front Floor Console Armrest Hinge Assembly Tip Remove the hinge from the inner panel.

Roof Console Replacement

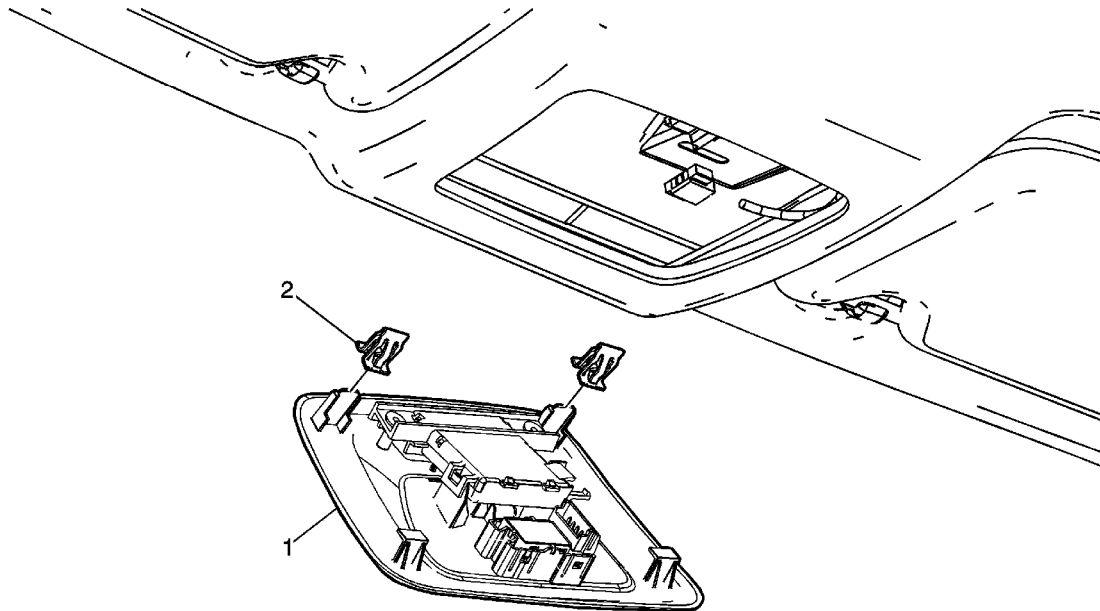

Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Overhead Console Tip • Lower the front of the console first. • Disconnect the electrical connectors.
2	Overhead Console Retainer Clip