

GROUP 80B

SPLICE LOCATIONS

CONTENTS

HOW TO READ SPLICE LOCATIONS

..... 80B-2

INDEX..... 80B-3

ENGINE COMPARTMENT..... 80B-5

ENGINE AND TRANSAXLE..... 80B-5

DASH PANEL..... 80B-6

FLOOR AND ROOF..... 80B-7

DOOR..... 80B-8

LIFTGATE..... 80B-8

HOW TO READ SPLICE LOCATIONS

M18002000001USA0000010000


"Splice locations" describes splice points of each wiring harness on an actual vehicle. Some variations are included in one splice location. Accordingly, some locations may not be applicable for individual vehicles.

Indicates a splice point number.
The splice point numbers are identical to those in "CIRCUIT DIAGRAMS," making them easy to use.
In addition, the splice point numbers are usually numbered clockwise.

Example: S 013

Sequential number

Prefix meaning splice point

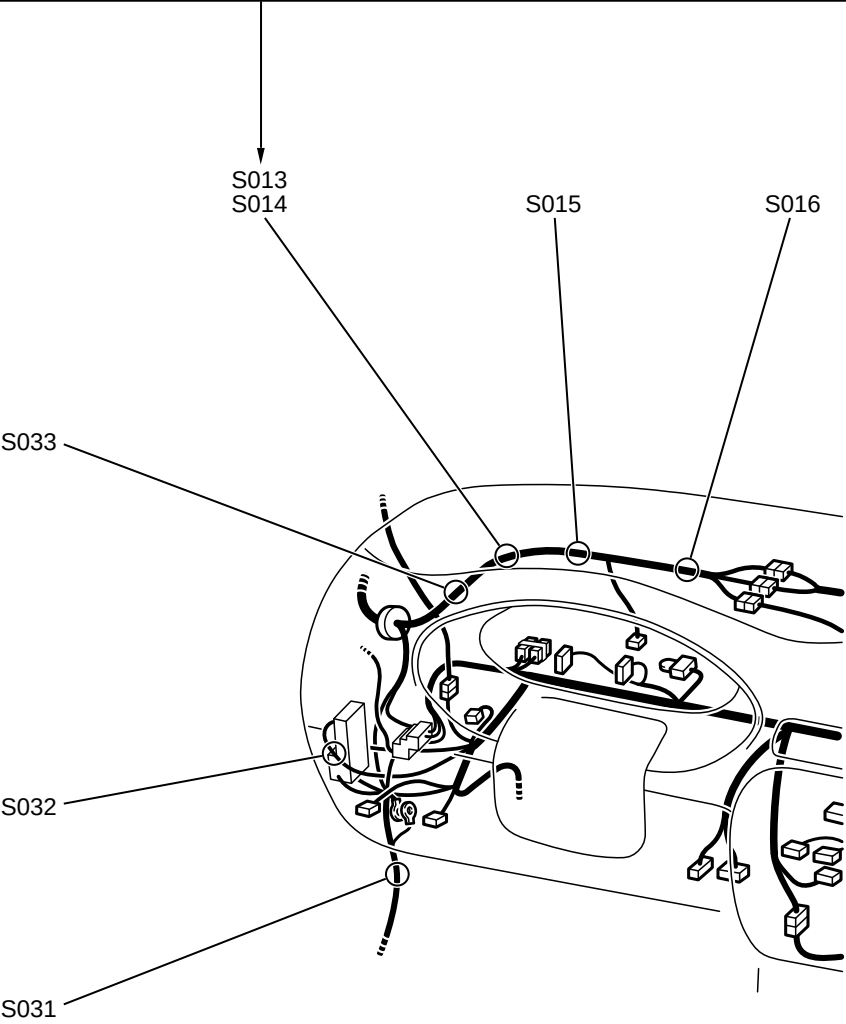

INDEX

M18002000009USA0000010000

This index shows the page numbers where the splice locations are.


Splice location No.	Page	Splice location No.	Page	Splice location No.	Page	Splice location No.	Page
S001	P. 80B-5	S033	P. 80B-6	S064	P. 80B-6	S096	P. 80B-7
S002	P. 80B-5	S034	P. 80B-6	S065	P. 80B-6	S097	P. 80B-7
S003	P. 80B-5	S035	P. 80B-6	S066	P. 80B-6	S098	P. 80B-7
S004	P. 80B-5	S036	P. 80B-6	S067	P. 80B-6	S099	P. 80B-7
S005	P. 80B-5	S037	P. 80B-6	S068	P. 80B-6	S100	P. 80B-7
S006	P. 80B-5	S038	P. 80B-6	S069	P. 80B-6	S101	P. 80B-7
S007	P. 80B-5	S039	P. 80B-6	S070	P. 80B-6	S102	P. 80B-7
S008	P. 80B-5	S040	P. 80B-6	S071	P. 80B-6	S103	P. 80B-7
S009	P. 80B-5	S041	P. 80B-6	S072	P. 80B-6	S104	P. 80B-7
S010	P. 80B-5	S042	P. 80B-6	S073	P. 80B-6	S105	P. 80B-7
S011	P. 80B-5	S043	P. 80B-6	S074	P. 80B-6	S106	P. 80B-7
S012	P. 80B-5	S044	P. 80B-6	S075	P. 80B-6	S107	P. 80B-7
S013	P. 80B-5	S045	P. 80B-6	S076	P. 80B-7	S108	P. 80B-7
S014	P. 80B-5	S046	P. 80B-6	S077	P. 80B-7	S109	P. 80B-7
S015	P. 80B-5	S047	P. 80B-6	S078	P. 80B-7	S110	P. 80B-7
S016	P. 80B-5	S048	P. 80B-6	S079	P. 80B-7	S111	P. 80B-7
S017	P. 80B-5	S049	P. 80B-6	S080	P. 80B-7	S112	P. 80B-7
S018	P. 80B-5	S050	P. 80B-6	S081	P. 80B-7	S113	P. 80B-7
S019	P. 80B-5	S051	P. 80B-6	S082	P. 80B-7	S114	P. 80B-7

SPLICE LOCATIONS INDEX

[illegible]

ENGINE COMPARTMENT


M18002000002USA0000010000

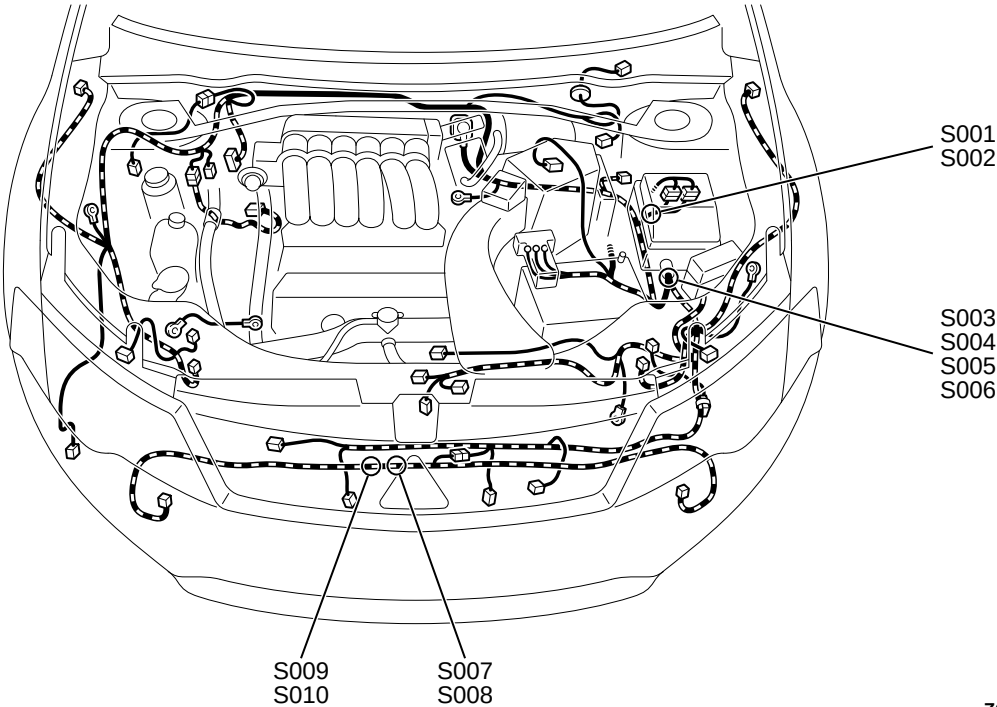

ZC6005930000

ENGINE AND TRANSAXLE

M18002000014USA0000010000

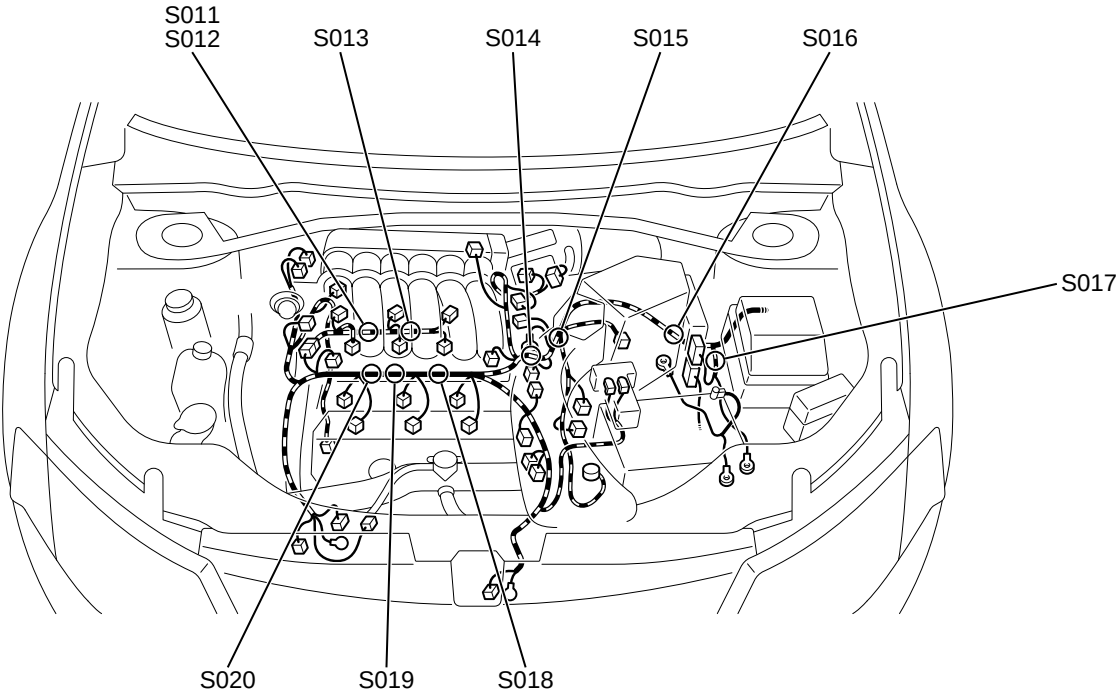


ZC6005940000

SPLICE LOCATIONS
DASH PANEL

DASH PANEL


M18002000003USA0000010000

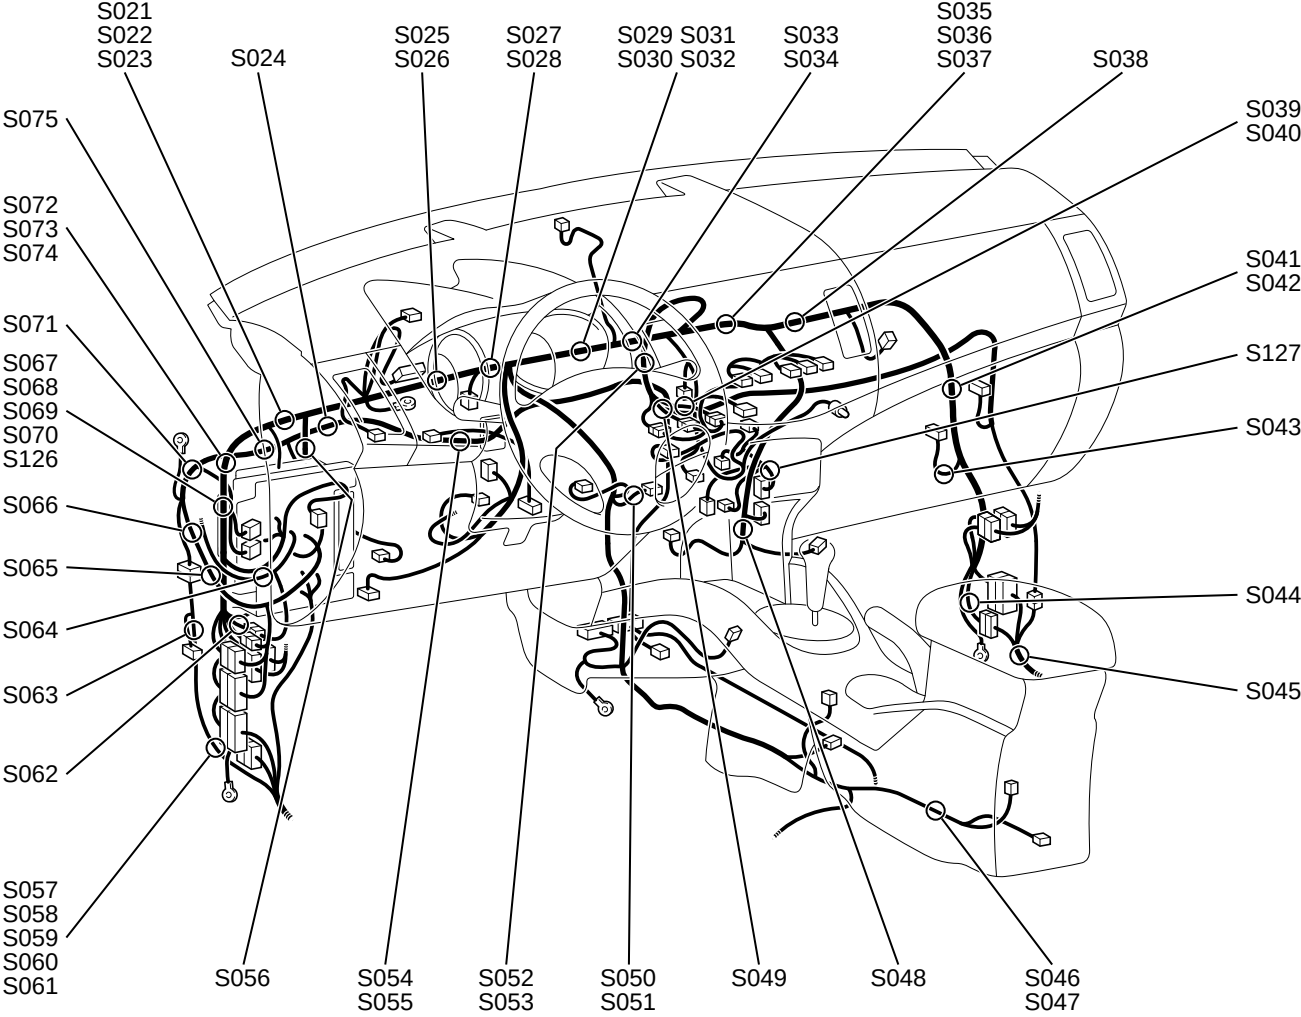

ZC6005950000

FLOOR AND ROOF

M18002000012USA0000010000

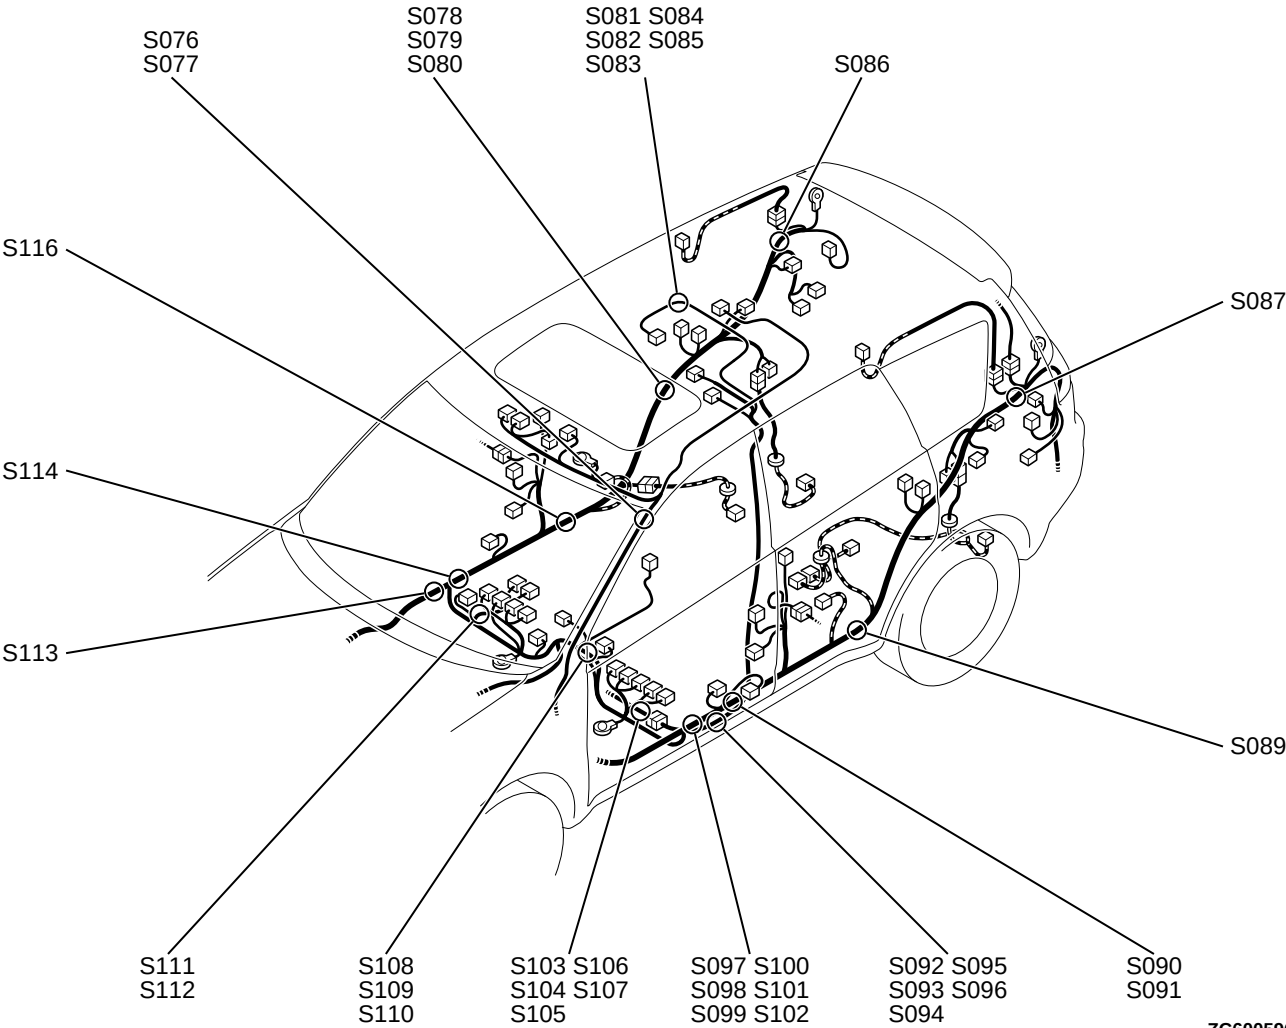


ZC6005960000

SPLICE LOCATIONS
DOOR

DOOR


M18002000008USA0000010000

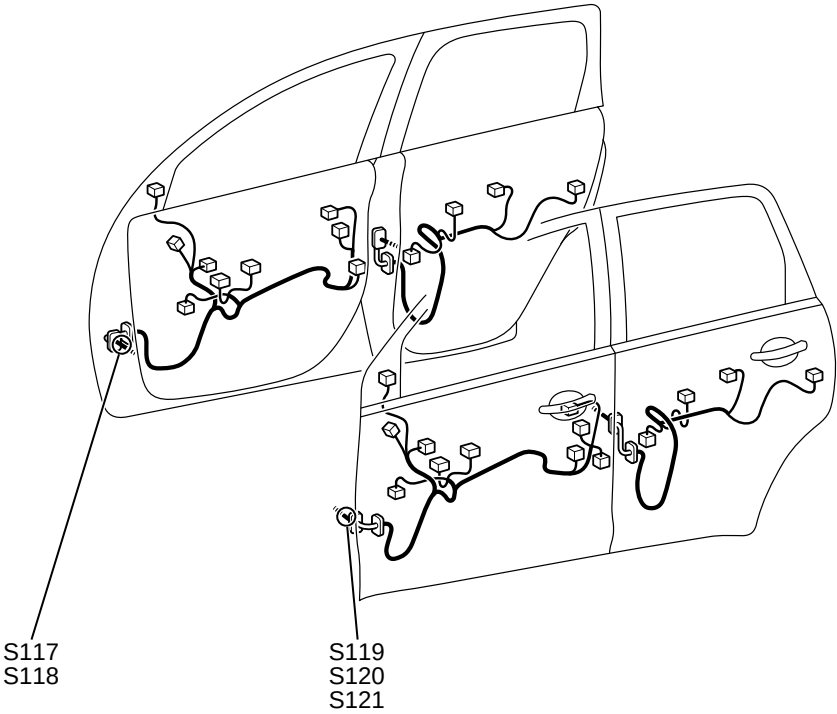

ZC6005970000

LIFTGATE

M18002000013USA0000010000

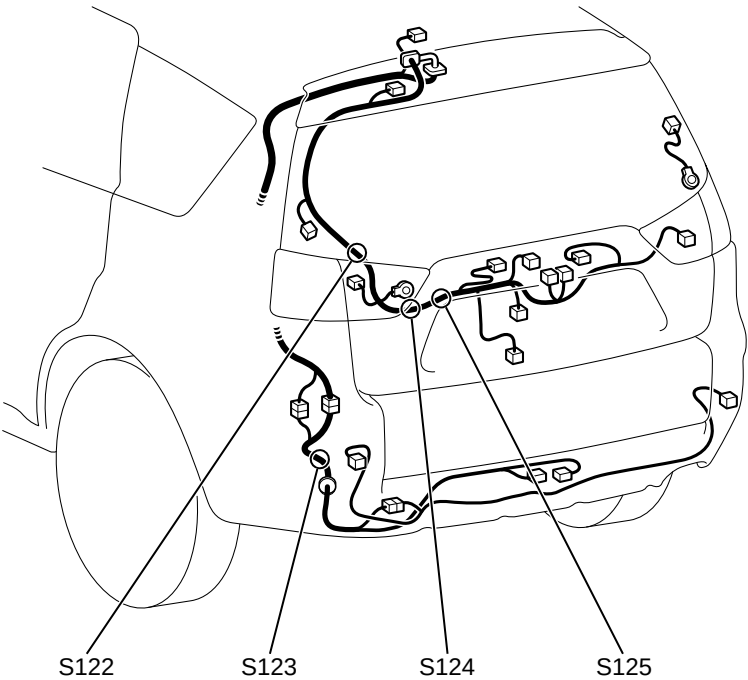

ZC6005980000