

4

4WD-ECU.....27C-92

A

A/C Compressor Clutch

Test.....55A-101

A/C Control Panel.....55A-110

A/C Pressure Sensor

Simple Inspection.....55A-102

A/C-ECU.....55A-117

A/T Control Component.....-149

A/T Fluid Cooler Line.....23A-178

A/T Key Interlock Mechanism.....23A-168

ABS

Actuator Test.....35B-144

Circuit Diagram.....90-120

ECU, Check at Terminal.....35B-144

AC Power Supply.....54Ae-6

Circuit Diagrams.....90-102

Accelerator Pedal.....17a-7

Accessory Socket.....54Ae-4

Circuit Diagram.....90-101

Adhesive

Body.....42Aa-2

Door.....42Ab-4

Electronic Controlled AWD.....27C-6

Engine.....11A-4

Engine Cooling.....14-3

Engine Lubrication.....12-3

Engine Overhaul.....11B-8

Exterior.....51A-2

Liftgate.....42Ac-2

MFI.....13Aa-8

Rear Axle.....27B-5

Steering.....37-4

Adhesive Table.....00-71

Adhesives

Interior.....52A-2

Air Bag Module

Disposal Procedures.....52B-352

Air Bag Module(s).....52B-329

Air Cleaner.....15-6

Air Cleaner Element

Replace.....00-56

Air Conditioning

Actuator Test.....55B-18

Compressor.....55A-117

Compressor Drive Belt Adjustment.....55A-102

Compressor Noise Check.....55A-105

Condenser.....55A-122

ECU Terminal Check.....55A-97

Idle-up Operation Check.....55A-109

Motor.....55A-115

Other Parts.....55B-23

Performance Test.....55A-104

Power Relay Check.....55A-106

Refrigerant Leak Repair.....55A-105

Refrigerant Line.....55A-123

Sensors (Automatic A/C).....55B-21

Transistor.....55A-115

Air Conditioning System

Circuit Diagram.....90-79

Air Purifier Filter

Replace.....00-71

Ambient Temperature Sensor.....55A-116

Antenna.....54B-173

Anti-Lock Braking System (ABS)

Diagnosis.....35B-5

ASC

Circuit Diagram.....90-124

ASC-OFF Switch.....35C-195

Audio Amplifier.....54B-167

Audio System

Circuit Diagram.....90-92

Auto A/C

Diagnosis.....55B-4

Auto-cruise Control.....17b-56

Auto-cruise Control Cable

Check and Adjustment.....17b-55

Auto-cruise Control Switch

Check.....17b-55

Auto-cruise Control System

Circuit Diagram.....90-138

Diagnosis.....17b-4

Main Switch Check.....17b-56

Automatic Transaxle

Adjusting Plate, Snap Ring and Spacers.....23B-3

Control Cable Adjustment.....23A-157

Diagnosis.....23A-13

Fluid Level Check.....00-64

Flushing Coolers and Tubes.....23A-155

Transaxle Assembly.....23A-170

Transaxle Control.....23A-166

Transfer Assembly.....23A-176

Automatic Transaxle Control Component

Check.....23A-159

Automatic Transaxle Fluid

Level Check.....00-64

Auto-tensioner

Check.....11A-8

AWD-ECU	
Terminal Check.....	27C-90

B

Backup Light	
Circuit Diagram.....	90-60
Ball Joint Dust Cover	
Inspection.....	33-8
Stabilizer Link, Inspection.....	34-23
Ball Joint Dust Cover Inspection	
Steering.....	37-15
Ball Joint Seals	
Check.....	00-69
Barometric Pressure Sensor	
Check.....	17c-13
Basic Brake System	
Diagnosis.....	35A-5
Battery	
Charging.....	54Aa-3
Remedy for a Discharged Battery.....	35B-150
Test.....	54Aa-3
Belt	
Water Pump and Generator Drive Belt Check	
.....	00-58
Belt, Timing	
Replace.....	00-58
Bleeding	
Brakes (Basic).....	35A-18
Power Steering.....	37-18
Blower Assembly.....	55A-111
Body	
Adhesive.....	42Aa-2
Sealant.....	42Aa-2
Boots	
Driveshaft, Check.....	00-70
Brake Booster.....	35A-25
Operating Check.....	35A-16
Removal and Installation.....	35A-25
Brake Disc	
Pad Wear Check.....	00-69
Runout Check and Correction.....	35A-21
Thickness Check.....	35A-21
Brake Fluid Level Sensor Check.....	-19
Brake Fluid Pressure Sensor	
Calibration.....	35C-194
Brake Hoses	
Check.....	00-69
Brake Pad	
Wear Check.....	00-69
Brake Pedal.....	35A-22

Check and Adjustment.....	35A-14
Brake Stoplight Switch Check.....	-24
Brake Warning Light	
Circuit Diagram.....	90-64
Bulb	
Replacement.....	54Ac-187
Bumper	
Front.....	51A-3
Rear.....	51A-5

C

Camshaft.....	11A-27
.....	11B-36
Camshaft Oil Seal.....	11A-24
Camshaft Position Sensor.....	-7
.....	16c-7
Check.....	16c-5
Canister	
Evaporative Emission.....	17c-18
Catalytic Converter.....	-19
.....	17c-19
Caution Labels.....	-5
CD Player.....	54B-165
Centermember.....	32-6
Central Door Locking System	
Circuit Diagram.....	90-70
Inspection.....	42Ab-91
Centralized Junction	
Circuit Diagram.....	90-12
Charging System	
Circuit Diagram.....	90-26
Diagnosis.....	16a-3
Check Valve	
Operating Check.....	35A-18
Clearance Around Hood	
Adjustment.....	42Aa-4
Clock	
Circuit Diagram.....	90-100
Clock Spring.....	52B-329
Combination Meter.....	54Ab-77
Compressor (A/C)	
Noise Check.....	55A-105
Connecting Rod	
Overhaul.....	11B-61
Control Link.....	34-10
Control Relay	
Check.....	23A-159
Control Unit Location.....	70-3
Controller Area Network (CAN)	
Circuit Diagram.....	90-164

Coolant			
Engine, Change.....	00-67		
Coolant Hoses			
Heater Hose Inspect.....	00-69		
Radiator Hose Inspect.....	00-69		
Cooling Fan Motor			
Check.....	14-19		
Cooling System			
Circuit Diagram.....	90-34		
Crank angle Sensor.....	16c-8		
Crank Angle Sensor			
Check.....	16c-5		
Crankcase Ventilation System			
Check.....	17c-8		
Crankshaft			
Overhaul.....	11B-69		
Crankshaft Front Oil Seal.....	-42		
.....	11A-42		
Crankshaft Position Sensor			
Check.....	17c-16		
Crankshaft Pulley.....	11A-21		
Crankshaft Rear Oil Seal.....	-43		
.....	11A-43		
Crossmember.....	32-7		
Curtain Air Bag Module.....	52B-341		
Cylinder Block			
Overhaul.....	11B-69		
Cylinder Head			
Overhaul.....	11B-45		
Cylinder Head Gasket.....	11A-45		
D			
Daytime Running Light.....	54Ac-187		
Circuit Diagram.....	90-51		
Diagnosis			
Anti-Lock Braking System (ABS).....	35B-5		
Auto A/C.....	55B-4		
Auto-cruise Control System.....	17b-4		
Automatic Transaxle.....	23A-13		
Basic Brake System.....	35A-5		
Charging System.....	16a-3		
Door.....	42Ab-79		
Emission Control System.....	17c-3		
Engine.....	11A-2		
Engine Control System.....	17a-2		
Engine Cooling.....	14-3		
Front Axle.....	26-3		
Front Suspension.....	33-3		
Fuel Supply.....	13B-3		
Hood.....	42Aa-2		
Intake and Exhaust.....	15-3		
Liftgate.....	42Ac-2		
Parking Brake.....	36-2		
Power Steering.....	37-4		
Propeller Shaft.....	25-3		
Rear Axle.....	27A-2		
Rear Suspension.....	34-6		
SRS Air Bag.....	52B-31		
Starting System.....	16b-3		
Sunroof.....	42Ad-4		
Tire.....	31-2		
Trouble Code, ABS.....	35B-6		
Wheel.....	31-2		
Window Glass.....	42Aa-14		
Differential.....	23B-76		
Disassembly and Assembly.....	23B-76		
Differential Carrier			
Rear.....	27B-24		
Differential Carrier Oil Seal			
Replacement.....	27B-16		
Disc Brake			
Pad Wear Check.....	00-69		
Disc Brake Assembly			
Front.....	35A-28		
Rear.....	35A-33		
Disc Brake Pad			
Check and Adjustment.....	35A-20		
Dome Light.....	54Ac-190		
Circuit Diagram.....	90-52		
Door.....	42Ab-95		
Adhesive.....	42Ab-4		
Diagnosis.....	42Ab-79		
Handle and Latch.....	42Ab-102		
Inside Handle Play Adjustment.....	42Ab-93		
Opening Weatherstrip.....	42Ab-110		
Outside Handle Play Adjustment.....	42Ab-92		
Sealant.....	42Ab-4		
Switch Check.....	42Ab-97		
Door Ajar Warning Tone Alarm			
Circuit Diagram.....	90-151		
Door Glass.....	42Ab-97		
Door Sash Tape.....	51A-11		
Door Trim.....	-11		
Removal and Installation.....	52A-11		
Drive Belt			
Power Steering, Tension Check.....	37-17		
Tension Check and Adjustment.....	11A-9		
Water Pump and Generator Drive Belt Check			
.....	00-58		
Drive Mode Selector.....	27C-93		
Drive Plate			

Overhaul.....	11B-69
Driveshaft	
Front Axle.....	26-17
Rear Axle.....	27B-19
Driveshaft Boots	
Check.....	00-70
Ducts.....	55A-125

E

EBJ Boot	
Replacement.....	26-33
ECU Terminal	
Check.....	42Ab-78
EGR System.....	-13
.....	17c-13
EGR Valve	
Check.....	13Aa-32
Cleaning.....	17c-16
Electric Controlled 4WD	
Circuit Diagrams.....	90-135
Electronic Control Coupling.....	27C-94
Inspection.....	27C-91
Element, Air Cleaner	
Replace.....	00-56
Emission Control System	
Diagnosis.....	17c-3
Emission Control System, Evaporative	
Check for Clogging.....	00-57
Check for Leaks.....	00-57
Engine	
Adhesive.....	11A-4
Assembly.....	11A-54
Auto-tensioner.....	11A-8
Camshaft Oil Seal.....	11A-24
Compression Pressure.....	11A-17
Crankshaft Front Oil Seal.....	11A-42
Crankshaft Rear Oil Seal.....	11A-43
Cylinder Head Gasket.....	11A-45
Diagnosis.....	11A-2
Drive Belt.....	11A-9
Ignition Timing.....	11A-14
Manifold Vacuum.....	11A-19
Oil Pan and Oil Screen.....	11A-37
Rocker Arm Piston.....	11A-13
Sealant.....	11A-4
Timing Belt.....	11A-49
Engine Control Module.....	13Aa-37
Engine Control System	
Diagnosis.....	17a-2
Engine Coolant	

Change.....	00-67
Concentration Check.....	14-16
Leak Check.....	14-15
Replacement.....	14-15
Engine Coolant Temperature Sensor	
Check.....	13Aa-24
Engine Cooling	
Adhesive.....	14-3
Diagnosis.....	14-3
Sealant.....	14-3
Engine Lubrication	
Adhesive.....	12-3
Sealant.....	12-3
Engine Mounting.....	32-3
Engine Oil	
Change.....	00-62
Check.....	12-4
Replacement.....	12-4
Engine Oil Control Valve	
Check.....	13Aa-31
Engine Oil Filter	
Change.....	00-63
Replacement.....	12-5
Engine Oil Pressure	
Check.....	12-5
Engine Overhaul	
Adhesive.....	11B-8
Sealant.....	11B-8
Tightening Specification(s).....	11B-5
Engine Roll Stopper.....	32-6
Engine Valves	
Overhaul.....	11B-45
ETACS-ECU.....	54Ad-93
Circuit Diagram.....	90-9
Evaporative Emission Canister.....	-18
.....	17c-18
Inspection.....	17c-19
Evaporative Emission Control System.....	-9
.....	17c-9
Check for Clogging.....	00-57
Check for Leaks.....	00-57
Purge Solenoid Check.....	17c-12
Evaporative Emission Purge Solenoid	
Check.....	13Aa-32
Evaporative Emission Ventilation Solenoid	
Check.....	17c-13
Evaporator Unit.....	55A-111
Exhaust Manifold.....	15-11
Overhaul.....	11B-33
Exhaust Pipe.....	15-16
Exhaust System	

Check.....	00-61
Exhaust Valve	
Clearance Check and Adjust.....	00-57
Exterior	
Adhesive.....	51A-2
Sealant.....	51A-2
Exterior Transmitter Antenna.....	42B-176

F

Fan Control Relay	
Continuity Check.....	14-17
Fender.....	42Aa-7
Filter	
Air Purifier, Replace.....	00-71
Engine Oil, Change.....	00-63
Floor Console.....	52A-8
Fluid	
Automatic Transaxle, Fluid Level Check.....	00-64
Flywheel	
Overhaul.....	11B-69
Fog Light.....	54Ac-183
Circuit Diagram.....	90-50
Foot Light	
Circuit Diagram.....	90-56
Front Axle	
Diagnosis.....	26-3
Driveshaft.....	26-17
Hub.....	26-9
Front Axle Hub Assembly.....	26-9
Disassembly and Assembly.....	26-13
Inspection.....	26-13
Front Deck Crossmember	
Removal and Installation.....	55A-111
Front Door	
Fit Adjustment.....	42Ab-86
Front Door Window Glass	
Fit Adjustment.....	42Ab-88
Front Floor Console.....	-8
Front Fog Light	
Aiming.....	54Ac-183
Front Impact Sensors.....	52B-324
Front Seat.....	-18
Front Seat Belt.....	-22
Front Suspension	
Diagnosis.....	33-3
Front Wheel Alignment	
Check and Adjustment.....	33-7
Fuel Filler Lid.....	42Aa-10
Fuel Gauge Unit	
Inspection.....	54Ab-67

Fuel Hose	
Check for Condition.....	00-56
Fuel Level Sensor	
Check.....	13B-7
Replacement.....	13B-12
Fuel Pipe	
Check for Leaks.....	00-56
Fuel Pressure Test.....	-17
Fuel Pump	
Connector Disconnection.....	13Aa-20
Operation Check.....	13Aa-20
Fuel Pump Module	
Replacement.....	13B-7
Fuel Pump Relay	
Continuity Check.....	13Aa-22
Fuel Supply	
Diagnosis.....	13B-3
Fuel System	
Check for Leaks.....	00-56
Fuel Tank.....	13B-13
Check for Leaks.....	00-56
Fuel Tank Differential Pressure Sensor	
Check.....	17c-13
Fuel Tank Filler Tube	
Check for Leaks.....	00-56
Fuel Tank Pressure Relief Valve.....	-18
.....	17c-18
Inspection.....	17c-19
Fuel Warning Light	
Circuit Diagram.....	90-64
Fuses Location.....	70-17
Fusible Links Location.....	70-17

G

G and Yaw Rate Sensor.....	35C-198
Calibration.....	35C-191
Garnishes.....	51A-10
Gauge	
Circuit Diagram.....	90-62
Gear Oil	
Change.....	27B-15
Generator.....	11B-10
Output Current Test.....	16a-8
Output Line Voltage Drop Test.....	16a-6
Regulated Voltage Test.....	16a-10
Generator Assembly.....	16a-13
Glove Box Light	
Circuit Diagram.....	90-55
Ground Location.....	70-20
Grounding Location.....	70-19

H

Hands-free System	
Circuit Diagram.....	90-159
Hazard Warning Light.....	54Ac-193
Circuit Diagram.....	90-57
Headlight.....	54Ac-165
Aiming.....	54Ac-165
Circuit Diagram.....	90-42
Headlight Automatic Leveling System.....	-178
.....	54Ac-177
Circuit Diagram.....	90-48
Headlining.....	52A-15
Heated Door Mirror	
Circuit Diagram.....	90-90
Heated Seat	
Circuit Diagram.....	90-146
Heater Core.....	55A-111
Heater Unit.....	55A-111
Removal and Installation.....	55A-111
Height Sensor.....	-179
High-Mounted Stoplight.....	54Ac-191
Hood.....	42Aa-2
Aliment.....	42Aa-4
Diagnosis.....	42Aa-2
Height Adjustment.....	42Aa-5
Hood Striker	
Alignment.....	42Aa-4
Horn.....	54Af-28
Circuit Diagram.....	90-61
Horn Relay	
Check.....	54Af-29
Hoses	
Brake, Check.....	00-69
Hub	
Front Axle.....	26-9
Rear Axle.....	27A-5
Hub Bolt	
Replacement.....	26-8
Hydraulic Unit.....	35B-150
.....	35C-196
Hydraulic Unit Check	
ABS.....	35B-148

I

Ignition Coil.....	16c-6
Check.....	16c-3
Ignition Key Cylinder Illumination Light	
Circuit Diagram.....	90-52
Ignition Key Reminder Warning Buzzer	

Circuit Diagram.....	90-148
Ignition System	
Circuit Diagram.....	90-24
Ignition Timing	
Check.....	11A-14
Immobilizer System	
Circuit Diagram.....	90-133
Injector.....	13Aa-32
Check.....	13Aa-30
Inside Rear View Mirror.....	52A-17
Inspection Terminal Location.....	70-17
Instrument Panel.....	52A-2
Intake Air Temperature Sensor	
Check.....	13Aa-24
Intake and Exhaust	
Diagnosis.....	15-3
Intake Manifold.....	11B-25
.....	15-8
Intake Manifold Plenum.....	15-7
Overhaul.....	11B-13
Intake Valve	
Clearance Check and Adjust.....	00-57
Interior	
Adhesives.....	52A-2
Sealant.....	52A-2
Interior Transmitter Antenna.....	42B-176
Interior Trim.....	-10
INVECS-II 6A/T	
Circuit Diagram.....	90-37

K

Key Interlock Mechanism	
Check.....	23A-162
Key Lock Prevention Function	
Check.....	42Ab-91
Keyless Operation Key.....	42B-178
Keyless Operation System (KOS)	
Circuit Diagram.....	90-75
Knock Sensor.....	16c-8
Check.....	16c-3
KOS-ECU.....	42B-175

L

Lash Adjuster	
Check.....	11A-19
License Plate Light.....	54Ac-191
Circuit Diagram.....	90-46
Liftgate.....	42Ac-6
Adhesive.....	42Ac-2
Adjustment.....	42Ac-4

Diagnosis.....	42Ac-2
Height Adjustment.....	42Ac-6
Inspection.....	42Ac-13
Sealant.....	42Ac-2
Liftgate Handle.....	42Ac-10
Liftgate Latch.....	42Ac-10
Liftgate Spoiler.....	51A-20
Liftgate Trim.....	-14
Removal and Installation.....	52A-14
Liftgate Window Glass.....	-25
Lower Arm.....	33-13
.....	34-10
Inspection.....	33-14
Lower Arm Ball Joint	
End Play Check.....	33-8
Lower Arm Ball Joint Dust Cover	
Replacement.....	33-15
Lower Arm Bushing	
Replacement.....	33-15
Luggage Compartment Light	
Circuit Diagram.....	90-52

M

Main Muffler.....	15-16
Maintenance	
Air Cleaner Element.....	00-56
Automatic Transaxle Fluid.....	00-64
Ball Joint and Steering Linkage Seals.....	00-69
Brake Hoses.....	00-69
Disc Brake Pads.....	00-69
Drive Belt.....	00-58
Driveshaft Boots.....	00-70
Engine Coolant.....	00-67
Engine Oil.....	00-62
Engine Oil Filter.....	00-63
Evaporative Emission Control System.....	00-57
Exhaust System.....	00-61
Fuel Hose.....	00-56
Fuel System.....	00-56
Spark Plug.....	00-57
Timing Belt.....	00-58
Transfer Oil.....	00-67
Manifold Vacuum	
Check.....	11A-19
Manual A/C	
Diagnosis.....	55A-5
Mark.....	51A-21
Mass Airflow Sensor	
Check.....	17c-16
Master Cylinder.....	-25

Function Check.....	35A-22
Master Cylinder Assembly.....	35A-25
Meter	
Circuit Diagram.....	90-62
Meter Information Switch	
Inspection.....	54Ab-69
MFI	
Adhesive.....	13Aa-8
Sealant.....	13Aa-8
MFI System	
Circuit Diagram.....	90-28
Mirror	
Remote Controlled, Circuit Diagram.....	90-91
Mitsubishi Multi Communication System (MMCS)	
Circuit Diagram.....	90-103
MMCS.....	54B-166
Moldings.....	51A-8
Mounting	
Engine.....	32-3
Transaxle.....	32-4
Multiport Fuel Injection Relay	
Continuity Check.....	13Aa-22

O

Occupant Classification Sensor	
Accuracy Check.....	52B-322
Oil	
Engine, Change.....	00-62
Engine, Check.....	12-4
Engine, Replacement.....	12-4
Transfer, Change.....	00-67
Oil Cooler	
Flow Check.....	23A-156
Oil Filter	
Engine, Replacement.....	12-5
Oil Pan	
Overhaul.....	11B-53
Oil Pan and Oil Screen.....	11A-37
Oil Pressure	
Engine, Check.....	12-5
Oil Pump	
Overhaul.....	11B-53
Power Steering.....	37-34
Power Steering, Pressure Test.....	37-18
Oil seal	
Camshaft.....	11A-24
Oil Seal	
Crankshaft Front.....	11A-42
Crankshaft Rear.....	11A-43
Oil Warning Light	

Circuit Diagram.....	90-64
Outside Mirror.....	51C-12
Oxygen Sensor Check.....	13Aa-25

P

Paddle Shift Switch Check.....	23A-161
Panic Alarm System.....	54Af-30
Park/neutral Position Switch Check.....	23A-159
Park/Neutral Position Switch Adjustment.....	23A-157
Parking Brake Cable.....	36-13
Diagnosis.....	36-2
Lever.....	36-12
Lever Stroke Check and Adjustment.....	36-11
Lining and Drum.....	36-14
Lining Running-in.....	36-12
Switch Check.....	36-12
PCV (Positive Crankcase Ventilation) System.....	-7
.....	17c-7
Valve Check.....	17c-9
Piston Overhaul.....	11B-61
Position Light Circuit Diagram.....	90-46
Power Distribution System Circuit Diagram.....	90-19
Power Seat Circuit Diagram.....	90-145
Power Steering Bleeding.....	37-18
Diagnosis.....	37-4
Drive Belt Tension Check.....	37-17
Fluid Level Check.....	37-17
Fluid Replacement.....	37-17
Hoses.....	37-39
Oil Pump Assembly.....	37-34
Oil Pump Pressure Test.....	37-18
Power Steering Diagnosis.....	37-4
Power Steering Gear Box.....	37-28
Power Steering Linkage.....	37-28
Power Steering Oil Pump Assembly Inspection.....	37-36
Power Window Check.....	42Ab-88
Circuit Diagram.....	90-66
Operating Current Check.....	42Ab-89

Power Window Timer Function Check.....	42Ab-89
Powertrain Control Module (PCM) Terminal Check.....	13Ab-859
Printed-Heater Element Check.....	54Ai-2
Propeller Shaft.....	25-5
Diagnosis.....	25-3
Purge Control System Check.....	17c-11

Q

Quarter Window Glass.....	-21
---------------------------	-----

R

Radiator.....	14-27
Radiator Cap Pressure Check.....	14-15
Radiator Grille.....	51A-7
Radio.....	54B-165
Rear Axle Adhesive.....	27B-5
Diagnosis.....	27A-2
Driveshaft.....	27B-19
Gear Oil Level Check.....	27B-15
Hub.....	27A-5
Sealant.....	27B-5
Total Backlash Check.....	27B-14
Wheel Bearing End Play Check.....	27A-4
Rear axle oil Level Check.....	00-70
Rear Combination Light.....	54Ac-182
Rear Floor Console.....	-9
Rear Hub Rotary-Sliding Resistance Check.....	27A-4
Rear Monitor.....	54B-174
Rear Seat Belt.....	-24
Rear Seat Entertainment System Circuit Diagram.....	90-111
Rear Side Marker Light.....	54Ac-183
Rear Suspension Diagnosis.....	34-6
Rear Suspension Crossmember.....	34-24
Rear Washer.....	51B-57
Rear Wheel Alignment Check and Adjustment.....	34-9
Rear Window Defogger Circuit Diagram.....	90-89
Rear Window Defogger Relay Check.....	54Ai-3

Rear Window Defogger Switch.....	54Ai-3
Rear Wiper.....	51B-57
Receiver Antenna Module.....	42B-176
Regulator.....	42Ab-97
Relay Location.....	70-2
Rocker Cover.....	11B-36
Roof Lid Glass	
Operation Check.....	42Ad-38
Roof Rail.....	51A-19

S

Satellite Radio Tuner.....	54B-169
Sealant	
Body.....	42Aa-2
Door.....	42Ab-4
Electronic Controlled AWD.....	27C-6
Engine.....	11A-4
Engine Cooling.....	14-3
Engine Lubrication.....	12-3
Engine Overhaul.....	11B-8
Exterior.....	51A-2
Interior.....	52A-2
Liftgate.....	42Ac-2
MFI.....	13Aa-8
Rear Axle.....	27B-5
Steering.....	37-4
Sealant Table.....	00-71
Seat	
Front.....	52A-18
Second.....	52A-21
Third.....	52A-22
Seat Assembly.....	52A-18
Seat Belt.....	52A-22
Front.....	52A-22
Rear.....	52A-24
Seat Belt Pre-Tensioner	
Disposal Procedures.....	52B-352
Seat Belt Tone Alarm	
Circuit Diagram.....	90-153
Seat Belts With Pre-Tensioner.....	52B-345
Check.....	52B-349
Seat Slide Sensor.....	52B-349
Second Seat.....	21
Selector Lever	
Operation Check.....	23A-162
Sensor	
Ambient Temperature.....	55A-116
Barometric Pressure, Check.....	17c-13
Camshaft Position.....	16c-7
Camshaft Position, Check.....	16c-5

Crank Angle, Check.....	16c-5
Crankangle.....	16c-8
Crankshaft Position, Check.....	17c-16
Engine Coolant Temperature, Check.....	13Aa-24
Fuel Tank Differential Pressure, Check.....	17c-13
G and Yaw Rate.....	35C-198
Height.....	54Ac-179
Intake Air Temperature, Check.....	13Aa-24
Knock.....	16c-8
Knock, Check.....	16c-3
Oxygen, Check.....	13Aa-25
Seat Slide.....	52B-349
Steering Wheel.....	35C-198
Wheel Speed.....	35B-152
Sensor Location.....	70-7
Shift "P" Interlink Door Unlock Function	
Check.....	42Ab-91
Shift Lock Mechanism.....	23A-168
Check.....	23A-163
Circuit Diagram.....	90-36
Shift Switch Assembly	
Continuity Check.....	23A-168
Shock Absorber.....	34-18
Side Air Dam.....	51A-15
Side Impact Sensor.....	52B-338
Side Turn-signal Light.....	54Ac-189
Solenoid	
Evaporative Emission Purge, Check.....	13Aa-32
Solenoid Location.....	70-14
Solenoid Valve	
Check.....	23A-160
Solenoid Valve Location.....	70-14
Spare Connector (Rear Display)	
Circuit Diagram.....	90-118
Spare Harness (For Trailer Lights)	
Circuit Diagram.....	90-163
Spark Plug	
Check and Adjustment.....	16c-4
Replace.....	00-57
Test.....	16c-4
Speaker.....	54B-170
Test.....	54B-163
Speedometer	
Inspection.....	54Ab-65
Splash Shield.....	42Aa-9
SRS	
Circuit Diagram.....	90-128
SRS Air Bag	
Diagnosis.....	52B-31
SRS Control Unit (SRS-ECU).....	52B-326
SRS Warning Light Check.....	-33

Stabilizer Bar.....	33-16	Tachometer	
.....	34-22	Inspection.....	54Ab-67
Stabilizer Link Ball Joint Dust Cover.....	-23	Tail Light	
Starter Motor Assembly.....	16b-5	Circuit Diagram.....	90-46
Starter Relay		Theft Alarm.....	54Af-29
Check.....	16b-5	Theft Alarm Indicator	
Starting System		Inspection.....	54Af-30
Circuit Diagram.....	90-23	Theft-alarm System	
Diagnosis.....	16b-3	Circuit Diagram.....	90-155
Steering		Thermo Valve	
Adhesive.....	37-4	Check.....	23A-180
Ball Joint Dust Cover Inspection.....	37-15	Thermostat.....	14-19
Removal and Installation.....	37-20	Third Seat.....	-22
Sealant.....	37-4	Throttle Actuator Control Motor	
Steering Column Shaft Assembly Shock Absorbing Mechanism		Check.....	13Aa-31
Check.....	37-19	Throttle Body	
Steering Linkage Seals		Cleaning.....	13Aa-16
Check.....	00-69	Overhaul.....	11B-13
Steering Shaft.....	37-23	Throttle Body Assembly.....	13Aa-36
Steering Wheel.....	37-20	Tie Rod End	
Free Play Check.....	37-14	Steering, Ball Joint Breakaway Torque Check	
Remote Controller.....	54B-167		37-15
Stationary Steering Effort Check.....	37-16	Tightening Specification(s)	
Steering Angle Check.....	37-14	Air Conditioning.....	55A-127
Steering Wheel Return to Center Check.....	37-16	Automatic Transaxle Overhaul.....	23B-2
Steering Wheel Sensor.....	35C-198	Engine Overhaul.....	11B-5
Calibration.....	35C-192	Front Suspension.....	33-2
Stop Light Switch		Rear Suspension.....	34-3
Check.....	23A-159	Tightening Torque.....	00-48
Stoplight		Timing Belt.....	11A-49
Circuit Diagram.....	90-59	Overhaul.....	11B-16
Switch Check.....	35A-24	Replace.....	00-58
Strut Assembly.....	33-9	Tire.....	31-7
Disassembly and Assembly.....	33-10	Diagnosis.....	31-2
Inspection.....	33-10	Inflation Pressure Check.....	31-7
Strut Tower Bar.....	42Aa-11	Rotation.....	00-71
Sunroof.....	42Ad-41	Wear Check.....	31-7
Check.....	42Ad-37	Tire Pressure Monitoring System	
Circuit Diagram.....	90-143	Circuit Diagram.....	90-141
Diagnosis.....	42Ad-4	Torque Converter	
Fit Adjustment.....	42Ad-36	Stall Test.....	23A-21
Initialized Check.....	42Ad-38	Trailing Arm.....	34-13
Operation Check.....	42Ad-39	Bushing, Replacement.....	34-17
Safety Function Check.....	42Ad-37	Transaxle.....	23B-9
Timer Function Check.....	42Ad-37	Automatic, Fluid Level Check.....	00-64
Water Test.....	42Ad-36	Control.....	23A-166
Suspension System		Disassembly and Assembly.....	23B-9
Inspect for Looseness and Damage.....	00-70	Transaxle Control.....	23A-166
		Transaxle Control Module (TCM).....	23A-177
		Transaxle Mounting.....	32-4
		Transfer	

T

Disassembly and Assembly.....	23B-79		27A-15
Oil Change.....	00-67	Wheel Speed Sensor.....	35B-152
Overhaul.....	23B-79		35C-197
Transfer Oil		Window Glass.....	42Aa-11
Change.....	00-67	Diagnosis.....	42Aa-14
Level Check.....	23A-158	Runchannel.....	42Ab-110
Transmission Fluid		Windshield.....	-15
Change.....	23A-153	Windshield Washer.....	51B-55
Check.....	23A-152	Windshield Wiper.....	51B-49
Transmission Fluid Temperature Sensor		Windshield Wiper and Washer	
Check.....	23A-161	Circuit Diagram.....	90-85
Transmission Range Switch		Wiper and Washer	
Check.....	17b-56	Rear, Circuit Diagram.....	90-87
Transmitter.....	42C-96		
Trims.....	52A-10		
Trouble Code, ABS			
Diagnosis.....	35B-6		
Turn Signal Light			
Circuit Diagram.....	90-57		

U

Under Cover.....	51A-18
Upper Arm.....	34-10

V

Vacuum Circuit Diagram.....	-6
Vacuum Hoses.....	17c-5
Vacuum Tank	
Check.....	15-3
Valve	
Clearance check and adjust.....	11A-12
Fuel Tank Pressure Relief.....	17c-18
Valve Stem Seal.....	11A-27
Ventilator.....	55A-127

W

Water Hose.....	11B-29
.....	14-23
Water Pipe.....	11B-29
.....	14-23
Water Pump.....	14-22
WCM.....	42C-95
Wheel.....	31-7
Balance Accuracy.....	31-3
Diagnosis.....	31-2
Runout Check.....	31-7
Wheel Bearing	
Play Check.....	26-8
Wheel Bearing End Play Check.....	-4

MEMO