


Front Harness Routing

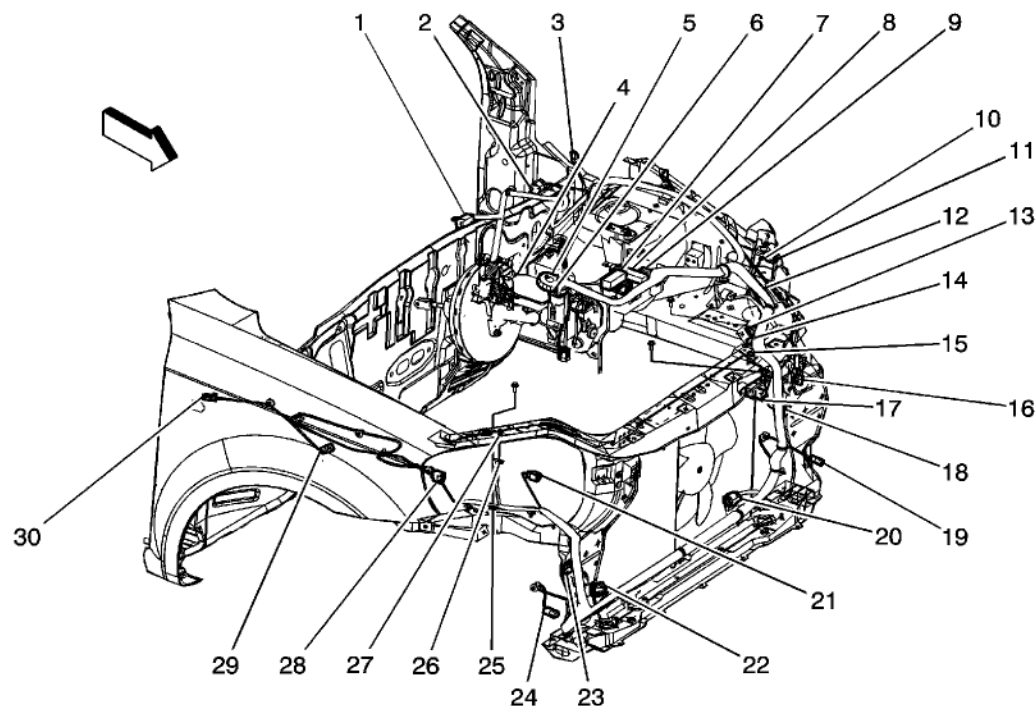


- (1) X208
- (2) Windshield Wiper Motor
- (3) Turn Signal Repeater - Left
- (4) Brake Fluid Level Switch
- (5) Wheel Speed Sensor (WSS) - Left Front
- (6) Electronic Brake Control Module (EBCM)
- (7) X102
- (8) X103
- (9) Fuse Block - Underhood
- (10) Inflatable Restraint Front Discriminating Sensor - Left
- (11) Park/Turn Signal Lamp - Left Front
- (12) Headlamp - Left
- (13) Position Lamp/Headlamp Leveling Actuator - Left
- (14) G102
- (15) Hood Ajar Switch
- (16) Windshield Washer Fluid Pump (Notchback)/Windshield Washer Fluid Pump - Front (Hatchback)
- (17) Horn

© 2010 General Motors Corporation. All rights reserved.

- (18) Ambient Air Temperature Sensor
- (19) Fog Lamp - Left Front
- (20) Cooling Fan
- (21) Position Lamp/Headlamp Leveling Actuator - Right
- (22) Heated Oxygen Sensor (HO2S) 2
- (23) A/C Compressor Clutch
- (24) Fog Lamp - Right Front
- (25) G101
- (26) Headlamp - Right
- (27) Inflatable Restraint Front Discriminating Sensor - Right
- (28) Park/Turn Signal Lamp - Right Front
- (29) Wheel Speed Sensor (WSS) - Right Front
- (30) Turn Signal Repeater - Right

Engine Harness Routing (1.2L)

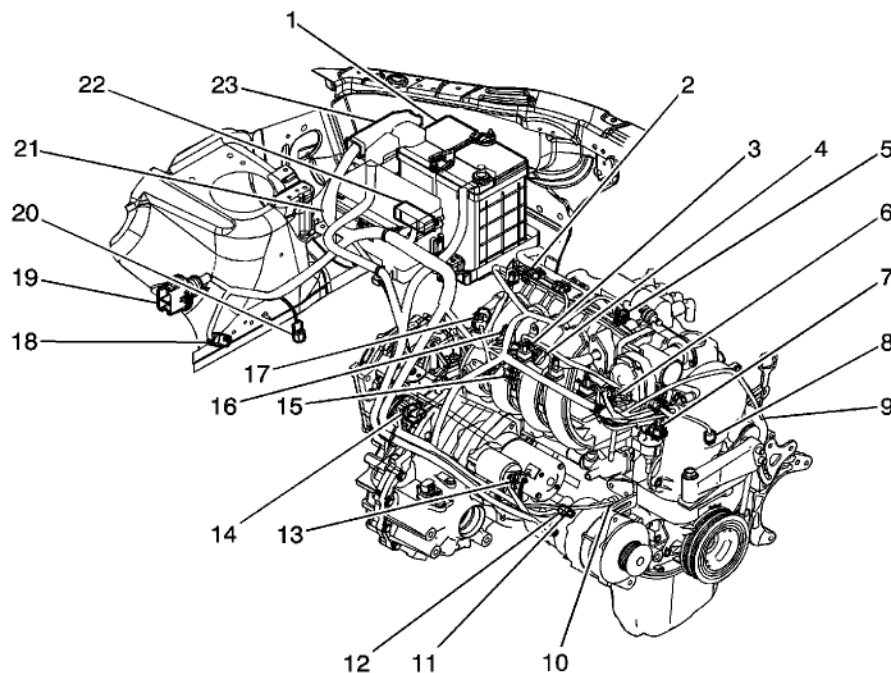


- (1) Battery
- (2) Camshaft Position (CMP) Sensor
- (3) Heated Oxygen Sensor (HO2S) 2
- (4) Heated Oxygen Sensor (HO2S) 1
- (5) Ignition Coil Module
- (6) X106
- (7) Evaporative Emission (EVAP) Canister Purge Solenoid Valve
- (8) A/C Refrigerant Pressure Sensor
- (9) Power Steering Pressure Switch
- (10) Oil Pressure Switch
- (11) Generator
- (12) G104
- (13) Starter
- (14) Knock Sensor (KS)
- (15) Crankshaft Position (CKP) Sensor
- (16) Engine Coolant Temperature (ECT) Sensor
- (17) Exhaust Gas Recirculation (EGR) Valve
- (18) X206

© 2010 General Motors Corporation. All rights reserved.

- (19) X204
- (20) Octane Selection Switch
- (21) G103
- (22) Fuse Block - Underhood
- (23) Engine Control Module (ECM)

Engine Harness Routing (1.4L / 1.6L)

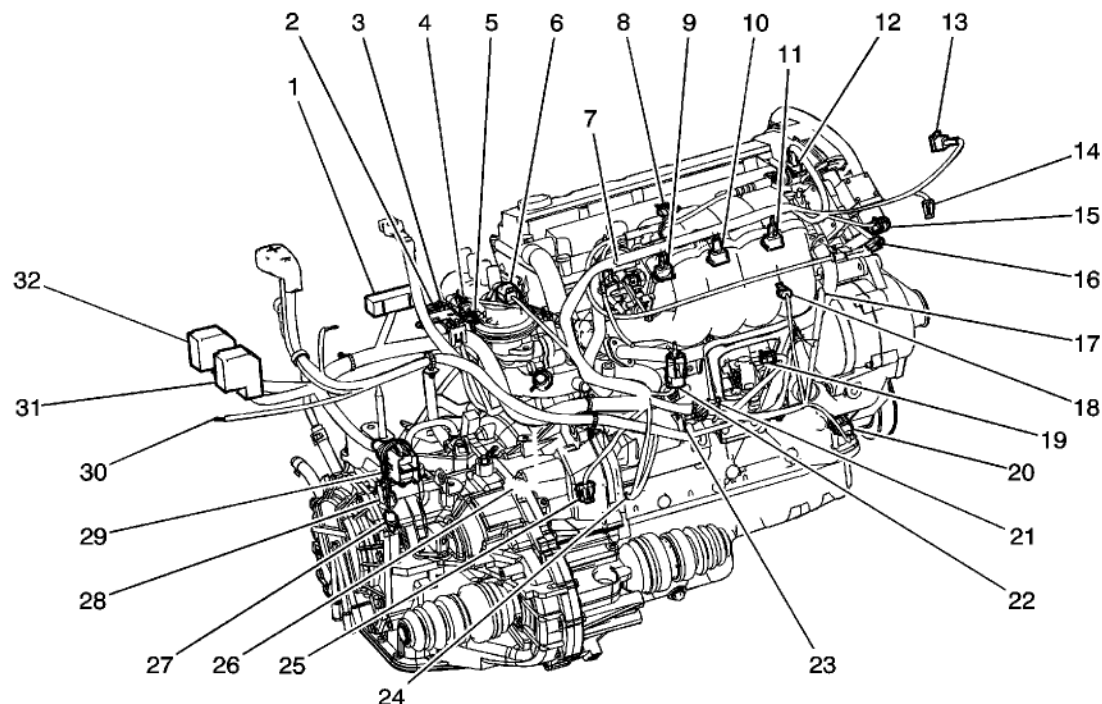


- (1) Fuse Block - Underhood X1
- (2) Crankshaft Position (CKP) Sensor
- (3) Backup Switch (D16/Y4M)
- (4) Heated Oxygen Sensor (HO2S) 1
- (5) Ignition Coil Module
- (6) Exhaust Gas Recirculation (EGR) Valve
- (7) Fuel Injector 1
- (8) Manifold Absolute Pressure (MAP) Sensor
- (9) Fuel Injector 2
- (10) Fuel Injector 3
- (11) Fuel Injector 4
- (12) Camshaft (CMP) Sensor
- (13) Intake Air Temperature (IAT) Sensor
- (14) A/C Refrigerant Pressure Sensor
- (15) Throttle Position (TP) Sensor
- (16) Idler Air Control (IAC) Valve
- (17) Generator
- (18) Engine Coolant Temperature (ECT) Sensor

© 2010 General Motors Corporation. All rights reserved.

- (19) Evaporative Emission (EVAP) Canister Purge Solenoid Valve
- (20) Oil Pressure Switch
- (21) Knock Sensor (KS)
- (22) VGI Solenoid Valve
- (23) Starter
- (24) G104
- (25) Vehicle Speed Sensor (VSS) (D16/Y4M)
- (26) X105
- (27) Octane Selector Switch
- (28) Rough Road Sensor
- (29) X204
- (30) G103
- (31) Engine Control Module (ECM) X2
- (32) Engine Control Module (ECM) X1

Engine Harness Routing (1.5L)

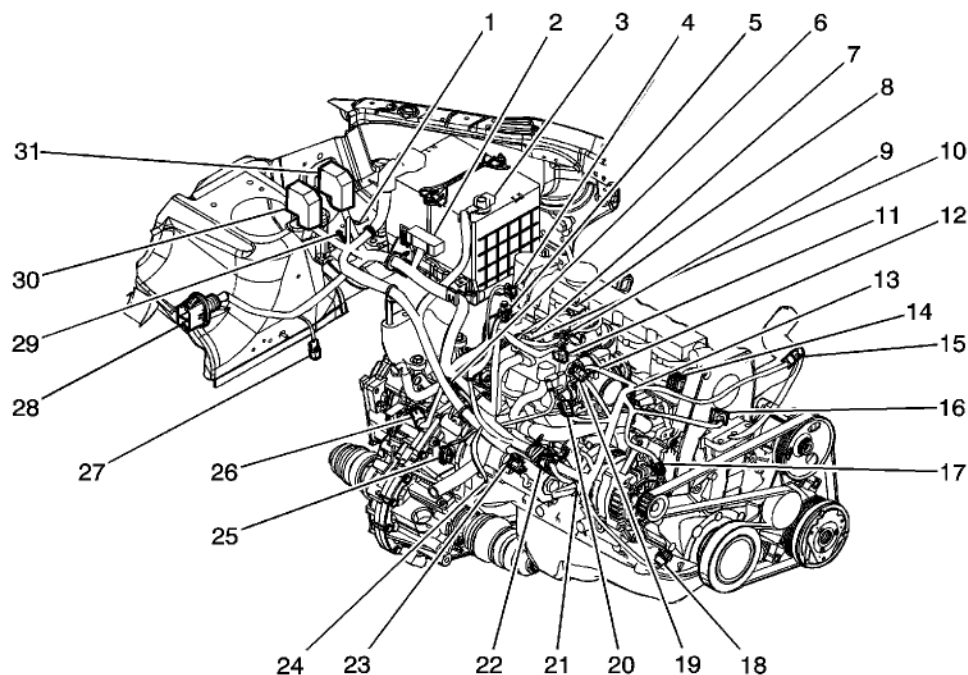


- (1) Fuse Block - Underhood
- (2) X101
- (3) Battery
- (4) Ignition Coil Module
- (5) Manifold Absolute Pressure (MAP) Sensor
- (6) Evaporative Emission (EVAP) Canister Purge Solenoid Valve
- (7) Engine Coolant Temperature (ECT) Sensor
- (8) Backup Switch (D16/Y4M)
- (9) Crankshaft Position (CKP) Sensor
- (10) Fuel Injector 1
- (11) Fuel Injector 2
- (12) Fuel Injector 3
- (13) Fuel Injector 4
- (14) Camshaft Position (CMP) Sensor
- (15) Heated Oxygen Sensor (HO2S) 1
- (16) Intake Air Temperature (IAT) Sensor
- (17) A/C Refrigerant Pressure Sensor
- (18) Oil Pressure Switch

© 2010 General Motors Corporation. All rights reserved.


- (19) Throttle Position (TP) Sensor
- (20) Idle Air Control (IAC) Valve
- (21) Generator
- (22) Knock Sensor (KS)
- (23) Starter
- (24) G104
- (25) Vehicle Speed Sensor (VSS) (D16/Y4M)
- (26) X105
- (27) Octane Selector Switch
- (28) X204
- (29) G103
- (30) Engine Control Module X1
- (31) Engine Control Module X2

TCM Harness Routing

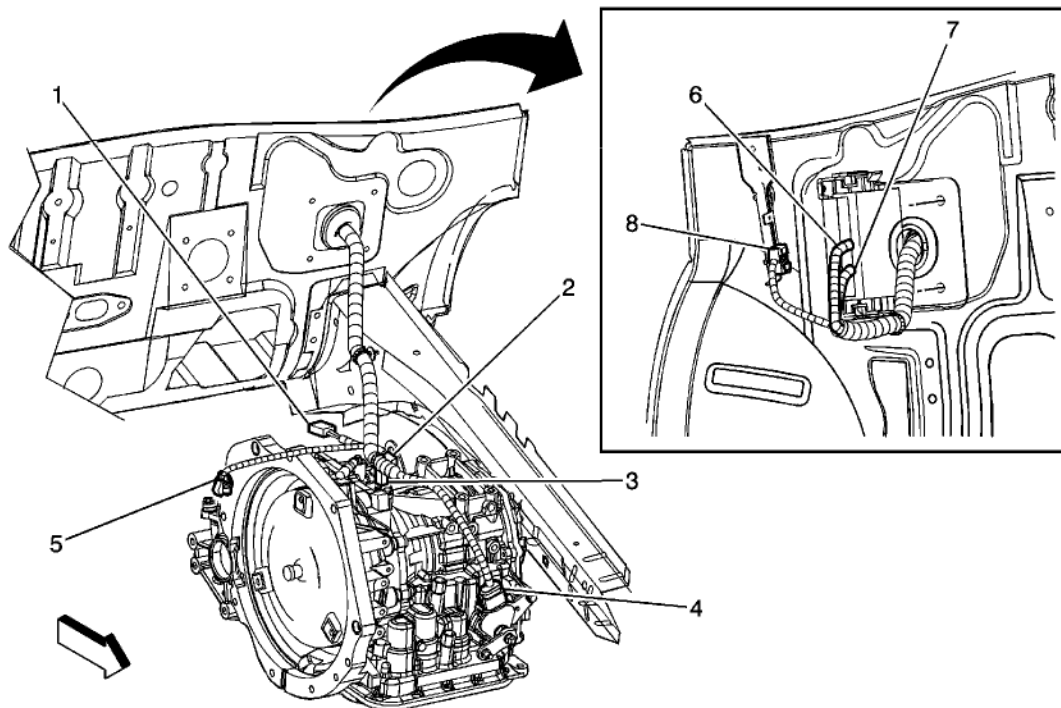

- (1) X105
- (2) Transmission Connector
- (3) Input Speed Sensor (ISS)
- (4) Park/Neutral Position (PNP) Switch
- (5) Vehicle Speed Sensor (VSS)
- (6) Transmission Control Module X1
- (7) Transmission Control Module X2
- (8) X206

Instrument Panel Harness Routing (LHD Shown, RHD Similar)

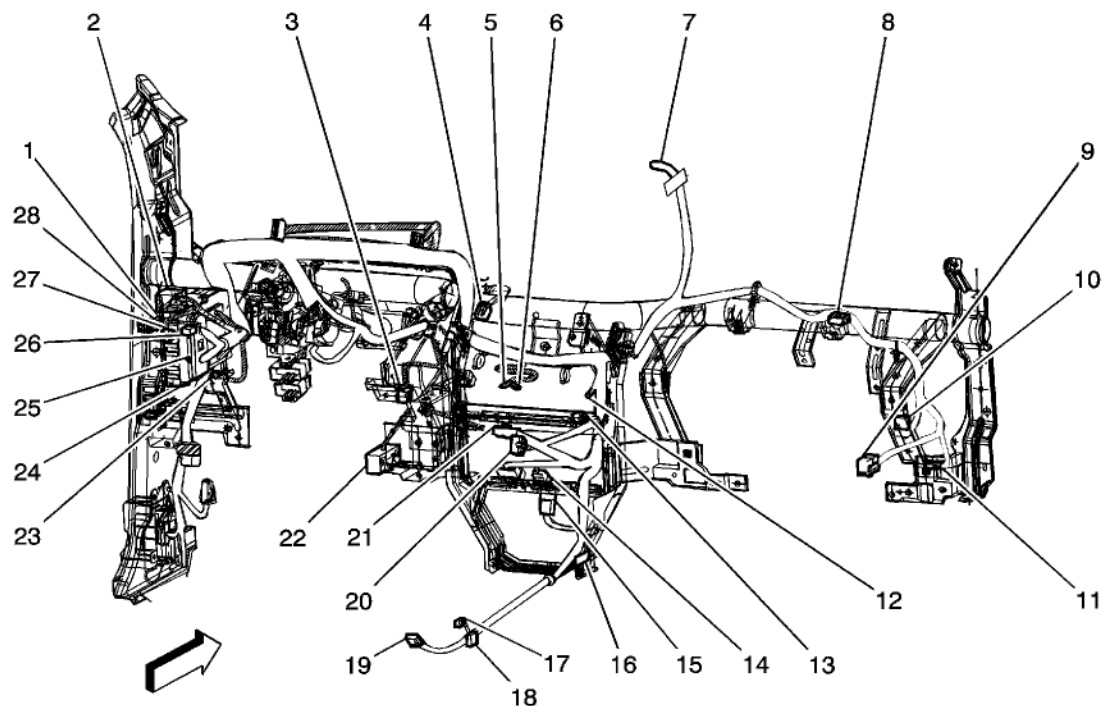


- (1) G201
- (2) BLINK Relay
- (3) Inflatable Restraint Steering Wheel Module Coil
- (4) Stop Lamp Switch
- (5) Radio X1
- (6) Radio X2
- (7) Clock
- (8) Air Temperature Actuator
- (9) X217
- (10) Blower Motor Resistor
- (11) Blower Motor
- (12) Radio Antenna
- (13) HVAC Control Module
- (14) X215
- (15) Cigar Lighter
- (16) G203
- (17) PRNDL Lamp
- (18) Shift Program Switch (MLO)

© 2010 General Motors Corporation. All rights reserved.


- (19) Automatic Transmission Shift Lever (MLQ)
- (20) Hazard Switch
- (21) Blower Motor Switch
- (22) Data Link Connector (DLC)
- (23) Fuse Block - I/P
- (24) Folding Mirror Unit
- (25) Fuse Block - I/P X1
- (26) I/P Dimmer Switch
- (27) PARK/NEUTRAL POSITION (PNP) Relay
- (28) Outside Rearview Mirror Switch

Airbag Harness Routing (RHD Shown, LHD Similar)

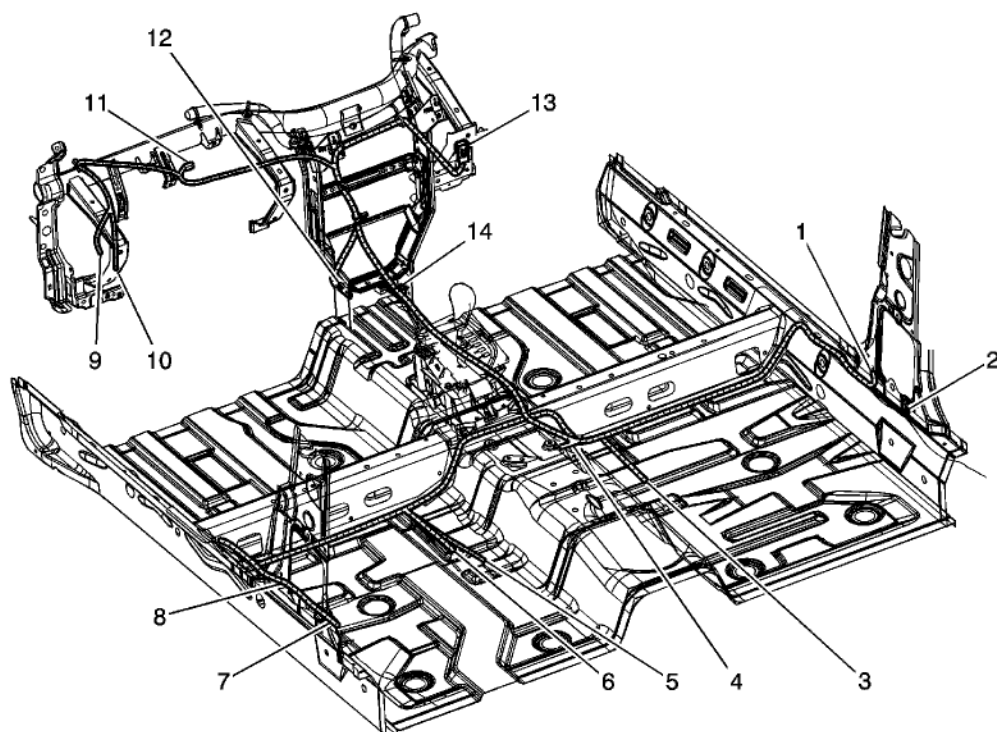

- (1) Inflatable Restraint Side Impact Sensor - Right
- (2) Seat Belt Pretensioner - Right
- (3) Inflatable Restraint Side Impact Module - Right
- (4) Inflatable Restraint Sensing and Diagnostic Module (SDM)
- (5) Passenger Presence System (PPS) Sensor
- (6) Inflatable Restraint Side Impact Module - Left
- (7) Seat Belt Pretensioner - Left
- (8) Inflatable Restraint Side Impact Sensor - Left
- (9) Passenger Airbag Disable Switch
- (10) Glove Box Switch
- (11) Inflatable Restraint - I/P Module
- (12) X216
- (13) Inflatable Restraint Steering Wheel Module
- (14) G203

Floor Harness Routing

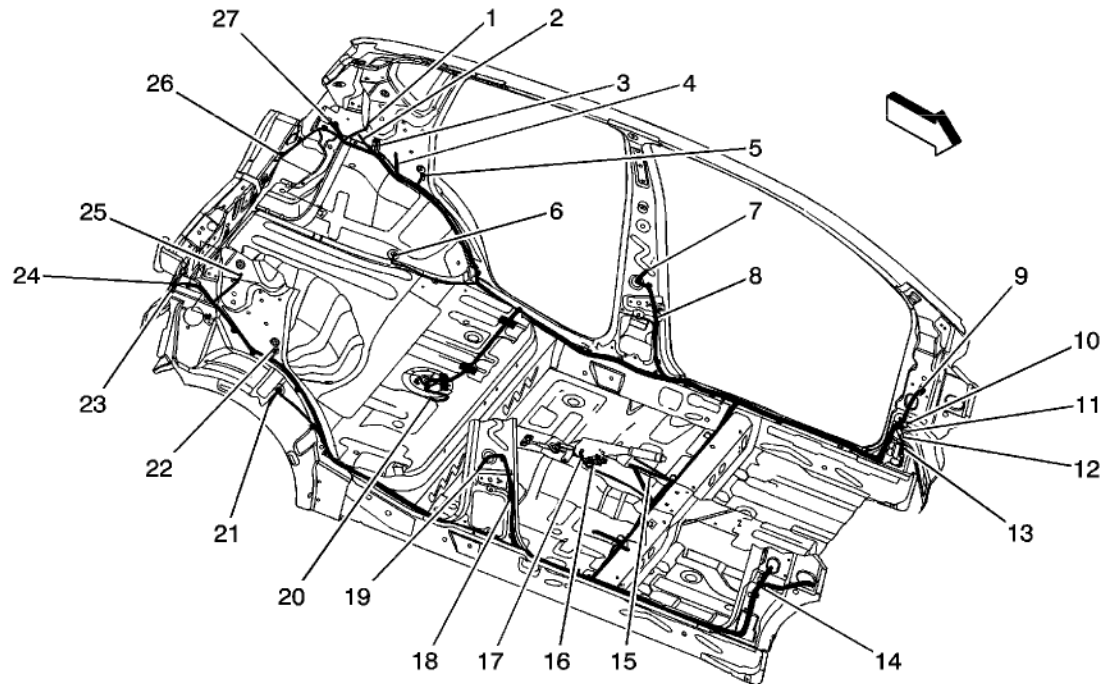


- (1) Speaker - Left Rear
- (2) X402
- (3) X401
- (4) Rear Compartment Lamp
- (5) Door Jamb Switch - Left Rear
- (6) Wheel Speed Sensor (WSS) - Left Rear
- (7) X371
- (8) Door Jamb Switch - Driver
- (9) X351
- (10) X211
- (11) X213
- (12) X212
- (13) X214
- (14) X361
- (15) Seat Belt Switch - Driver
- (16) Park Brake Switch
- (17) Auxiliary Power Outlet
- (18) Door Jamb Switch - Passenger
- (19) X381

© 2010 General Motors Corporation. All rights reserved.


- (20) Fuel Pump and Sender Assembly
- (21) Wheel Speed Sensor - Right Rear
- (22) Door Jamb Switch - Right Rear
- (23) G403
- (24) Tail Lamp - Right
- (25) Speaker - Right Rear
- (26) G401
- (27) Tail Lamp - Left

Roof Harness Routing

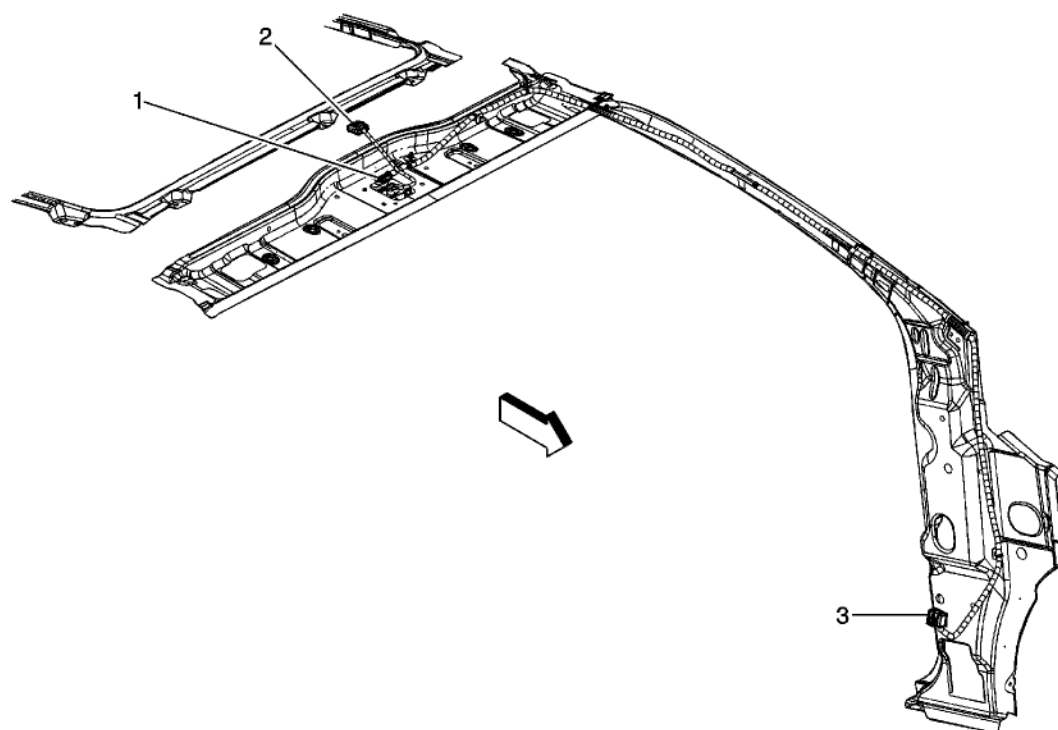


- (1) Dome Lamp (-CF5), Sunroof Switch/Dome Lamp (CF5)
- (2) Sunroof Control Module
- (3) X210

Front Door Harness Routing (Driver Shown, Passenger Similar)

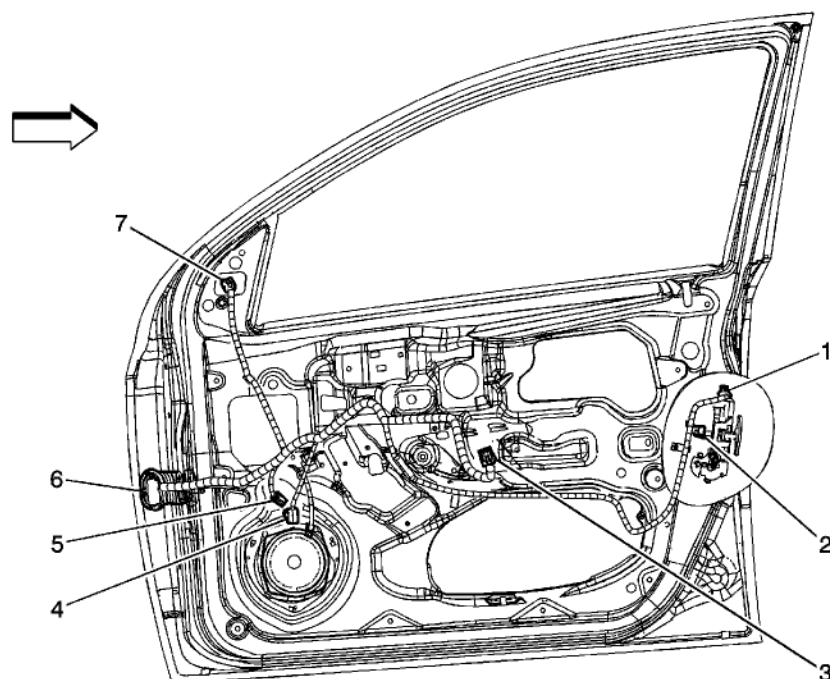


- (1) Door Lock Switch - Driver/Passenger
- (2) Door Lock Actuator - Driver/Passenger
- (3) Window Switch - Driver/Passenger
- (4) Speaker - Left Front/Right Front
- (5) Rear Compartment Lid Release Switch
- (6) X351 (Driver)/X361 (Passenger)
- (7) Outside Rear Mirror - Driver/Passenger

Rear Door (Left Shown, Right Similar)

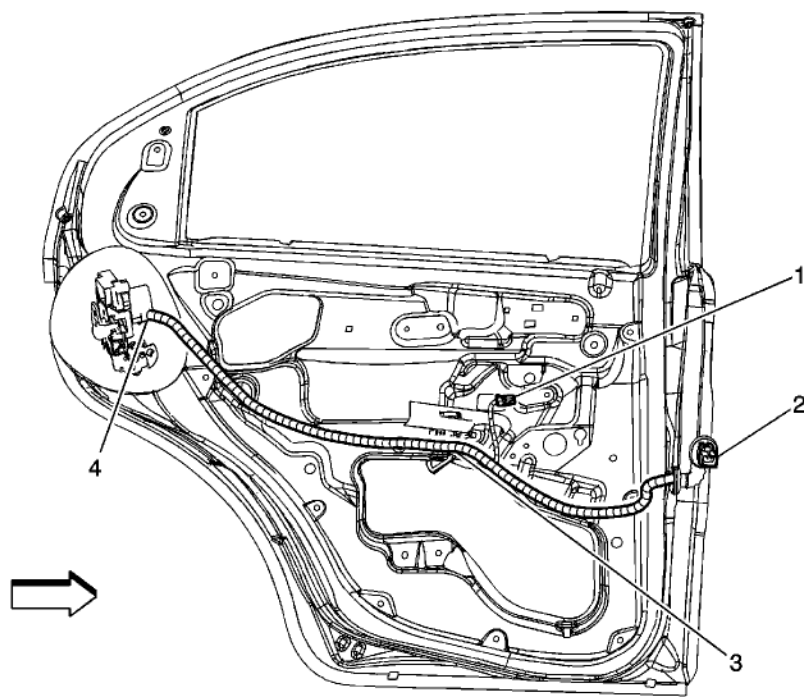


- (1) Window Motor - Left Rear/Right Rear
- (2) X371/X381
- (3) Window Switch - Left Rear/Right Rear
- (4) Door Lock Actuator - Left Rear/Right Rear

Trunk Harness Routing

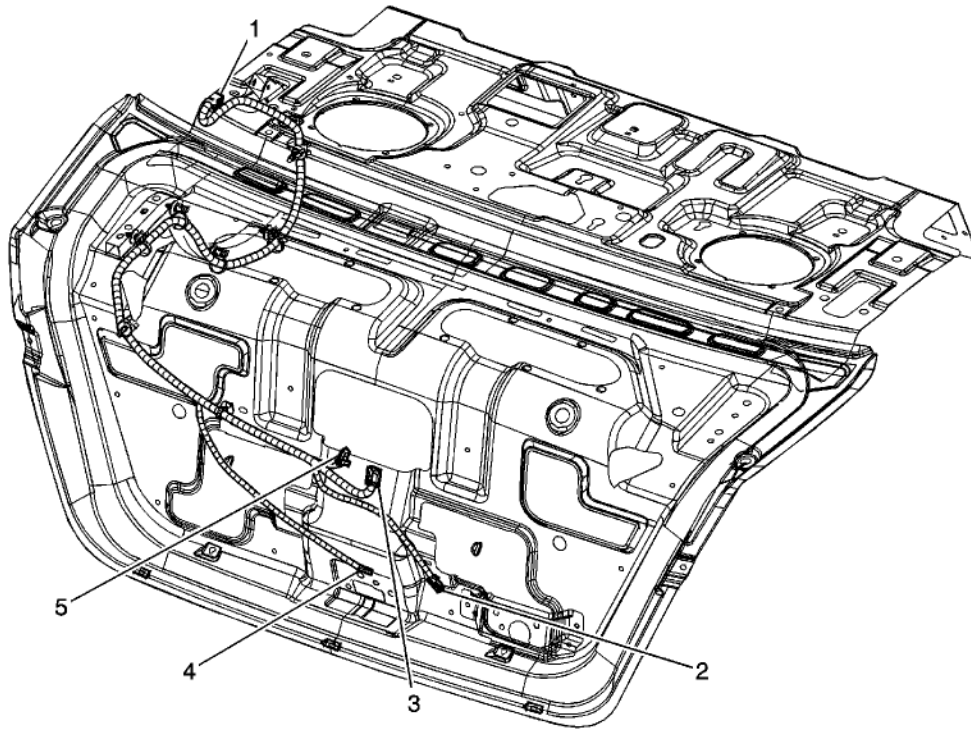


- (1) X402
- (2) Rear Compartment Lid Tamper Switch
- (3) Rear Compartment Lid Release Actuator
- (4) Latch
- (5) License Lamp

Rear Harness Routing

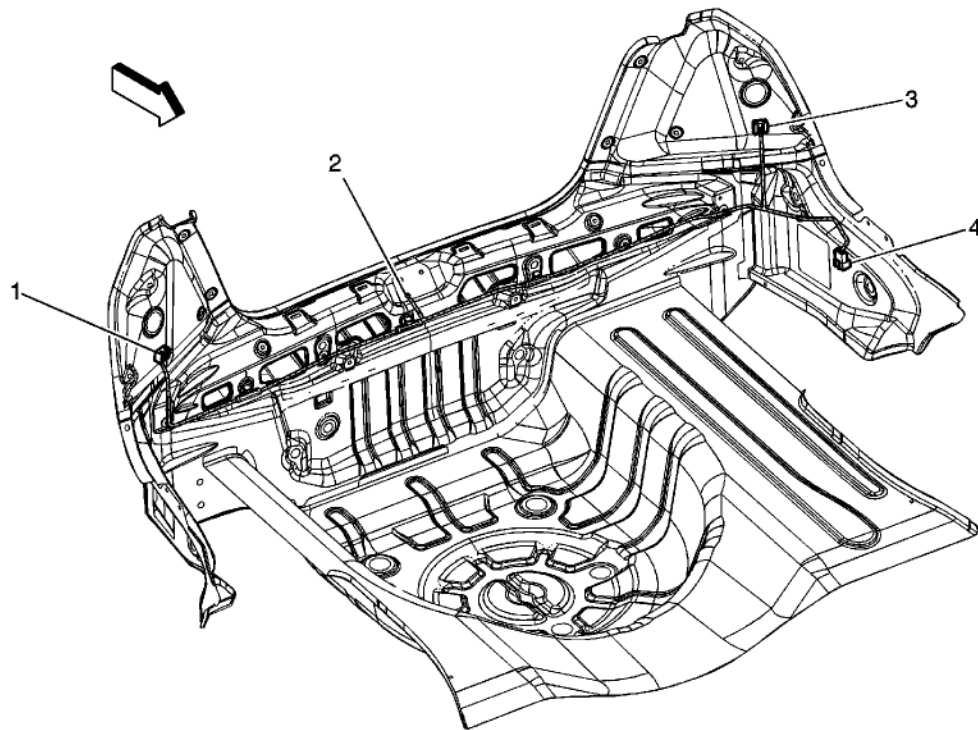

- (1) Tail Lamp - Right
- (2) G402
- (3) Tail Lamp - Left
- (4) X401

Tailgate Harness Routing (Hatchback)

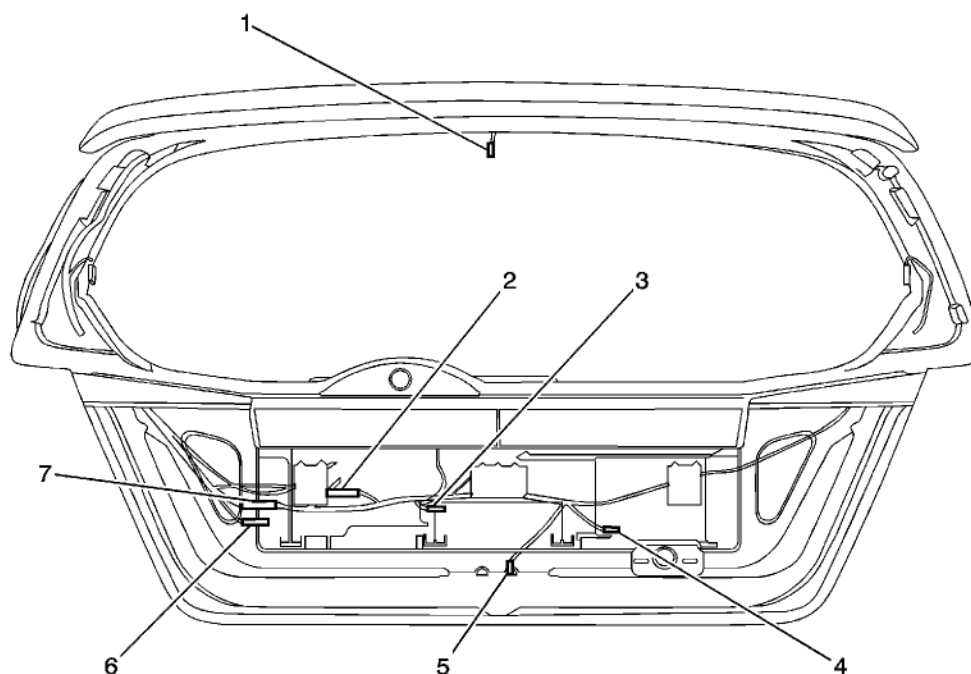

- (1) Center High Mounted Stop Lamp (CHMSL)
- (2) X404
- (3) License Lamp
- (4) Liftgate Tamper Switch
- (5) Liftgate Ajar Switch
- (6) Liftgate Lock Actuator
- (7) X403