

Bolted Exterior Body Panels and Closures

Repair Instructions

cardiagn.com


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Hood Primary Latch Release Cable Replacement

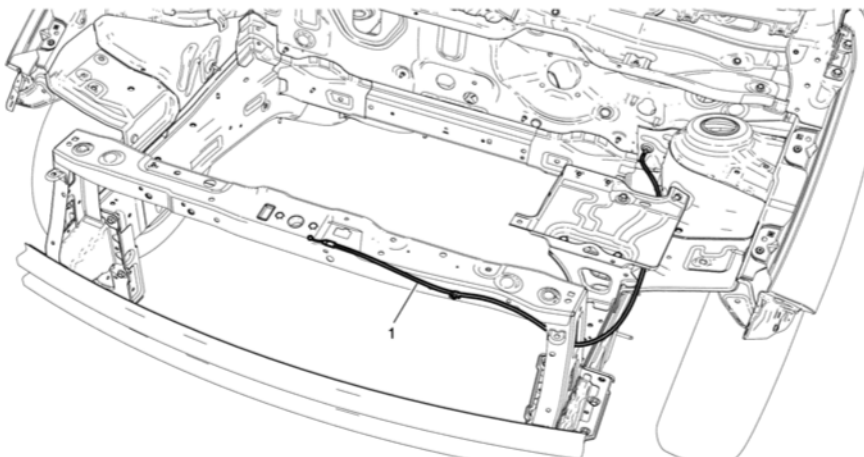

[Click here for full size](#)


Callout	Component Name
	Preliminary Procedures
	1. Remove hood primary latch release cable handle. Refer to Hood Primary Latch Release Cable Handle Replacement .
	2. Remove air cleaner assembly. Refer to Air Cleaner Assembly Replacement .
1	Hood Primary Latch Release Cable Procedure To release the hood primary latch release cable, unhook from hood primary and secondary latch.

Related Part Information

Part Name	Catalog Name	Part Code
Hood Primary Latch Release Cable	CABLE PKG,HOOD PRIM LAT REL	1599Y
Hood Primary Latch Release Cable	CABLE,HOOD PRIM LAT REL	1600A
Hood Primary Latch Release Cable	CABLE,HOOD PRIM LAT REL	1600B

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Rear Side Door Check Replacement

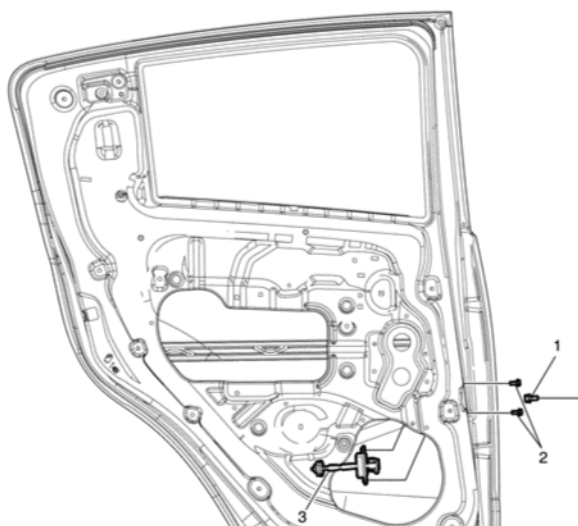



[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove rear side door trim panel. Refer to Rear Side Door Trim Panel Replacement .	
1	Rear Side Door Check Link Bolt Caution: Refer to Fastener Caution. Tip Place the door in the full open position. Tighten 28â€%N-m (21â€%lbâ€%ft)

Callout	Component Name
2	Rear Side Door Check Bolt
	Procedure
	Remove the water deflector.
	Tighten 5.5â€‰N-m (49â€‰lbâ€‰in)
3	Rear Side Door Check

cardiagn.com


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Front Side Door Adjustment

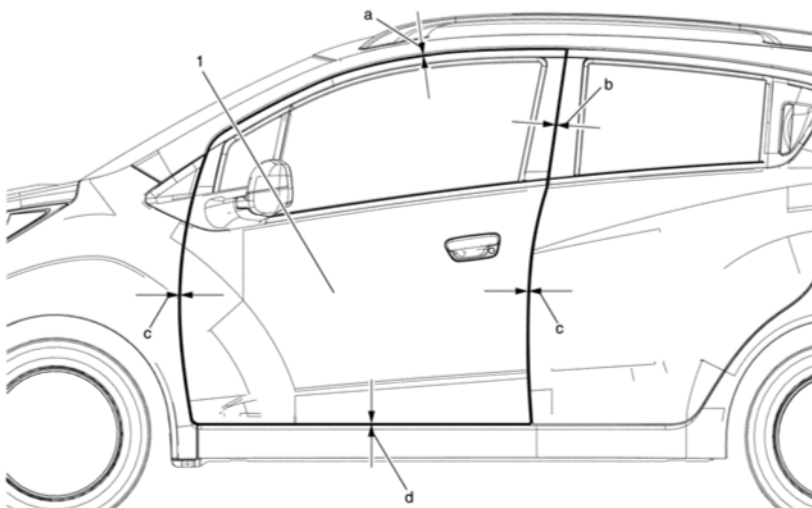

cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the front wheelhouse liner. Refer to Front Wheelhouse Liner Replacement .	


Callout	Component Name
1	Front Side Door to Roof Caution: Refer to Fastener Caution. Procedure - Loosen the 4 front side door hinge bolts to adjust the front side door. - Adjust the front side door in order to obtain an even gap between the front side door and the roof, the rear door, the rocker panel and the front fender and so that the front side door is flush with the roof, the rear door, the rocker panel and the front fender. Adjustment: - Front side door to roof (a) 4.0â€”mmâ€”(0.16â€”inâ€”(0.04â€”in)) - Front side door to rear door (b) 3.5â€”mmâ€”(0.14â€”inâ€”(0.03â€”in)) - Front side door to rocker panel (c) 5.0â€”mmâ€”(0.20â€”inâ€”(0.04â€”in)) - Front side door to front fender (d) 3.5â€”mmâ€”(0.14â€”inâ€”(0.03â€”in)) Tighten 28â€”N-m (21â€”lb-ft)

Related Part Information

Part Name	Catalog Name	Part Code
Front Side Door	DOOR,FRT SI (TEMP)	2416A
Front Side Door	DOOR,FRT SI	0050A
Front Side Door	DOOR KIT,FRT SI	0049Z
Front Side Door	DOOR,FRT SI	0050A

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Front Side Door Replacement

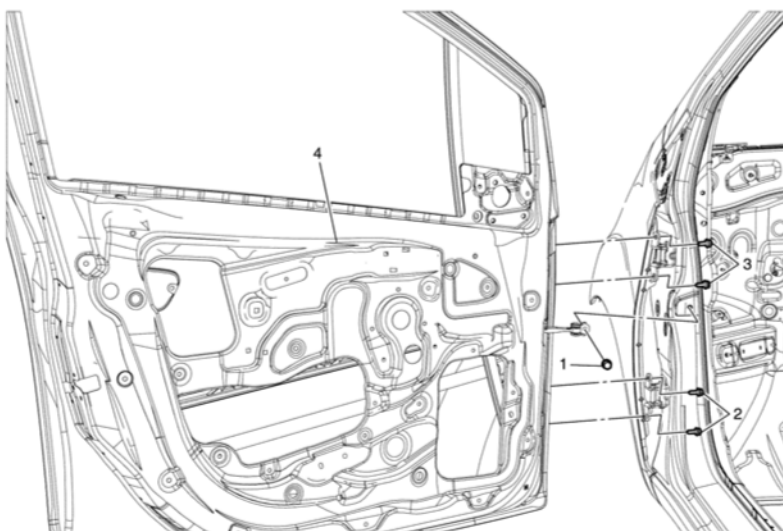



cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the front side door trim panel. Refer to Front Side Door Trim Panel Replacement .	

Callout	Component Name
1	Front Side Door Check Link Bolt Caution: Refer to Fastener Caution. Procedure 1. Remove the water deflector. 2. Disconnect the door electrical connector. 3. Support the door before removing the hinge bolts. 4. With the aid of an assistant, remove the door. Tighten 28â€%N-m (21â€%lbâ€%ft)
2	Front Side Door Lower Hinge Bolt (Qty:â€%2) Tighten 28â€%N-m (21â€%lbâ€%ft)
3	Front Side Door Upper Hinge Bolt (Qty:â€%2) Tighten 28â€%N-m (21â€%lbâ€%ft)
4	Front Side Door Procedure 1. Transfer all of the internal components. 2. Adjust the front side door as needed. Refer to Front Side Door Adjustment.


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Rear Side Door Adjustment

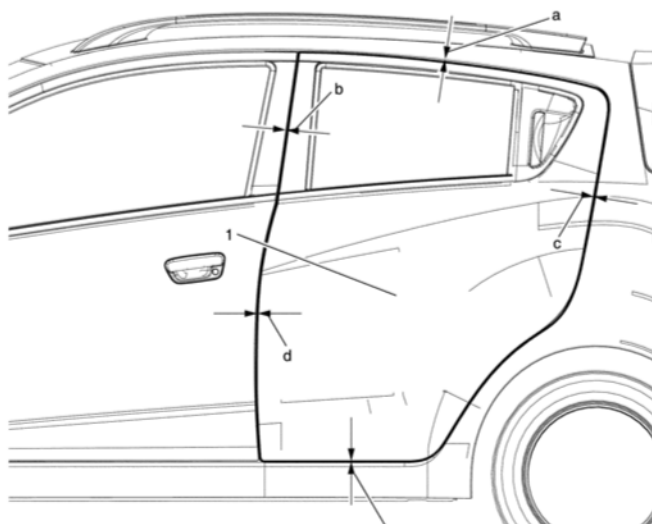



cardiagn.com

[Click here for full size](#)

Callout	Component Name


Callout	Component Name
1	Rear Side Door Caution: Refer to Fastener Caution. Procedure - Loosen the 4 rear door hinge bolts to adjust the rear door. - Adjust the rear door in order to obtain an even gap between the rear door and the roof, the quarter outer panel, the rocker panel and the front side door and so that the rear door is flush with the roof, the quarter outer panel, the rocker panel and the front side door. Adjustment: - Rear side door to roof (a) 4.0â€”mmâ€”(0.16â€”inâ€”(0.04â€”in)) - Rear side door to quarter outer panel (b) 3.5â€”mmâ€”(0.14â€”inâ€”(0.03â€”in)) - Rear side door to rocker panel (c) 5.0â€”mmâ€”(0.20â€”inâ€”(0.04â€”in)) - Rear side door to front side door (d) 3.5â€”mmâ€”(0.14â€”inâ€”(0.03â€”in)) Tighten 28â€”N-m (21â€”lb-ft)

Related Part Information

Part Name	Catalog Name	Part Code
Rear Side Door DOOR,RR SI		1350A
Rear Side Door DOOR KIT,RR SI		2199Z
Rear Side Door DOOR,RR SI		2200A

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Rear Side Door Replacement

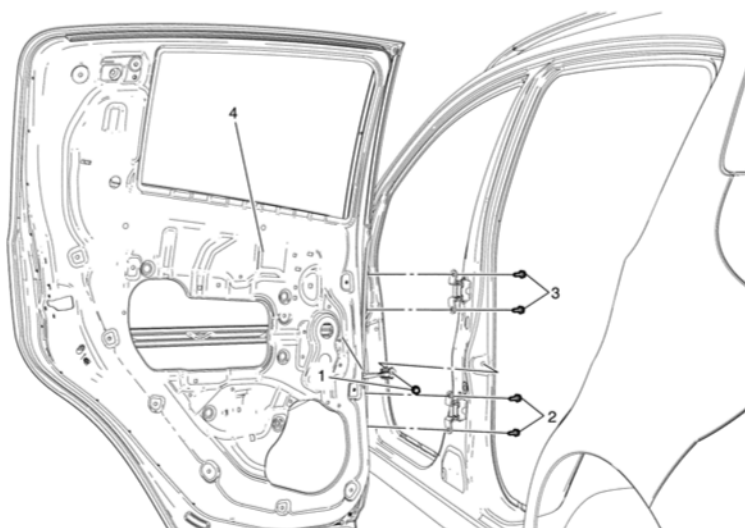



cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the rear side door trim panel. Refer to Rear Side Door Trim Panel Replacement .	

Callout	Component Name
1	Rear Side Door Check Link Bolt Caution: Refer to Fastener Caution. Procedure 1. Remove the water deflector. 2. Disconnect the door electrical connector. 3. Support the door before removing the hinge bolts. 4. With the aid of an assistant, remove the door. Tighten 28â€%N-m (21â€%lbâ€%ft)
2	Rear Side Door Lower Hinge Bolt (Qty:â€%2) Tighten 28â€%N-m (21â€%lbâ€%ft)
3	Rear Side Door Upper Hinge Bolt (Qty:â€%2) Tighten 28â€%N-m (21â€%lbâ€%ft)
4	Rear Side Door Procedure 1. Transfer all of the internal components. 2. Adjust the rear side door as needed. Refer to Rear Side Door Adjustment.

1. BODY REPAIR




2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Front Fender Replacement

cardiagn.com

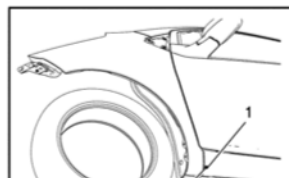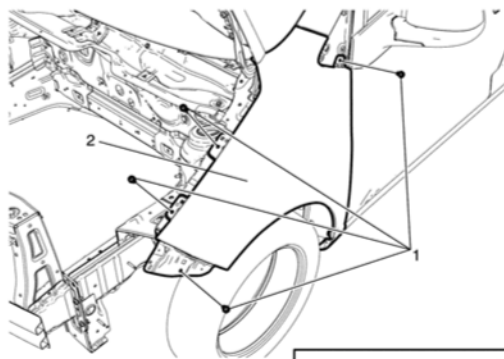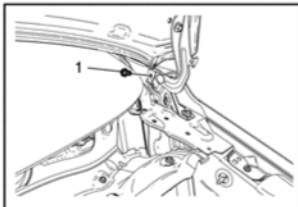



cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
1. Remove the front bumper fascia. Refer to Front Bumper Fascia Replacement .	
2. Remove the headlamp. Refer to Front Headlamp Replacement .	
3. Remove front bumper fascia guide. Refer to Front Bumper Fascia Guide Replacement .	
4. Remove the wheelhouse liner. Refer to Front Wheelhouse Liner Replacement .	
5. Remove the air inlet grille panel. Refer to Air Inlet Grille Panel Replacement .	
1	Front Fender Bolt (Qty: 6) Caution: Refer to Fastener Caution . Tighten 7.5 N·m (66 lb·in)

Callout	Component Name
2	Front Fender

Related Part Information

Part Name	Catalog Name	Part Code
Front Fender	FENDER KIT,FRT	0049A
Front Fender	FENDER,FRT	0050A
Front Fender	FENDER KIT,FRT	0055A
Front Fender	FENDER,FRT	0100A
Front Fender	FENDER,FRT (BLANK)	0100D

cardiagn.com


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Liftgate Adjustment

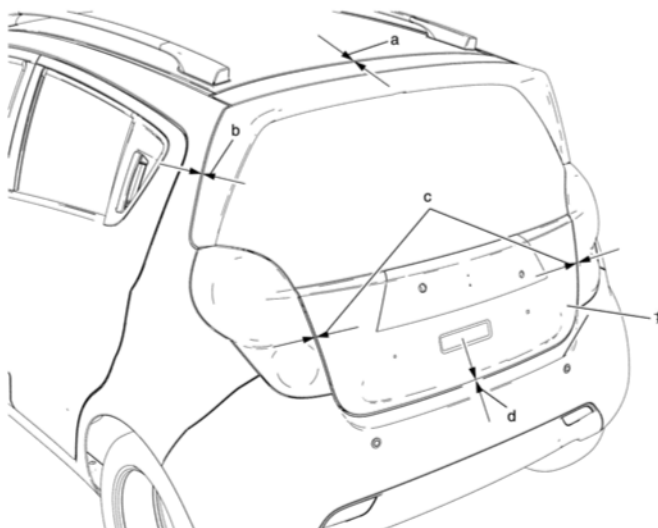



cardiagn.com

[Click here for full size](#)

Callout	Component Name

Callout	Component Name
1	Liftgate Caution: Refer to Fastener Caution. Procedure - Loosen the 4 liftgate hinge bolts to adjust the liftgate. - Adjust the liftgate in order to obtain an even gap between the liftgate and the roof, the quarter outer panel, the tail lamp and rear bumper fascia and so that the liftgate is flush with the roof, the quarter outer panel, the tail lamp and rear bumper fascia. Adjustment: - Liftgate to roof (a) 5.5â€”mmâ€”(0.22â€”in) (0.04â€”in) - Liftgate to quarter outer panel (b) 4.0â€”mmâ€”(0.16â€”in) (0.04â€”in) - Liftgate to tail lamp (c) 3.5â€”mmâ€”(0.14â€”in) (0.06â€”in) - Liftgate to rear bumper fascia (d) 5.1â€”mmâ€”(0.20â€”in) (0.04â€”in) Tighten 28â€”N-m (15â€”lb-ft)

Related Part Information

Part Name	Catalog Name	Part Code
Lift Gate	GATE,LIFT	4000A
Lift Gate	GATE,LIFT	4000B
Lift Gate	GATE,LIFT	0400A
Lift Gate	GATE,LIFT	0400B


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Liftgate Replacement

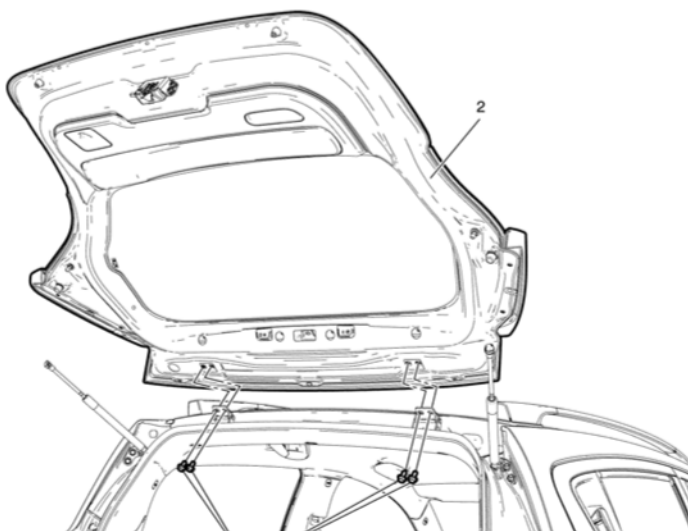



cardiagn.com


[Click here for full size](#)

Callout	Component Name
Warning: When a lift gate hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury. Preliminary Procedure Release the liftgate strut from the liftgate. Refer to Liftgate Strut Replacement.	

Callout	Component Name
1	Liftgate Hinge Bolt (Qty: 4) Caution: Refer to Fastener Caution. Procedure 1. Disconnect the electrical connector. 2. Pull the liftgate wiring grommet, the connectors, and the rear washer hose out of the body. 3. Mark the location of the liftgate hinges to the body with a grease pencil. Tighten 20 N·m (15 lb·ft)
2	Liftgate Procedure 1. Transfer components as necessary. 2. Adjust liftgate as needed. Refer to Liftgate Adjustment.

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Front Side Door Wiring Harness Replacement

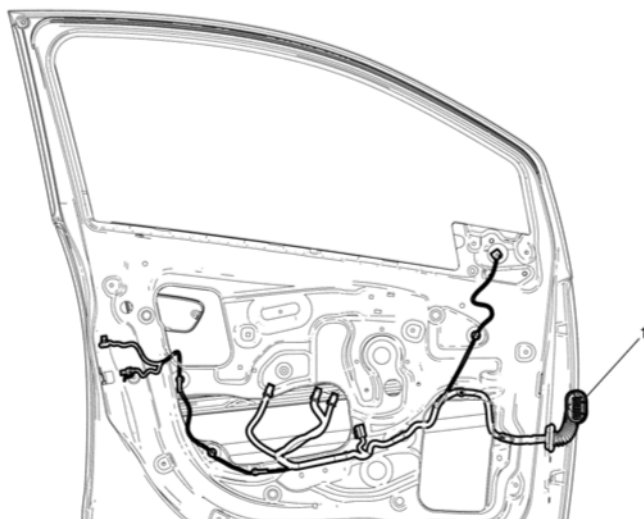



cardiagn.com


[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the front side door inner panel trim. Refer to Front Side Door Trim Panel Replacement .	

Callout	Component Name
1	Front Side Door Wiring Harness Warning: Unless directed otherwise, the ignition must be OFF with the key removed, and all electrical loads must be OFF before servicing any electrical component. Disconnect the negative battery cable to prevent an electrical spark should a tool or equipment come in contact with an exposed electrical terminal. Failure to follow these precautions may result in personal injury and/or damage to the vehicle or its components. For Vehicles equipped with OnStar® (UE1) with Back Up Battery: The Back Up Battery is a redundant power supply to allow limited OnStar® functionality in the event of a main vehicle battery power disruption to the VCIM (OnStar® module). Do not disconnect the main vehicle battery or remove the OnStar® fuse with the ignition key in any position other than OFF. Retained accessory power should be allowed to time out or be disabled (simply opening the driver door should disable retained accessory power) before disconnecting power. Disconnecting power to the OnStar® module in any way while the ignition is On or with retained accessory power activated may cause activation of the OnStar® Back-Up Battery system and will discharge and permanently damage the back-up battery. Once the Back-Up Battery is activated it will stay on until it has completely discharged. The back-up battery is not rechargeable and once activated the back-up battery must be replaced. Procedure 1. Disconnect the battery. 2. Remove the water deflector. 3. Disconnect electrical connectors as needed.

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Liftgate Wiring Harness Replacement

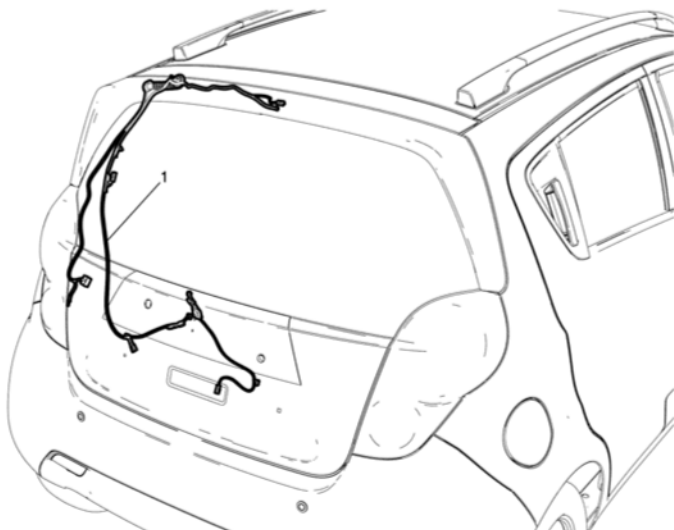



[Click here for full size](#)

Callout	Component Name
Preliminary Procedure 1. Remove the liftgate trim panel. Refer to Liftgate Trim Panel Replacement. 2. Remove the rear window. Refer to Rear Window Replacement.	


Callout	Component Name
1	Liftgate Wiring Harness Warning: Unless directed otherwise, the ignition must be OFF with the key removed, and all electrical loads must be OFF before servicing any electrical component. Disconnect the negative battery cable to prevent an electrical spark should a tool or equipment come in contact with an exposed electrical terminal. Failure to follow these precautions may result in personal injury and/or damage to the vehicle or its components. For Vehicles equipped with OnStar® (UE1) with Back Up Battery: The Back Up Battery is a redundant power supply to allow limited OnStar® functionality in the event of a main vehicle battery power disruption to the VCIM (OnStar® module). Do not disconnect the main vehicle battery or remove the OnStar® fuse with the ignition key in any position other than OFF. Retained accessory power should be allowed to time out or be disabled (simply opening the driver door should disable retained accessory power) before disconnecting power. Disconnecting power to the OnStar® module in any way while the ignition is On or with retained accessory power activated may cause activation of the OnStar® Back-Up Battery system and will discharge and permanently damage the back-up battery. Once the Back-Up Battery is activated it will stay on until it has completely discharged. The back-up battery is not rechargeable and once activated the back-up battery must be replaced. Procedure 1. Disconnect the battery. 2. Disconnect electrical connectors as needed.

Related Part Information

Part Name	Catalog Name	Part Code
Liftgate Wiring Harness	HARNESS,L/GATE WRG 6470D	

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Liftgate Wiring Harness Replacement

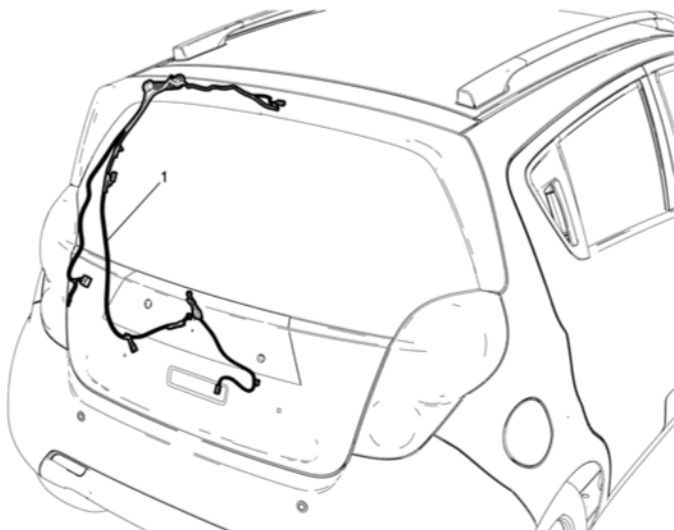



[Click here for full size](#)

Callout	Component Name
Preliminary Procedure 1. Remove the liftgate trim panel. Refer to Liftgate Trim Panel Replacement. 2. Remove the rear window. Refer to Rear Window Replacement.	

Callout	Component Name
1	Liftgate Wiring Harness Warning: Unless directed otherwise, the ignition must be OFF with the key removed, and all electrical loads must be OFF before servicing any electrical component. Disconnect the negative battery cable to prevent an electrical spark should a tool or equipment come in contact with an exposed electrical terminal. Failure to follow these precautions may result in personal injury and/or damage to the vehicle or its components. For Vehicles equipped with OnStar® (UE1) with Back Up Battery: The Back Up Battery is a redundant power supply to allow limited OnStar® functionality in the event of a main vehicle battery power disruption to the VCIM (OnStar® module). Do not disconnect the main vehicle battery or remove the OnStar® fuse with the ignition key in any position other than OFF. Retained accessory power should be allowed to time out or be disabled (simply opening the driver door should disable retained accessory power) before disconnecting power. Disconnecting power to the OnStar® module in any way while the ignition is On or with retained accessory power activated may cause activation of the OnStar® Back-Up Battery system and will discharge and permanently damage the back-up battery. Once the Back-Up Battery is activated it will stay on until it has completely discharged. The back-up battery is not rechargeable and once activated the back-up battery must be replaced. Procedure 1. Disconnect the battery. 2. Disconnect electrical connectors as needed.

Related Part Information

Part Name	Catalog Name	Part Code
Liftgate Wiring Harness	HARNESS,L/GATE WRG	6470D


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Hood Primary Latch Release Cable Handle Replacement

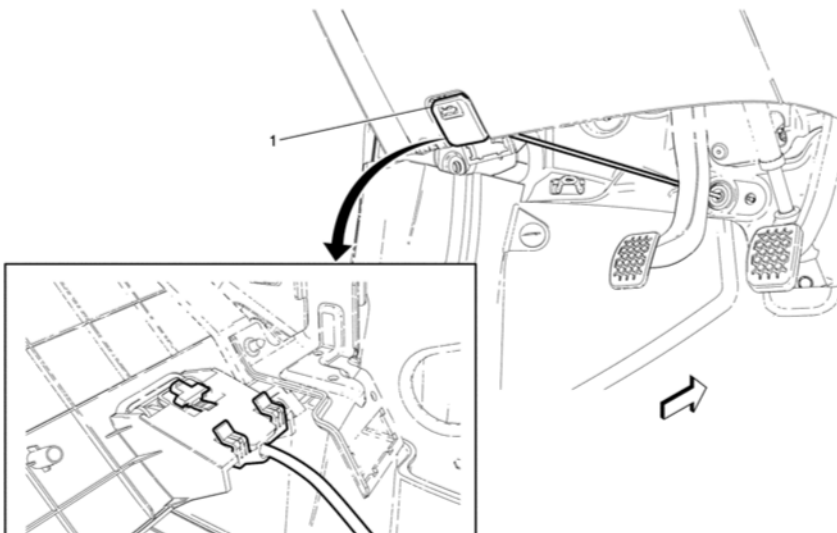



cardiagn.com

[Click here for full size](#)

Callout	Component Name
1	Hood Primary Latch Release Cable Handle Procedure 1. Pull down the hood primary latch release cable handle. 2. To release the handle, pull down the cable and unhook from the handle.


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Front Side Door Upper Hinge and Lower Hinge Replacement

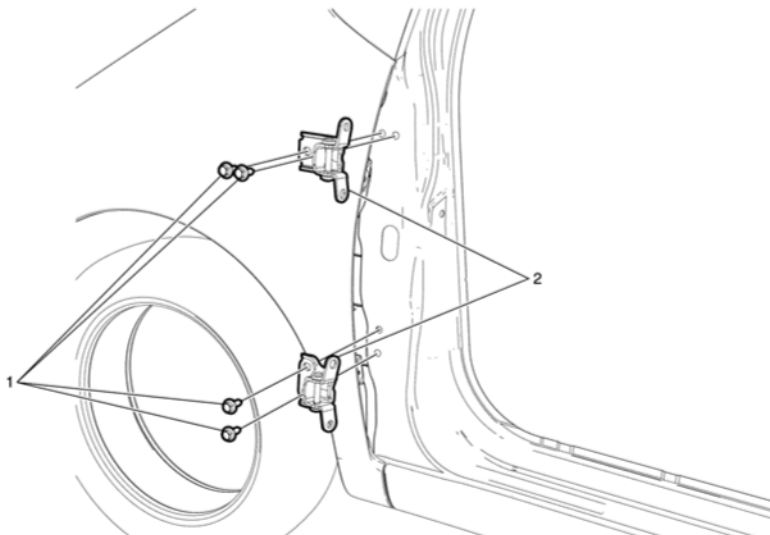



cardiagn.com

[Click here for full size](#)

Callout	Component Name
	Preliminary Procedures 1. Remove the front wheelhouse liner. Refer to Front Wheelhouse Liner Replacement. 2. Remove the front fender insulator. Refer to Front Fender Insulator Replacement. 3. Remove the front side door. Refer to Front Side Door Replacement.
1	Front Side Door Hinge Bolt (Qty: 4) Caution: Refer to Fastener Caution. Tighten 30 N-m (22 lb-ft)

Callout	Component Name
2	Front Side Door Hinge
	Procedure
	Adjust front side door as needed. Refer to Front Side Door Adjustment .

Related Part Information

Part Name	Catalog Name	Part Code
Front Side Door Hinge	HINGE,FRT S/D	2350A
Front Side Door Hinge	HINGE,FRT S/D	2400A
Front Side Door Hinge	HINGE,FRT S/D(BODY SI)	2401A
Front Side Door Hinge	HINGE,FRT S/D(BODY SI)	2401B
Front Side Door Hinge	HINGE KIT,FRT S/D(DR SI)	2402Z
Front Side Door Hinge	HINGE,FRT S/D(DR SI)	2403B
Front Side Door Lower Hinge	HINGE,FRT S/D LWR	2405A
Front Side Door Lower Hinge	HINGE KIT,FRT S/D LWR(DR SI)	2405Y
Front Side Door Lower Hinge	HINGE KIT,FRT S/D LWR(BODY SI)	2405Z
Front Side Door Lower Hinge	HINGE,FRT S/D LWR(BODY SI)	2406A
Front Side Door Lower Hinge	HINGE,FRT S/D LWR(BODY SI)	2406B
Front Side Door Hinge	HINGE KIT,FRT S/D(DR SI)	2406X
Front Side Door Lower Hinge	HINGE KIT,FRT S/D LWR(DR SI)	2406Y
Front Side Door Lower Hinge	HINGE,FRT S/D LWR(DR SI)	2406Z
Front Side Door Lower Hinge	HINGE,FRT S/D LWR(DR SI)	2407A
Front Side Door Upper Hinge	HINGE,FRT S/D UPR	2425A
Front Side Door Upper Hinge	HINGE KIT,FRT S/D UPR(BODY SI)	2425Z
Front Side Door Upper Hinge	HINGE,FRT S/D UPR(BODY SI)	2426A
Front Side Door Upper Hinge	HINGE,FRT S/D UPR(BODY SI)	2426B
Front Side Door Upper Hinge	HINGE,FRT S/D UPR(DR SI)	2426Z
Front Side Door Upper Hinge	HINGE,FRT S/D UPR(DR SI)	2427A
Front Side Door Upper Hinge	HINGE KIT,FRT S/D UPR(DR SI)	2427X
Front Side Door Upper Hinge	HINGE KIT,FRT S/D UPR(DR SI)	SB714
Front Side Door Hinge	HINGE KIT,FRT S/D	0099Z
Front Side Door Hinge	HINGE,FRT S/D	0100A
Front Side Door Hinge	HINGE,FRT S/D	0100B
Front Side Door Hinge	HINGE KIT,FRT S/D(DR SI)	0139A
Front Side Door Hinge	HINGE KIT,FRT S/D(DR SI)	0139B
Front Side Door Hinge	HINGE,FRT S/D(DR SI)	0140A
Front Side Door Hinge	HINGE,FRT S/D (DR SI)	0140B
Front Side Door Hinge	HINGE KIT,FRT S/D(BODY SI)	0169Z
Front Side Door Hinge	HINGE,FRT S/D(BODY SI)	0170A
Front Side Door Hinge	HINGE,FRT S/D (BODY SI)	0170B
Front Side Door Lower Hinge	HINGE,FRT S/D LWR	0200A
Front Side Door Lower Hinge	HINGE KIT,FRT S/D LWR(DR SI)	0240A
Front Side Door Lower Hinge	HINGE KIT,FRT S/D LWR(DR SI)	0240B
Front Side Door Lower Hinge	HINGE,FRT S/D LWR (DR SI)	0241A
Front Side Door Lower Hinge	HINGE,FRT S/D LWR (DR SI)	0241B
Front Side Door Lower Hinge	HINGE,FRT S/D LWR(BODY SI)	0274A
Front Side Door Lower Hinge	HINGE,FRT S/D LWR (BODY SI)	0274B
Front Side Door Lower Hinge	HINGE KIT,FRT S/D LWR(BODY SI)	0275B
Front Side Door Upper Hinge	HINGE,FRT S/D UPR	0350A
Front Side Door Upper Hinge	HINGE KIT,FRT S/D UPR(DR SI)	0424A
Front Side Door Upper Hinge	HINGE KIT,FRT S/D UPR(DR SI)	0424B
Front Side Door Upper Hinge	HINGE,FRT S/D UPR (DR SI)	0425A

Part Name	Catalog Name	Part Code
Front Side Door Upper Hinge	HINGE,FRT S/D UPR (DR SI)	0425B
Front Side Door Upper Hinge	HINGE KIT,FRT S/D UPR(BODY SI)	0464A
Front Side Door Upper Hinge	HINGE,FRT S/D UPR(BODY SI)	0465A
Front Side Door Upper Hinge	HINGE,FRT S/D UPR (BODY SI)	0465B

cardiagn.com


1. BODY REPAIR

 
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Hood Hinge Replacement

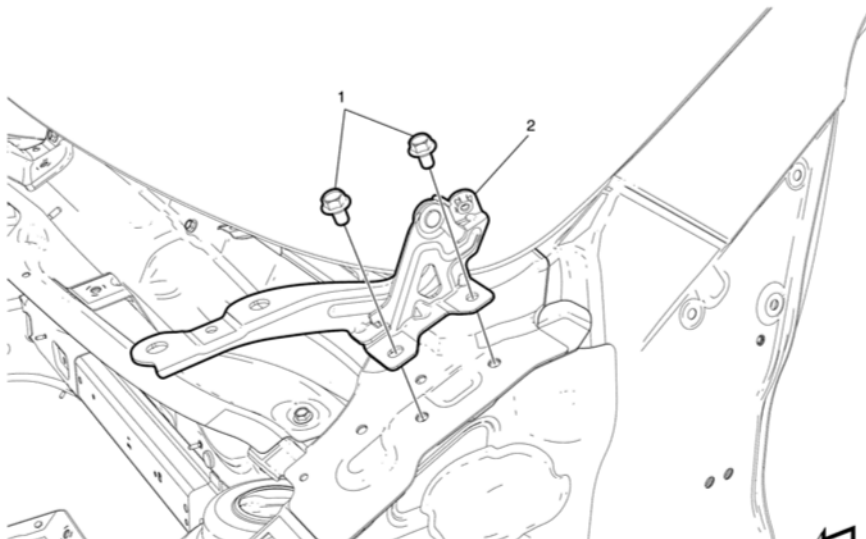



cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the hood. Refer to Hood Replacement .	
1	Hood Hinge Bolt (Qty: 2) Caution: Refer to Fastener Caution . Tighten 18 N-m (13 lb-ft)
2	Hood Hinge


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Liftgate Hinge Replacement

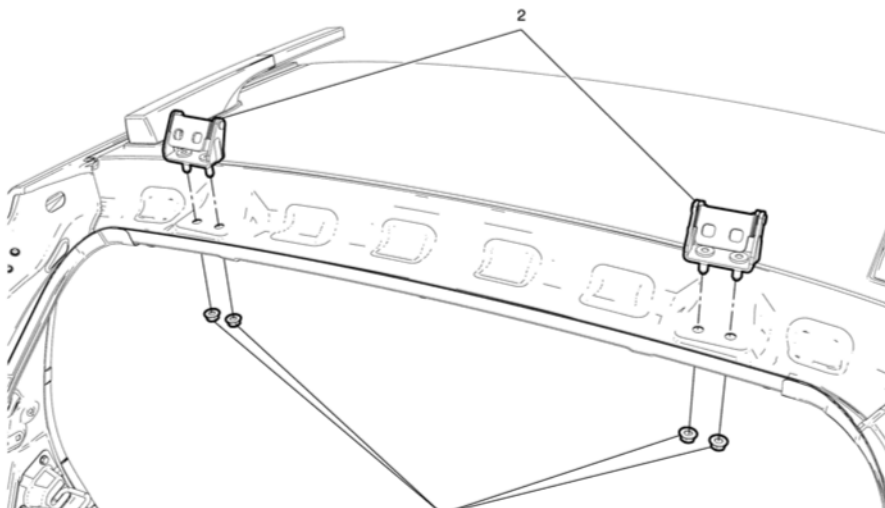



1



[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the liftgate. Refer to Liftgate Replacement .	
1	Liftgate Hinge Nut (Qty: 4) Caution: Refer to Fastener Caution . Tighten 22 N·m (16 lb·ft)
2	Liftgate Hinge

Related Part Information

Part Name	Catalog Name
Liftgate Hinge	HINGE,L/GATE


Part Code
6573A

Part Name	Catalog Name	Part Code
Liftgate Hinge	HINGE,L/GATE(BODY SI)	6575A
Liftgate Hinge	HINGE,L/GATE(BODY SI)	6575B
Liftgate Hinge	HINGE,L/GATE(GATE SI)	6579A
Liftgate Hinge	HINGE,L/GATE(GATE SI)	6579B
Liftgate Hinge	HINGE,L/GATE	1130A
Liftgate Hinge	HINGE KIT,L/GATE (BODY SI & L/GATE SI)	1149Y
Liftgate Hinge	HINGE KIT,L/GATE (BODY SI)	1149Z
Liftgate Hinge	HINGE,L/GATE (BODY SI)	1150A
Liftgate Hinge	HINGE,L/GATE (BODY SI)	1150B
Liftgate Hinge	HINGE,L/GATE (L/GATE SI)	1160A
Liftgate Hinge	HINGE,L/GATE(L/GATE SI)	1160B

cardiagn.com

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Rear Compartment Lid Hinge Replacement

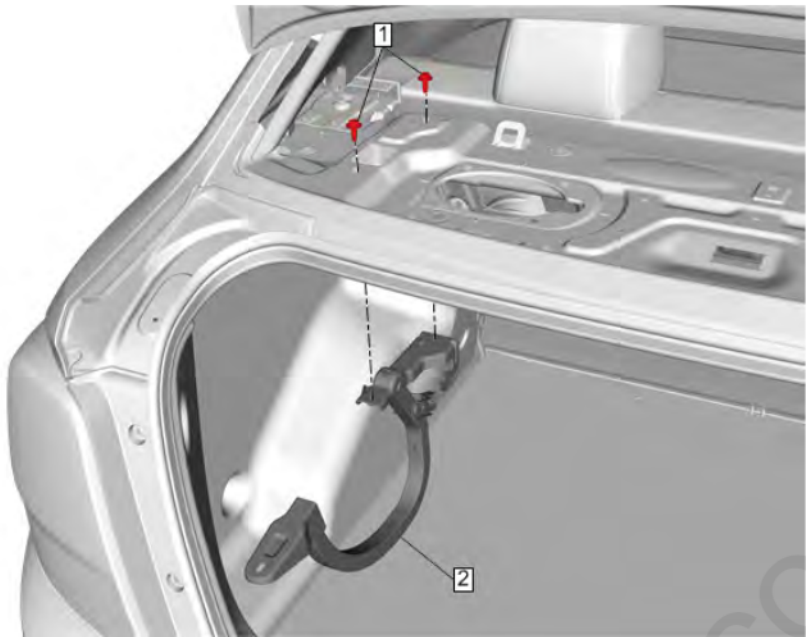

[Click here for full size](#)

Callout	Component Name
Warning: When a rear compartment lid hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury. Preliminary Procedures Rear Compartment Lid Replacement. Rear Window Panel Trim Replacement. Rear Compartment Lid Hinge Torque Rod Replacement.	
1	Rear Compartment Lid Hinge Bolt [2>x] Caution: Refer to Fastener Caution Tighten 9>N-m (80 lb in)
2	Rear Compartment Lid Hinge Procedure Rear Compartment Lid >> Adjust - Rear Compartment Lid Adjustment

Related Part Information

Part Name	Catalog Name	Part Code
Rear Compartment Lid Hinge	HINGE,R/CMPT LID	5950A
Rear Compartment Lid Hinge	HINGE,R/CMPT LID	5950B
Rear Compartment Lid Hinge	HINGE,R/CMPT LID(BODY SI)	5960X

Part Name	Catalog Name	Part Code
Rear Compartment Lid Hinge	HINGE,R/CMPT LID(LID SI)	5970X
Rear Compartment Lid Hinge	HINGE KIT,R/CMPT LID	0799Z
Rear Compartment Lid Hinge	HINGE,R/CMPT LID	0800A
Rear Compartment Lid Hinge	HINGE,R/CMPT LID	0800B
Rear Compartment Lid Hinge	HINGE,R/CMPT LID(BODY SI)	0830B
Rear Compartment Lid Hinge	HINGE,R/CMPT LID(LID SI)	0835B

cardiagn.com


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Rear Side Door Upper Hinge and Lower Hinge Replacement

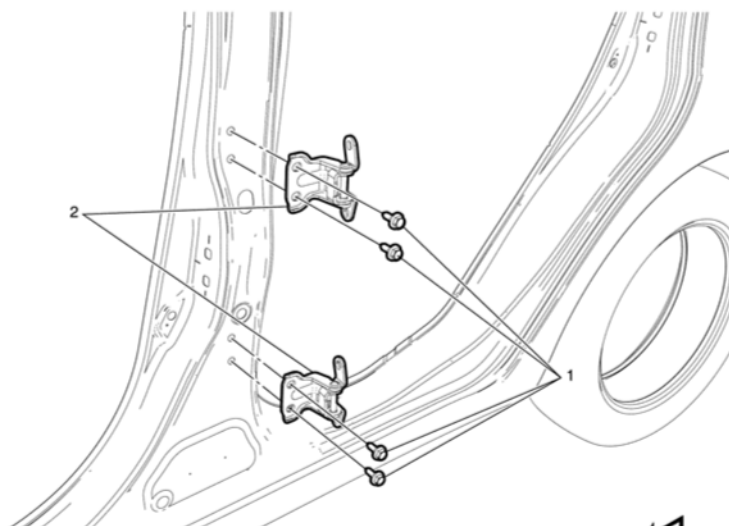



cardiagn.com

[Click here for full size](#)


Callout	Component Name
Preliminary Procedure	
Remove the rear side door. Refer to Rear Side Door Replacement .	
1	Rear Side Door Hinge Bolt (Qty: 4) Caution: Refer to Fastener Caution. Tighten 30 N-m (22 lb-ft)
2	Rear Side Door Hinge Procedure Adjust rear side door as needed. Refer to Rear Side Door Adjustment.

Related Part Information

Part Name	Catalog Name	Part Code
Rear Side Door Hinge	HINGE KIT,RR S/D(BODY SI)	2449Z
Rear Side Door Hinge	HINGE,RR S/D	2450A
Rear Side Door Hinge	HINGE,RR S/D(BODY SI)	2450B
Rear Side Door Hinge	HINGE,RR S/D(DR SI)	2450C
Rear Side Door Lower Hinge	HINGE,RR S/D LWR	2452A
Rear Side Door Lower Hinge	HINGE KIT,RR S/D LWR(BODY SI)	2452Y
Rear Side Door Lower Hinge	HINGE,RR S/D LWR(BODY SI)	2453A
Rear Side Door Lower Hinge	HINGE,RR S/D LWR(BODY SI)	2453B
Rear Side Door Lower Hinge	HINGE KIT,RR S/D LWR(DR SI)	2453X
Rear Side Door Lower Hinge	HINGE,RR S/D LWR(DR SI)	2454A
Rear Side Door Lower Hinge	HINGE,RR S/D LWR(DR SI)	2454B
Rear Side Door Upper Hinge	HINGE,RR S/D UPR	2460A
Rear Side Door Upper Hinge	HINGE KIT,RR S/D UPR(BODY SI)	2460Y
Rear Side Door Upper Hinge	HINGE,RR S/D UPR(BODY SI)	2461A
Rear Side Door Upper Hinge	HINGE,RR S/D UPR(BODY SI)	2461B
Rear Side Door Hinge	HINGE KIT,RR S/D(DR SI)	2461V
Rear Side Door Hinge	HINGE KIT,RR S/D(DR SI)	2461W
Rear Side Door Upper Hinge	HINGE KIT,RR S/D UPR(DR SI)	2461X
Rear Side Door Upper Hinge	HINGE,RR S/D UPR(DR SI)	2462A
Rear Side Door Upper Hinge	HINGE,RR S/D UPR(DR SI)	2462B
Rear Side Door Hinge	HINGE KIT,RR S/D	4874Y
Rear Side Door Hinge	HINGE KIT,RR S/D(BODY SI)	4874Z
Rear Side Door Hinge	HINGE,RR S/D	4875A
Rear Side Door Hinge	HINGE,RR S/D (BODY SI)	4875B
Rear Side Door Hinge	HINGE,RR S/D(BODY SI)	4990A
Rear Side Door Hinge	HINGE,RR S/D(DR SI)	4994Y
Rear Side Door Hinge	HINGE,RR S/D(DR SI)	4995A
Rear Side Door Hinge	HINGE,RR S/D (DR SI)	4995B
Rear Side Door Lower Hinge	HINGE,RR S/D LWR	5065A
Rear Side Door Lower Hinge	HINGE KIT,RR S/D LWR (DR SI)	5079Z
Rear Side Door Lower Hinge	HINGE,RR S/D LWR (DR SI)	5080A
Rear Side Door Lower Hinge	HINGE,RR S/D LWR (DR SI)	5080B
Rear Side Door Lower Hinge	HINGE KIT,RR S/D LWR (BODY SI)	5101Z
Rear Side Door Lower Hinge	HINGE,RR S/D LWR(BODY SI)	5102A
Rear Side Door Lower Hinge	HINGE,RR S/D LWR (BODY SI)	5102B
Rear Side Door Upper Hinge	HINGE,RR S/D UPR	5125A
Rear Side Door Upper Hinge	HINGE KIT,RR S/D UPR (DR SI)	5154Z
Rear Side Door Upper Hinge	HINGE,RR S/D UPR (DR SI)	5155A
Rear Side Door Upper Hinge	HINGE,RR S/D UPR(DR SI)	5155B
Rear Side Door Upper Hinge	HINGE KIT,RR S/D UPR (BODY SI)	5189Z
Rear Side Door Upper Hinge	HINGE,RR S/D UPR(BODY SI)	5190A
Rear Side Door Upper Hinge	HINGE,RR S/D UPR (BODY SI)	5190B

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Hood Adjustment (PMC)

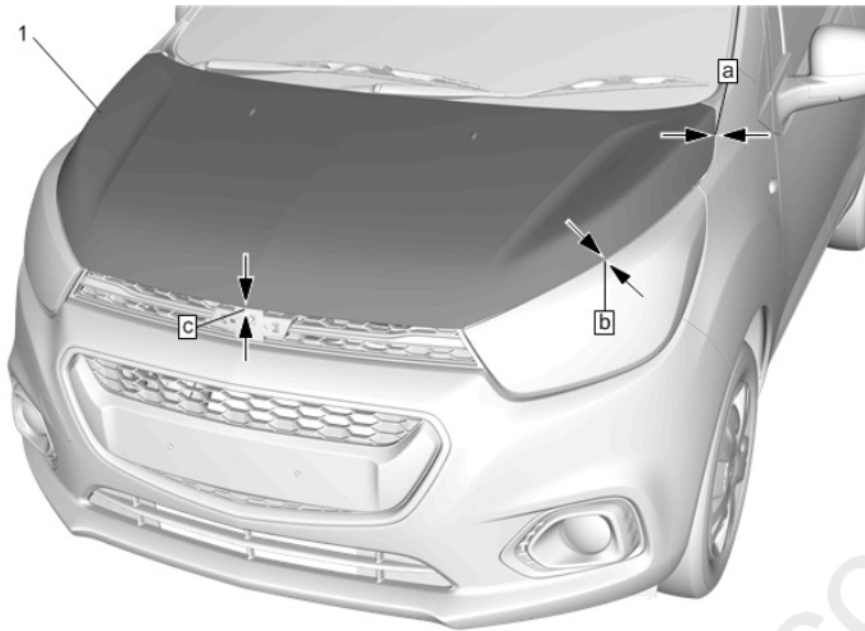

[Click here for full size](#)

Callout	Component Name
1	Hood Caution : Fastener Caution - Loosen the 4% hood hinge bolts. - Adjust the hood in order to obtain an even gap on both sides between the hood and the fenders, the headlamps and the front bumper fascia and so that the hood is flush with both fenders on the front edge, the front bumper fascia and the headlamps. Adjustment: - Hood to front fender (a) $3.5 \text{ mm} \pm 0.75 \text{ mm} (0.12 \text{ in} \pm 0.03 \text{ in})$ - Hood to headlamp (b) $3.5 \text{ mm} \pm 1.0 \text{ mm} (0.12 \text{ in} \pm 0.04 \text{ in})$ - Hood to front bumper fascia (c) $5 \text{ mm} \pm 1 \text{ mm} (0.20 \text{ in} \pm 0.04 \text{ in})$ Tighten 18N-m (13 lb ft)


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Hood Adjustment

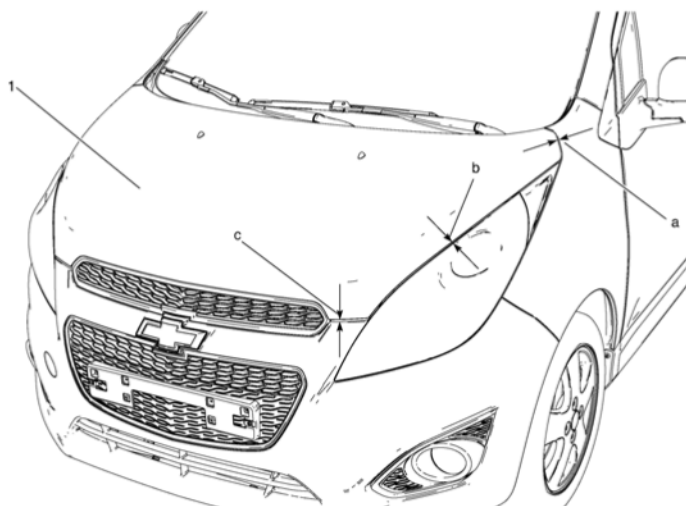



cardiagn.com

[Click here for full size](#)

Callout	Component Name


Callout	Component Name
1	Hood Caution: Refer to Fastener Caution. Procedure - Loosen the 4 hood hinge nuts. - Adjust the hood in order to obtain an even gap on both sides between the hood and the fenders, the headlamps and the front bumper fascia and so that the hood is flush with both fenders on the front edge, the front bumper fascia and the headlamps. Adjustment: - Hood to front fender (a) $3.0 \pm 0.75 \text{ mm}$ ($0.12 \pm 0.03 \text{ in}$) - Hood to headlamp (b) $3.0 \pm 1.0 \text{ mm}$ ($0.12 \pm 0.04 \text{ in}$) - Hood to front bumper fascia (c) $5.0 \pm 1.0 \text{ mm}$ ($0.20 \pm 0.04 \text{ in}$) Tighten 18 N-m (13 lb-ft)

Related Part Information

Part Name	Catalog Name	Part Code
Hood	HOOD KIT,(W/BODY DECALS)	0048A
Hood	HOOD KIT,	0049Z
Hood	HOOD,	0050A
Hood	HOOD,	0050B
Hood	HOOD,(BLANK)	0050C
Hood	HOOD PKG,	SJ004
Hood	HOOD PKG,	SS256

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Hood Replacement

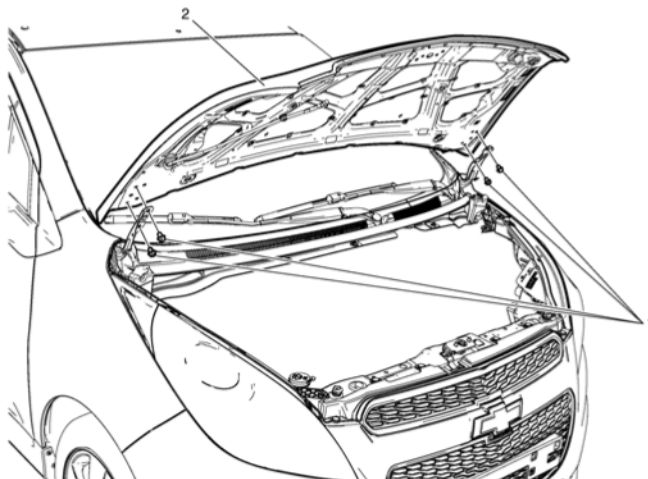



cardiagn.com

[Click here for full size](#)


Callout	Component Name
Warning: When a hood hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury. Preliminary Procedure Remove the windshield washer nozzle hose. Refer to Windshield Washer Nozzle Hose Replacement.	
1	Hood Hinge Nut (Qty: 4) Caution: Refer to Fastener Caution. Tighten 18 N-m (13 lb-ft)

Callout	Component Name
2	Hood Procedure 1. Transfer components as necessary. 2. Adjust hood as needed. Refer to Hood Adjustment.

cardiagn.com

- 1. BODY REPAIR
- 2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
- 3. REPAIR INSTRUCTIONS
- 4.

Hood Replacement (PMC)

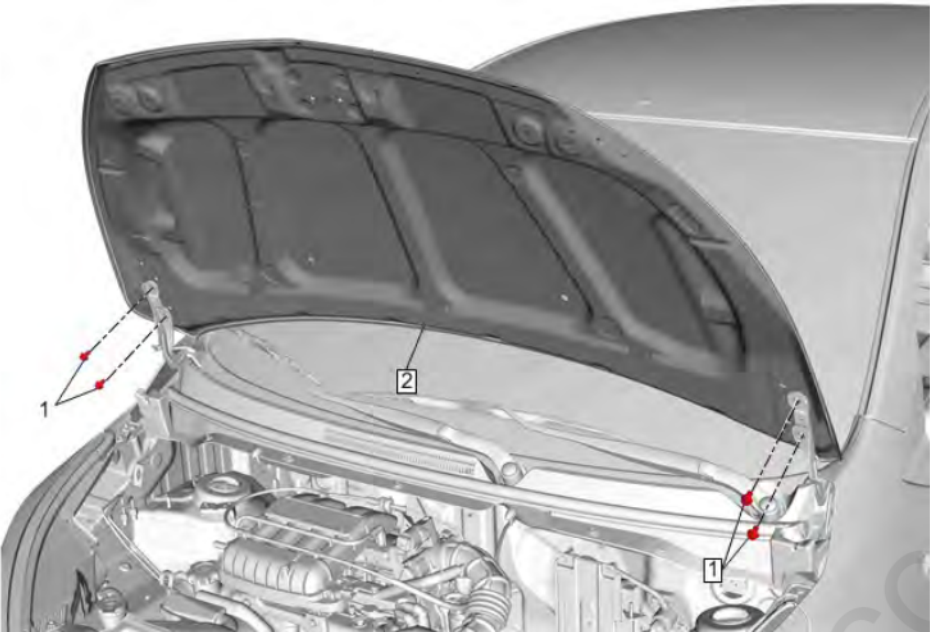

[Click here for full size](#)

Callout	Component Name
Warning: When a hood hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury. Preliminary Procedure Windshield Washer Nozzle Hose Replacement	
1	Hood Hinge Bolt [4>x] Caution: Refer to Fastener Caution. Tighten 18N-m (13 lb ft)
2	Hood Procedure 1. Transfer components as necessary. 2. Adjust hood as needed. Hood Adjustment

Related Part Information

Part Name	Catalog Name	Part Code
Hood	HOOD KIT,(W/BODY DECALS)	0048A
Hood	HOOD KIT,	0049Z
Hood	HOOD,	0050A
Hood	HOOD,	0050B
Hood	HOOD,(BLANK)	0050C

Part Name	Catalog Name	Part Code
Hood	HOOD PKG,	SJ004
Hood	HOOD PKG,	SS256

cardiagn.com

1. BODY REPAIR


2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Front Fender Insulator Replacement

cardiagn.com

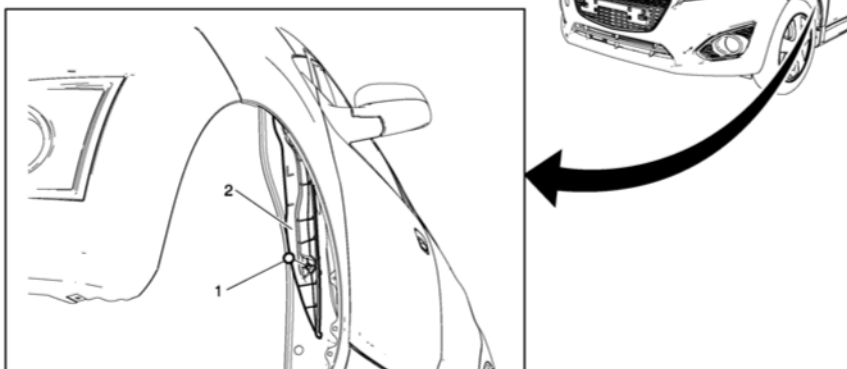




cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the front wheelhouse liner. Refer to Front Wheelhouse Liner Replacement .	
1	Front Fender Insulator Retainer
2	Front Fender Insulator

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Hood Insulator Replacement

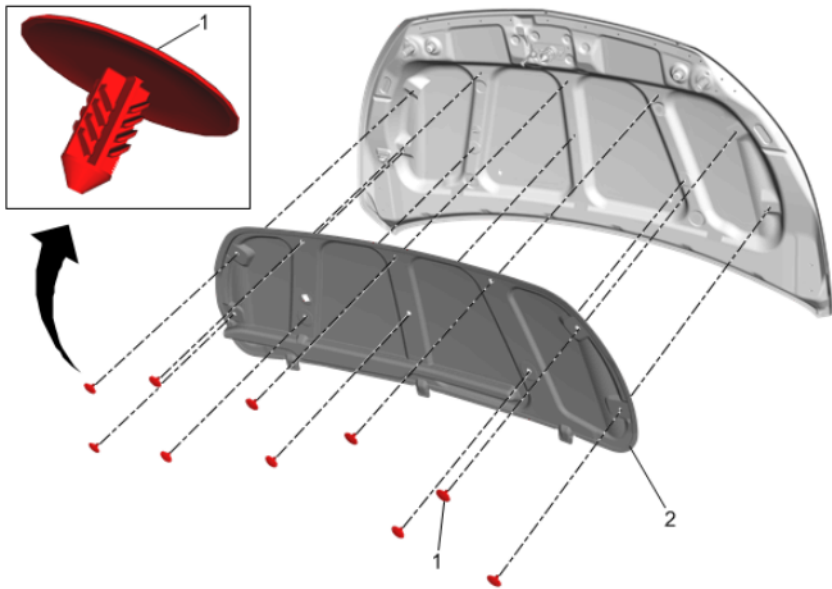

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Open and support the hood.	
1	Hood Insulator Retainer [10x] Procedure Using a suitable flat-bladed tool, remove the hood insulator retainers.
2	Hood Insulator

Related Part Information

Part Name	Catalog Name	Part Code
Hood Insulator	INSULATOR,HOOD	0399A
Hood Insulator	INSULATOR PKG,HOOD	0399Y
Hood Insulator	INSULATOR,HOOD	0400A

1. BODY REPAIR



2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Hood Primary and Secondary Latch Replacement

cardiagn.com

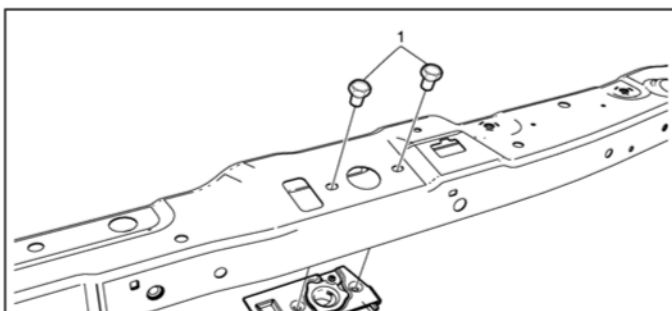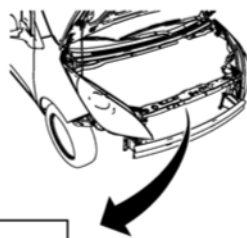



[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove air cleaner assembly. Refer to Air Cleaner Assembly Replacement .	
1	Hood Primary and Secondary Latch Retainer Bolt (Qty: 2) Caution: Refer to Fastener Caution. Tighten 8.5 N-m (75 lb-in)
2	Hood Primary and Secondary Latch Procedure To release the hood primary and secondary latch unhook the hood primary latch release cable.


Related Part Information

Part Name	Catalog Name	Part Code
Hood Primary and Secondary Latch LATCH,HOOD PRIM & SECD 7650A		

cardiagn.com

- 1. BODY REPAIR
- 2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
- 3. REPAIR INSTRUCTIONS
- 4.

Hood Primary Latch Striker Replacement (PMC)

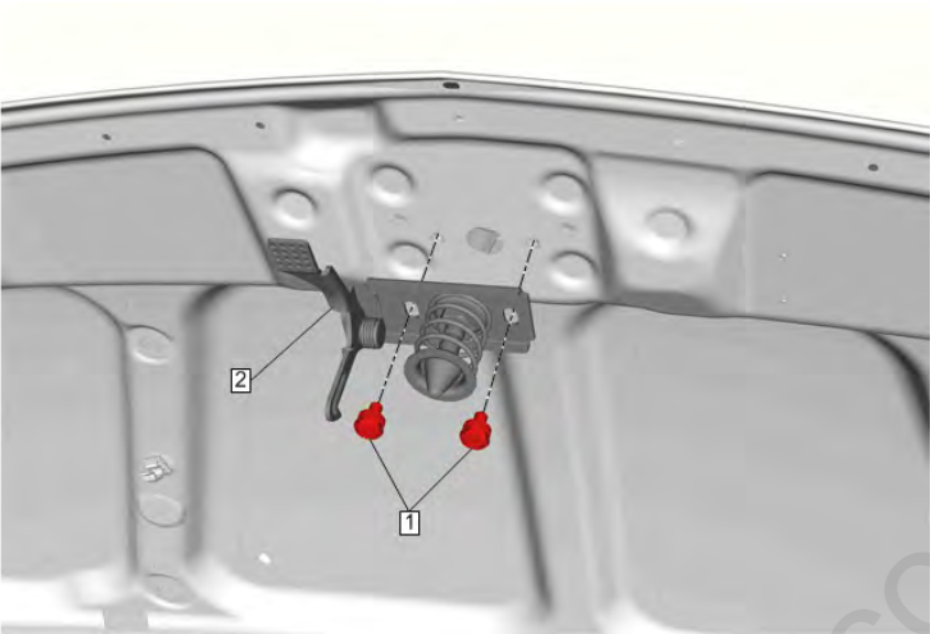

[Click here for full size](#)


Callout	Component Name
Preliminary Procedures	
1. Open and support the hood.	
2. Mark the location of hood primary latch striker to the body with a grease pencil.	
1	Hood Primary Latch Striker Bolt [2>x] Caution : Fastener Caution Tighten 8.5N-m (75 lb in)
2	Hood Primary Latch Striker

Related Part Information

Part Name	Catalog Name	Part Code
Hood Primary Latch Striker	STRIKER,HOOD PRIM LAT(W/SECD LAT)	3080A
Hood Primary Latch Striker	STRIKER,HOOD PRIM LAT	3099A
Hood Primary Latch Striker	STRIKER,HOOD PRIM LAT	3100A

- 1. BODY REPAIR
- 2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
- 3. REPAIR INSTRUCTIONS
- 4.

Rear Compartment Lid Adjustment

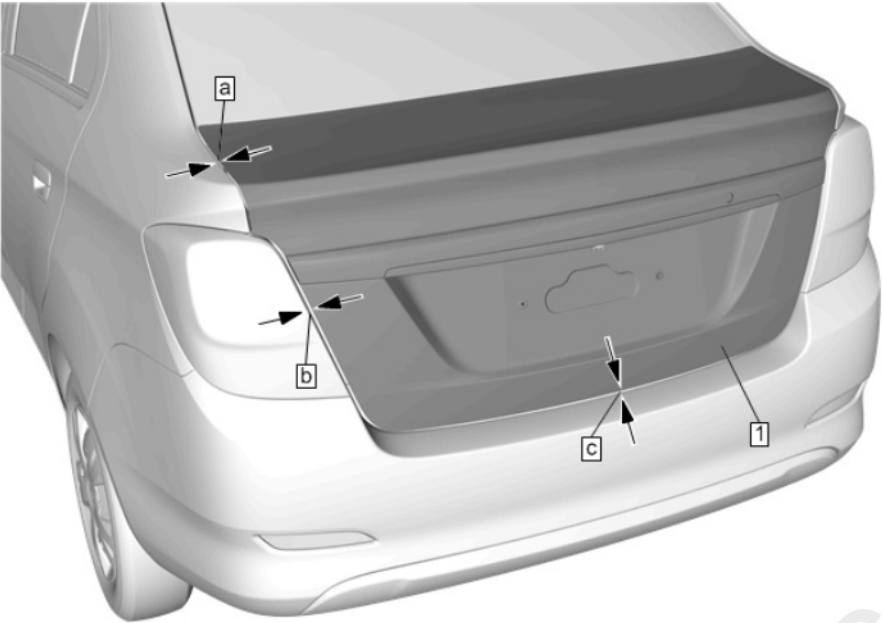

[Click here for full size](#)


Callout	Component Name
1	Rear Compartment Lid Caution : Fastener Caution Procedure 1. Loosen the rear compartment lid hinge bolts (Qty:4) 2. Adjust the rear compartment lid in order to obtain an even gap between the rear compartment lid and the quarter outer panel, the rear tail lamp, and the rear bumper fascia and so that the rear compartment lid is flush with the quarter outer panel, the rear tail lamp, and the rear bumper fascia. 3. Adjustments ◦ Rear compartment lid to quarter outer panel(a) 3.5mm ± 0.75mm (0.13in ± 0.03in) ◦ Tail lamp to rear compartment lid(b) 4mm ± 1mm (0.16in ± 0.04in) ◦ Rear compartment lid to rear bumper fascia(c) 6.5mm ± 1.5mm (0.25in ± 0.06in) Tighten 9N-m (80lb-in)

Related Part Information

Part Name	Catalog Name	Part Code
Rear Compartment Lid LID,R/CMPT		2500A
Rear Compartment Lid LID PKG,R/CMPT		0329Y
Rear Compartment Lid LID KIT,R/CMPT		0329Z
Rear Compartment Lid LID,R/CMPT		0330A

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Rear Compartment Lid Replacement

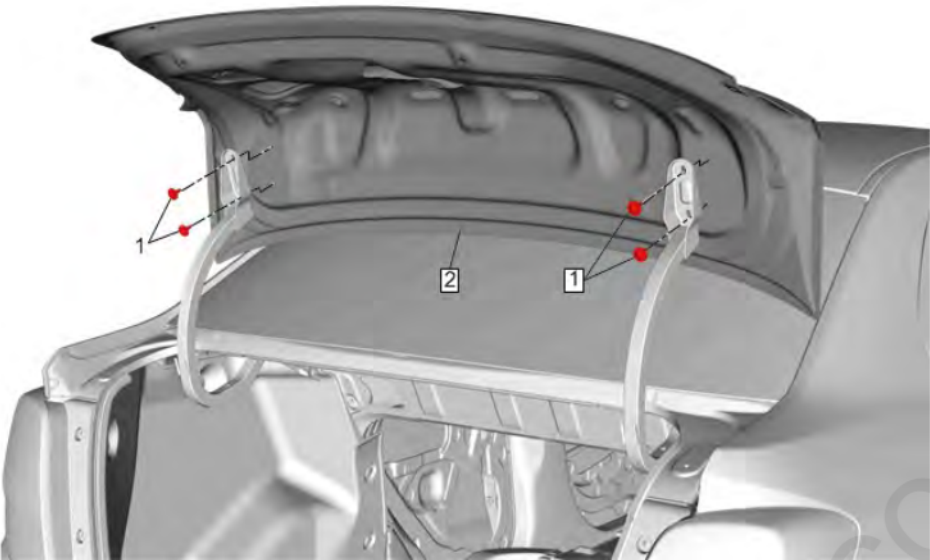

[Click here for full size](#)

Callout	Component Name
Warning: When a rear compartment lid hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury. Preliminary Procedures - Open and support the rear compartment lid. - Mark the position of the hinges with a grease pencil.	
1	Rear Compartment Lid Hinge Bolt [4>x] Caution : Fastener Caution Tighten 9>N-m (80 lb in) Procedure - Unclip the wiring harness and disconnect the electrical connectors from rear compartment lid. - Unclip and disconnect the rear compartment lid latch release cable from rear compartment latch. Rear Compartment Lid Latch Release Cable Replacement
2	Rear Compartment Lid Procedure - Transfer components as necessary. - Rear Compartment Lid >> Adjust - Rear Compartment Lid Adjustment


Related Part Information

Part Name	Catalog Name	Part Code
Rear Compartment Lid	LID,R/CMPT	2500A
Rear Compartment Lid	LID PKG,R/CMPT	0329Y
Rear Compartment Lid	LID KIT,R/CMPT	0329Z
Rear Compartment Lid	LID,R/CMPT	0330A

cardiagn.com

- 1. BODY REPAIR
- 2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
- 3. REPAIR INSTRUCTIONS
- 4.

Rear Compartment Lid Lock Cylinder Rod Replacement (Notchback)

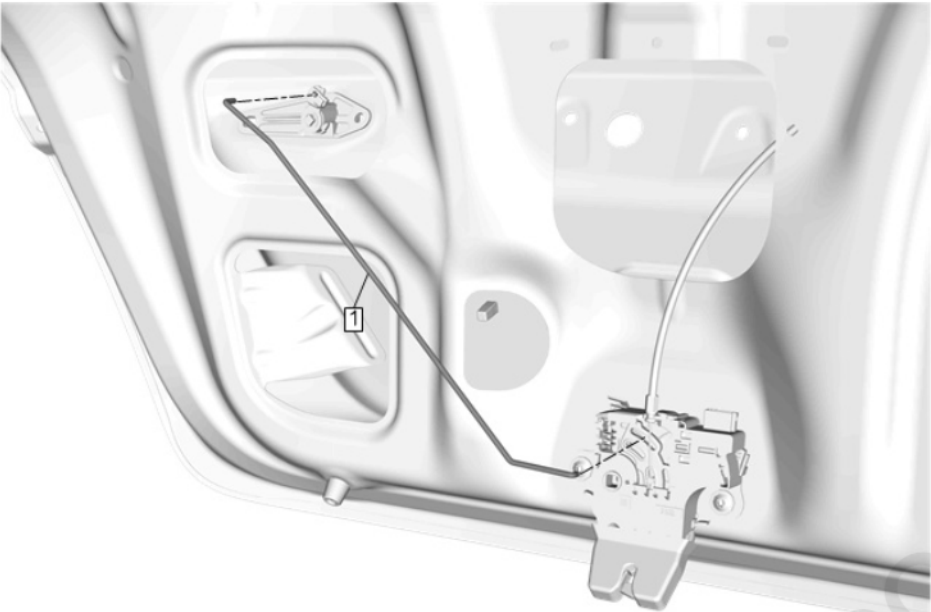

[Click here for full size](#)


Callout	Component Name
1	Rear Compartment Lid Lock Cylinder Rod
	Procedure
	Open the latch housing cover and remove the rear compartment lid lock cylinder rod.

Related Part Information

Part Name	Catalog Name	Part Code
Rear Compartment Lid Lock Cylinder Rod	ROD,R/CMPT LID LK CYL	1011B

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Front Side Door Check Replacement

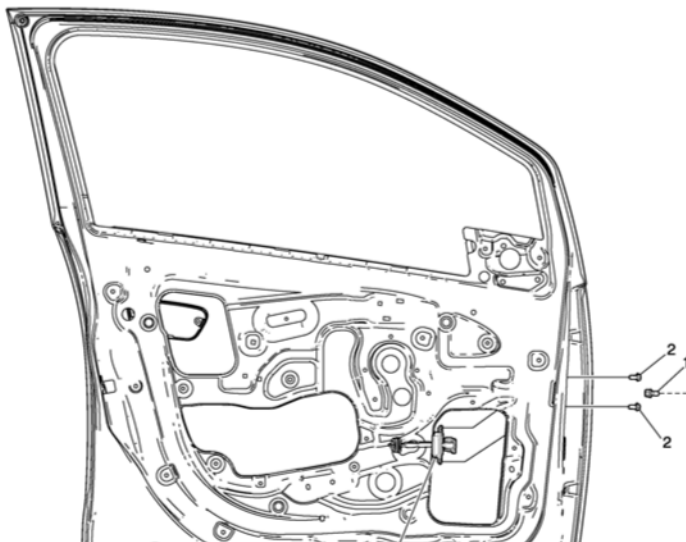



[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove front side door trim panel. Refer to Front Side Door Trim Panel Replacement .	
1	Front Side Door Check Link Bolt Caution: Refer to Fastener Caution . Tip Place the door in the full open position. Tighten 28â€%N-m (21â€%lbâ€%ft)

Callout	Component Name
2	Front Side Door Check Bolt (Qty:â€™2)
	Procedure
	Remove the water deflector.
	Tighten 5.5â€™N-m (49â€™lbâ€™in)
3	Front Side Door Check

cardiagn.com

1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Fuel Tank Filler Door Replacement





[Click here for full size](#)

Callout	Component Name
1	Fuel Tank Filler Door Bolt (Qty:2) Caution: Refer to Fastener Caution . Tighten 5.5N-m (49lb-in)
2	Fuel Tank Filler Door


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Hood Hold-Open Rod Replacement

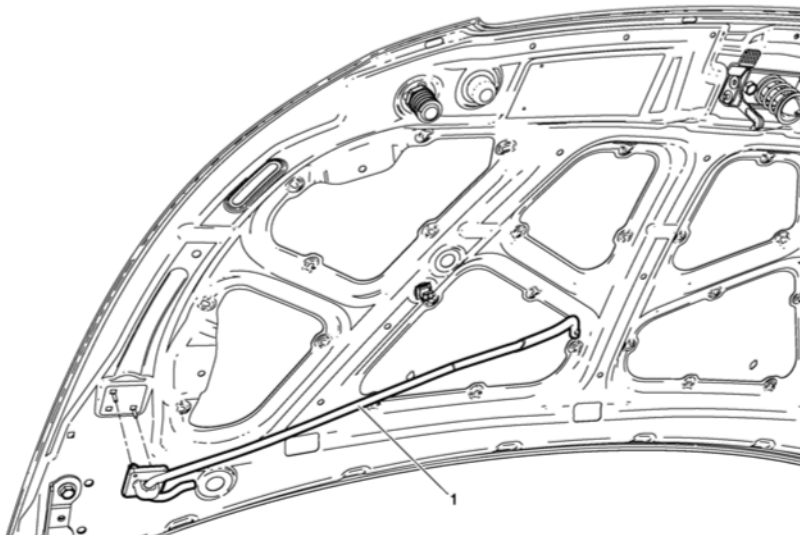




cardiagn.com

[Click here for full size](#)

Callout	Component Name
Warning:	
Refer to Hood Hold-Open Device Warning .	
1	Hood Hold-Open Rod

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Rear Compartment Lid Hinge Torque Rod Replacement

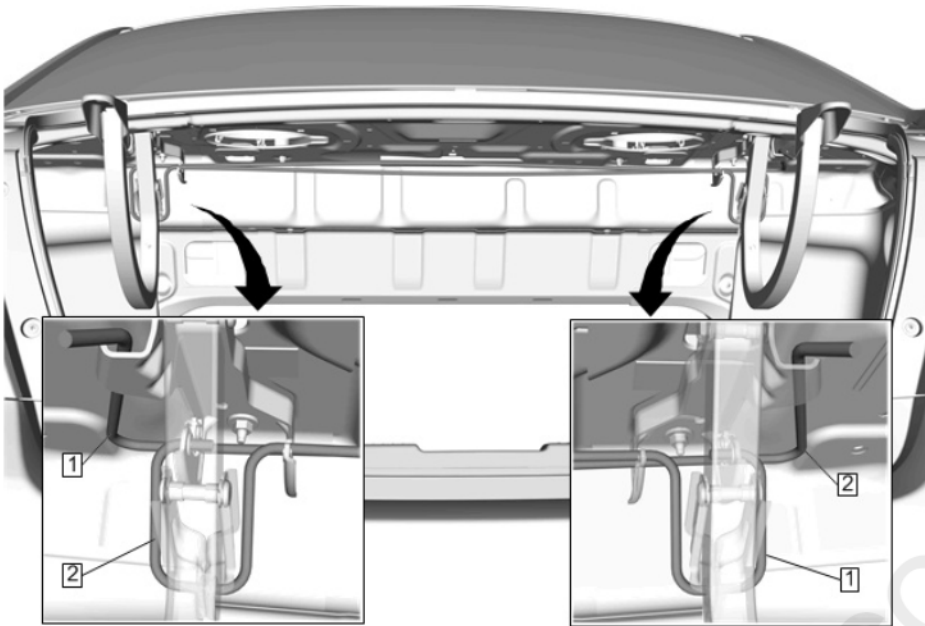


[Click here for full size](#)

Callout	Component Name
Warning: When a rear compartment lid hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury. Warning: The rear compartment lid hinge torque rods are under extreme spring tension. To avoid personal injury, use care when removing or installing the torque rods. Preliminary Procedure Rear Compartment Lid Replacement. Special Tools BO-125 Torque Rod Lifter Equivalent regional tools: Special Tools.	
1>	Rear Compartment Lid Hinge Torque Rod - Right Side Note : Only use the special tool to remove and install the rear compartment lid hinge torque rod.
2>	Rear Compartment Lid Hinge Torque Rod - Left Side Note : Only use the special tool to remove and install the rear compartment lid hinge torque rod.

- 1. BODY REPAIR
- 2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
- 3. REPAIR INSTRUCTIONS
- 4.

Hood Front Edge Weatherstrip Replacement (Except PMC)

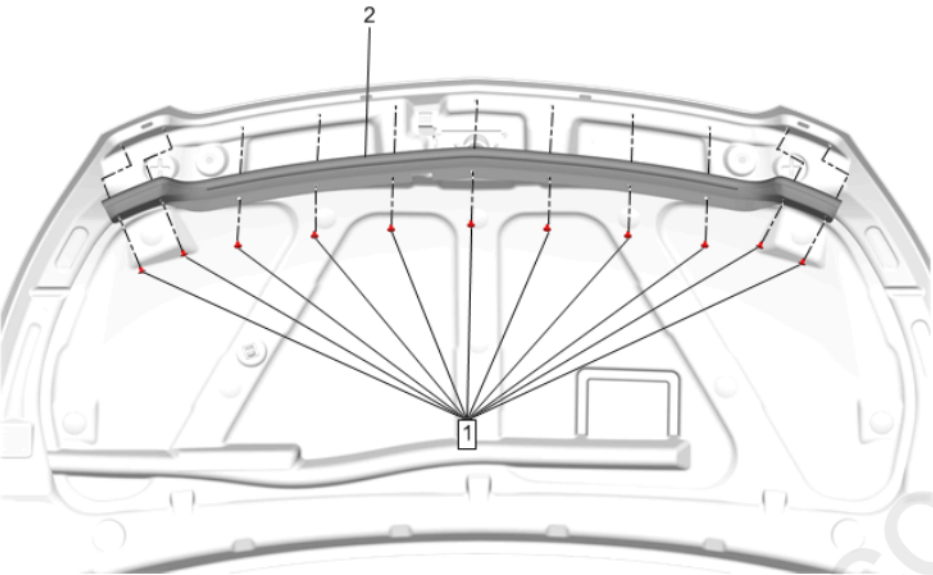

[Click here for full size](#)


Callout	Component Name
Preliminary Procedure	
Open and support the hood.	
1	Hood Front Edge Weatherstrip Retainer [11x]
2	Hood Front Edge Weatherstrip

Related Part Information

Part Name	Catalog Name	Part Code
Hood Front Edge Weatherstrip	WEATHERSTRIP,HOOD FRT EDGE	7326A

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Hood Front Edge Weatherstrip Replacement (PMC)

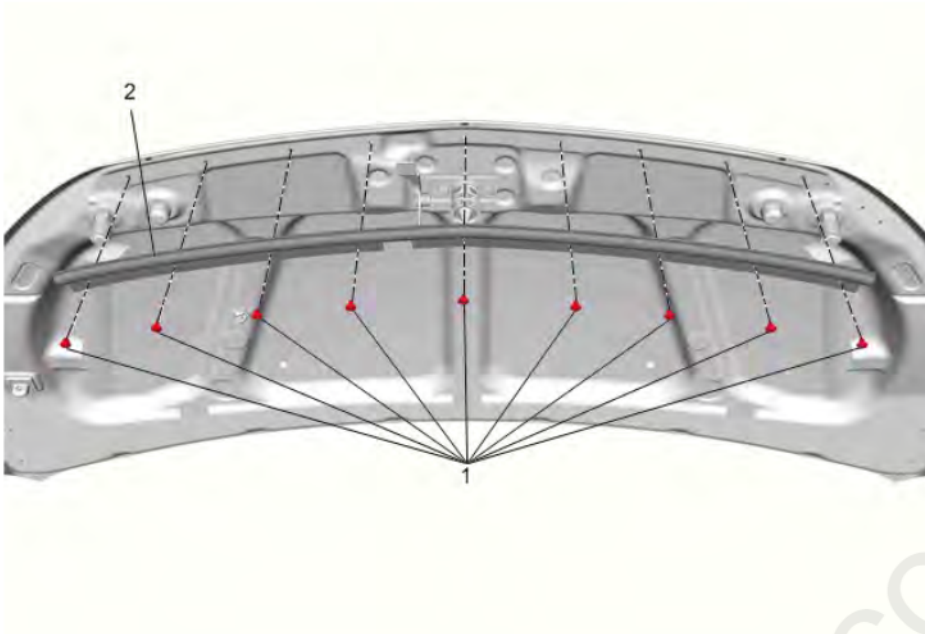


[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Open and support the hood.	
1	Hood Front Edge Weatherstrip Retainer [9>x]
2	Hood Front Edge Weatherstrip

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Hood Rear Weatherstrip Replacement

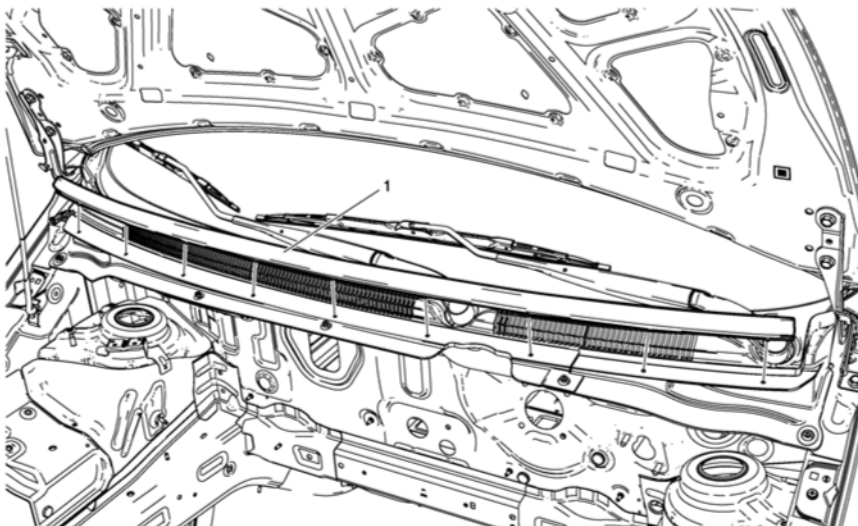



[Click here for full size](#)

Callout	Component Name
1	Hood Rear Weatherstrip

Related Part Information

Part Name	Catalog Name	Part Code
Hood Rear Weatherstrip	WEATHERSTRIP,HOOD RR 7325A	
Hood Rear Weatherstrip	WEATHERSTRIP,HOOD RR 7325B	


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Plenum Lower Panel Replacement

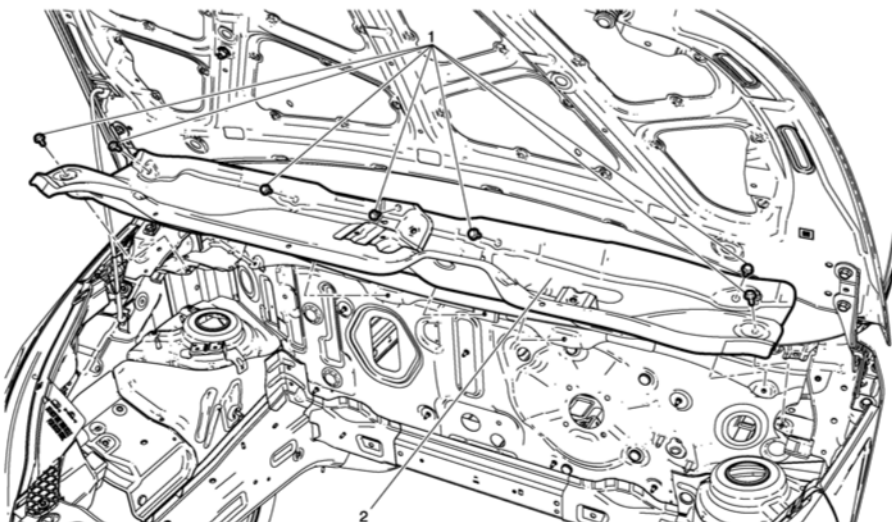



[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
1. Remove the windshield wiper arm. Refer to Windshield Wiper Arm Replacement .	
2. Remove the air inlet grille panel. Refer to Air Inlet Grille Panel Replacement .	
3. Remove the windshield wiper transmission. Refer to Windshield Wiper Transmission Replacement .	
1	Plenum Lower Panel Bolt (Qty: 7) Caution: Refer to Fastener Caution . Tighten 11.5 N-m (102 lb-in)
2	Plenum Lower Panel

Related Part Information

Part Name	Catalog Name	Part Code
Plenum Lower Panel	PANEL,PLNM LWR	1339A
Plenum Lower Panel	PANEL,PLNM LWR	1340B
Plenum Lower Panel	PANEL KIT,PLNM LWR	2099Z
Plenum Lower Panel	PANEL,PLNM LWR	2100A
Plenum Lower Panel	PANEL,PLNM LWR	2100B
Plenum Lower Panel	PANEL,PLNM LWR (BLANK)	2100J

cardiagn.com


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Liftgate Strut Replacement

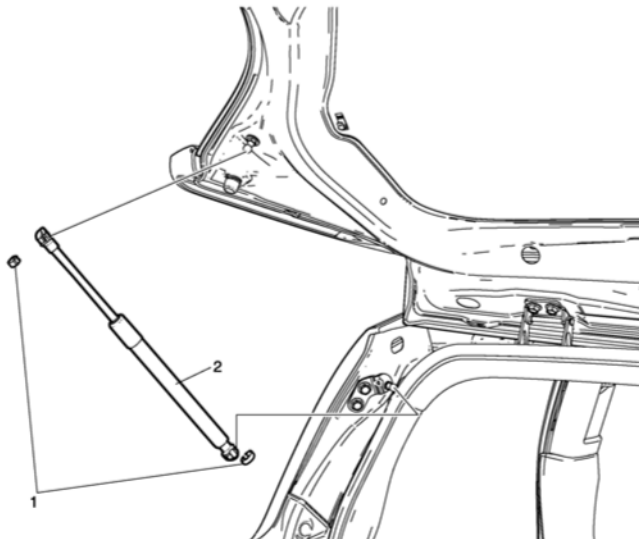




cardiagn.com

[Click here for full size](#)

Callout	Component Name
Warning: When a lift gate hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.	
1	Liftgate Strut Clip (Qty:â€%02)
2	Liftgate Strut

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Liftgate Strut Bracket Replacement

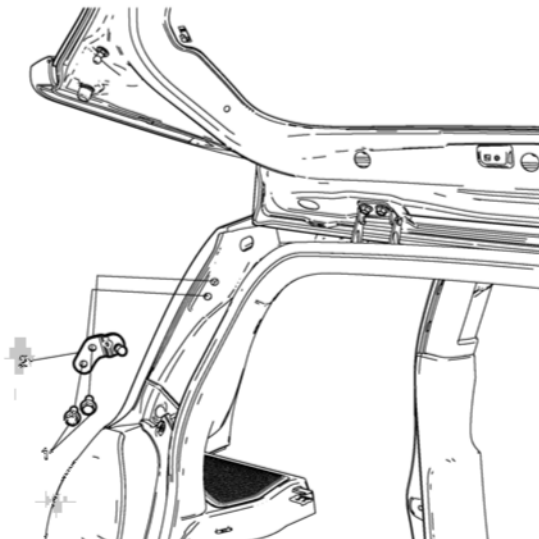



cardiagn.com

[Click here for full size](#)

Callout	Component Name
Warning: When a lift gate hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury. Preliminary Procedure Release the liftgate strut from the liftgate. Refer to Liftgate Strut Replacement.	
1	Liftgate Strut Bracket Bolt (Qty: 2) Caution: Refer to Fastener Caution. Tighten 20 N·m (15 lb·ft)
2	Liftgate Strut Bracket


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Front Side Door Weatherstrip Replacement - Door Side

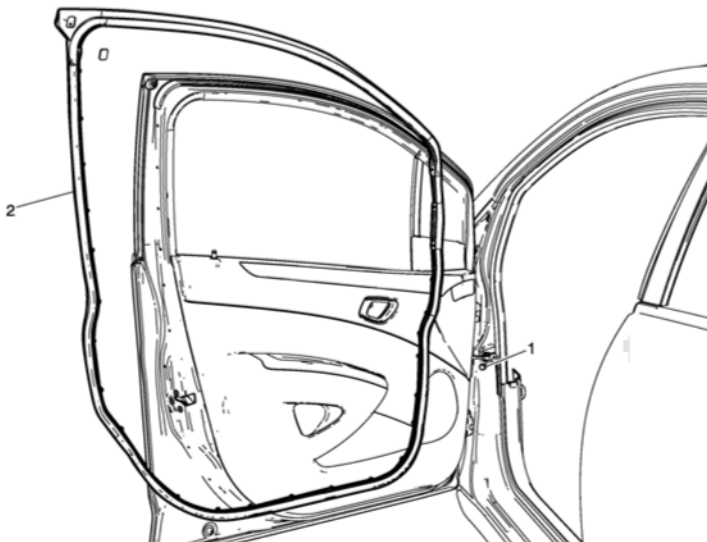



cardiagn.com

[Click here for full size](#)

Callout	Component Name
1	Front Side Door Check Link Bolt Caution: Refer to Fastener Caution . Tighten 28â€%N-m (21â€%lbâ€%ft)
2	Front Side Door Weatherstrip â€“ Door Side Procedure Unclip weatherstrip from front side door.

Related Part Information

Part Name

Catalog Name

Part Code

Part Name	Catalog Name	Part Code
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D	0600A
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D	0600B
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D	0100A
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D	0100B
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D (BODY SI)	0102A
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D (DOOR SI)	0103A
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D (PLANT PROC)	X0011

cardiagn.com


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Front Side Door Weatherstrip Replacement - Body Side

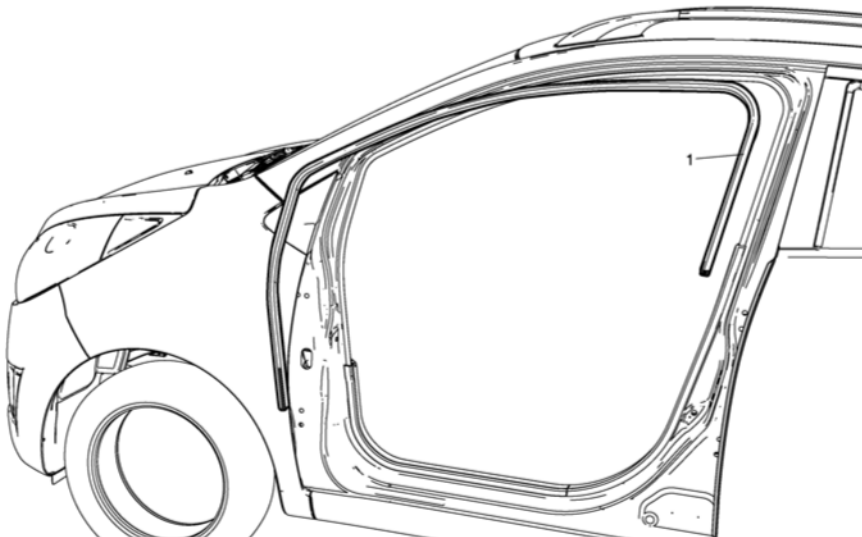



[Click here for full size](#)

Callout	Component Name
1	Front Side Door Weatherstripâ€” Body Side Procedure 1. Start at the rear upper corner of the door opening and pull the weatherstrip away from the door opening flange. 2. Position the weatherstrip in the upper corner of the center pillar. 3. Working downward along the front edge, install the weatherstrip on the door opening flange ensuring that the carrier is fully seated in the corners. 4. Using a rubber mallet, ensure that the weatherstrip is seated on the entire door opening flange.

Related Part Information


Part Name	Catalog Name	Part Code
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D	0600A
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D	0600B

Part Name	Catalog Name	Part Code
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D	0100A
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D	0100B
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D (BODY SI)	0102A
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D (DOOR SI)	0103A
Front Side Door Weatherstrip	WEATHERSTRIP,FRT S/D (PLANT PROC)	X0011

cardiagn.com

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Liftgate Weatherstrip Replacement

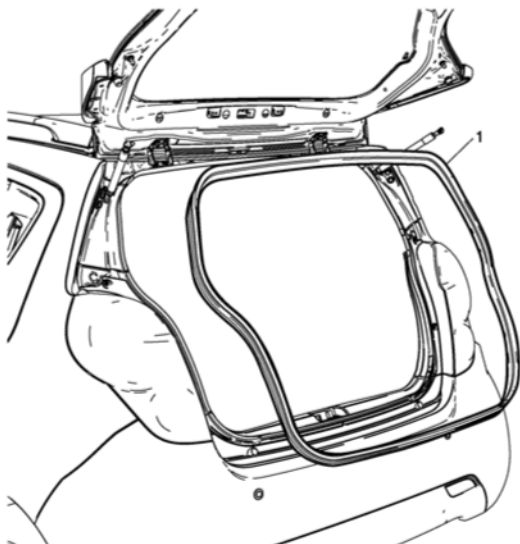



cardiagn.com

[Click here for full size](#)

Callout	Component Name
1	Lifgate Weatherstrip Procedure 1. Start at the upper corner of the liftgate opening and pull the weatherstrip away from the liftgate opening flange. 2. Position the weatherstrip in the upper corner of the liftgate opening. 3. Working downward along the edge, install the weatherstrip on the liftgate opening flange ensuring that the carrier is fully seated in the corners. 4. Using a rubber mallet, ensure that the weatherstrip is seated on the entire liftgate opening flange.

Related Part Information


Part Name	Catalog Name	Part Code
Liftgate Weatherstrip	WEATHERSTRIP,L/GATE	4005A
Liftgate Weatherstrip	WEATHERSTRIP,L/GATE	4005B

Part Name	Catalog Name	Part Code
Liftgate Weatherstrip	WEATHERSTRIP,L/GATE	1400A
Liftgate Weatherstrip	WEATHERSTRIP,L/GATE	1400B
Liftgate Weatherstrip	WEATHERSTRIP,L/GATE (RPR)	X0008

cardiagn.com

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Rear Compartment Lid Weatherstrip Replacement

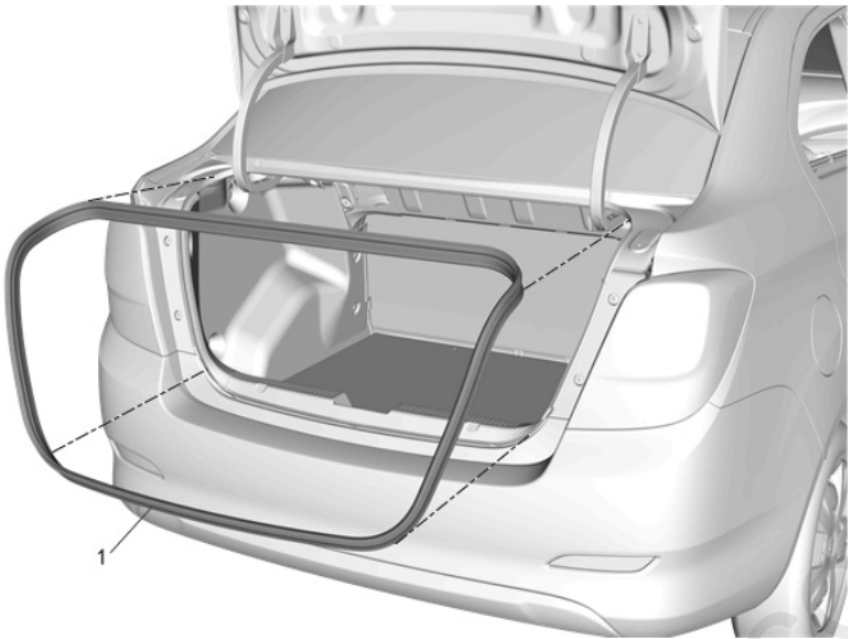

[Click here for full size](#)


Callout	Component Name
1>	Rear Compartment Lid Weatherstrip Procedure 1. Start at the upper corner of the rear compartment opening and pull the weatherstrip away from the rear compartment opening flange. 2. Position the weatherstrip in the upper corner of the rear compartment opening. 3. Working downward along the edge, install the weatherstrip on the rear compartment opening flange ensuring that the carrier is fully seated in the corners. 4. Using a rubber mallet, ensure that the weatherstrip is seated on the entire rear compartment opening flange.

Related Part Information

Part Name	Catalog Name	Part Code
Rear Compartment Lid Weatherstrip	WEATHERSTRIP,R/CMPT LID 2540A	
Rear Compartment Lid Weatherstrip	WEATHERSTRIP,R/CMPT LID 2540B	
Rear Compartment Lid Weatherstrip	WEATHERSTRIP,R/CMPT LID 1110A	
Rear Compartment Lid Weatherstrip	WEATHERSTRIP,R/CMPT LID 1110B	
Rear Compartment Lid Weatherstrip	WEATHERSTRIP,R/CMPT LID X0009	

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. REPAIR INSTRUCTIONS
- 4.

Rear Side Door Weatherstrip Replacement - Door Side

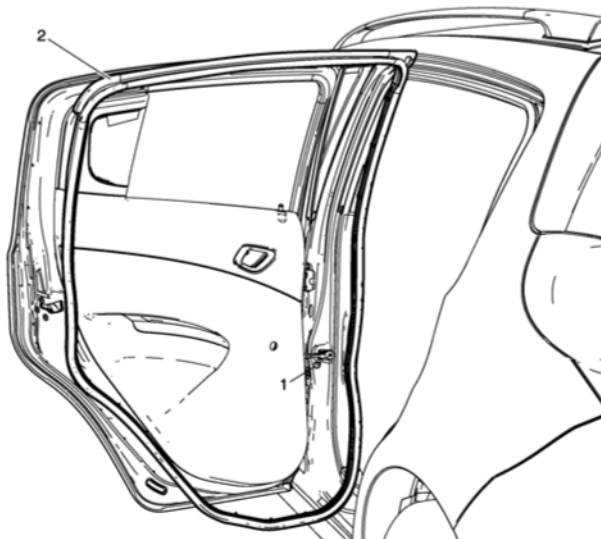



cardiagn.com

[Click here for full size](#)

Callout	Component Name
1	Rear Side Door Check Link Bolt Caution: Refer to Fastener Caution . Tighten 28â€%N-m (21â€%lbâ€%ft)
2	Rear Side Door Weatherstrip â€“ Door Side Procedure Unclip weatherstrip from front side door.

Related Part Information

Part Name

Catalog Name

Part Code

Part Name	Catalog Name	Part Code
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D	1950A
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D	1950B
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D (PLANT PROC)	0754Z
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D	0755A
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D	0755B
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D (BODY SI)	0757A
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D (DOOR SI)	0758A

cardiagn.com


1. BODY REPAIR

2. BOLTED EXTERIOR BODY PANELS AND CLOSURES

3. REPAIR INSTRUCTIONS

4.

Rear Side Door Weatherstrip Replacement - Body Side

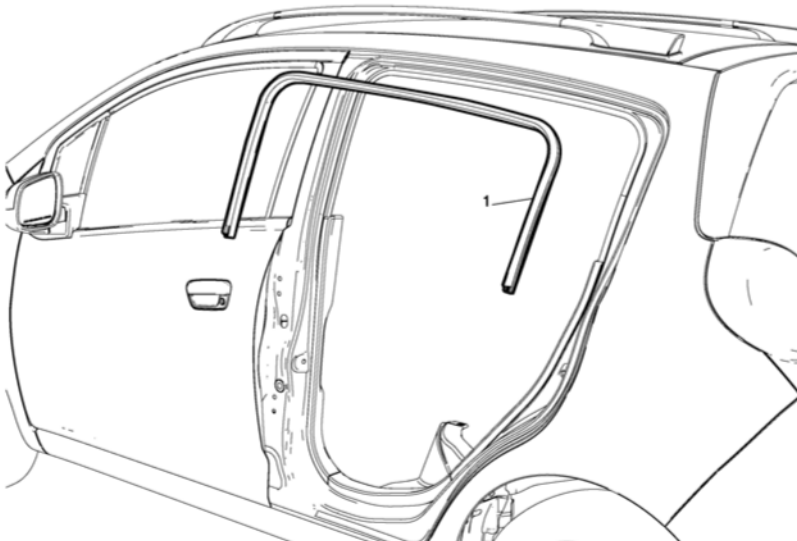



[Click here for full size](#)

Callout	Component Name
1	Rear Side Door Weatherstrip Body Side Procedure 1. Start at the rear upper corner of the door opening and pull the weatherstrip away from the door opening flange. 2. Position the weatherstrip in the upper corner of the center pillar. 3. Working downward along the front edge, install the weatherstrip on the door opening flange ensuring that the carrier is fully seated in the corners. 4. Using a rubber mallet, ensure that the weatherstrip is seated on the entire door opening flange.

Related Part Information


Part Name	Catalog Name	Part Code
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D	1950A
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D	1950B

Part Name	Catalog Name	Part Code
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D (PLANT PROC)	0754Z
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D	0755A
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D	0755B
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D (BODY SI)	0757A
Rear Side Door Weatherstrip	WEATHERSTRIP,RR S/D (DOOR SI)	0758A

cardiagn.com

- 1. BODY REPAIR
- 2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
- 3. REPAIR INSTRUCTIONS
- 4.

Rear Side Door Window Guard Bar Replacement

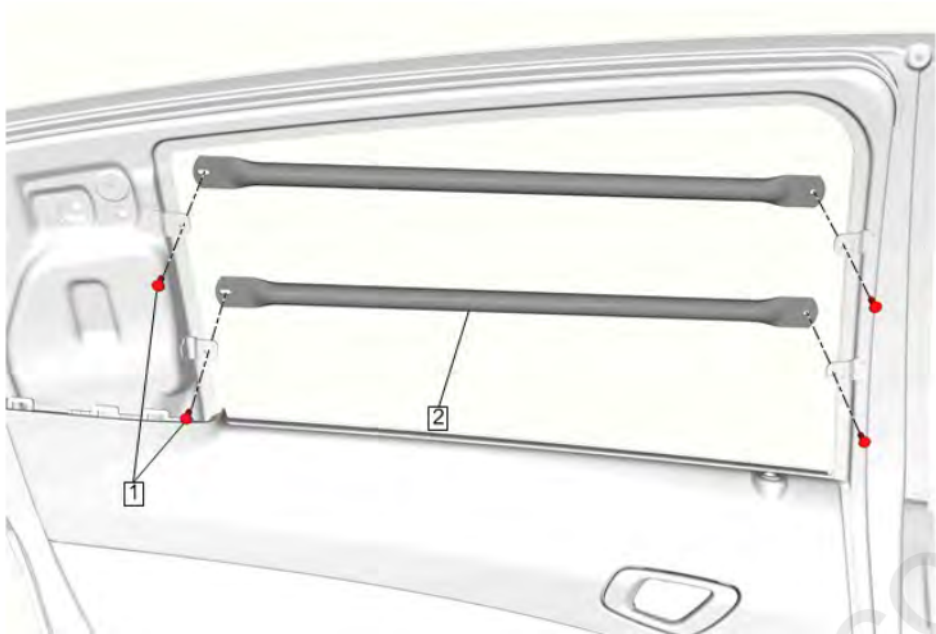

[Click here for full size](#)

Callout	Component Name
Preliminary Procedure	
Remove the rear side door upper rear trim panel. Refer to Rear Side Door Upper Rear Trim Panel Replacement .	
1	Rear Side Door Window Guard Bar Rivet (Qty:4)
2	Rear Side Door Window Guard Bar

Related Part Information

Part Name	Catalog Name	Part Code
Rear Side Door Window Guard Bar BAR,RR S/D WDO GUARD 2950B		

Specifications

cardiagn.com

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. SPECIFICATIONS
- 4.

Fastener Specifications

Reusable Threaded Fastener Tightening Specifications

Application	Specification
	Metric (English)
Note:	
All fasteners listed in this table can be reused after removal.	
Front Fender Bolt	7.5â€‰N-mâ€‰(66â€‰lbâ€‰in)
Front Side Door Check Bolt	5.5â€‰N-mâ€‰(49â€‰lbâ€‰in)
Front Side Door Check Link Bolt	28â€‰N-mâ€‰(21â€‰lbâ€‰ft)
Front Side Door Hinge Bolt	30â€‰N-mâ€‰(22â€‰lbâ€‰ft)
Front Side Door Lower Hinge Bolt	28â€‰N-mâ€‰(21â€‰lbâ€‰ft)
Front Side Door Upper Hinge Bolt	28â€‰N-mâ€‰(21â€‰lbâ€‰ft)
Fuel Tank Filler Door Bolt	5.5â€‰N-mâ€‰(49â€‰lbâ€‰in)
Hood Hinge Bolt	18â€‰N-mâ€‰(13â€‰lbâ€‰ft)
Hood Hinge Nut	18â€‰N-mâ€‰(13â€‰lbâ€‰ft)
Hood Primary and Secondary Latch Retainer Bolt	8.5â€‰N-mâ€‰(75â€‰lbâ€‰in)
Hood Primary Latch Striker Bolt	8.5â€‰N-mâ€‰(75â€‰lbâ€‰in)
Liftgate Hinge Bolt	20â€‰N-mâ€‰(15â€‰lbâ€‰ft)
Liftgate Hinge Nut	22â€‰N-mâ€‰(16â€‰lbâ€‰ft)
Liftgate Strut Bracket Bolt	20â€‰N-mâ€‰(15â€‰lbâ€‰ft)
Plenum Lower Panel Bolt	11.5â€‰N-mâ€‰(102â€‰lbâ€‰in)
Rear Compartment Lid Hinge Bolt	9â€‰N-mâ€‰(80â€‰lbâ€‰in)
Rear Side Door Check Bolt	5.5â€‰N-mâ€‰(49â€‰lbâ€‰in)
Rear Side Door Check Link Bolt	28â€‰N-mâ€‰(21â€‰lbâ€‰ft)
Rear Side Door Hinge Bolt	30â€‰N-mâ€‰(22â€‰lbâ€‰ft)
Rear Side Door Lower Hinge Bolt	28â€‰N-mâ€‰(21â€‰lbâ€‰ft)
Rear Side Door Upper Hinge Bolt	28â€‰N-mâ€‰(21â€‰lbâ€‰ft)

Schematic and Routing Diagrams


cardiagn.com

Hood Latch Schematics

cardiagn.com

Engine Hood Switch (UTJ)

[Di](#)

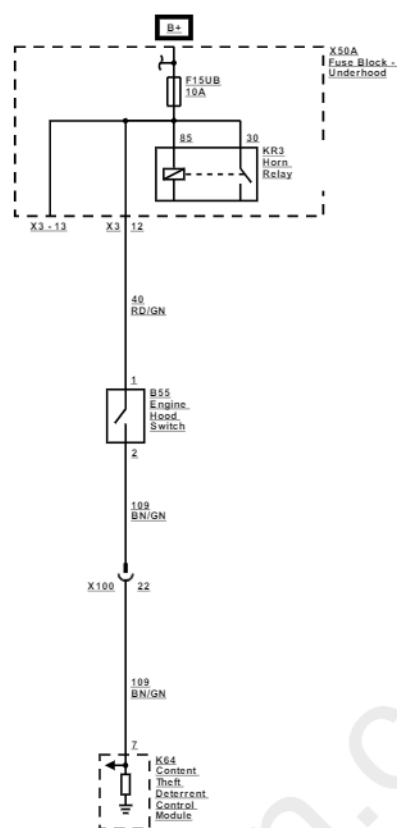


[Click here for full size](#)

Special Tools and Equipment

cardiagn.com

1. BODY REPAIR
2. BOLTED EXTERIOR BODY PANELS AND CLOSURES
3. SPECIAL TOOLS AND EQUIPMENT
- 4.

Special Tools

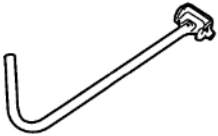Illustration	Tool Number/ Description
	BO-125 KM-125 Torque Rod Lifter
Click here for full size	