

2 WIRING HARNESS CONFIGURATION DIAGRAMS

OVERALL WIRING DIAGRAM

- L.H. drive vehicles 2-2
- R.H. drive vehicles 2-3

ENGINE COMPARTMENT **A**

- L.H. drive vehicles with MPI-SOHC engine 2-4
- L.H. drive vehicles with MPI-DOHC engine 2-6
- R.H. drive vehicles with MPI-SOHC engine
 - <Vehicles without ABS> 2-8
 - <Vehicles with ABS> 2-10
- R.H. drive vehicles with MPI-DOHC engine 2-12

ENGINE AND TRANSMISSION **B**

- MPI-SOHC engine 2-14
- MPI-DOHC engine 2-16

DASH PANEL **C**

- L.H. drive vehicles without SRS 2-18
- L.H. drive vehicles with SRS
 - <Vehicles without front passenger air bag> 2-21-1
 - <Vehicles with front passenger air bag> 2-21-5
- R.H. drive vehicles 2-22

INSTRUMENT PANEL **D**

- L.H. drive vehicles without SRS 2-26
- L.H. drive vehicles with SRS 2-26-1
- R.H. drive vehicles 2-27

INTERIOR **E**

- L.H. drive vehicles without SRS 2-28
- L.H. drive vehicles with SRS
 - <Vehicles without front passenger air bag> 2-29-1
 - <Vehicles with front passenger air bag> 2-29-3
- R.H. drive vehicles 2-30

DOOR **F**

- L.H. drive vehicles 2-32
- R.H. drive vehicles 2-33

LUGGAGE COMPARTMENT **G**

- L.H. drive vehicles 2-34
- R.H. drive vehicles 2-35


TRUNK LID **H** 2-36

UNDER REAR FLOOR **J** 2-37

OVERALL WIRING DIAGRAM


L.H. drive vehicles

〈Vehicles without ACTIVE-ECS〉

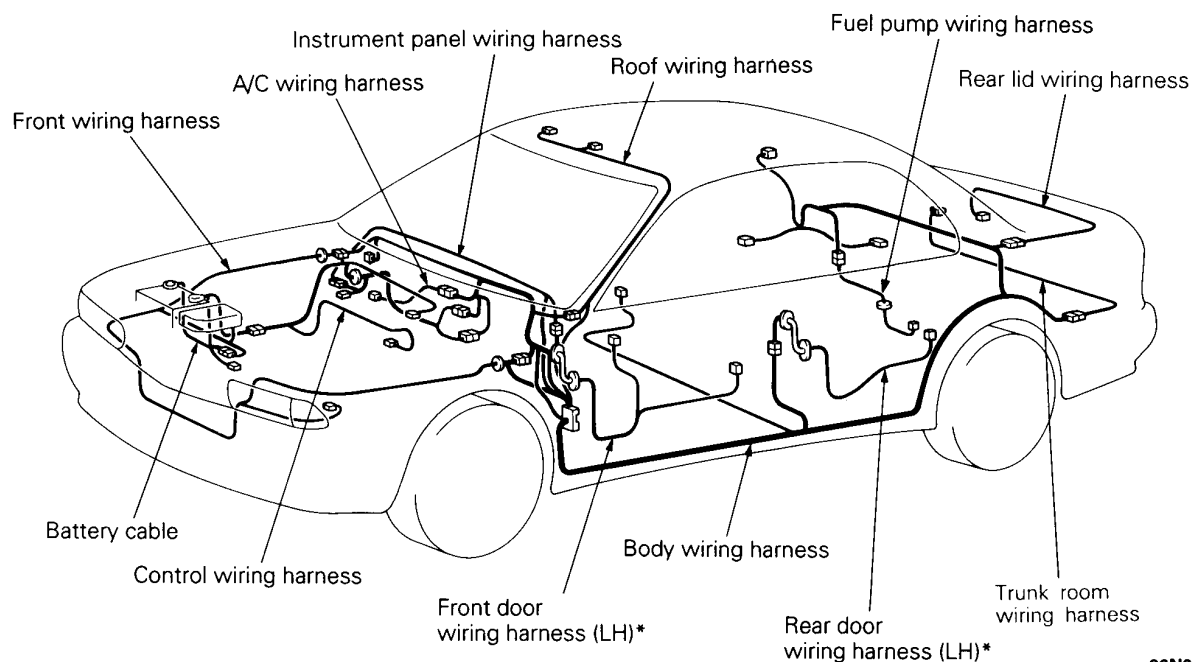

36N0458



〈Vehicles with ACTIVE-ECS〉

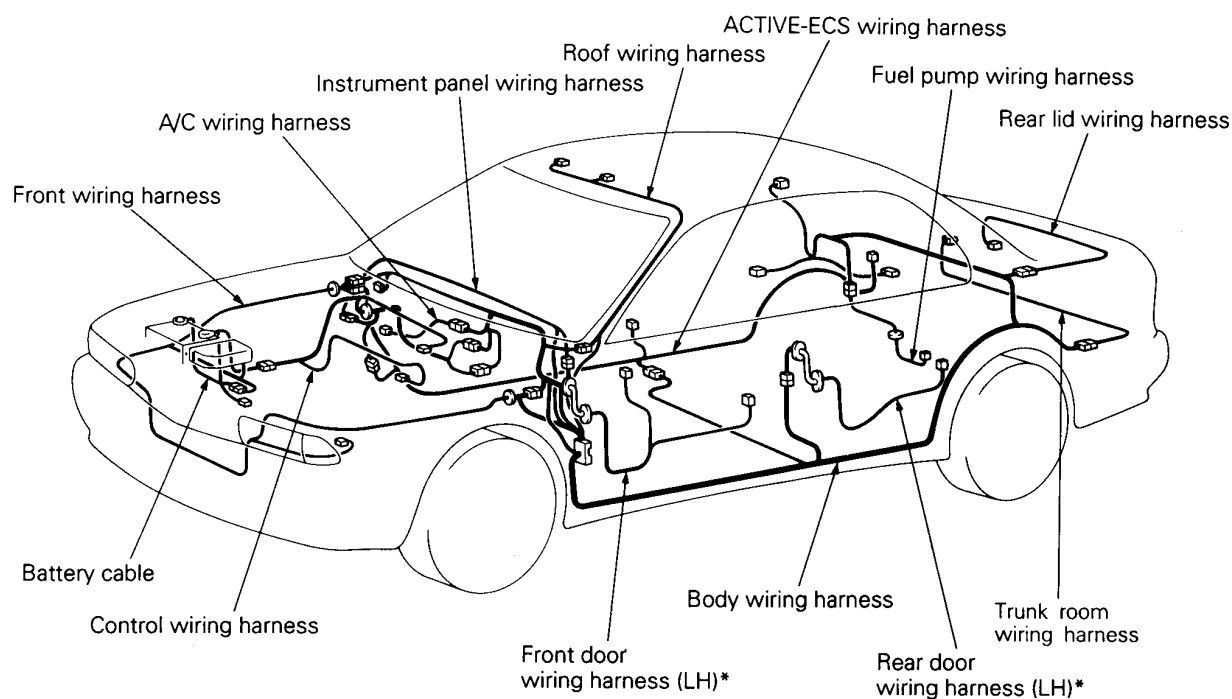

36N0456

NOTE


- (1) These illustrations show only major wiring harnesses.
- (2) *: also equipped at the right side.

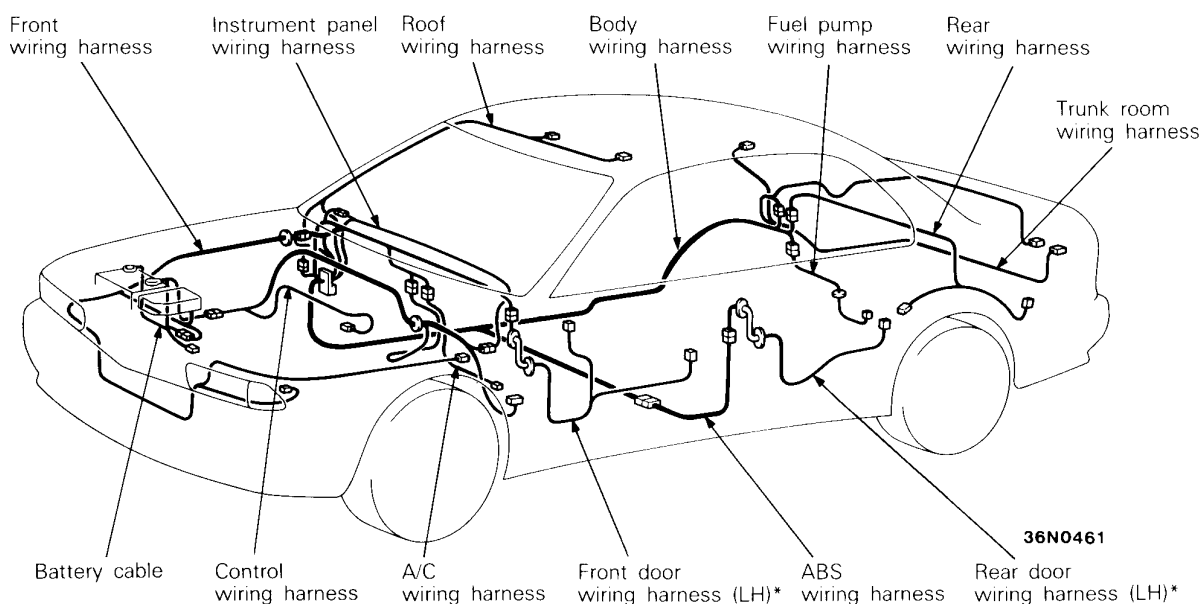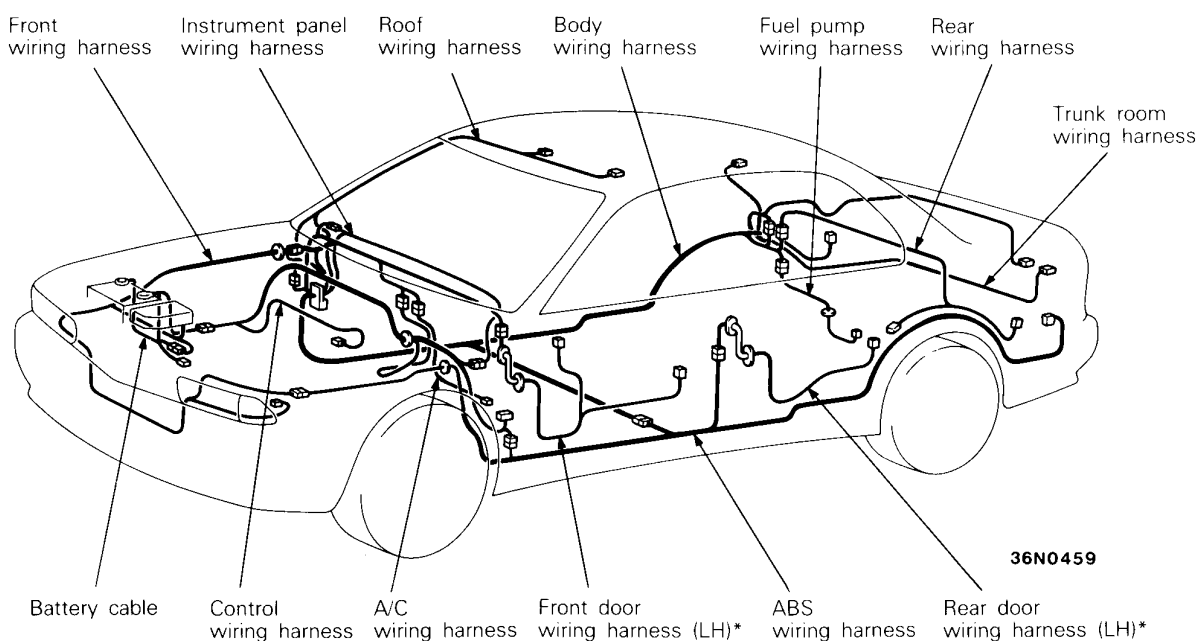OVERALL WIRING DIAGRAM**R.H. drive vehicles****<Vehicles without ABS>****<Vehicles with ABS>****NOTE**

- (1) These illustrations show only major wiring harnesses.
 (2) *: also equipped at the right side.


ENGINE COMPARTMENT


L.H. drive vehicles with MPI-SOHC engine

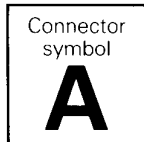

A-01X }
thru } Refer to CENTRALIZED JUNCTION
A-14X }

- A-15 Side turn signal lamp (RH)
- A-16 —
- A-17 Pulse generator <A/T>
- A-18 —
- A-19 —
- A-20 Windshield wiper motor
- A-21 Brake fluid level sensor
- A-22 Air flow sensor
- A-23 —
- A-24 Auto-cruise control actuator
- A-25 Purge control solenoid valve
- A-26 —
- A-27 —
- A-28 EPS solenoid valve
- A-29 Ignition timing adjustment connector
- A-30 —
- A-31 Fuel pump check connector
- A-32 —
- A-33 Side turn signal lamp (LH)
- A-34 ABS speed sensor (Front: LH)
- A-35 —
- A-36 ABS valve relay
- A-37 ABS motor relay
- A-38 —
- A-39 —
- A-40 —
- A-41 Front turn signal lamp (LH)
- A-42 }
A-43 } ABS hydraulic unit
A-44 }
- A-45 —
- A-46 Headlamp leveling unit (LH)
- A-47 Headlamp (LH)
- A-48 Headlamp (LH) <Vehicles built up to April, 1994>
- A-49 No connection
- A-50 Front fog lamp (LH)
- A-51 Dual pressure switch <A/C>
- A-52 —
- A-53 Headlamp washer motor
- A-54 A/C compressor
- A-55 Condenser fan motor
- A-56 Resistor
- A-57 }
thru } Horn
A-60 }
- A-61 }
thru } —
A-67 }

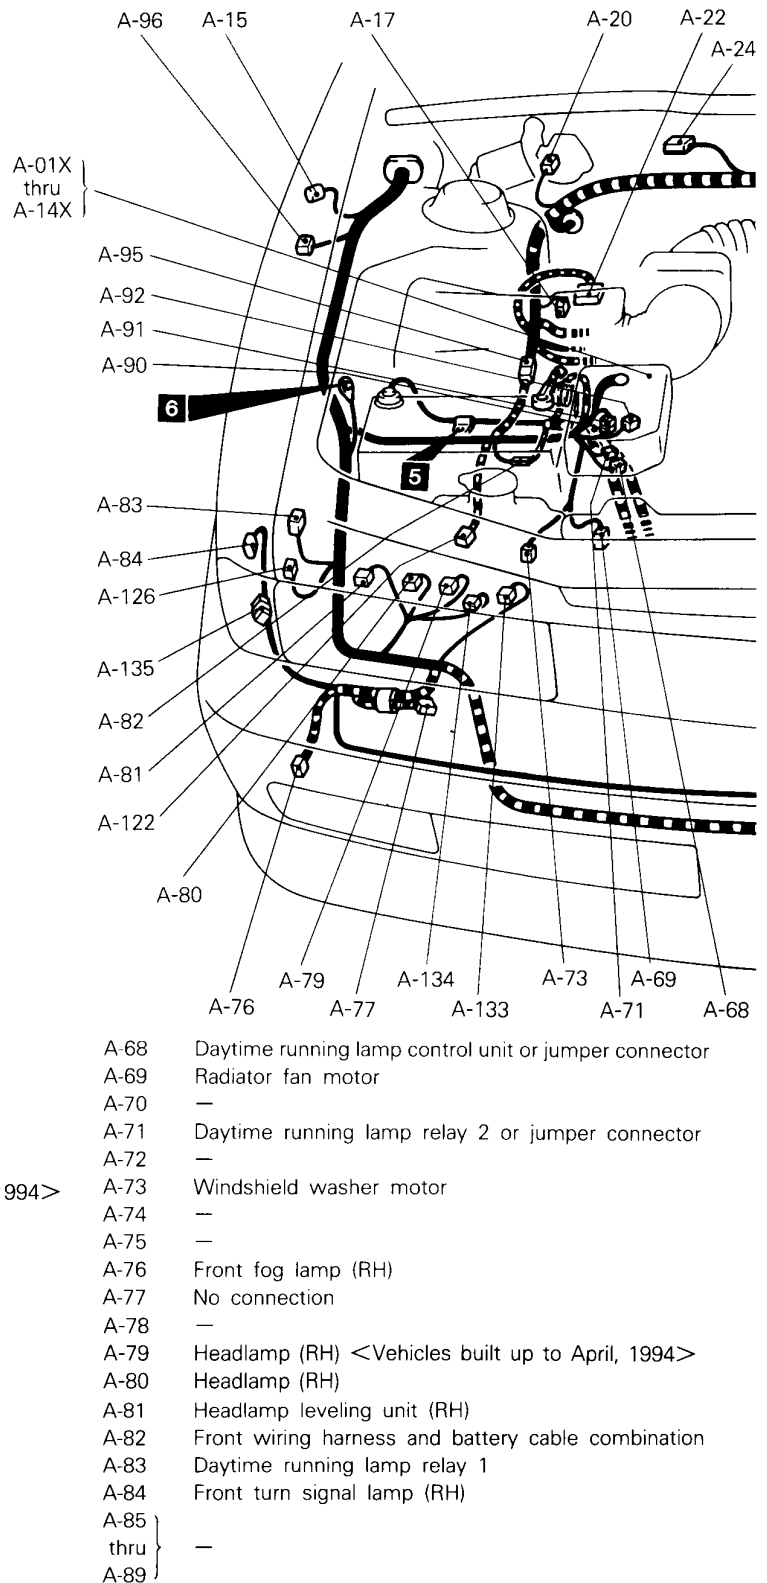

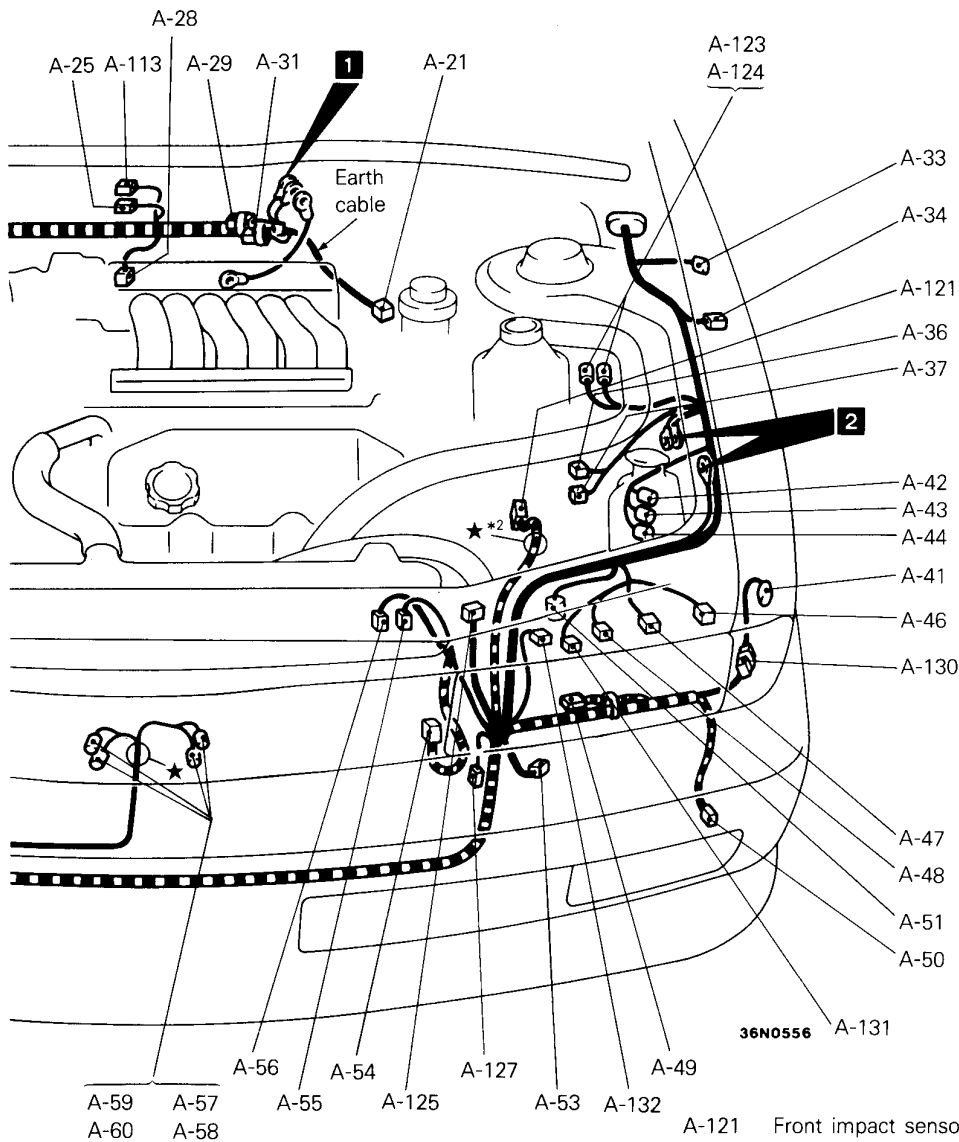

A-90	Joint connector (for rear fog lamp circuit)	
A-91		
A-92		
A-93	—	
A-94	—	
A-95	Front wiring harness and control wiring harness combination	
A-96	ABS speed sensor (Front: RH)	
A-97	—	
thru		
A-112		
A-113	EGR solenoid valve	
A-114	—	
thru		
A-120		

A-121	Front impact sensor (LH) <SRS>	
A-122	Front impact sensor (RH) <SRS>	
A-123	Theft-alarm horn*1	
A-124		
A-125	Hood switch*1	
A-126	Starter relay*1	
A-127	Outside thermo sensor <A/C>	
A-128	—	
A-129	—	
A-130	No connection	
A-131	Position lamp (LH)	<Vehicles built from May, 1994>
A-132	Headlamp (LH)	
A-133	Headlamp (RH)	
A-134	Position lamp (RH)	
A-135	No connection	

Remarks

*1: Vehicles with theft-alarm system.

*2: Vehicles built from April 1993.


ENGINE COMPARTMENT


L.H. drive vehicles with MPI-DOHC engine

Connector
symbol

A


- A-01X } Refer to CENTRALIZED JUNCTION
- A-14X }
- A-15 Side turn signal lamp (RH)
- A-16 ACTIVE-ECS front actuator (RH)
- A-17 Pulse generator <A/T>
- A-18 —
- A-19 —
- A-20 Windshield wiper motor
- A-21 Brake fluid level sensor
- A-22 Air flow sensor
- A-23 ACTIVE-ECS front solenoid valve
- A-24 Auto-cruise control actuator
- A-25 Purge control solenoid valve
- A-26 Ventilation solenoid valve <TCL>
- A-27 Vacuum solenoid valve <TCL>
- A-28 EPS solenoid valve
- A-29 Ignition timing adjustment connector
- A-30 Engine speed detection connector
- A-31 Fuel pump check connector
- A-32 ACTIVE-ECS front actuator (LH)
- A-33 Side turn signal lamp (LH)
- A-34 ABS speed sensor (Front: LH)
- A-35 4WS fluid level sensor
- A-36 ABS valve relay
- A-37 ABS motor relay
- A-38 —
- A-39 —
- A-40 —
- A-41 Front turn signal lamp (LH)
- A-42 }
- A-43 } ABS hydraulic unit
- A-44 }
- A-45 ABS hydraulic unit <TCL>
- A-46 Headlamp leveling unit (LH)
- A-47 Headlamp (LH)
- A-48 Headlamp (LH) <Vehicles built up to April, 1994>
- A-49 No connection
- A-50 Front fog lamp (LH)
- A-51 Dual pressure switch <A/C>
- A-52 ACTIVE-ECS G sensor
- A-53 Headlamp washer motor
- A-54 —
- A-55 Condenser fan motor
- A-56 Resistor
- A-57 } Horn
- A-60 }
- A-61 ACTIVE-ECS compressor
- A-62 ACTIVE-ECS exhaust solenoid valve
- A-63 ACTIVE-ECS front height sensor

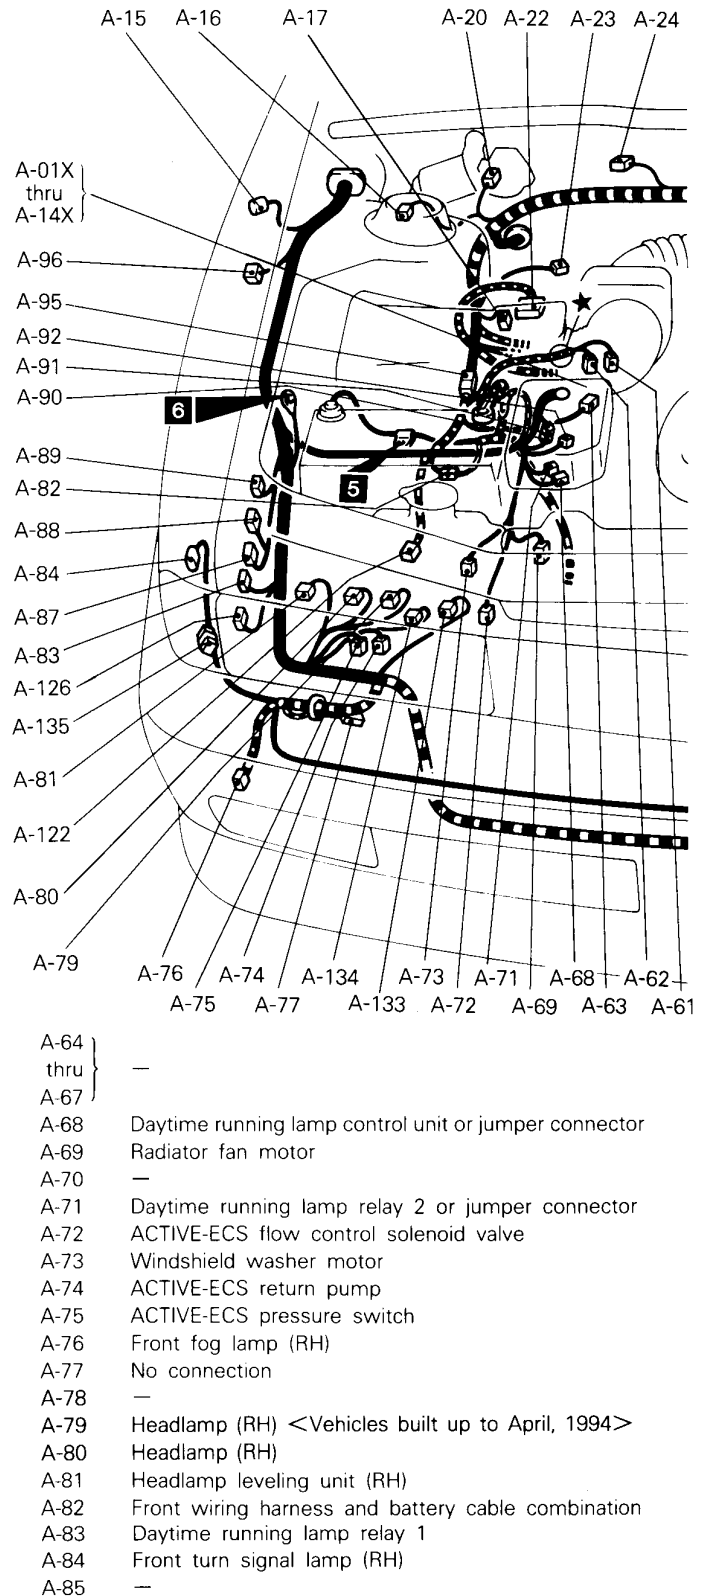

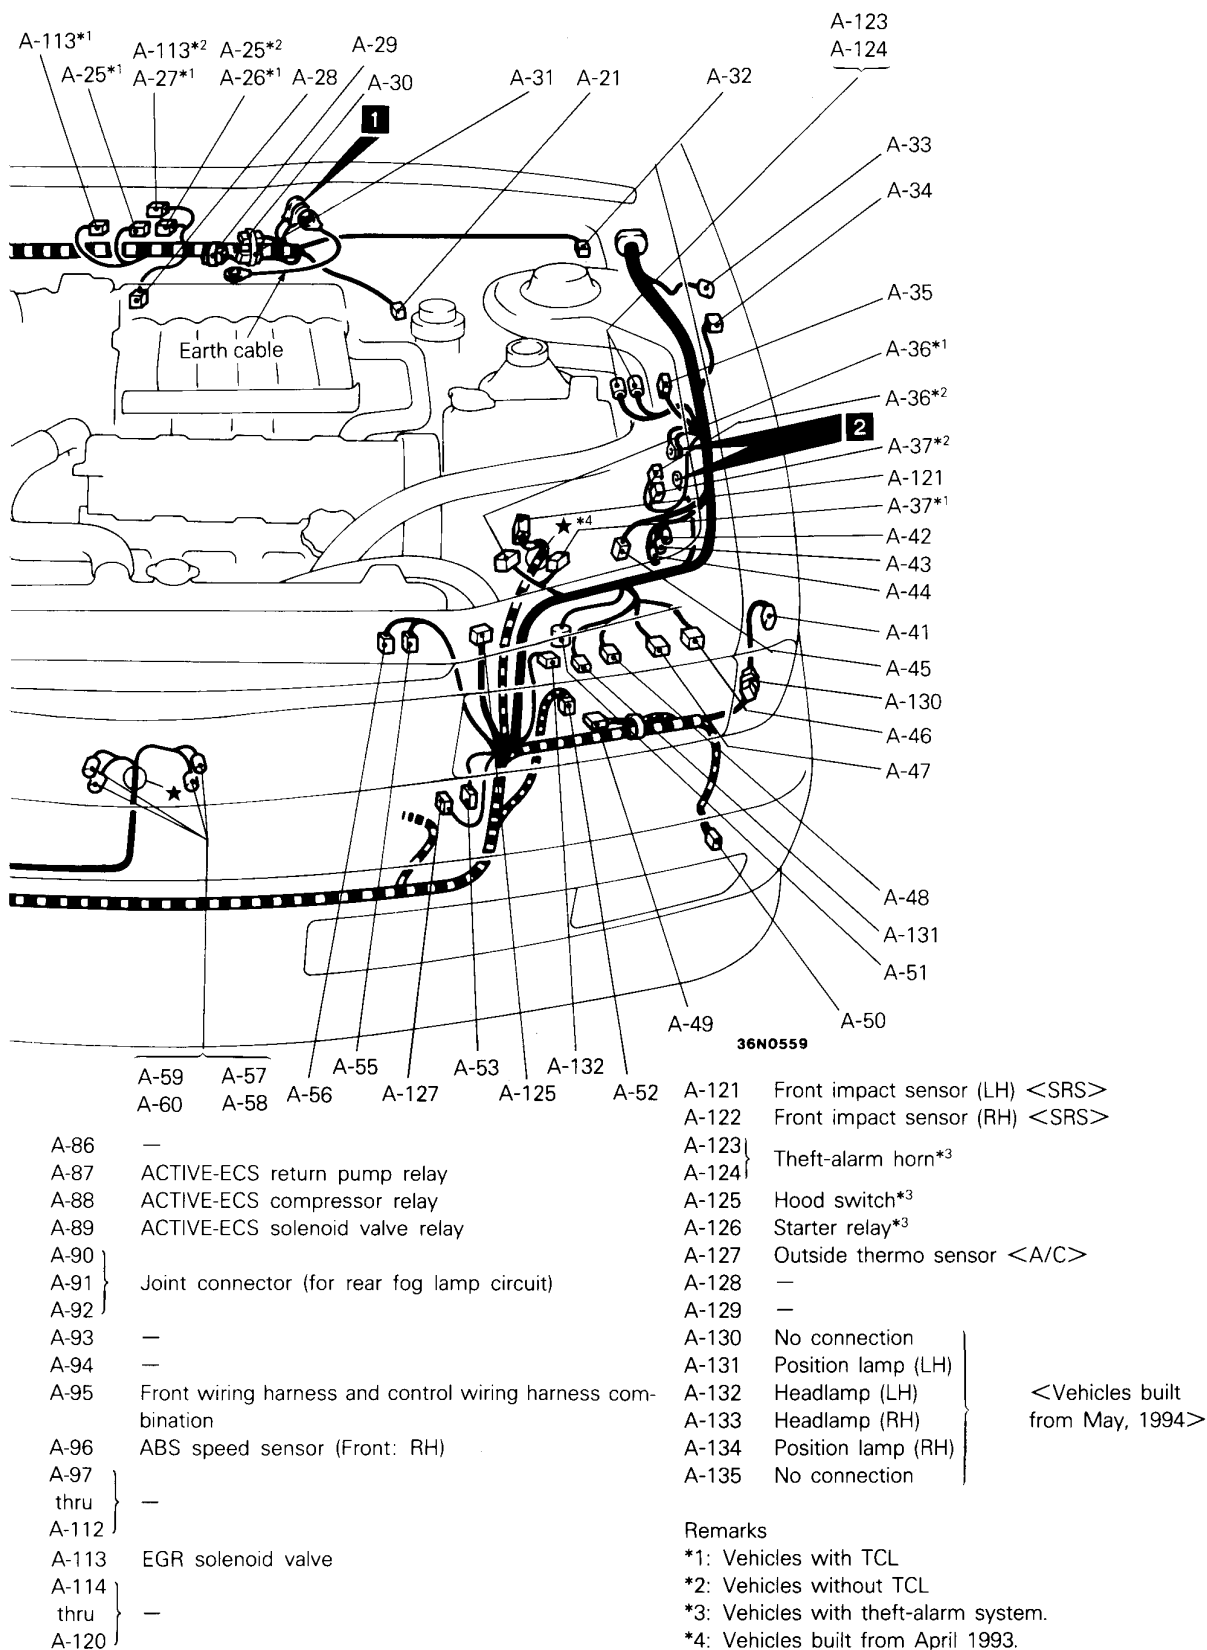


ENGINE COMPARTMENT


R.H. drive vehicles with MPI-SOHC engine <Vehicles without ABS>

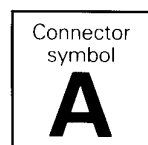

- A-01X } Refer to CENTRALIZED JUNCTION
- thru
- A-14X }
- A-15 Side turn signal lamp (RH)
- A-16 —
- A-17 Pulse generator <A/T>
- A-18 —
- A-19 —
- A-20 Windshield wiper motor
- A-21 Brake fluid level sensor
- A-22 Air flow sensor
- A-23 —
- A-24 No connection
- A-25 Purge control solenoid valve
- A-26 }
- A-27 } —
- A-28 }
- A-29 Ignition timing adjustment connector
- A-30 —
- A-31 Fuel pump check connector
- A-32 —
- A-33 Side turn signal lamp (LH)
- A-34 }
- thru
- A-40 }
- A-41 Front turn signal lamp (LH)
- A-42 }
- thru
- A-45 }
- A-46 Headlamp leveling unit (LH)
- A-47 Headlamp (LH)
- A-48 Headlamp (LH) <Vehicles built up to April, 1994>
- A-49 —
- A-50 Front fog lamp (LH)
- A-51 Dual pressure switch <A/C>
- A-52 —
- A-53 Headlamp washer motor
- A-54 A/C compressor
- A-55 Condenser fan motor
- A-56 Resistor
- A-57 }
- thru
- A-60 } Horn
- A-61 }
- A-62 }
- A-63 }

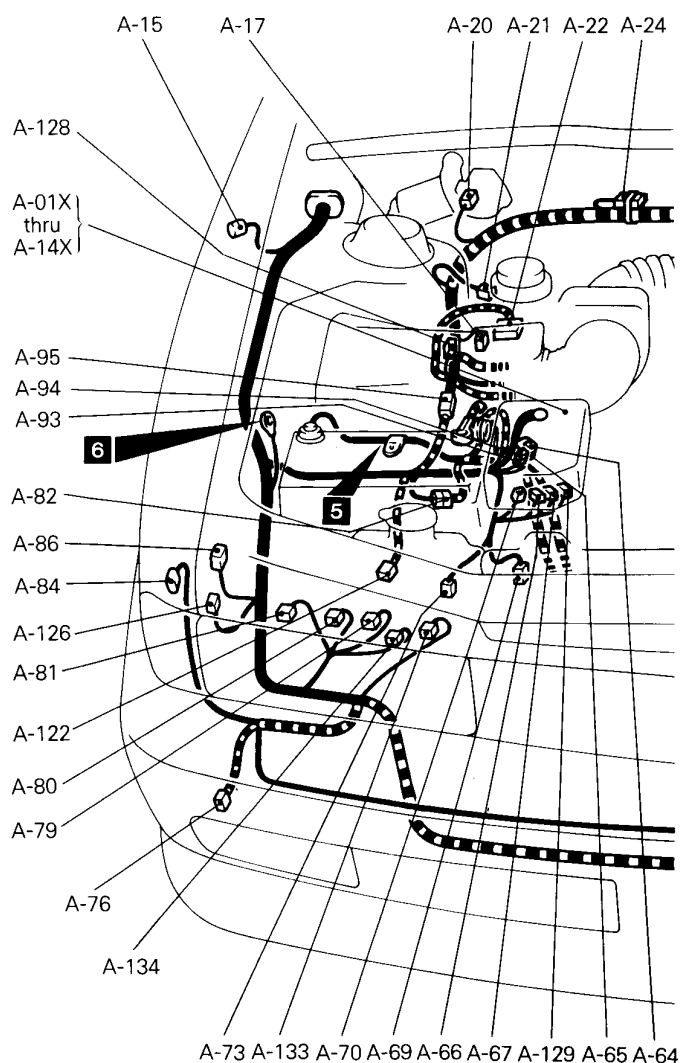

- A-64 }
- A-65 }
- A-66 Dim-dip lamp relay 3
- A-67 Dim-dip lamp relay 2
- A-68 —
- A-69 Radiator fan motor
- A-70 Resistor
- A-71 }
- A-72 }
- A-73 Windshield washer motor
- A-74 }
- A-75 }
- A-76 Front fog lamp (RH)
- A-77 —
- A-78 —
- A-79 Headlamp (RH) <Vehicles built up to April, 1994>
- A-80 Headlamp (RH)
- A-81 Headlamp leveling unit (RH)
- A-82 Front wiring harness and battery cable combination

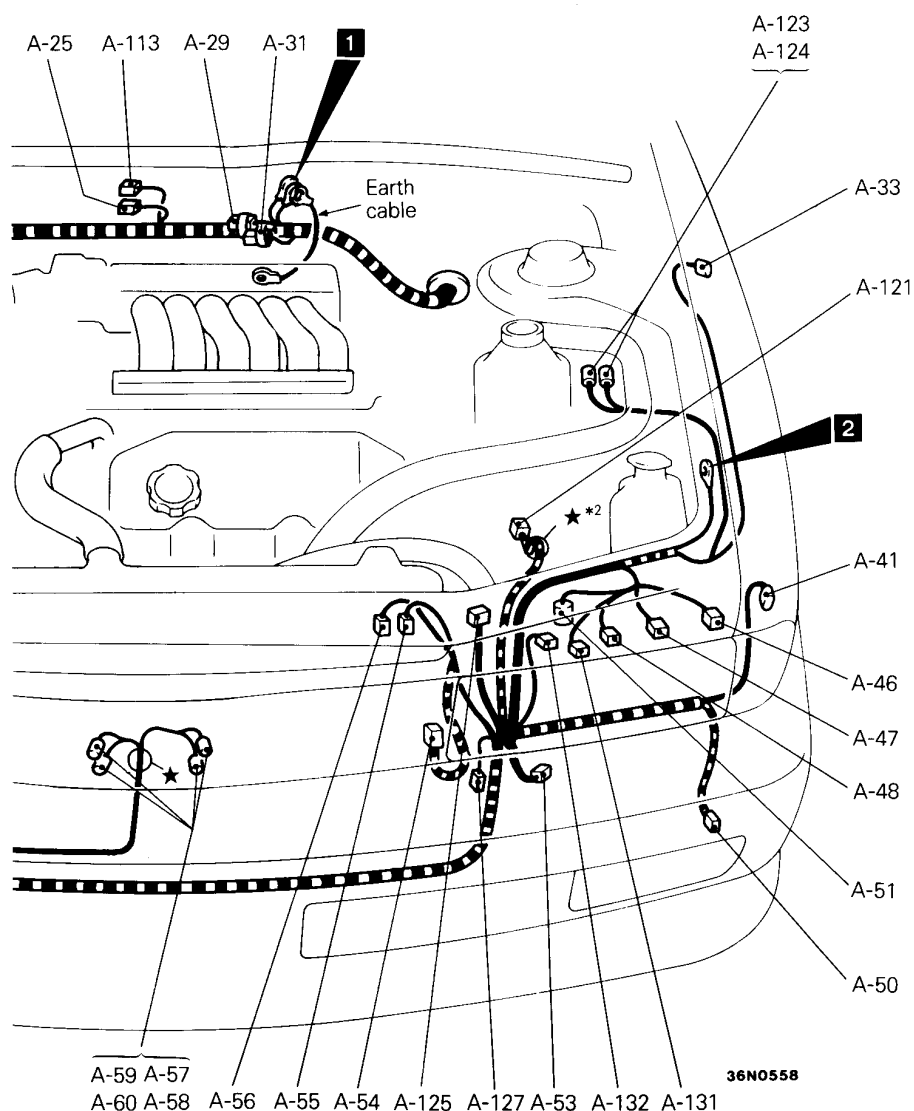

A-83	—
A-84	Front turn signal lamp (RH)
A-85	—
A-86	Dim-dip lamp relay 1
A-87	—
A-92	—
A-93	—
A-94	Joint connector (for rear fog lamp circuit)
A-95	Front wiring harness and control wiring harness combination
A-96	—
A-112	—
A-113	EGR solenoid valve
A-114	—
A-120	—

A-121	Front impact sensor (LH) <SRS>
A-122	Front impact sensor (RH) <SRS>
A-123	Theft-alarm horn*1
A-124	
A-125	Hood switch*1
A-126	Starter relay*1
A-127	Outside thermo sensor <A/C>
A-128	No connection
A-129	Dim-dip lamp relay 4
A-130	—
A-131	Position lamp (LH)
A-132	Headlamp (LH)
A-133	Headlamp (RH)
A-134	Position lamp (RH)

<Vehicles built from May, 1994>


Remarks

*1: Vehicles with theft-alarm system.


*2: Vehicles built from April 1993.

ENGINE COMPARTMENT


R.H. drive vehicles with MPI-SOHC engine <Vehicles with ABS>

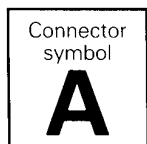

- A-01X } Refer to CENTRALIZED JUNCTION
- A-14X }
- A-15 Side turn signal lamp (RH)
- A-16 —
- A-17 Pulse generator <A/T>
- A-18 —
- A-19 —
- A-20 Windshield wiper motor
- A-21 Brake fluid level sensor
- A-22 Air flow sensor
- A-23 —
- A-24 No connection
- A-25 Purge control solenoid valve
- A-26 }
- A-27 } —
- A-28 }
- A-29 Ignition timing adjustment connector
- A-30 —
- A-31 Fuel pump check connector
- A-32 —
- A-33 Side turn signal lamp (LH)
- A-34 ABS speed sensor (Front: LH)
- A-35 —
- A-36 ABS valve relay
- A-37 ABS motor relay
- A-38 } Front wiring harness and ABS wiring
- A-39 } harness combination
- A-40 —
- A-41 Front turn signal lamp (LH)
- A-42 }
- A-43 } ABS hydraulic unit
- A-44 }
- A-45 —
- A-46 Headlamp leveling unit (LH)
- A-47 Headlamp (LH)
- A-48 Headlamp (LH) <Vehicles built up to April, 1994>
- A-49 —
- A-50 Front fog lamp (LH)
- A-51 Dual pressure switch <A/C>
- A-52 —
- A-53 Headlamp washer motor
- A-54 A/C compressor
- A-55 Condenser fan motor
- A-56 Resistor
- A-57 } Horn
- A-60 }
- A-61 }
- A-62 }
- A-63 }

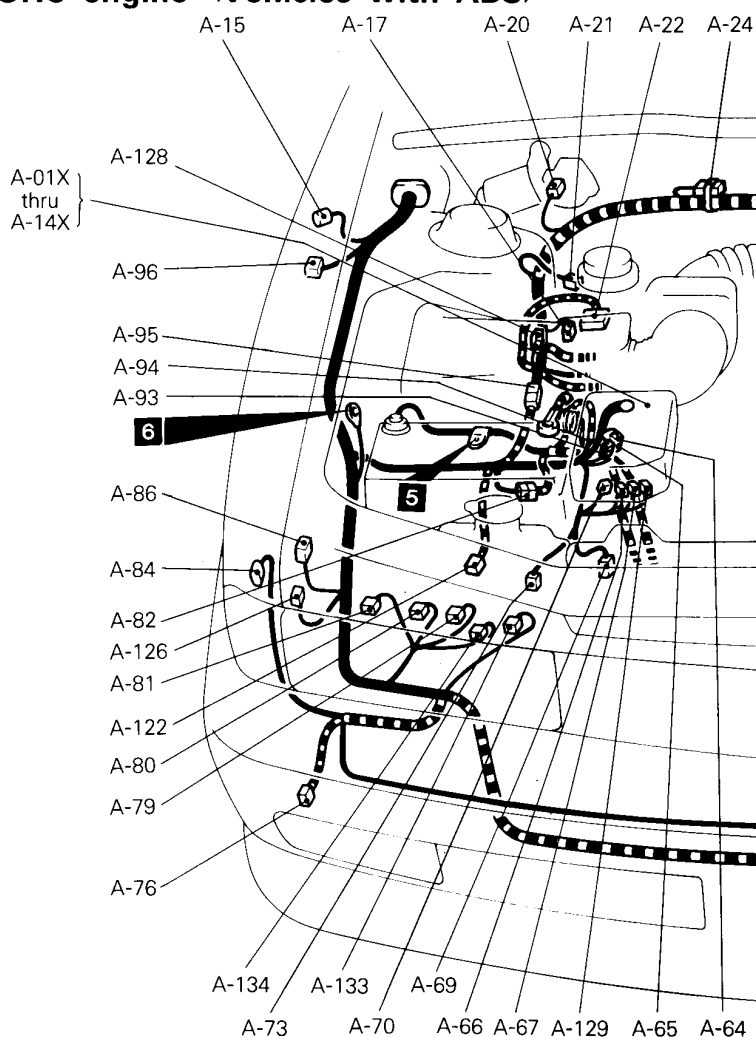

- A-64 }
- A-65 }
- A-66 Dim-dip lamp relay 3
- A-67 Dim-dip lamp relay 2
- A-68 —
- A-69 Radiator fan motor
- A-70 Resistor
- A-71 }
- A-72 }
- A-73 Windshield washer motor
- A-74 }
- A-75 }
- A-76 Front fog lamp (RH)
- A-77 —
- A-78 —
- A-79 Headlamp (RH) <Vehicles built up to April, 1994>
- A-80 Headlamp (RH)
- A-81 Headlamp leveling unit (RH)
- A-82 Front wiring harness and battery cable combination

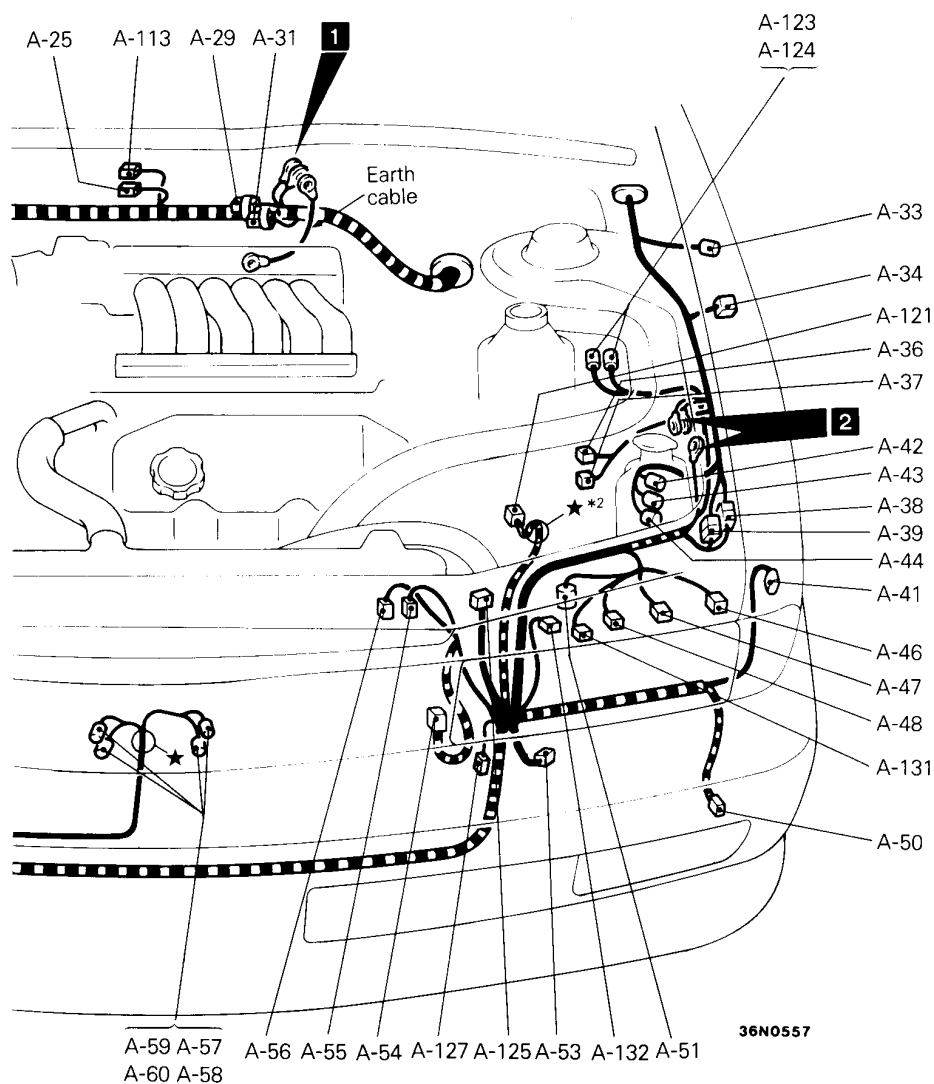

- A-83 —
- A-84 Front turn signal lamp (RH)
- A-85 —
- A-86 Dim-dip lamp relay 1
- A-87 } —
- thru } —
- A-92 } —
- A-93 } Joint connector (for rear fog lamp circuit)
- A-94 } —
- A-95 Front wiring harness and control wiring harness combination
- A-96 ABS speed sensor (Front: RH)
- A-97 } —
- thru } —
- A-112 } —
- A-113 EGR solenoid valve
- A-114 } —
- thru } —
- A-120 } —

- A-121 Front impact sensor (LH) <SRS>
 - A-122 Front impact sensor (RH) <SRS>
 - A-123 } Theft-alarm horn*1
 - A-124 } —
 - A-125 Hood switch*1
 - A-126 Starter relay*1
 - A-127 Outside thermo sensor <A/C>
 - A-128 No connection
 - A-129 Dim-dip lamp relay 4
 - A-130 —
 - A-131 Position lamp (LH)
 - A-132 Headlamp (LH)
 - A-133 Headlamp (RH)
 - A-134 Position lamp (RH)
- <Vehicles built from May, 1994>


Remarks

*1: Vehicles with theft-alarm system.


*2: Vehicles built from April 1993.


ENGINE COMPARTMENT

R.H. drive vehicles with MPI-DOHC engine

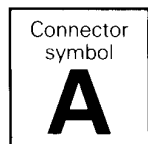

- A-01X } Refer to CENTRALIZED JUNCTION
- A-14X }
- A-15 Side turn signal lamp (RH)
- A-16 ACTIVE-ECS front actuator (RH)
- A-17 Pulse generator <A/T>
- A-18 —
- A-19 —
- A-20 Windshield wiper motor
- A-21 Brake fluid level sensor
- A-22 Air flow sensor
- A-23 ACTIVE-ECS front solenoid valve
- A-24 Auto-cruise control actuator
- A-25 Purge control solenoid valve
- A-26 Ventilation solenoid valve <TCL>
- A-27 Vacuum solenoid valve <TCL>
- A-28 EPS solenoid valve
- A-29 Ignition timing adjustment connector
- A-30 Engine speed detection connector
- A-31 Fuel pump check connector
- A-32 ACTIVE-ECS front actuator (LH)
- A-33 Side turn signal lamp (LH)
- A-34 ABS speed sensor (Front: LH)
- A-35 4WS fluid level sensor
- A-36 ABS valve relay
- A-37 ABS motor relay
- A-38 } Front wiring harness and ABS wiring
- A-39 } harness combination
- A-40 —
- A-41 Front turn signal lamp (LH)
- A-42 }
- A-43 } ABS hydraulic unit
- A-44 }
- A-45 ABS hydraulic unit <TCL>
- A-46 Headlamp leveling unit (LH)
- A-47 Headlamp (LH)
- A-48 Headlamp (LH) <Vehicles built up to April, 1994>
- A-49 —
- A-50 Front fog lamp (LH)
- A-51 Dual pressure switch <A/C>
- A-52 ACTIVE-ECS G sensor
- A-53 Headlamp washer motor
- A-54 —
- A-55 Condenser fan motor
- A-56 Resistor
- A-57 } Horn
- A-60 }
- A-61 ACTIVE-ECS compressor
- A-62 ACTIVE-ECS exhaust solenoid valve

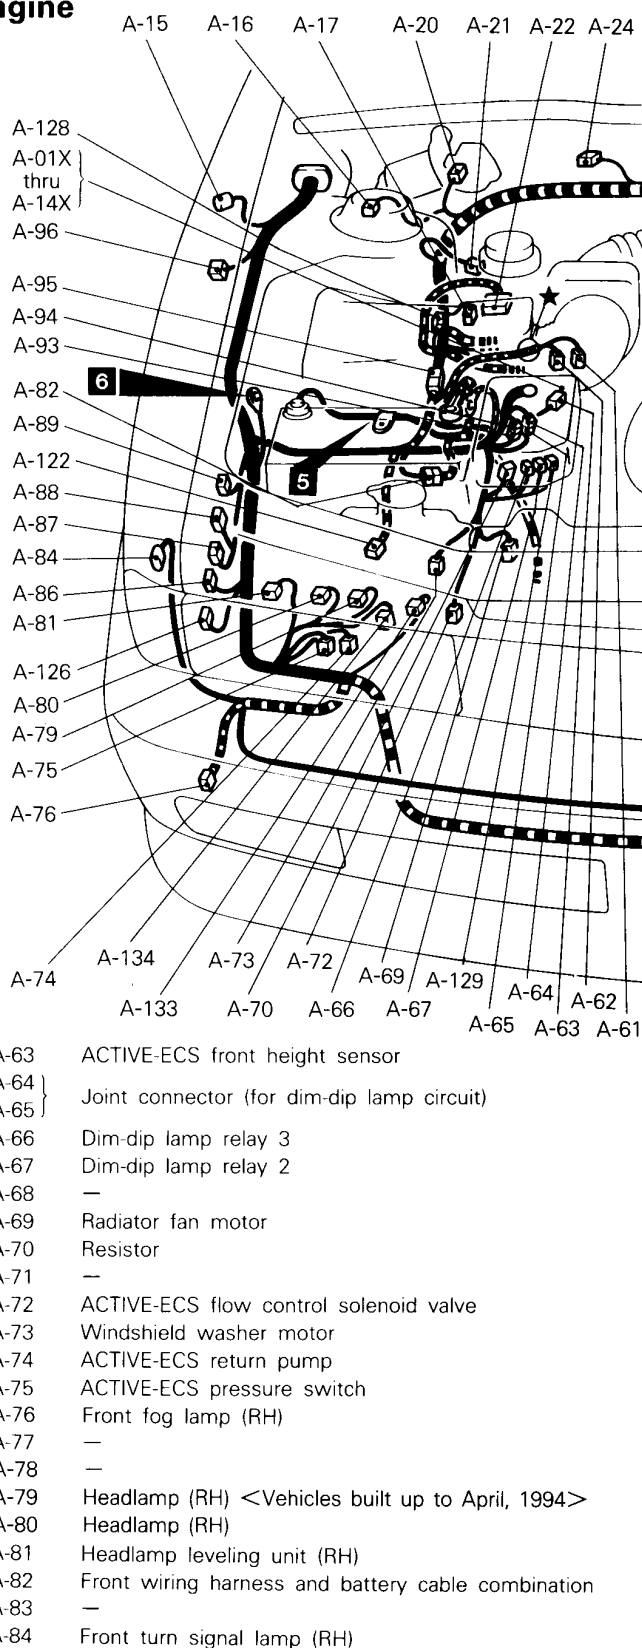

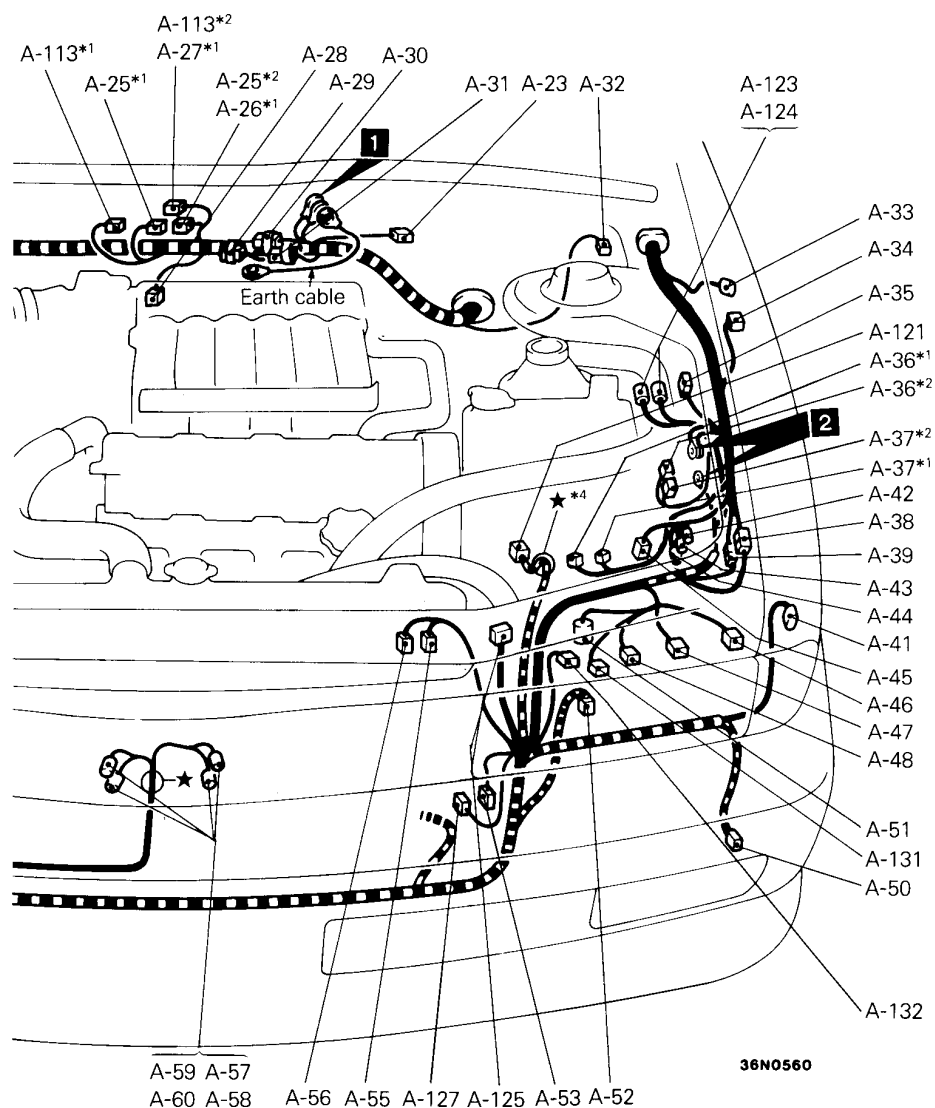

36N0560

A-85	—
A-86	Dim-dip lamp relay 1
A-87	ACTIVE-ECS return pump relay
A-88	ACTIVE-ECS compressor relay
A-89	ACTIVE-ECS solenoid valve relay
A-90	—
A-91	
A-92	
A-93	Joint connector (for rear fog lamp circuit)
A-94	
A-95	Front wiring harness and control wiring harness combination
A-96	ABS speed sensor (Front: RH)
A-97	—
thru	
A-112	
A-113	EGR solenoid valve
A-114	—
thru	
A-120	

A-121	Front impact sensor (LH) <SRS>
A-122	Front impact sensor (RH) <SRS>
A-123	Theft-alarm horn*3
A-124	
A-125	Hood switch*3
A-126	Starter relay*3
A-127	Outside thermo sensor <A/C>
A-128	No connection
A-129	Dim-dip lamp relay 4
A-130	—
A-131	Position lamp (LH)
A-132	Headlamp (LH)
A-133	Headlamp (RH)
A-134	Position lamp (RH)

<Vehicles built from May, 1994>

Remarks


- *1: Vehicles with TCL
- *2: Vehicles without TCL
- *3: Vehicles with theft-alarm system.
- *4: Vehicles built from April 1993.

ENGINE AND TRANSMISSION


MPI-SOHC engine

Connector
symbol

B

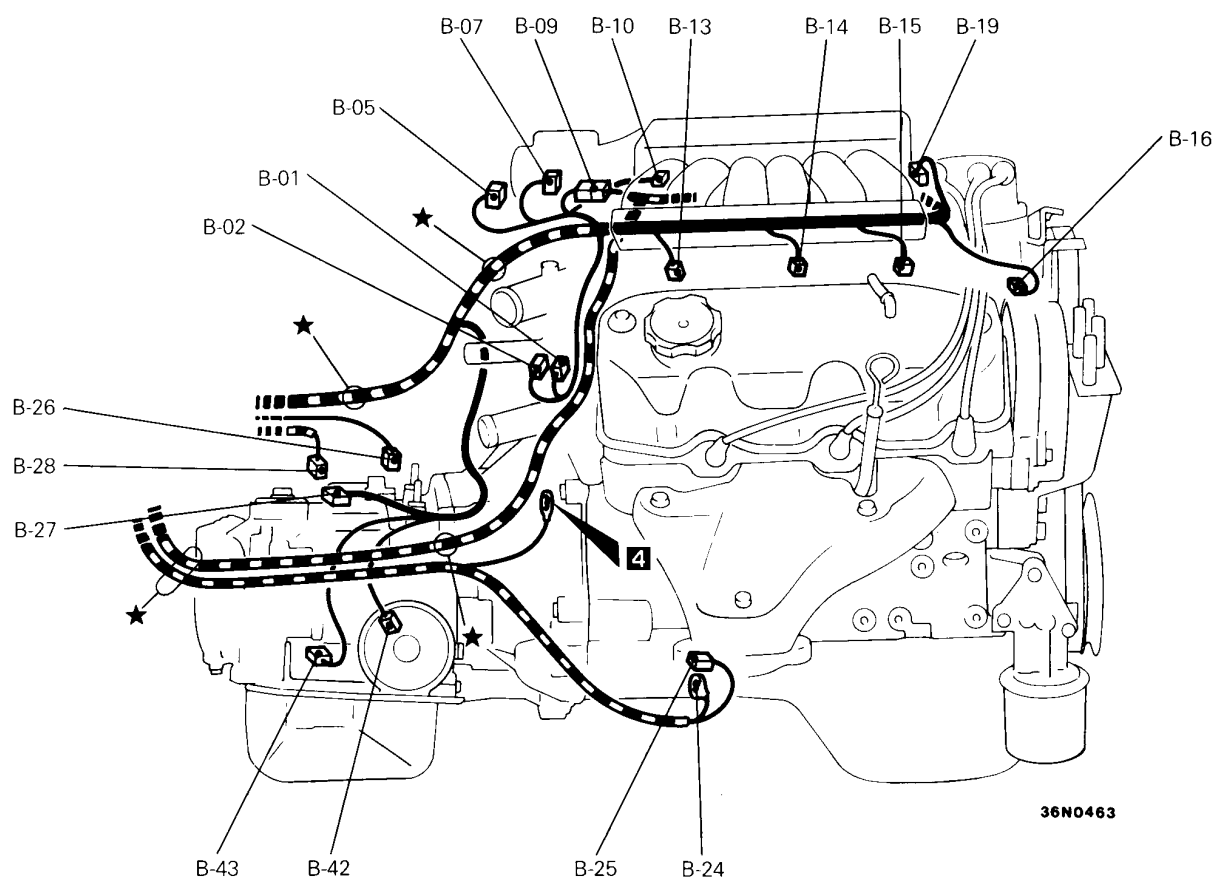

B-01	Engine coolant temperature gauge unit	B-10	Detonation sensor
B-02	Engine coolant temperature sensor (for engine control)	B-11 } Variable induction control servo	
B-03	—	B-12 }	
B-04	Crank angle sensor and top dead center sensor	B-13	Injector No. 5
B-05	Idle speed control servo	B-14	Injector No. 3
B-06	—	B-15	Injector No. 1
B-07	Throttle position sensor	B-16	Power steering oil pressure switch
B-08	—	B-17	Injection coil
B-09	Control wiring harness and injection wiring harness combination	B-18	Capacitor assembly
		B-19	Power transistor


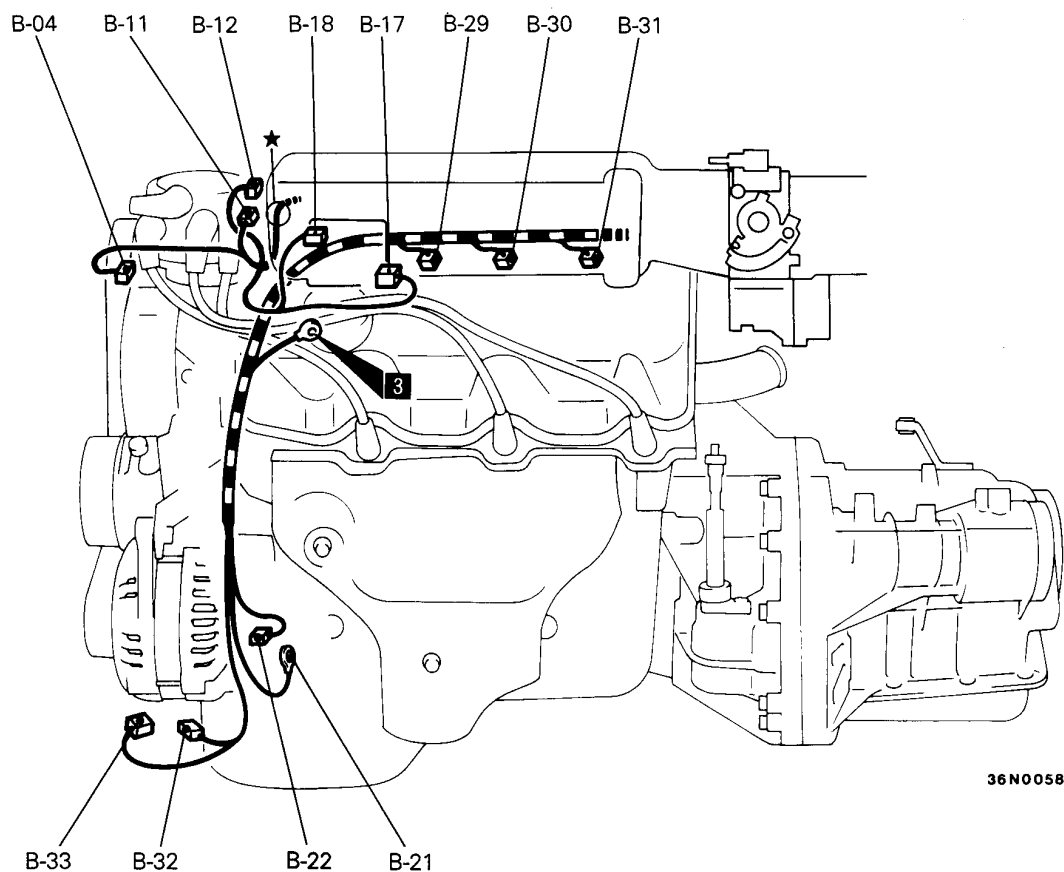


36N0058

B-20	—	B-30	Injector No. 4
B-21	Alternator	B-31	Injector No. 6
B-22		B-32	Engine oil pressure switch
B-23	—	B-33	Engine oil level sensor
B-24	Starter	B-34	—
B-25		B-41	
B-26	Back-up lamp switch <M/T>	B-42	Kickdown servo switch <A/T>
B-27	Inhibitor switch <A/T>	B-43	A/T fluid temperature sensor <A/T>
B-28	ELC-4A/T control solenoid valve		
B-29	Injector No. 2		


ENGINE AND TRANSMISSION

MPI-DOHC engine

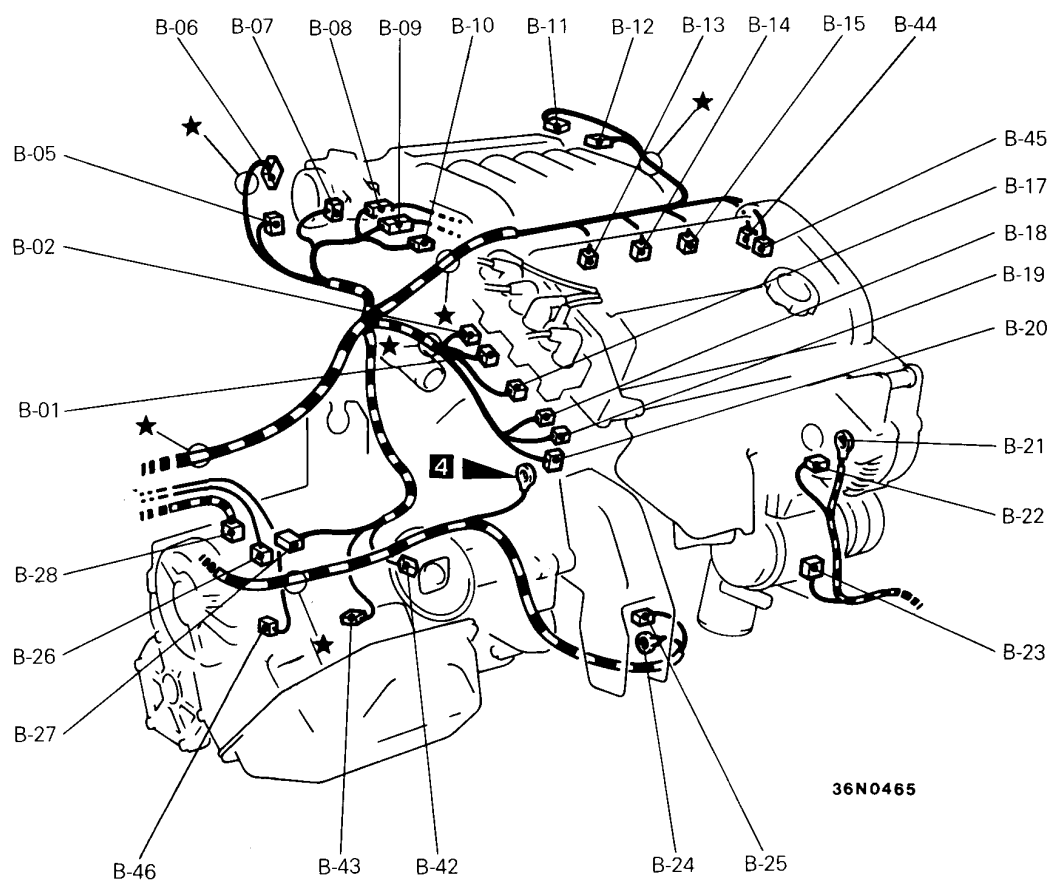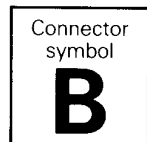

- B-01 Engine coolant temperature gauge unit
- B-02 Engine coolant temperature sensor (for engine control)
- B-03 } —
- B-04 }
- B-05 Idle speed control servo
- B-06 Accelerator position sensor <TCL>
- B-07 Throttle position sensor
- B-08 Control wiring harness and oil pressure wiring harness combination
- B-09 Control wiring harness and injection wiring harness combination

- B-10 Detonation sensor
- B-11 } Variable induction control servo
- B-12 }
- B-13 Injector No. 5
- B-14 Injector No. 3
- B-15 Injector No. 1
- B-16 Power steering oil pressure switch
- B-17 Injection coil
- B-18 Capacitor
- B-19 } Power transistor
- B-20 }

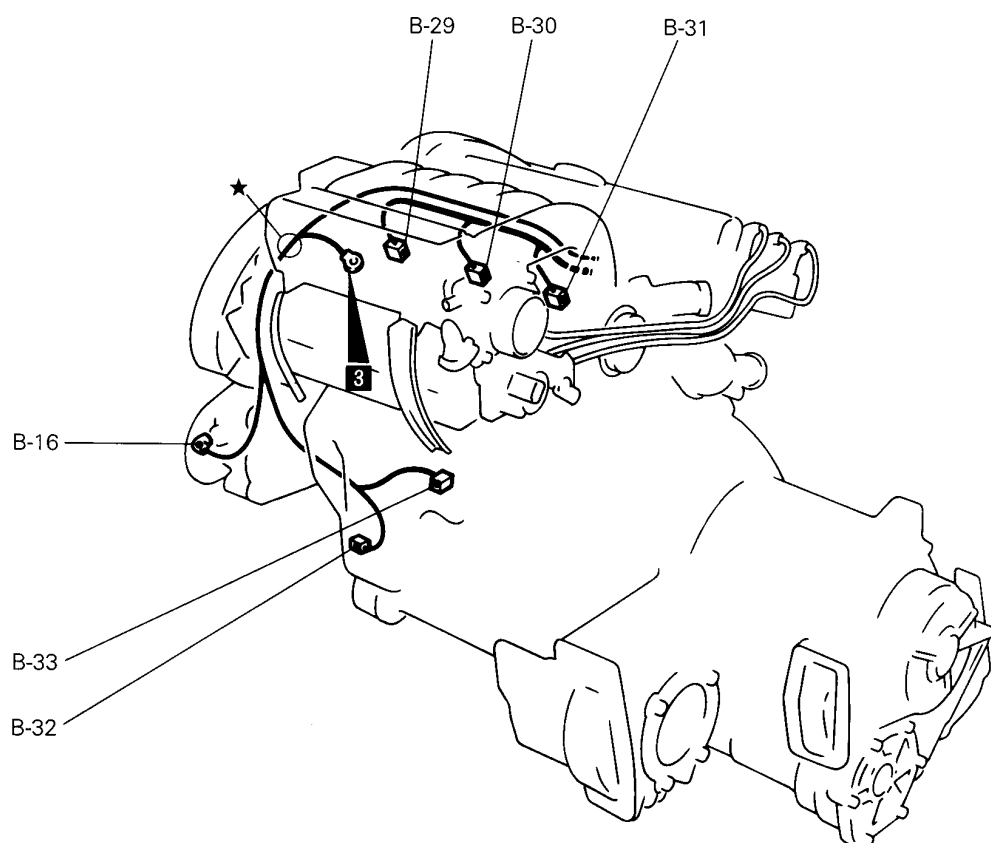



36N0059

B-21 }
 B-22 } Alternator
 B-23 A/C compressor
 B-24 }
 B-25 } Starter
 B-26 Back-up lamp switch <M/T>
 B-27 Inhibitor switch <A/T>
 B-28 ELC-4A/T control solenoid valve
 B-29 Injector No. 2
 B-30 Injector No. 4
 B-31 Injector No. 6

B-32 Engine oil pressure switch
 B-33 Engine oil level sensor
 B-34 }
 thru } —
 B-41 }
 B-42 Kickdown servo switch <A/T>
 B-43 A/T fluid temperature sensor <A/T>
 B-44 Camshaft position sensor
 B-45 Crank angle sensor
 B-46 First detection switch <TCL-M/T>


DASH PANEL

L.H. drive vehicles without SRS

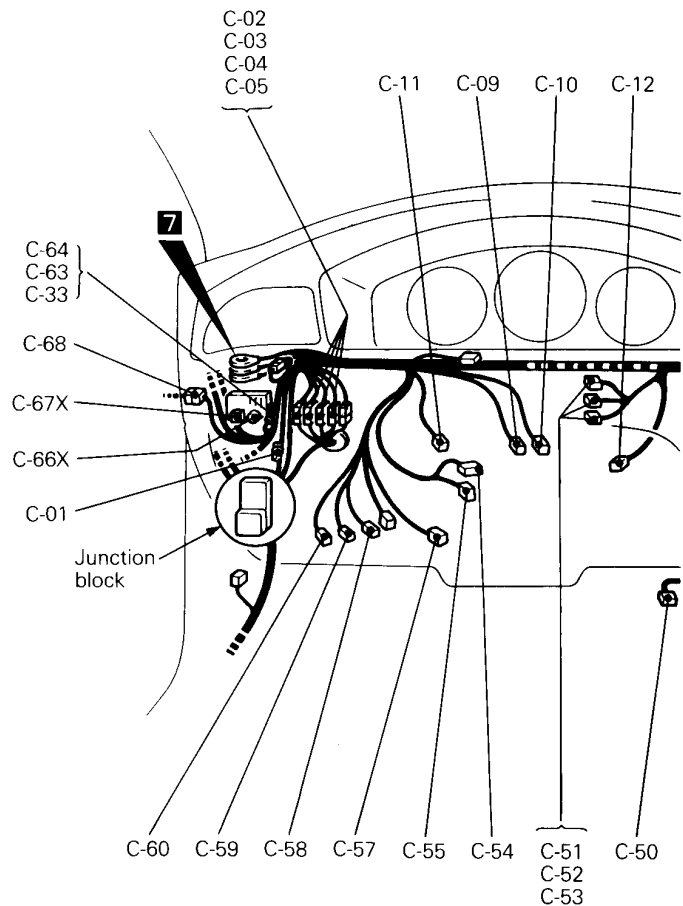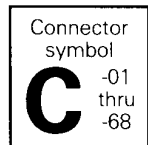

- C-01 Diode (for idle-up circuit) <DOHC>
- C-02 } Body wiring harness and front wiring
- C-03 } harness combination
- C-04 }
- C-05 Body wiring harness and front wiring harness combination <ABS>
- C-06 } ETACS unit
- C-07 }
- C-08 —
- C-09 Stop lamp switch (4-pin) <Auto-cruise control> or no connection
- C-10 Stop lamp switch (2-pin) or no connection <Auto-cruise control>
- C-11 Clutch pedal switch <Auto-cruise control (M/T)>
- C-12 Headlamp leveling switch
- C-13 —
- C-14 } Body wiring harness and control wiring
- C-15 } harness combination
- C-16 } Body wiring harness and A/C wiring
- C-17 } harness combination
- C-18 }
- C-19 ELC-4A/T control unit
- C-20 }
- C-21 —
- C-22 Engine oil level relay
- C-23 Headlamp washer relay
- C-24 Front wiring harness and ACTIVE-ECS wiring harness combination
- C-25 }
- C-26 }
- C-27 } Engine control unit
- C-28 }
- C-29 Body wiring harness and front door wiring harness (RH) combination

- C-30 Engine control relay
- C-31 Control wiring harness and ACTIVE-ECS wiring harness combination
- C-32 —
- C-33 Diode (for ABS circuit)
- C-34 Oxygen sensor
- C-35 Rear fog lamp switch
- C-36 Body wiring harness and control wiring harness combination <TCL>
- C-37 Defogger switch
- C-38 } Cigarette lighter
- C-39 }
- C-40 Heated seat switch (RH)
- C-41 ACTIVE-ECS switch

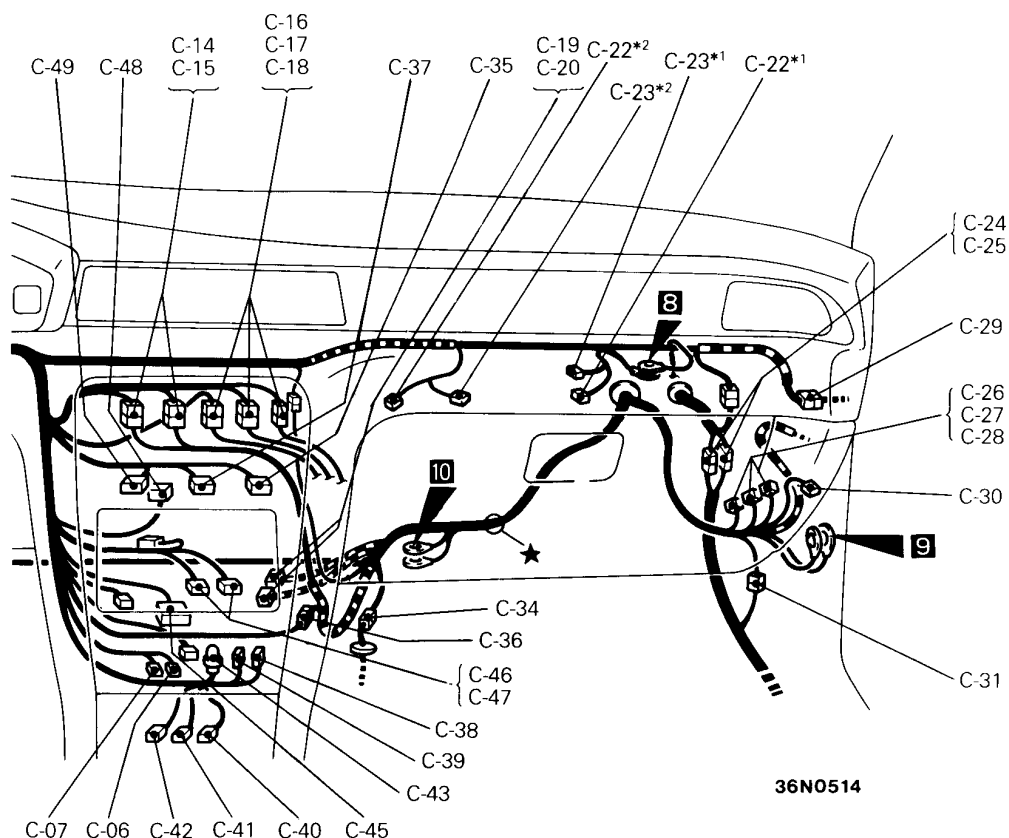

Remarks


*1: Vehicles built up to September 1993.

*2: Vehicles built from October 1993.

C-42 Heated seat switch (LH)
C-43 Cigarette lighter illumination lamp
C-44 —
C-45 Auto-cruise control unit
C-46 } Radio and tape player
C-47 }
C-48 EPS control unit
C-49 Hazard warning switch
C-50 Wide open throttle switch <A/T>
C-51 } Column switch
C-52 }
C-53 }
C-54 Ignition switch
C-55 Key reminder switch



C-56 —
C-57 Foot lamp (LH)
C-58 } Accessory socket
C-59 }
C-60 Rear wiper and washer switch
C-61 } —
C-62 }
C-63 Diode (for ACTIVE-ECS circuit)
C-64 Diode (for headlamp circuit)
C-65X } Refer to CENTRALIZED JUNCTION
C-66X }
C-67X }
C-68 Body wiring harness and front door wiring harness (LH) combination

L.H. drive vehicles without SRS

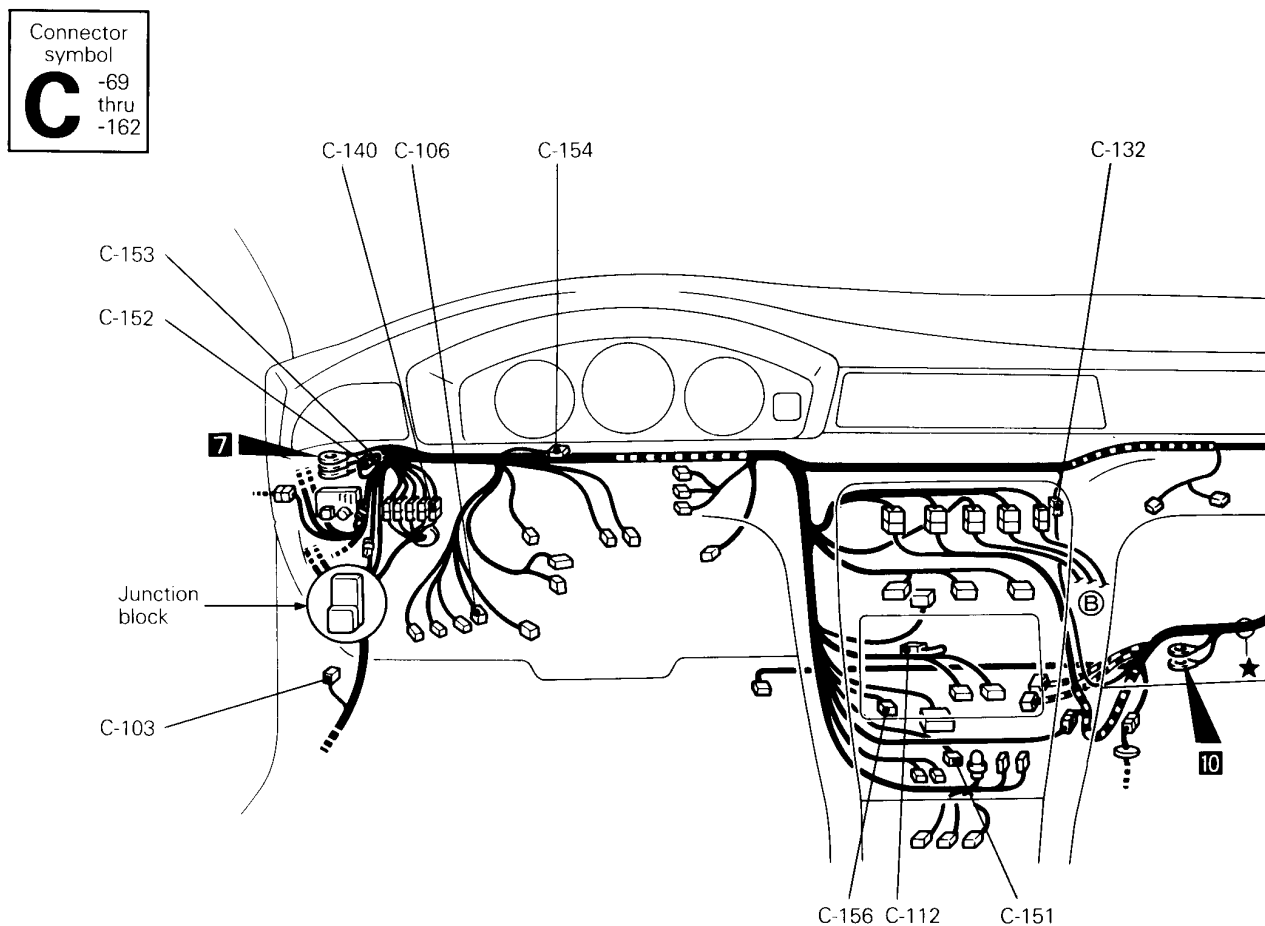

C-69 }	A/C control panel assembly	C-88	Front wiring harness and junction block combination
C-70 }		C-89	Instrument panel wiring harness and junction block combination
C-71	Mode selection damper control motor	C-90	Defogger relay
C-72	Air mixing damper control motor	C-91	Blower motor relay
C-73	Power transistor	C-92	Diagnosis connector
C-74	Water temperature sensor	C-93	Diagnosis connector <TCL>
C-75	Fin thermo sensor	C-94	Diode <4WS>
C-76	—	C-95	Diode (for ACTIVE-ECS circuit)
C-77	Air selection damper control motor	C-96	—
C-78	Blower motor	C-97	—
C-79	Blower motor high relay	C-98	Body wiring harness and junction block combination
C-80	A/C belt lock controller <DOHC>	thru	
C-81 }	A/C control unit	C-102 }	
C-82 }		C-103	TCL valve relay
C-83	—	C-104 }	Body wiring harness and junction block combination
C-84	—	C-105 }	
C-85 }	Front wiring harness and junction block combination	C-106	TCL switch
C-86 }			
C-87	Roof wiring harness and junction block combination		



Vehicles with air conditioner

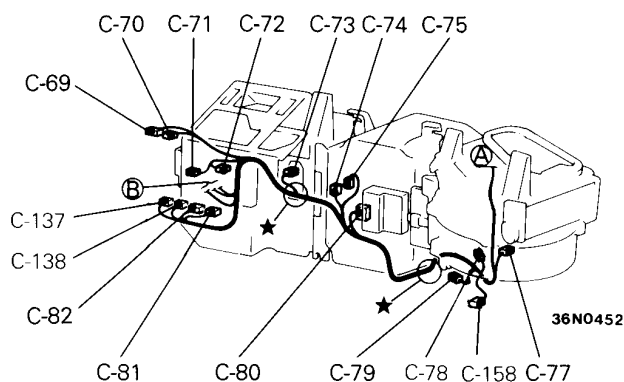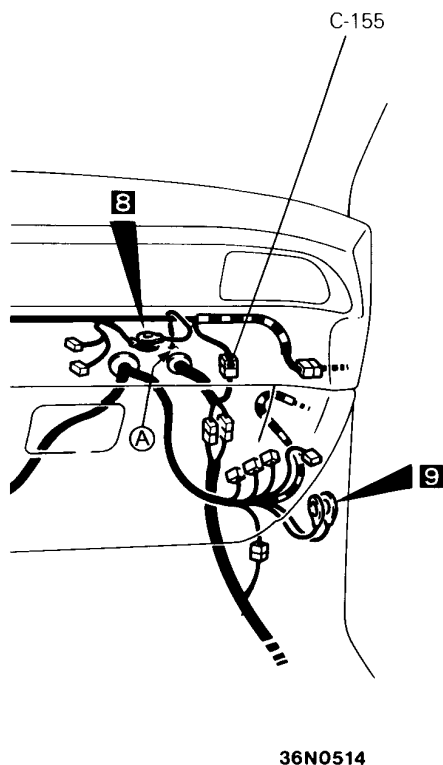

Junction block

(Front)

(Rear)

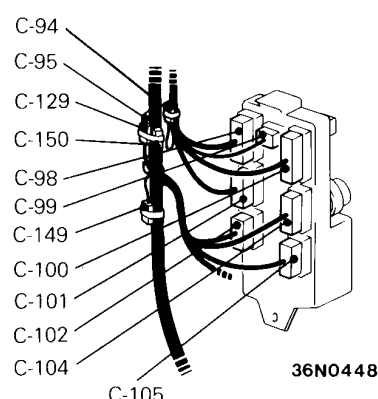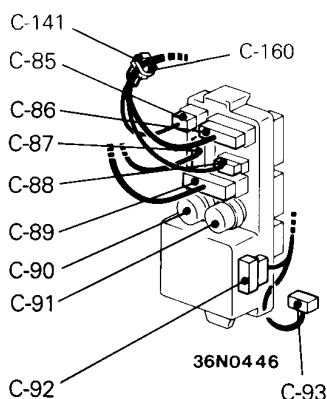



C-107	}	—
thru		
C-111		
C-112		No connection
C-113	}	—
thru		
C-128		
C-129		Diode (for power seat circuit) <M/T>
C-130	}	—
C-131		
C-132		Body wiring harness and control wiring harness combination
C-133	}	—
thru		
C-136		
C-137	}	A/C control unit
C-138		
C-139		—
C-140		Body wiring harness and front wiring harness combination

C-141	Diode (for rear fog lamp circuit)
C-142	} —
thru	
C-148	
C-149	Diode (for central door locking circuit)*
C-150	Diode (for trunk room lamp, starting circuit)*
C-151	Theft-alarm horn relay*
C-152	} Joint connector (for idle up circuit <DOHC>)
C-153	
C-154	No connection <TCL (M/T)>
C-155	Body wiring harness and front wiring harness combination
C-156	Lighting monitor buzzer
C-157	—
C-158	Foot lamp (RH)
C-159	—
C-160	Diode (for cooling circuit)
C-161	—
C-162	—
Remark	

*: Vehicles with theft-alarm system.


DASH PANEL**L.H. drive vehicles with SRS**

<Vehicles without front passenger air bag>

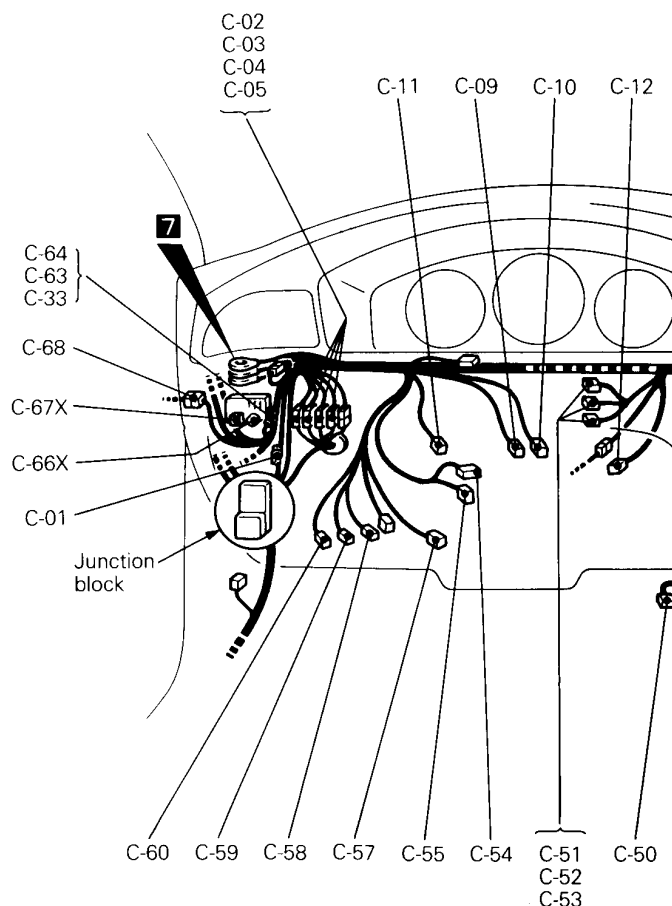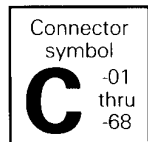

- C-01 Diode (for idle-up circuit) <DOHC>
- C-02 } Body wiring harness and front wiring
- C-03 } harness combination
- C-04 }
- C-05 Body wiring harness and front wiring harness combination <ABS>
- C-06 } ETACS unit
- C-07 } —
- C-08 }
- C-09 Stop lamp switch (4-pin) <Auto-cruise control> or no connection
- C-10 Stop lamp switch (2-pin) or no connection <Auto-cruise control>
- C-11 Clutch pedal switch <Auto-cruise control (M/T)>
- C-12 Headlamp leveling switch
- C-13 —
- C-14 } Body wiring harness and control wiring
- C-15 } harness combination
- C-16 }
- C-17 } Body wiring harness and A/C wiring
- C-18 } harness combination
- C-19 }
- C-20 } ELC-4A/T control unit
- C-21 } —
- C-22 Engine oil level relay
- C-23 Headlamp washer relay
- C-24 } Front wiring harness and ACTIVE-ECS wiring
- C-25 } harness combination
- C-26 }
- C-27 } Engine control unit
- C-28 }
- C-29 Body wiring harness and front door wiring harness (RH) combination

- C-30 Engine control relay
- C-31 Control wiring harness and ACTIVE-ECS wiring harness combination
- C-32 —
- C-33 Diode (for ABS circuit)
- C-34 Oxygen sensor
- C-35 Rear fog lamp switch
- C-36 Body wiring harness and control wiring harness combination <TCL>
- C-37 Defogger switch
- C-38 } Cigarette lighter
- C-39 }
- C-40 Heated seat switch (RH)
- C-41 ACTIVE-ECS switch

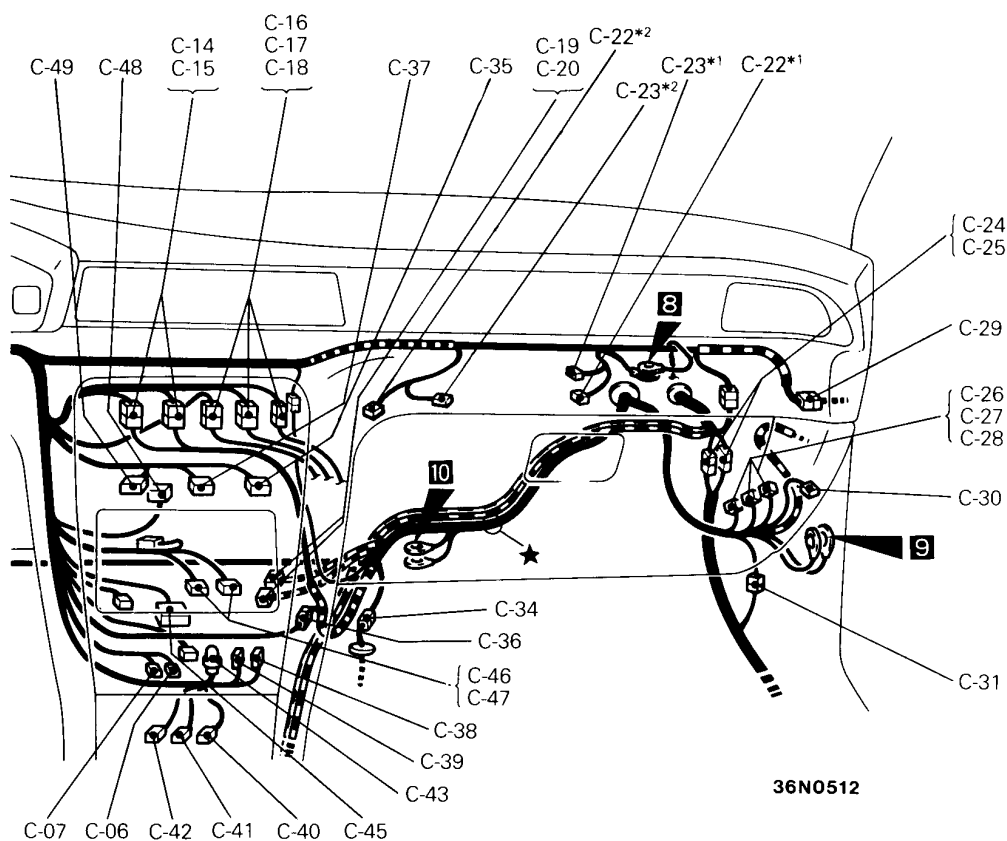

Remarks

*1: Vehicles built up to September 1993.



*2: Vehicles built from October 1993.

C-42 Heated seat switch (LH)
 C-43 Cigarette lighter illumination lamp
 C-44 —
 C-45 Auto-cruise control unit
 C-46 } Radio and tape player
 C-47 }
 C-48 EPS control unit
 C-49 Hazard warning switch
 C-50 Wide open throttle switch <A/T>
 C-51 } Column switch
 C-52 }
 C-53 }
 C-54 Ignition switch
 C-55 Key reminder switch

C-56 —
 C-57 Foot lamp (LH)
 C-58 } Accessory socket
 C-59 }
 C-60 Rear wiper and washer switch
 C-61 } —
 C-62 }
 C-63 Diode (for ACTIVE-ECS circuit)
 C-64 Diode (for headlamp circuit)
 C-65X } Refer to CENTRALIZED JUNCTION
 C-66X }
 C-67X }
 C-68 Body wiring harness and front door wiring harness (LH) combination



L.H. drive vehicles with SRS

<Vehicles without front passenger air bag>

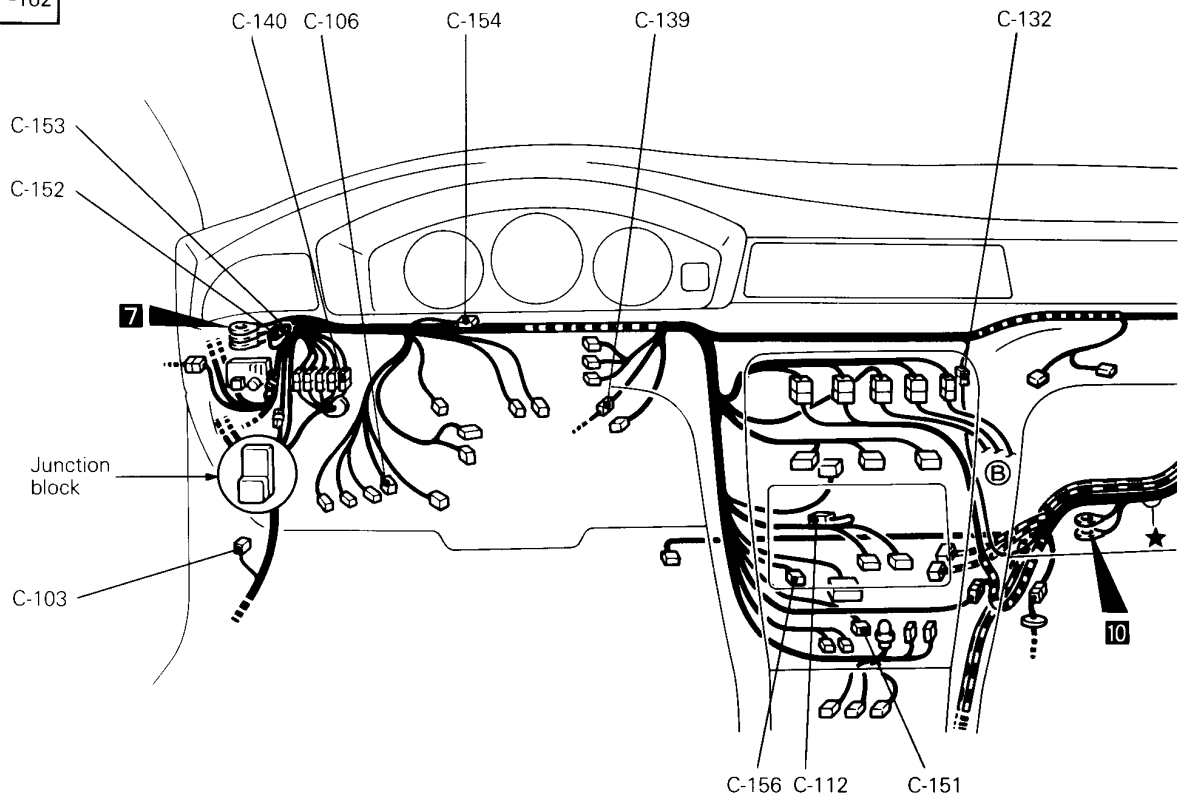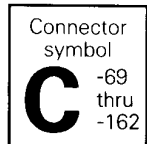

C-69 }	A/C control panel assembly	C-88	Front wiring harness and junction block combination
C-70 }		C-89	Instrument panel wiring harness and junction block combination
C-71	Mode selection damper control motor	C-90	Defogger relay
C-72	Air mixing damper control motor	C-91	Blower motor relay
C-73	Power transistor	C-92	Diagnosis connector
C-74	Water temperature sensor	C-93	Diagnosis connector <TCL>
C-75	Fin thermo sensor	C-94	Diode <4WS>
C-76	—	C-95	Diode (for ACTIVE-ECS circuit)
C-77	Air selection damper control motor	C-96	—
C-78	Blower motor	C-97	—
C-79	Blower motor high relay	C-98	Body wiring harness and junction block combination
C-80	A/C belt lock controller <DOHC>	thru	
C-81 }	A/C control unit	C-102 }	
C-82 }		C-103	TCL valve relay
C-83	—	C-104 }	Body wiring harness and junction
C-84	—	C-105 }	block combination
C-85 }	Front wiring harness and junction block combination	C-106	TCL switch
C-86 }			
C-87	Roof wiring harness and junction block combination		



Vehicles with air conditioner

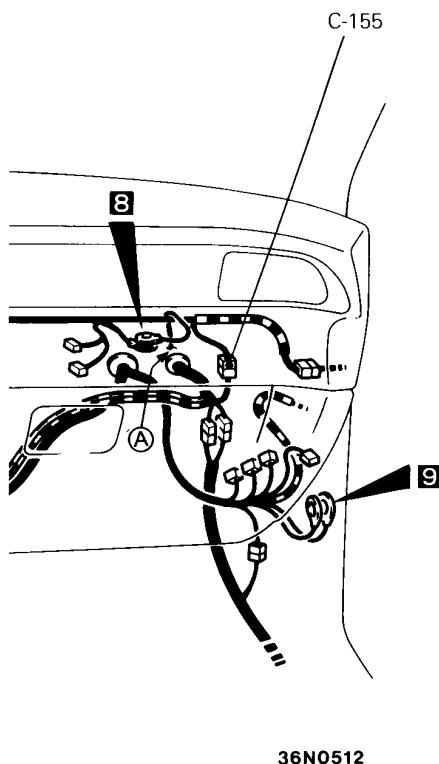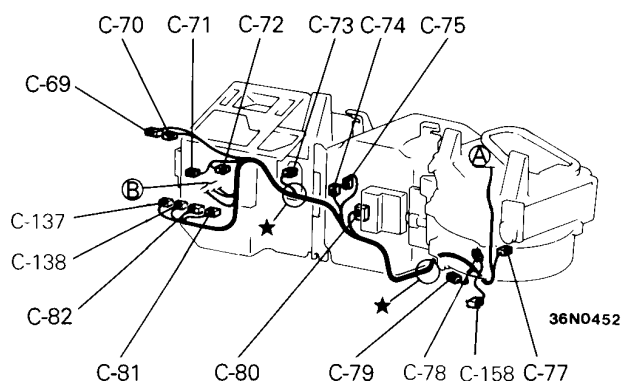

Junction block

(Front)

(Rear)

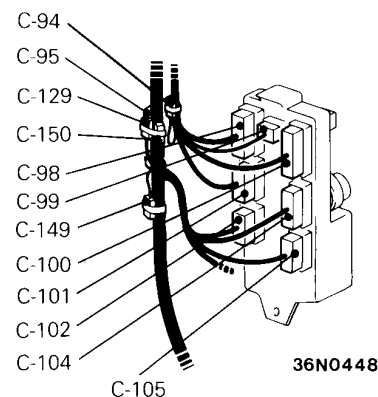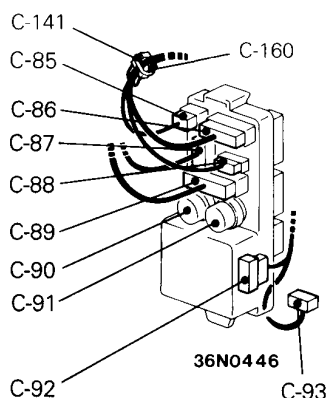



C-107	}	—
thru		
C-111	}	No connection
C-112		
C-113	}	—
thru		
C-128	}	Diode (for power seat circuit) <M/T>
C-129		
C-130	}	—
C-131		
C-132	Body wiring harness and control wiring harness combination	
C-133	}	—
thru		
C-136	}	A/C control unit
C-137		
C-138	}	Clock spring
C-139		
C-140	Body wiring harness and front wiring harness combination	

C-141	Diode (for rear fog lamp circuit)
C-142	} —
thru	
C-148	
C-149	Diode (for central door locking circuit)*
C-150	Diode (for trunk room lamp, starting circuit)*
C-151	Theft-alarm horn relay*
C-152	} Joint connector (for idle up circuit <DOHC>)
C-153	
C-154	No connection <TCL (M/T)>
C-155	Body wiring harness and front wiring harness combination
C-156	Lighting monitor buzzer
C-157	—
C-158	Foot lamp (RH)
C-159	—
C-160	Diode (for cooling circuit)
C-161	—
C-162	—
Remark	

*: Vehicles with theft-alarm system.


DASH PANEL**L.H. drive vehicles with SRS**

<Vehicles with front passenger air bag>

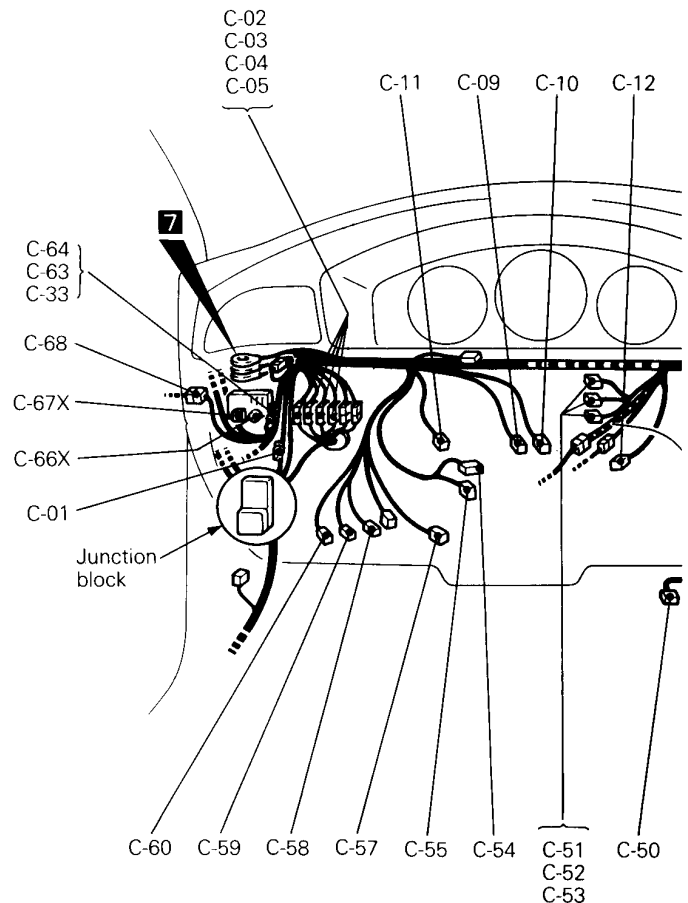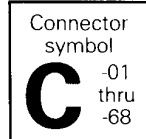

- C-01 Diode (for idle-up circuit) <DOHC>
- C-02 } Body wiring harness and front wiring
- C-03 } harness combination
- C-04 }
- C-05 Body wiring harness and front wiring harness combination <ABS>
- C-06 } ETACS unit
- C-07 }
- C-08 —
- C-09 Stop lamp switch (4-pin) <Auto-cruise control> or no connection
- C-10 Stop lamp switch (2-pin) or no connection <Auto-cruise control>
- C-11 Clutch pedal switch <Auto-cruise control (M/T)>
- C-12 Headlamp leveling switch
- C-13 —
- C-14 } Body wiring harness and control wiring
- C-15 } harness combination
- C-16 }
- C-17 } Body wiring harness and A/C wiring
- C-18 } harness combination
- C-19 } ELC-4A/T control unit
- C-20 }
- C-21 —
- C-22 Engine oil level relay
- C-23 Headlamp washer relay
- C-24 } Front wiring harness and ACTIVE-ECS wiring
- C-25 } harness combination
- C-26 }
- C-27 } Engine control unit
- C-28 }
- C-29 Body wiring harness and front door wiring harness (RH) combination

- C-30 Engine control relay
- C-31 Control wiring harness and ACTIVE-ECS wiring harness combination
- C-32 —
- C-33 Diode (for ABS circuit)
- C-34 Oxygen sensor
- C-35 Rear fog lamp switch
- C-36 Body wiring harness and control wiring harness combination <TCL>
- C-37 Defogger switch
- C-38 } Cigarette lighter
- C-39 }
- C-40 Heated seat switch (RH)
- C-41 ACTIVE-ECS switch


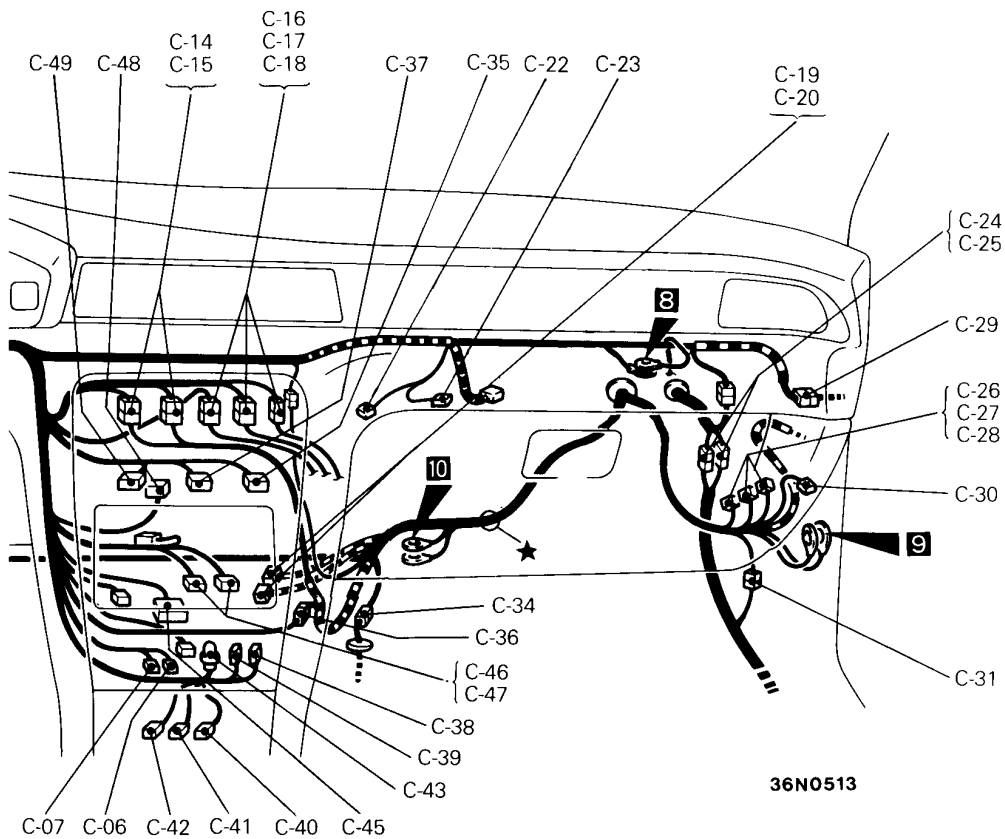


- C-42 Heated seat switch (LH)
- C-43 Cigarette lighter illumination lamp
- C-44 —
- C-45 Auto-cruise control unit
- C-46 } Radio and tape player
- C-47 }
- C-48 EPS control unit
- C-49 Hazard warning switch
- C-50 Wide open throttle switch <A/T>
- C-51 }
- C-52 } Column switch
- C-53 }
- C-54 Ignition switch
- C-55 Key reminder switch

- C-56 —
- C-57 Foot lamp (LH)
- C-58 } Accessory socket
- C-59 }
- C-60 Rear wiper and washer switch
- C-61 }
- C-62 }
- C-63 Diode (for ACTIVE-ECS circuit)
- C-64 Diode (for headlamp circuit)
- C-65X }
- C-66X } Refer to CENTRALIZED JUNCTION
- C-67X }
- C-68 Body wiring harness and front door wiring harness (LH) combination


L.H. drive vehicles with SRS

<Vehicles with front passenger air bag>

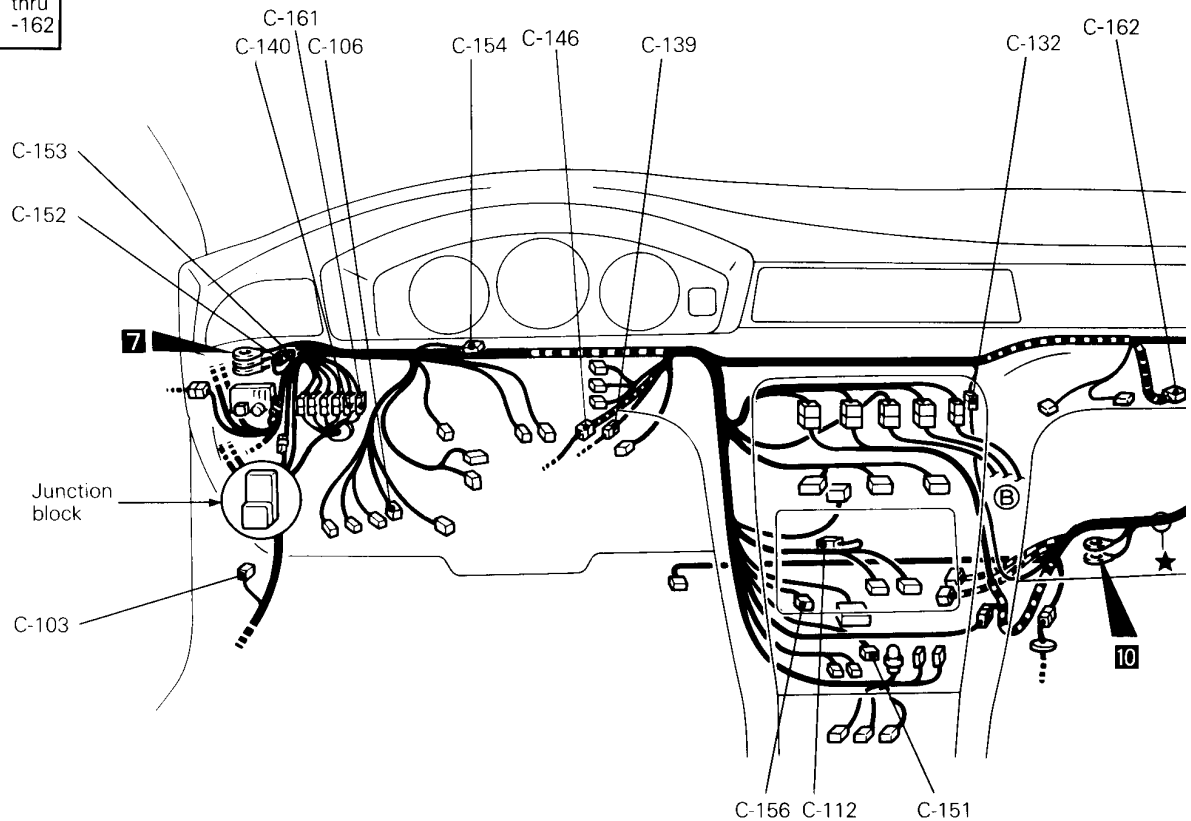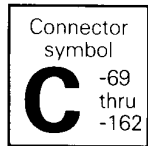

C-69 }	A/C control panel assembly
C-70 }	
C-71	Mode selection damper control motor
C-72	Air mixing damper control motor
C-73	Power transistor
C-74	Water temperature sensor
C-75	Fin thermo sensor
C-76	—
C-77	Air selection damper control motor
C-78	Blower motor
C-79	Blower motor high relay
C-80	A/C belt lock controller <DOHC>
C-81 }	A/C control unit
C-82 }	
C-83	—
C-84	—
C-85 }	Front wiring harness and junction block combination
C-86 }	
C-87	Roof wiring harness and junction block combination
C-88	Front wiring harness and junction block combination

C-89	Instrument panel wiring harness and junction block combination
C-90	Defogger relay
C-91	Blower motor relay
C-92	Diagnosis connector
C-93	Diagnosis connector <TCL>
C-94	Diode <4WS>
C-95	Diode (for ACTIVE-ECS circuit)
C-96	—
C-97	—
C-98 }	Body wiring harness and junction block combination
thru }	
C-102 }	Body wiring harness and junction block combination
C-103 }	
C-104 }	Body wiring harness and junction block combination
C-105 }	
C-106	TCL switch
C-107 }	—
thru }	
C-111 }	—
C-112 }	

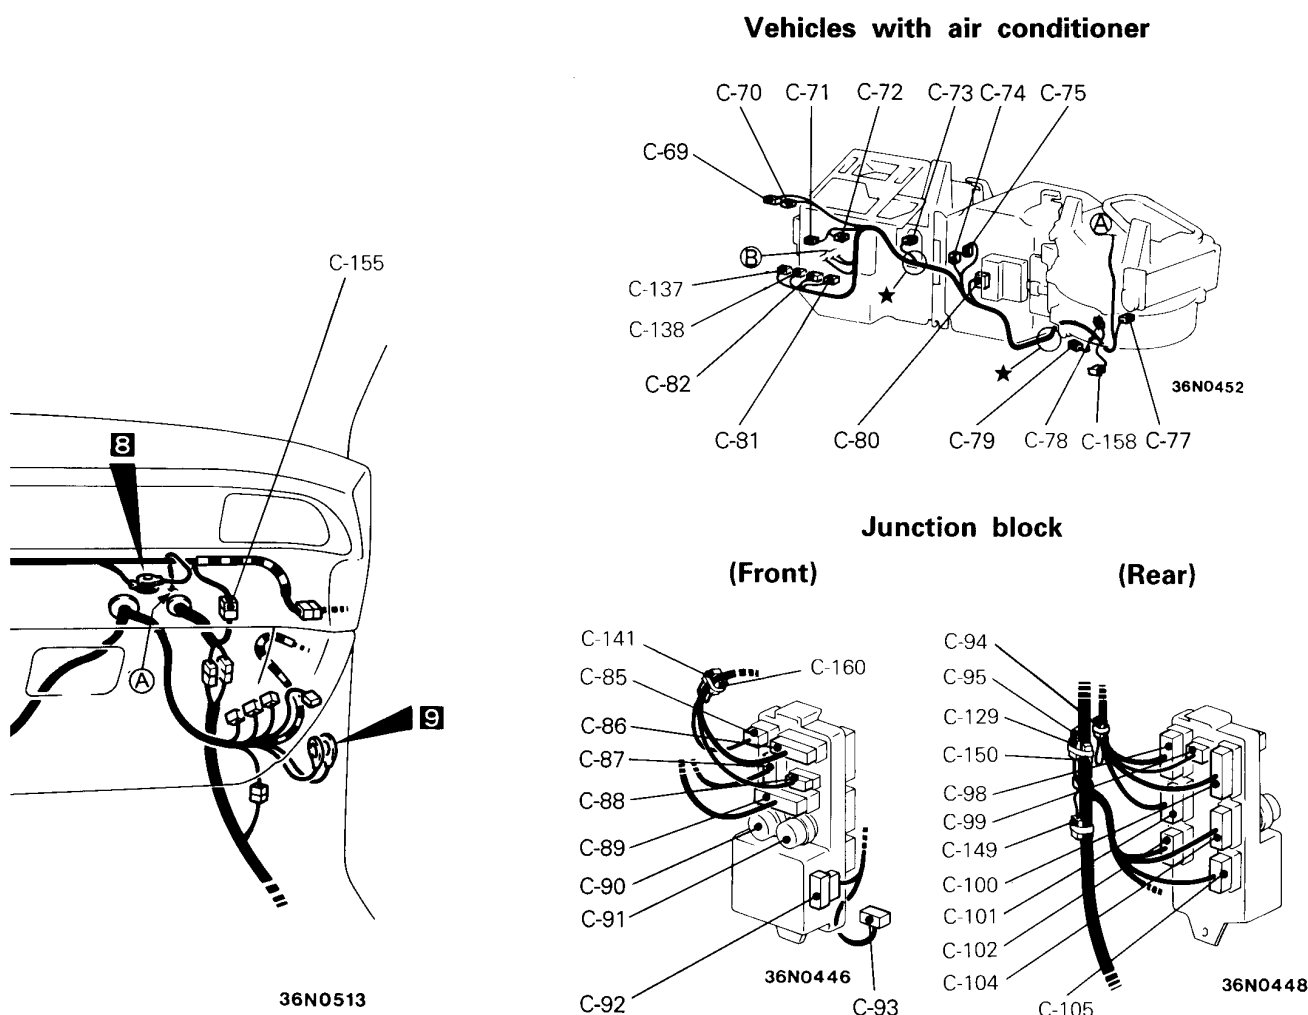

C-112 No connection

C-113 }
thru } —

C-128 }
C-129 Diode (for power seat circuit) <M/T>

C-130 }
C-131 } —

C-132 Body wiring harness and control wiring harness combination

C-133 }
thru } —

C-136 }
C-137 } A/C control unit
C-138 }

C-139 Clock spring

C-140 Body wiring harness and front wiring harness combination

C-141 Diode (for rear fog lamp circuit)

C-142 }
thru } —
C-145 }

C-146 Clock spring

C-147 } —

C-148 } —

C-149 Diode (for central door locking circuit)*

C-150 Diode (for trunk room lamp, starting circuit)*

C-151 Theft-alarm horn relay*

C-152 } —

C-153 } Joint connector (for idle up circuit <DOHC>)

C-154 No connection <TCL (M/T)>

C-155 Body wiring harness and front wiring harness combination

C-156 Lighting monitor buzzer

C-157 —

C-158 Foot lamp (RH)

C-159 —

C-160 Diode (for cooling circuit)

C-161 Body wiring harness and front wiring harness combination




C-162 Air bag module (passenger's side)

Remark

*: Vehicles with theft-alarm system.


DASH PANEL

R.H. drive vehicles

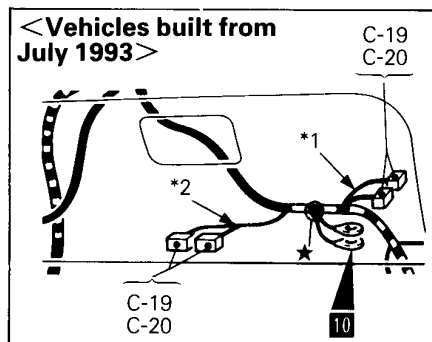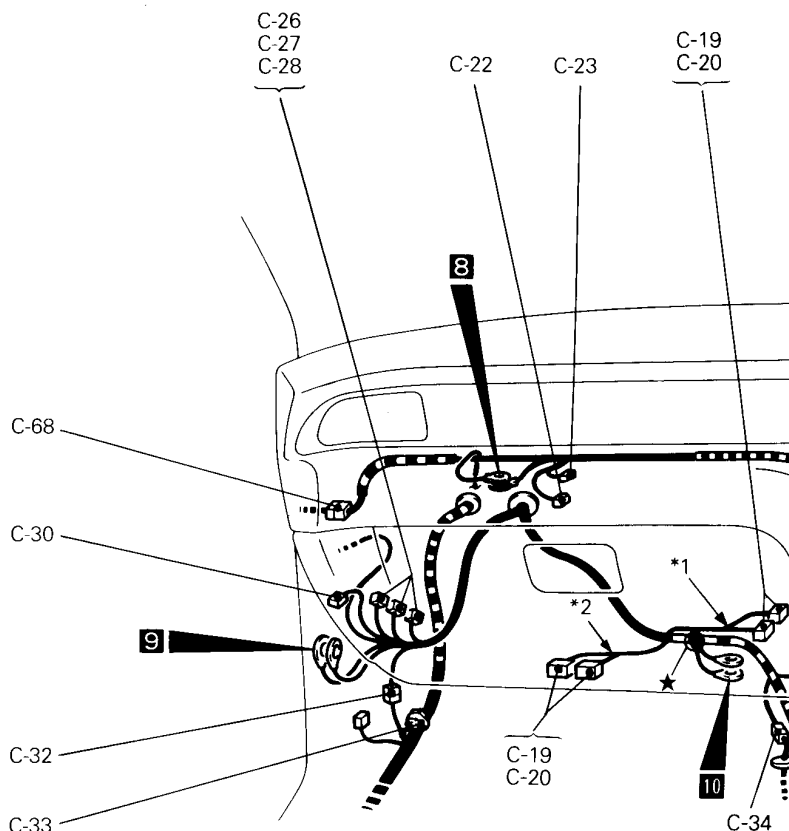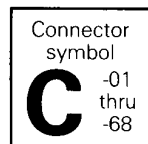

- C-01 Diode (for idle-up circuit) <DOHC>
- C-02 } Body wiring harness and front wiring
- C-03 } harness combination
- C-04 }
- C-05 Body wiring harness and front wiring harness combination <ACTIVE-ECS>
- C-06 } ETACS unit
- C-07 }
- C-08 —
- C-09 Stop lamp switch (4-pin) <Auto-cruise control> or no connection
- C-10 Stop lamp switch (2-pin) or no connection <Auto-cruise control>
- C-11 Clutch pedal switch <Auto-cruise control (M/T)>
- C-12 Headlamp leveling switch
- C-13 —
- C-14 } Body wiring harness and control wiring
- C-15 } harness combination
- C-16 }
- C-17 } Body wiring harness and A/C wiring harness combination
- C-18 }
- C-19 } ELC-4A/T control unit
- C-20 }
- C-21 —
- C-22 Engine oil level relay
- C-23 Headlamp washer relay
- C-24 }
- C-25 }
- C-26 }
- C-27 } Engine control unit
- C-28 }

- C-29 Body wiring harness and front door wiring harness (RH) combination
- C-30 Engine control relay
- C-31 —
- C-32 Control wiring harness and ABS wiring harness combination <TCL>
- C-33 Diode (for ABS circuit)
- C-34 Oxygen sensor
- C-35 Rear fog lamp switch
- C-36 Body wiring harness and control wiring harness combination
- C-37 Defogger switch
- C-38 } Cigarette lighter
- C-39 }
- C-40 —
- C-41 ACTIVE-ECS switch

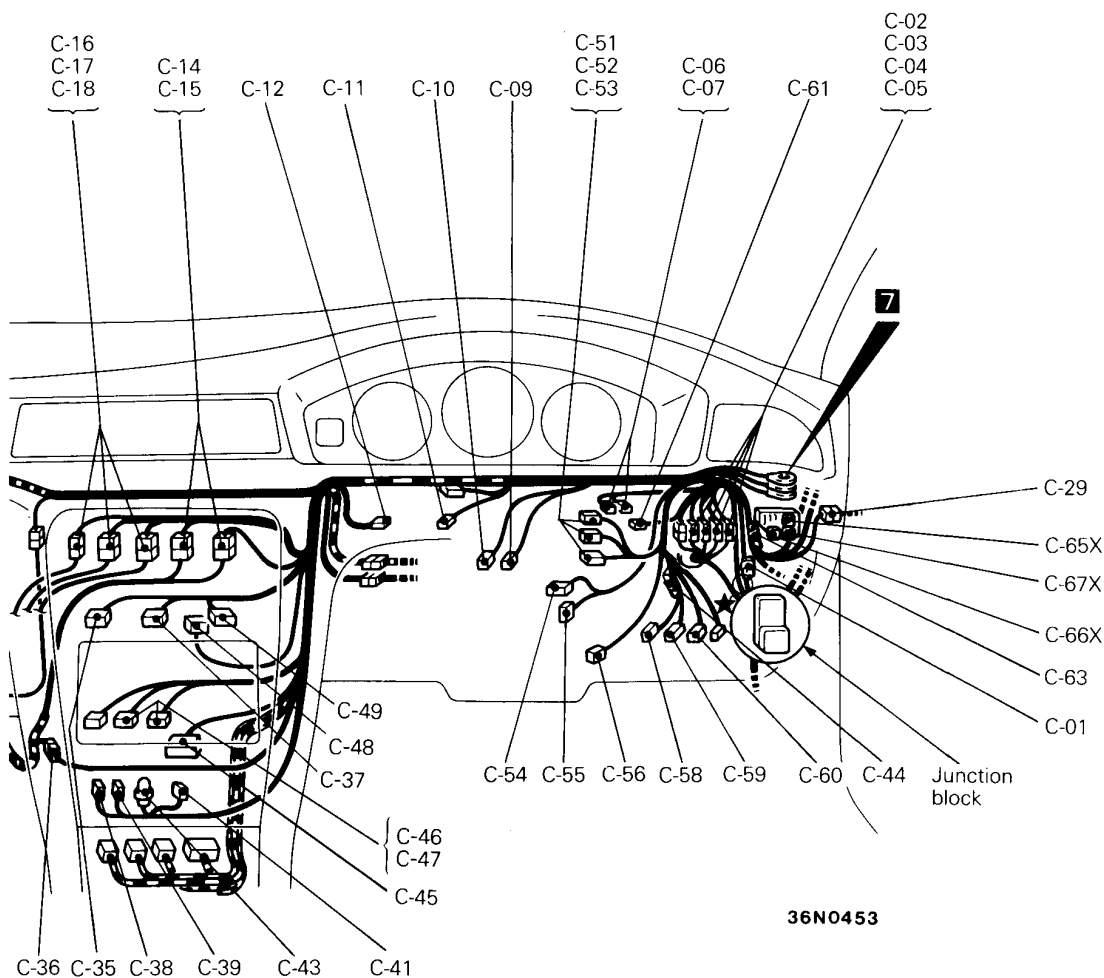

C-42 —
 C-43 Cigarette lighter illumination lamp
 C-44 ACC spare connector
 C-45 Auto-cruise control unit
 C-46 } Radio and tape player
 C-47 }
 C-48 EPS control unit
 C-49 Hazard warning switch
 C-50 —
 C-51 } Column switch
 C-52 }
 C-53 }
 C-54 Ignition switch
 C-55 Key reminder switch
 C-56 Foot lamp (RH)
 C-57 —


C-58 } Accessory socket
 C-59 }
 C-60 Rear wiper and washer switch
 C-61 Lighting monitor buzzer
 C-62 —
 C-63 Diode (for ACTIVE-ECS circuit)
 C-64 —
 C-65X } Refer to CENTRALIZED JUNCTION
 C-66X }
 C-67X }
 C-68 Body wiring harness and front door wiring harness (LH) combination

Remarks


*1: Vehicles without SRS.

*2: Vehicles with SRS.

R.H. drive vehicles

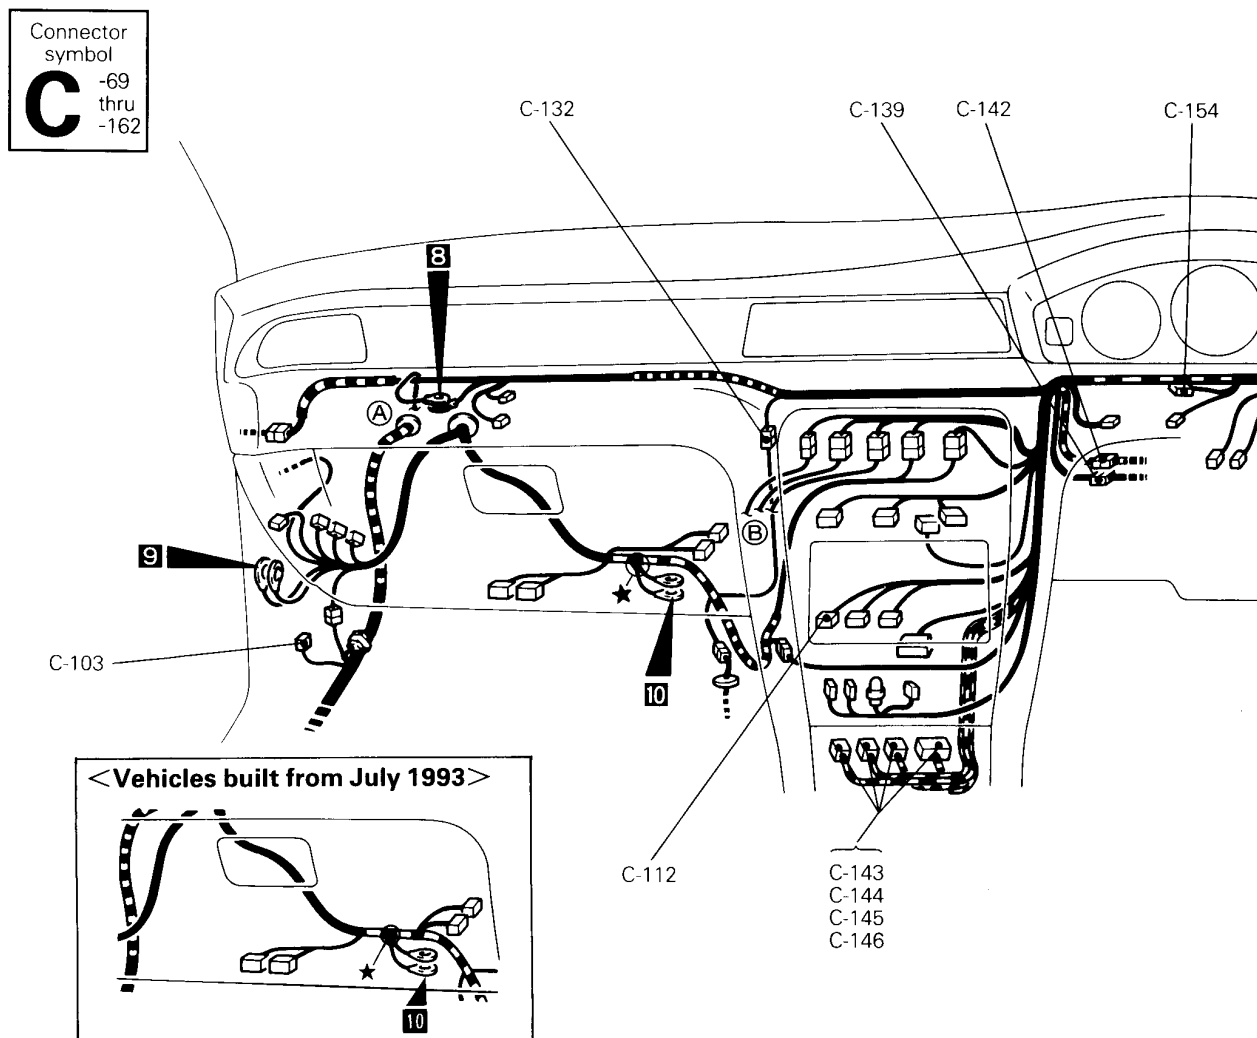

C-69 }	A/C control panel assembly	C-87	Roof wiring harness and junction block combination
C-70 }		C-88	Front wiring harness and junction block combination
C-71	Mode selection damper control motor	C-89	Instrument panel wiring harness and junction block combination
C-72	Air mixing damper control motor	C-90	Defogger relay
C-73	Power transistor	C-91	Blower motor relay
C-74	Water temperature sensor	C-92	Diagnosis connector
C-75	Fin thermo sensor	C-93	Diagnosis connector <TCL>
C-76	—	C-94	Diode <4WS>
C-77	Air selection damper control motor	C-95	Diode (for ACTIVE-ECS circuit)
C-78	Blower motor	C-96	—
C-79	Blower motor high relay	C-97	Diode (for dim-dip lamp circuit)
C-80	A/C belt lock controller <DOHC>	C-98	} Body wiring harness and junction block combination
C-81 }	A/C control unit	C-102	
C-82 }		C-103	TCL valve relay
C-83	Diode (for dim-dip lamp circuit)	C-104 }	} Body wiring harness and junction block combination
C-84	Diode (for dim-dip lamp circuit)	C-105 }	
	< Vehicles built up to January 1993 >	C-106	TCL switch
C-85 }	Front wiring harness and junction block combination		
C-86 }			

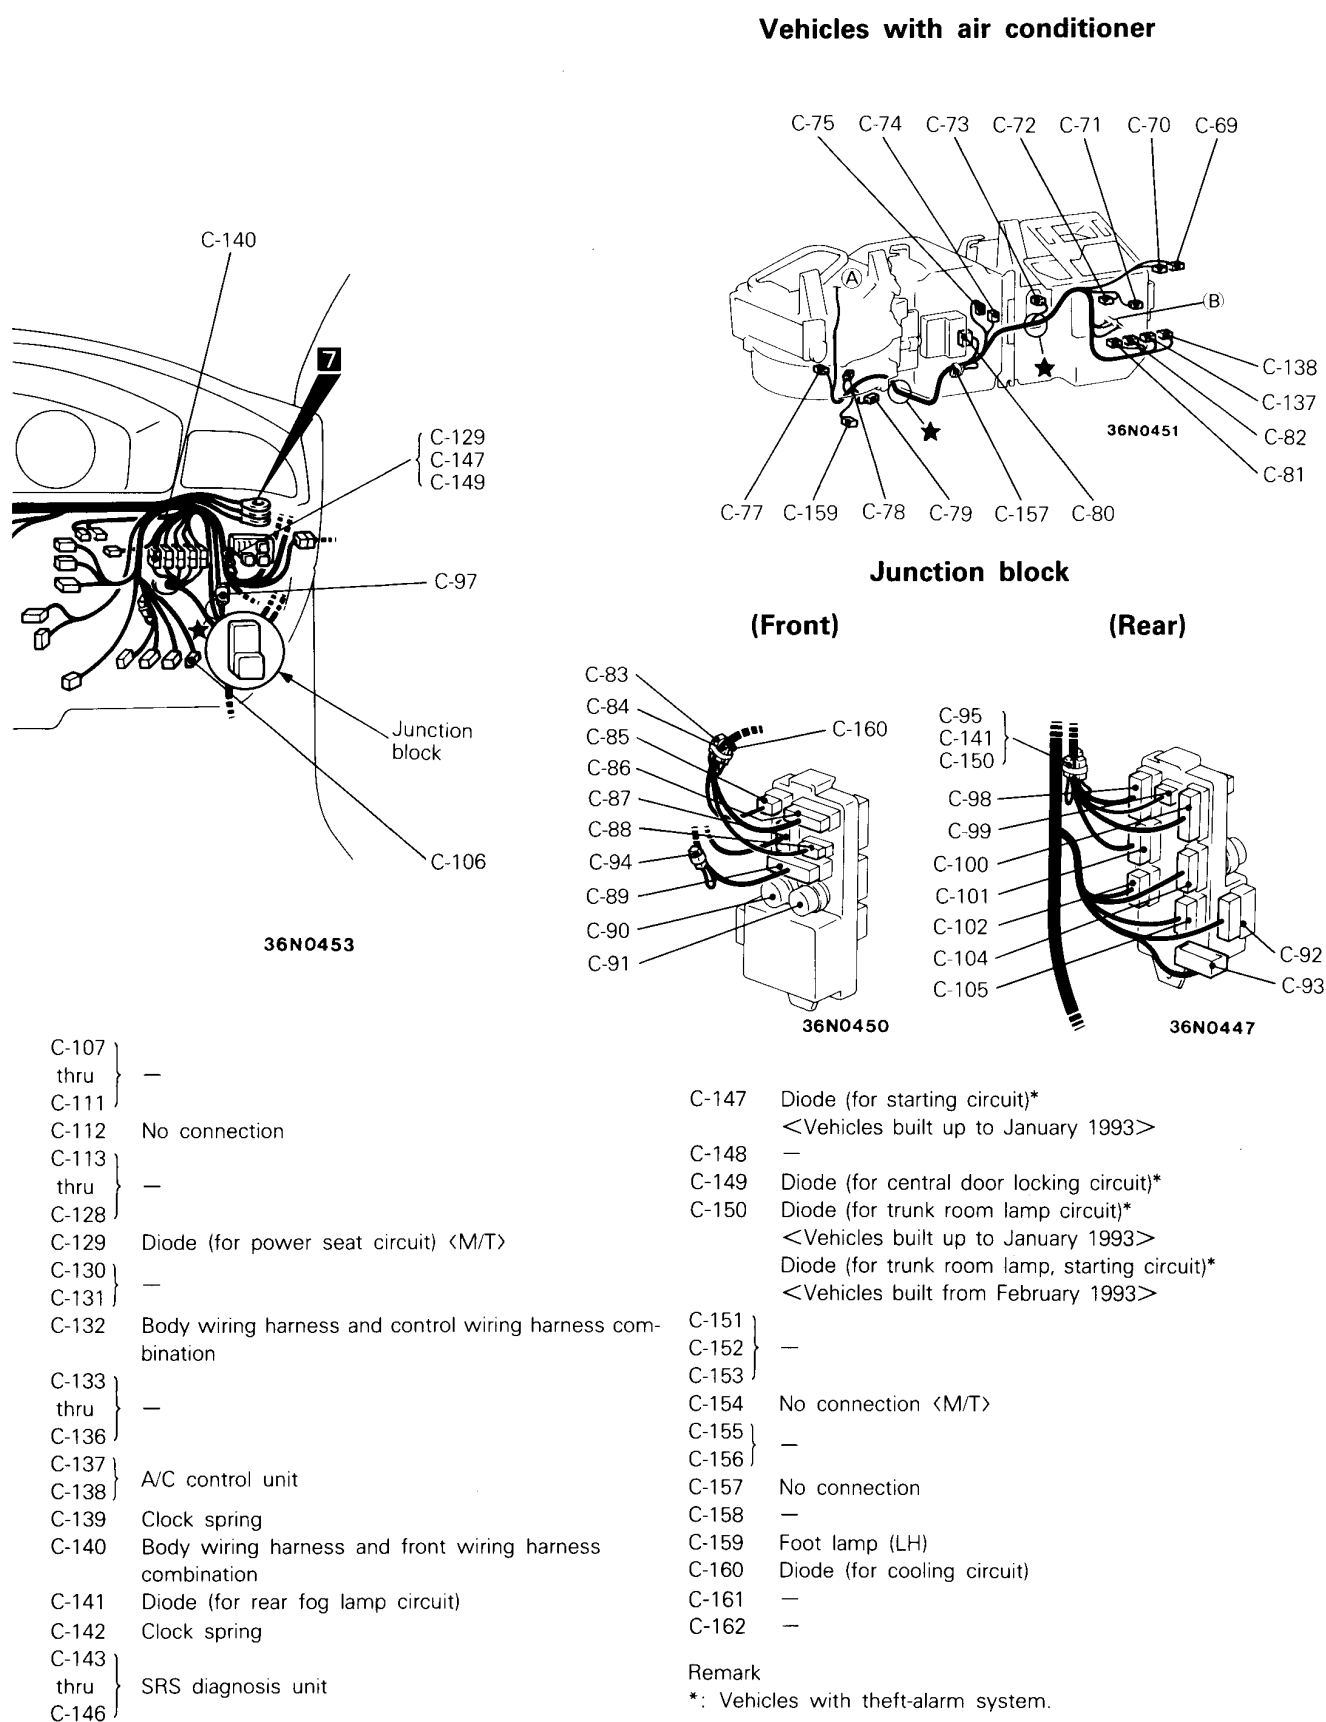


INSTRUMENT PANEL

L.H. drive vehicles without SRS

Connector
symbol




D

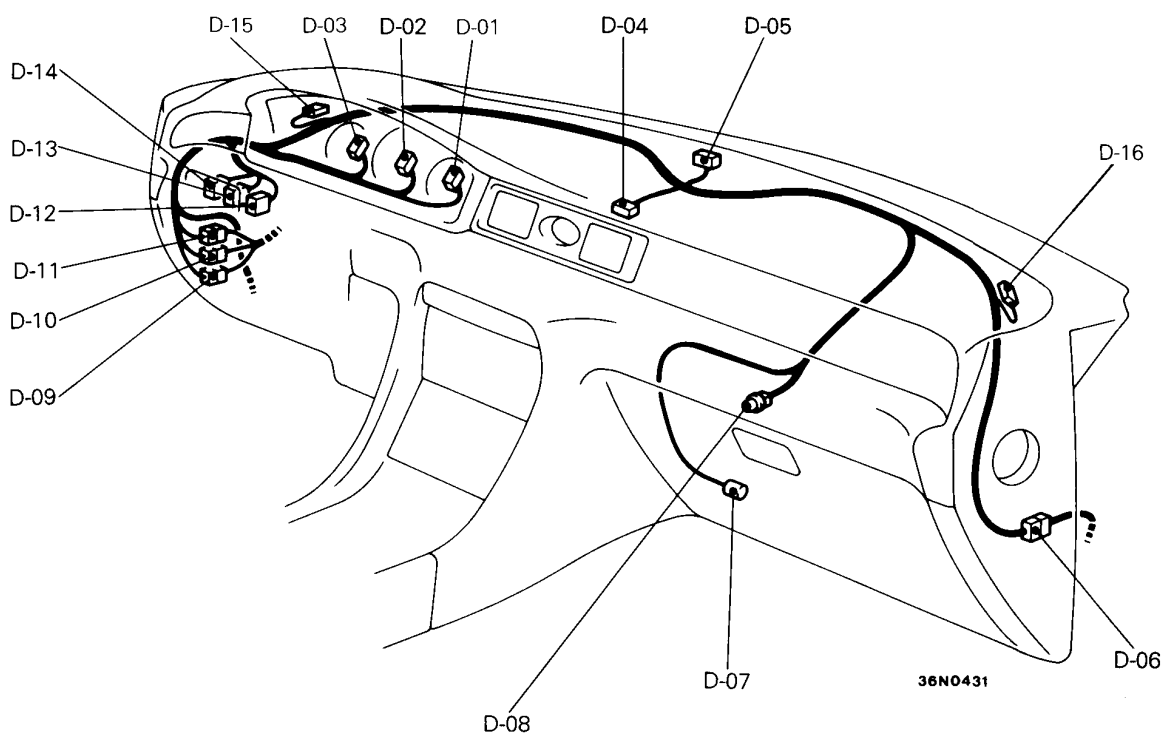

D-01		D-12	Rheostat
D-02	Combination meter	D-13	Front fog lamp switch
D-03		D-14	Auto-cruise control main switch or no connection
D-04		D-15	No connection
D-05	Clock	D-16	
D-06	Photo sensor	D-17	—
D-07	Control wiring harness and instrument panel wiring harness combination (A/T)	D-23	
D-08			
D-09	Glove box lamp switch		
D-10	Glove box lamp		
D-11	Body wiring harness and instrument panel wiring harness combination		

INSTRUMENT PANEL

L.H. drive vehicles with SRS

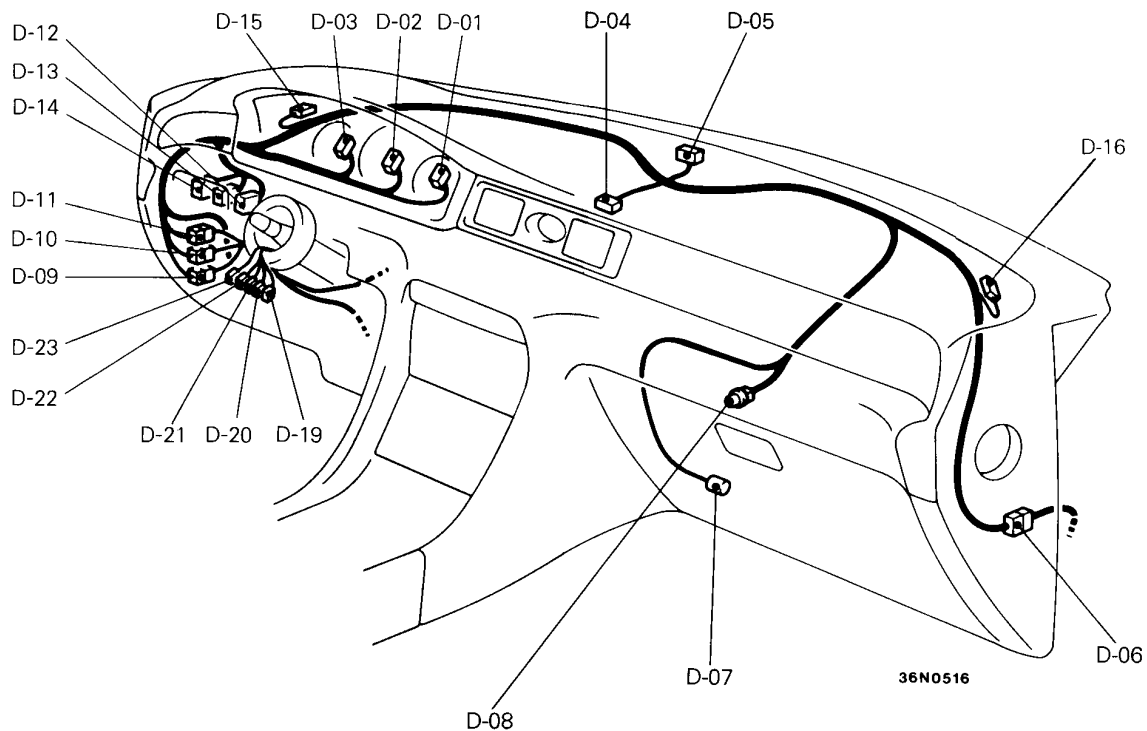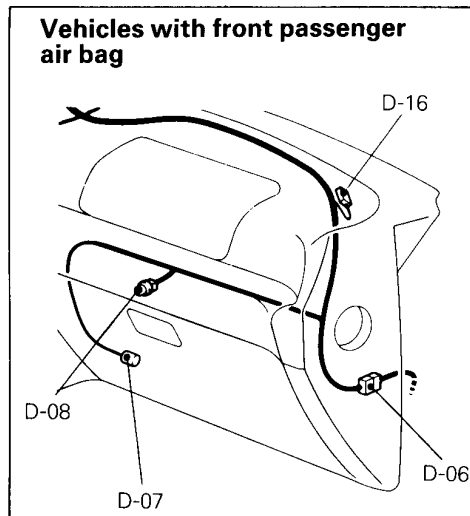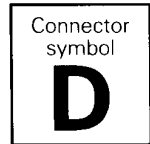


D-01 }		D-12	Rheostat
D-02 }	Combination meter	D-13	Front fog lamp switch
D-03 }		D-14	Auto-cruise control main switch or no connection
D-04	Clock	D-15 }	No connection
D-05	Photo sensor	D-16 }	—
D-06	Control wiring harness and instrument panel wiring harness combination <A/T>	D-17	—
D-07	Glove box lamp switch	D-18	—
D-08	Glove box lamp	D-19 }	No connection
D-09 }	Body wiring harness and instrument panel wiring harness combination	D-20 }	No connection
D-10 }		D-21	Auto-cruise control switch
D-11 }		D-22	Horn switch
		D-23	Air bag module (driver's side)

2-26-2



NOTES

INSTRUMENT PANEL

R.H. drive vehicles

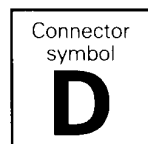


Vehicles with SRS

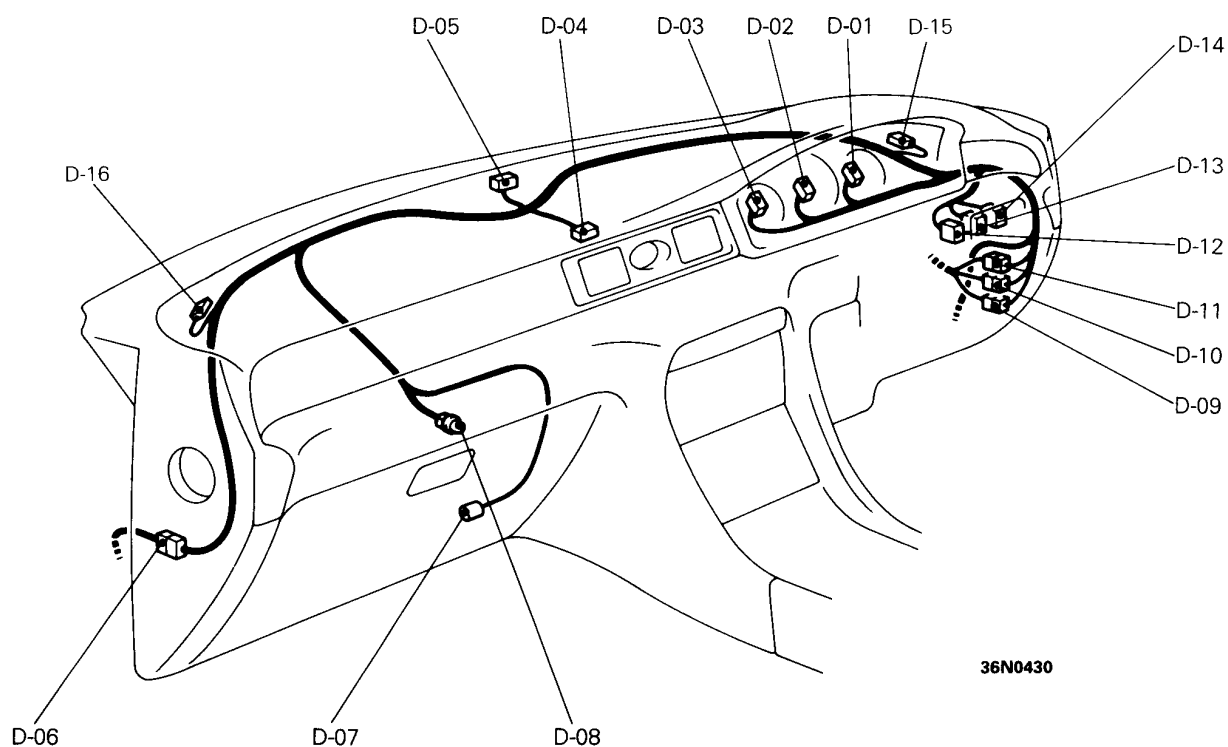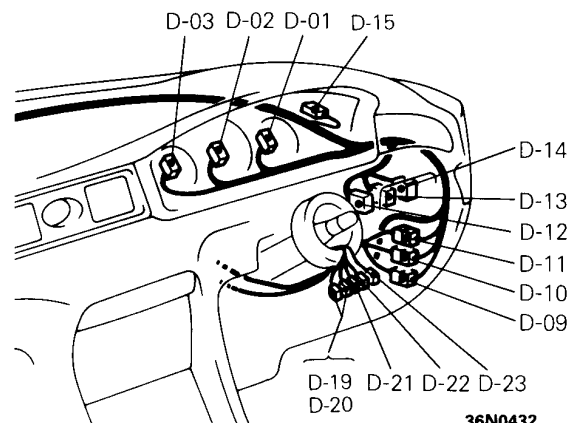

D-01 }		D-12	Rheostat
D-02 }	Combination meter	D-13	Front fog lamp switch
D-03 }		D-14	Auto-cruise control main switch or no connection
D-04	Clock	D-15 }	No connection
D-05	Photo sensor	D-16 }	
D-06	Control wiring harness and instrument panel wiring harness combination <A/T>	D-17	—
D-07	Glove box lamp switch	D-18	—
D-08	Glove box lamp	D-19 }	No connection
D-09 }	Body wiring harness and instrument panel wiring harness combination	D-20 }	
D-10 }		D-21	Auto-cruise control switch
D-11 }		D-22	Horn switch
		D-23	Air bag module (squib)

INTERIOR


L.H. drive vehicles without SRS

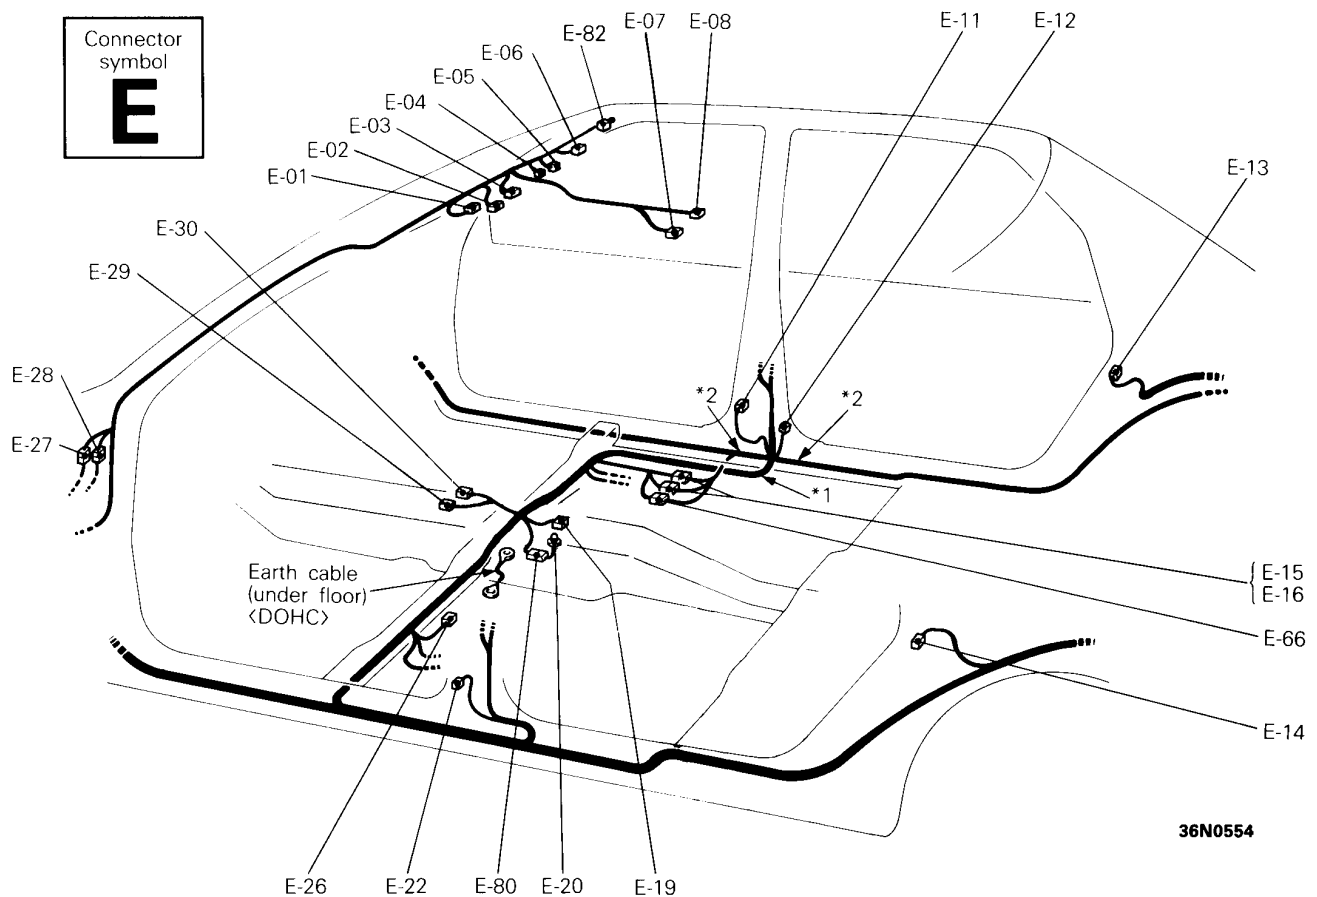

E-01	Sunroof motor
E-02	Map lamp <Vehicles without sunroof>
E-03	Room lamp <Vehicles with sunroof>
E-04	Power seat memory switch
E-05	Interior temperature sensor <Vehicles with sunroof>
E-06	Sunroof control unit
E-07	Interior temperature sensor <Vehicles without sunroof>
E-08	Room lamp <Vehicles without sunroof>
E-09	—
E-10	—
E-11	Front door switch (RH)
E-12	No connection
E-13	Rear door switch (RH)
E-14	Rear door switch (LH)
E-15 }	Body wiring harness and ACTIVE-ECS wiring harness
E-16 }	combination.
E-17	—
E-18	—
E-19	Parking brake switch
E-20	Front ashtray illumination lamp

E-21	—
E-22	Front door switch (LH)
E-23 }	—
E-24 }	—
E-25 }	—
E-26	No connection
E-27	Body wiring harness and roof wiring harness combination
E-28	Body wiring harness and roof wiring harness combination <Power seat>
E-29	Overdrive switch <A/T>
E-30	Power/Economy changeover switch <A/T>
E-31	Front height adjusting motor (Passenger's side)
E-32	Front height limit switch (Passenger's side)
E-33	Power seat switch (Passenger's side)
E-34	Rear height limit switch (Passenger's side)
E-35	Reclining position adjusting motor (Passenger's side)
E-36	Rear height adjusting motor (Passenger's side)
E-37	Seat back heater (Passenger's side)
E-38	Body wiring harness and heated seat wiring harness combination (Passenger's side)
E-39	Seat cushion heater (Passenger's side)

<Vehicles with power seat or heated seat>

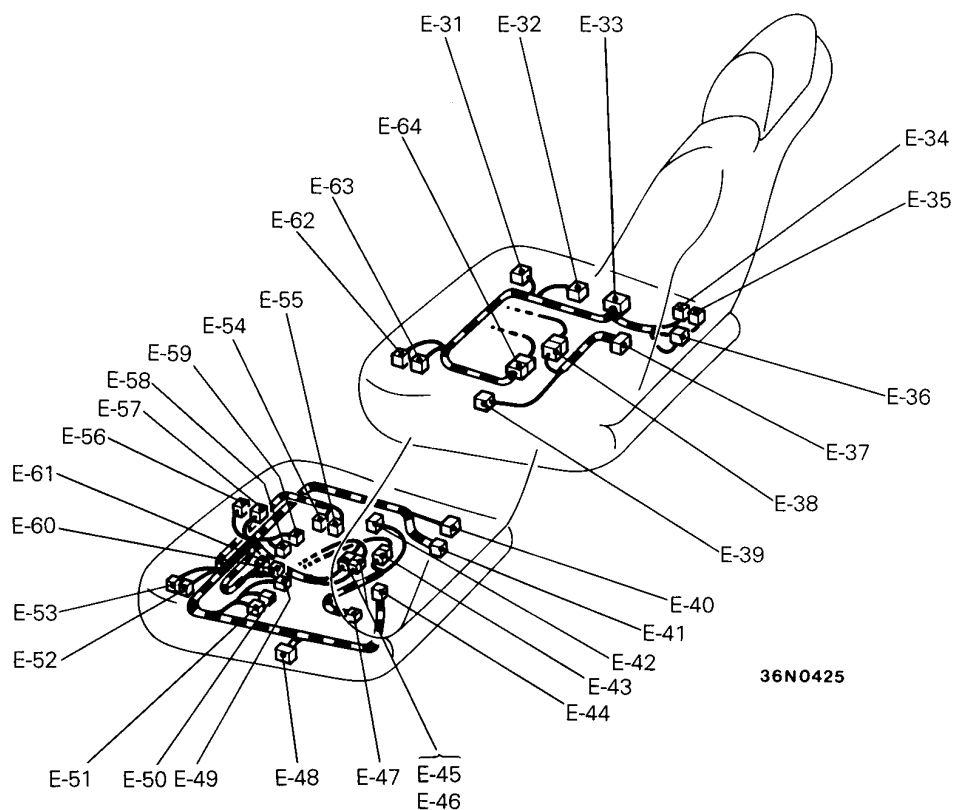


E-40	Slide position limit switch (Driver's side)	E-58	} Power seat control unit
E-41	Reclining position limit switch (Driver's side)	thru	
E-42	Seat cushion heater (Driver's side)	E-61	
E-43	Body wiring harness and heated seat wiring harness combination (Driver's side)	E-62	Slide position limit switch (Passenger's side)
E-44	Rear height limit switch (Driver's side)	E-63	Slide position adjusting motor (Passenger's side)
E-45 } Body wiring harness and power seat wiring harness combination (Driver's side)		E-64	Body wiring harness and power seat wiring harness combination (Passenger's side)
E-46 }		E-65	—
E-47	Seat back heater (Driver's side)	E-66	Body wiring harness and ACTIVE-ECS wiring harness combination
E-48	Power seat switch (Driver's side)	E-67 }	} —
E-49	Reclining position adjusting motor/reclining position sensor (Driver's side)	thru	
E-50	Rear height adjusting motor/rear height position sensor (Driver's side)	E-79	
E-51	Front height limit switch (Driver's side)	E-80	Body wiring harness and front ashtray illumination lamp joint wiring harness combination
E-52	Slide position sensor (Driver's side)	E-81	—
E-53	Front height adjusting motor/front height position sensor (Driver's side)	E-82	Vanity mirror lamp
E-54 }	Power seat control unit	<Vehicles built from May, 1994>	
E-55 }			
E-56	Power seat inspection connector		
E-57	Slide position adjusting motor (Driver's side)		
		Remarks	
		*1: Vehicles without ACTIVE-ECS.	
		*2: Vehicles with ACTIVE-ECS.	

INTERIOR

L.H. drive vehicles with SRS


<Vehicles without front passenger air bag>

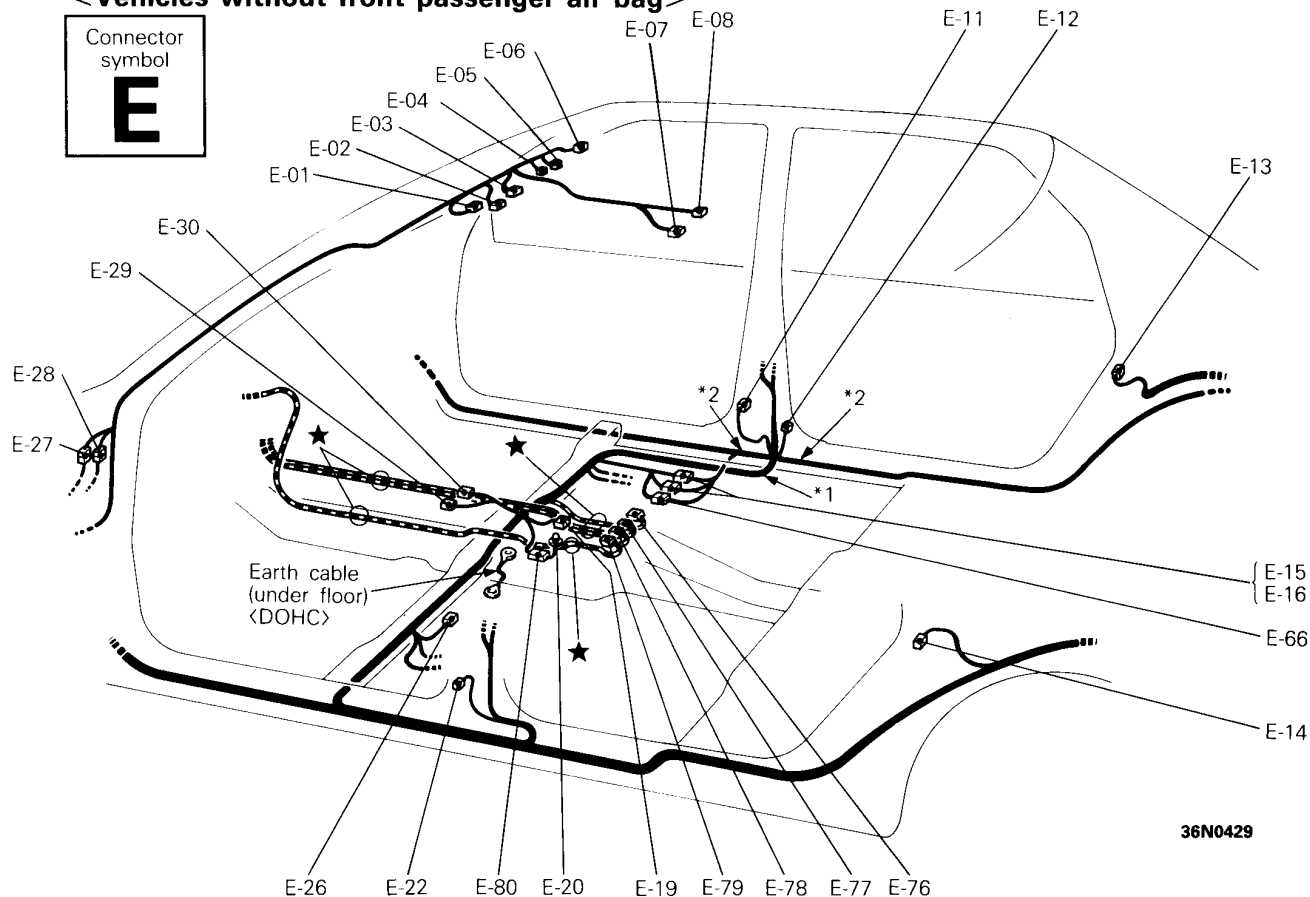

36N0429

E-01	Sunroof motor	E-21	—
E-02	Map lamp <Vehicles without sunroof>	E-22	Front door switch (LH)
E-03	Room lamp <Vehicles with sunroof>	E-23	—
E-04	Power seat memory switch	E-24	
E-05	Interior temperature sensor <Vehicles with sunroof>	E-25	
E-06	Sunroof control unit	E-26	No connection
E-07	Interior temperature sensor <Vehicles without sunroof>	E-27	Body wiring harness and roof wiring harness combination
E-08	Room lamp <Vehicles without sunroof>	E-28	Body wiring harness and roof wiring harness combination <Power seat>
E-09	—	E-29	Overdrive switch <A/T>
E-10	—	E-30	Power/Economy changeover switch <A/T>
E-11	Front door switch (RH)	E-31	Front height adjusting motor (Passenger's side)
E-12	No connection	E-32	Front height limit switch (Passenger's side)
E-13	Rear door switch (RH)	E-33	Power seat switch (Passenger's side)
E-14	Rear door switch (LH)	E-34	Rear height limit switch (Passenger's side)
E-15 } Body wiring harness and ACTIVE-ECS wiring harness combination		E-35	Reclining position adjusting motor (Passenger's side)
E-16 }		E-36	Rear height adjusting motor (Passenger's side)
E-17	—	E-37	Seat back heater (Passenger's side)
E-18	—	E-38	Body wiring harness and heated seat wiring harness combination (Passenger's side)
E-19	Parking brake switch	E-39	Seat cushion heater (Passenger's side)
E-20	Front ashtray illumination lamp		

<Vehicles with power seat or heated seat>

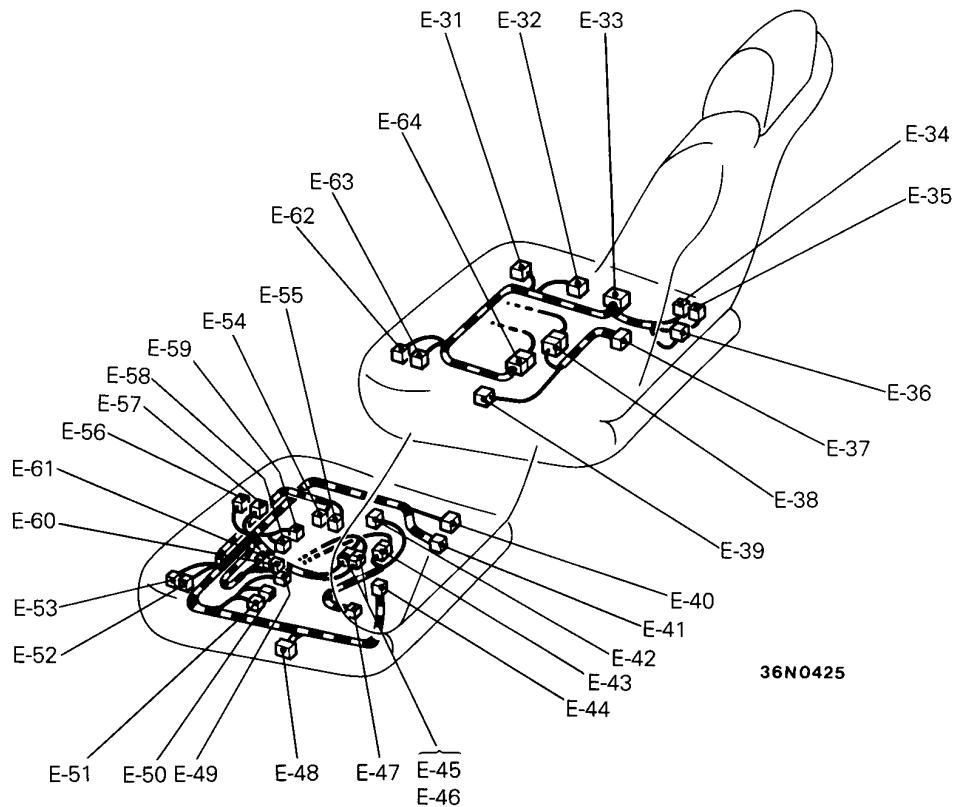


E-40	Slide position limit switch (Driver's side)	E-58 } thru }	Power seat control unit
E-41	Reclining position limit switch (Driver's side)	E-61	
E-42	Seat cushion heater (Driver's side)	E-62	Slide position limit switch (Passenger's side)
E-43	Body wiring harness and heated seat wiring harness combination (Driver's side)	E-63	Slide position adjusting motor (Passenger's side)
E-44	Rear height limit switch (Driver's side)	E-64	Body wiring harness and power seat wiring harness combination (Passenger's side)
E-45 } E-46 }	Body wiring harness and power seat wiring harness combination (Driver's side)	E-65	—
E-47	Seat back heater (Driver's side)	E-66	Body wiring harness and ACTIVE-ECS wiring harness combination
E-48	Power seat switch (Driver's side)	E-67 } thru }	—
E-49	Reclining position adjusting motor/reclining position sensor (Driver's side)	E-75 }	
E-50	Rear height adjusting motor/rear height position sensor (Driver's side)	E-76 } thru }	SRS diagnosis unit
E-51	Front height limit switch (Driver's side)	E-79 }	
E-52	Slide position sensor (Driver's side)	E-80	Body wiring harness and front ashtray illumination lamp joint wiring harness combination
E-53	Front height adjusting motor/front height position sensor (Driver's side)	E-81	—
E-54 } E-55 }	Power seat control unit	Remarks	
E-56	Power seat inspection connector	*1:	Vehicles without ACTIVE-ECS.
E-57	Slide position adjusting motor (Driver's side)	*2:	Vehicles with ACTIVE-ECS.

INTERIOR

L.H. drive vehicles with SRS

<Vehicles with front passenger air bag>

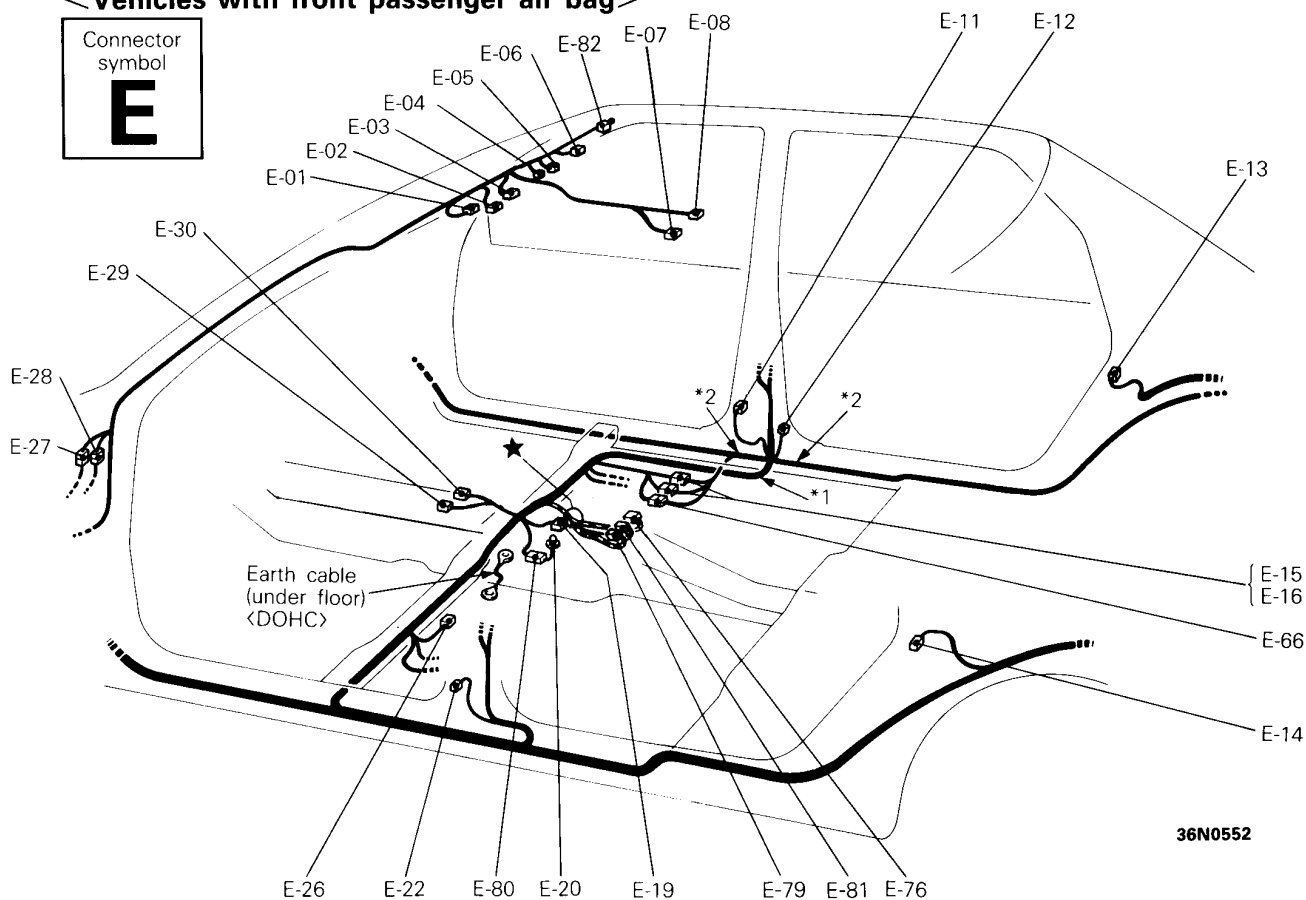
Connector
symbol**E**

36N0552

E-01	Sunroof motor
E-02	Map lamp <Vehicles without sunroof>
E-03	Room lamp <Vehicles with sunroof>
E-04	Power seat memory switch
E-05	Interior temperature sensor <Vehicles with sunroof>
E-06	Sunroof control unit
E-07	Interior temperature sensor <Vehicles without sunroof>
E-08	Room lamp <Vehicles without sunroof>
E-09	—
E-10	—
E-11	Front door switch (RH)
E-12	No connection
E-13	Rear door switch (RH)
E-14	Rear door switch (LH)
E-15 }	Body wiring harness and ACTIVE-ECS wiring harness
E-16 }	combination
E-17	—
E-18	—
E-19	Parking brake switch
E-20	Front ashtray illumination lamp

E-21	—
E-22	Front door switch (LH)
E-23 }	—
E-24 }	—
E-25 }	—
E-26	No connection
E-27	Body wiring harness and roof wiring harness combination
E-28	Body wiring harness and roof wiring harness combination <Power seat>
E-29	Overdrive switch <A/T>
E-30	Power/Economy changeover switch <A/T>
E-31	Front height adjusting motor (Passenger's side)
E-32	Front height limit switch (Passenger's side)
E-33	Power seat switch (Passenger's side)
E-34	Rear height limit switch (Passenger's side)
E-35	Reclining position adjusting motor (Passenger's side)
E-36	Rear height adjusting motor (Passenger's side)
E-37	Seat back heater (Passenger's side)
E-38	Body wiring harness and heated seat wiring harness combination (Passenger's side)
E-39	Seat cushion heater (Passenger's side)

<Vehicles with power seat or heated seat>

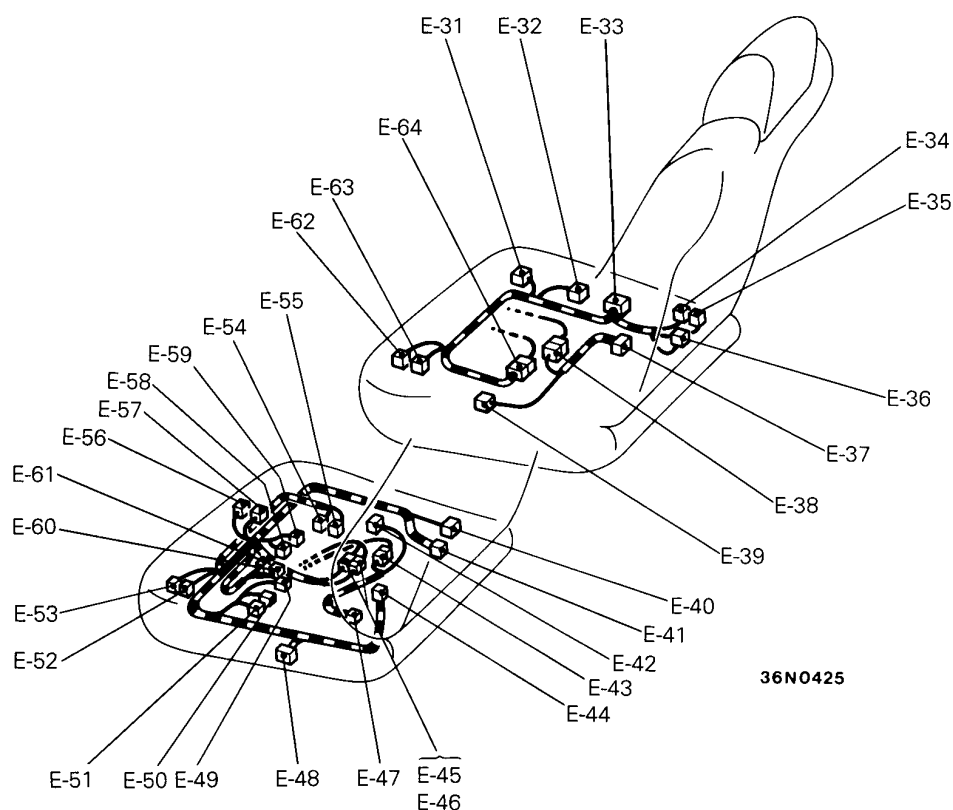

E-40	Slide position limit switch (Driver's side)	E-58 } thru } Power seat control unit
E-41	Reclining position limit switch (Driver's side)	E-61 }
E-42	Seat cushion heater (Driver's side)	E-62 Slide position limit switch (Passenger's side)
E-43	Body wiring harness and heated seat wiring harness combination (Driver's side)	E-63 Slide position adjusting motor (Passenger's side)
E-44	Rear height limit switch (Driver's side)	E-64 Body wiring harness and power seat wiring harness combination (Passenger's side)
E-45 } E-46 }	Body wiring harness and power seat wiring harness combination (Driver's side)	E-65 —
E-47	Seat back heater (Driver's side)	E-66 Body wiring harness and ACTIVE-ECS wiring harness combination
E-48	Power seat switch (Driver's side)	E-67 } thru } —
E-49	Reclining position adjusting motor/reclining position sensor (Driver's side)	E-75 }
E-50	Rear height adjusting motor/rear height position sensor (Driver's side)	E-76 SRS diagnosis unit
E-51	Front height limit switch (Driver's side)	E-77 —
E-52	Slide position sensor (Driver's side)	E-78 —
E-53	Front height adjusting motor/front height position sensor (Driver's side)	E-79 SRS diagnosis unit
E-54 }	Power seat control unit	E-80 Body wiring harness and front ashtray illumination lamp joint wiring harness combination
E-55 }	Power seat inspection connector	E-81 SRS diagnosis unit
E-56	Power seat inspection connector	E-82 Vanity mirror lamp
E-57	Slide position adjusting motor (Driver's side)	

<Vehicles built from May, 1994>


Remarks

*1: Vehicles without ACTIVE-ECS.

*2: Vehicles with ACTIVE-ECS.


INTERIOR

R.H. drive vehicles

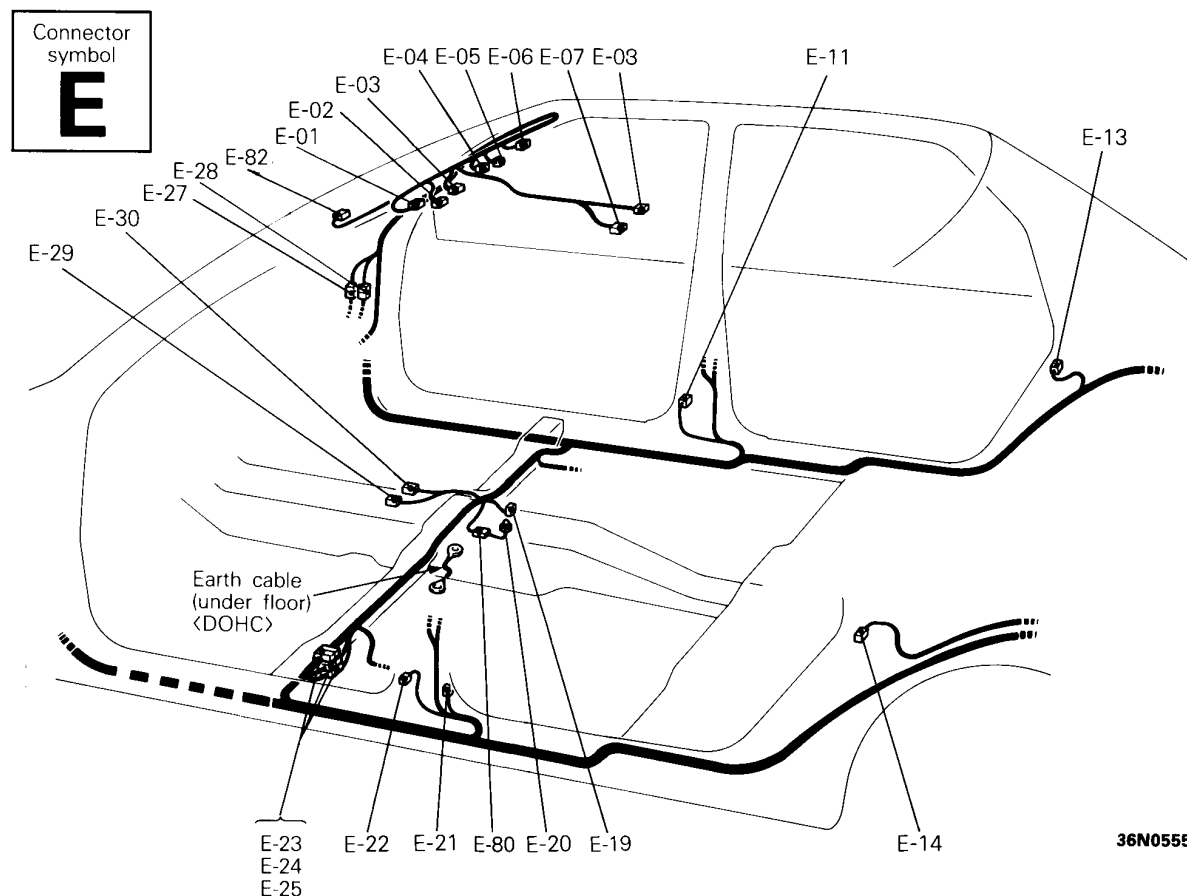

E-01	Sunroof motor	E-20	Front ashtray illumination lamp
E-02	Map lamp <Vehicles without sunroof>	E-21	No connection
E-03	Room lamp <Vehicles with sunroof>	E-22	Front door switch (LH)
E-04	Power seat memory switch	E-23	Body wiring harness and ABS wiring harness combination
E-05	Interior temperature sensor <Vehicles with sunroof>	E-24	
E-06	Sunroof control unit	E-25	
E-07	Interior temperature sensor <Vehicles without sunroof>	E-26	—
E-08	Room lamp <Vehicles without sunroof>	E-27	Body wiring harness and roof wiring harness combination
E-09	—	E-28	Body wiring harness and roof wiring harness combination <Power seat>
E-10	—	E-29	Overdrive switch <A/T>
E-11	Front door switch (RH)	E-30	Power/Economy changeover switch <A/T>
E-12	—	E-31	Front height adjusting motor (Passenger's side)
E-13	Rear door switch (RH)	E-32	Front height limit switch (Passenger's side)
E-14	Rear door switch (LH)	E-33	Power seat switch (Passenger's side)
E-15 } thru E-18 }	—	E-34	Rear height limit switch (Passenger's side)
E-19	Parking brake switch	E-35	Reclining position adjusting motor (Passenger's side)
		E-36	Rear height adjusting motor (Passenger's side)

<Vehicles with power seat>

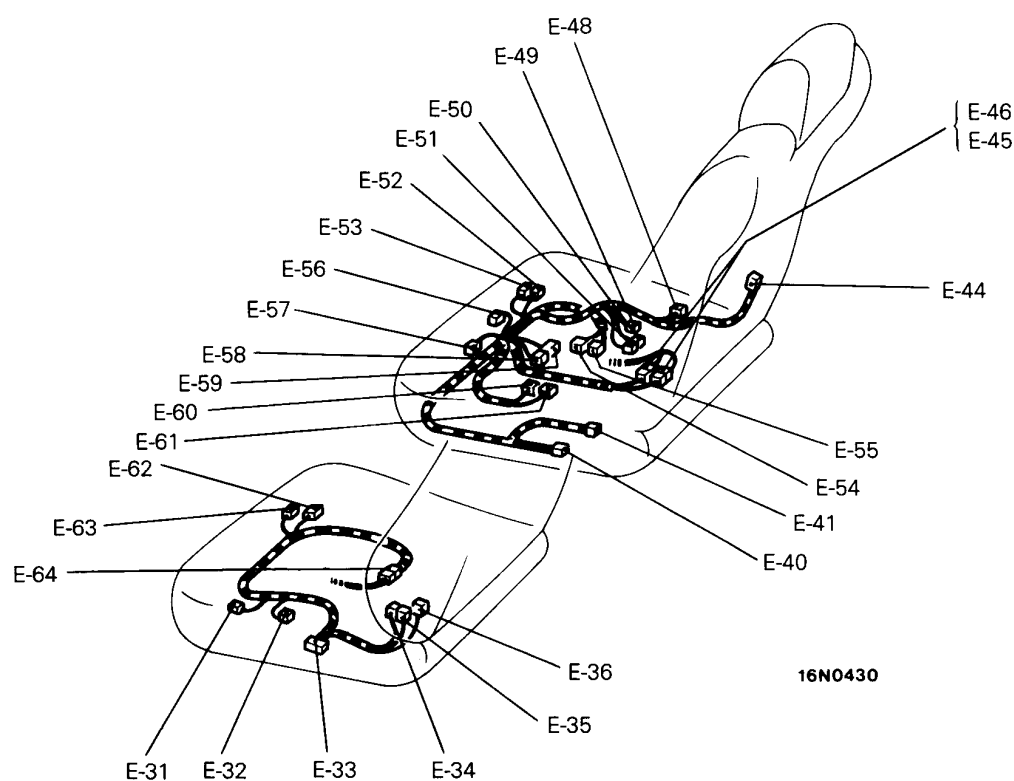

16N0430

E-37 }
E-38 } —
E-39 }

E-40 Slide position limit switch (Driver's side)
E-41 Reclining position limit switch (Driver's side)

E-42 }
E-43 }

E-44 Rear height limit switch (Driver's side)

E-45 } Body wiring harness and power seat wiring harness
E-46 } combination (Driver's side)

E-47 —

E-48 Power seat switch (Driver's side)

E-49 Reclining position adjusting motor/reclining position
sensor (Driver's side)

E-50 Rear height adjusting motor/rear height position
sensor (Driver's side)

E-51 Front height limit switch (Driver's side)

E-52 Slide position sensor (Driver's side)

E-53 Front height adjusting motor/front height position
sensor (Driver's side)

E-54 }
E-55 } Power seat control unit
E-56 Power seat inspection connector
E-57 Side position adjusting motor (Driver's side)

E-58 }
E-61 } Power seat control unit
thru

E-62 Slide position limit switch (Passenger's side)

E-63 Slide position adjusting motor (Passenger's side)

E-64 Body wiring harness and power seat wiring harness
combination (Passenger's side)

E-65 }
E-79 } —
thru

E-80 Body wiring harness and front ashtray illumination lamp
joint wiring harness combination


E-81 —

E-82 Vanity mirror lamp

<Vehicles built from May, 1994>

Remark



• The broken line (■■■): Vehicles with ABS.

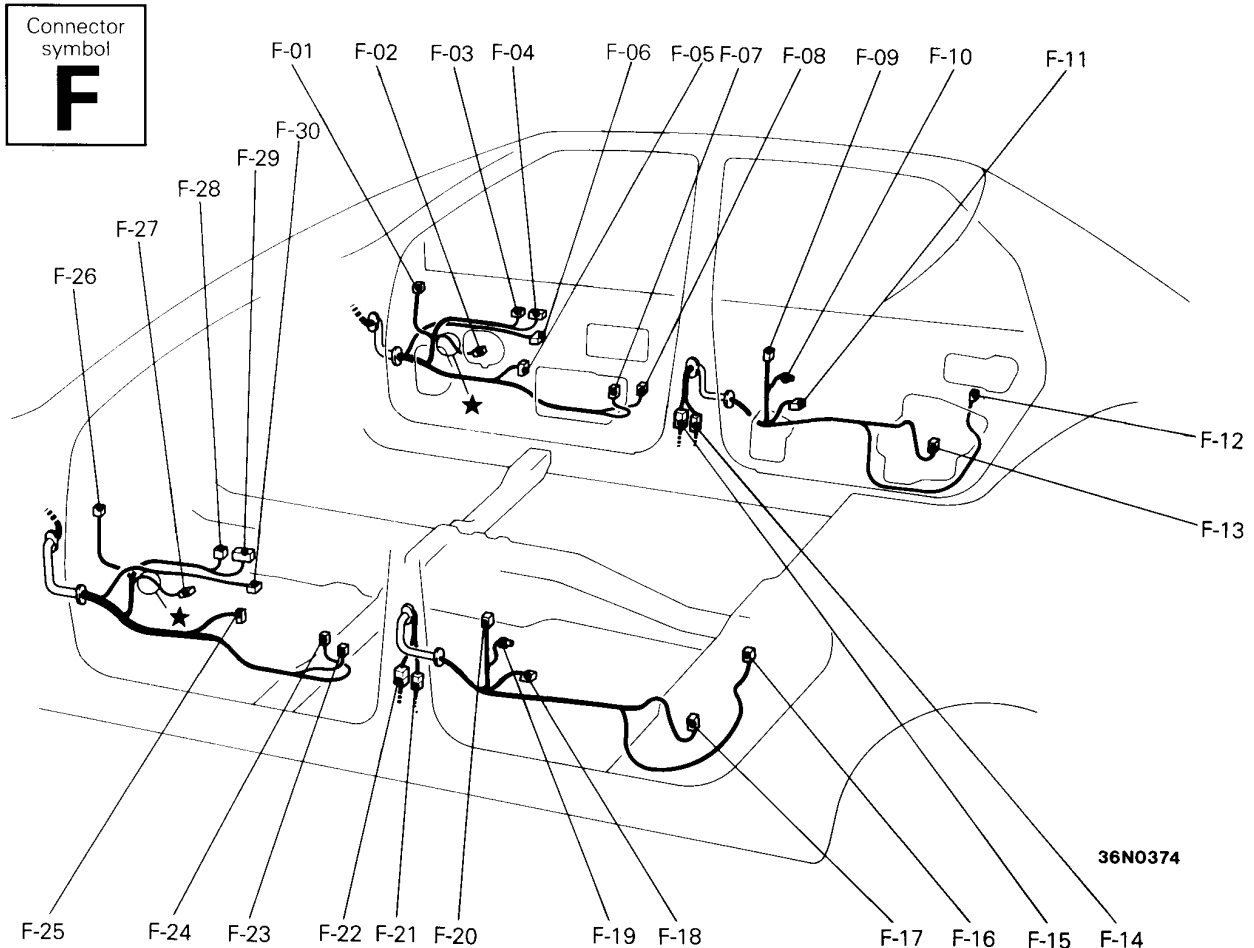DOOR**L.H. drive vehicles**

F-01	Door mirror (RH)	F-16	Door lock actuator (Rear: LH)
F-02	Door speaker (RH)	F-17	Door lamp (Rear: LH)
F-03 } F-04 }	Door control unit (RH)	F-18	Power window motor (Rear: LH)
F-05	Power window motor (Front: RH)	F-19	Rear ashtray illumination lamp (LH)
F-06	Door lock key cylinder switch (Passenger's side)	F-20	Rear power window unit
F-07	Door lamp (Front: RH)	F-21 } F-22 }	Body wiring harness and rear door wiring harness (LH) combination
F-08	Door lock actuator (Front: RH)	F-23	Door lock actuator (Front: LH)
F-09	Rear power window unit (RH)	F-24	Door lamp (Front: LH)
F-10	Rear ashtray illumination lamp (RH)	F-25	Power window motor (Front: LH)
F-11	Power window motor (Rear: RH)	F-26	Door mirror (LH)
F-12	Door lock actuator (Rear: RH)	F-27	Door speaker (LH)
F-13	Door lamp (Rear: RH)	F-28 } F-29 }	Door control unit (LH)
F-14 } F-15 }	Body wiring harness and rear door wiring harness (RH) combination <Vehicles without ACTIVE-ECS> or ACTIVE-ECS wiring harness and rear door wiring harness (RH) combination <Vehicles without ACTIVE-ECS>	F-30	Door lock key cylinder switch (Driver's side)*

Remark

*: Vehicles with theft-alarm system.

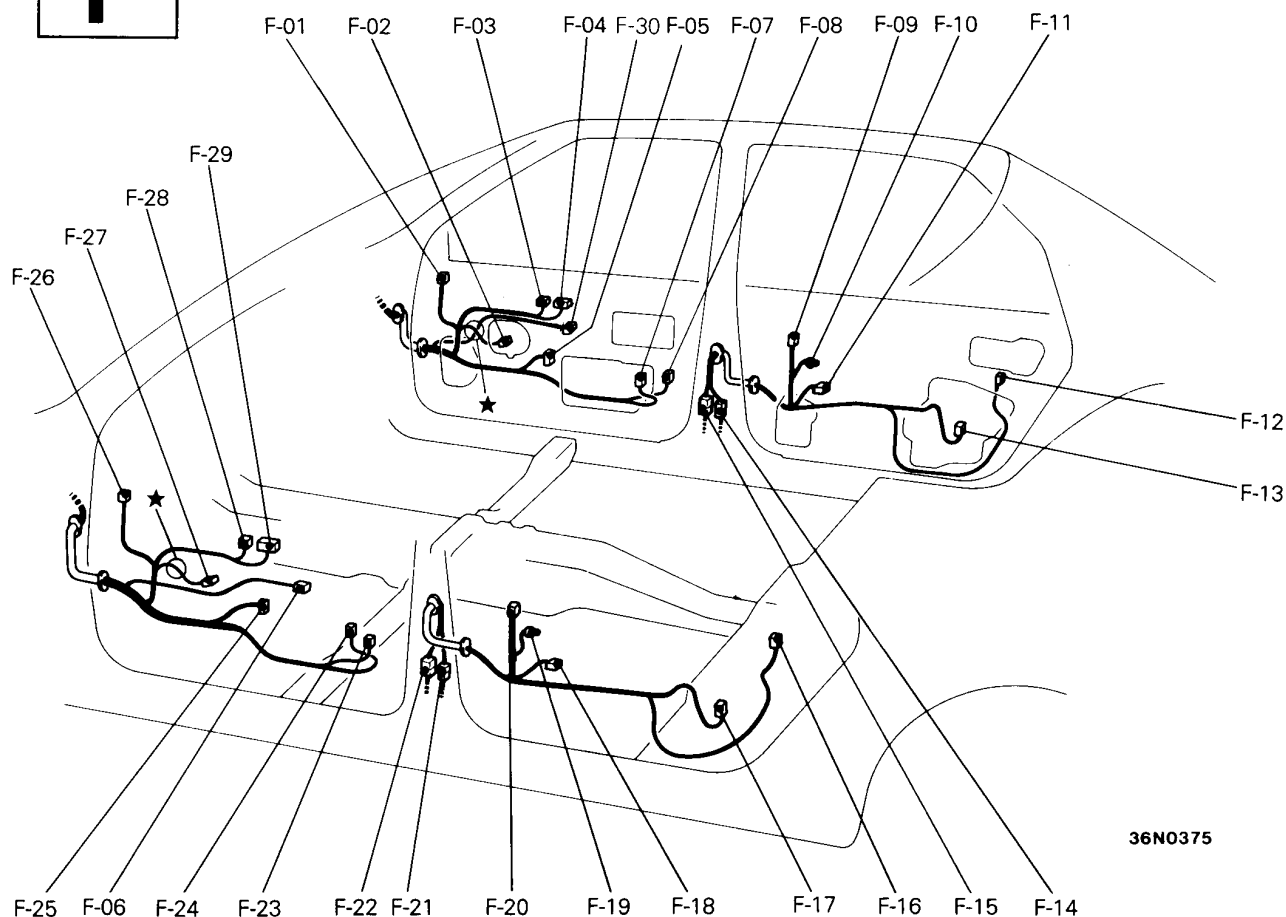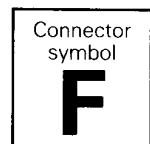DOOR**R.H. drive vehicles**



F-01	Door mirror (RH)	F-18	Power window motor (Rear: LH)
F-02	Door speaker (RH)	F-19	Rear ashtray illumination lamp (LH)
F-03 }	Door control unit (RH)	F-20	Rear power window unit (LH)
F-04 }		F-21 }	ABS wiring harness and rear door wiring harness (LH) combination
F-05	Power window motor (Front: RH)	F-22 }	
F-06	Door lock key cylinder switch (Passenger's side)	F-23	Door lock actuator (Front: LH)
F-07	Door lamp (Front: RH)	F-24	Door lamp (Front: LH)
F-08	Door lock actuator (Front: RH)	F-25	Power window motor (Front: LH)
F-09	Rear power window unit (RH)	F-26	Door mirror (LH)
F-10	Rear ashtray illumination lamp (RH)	F-27	Door speaker (LH)
F-11	Power window motor (Rear: RH)	F-28 }	Door control unit (LH)
F-12	Door lock actuator (Rear: RH)	F-29 }	
F-13	Door lamp (Rear: RH)	F-30	Door locking key cylinder switch (Driver's side)*
F-14 }	Body wiring harness and rear door wiring harness (RH) combination		
F-15 }			
F-16	Door lock actuator (Rear: LH)		
F-17	Door lamp (Rear: LH)		

Remark

*: Vehicles with theft-alarm system.

LUGGAGE COMPARTMENT

L.H. drive vehicles

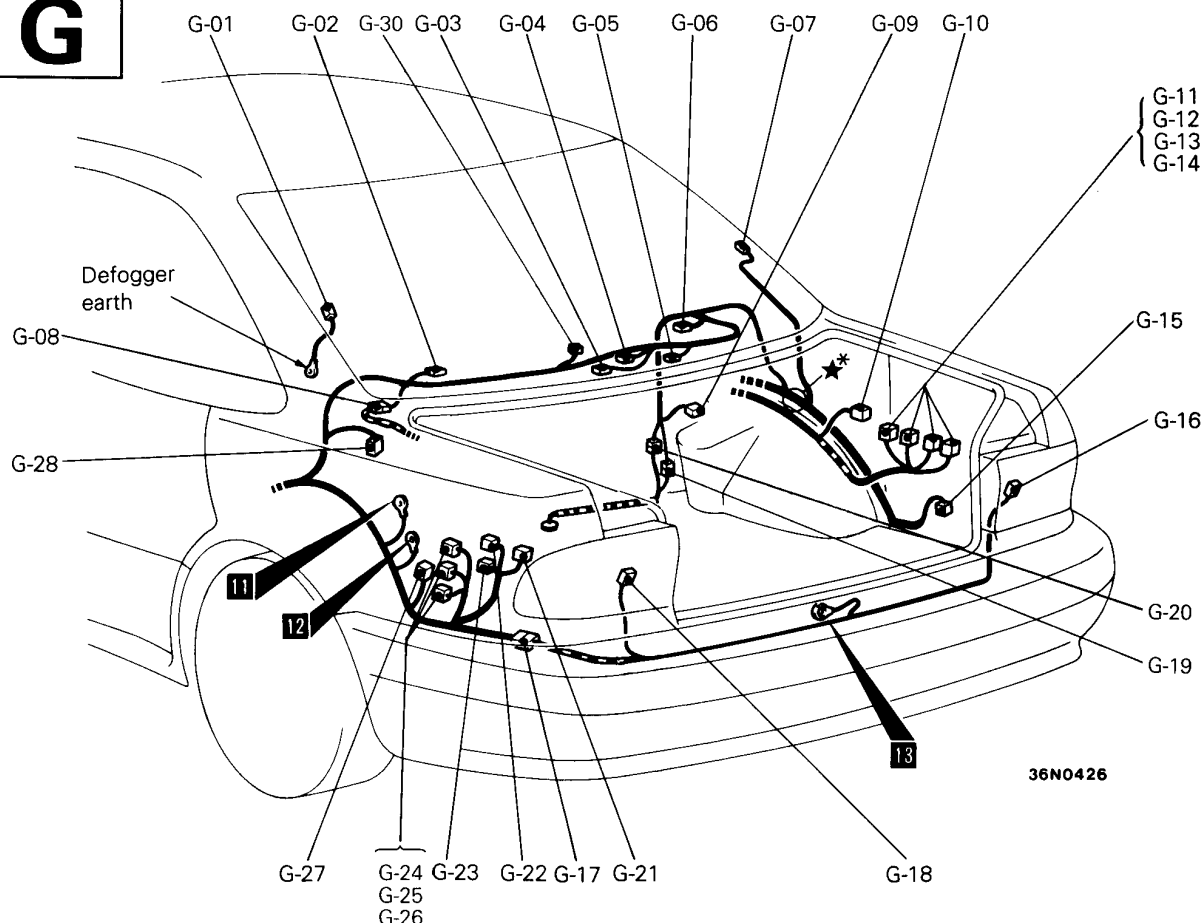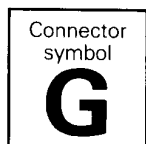



G-01	Defogger (—)	G-18	Rear combination lamp (LH)
G-02	Rear speaker (LH)	G-19	Body wiring harness and fuel pump wiring harness combination
G-03	Rear wiper motor	G-20	Body wiring harness and fuel pump wiring harness combination <ABS>
G-04	Rear intermittent wiper relay	G-21	Diagnosis code erasure connector <ABS>
G-05	Trunk room lamp	G-22 }	ABS control unit
G-06	Rear speaker (RH)	G-23 }	
G-07	Defogger (+)	G-24 }	TCL control unit
G-08	Body wiring harness and rear lid wiring harness combination	G-25 }	
G-09	ACTIVE-ECS damping force switching actuator (Rear: RH)	G-26 }	
G-10	ACTIVE-ECS rear solenoid valve assembly	G-27	Motor antenna
G-11 } thru } G-14 }	ACTIVE-ECS control unit	G-28	ACTIVE-ECS damping force switching actuator (Rear: LH)
G-15	Rear washer motor	G-29	—
G-16	Rear combination lamp (RH)	G-30	Humidity sensor <A/C>
G-17	Body wiring harness and trunk room wiring harness combination		

Remark

*: Vehicles with ACTIVE-ECS.

LUGGAGE COMPARTMENT

R.H. drive vehicles

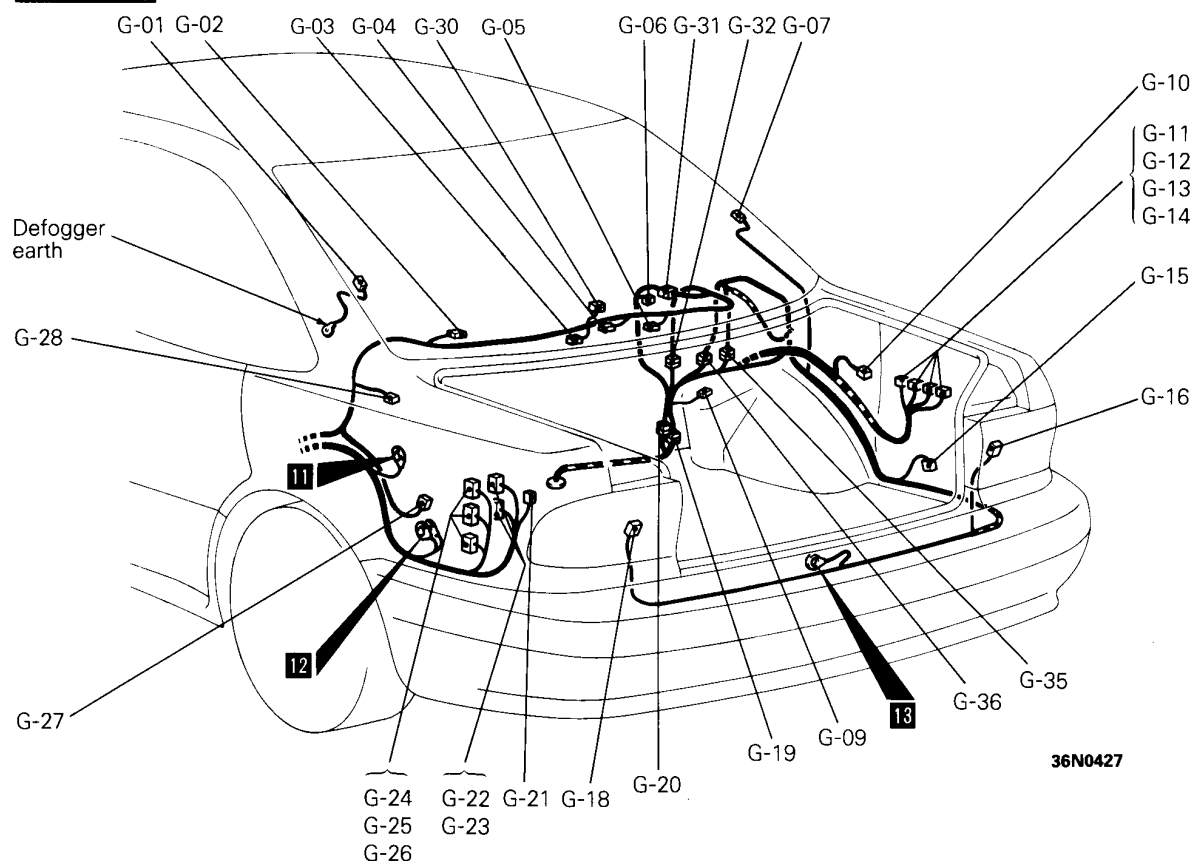
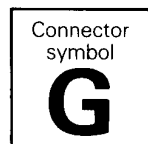


G-01	Defogger (—)	G-20	Body wiring harness and fuel pump wiring harness combination <ABS>
G-02	Rear speaker (LH)	G-21	Diagnosis code erasure connector <ABS>
G-03	Rear wiper motor	G-22 }	ABS control unit
G-04	Rear intermittent wiper relay	G-23 }	
G-05	Trunk room lamp	G-24 }	TCL control unit
G-06	Rear speaker (RH)	G-25 }	
G-07	Defogger (+)	G-26 }	
G-08	—	G-27	Motor antenna
G-09	ACTIVE-ECS damping force switching actuator (Rear: RH)	G-28	ACTIVE-ECS damping force switching actuator (Rear: LH)
G-10	ACTIVE-ECS rear solenoid valve assembly	G-29	—
G-11 } thru G-14 }	ACTIVE-ECS control unit	G-30	Humidity sensor <A/C>
G-15	Rear washer motor	G-31 }	Body wiring harness and rear wiring harness combination
G-16	Rear combination lamp (RH)	G-32 }	
G-17	—	G-33 }	—
G-18	Rear combination lamp (LH)	G-34 }	
G-19	Body wiring harness and fuel pump wiring harness combination	G-35 }	Body wiring harness and trunk room wiring harness combination
		G-36 }	


36N0427

TRUNK LID

<L.H. drive vehicles>

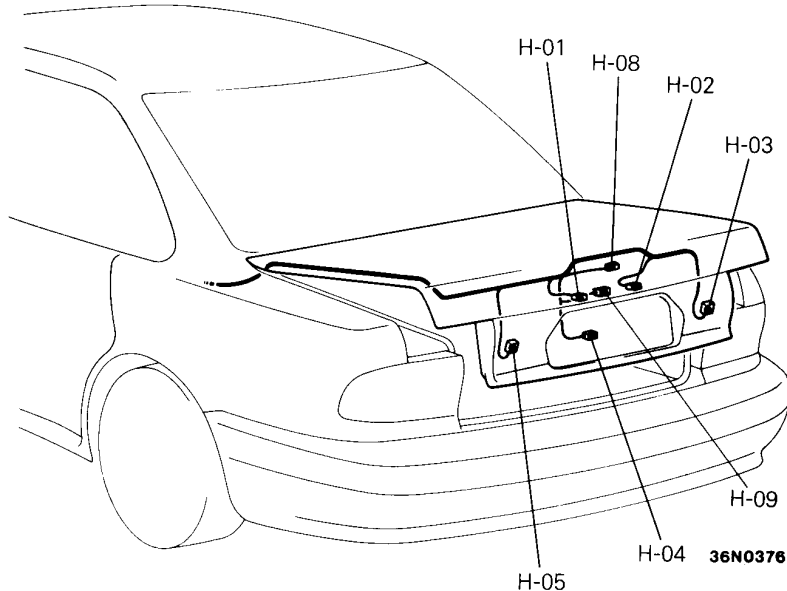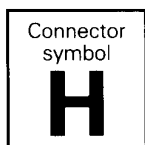

<R.H. drive vehicles>

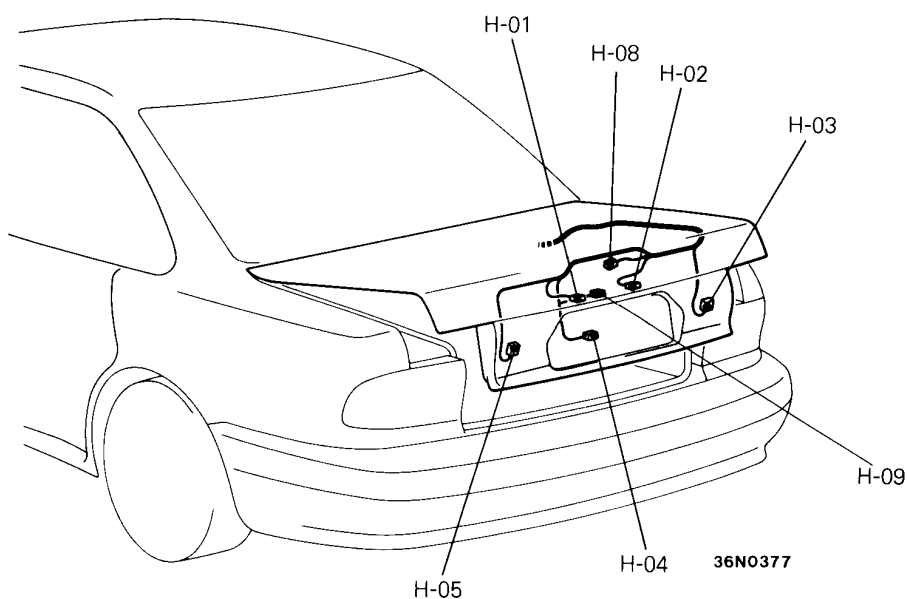



H-01 License plate lamp (LH)
 H-02 License plate lamp (RH)
 H-03 Rear lid lamp (RH)
 H-04 Trunk room lamp switch
 H-05 Rear lid lamp (LH)
 H-06 —

H-07 —
 H-08 High mounted stop lamp
 H-09 Trunk lid lock cylinder switch*

Remark

*: Vehicles with theft-alarm system.

UNDER REAR FLOOR

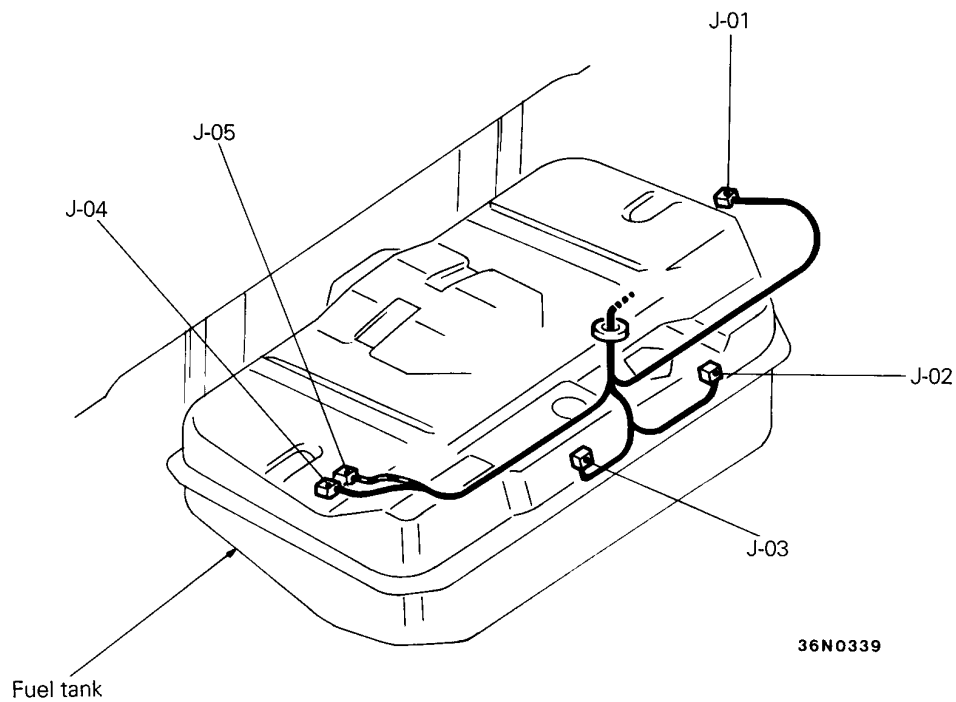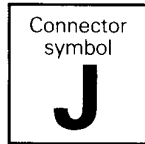

- J-01 ABS speed sensor (Rear: RH) <ABS>
- J-02 Fuel pump
- J-03 Fuel gauge unit
- J-04 ABS speed sensor (Rear: LH) <ABS>
- J-05 ACTIVE-ECS rear height sensor