

3 SINGLE PART INSTALLATION POSITION

RELAY	3-2
CONTROL UNIT	3-6
SENSOR	
MPI-SOHC	3-9
MPI-DOHC	3-14
SOLENOID VALVE	3-20
DIODE	
L.H. drive vehicles	3-22
R.H. drive vehicles	3-23
INSPECTION TERMINAL AND SPARE CONNECTOR	3-24
FUSIBLE LINK AND FUSE	3-26
EARTH CABLE	3-27
EARTH	
L.H. drive vehicles	3-28
R.H. drive vehicles	3-30



RELAY









Name		Symbol	Name	Symbol
ABS motor relay	without TCL	B	Dim-dip lamp relay 4	D
	with TCL	C	Engine control relay	H
ABS valve relay	without TCL	B	Engine oil level relay	G
	with TCL	C	Front fog lamp relay	A
ACTIVE-ECS compressor relay		F	Headlamp relay	A
ACTIVE-ECS relay		A	Headlamp washer relay	G
ACTIVE-ECS return pump relay		F	Horn relay	L
ACTIVE-ECS solenoid valve relay		F	Power window relay	A
A/C compressor relay		A	Radiator fan motor relay (HI)	A
Alternator relay		A	Radiator fan motor relay (LO)	A
Blower motor relay		K	Rear fog lamp relay	A
Blower motor high relay		I	Rear intermittent wiper relay	P
Condenser fan motor relay (HI)		A	Rear power window unit	O
Condenser fan motor relay (LO)		A	Starter relay*	F
Daytime running lamp relay 1		E	Tail lamp relay	A
Daytime running lamp relay 2		D	TCL valve relay	M
Defogger relay		K	Theft-alarm horn relay*	L.H. drive vehicles
Dim-dip lamp relay 1		E		R.H. drive vehicles
Dim-dip lamp relay 2		D	Turn signal and hazard flasher unit	L
Dim-dip lamp relay 3		D	Windshield wiper relay	N

NOTE


*: Vehicles with theft-alarm system.

Engine compartment

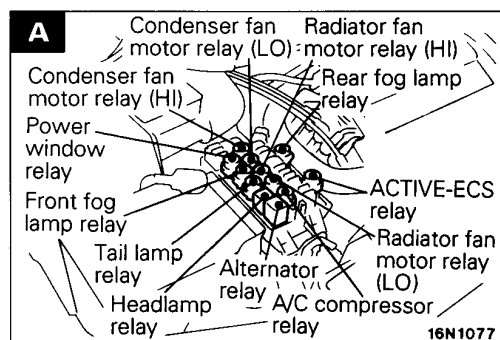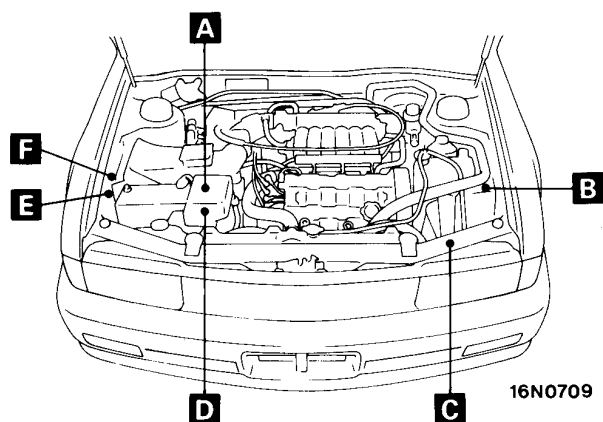

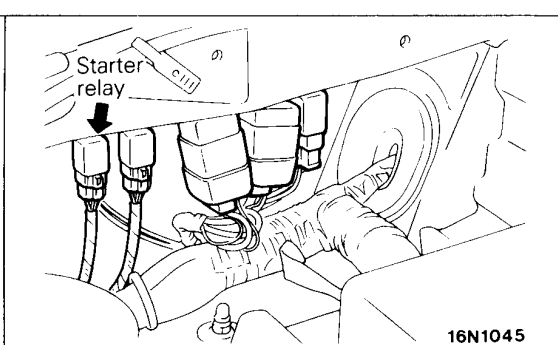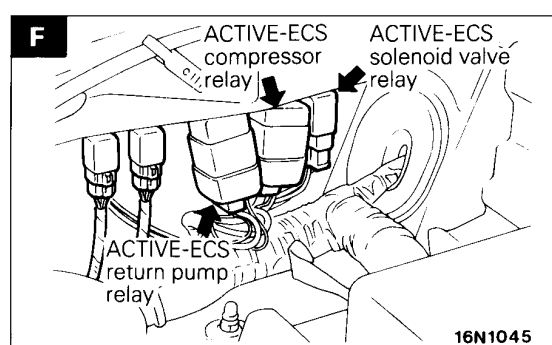
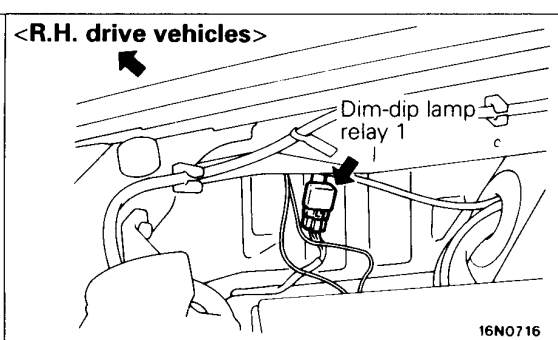
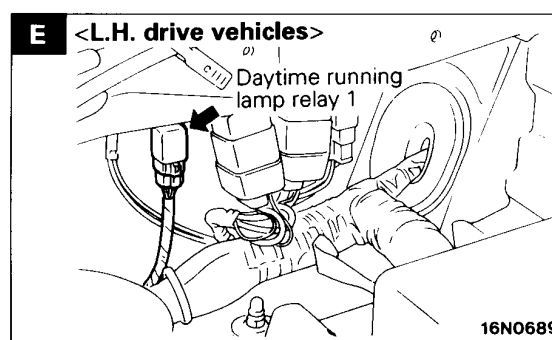
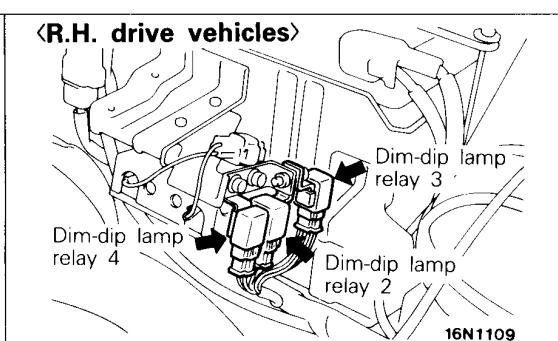
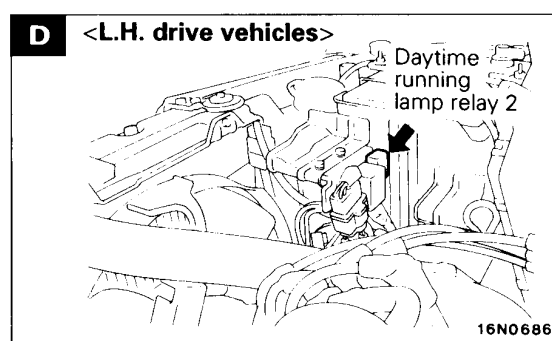
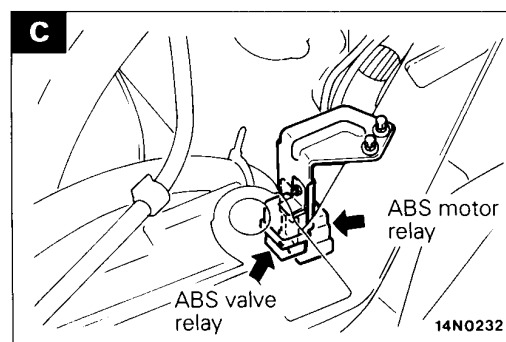
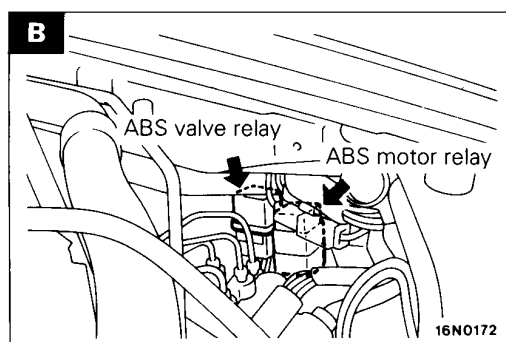





Interior

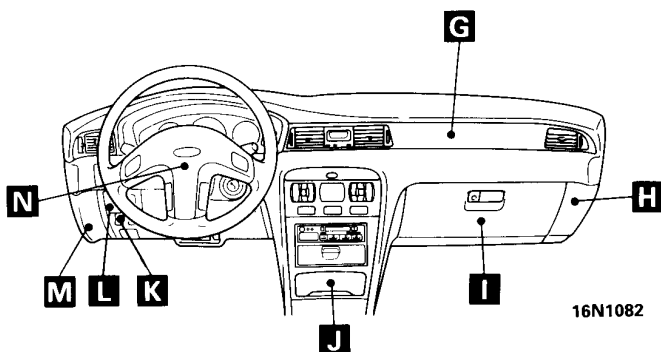



NOTE

For R.H. drive vehicles, part installation positions are symmetrical.

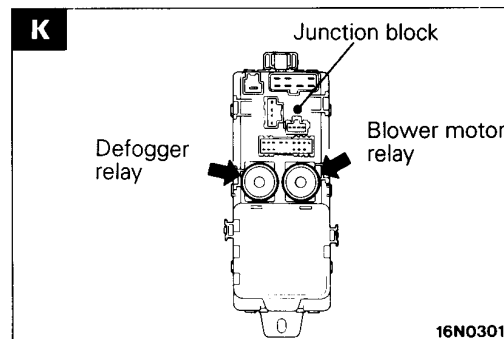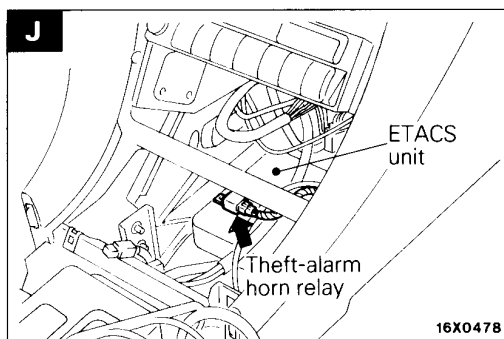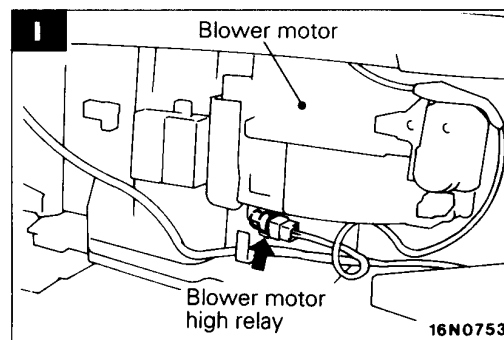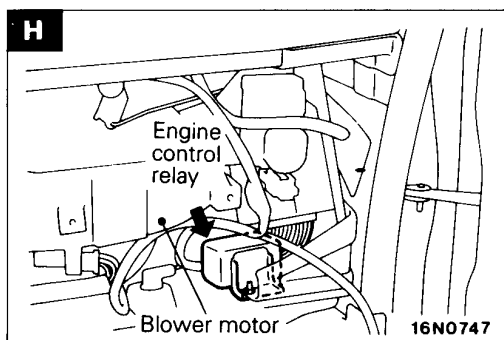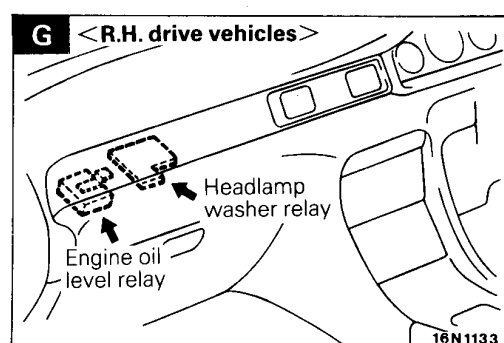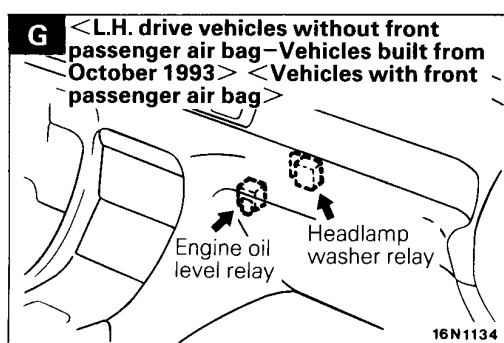
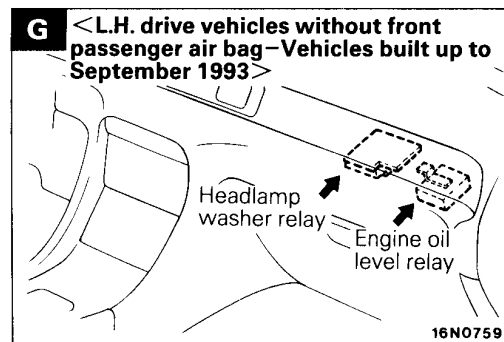


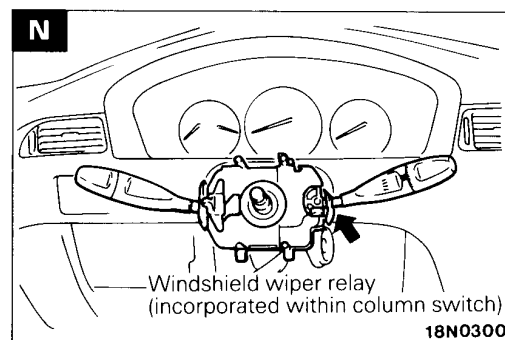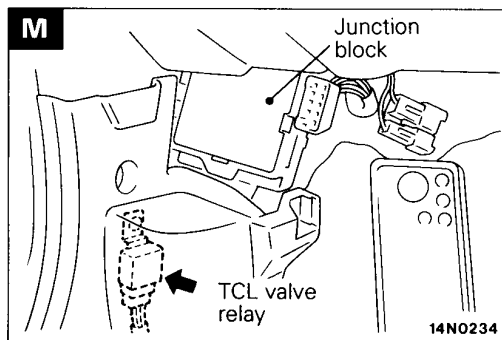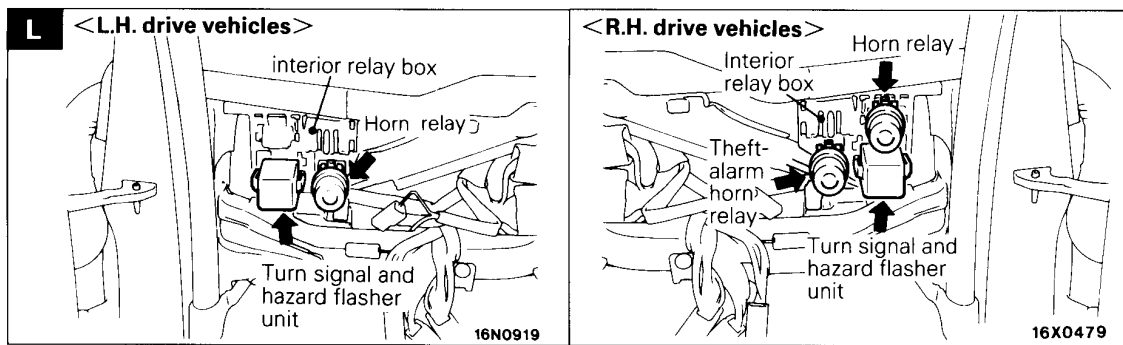

Rear door

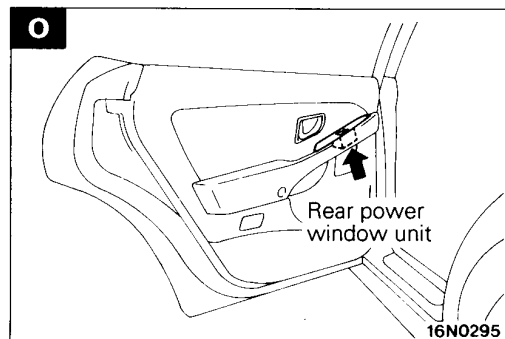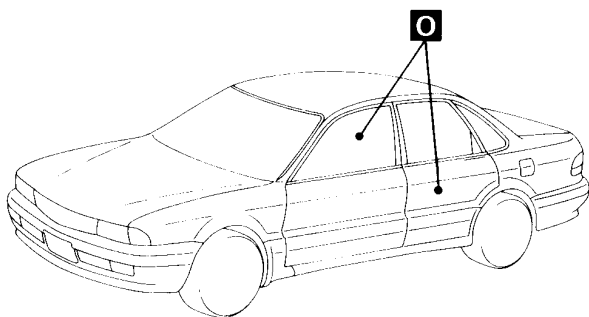

Luggage compartment

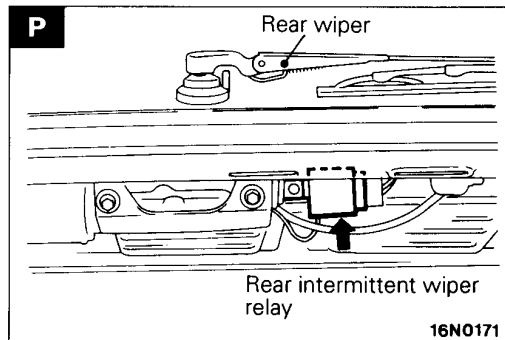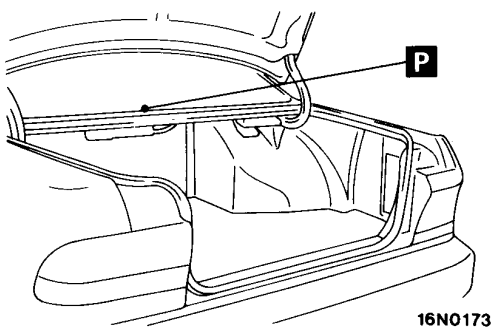

CONTROL UNIT



Name		Symbol	Name		Symbol
ABS control unit		N	Engine control unit		C
A/C belt lock controller <DOHC>		E	EPS control unit		B
A/C control unit		H	ETACS unit	L.H. drive vehicles	H
ACTIVE-ECS control unit		M		R.H. drive vehicles	I
Auto-cruise control unit		H	Motor antenna control unit		N
Daytime running lamp control unit		A	Power seat control unit		L
Door control unit		J	SRS diagnosis unit	L.H. drive vehicles	O
ELC-4A/T control unit	L.H. drive vehicles	F		R.H. drive vehicles	D
	R.H. drive vehicles	G* ¹	Sun roof control unit		K
		F* ²	TCL control unit		N

NOTE



*1: Vehicles with SRS system.

*2: Vehicles without SRS system.

Engine compartment

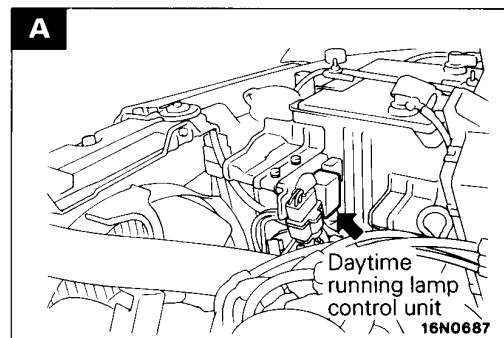
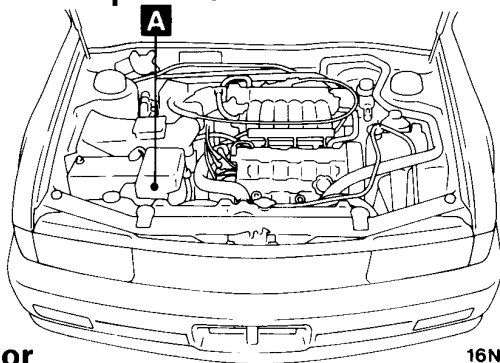







Interior

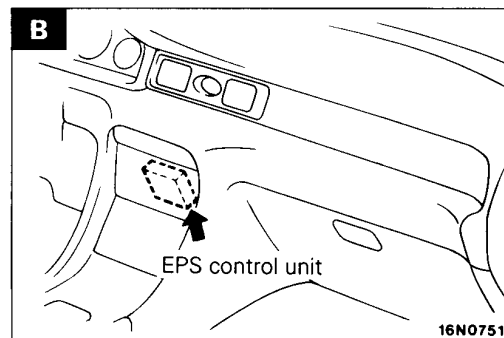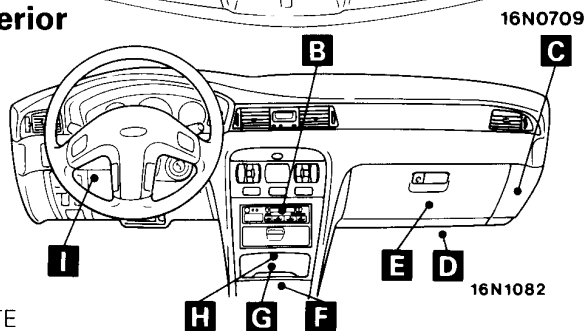



NOTE

For R.H. drive vehicles, part installation positions are symmetrical.

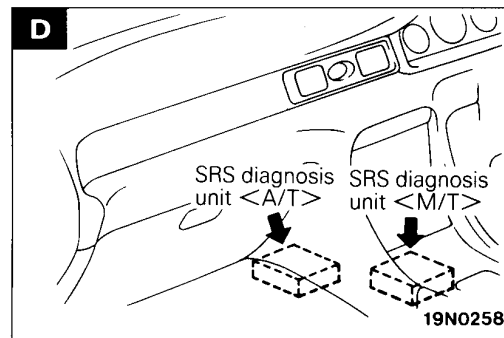
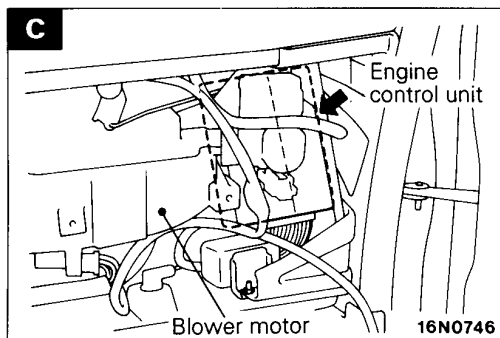


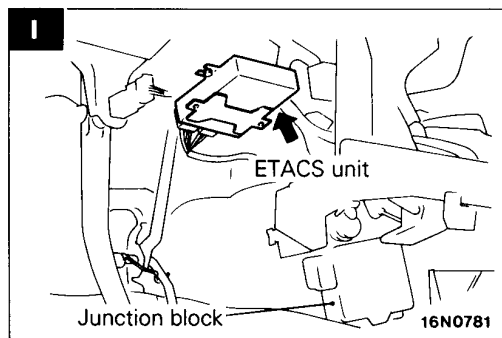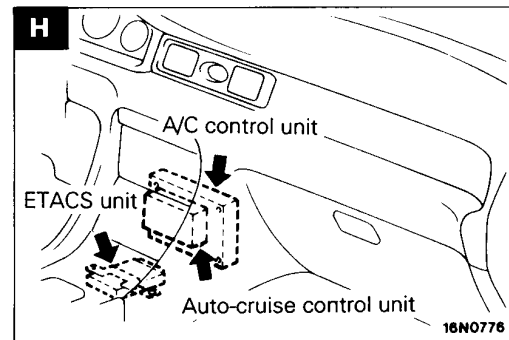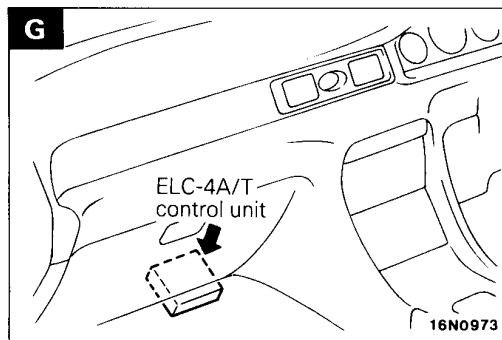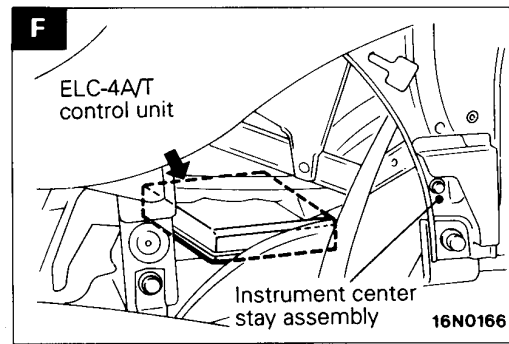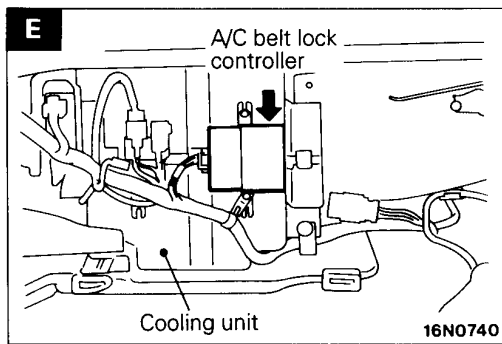




Front door and front seat

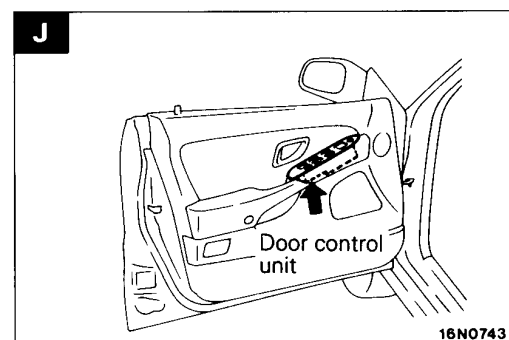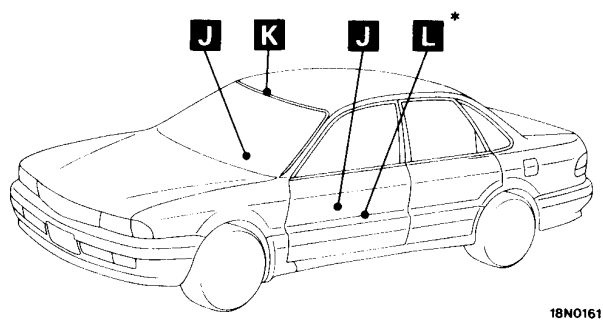



NOTE
For R.H. drive vehicles, only the positions indicated by the * is symmetrical.

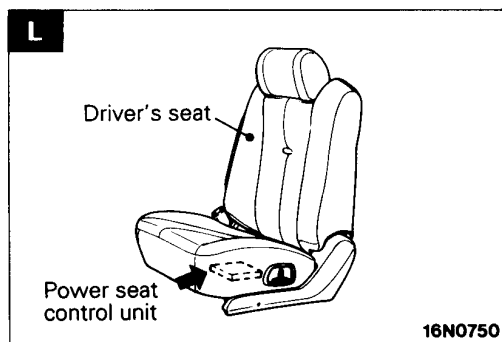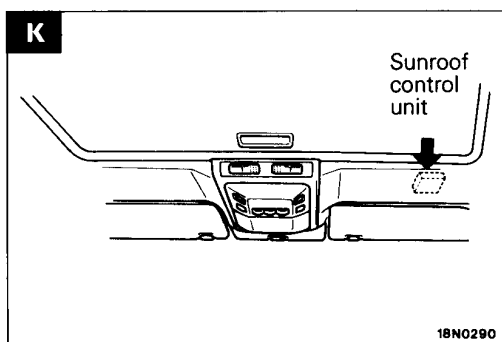

Luggage compartment

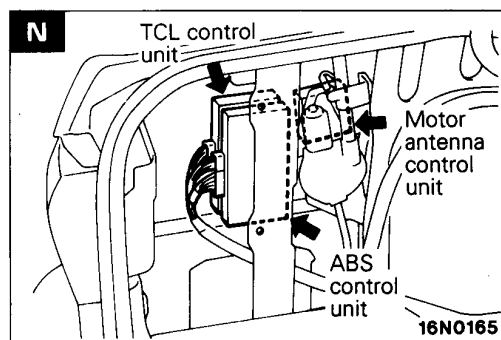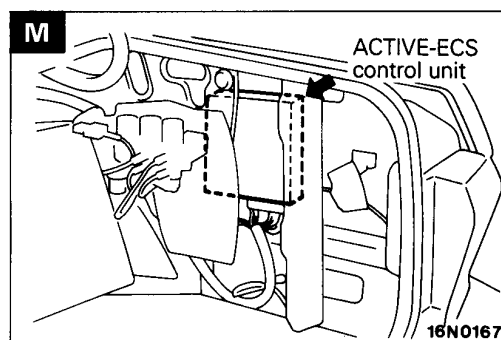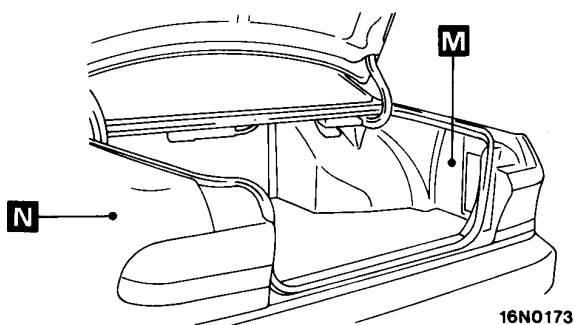

Floor console



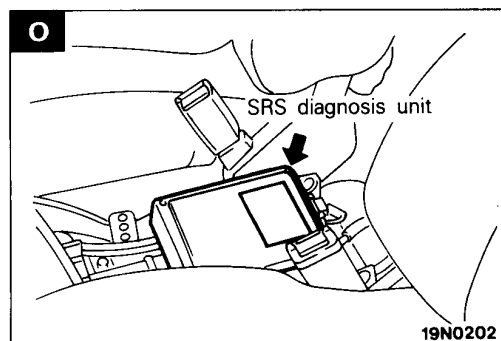
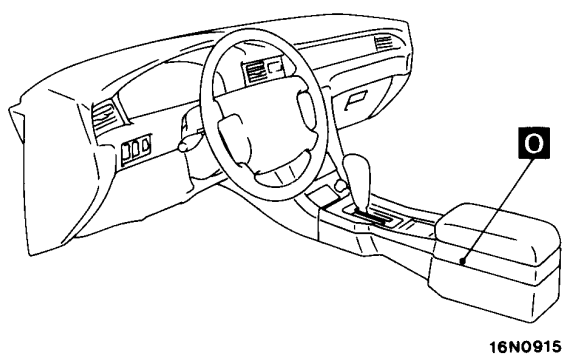










SENSOR

MPI-SOHC


Name		Symbol	Name		Symbol
ABS speed sensor (Front)		Q	Humidity sensor <A/C>		P
ABS speed sensor (Rear)		S	Interior temperature sensor		O
Air flow sensor (with built-in barometric pressure sensor, intake air temperature sensor)		A	Outside thermo sensor		G
			Oxygen sensor		R
A/T fluid temperature sensor <A/T>		I	Photo sensor		L
Crank angle sensor and top dead center sensor		C	Thermo sensor (for cooling fan control)		H
Detonation sensor		D	Thermostat		E
Engine coolant temperature sensor (for engine control)		J	Throttle position sensor		B
Engine oil level sensor		F	Induction control valve position sensor		C
			Vehicle speed sensor (Reed switch)		K
Front impact sensor	R.H.	U	Water temperature sensor		N
	L.H.	T			
Fin thermo sensor		M			

Engine compartment

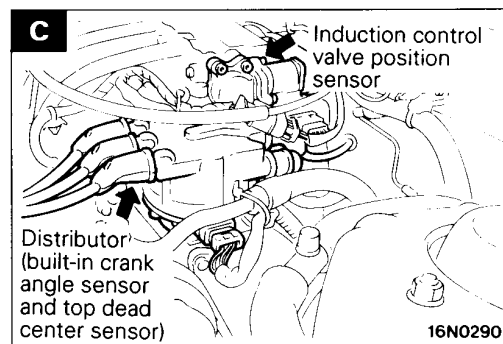
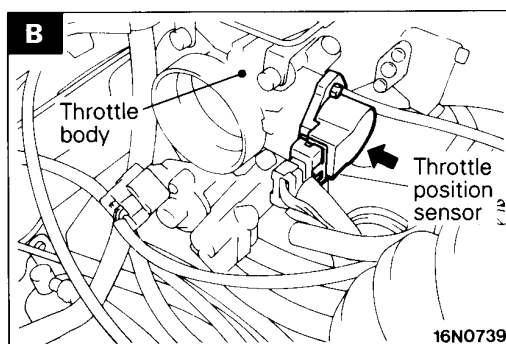
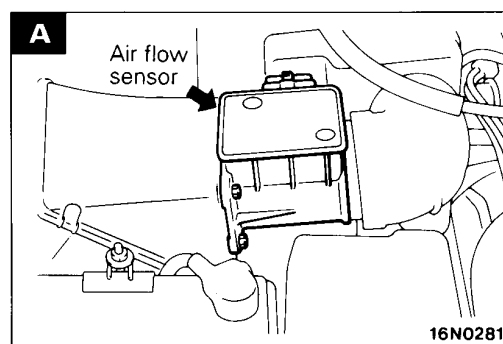
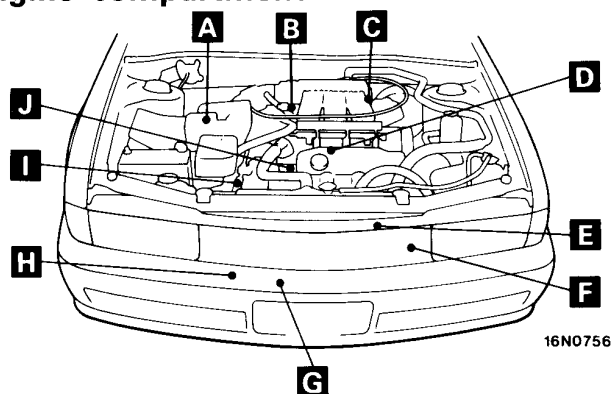


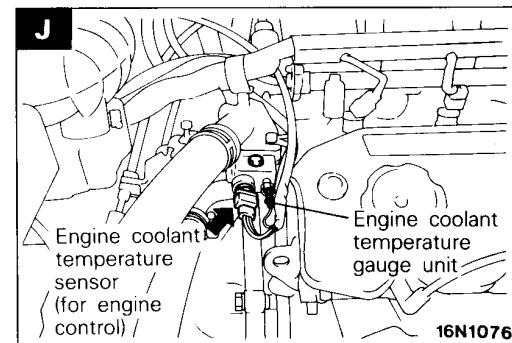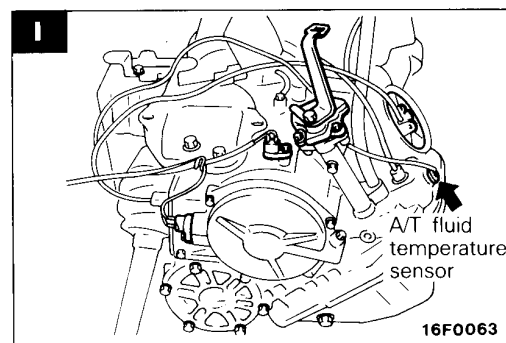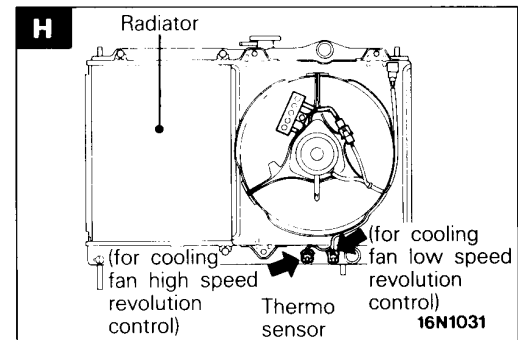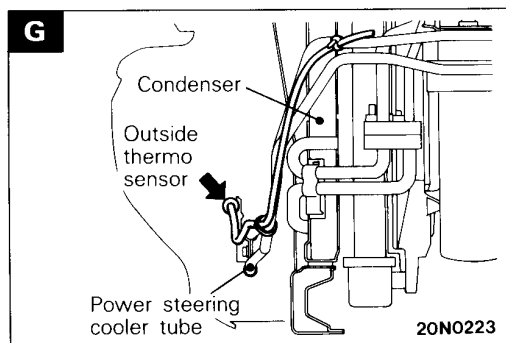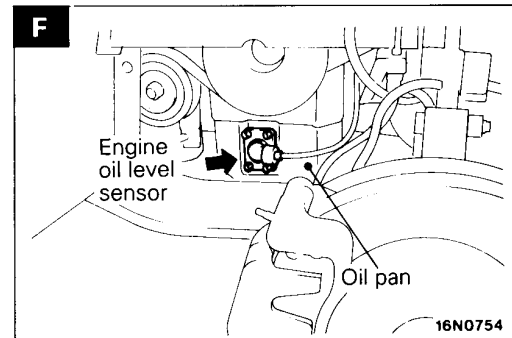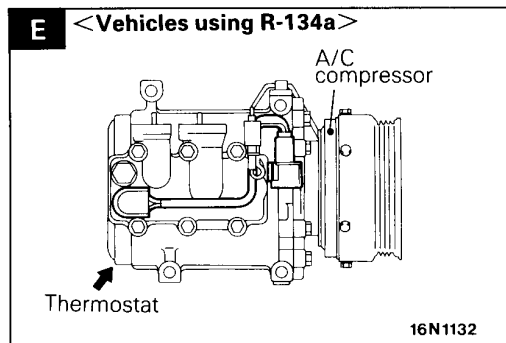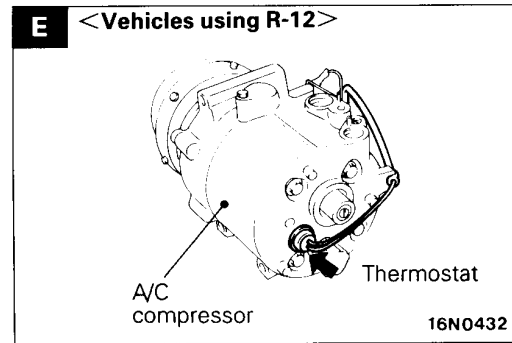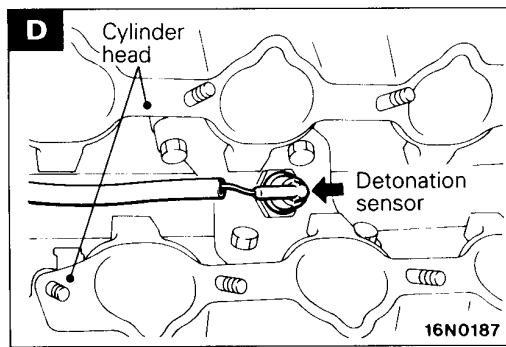



Interior

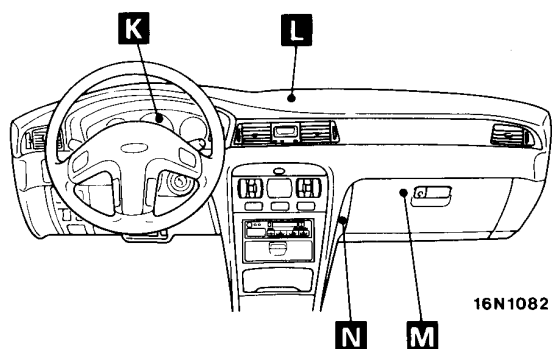



NOTE
For R.H. drive vehicles, part installation positions are symmetrical.

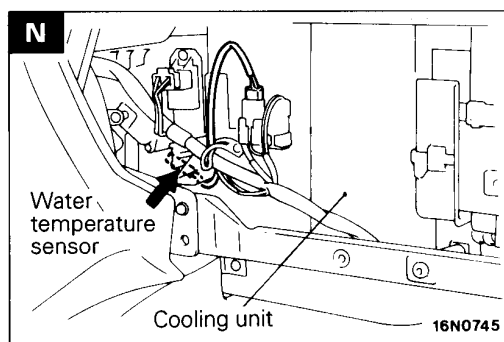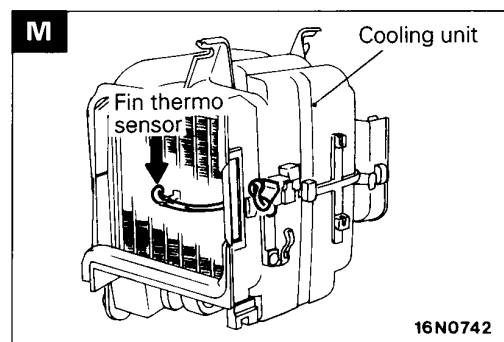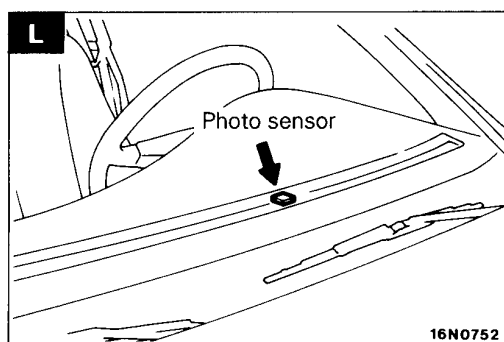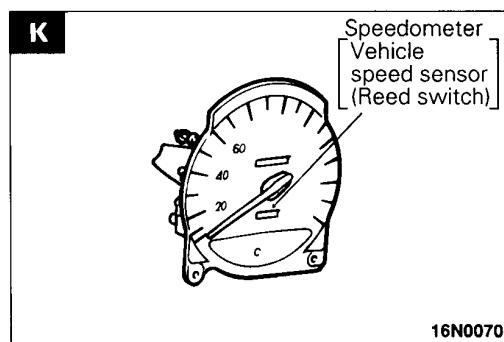




Roof

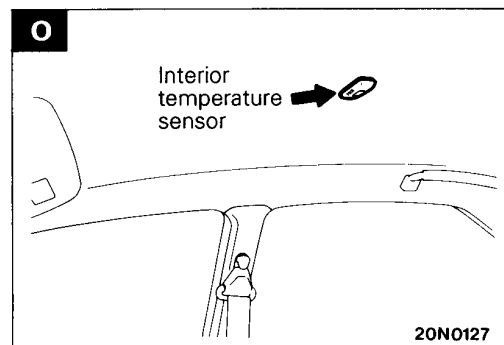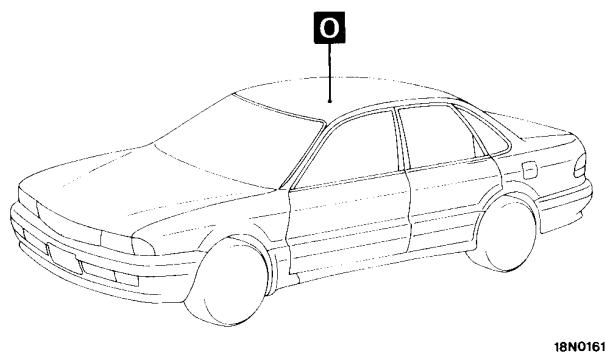



Rear shelf

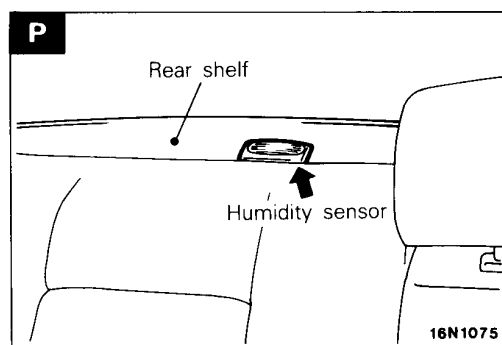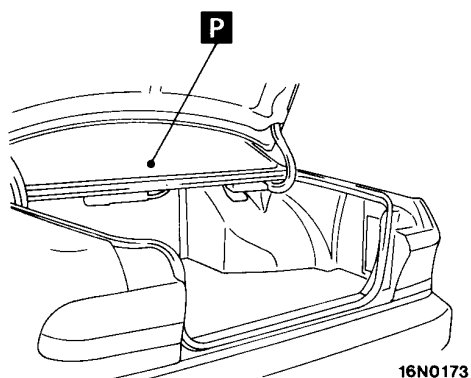




Under front floor

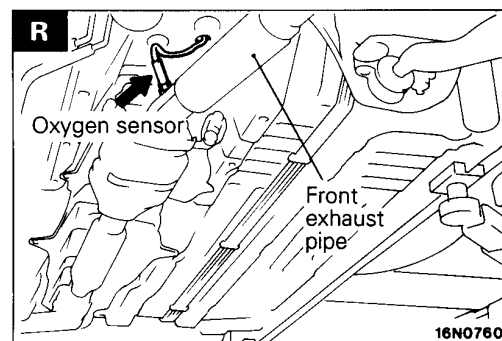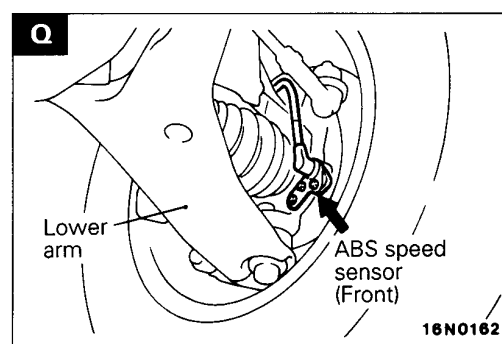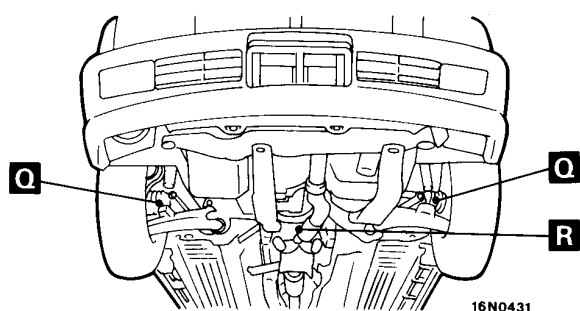

Under rear floor

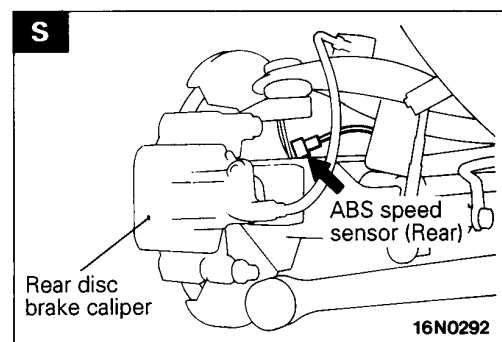
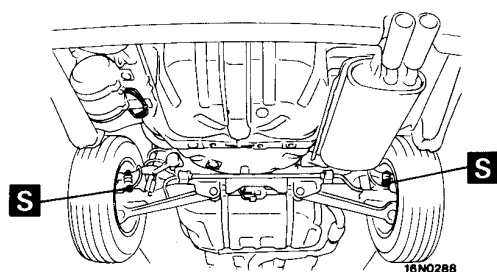












Under front floor



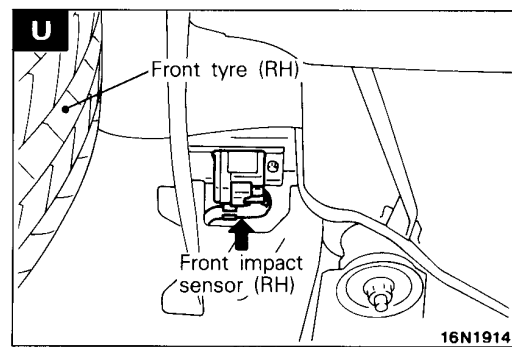
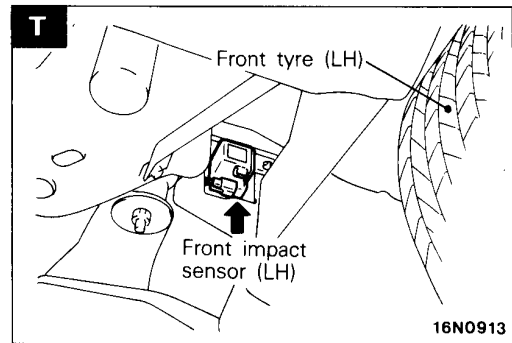
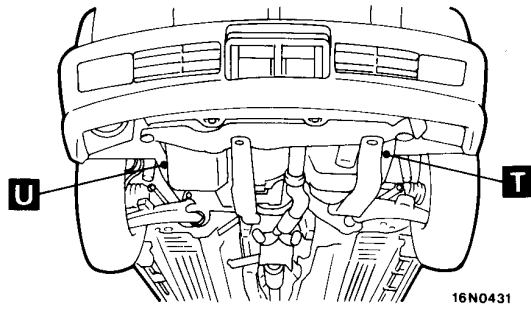


SENSOR**MPI-DOHC**



Name	Symbol	Name	Symbol
ABS speed sensor (Front)	Y	Front impact sensor	R.H. e
ABS speed sensor (Rear)	b		L.H. d
Accelerator position sensor <Vehicles with TCL>	C	Humidity sensor	W
ACTIVE-ECS front height sensor	a	Induction control valve position sensor	F
ACTIVE-ECS G sensor	K	Interior temperature sensor	U
ACTIVE-ECS rear height sensor	c	Outside thermo sensor	M
ACTIVE-ECS rear pressure sensor	X	Oxygen sensor	Z
Air flow sensor (with built-in barometric pressure sensor, intake air temperature sensor)	A	Photo sensor	Q
A/T fluid temperature sensor	O	Rear height position sensor	V
Camshaft position sensor	G	Reclining position sensor	V
Crank angle sensor	I	Revolution pick-up sensor	L
Detonation sensor	E	Slide position sensor	V
Engine coolant temperature sensor (for engine control)	B	Steering wheel sensor <ACTIVE-ECS or TCL>	T
Engine oil level sensor	J	Thermo sensor (for cooling fan control)	N
Fin thermo sensor	R	Thermostat	L
4WS fluid level sensor	H	Throttle position sensor	D
Front height position sensor	V	Vehicle speed sensor (Reed switch)	P
		Water temperature sensor	S

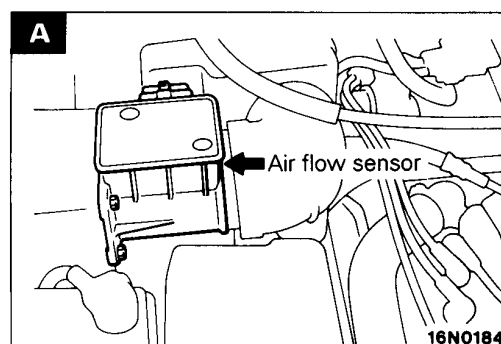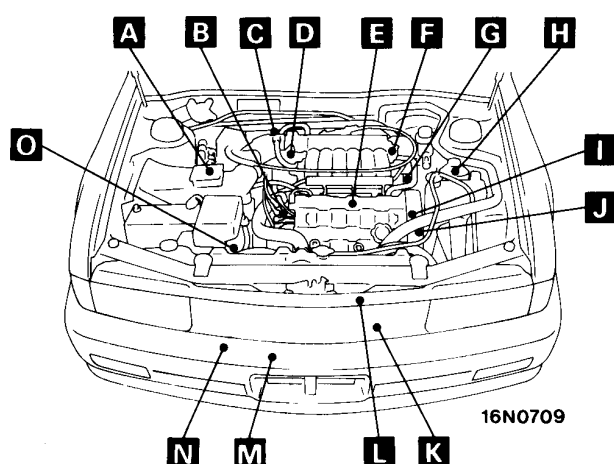Engine compartment

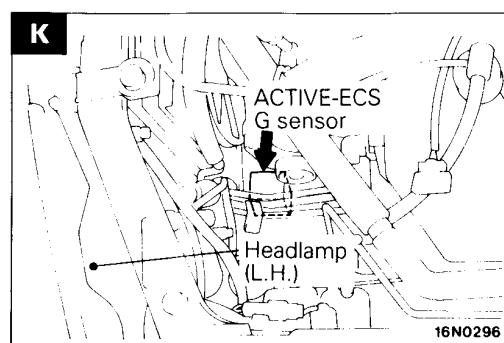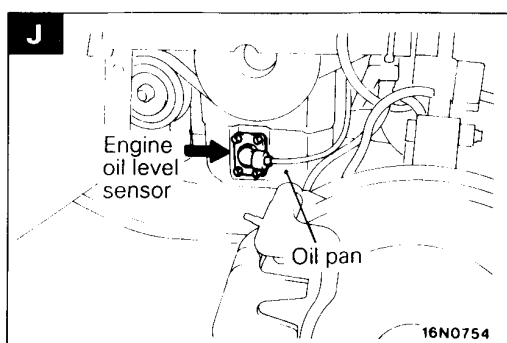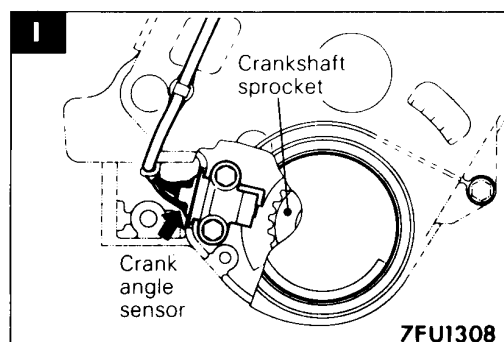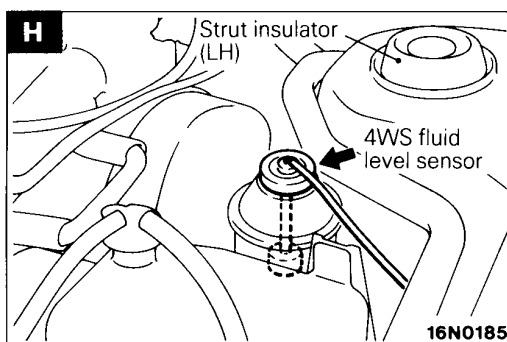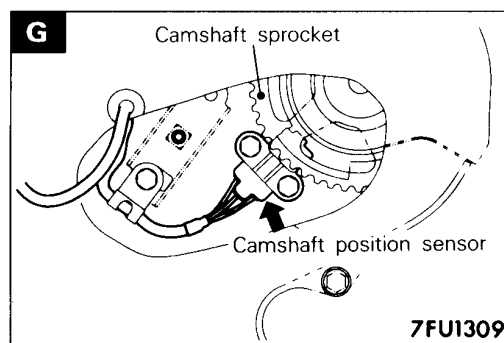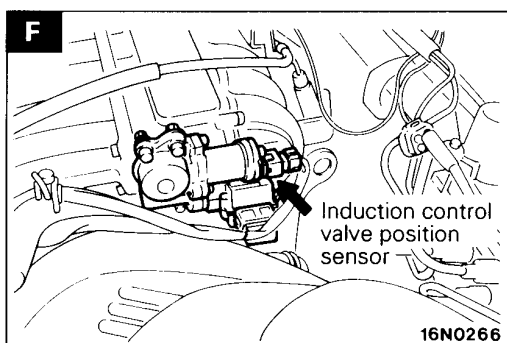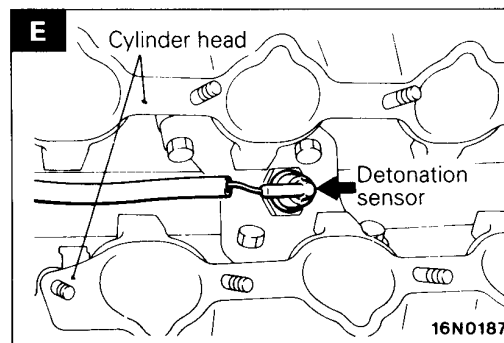
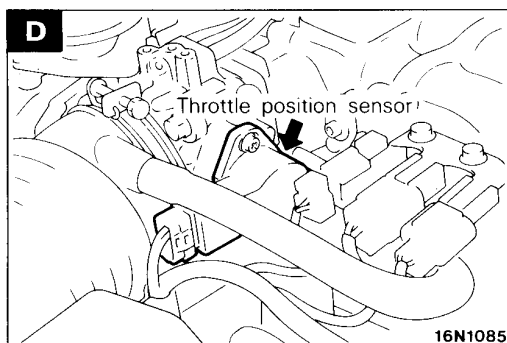
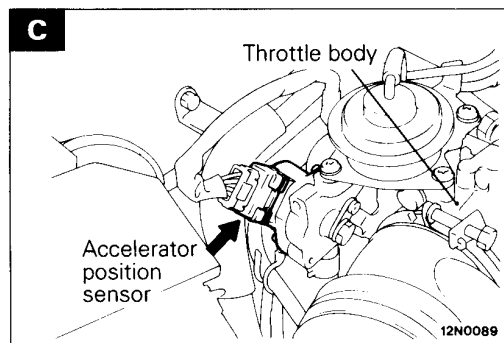
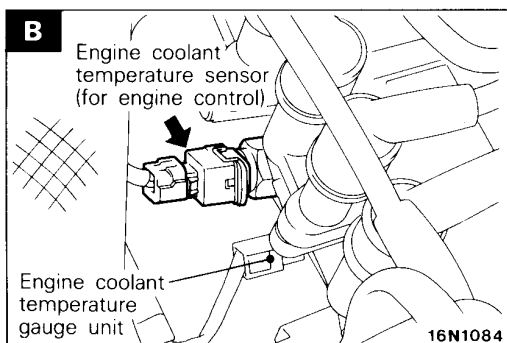


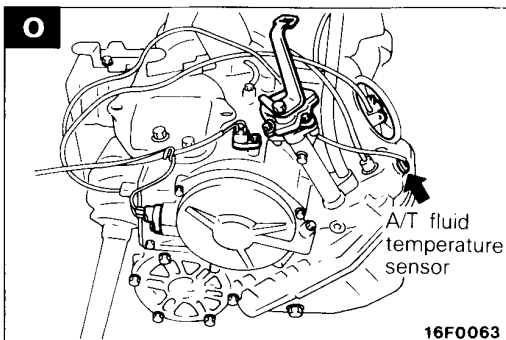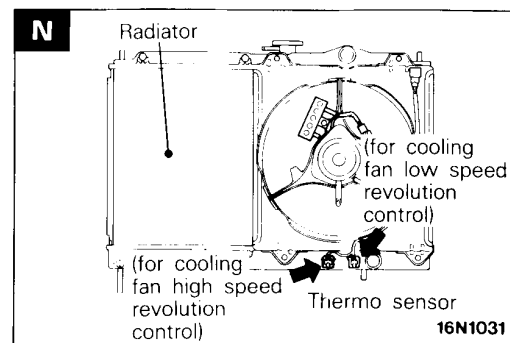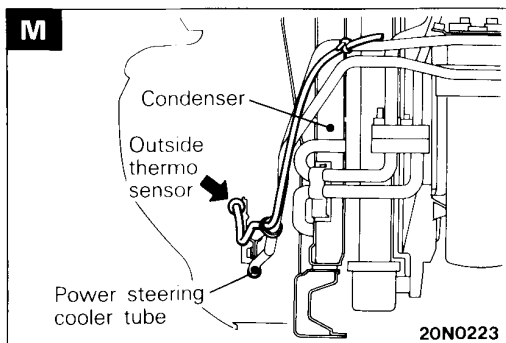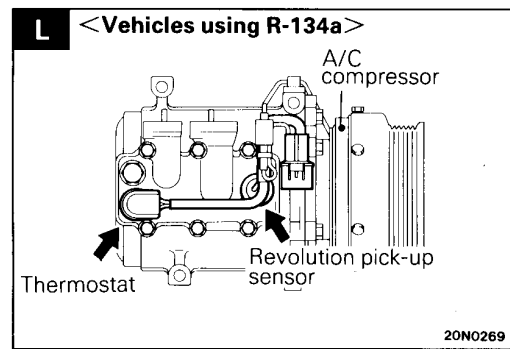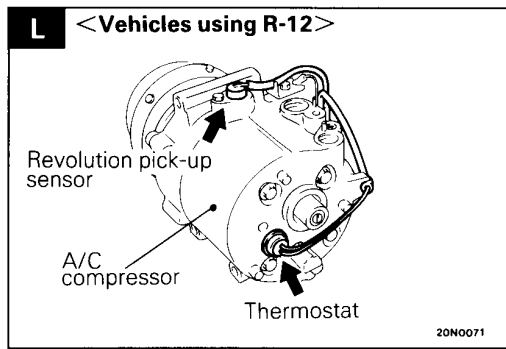




Interior

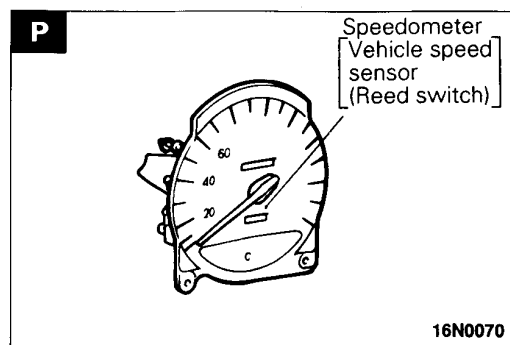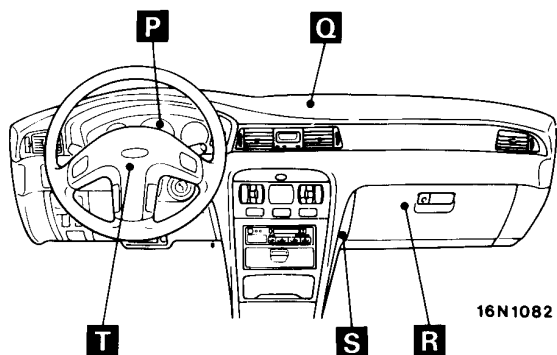




NOTE
For R.H. drive vehicles, part installation positions are symmetrical.

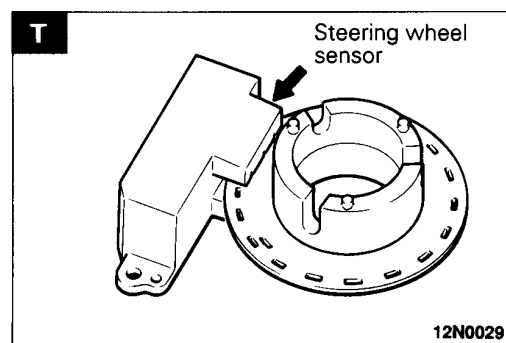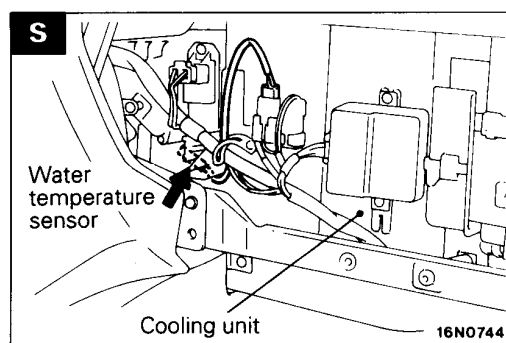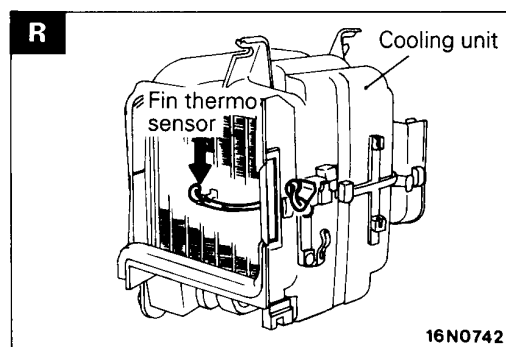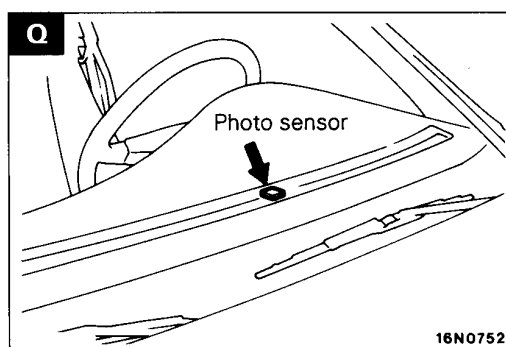





Roof and front seat

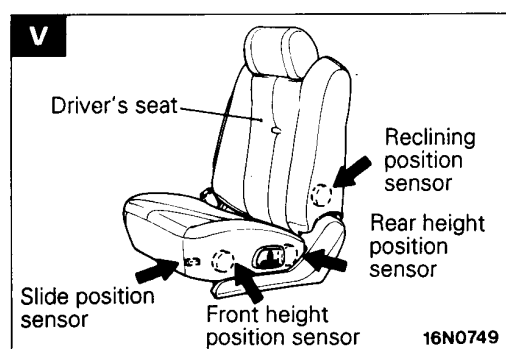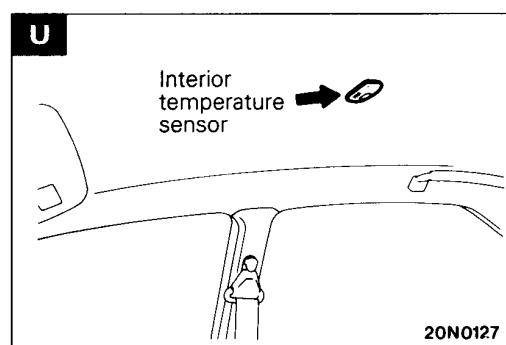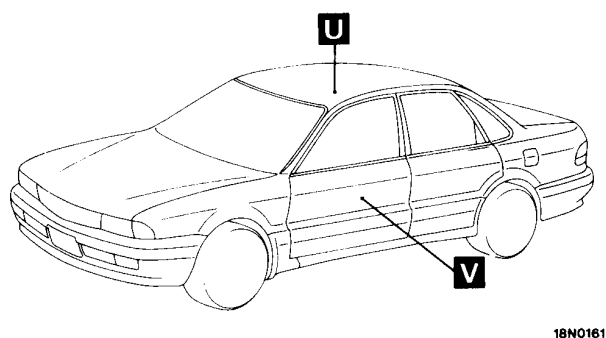




Rear shelf/Luggage compartment

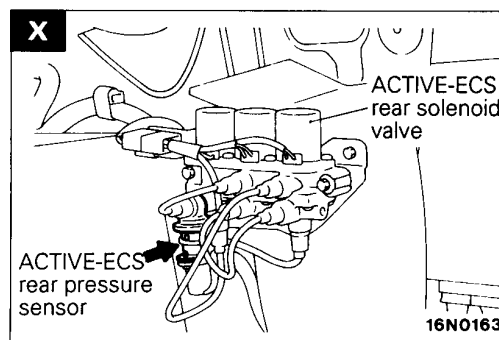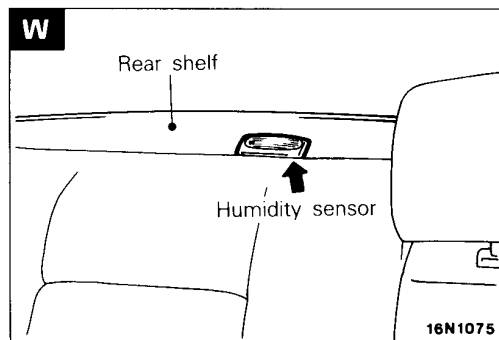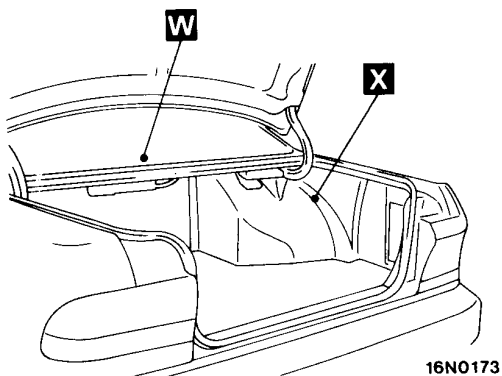




Under front floor

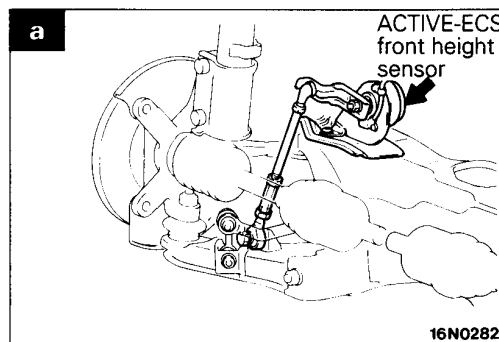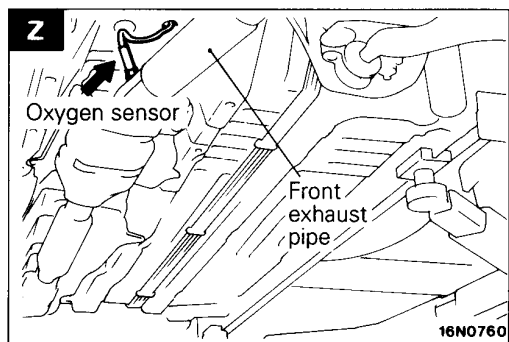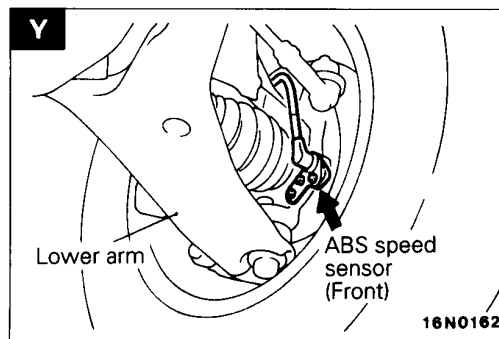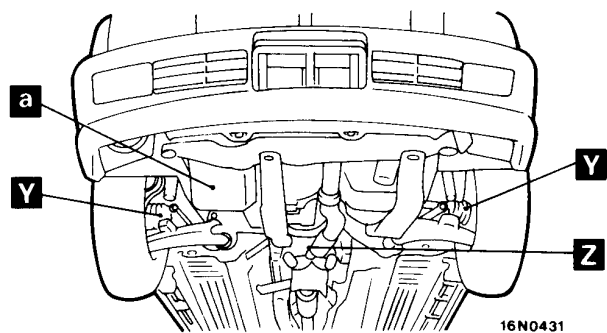

Under rear floor

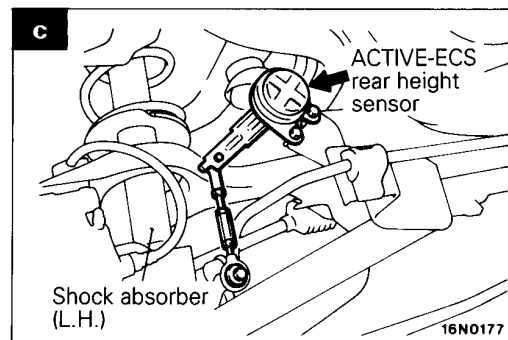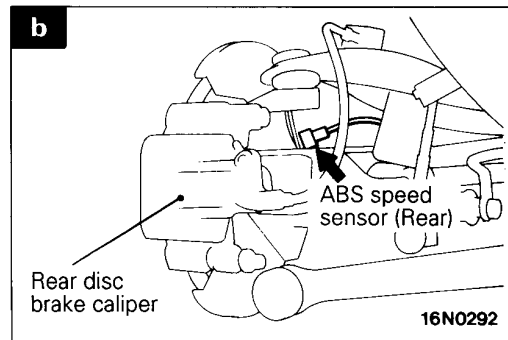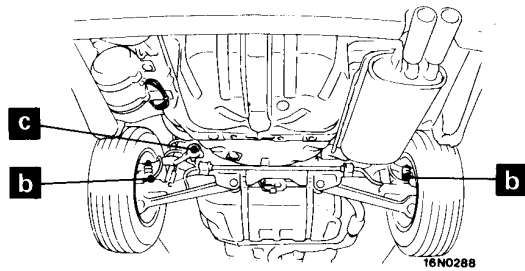







Under front floor



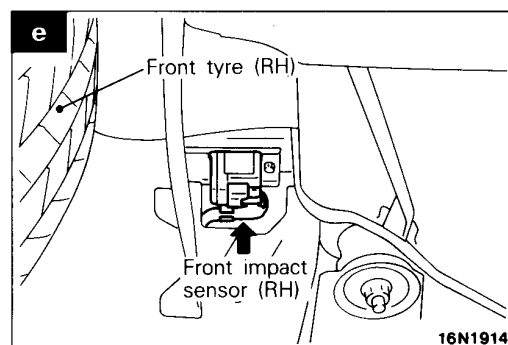
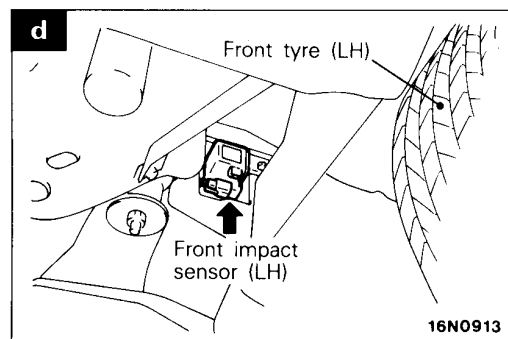
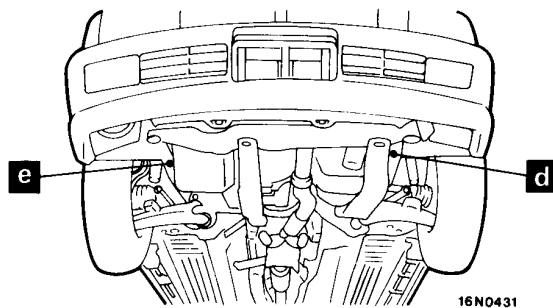


SOLENOID VALVE



Name		Symbol	Name	Symbol
ABS solenoid valve		H	EGR solenoid valve	F
ACTIVE-ECS exhaust solenoid valve (for vehicle-height adjustment)		E	ELC-4A/T control solenoid valve • Damper clutch control solenoid valve • Oil pressure control solenoid valve • Shift control solenoid valve A, B	B
ACTIVE-ECS flow control solenoid valve		A		
ACTIVE-ECS front solenoid valve	L.H. drive vehicles	C	EPS solenoid valve	J
	R.H. drive vehicles	G	Purge control solenoid valve	F
ACTIVE-ECS rear solenoid valve		I	TCL solenoid valve	H
Auto-cruise control solenoid valve		D	TCL vacuum solenoid valve	F
Auto-cruise release solenoid valve		D	TCL ventilation solenoid valve	F

Engine compartment

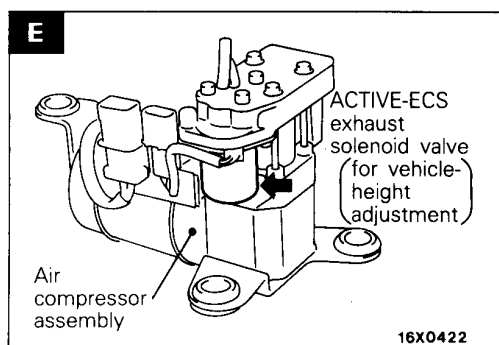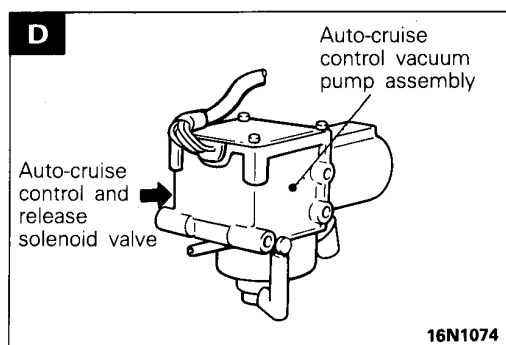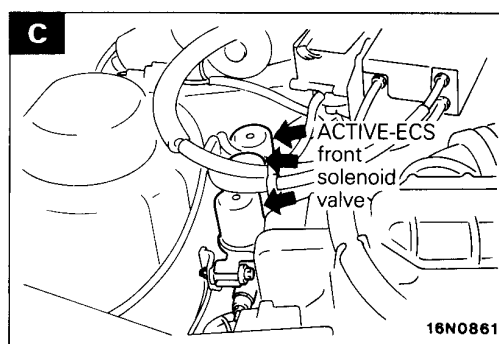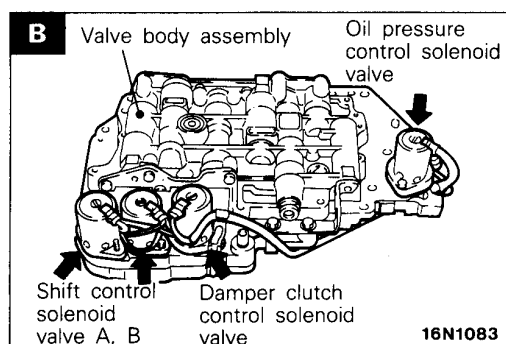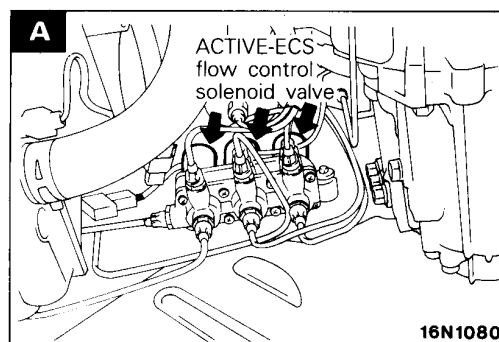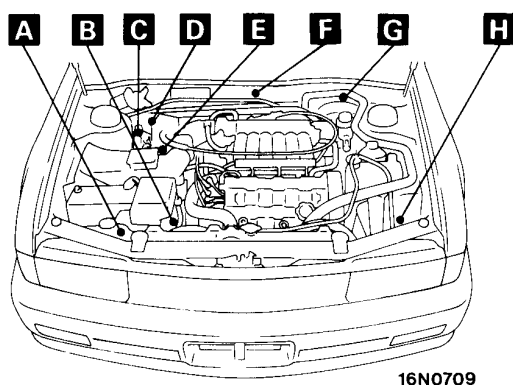

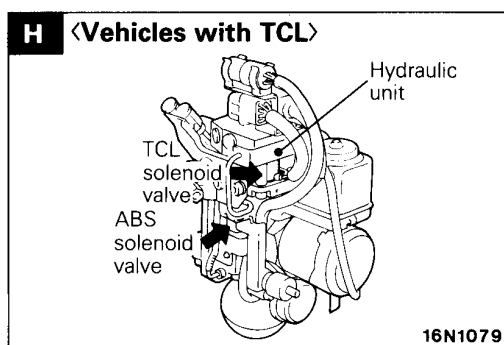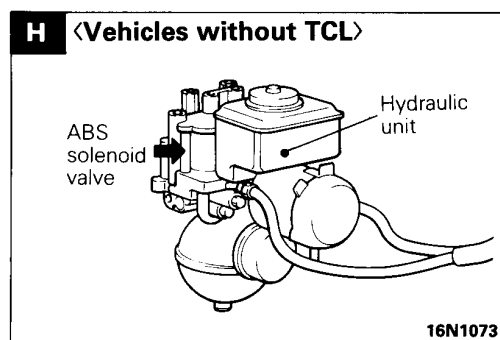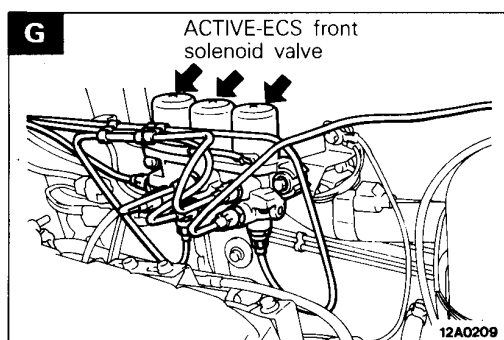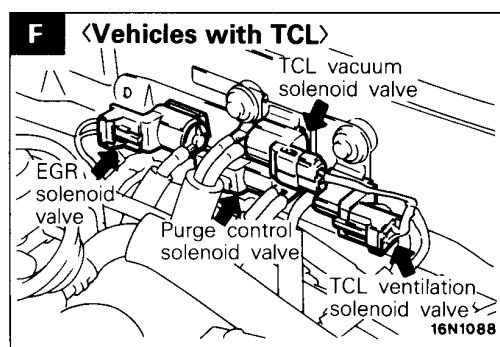
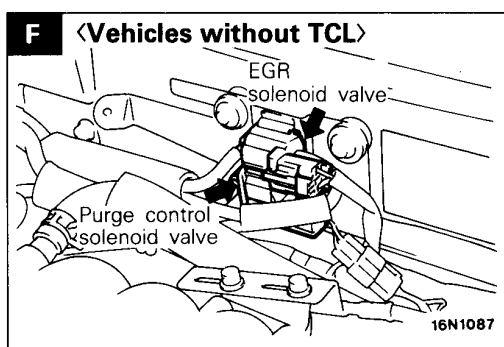


Luggage compartment

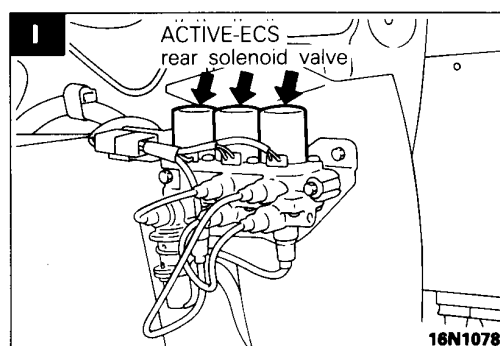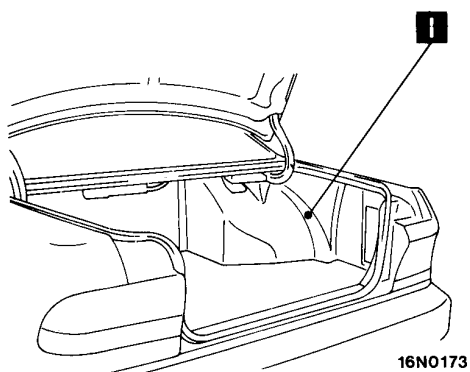

3-22 SINGLE PART INSTALLATION POSITION — Solenoid valve/Diode

Under front floor

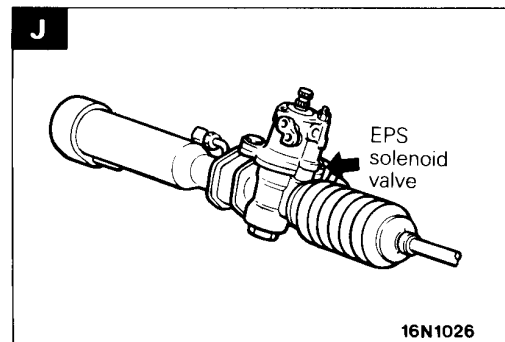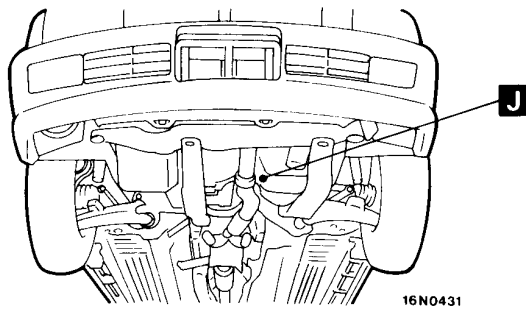

DIODE





L.H. drive vehicles

Name	Symbol	Name	Symbol
Diode (for ABS circuit)	A	Diode (for headlamp circuit)	A
Diode (for ACTIVE-ECS circuit)	A	Diode (for idle-up circuit)	C
Diode (for ACTIVE-ECS circuit)	C	Diode (for power seat circuit)	C
Diode (for central door locking circuit)*	C	Diode (for rear fog lamp circuit)	B
Diode (for cooling circuit)	B	Diode (for trunk room lamp and starting circuit)*	C
Diode (for 4WS fluid level warning lamp circuit)	C		

NOTE

*: Vehicles with theft-alarm system.

Interior

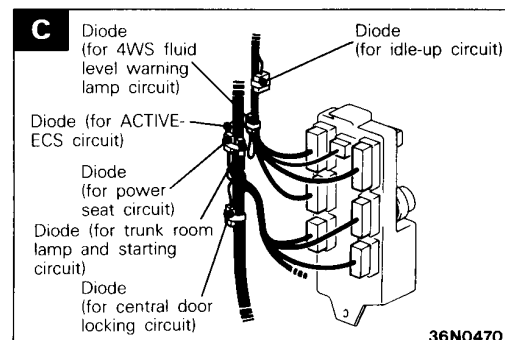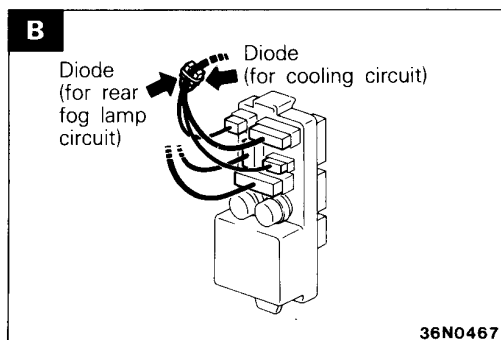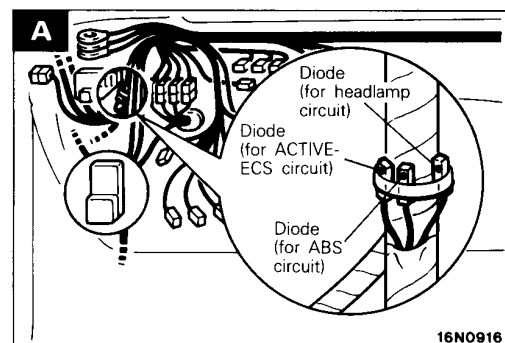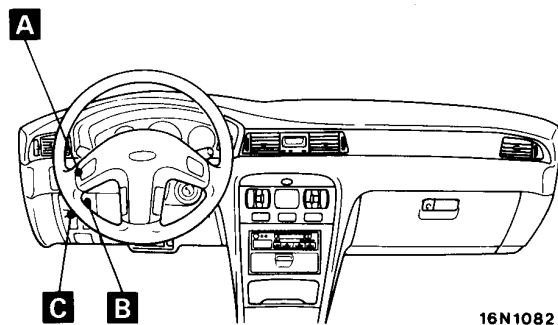


DIODE**R.H. drive vehicles**


Name	Symbol	Name	Symbol
Diode (for ABS circuit)	D	Diode (for idle-up circuit)	B
Diode (for ACTIVE-ECS circuit)	A	Diode (for power seat circuit)	A
Diode (for ACTIVE-ECS circuit)	B	Diode (for rear fog lamp circuit)	B
Diode (for central door locking circuit)*	A	Diode (for starting circuit)* <Vehicles built up to January 1993>	A
Diode (for cooling circuit)	C	Diode (for trunk room lamp circuit)* <Vehicles built up to January 1993>	B
Diode (for dim-dip lamp circuit)	B	Diode (for trunk room lamp, starting circuit)* <Vehicles built from February 1993>	B
Diode (for dim-dip lamp circuit)	C		
Diode (for 4WS fluid level warning lamp circuit)	C		

NOTE


*: Vehicles with theft-alarm system.

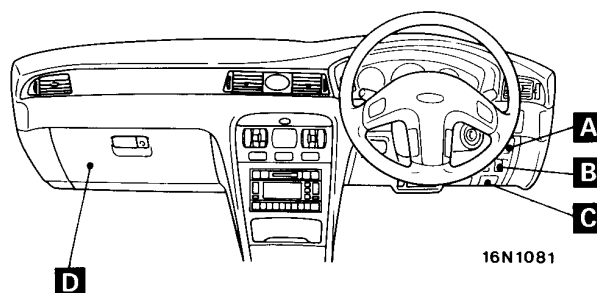Interior


< Vehicles built up to January 1993 >

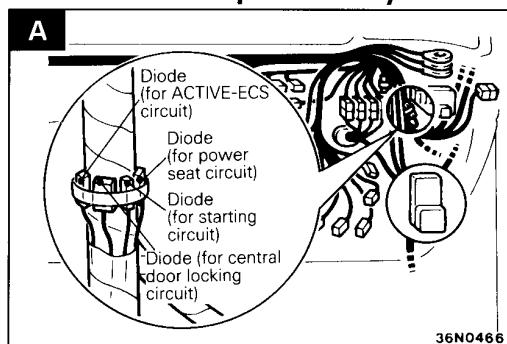


< Vehicles built from February 1993 >

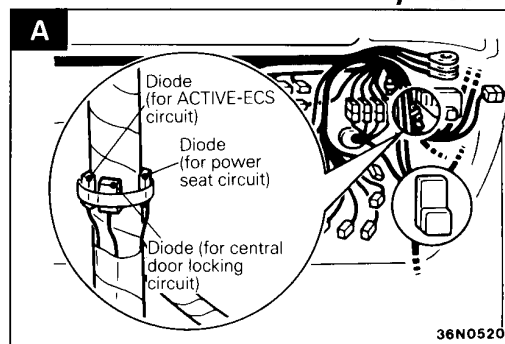


< Vehicles built up to January 1993 >

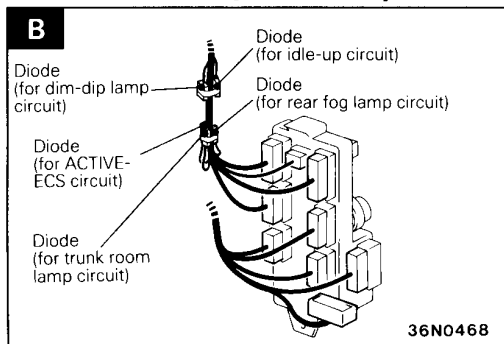



< Vehicles built from February 1993 >

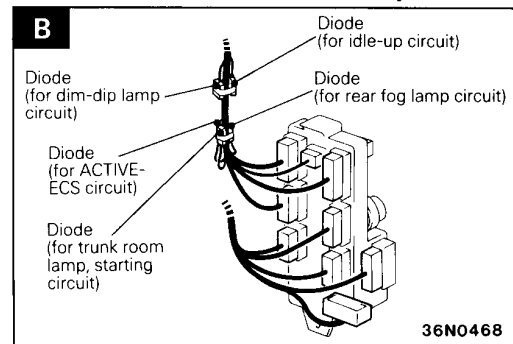

< Vehicles built up to January 1993 >

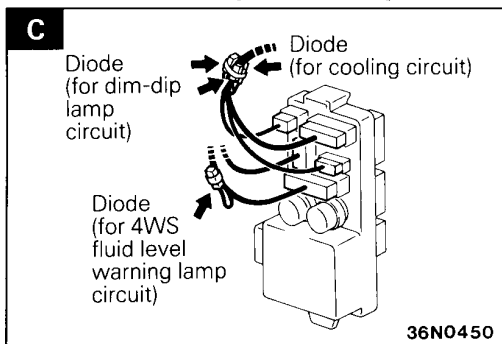

< Vehicles built from February 1993 >

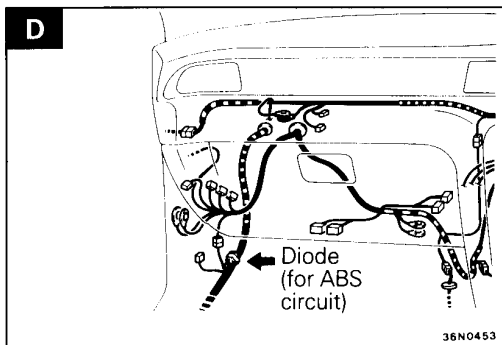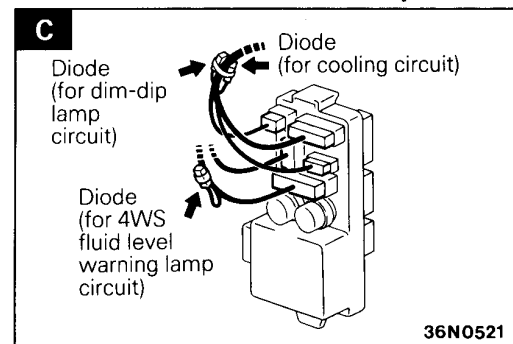


NOTES

3-24 SINGLE PART INSTALLATION POSITION — Inspection Terminal and Spare Connector


INSPECTION TERMINAL AND SPARE CONNECTOR

Name	Symbol	Name	Symbol
ACC spare connector <R.H. drive vehicles>	B	Engine speed detection connector <DOHC>	A
Diagnosis connector	C	Fuel pump check connector	A
Diagnosis connector <TCL>	C	Ignition timing adjustment connector	A
Diagnosis code erasure connector <ABS>	E	Power seat inspection connector	D

Engine compartment

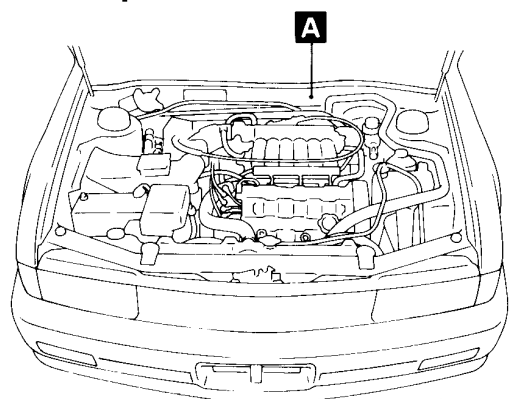


16N0709

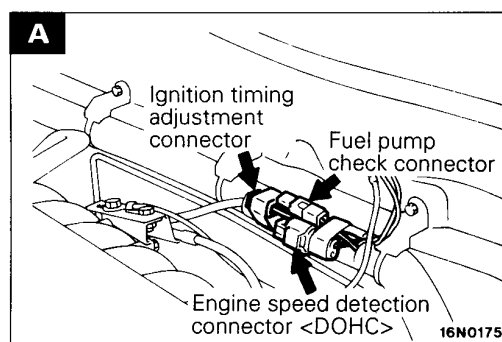


16N0175

Interior

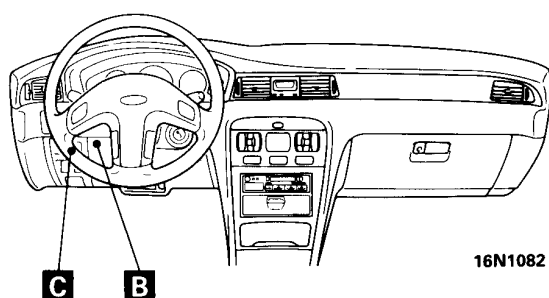


16N1082

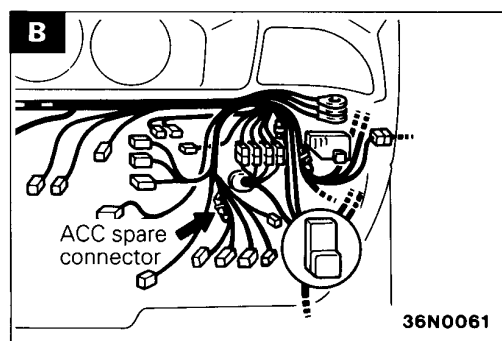


36N0061

NOTE
For R.H. drive vehicles, part installation positions are symmetrical.

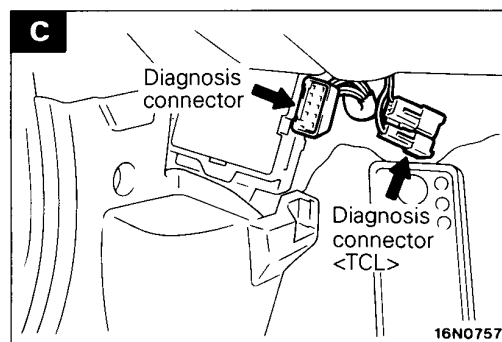


16N0757


Driver's seat

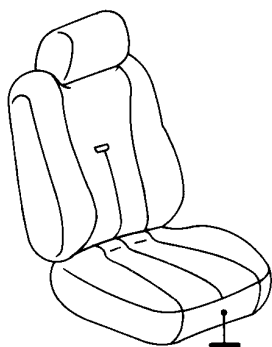


16N0770

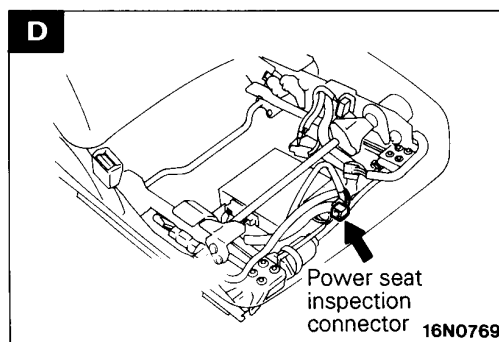

Luggage compartment

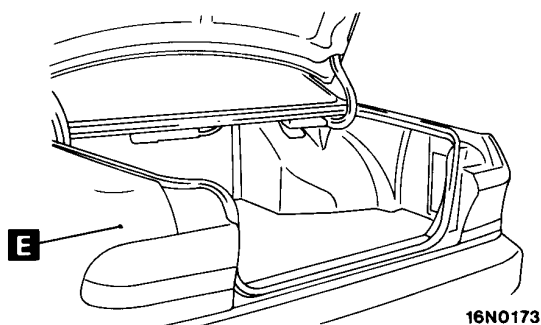

16N0173

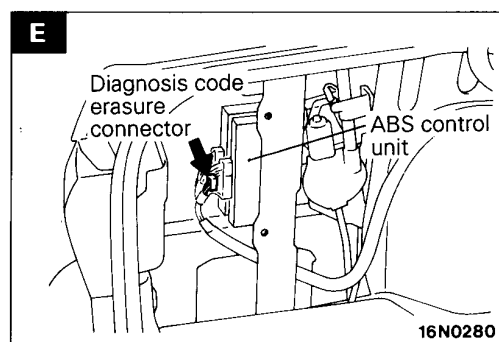




16N0280

3-26 SINGLE PART INSTALLATION POSITION — Fusible Link and Fuse


FUSIBLE LINK AND FUSE

Name	Symbol	Name	Symbol
Dedicated fuses	A, B	Multi-purpose fuses	C
Fusible links	A		



Engine compartment



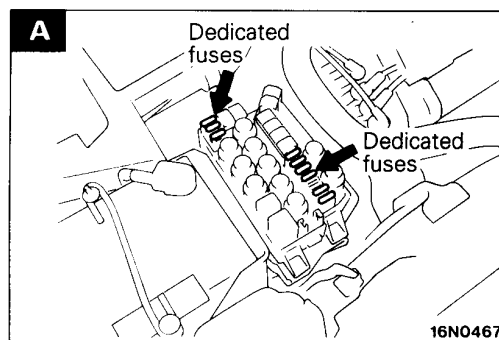
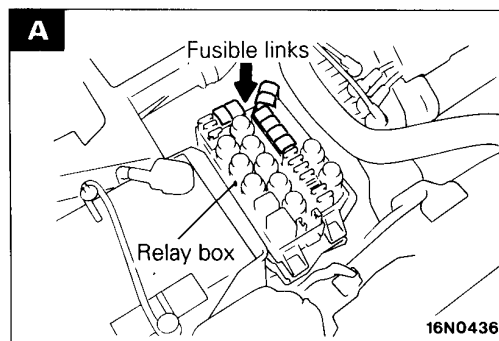
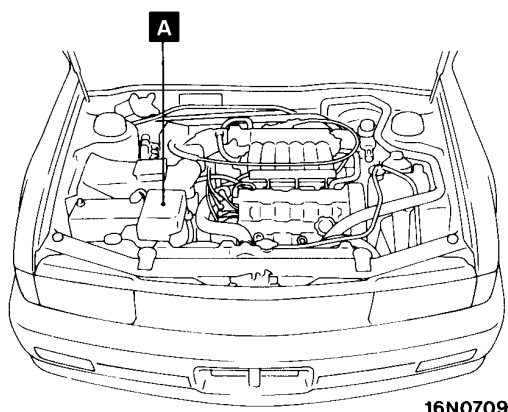


Interior

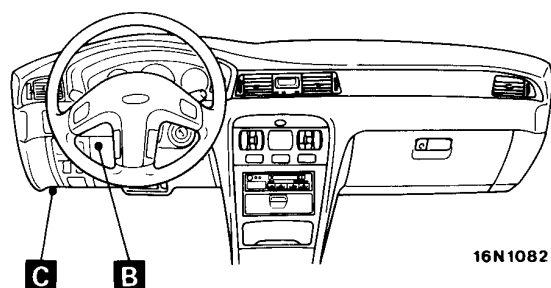


NOTE
For R.H. drive vehicles, part installation positions are symmetrical.

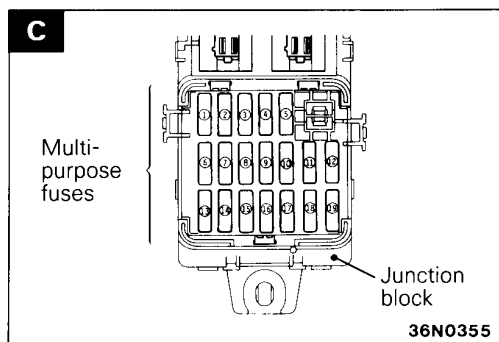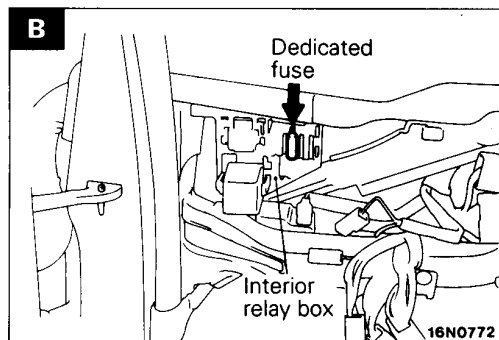

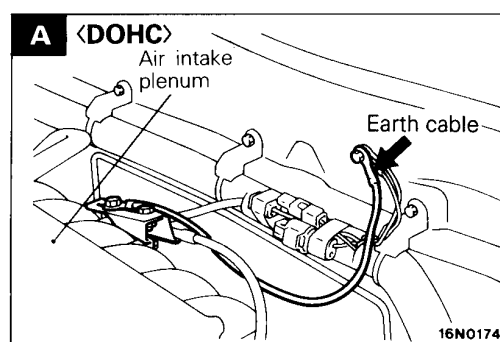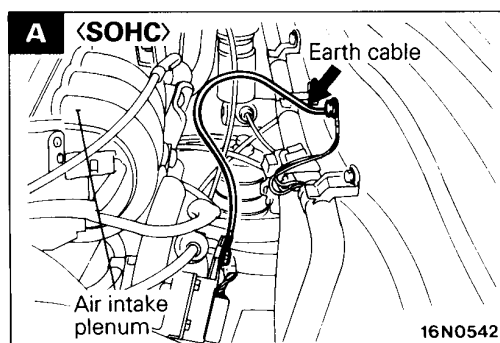
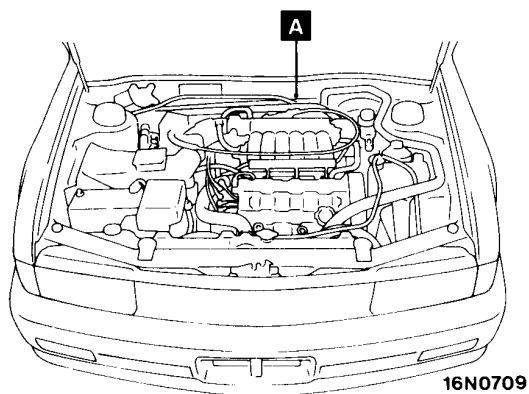
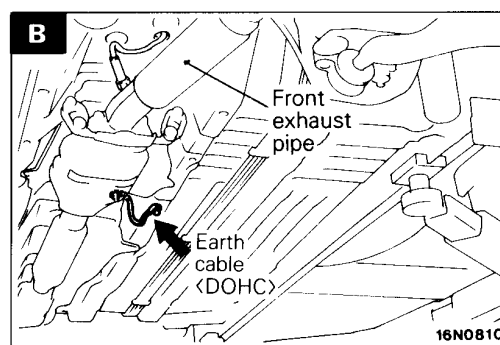
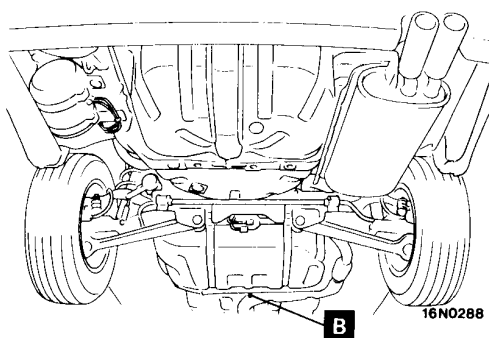
EARTH CABLE**Engine compartment****Under rear floor**










EARTH

L.H. drive vehicles

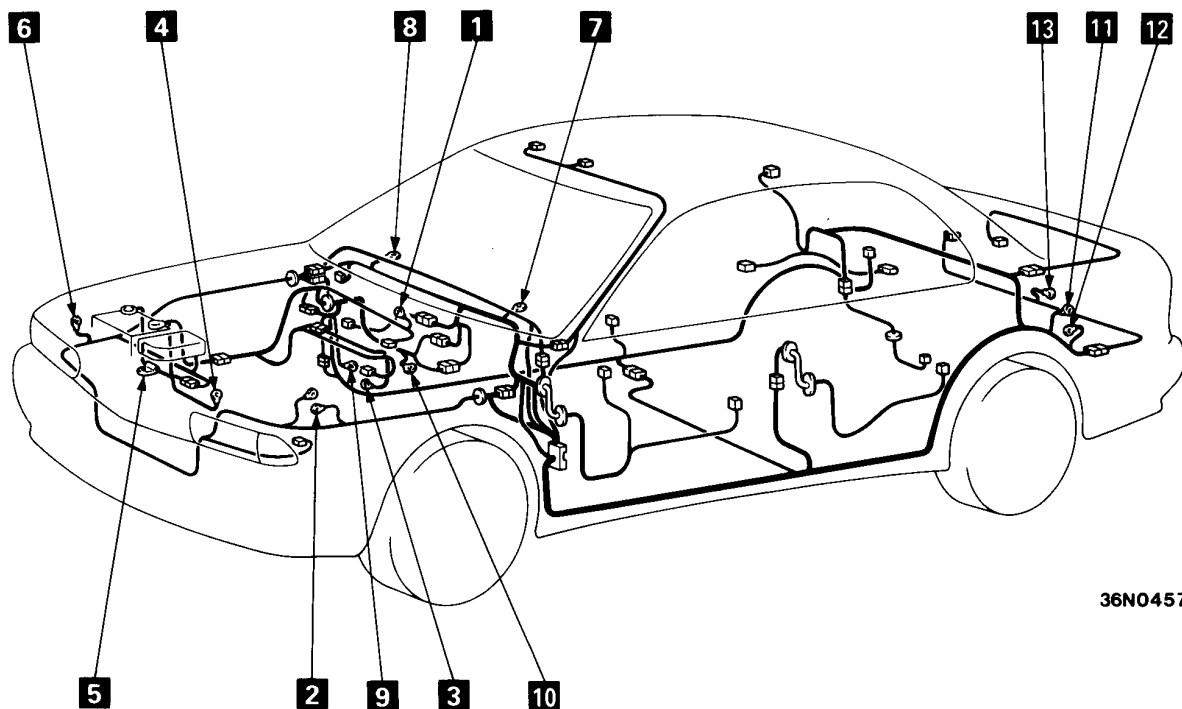


36N0457

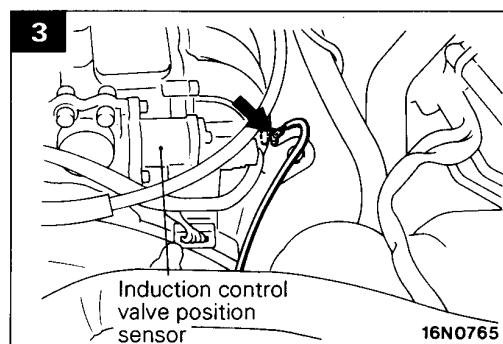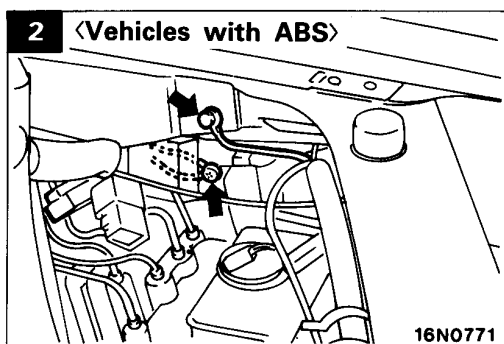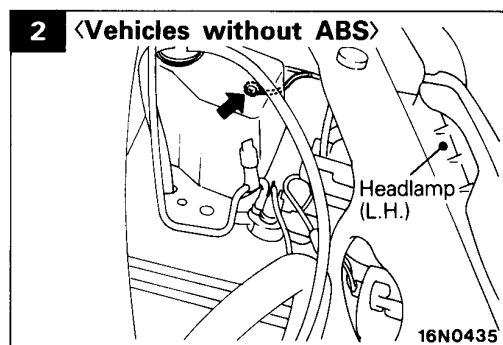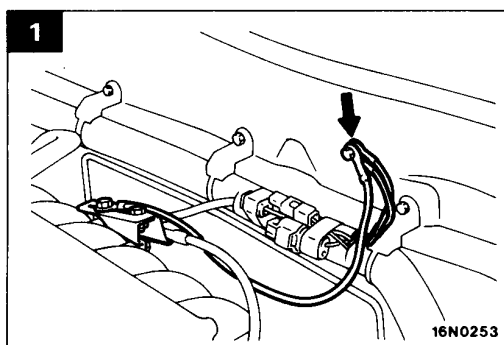

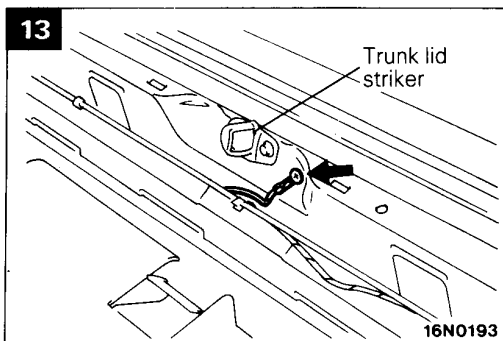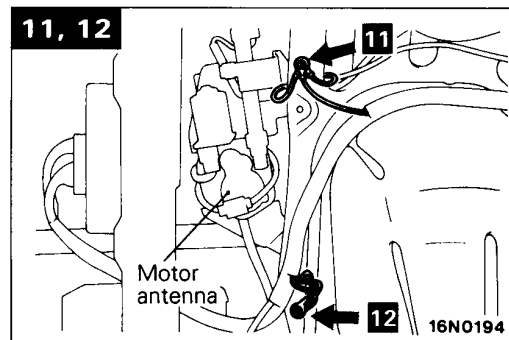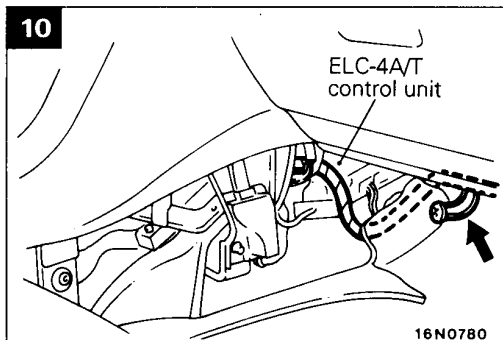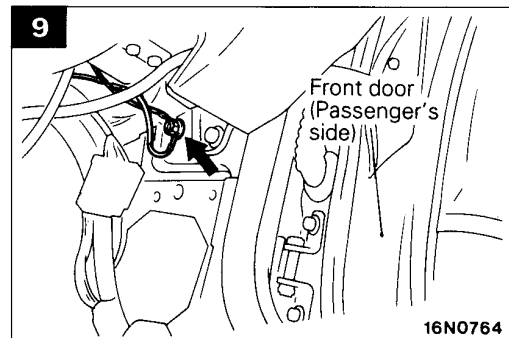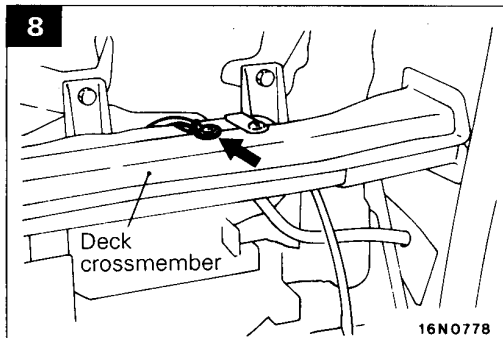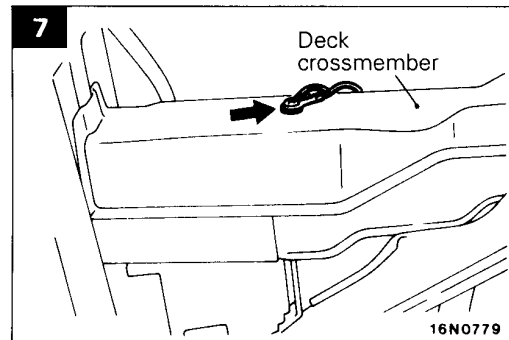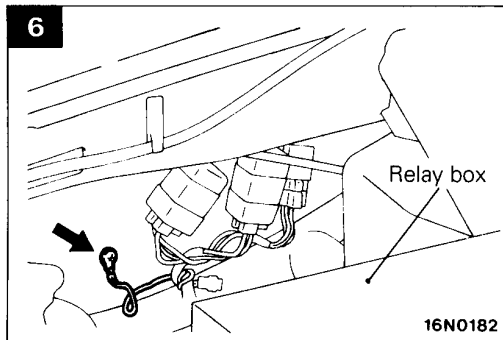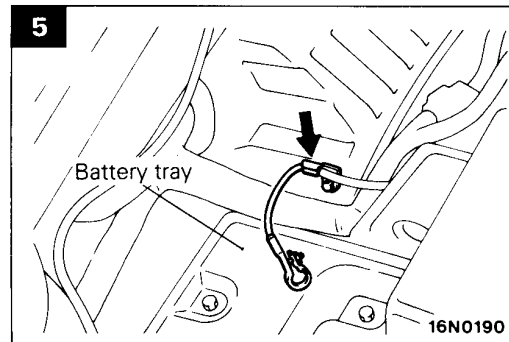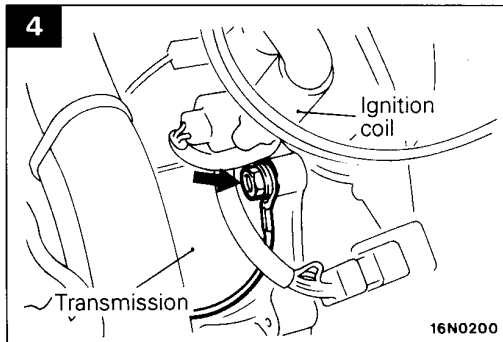

EARTH

R.H. drive vehicles

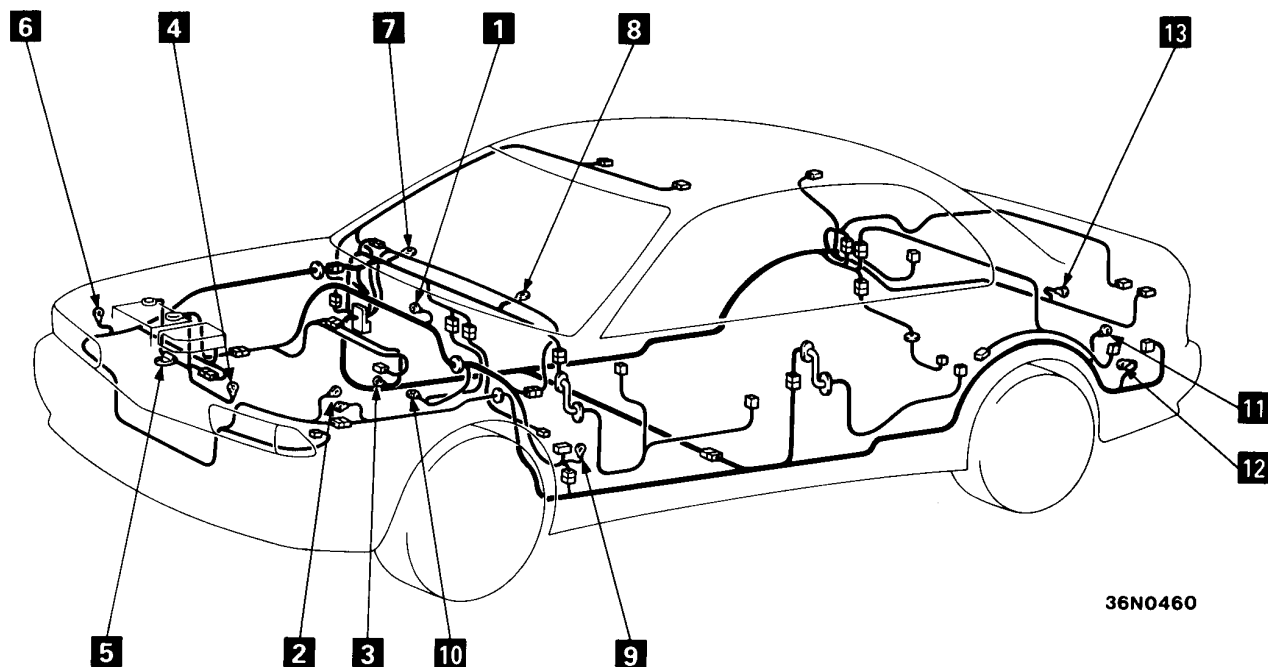

36N0460

