

MITSUBISHI SIGMA '93, '95

WORKSHOP MANUAL ELECTRICAL WIRING

FILING INSTRUCTION

Please keep these manual pages in the binder which is keeping the manual PHGE9229.

File these pages according to the signs "ADDED" and "REVISED" on the "List of effective pages" which are interpreted below.

ADDED: File the pages with this sign additionally in your manual.

REVISED: Replace the existing pages with the corresponding pages with this sign.

Missing sheets will be supplied upon request.

Group/ Page	Revision code	Date	Remarks	Group/ Page	Revision code	Date	Remarks
LIST OF EFFECTIVE PAGES				31 thru 41		Dec. 1992	
1	B	May 1994	REVISED	42	A	Oct. 1993	
2	B	May 1994	REVISED	43 thru 47		Dec. 1992	
FOREWORD				48	A	Oct. 1993	
		Dec. 1992		49		Dec. 1992	
HOW TO USE THIS MANUAL				50	A	Oct. 1993	
		Dec. 1992		51 thru 53		Dec. 1992	
1-HOW TO READ THE WIRING DIAGRAMS				54	A	Oct. 1993	
1	A	Oct. 1993		55 thru 59		Dec. 1992	
2	B	May 1994	REVISED	60	A	Oct. 1993	
3		Dec. 1992		61 thru 64		Dec. 1992	
4 thru 5	A	Oct. 1993		65	A	Oct. 1993	
6 thru 8		Dec. 1992		66 thru 71		Dec. 1992	
9 thru 10	A	Oct. 1993		72	A	Oct. 1993	
2-WIRING HARNESS CONFIGURATION DIAGRAMS				73 thru 78		Dec. 1992	
1	A	Oct. 1993		79	A	Oct. 1993	
2 thru 3		Dec. 1992		80 thru 85		Dec. 1992	
4 thru 13	B	May 1994	REVISED	86	A	Oct. 1993	
14 thru 17		Dec. 1992		87 thru 89		Dec. 1992	
18 thru 21	A	Oct. 1993		90	A	Oct. 1993	
21-1 thru 21-8	A	Oct. 1993		91 thru 92		Dec. 1992	
22 thru 26	A	Oct. 1993		93	A	Oct. 1993	
26-1 thru 26-2	A	Oct. 1993		94 thru 97		Dec. 1992	
27		Dec. 1992		98	A	Oct. 1993	
28 thru 29	B	May 1994	REVISED	99 thru 100		Dec. 1992	
29-1 thru 29-2	A	Oct. 1993		101	A	Oct. 1993	
29-3 thru 31	B	May 1994	REVISED	102 thru 107		Dec. 1992	
32 thru 37		Dec. 1992		108	A	Oct. 1993	
3-SINGLE PART INSTALLATION POSITION				109 thru 115		Dec. 1992	
1 thru 3		Dec. 1992		116	A	Oct. 1993	
4 thru 5	A	Oct. 1993		117 thru 123		Dec. 1992	
6 thru 9		Dec. 1992		124 thru 126	A	Oct. 1993	
10	A	Oct. 1993		127		Dec. 1992	
11 thru 14		Dec. 1992		128	A	Oct. 1993	
15 thru 16	A	Oct. 1993		129 thru 131		Dec. 1992	
17 thru 22		Dec. 1992		132	A	Oct. 1993	
23	A	Oct. 1993		133		Dec. 1992	
23-1 thru 23-2	A	Oct. 1993		134	A	Oct. 1993	
24 thru 31		Dec. 1992		135 thru 136	B	May 1994	REVISED
4-CIRCUIT DIAGRAM				137 thru 138		Dec. 1992	
1 thru 2	B	May 1994	REVISED	138-1 thru 138-4	B	May 1994	ADDED
3 thru 7		Dec. 1992		139 thru 140	B	May 1994	REVISED
8	A	Oct. 1993		141		Dec. 1992	
9 thru 16		Dec. 1992		141-1 thru 141-2	B	May 1994	ADDED
17	B	May 1994	REVISED	142 thru 143	A	Oct. 1993	
18 thru 22		Dec. 1992		143-1	B	May 1994	REVISED
23	B	May 1994	REVISED	143-2	A	Oct. 1993	
24	A	Oct. 1993		143-3 thru 143-4	B	May 1994	ADDED
24-1 thru 24-2	A	Oct. 1993		144	B	May 1994	REVISED
25 thru 26	A	Oct. 1993		145 thru 147		Dec. 1992	
26-1 thru 26-2	A	Oct. 1993		148	B	May 1994	REVISED
27 thru 28	A	Oct. 1993		149 thru 150		Dec. 1992	
29		Dec. 1992		150-1 thru 150-4	B	May 1994	ADDED
30	A	Oct. 1993		151 thru 152	B	May 1994	REVISED
				153 thru 154		Dec. 1992	
				154-1 thru 154-4	B	May 1994	ADDED
				155 thru 157		Dec. 1992	

LIST OF EFFECTIVE PAGES

2

Group/ Page	Revision code	Date	Remarks	Group/ Page	Revision code	Date	Remarks
158	A	Oct. 1993		383		Dec. 1992	
159 thru 163		Dec. 1992		384	A	Oct. 1993	
164	A	Oct. 1993		Wiring Diagram <L.H. drive vehicles>			
165		Dec. 1992		1 thru 5		Dec. 1992	
166	A	Oct. 1993		Wiring Diagram <R.H. drive vehicles>			
167 thru 171		Dec. 1992		7 thru 12		Dec. 1992	
171-1 thru 171-2	B	May 1994	ADDED				
172 thru 188		Dec. 1992					
189	A	Oct. 1993					
190 thru 196		Dec. 1992					
197	A	Oct. 1993					
198 thru 206		Dec. 1992					
207	A	Oct. 1993					
208 thru 221		Dec. 1992					
222	A	Oct. 1993					
223 thru 224		Dec. 1992					
225	A	Oct. 1993					
226 thru 227		Dec. 1992					
228	A	Oct. 1993					
229 thru 232		Dec. 1992					
233	A	Oct. 1993					
234		Dec. 1992					
235	A	Oct. 1993					
236 thru 241		Dec. 1992					
242	A	Oct. 1993					
243 thru 246		Dec. 1992					
247	A	Oct. 1993					
248		Dec. 1992					
249	A	Oct. 1993					
250 thru 257		Dec. 1992					
258	A	Oct. 1993					
259		Dec. 1992					
260	A	Oct. 1993					
261 thru 267		Dec. 1992					
268	A	Oct. 1993					
269 thru 274		Dec. 1992					
275	A	Oct. 1993					
276 thru 278		Dec. 1992					
279 thru 280	A	Oct. 1993					
281 thru 286		Dec. 1992					
287 thru 288	A	Oct. 1993					
289 thru 304		Dec. 1992					
305	A	Oct. 1993					
306		Dec. 1992					
307	A	Oct. 1993					
308 thru 350		Dec. 1992					
351	A	Oct. 1993					
352 thru 366		Dec. 1992					
367	A	Oct. 1993					
368 thru 369		Dec. 1992					
370	A	Oct. 1993					
371		Dec. 1992					
371-1 thru 371-2	A	Oct. 1993					
372 thru 377		Dec. 1992					
378	A	Oct. 1993					
379 thru 380		Dec. 1992					
381 thru 382	A	Oct. 1993					

RJAK405005-68
RJAK310007-190
RJCR211007-468

MITSUBISHI SIGMA

ELECTRICAL WIRING

FOREWORD

This Electrical Wiring Manual contains information necessary for inspection and servicing of electrical wiring in the Mitsubishi SIGMA edited in the form of wiring harness configuration diagrams and function-separated circuit diagrams.

It is recommended that all service mechanics engaged in the servicing of the vehicle refer to the following publications as well as this manual.

TECHNICAL INFORMATION MANUAL

PYGE9008

PYGE9101

WORKSHOP MANUAL

PWGE9004

(Loose-leaf edition)

WORKSHOP MANUAL

Engine Group

PWEE□□□□

(Loose-leaf edition)

PARTS CATALOGUE

B608A10□A□

All information, illustrations and product descriptions contained in this manual are current as of time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

GROUP INDEX

HOW TO READ THE
WIRING DIAGRAMS **1**

WIRING HARNESS
CONFIGURATION DIAGRAMS **2**

SINGLE PART INSTALLATION
POSITION **3**

CIRCUIT DIAGRAM **4**



HOW TO USE THIS MANUAL

CONTENTS

The preceding page contains GROUP INDEX which lists the group title and group number.

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page numbers can be found on the top left or right of each page.

OPERATION AND TROUBLESHOOTING HINTS

In the GROUP 4 circuit diagrams, the operation and troubleshooting hints are given on the previous page or following page for each circuit where necessary.