

2007 Cadillac Escalade

2007 GENERAL INFORMATION Maintenance and Lubrication - Avalanche, Escalade, Suburban, Tahoe & Yukon

2007 GENERAL INFORMATION

Maintenance and Lubrication - Avalanche, Escalade, Suburban, Tahoe & Yukon

SPECIFICATIONS

CAPACITIES - APPROXIMATE FLUID

See [Fluid and Lubricant Recommendations](#) for more information. All capacities are approximate. When adding, be sure to fill to the approximate level, as recommended in this manual. Recheck fluid level after filling.

Capacities - Approximate Fluid

Application	Capacities	
	Metric	English
Axle Capacities		
• Front Axle 1500 Series (8.25")	1.43 L	1.51 qt
• Front Axle 2500 Series (9.25")	1.73 L	1.83 qt
• Rear Axle (8.6")	2.03 L	2.15 qt
• LD/HD Axle	2.6 L	2.75 qt
Air Conditioning Refrigerant R134a		
• Refrigerant Charge	0.7 kg	1.6 lb
• Refrigerant Charge Utility with Front and Rear A/C	1.2 kg	2.7 lb
• Refrigerant Charge Suburban with Front and Rear A/C	1.4 kg	3.0 lb
Cooling System		
• 4.8L V8	16.9 L	17.8 qt
• 5.3L V8	17.3 L	18.3 qt
• 6.0L V8 1500 Series	16.9 L	17.9 qt
• 6.0L V8 2500 Series	16.5 L	17.4 qt
• Engine Oil with Filter	5.7 L	6.0 qt
• Engine Oil without Filter	5.2 L	5.5 qt
Fuel Tank		
• Regular	98.4 L	26.0 gal
• Extended 1500 Series	119.2 L	31.5 gal
• Extended 2500 Series	147.6 L	39.0 gal
• Transfer Case Fluid	1.9 L	2.0 qt
Transmission Fluid		
• 4L60-E/4L65-E/4L70-E Pan Removal	4.7 L	5 qt

2007 Cadillac Escalade

2007 GENERAL INFORMATION Maintenance and Lubrication - Avalanche, Escalade, Suburban, Tahoe & Yukon

• 4L60-E/4L65-E/4L70-E Overhaul	10.6 L	11 qt
• 4L80-E/4L85-E Pan Removal	7.3 L	7.7 qt
• 4L80-E/4L85-E Overhaul	12.8 L	13.5 qt
• 6L50/6L80/6L90 Pan Removal	5.7 L	6.0 qt
• 6L50/6L80/6L90 Overhaul	9.9 L	10.5 qt

FLUID AND LUBRICANT RECOMMENDATIONS

The Recommended Fluids and Lubricants information will be found in the Owner's Manual. Refer to the Maintenance Schedule subsection of the Owner's Manual.

You may be able to use the Search information function using the words Fluids or Lubricants.

MAINTENANCE ITEMS

The Normal Maintenance Replacement Parts information will be found in the Owner's Manual. Refer to the Maintenance Schedule subsection of the Owner's Manual.

You may be able to use the Search information function using the words Replacement Parts.

MAINTENANCE

MAINTENANCE SCHEDULE (NORTH AMERICAN EMISSIONS)

The Maintenance Schedule information will be found in the Owner's Manual.

Refer to the Maintenance Schedule subsection of the Owner's Manual, or you may be able to use the Search information function using the words Scheduled Maintenance.

GM OIL LIFE SYSTEM RESETTNG

When the system has calculated that oil life has been diminished, it will indicate that an oil change is necessary. A CHANGE ENGINE OIL SOON message will come on. Change the engine oil as soon as possible within the next 1 000 km (600 miles). It is possible that, if driving under the best conditions, the oil life system may not indicate that an oil change is necessary for over a year. However, the engine oil and filter must be changed at least once a year and at this time the system must be reset.

If the system is ever reset accidentally, change the engine oil at 5 000 km (3,000 miles) since last oil change.

How to Reset the Engine Oil Life System

To reset the Engine Oil Life System, do the following:

With DIC Buttons

2007 Cadillac Escalade

2007 GENERAL INFORMATION Maintenance and Lubrication - Avalanche, Escalade, Suburban, Tahoe & Yukon

1. Display the OIL LIFE REMAINING on the driver information center (DIC).
2. Press and hold the SET/RESET button on the DIC for more than 5 seconds. The oil life will change to 100 percent.

Without DIC Buttons

1. Place the transmission shift lever in Park.
2. Display the OIL LIFE REMAINING on the DIC by pressing the trip odometer reset stem.
3. Press and hold the trip odometer reset stem for more than 5 seconds. The oil life will change to 100 percent.

If the CHANGE ENGINE OIL SOON message comes back on when you start the vehicle, the Engine Oil Life System has not reset. Repeat the procedure.