

1 Fitting locations: middle part of vehicle

- ◆ ⇒ [“1.1 At front of interior”, page 10](#)
- ◆ ⇒ [“1.2 At rear of interior”, page 26](#)
- ◆ ⇒ [“1.3 Roof”, page 29](#)
- ◆ ⇒ [“1.4 Doors”, page 32](#)
- ◆ ⇒ [“1.5 Heater and air conditioning unit”, page 40](#)

Component	Chapter	Comment
Ignition/starter switch -D-	⇒ “1.1.10 Steering column”, page 22	
Immobiliser reader coil -D2-	⇒ “1.1.10 Steering column”, page 22	
Light switch -E1-	⇒ “1.1.3 Left footwell, LHD models”, page 15	
Light switch -E1-	⇒ “1.1.4 Right footwell, RHD models”, page 16	
Driver side belt switch -E24-	⇒ “1.1.13 Left front seat”, page 25	For left-hand drive models
Driver side belt switch -E24-	⇒ “1.1.14 Right front seat”, page 26	For right-hand drive models
Front passenger side belt switch -E25-	⇒ “1.1.13 Left front seat”, page 25	For right-hand drive models
Front passenger side belt switch -E25-	⇒ “1.1.14 Right front seat”, page 26	For left-hand drive models
Glove compartment light switch -E26-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
Glove compartment light switch -E26-	⇒ “1.1.5 Front right of interior, LHD models”, page 17	
Driver side volume regulator -E67-	⇒ “1.1.11 Front centre console, LHD models”, page 23	
Driver side volume regulator -E67-	⇒ “1.1.12 Front centre console, RHD models”, page 24	
Key operated switch to deactivate front passenger side airbag -E224-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
Key operated switch to deactivate front passenger side airbag -E224-	⇒ “1.1.5 Front right of interior, LHD models”, page 17	
Driver's side rear belt switch -E258-	⇒ “1.2.1 Rear interior, view from left”, page 27	For right-hand drive models
Passenger side rear belt switch -E259-	⇒ “1.2.1 Rear interior, view from left”, page 27	For left-hand drive models
Driver side interior locking button for central locking system -E308-	⇒ “1.4.1 Driver door, left-hand drive models”, page 33	
Driver side interior locking button for central locking system -E308-	⇒ “1.4.2 Driver door, right-hand drive models”, page 35	
Selector lever -E313-	⇒ “1.1.11 Front centre console, LHD models”, page 23	
Selector lever -E313-	⇒ “1.1.12 Front centre console, RHD models”, page 24	
Entry and start authorisation button -E408-	⇒ “1.1.11 Front centre console, LHD models”, page 23	
Entry and start authorisation button -E408-	⇒ “1.1.12 Front centre console, RHD models”, page 24	

Component	Chapter	Comment
Multifunction buttons on left in steering wheel -E440-	⇒ "1.1.9 Steering wheel", page 21	
Tiptronic switch to shift up -E479-	⇒ "1.1.9 Steering wheel", page 21	
Tiptronic switch to shift down -E480-	⇒ "1.1.9 Steering wheel", page 21	
Rear driver side window regulator button -E711-	⇒ "1.4.5 Rear left door", page 38	For left-hand drive models
Rear driver side window regulator button -E711-	⇒ "1.4.6 Rear right door", page 39	For right-hand drive models
Rear passenger side window regulator button -E713-	⇒ "1.4.5 Rear left door", page 38	For right-hand drive models
Rear passenger side window regulator button -E713-	⇒ "1.4.6 Rear right door", page 39	For left-hand drive models
Operating unit 1 for driving and comfort functions -E791-	⇒ "1.1.7 Dash panel, LHD models", page 19	
Operating unit 1 for driving and comfort functions -E791-	⇒ "1.1.8 Dash panel, RHD models", page 20	
Interior mirror -EX5-	⇒ "1.3.1 Roof, part 1", page 29	
Exterior mirror adjuster -EX11-	⇒ "1.4.1 Driver door, left-hand drive models", page 33	
Exterior mirror adjuster -EX11-	⇒ "1.4.2 Driver door, right-hand drive models", page 35	
Heater and air conditioning controls -EX21-	⇒ "1.1.7 Dash panel, LHD models", page 19	
Heater and air conditioning controls -EX21-	⇒ "1.1.8 Dash panel, RHD models", page 20	
Window regulator switch in front passenger door -EX27-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 36	
Window regulator switch in front passenger door -EX27-	⇒ "1.4.4 Front passenger door, right-hand drive models", page 37	
Operating unit for driver door window regulator -EX36-	⇒ "1.4.1 Driver door, left-hand drive models", page 33	
Operating unit for driver door window regulator -EX36-	⇒ "1.4.2 Driver door, right-hand drive models", page 35	
Handbrake warning switch -F9-	⇒ "1.1.11 Front centre console, LHD models", page 23	
Handbrake warning switch -F9-	⇒ "1.1.12 Front centre console, RHD models", page 24	
Driver side vanity mirror contact switch -F147-	⇒ "1.3.1 Roof, part 1", page 29	For left-hand drive models
Driver side vanity mirror contact switch -F147-	⇒ "1.3.1 Roof, part 1", page 29	For right-hand drive models
Front passenger side vanity mirror contact switch -F148-	⇒ "1.3.1 Roof, part 1", page 29	For right-hand drive models
Front passenger side vanity mirror contact switch -F148-	⇒ "1.3.1 Roof, part 1", page 29	For left-hand drive models
Coil connector -F350-	⇒ "1.1.9 Steering wheel", page 21	
Twin belt buckle -FX4-	⇒ "1.2.1 Rear interior, view from left", page 27	
Rear right speed sensor -G44-	⇒ "1.2.2 Rear interior, view from right", page 28	
Rear left speed sensor -G46-	⇒ "1.2.1 Rear interior, view from left", page 27	
Seat occupied sensor, front passenger side -G128-	⇒ "1.1.13 Left front seat", page 25	For right-hand drive models
Seat occupied sensor, front passenger side -G128-	⇒ "1.1.14 Right front seat", page 26	For left-hand drive models
Left vent temperature sender -G150-	⇒ "1.1.2 Front left of interior, RHD models", page 13	

Component	Chapter	Comment
Left vent temperature sender -G150-	⇒ "1.1.3 Left footwell, LHD models", page 15	
Right vent temperature sender -G151-	⇒ "1.1.4 Right footwell, RHD models", page 16	
Right vent temperature sender -G151-	⇒ "1.1.5 Front right of interior, LHD models", page 17	
Rear seat occupied sensor, driver side -G177-	⇒ "1.2.1 Rear interior, view from left", page 27	For left-hand drive models
Rear seat occupied sensor, driver side -G177-	⇒ "1.2.1 Rear interior, view from left", page 27	For right-hand drive models
Rear seat occupied sensor, passenger side -G178-	⇒ "1.2.1 Rear interior, view from left", page 27	For right-hand drive models
Rear seat occupied sensor, passenger side -G178-	⇒ "1.2.1 Rear interior, view from left", page 27	For left-hand drive models
Side airbag crash sensor on driver side -G179-	⇒ "1.4.1 Driver door, left-hand drive models", page 33	
Side airbag crash sensor on driver side -G179-	⇒ "1.4.2 Driver door, right-hand drive models", page 35	
Side airbag crash sensor on front passenger side -G180-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 36	
Side airbag crash sensor on front passenger side -G180-	⇒ "1.4.4 Front passenger door, right-hand drive models", page 37	
Footwell vent temperature sender -G192-	⇒ "1.5.2 Air conditioning system, KH6, part 2", page 42	For models with air conditioning system
Footwell vent temperature sender -G192-	⇒ "1.5.4 Climatronic, 9AK, part 2", page 44	For models with Climatronic
Rear side airbag crash sensor on driver side -G256-	⇒ "1.2.1 Rear interior, view from left", page 27	For right-hand drive models
Rear side airbag crash sensor on driver side -G256-	⇒ "1.2.2 Rear interior, view from right", page 28	For left-hand drive models
Rear side airbag crash sensor on front passenger side -G257-	⇒ "1.2.1 Rear interior, view from left", page 27	For left-hand drive models
Rear side airbag crash sensor on front passenger side -G257-	⇒ "1.2.2 Rear interior, view from right", page 28	For right-hand drive models
Evaporator output temperature sender -G263-	⇒ "1.5.1 Air conditioning system, KH6, part 1", page 40	For models with air conditioning system
Evaporator output temperature sender -G263-	⇒ "1.5.3 Climatronic, 9AK, part 1", page 43	For models with Climatronic
Rain and light sensor -G397-	⇒ "1.3.1 Roof, part 1", page 29	
Driver door exterior handle contact sensor -G415-	⇒ "1.4.1 Driver door, left-hand drive models", page 33	
Driver door exterior handle contact sensor -G415-	⇒ "1.4.2 Driver door, right-hand drive models", page 35	
Front passenger door exterior handle contact sensor -G416-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 36	
Front passenger door exterior handle contact sensor -G416-	⇒ "1.4.4 Front passenger door, right-hand drive models", page 37	
Anti-theft alarm sensor -G578-	⇒ "1.3.1 Roof, part 1", page 29	
Rear centre seat occupied sensor -G1010-	⇒ "1.2.1 Rear interior, view from left", page 27	
Fuel delivery unit -GX1-	⇒ "1.2.2 Rear interior, view from right", page 28	
Accelerator pedal module -GX2-	⇒ "1.1.3 Left footwell, LHD models", page 15	
Accelerator pedal module -GX2-	⇒ "1.1.4 Right footwell, RHD models", page 16	

Component	Chapter	Comment
Horn plate -H-	⇒ “1.1.9 Steering wheel”, page 21	
Fresh air blower control unit -J126-	⇒ “1.5.1 Air conditioning system, KH6, part 1”, page 40	For models with air conditioning system
Fresh air blower control unit -J126-	⇒ “1.5.3 Climatronic, 9AK, part 1”, page 43	For models with Climatronic
Airbag control unit -J234-	⇒ “1.1.11 Front centre console, LHD models”, page 23	
Airbag control unit -J234-	⇒ “1.1.12 Front centre console, RHD models”, page 24	
Control unit in dash panel insert -J285-	⇒ “1.1.7 Dash panel, LHD models”, page 19	
Control unit in dash panel insert -J285-	⇒ “1.1.8 Dash panel, RHD models”, page 20	
Driver door control unit -J386-	⇒ “1.4.1 Driver door, left-hand drive models”, page 33	
Driver door control unit -J386-	⇒ “1.4.2 Driver door, right-hand drive models”, page 35	
Front passenger door control unit -J387-	⇒ “1.4.3 Front passenger door, left-hand drive models”, page 36	
Front passenger door control unit -J387-	⇒ “1.4.4 Front passenger door, right-hand drive models”, page 37	
Parking aid control unit -J446-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
Parking aid control unit -J446-	⇒ “1.1.3 Left footwell, LHD models”, page 15	
Multifunction steering wheel control unit -J453-	⇒ “1.1.9 Steering wheel”, page 21	
Power steering control unit -J500-	⇒ “1.1.3 Left footwell, LHD models”, page 15	
Power steering control unit -J500-	⇒ “1.1.4 Right footwell, RHD models”, page 16	
Entry and start authorisation control unit -J518-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
Entry and start authorisation control unit -J518-	⇒ “1.1.5 Front right of interior, LHD models”, page 17	
Onboard supply control unit -J519-	⇒ “1.1.3 Left footwell, LHD models”, page 15	
Onboard supply control unit -J519-	⇒ “1.1.4 Right footwell, RHD models”, page 16	
Digital sound package control unit -J525-	⇒ “1.1.1 Front left of interior, LHD models”, page 11	
Digital sound package control unit -J525-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
Steering column electronics control unit -J527-	⇒ “1.1.10 Steering column”, page 22	
Data bus diagnostic interface -J533-	⇒ “1.1.3 Left footwell, LHD models”, page 15	
Data bus diagnostic interface -J533-	⇒ “1.1.4 Right footwell, RHD models”, page 16	
Fuel pump control unit -J538-	⇒ “1.2.2 Rear interior, view from right”, page 28	
Chip card reader control unit -J676-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
Display unit for front information display and operating unit control unit -J685-	⇒ “1.1.7 Dash panel, LHD models”, page 19	
Display unit for front information display and operating unit control unit -J685-	⇒ “1.1.8 Dash panel, RHD models”, page 20	

Component	Chapter	Comment
Control unit for cornering light and headlight range control -J745-	⇒ "1.1.3 Left footwell, LHD models", page 15	
Control unit for cornering light and headlight range control -J745-	⇒ "1.1.4 Right footwell, RHD models", page 16	
Control unit 1 for information electronics -J794-	⇒ "1.1.2 Front left of interior, RHD models", page 13	
Control unit 1 for information electronics -J794-	⇒ "1.1.5 Front right of interior, LHD models", page 17	
Emergency call module control unit and communication unit -J949-	⇒ "1.1.7 Dash panel, LHD models", page 19	
Emergency call module control unit and communication unit -J949-	⇒ "1.1.8 Dash panel, RHD models", page 20	
Control unit with rear driver side window regulator motor -J1016-	⇒ "1.4.5 Rear left door", page 38	For left-hand drive models
Control unit with rear driver side window regulator motor -J1016-	⇒ "1.4.6 Rear right door", page 39	For right-hand drive models
Control unit with rear passenger side window regulator motor -J1017-	⇒ "1.4.5 Rear left door", page 38	For right-hand drive models
Control unit with rear passenger side window regulator motor -J1017-	⇒ "1.4.6 Rear right door", page 39	For left-hand drive models
Charger 1 for mobile devices -J1146-	⇒ "1.1.11 Front centre console, LHD models", page 23	
Charger 1 for mobile devices -J1146-	⇒ "1.1.12 Front centre console, RHD models", page 24	
Central locking SAFELOCK function warning lamp -K133-	⇒ "1.4.1 Driver door, left-hand drive models", page 33	
Central locking SAFELOCK function warning lamp -K133-	⇒ "1.4.2 Driver door, right-hand drive models", page 35	
Storage compartment illumination bulb -L120-	⇒ "1.1.11 Front centre console, LHD models", page 23	
Storage compartment illumination bulb -L120-	⇒ "1.1.12 Front centre console, RHD models", page 24	
Light 1 for rear left door ambient lighting -L201-	⇒ "1.4.5 Rear left door", page 38	
Light 1 for rear right door ambient lighting -L202-	⇒ "1.4.6 Rear right door", page 39	
Light for driver side interior door handle illumination -L219-	⇒ "1.4.1 Driver door, left-hand drive models", page 33	
Light for driver side interior door handle illumination -L219-	⇒ "1.4.2 Driver door, right-hand drive models", page 35	
Light for front passenger side interior door handle illumination -L220-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 36	
Light for front passenger side interior door handle illumination -L220-	⇒ "1.4.4 Front passenger door, right-hand drive models", page 37	
Light 1 for dashboard ambient lighting -L292-	⇒ "1.1.3 Left footwell, LHD models", page 15	
Light 1 for dashboard ambient lighting -L292-	⇒ "1.1.4 Right footwell, RHD models", page 16	
Light 2 for dashboard ambient lighting -L293-	⇒ "1.1.7 Dash panel, LHD models", page 19	

Component	Chapter	Comment
Light 2 for dashboard ambient lighting -L293-	⇒ “1.1.8 Dash panel, RHD models”, page 20	
Driver side airbag igniter -N95-	⇒ “1.1.9 Steering wheel”, page 21	
Front passenger side airbag igniter 1 -N131-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
Front passenger side airbag igniter 1 -N131-	⇒ “1.1.5 Front right of interior, LHD models”, page 17	
Rear belt tensioner igniter on driver side -N196-	⇒ “1.2.1 Rear interior, view from left”, page 27	For right-hand drive models
Rear belt tensioner igniter on driver side -N196-	⇒ “1.2.2 Rear interior, view from right”, page 28	For left-hand drive models
Rear belt tensioner igniter on front passenger side -N197-	⇒ “1.2.1 Rear interior, view from left”, page 27	For left-hand drive models
Rear belt tensioner igniter on front passenger side -N197-	⇒ “1.2.2 Rear interior, view from right”, page 28	For right-hand drive models
Side airbag igniter on driver side -N199-	⇒ “1.1.13 Left front seat”, page 25	For left-hand drive models
Side airbag igniter on driver side -N199-	⇒ “1.1.14 Right front seat”, page 26	For right-hand drive models
Side airbag igniter on front passenger side -N200-	⇒ “1.1.13 Left front seat”, page 25	For right-hand drive models
Side airbag igniter on front passenger side -N200-	⇒ “1.1.14 Right front seat”, page 26	For left-hand drive models
Driver side curtain airbag igniter -N251-	⇒ “1.1.1 Front left of interior, LHD models”, page 11	
Driver side curtain airbag igniter -N251-	⇒ “1.1.6 Front right of interior, RHD models”, page 18	
Front passenger side curtain airbag igniter -N252-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
Front passenger side curtain airbag igniter -N252-	⇒ “1.1.5 Front right of interior, LHD models”, page 17	
Rear left shock absorber damping adjustment valve -N338-	⇒ “1.2.1 Rear interior, view from left”, page 27	
Rear right shock absorber damping adjustment valve -N339-	⇒ “1.2.2 Rear interior, view from right”, page 28	
Ignition key withdrawal lock solenoid -N376-	⇒ “1.1.10 Steering column”, page 22	
Front left seat belt -NX10-	⇒ “1.1.1 Front left of interior, LHD models”, page 11	
Front left seat belt -NX10-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
Front right seat belt -NX11-	⇒ “1.1.5 Front right of interior, LHD models”, page 17	
Front right seat belt -NX11-	⇒ “1.1.6 Front right of interior, RHD models”, page 18	
Front left treble loudspeaker -R20-	⇒ “1.1.1 Front left of interior, LHD models”, page 11	
Front left treble loudspeaker -R20-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
Front left bass loudspeaker -R21-	⇒ “1.4.1 Driver door, left-hand drive models”, page 33	
Front left bass loudspeaker -R21-	⇒ “1.4.4 Front passenger door, right-hand drive models”, page 37	
Front right treble loudspeaker -R22-	⇒ “1.1.5 Front right of interior, LHD models”, page 17	
Front right treble loudspeaker -R22-	⇒ “1.1.6 Front right of interior, RHD models”, page 18	
Front right bass loudspeaker -R23-	⇒ “1.4.2 Driver door, right-hand drive models”, page 35	

Component	Chapter	Comment
Front right bass loudspeaker -R23-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 36	
Telephone microphone -R38-	⇒ "1.3.1 Roof, part 1", page 29	For left-hand drive models
Telephone microphone -R38-	⇒ "1.3.1 Roof, part 1", page 29	For right-hand drive models
Internal microphone -R74-	⇒ "1.3.1 Roof, part 1", page 29	
TV tuner -R78-	⇒ "1.1.6 Front right of interior, RHD models", page 18	
Front left mid-range loudspeaker -R103-	⇒ "1.1.1 Front left of interior, LHD models", page 11	
Front left mid-range loudspeaker -R103-	⇒ "1.1.2 Front left of interior, RHD models", page 13	
Front right mid-range loudspeaker -R104-	⇒ "1.1.5 Front right of interior, LHD models", page 17	
Front right mid-range loudspeaker -R104-	⇒ "1.1.6 Front right of interior, RHD models", page 18	
Interior aerial 1 for entry and start system -R138-	⇒ "1.1.11 Front centre console, LHD models", page 23	
Interior aerial 1 for entry and start system -R138-	⇒ "1.1.12 Front centre console, RHD models", page 24	
Interior aerial 2 for entry and start system -R139-	⇒ "1.2.2 Rear interior, view from right", page 28	
Left front microphone -R140-	⇒ "1.3.1 Roof, part 1", page 29	For right-hand drive models
Front right microphone -R141-	⇒ "1.3.1 Roof, part 1", page 29	For left-hand drive models
Parking aid loudspeaker -R169-	⇒ "1.1.3 Left footwell, LHD models", page 15	
Parking aid loudspeaker -R169-	⇒ "1.1.4 Right footwell, RHD models", page 16	
Traffic data aerial -R173-	⇒ "1.3.1 Roof, part 1", page 29	
Data transmission aerial -R180-	⇒ "1.1.8 Dash panel, RHD models", page 20	
Centre loudspeaker -R208-	⇒ "1.1.7 Dash panel, LHD models", page 19	
Centre loudspeaker -R208-	⇒ "1.1.8 Dash panel, RHD models", page 20	
Left effect loudspeaker -R209-	⇒ "1.2.2 Rear interior, view from right", page 28	
Right effect loudspeaker -R210-	⇒ "1.2.1 Rear interior, view from left", page 27	
Roof aerial -R216-	⇒ "1.3.2 Roof, part 2", page 32	
Centre loudspeaker 2 -R219-	⇒ "1.1.7 Dash panel, LHD models", page 19	
Centre loudspeaker 2 -R219-	⇒ "1.1.8 Dash panel, RHD models", page 20	
Front camera for driver assist systems -R242-	⇒ "1.3.1 Roof, part 1", page 29	
USB hub -R293-	⇒ "1.1.7 Dash panel, LHD models", page 19	
USB hub -R293-	⇒ "1.1.8 Dash panel, RHD models", page 20	
LTE aerial 2 -R306-	⇒ "1.1.7 Dash panel, LHD models", page 19	from July 2019, for models with emergency call system
LTE aerial 2 -R306-	⇒ "1.1.8 Dash panel, RHD models", page 20	from July 2019, for models with emergency call system
LTE aerial 2 -R306-	⇒ -Fitting locations: in rear part of vehicle	For models without emergency call system
Emergency call module loudspeaker -R335-	⇒ "1.1.2 Front left of interior, RHD models", page 13	

Component	Chapter	Comment
Emergency call module loudspeaker -R335-	⇒ “1.1.5 Front right of interior, LHD models”, page 17	
Aerial for in-vehicle communication -R364-	⇒ “1.1.11 Front centre console, LHD models”, page 23	
Aerial for in-vehicle communication -R364-	⇒ “1.1.12 Front centre console, RHD models”, page 24	
4-pin connector -T4h-	⇒ “1.4.1 Driver door, left-hand drive models”, page 33	
4-pin connector -T4h-	⇒ “1.4.4 Front passenger door, right-hand drive models”, page 37	
4-pin connector -T4i-	⇒ “1.4.1 Driver door, left-hand drive models”, page 33	
4-pin connector -T4i-	⇒ “1.4.4 Front passenger door, right-hand drive models”, page 37	
4-pin connector -T4j-	⇒ “1.4.2 Driver door, right-hand drive models”, page 35	
4-pin connector -T4j-	⇒ “1.4.3 Front passenger door, left-hand drive models”, page 36	
4-pin connector -T4k-	⇒ “1.4.2 Driver door, right-hand drive models”, page 35	
4-pin connector -T4k-	⇒ “1.4.3 Front passenger door, left-hand drive models”, page 36	
6-pin connector -T6an-	⇒ “1.1.1 Front left of interior, LHD models”, page 11	
6-pin connector -T6an-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
6-pin connector -T6ao-	⇒ “1.1.5 Front right of interior, LHD models”, page 17	
6-pin connector -T6ao-	⇒ “1.1.6 Front right of interior, RHD models”, page 18	
6-pin connector -T6at-	⇒ “1.1.5 Front right of interior, LHD models”, page 17	
6-pin connector -T6at-	⇒ “1.1.6 Front right of interior, RHD models”, page 18	
6-pin connector -T6e-	⇒ “1.1.1 Front left of interior, LHD models”, page 11	
6-pin connector -T6e-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
19-pin connector -T19a-	⇒ “1.1.1 Front left of interior, LHD models”, page 11	
19-pin connector -T19a-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
19-pin connector -T19c-	⇒ “1.1.5 Front right of interior, LHD models”, page 17	
19-pin connector -T19c-	⇒ “1.1.6 Front right of interior, RHD models”, page 18	
27-pin connector -T27a-	⇒ “1.1.1 Front left of interior, LHD models”, page 11	
27-pin connector -T27a-	⇒ “1.1.2 Front left of interior, RHD models”, page 13	
27-pin connector -T27b-	⇒ “1.4.1 Driver door, left-hand drive models”, page 33	
27-pin connector -T27b-	⇒ “1.4.4 Front passenger door, right-hand drive models”, page 37	
27-pin connector -T27c-	⇒ “1.1.5 Front right of interior, LHD models”, page 17	
27-pin connector -T27c-	⇒ “1.1.6 Front right of interior, RHD models”, page 18	

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless expressly permitted by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the content of this document. Copyright by AUDI AG.

Component	Chapter	Comment
27-pin connector -T27d-	⇒ "1.4.2 Driver door, right-hand drive models", page 35	
27-pin connector -T27d-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 36	
12 V socket -U5-	⇒ "1.1.7 Dash panel, LHD models", page 19	
12 V socket -U5-	⇒ "1.1.8 Dash panel, RHD models", page 20	
Diagnostic connection -U31-	⇒ "1.1.3 Left footwell, LHD models", page 15	
Diagnostic connection -U31-	⇒ "1.1.4 Right footwell, RHD models", page 16	
Air recirculation flap control motor -V113-	⇒ "1.5.1 Air conditioning system, KH6, part 1", page 40	
Driver side window regulator motor -V147-	⇒ "1.4.1 Driver door, left-hand drive models", page 33	
Driver side window regulator motor -V147-	⇒ "1.4.2 Driver door, right-hand drive models", page 35	
Front passenger side window regulator motor -V148-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 36	
Front passenger side window regulator motor -V148-	⇒ "1.4.4 Front passenger door, right-hand drive models", page 37	
Driver side exterior mirror -VX4-	⇒ "1.4.1 Driver door, left-hand drive models", page 33	
Driver side exterior mirror -VX4-	⇒ "1.4.2 Driver door, right-hand drive models", page 35	
Passenger side exterior mirror -VX5-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 36	
Passenger side exterior mirror -VX5-	⇒ "1.4.4 Front passenger door, right-hand drive models", page 37	
Driver door lock unit -VX21-	⇒ "1.4.1 Driver door, left-hand drive models", page 33	
Driver door lock unit -VX21-	⇒ "1.4.2 Driver door, right-hand drive models", page 35	
Front passenger door lock unit -VX22-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 36	
Front passenger door lock unit -VX22-	⇒ "1.4.4 Front passenger door, right-hand drive models", page 37	
Rear left door lock unit -VX23-	⇒ "1.4.5 Rear left door", page 38	
Rear right door lock unit -VX24-	⇒ "1.4.6 Rear right door", page 39	
Air distribution flap -VX33-	⇒ "1.5.1 Air conditioning system, KH6, part 1", page 40	
Air distribution flap -VX33-	⇒ "1.5.3 Climatronic, 9AK, part 1", page 43	
Front left temperature flap -VX34-	⇒ "1.5.2 Air conditioning system, KH6, part 2", page 42	For models with air conditioning system
Front left temperature flap -VX34-	⇒ "1.5.4 Climatronic, 9AK, part 2", page 44	For models with Climatronic
Front right temperature flap -VX35-	⇒ "1.5.3 Climatronic, 9AK, part 1", page 43	
Defroster flap -VX47-	⇒ "1.5.4 Climatronic, 9AK, part 2", page 44	
Air recirculation flap -VX52-	⇒ "1.5.3 Climatronic, 9AK, part 1", page 43	

Component	Chapter	Comment
Glove compartment light -W6-	⇒ "1.1.2 Front left of interior, RHD models", page 13	
Glove compartment light -W6-	⇒ "1.1.5 Front right of interior, LHD models", page 17	
Left footwell light -W9-	⇒ "1.1.2 Front left of interior, RHD models", page 13	
Left footwell light -W9-	⇒ "1.1.3 Left footwell, LHD models", page 15	
Right footwell light -W10-	⇒ "1.1.4 Right footwell, RHD models", page 16	
Right footwell light -W10-	⇒ "1.1.5 Front right of interior, LHD models", page 17	
Front passenger side illuminated vanity mirror -W14-	⇒ "1.3.1 Roof, part 1", page 29	For left-hand drive models
Front passenger side illuminated vanity mirror -W14-	⇒ "1.3.1 Roof, part 1", page 29	For right-hand drive models
Driver side illuminated vanity mirror -W20-	⇒ "1.3.1 Roof, part 1", page 29	For right-hand drive models
Driver side illuminated vanity mirror -W20-	⇒ "1.3.1 Roof, part 1", page 29	For left-hand drive models
Light for driver door ambient lighting -W86-	⇒ "1.4.1 Driver door, left-hand drive models", page 33	
Light for driver door ambient lighting -W86-	⇒ "1.4.2 Driver door, right-hand drive models", page 35	
Light for passenger door ambient lighting -W87-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 36	
Light for passenger door ambient lighting -W87-	⇒ "1.4.4 Front passenger door, right-hand drive models", page 37	
Light 2 for driver door ambient lighting -W97-	⇒ "1.4.1 Driver door, left-hand drive models", page 33	
Light 2 for driver door ambient lighting -W97-	⇒ "1.4.2 Driver door, right-hand drive models", page 35	
Light 2 for front passenger door ambient lighting -W98-	⇒ "1.4.3 Front passenger door, left-hand drive models", page 36	
Light 2 for front passenger door ambient lighting -W98-	⇒ "1.4.4 Front passenger door, right-hand drive models", page 37	
Rear interior light -WX2-	⇒ "1.3.2 Roof, part 2", page 32	
Front roof module -WX3-	⇒ "1.3.1 Roof, part 1", page 29	
Windscreen heater for front sensors -Z113-	⇒ "1.3.1 Roof, part 1", page 29	
Front left seat heating -ZX11-	⇒ "1.1.13 Left front seat", page 25	
Front right seat heating -ZX13-	⇒ "1.1.14 Right front seat", page 26	

1.1 At front of interior

- ◆ ⇒ ["1.1.1 Front left of interior, LHD models", page 11](#)
- ◆ ⇒ ["1.1.2 Front left of interior, RHD models", page 13](#)
- ◆ ⇒ ["1.1.3 Left footwell, LHD models", page 15](#)

- ◆ ⇒ [“1.1.4 Right footwell, RHD models”, page 16](#)
- ◆ ⇒ [“1.1.5 Front right of interior, LHD models”, page 17](#)
- ◆ ⇒ [“1.1.6 Front right of interior, RHD models”, page 18](#)
- ◆ ⇒ [“1.1.7 Dash panel, LHD models”, page 19](#)
- ◆ ⇒ [“1.1.8 Dash panel, RHD models”, page 20](#)
- ◆ ⇒ [“1.1.9 Steering wheel”, page 21](#)
- ◆ ⇒ [“1.1.10 Steering column”, page 22](#)
- ◆ ⇒ [“1.1.11 Front centre console, LHD models”, page 23](#)
- ◆ ⇒ [“1.1.12 Front centre console, RHD models”, page 24](#)
- ◆ ⇒ [“1.1.13 Left front seat”, page 25](#)
- ◆ ⇒ [“1.1.14 Right front seat”, page 26](#)

1.1.1 Front left of interior, LHD models



Note

For left-hand drive models



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A - 27-pin connector -T27a- , black

☐ For left-hand drive models

**B - 3-pin connector -T3c- , yellow/
3-pin connector -T3bf- , yellow**

C - 6-pin connector -T6e- , green / 6-pin connector -T6an- , green

☐ For left-hand drive models

**D - 5-pin connector -T5c- , black/
5-pin connector -T5k- , black**

E - 19-pin connector -T19a- , black

☐ For left-hand drive models


1 - Driver side curtain airbag igniter -N251-

2 - Front left treble loudspeaker -R20-

3 - Front left mid-range loudspeaker -R103-

4 - Digital sound package control unit -J525-

5 - Front left seat belt -NX10-

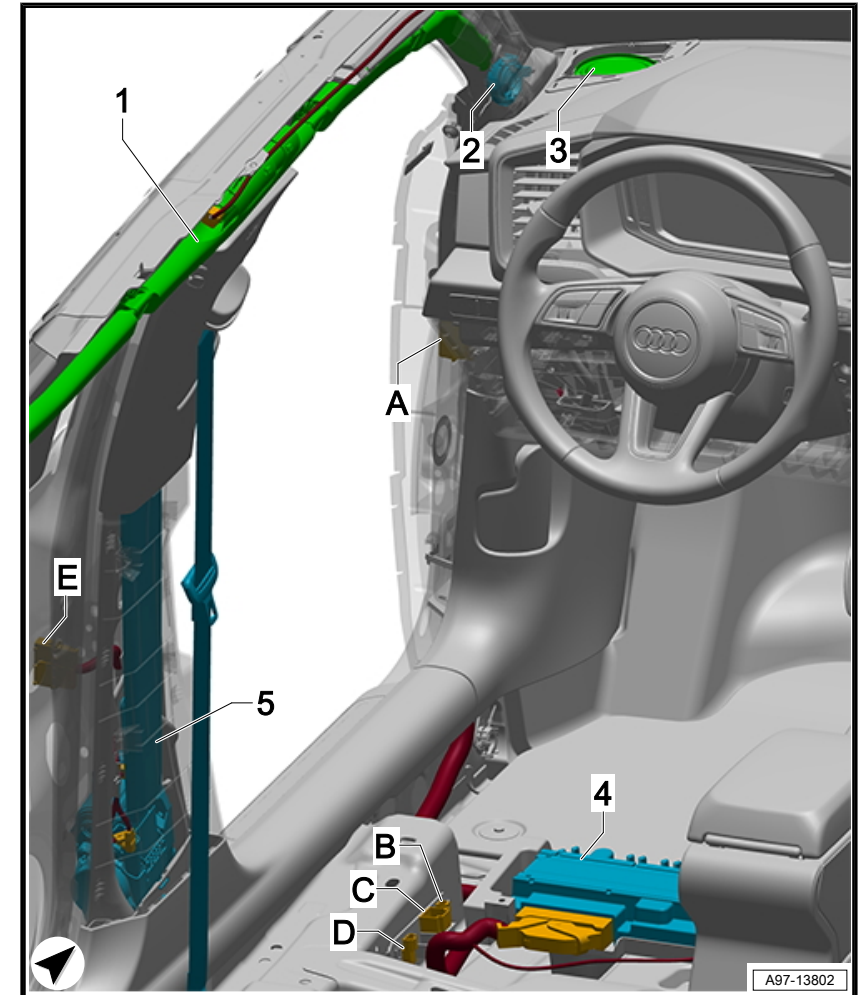

[Back to overview ⇒ page 1](#)

1.1.2 Front left of interior, RHD models



Note

For right-hand drive models

A - 27-pin connector -T27a- , black

□ For right-hand drive models

B - 3-pin connector -T3bp- , yellow/
3-pin connector -T3bq- , yellow

C - 6-pin connector -T6e- , green / 6-pin connector -T6an- , green

□ For right-hand drive models

D - 5-pin connector -T5ab- , black/
5-pin connector -T5ac- , black

E - 19-pin connector -T19a- , black

□ For right-hand drive models

1 - Front passenger side curtain airbag igniter -N252-

2 - Front left treble loudspeaker -R20-

3 - Front left mid-range loudspeaker -R103-

4 - Front passenger side airbag igniter 1 -N131-

5 - Parking aid control unit -J446-

6 - Emergency call module loudspeaker -R335-

7 - Key operated switch to deactivate front passenger side airbag -E224-

8 - Control unit 1 for information electronics -J794-

9 - Glove compartment light -W6-


10 - Left footwell light -W9-

11 - Entry and start authorisation control unit -J518-

12 - Glove compartment light switch -E26-

13 - Digital sound package control unit -J525-

14 - Front left seat belt -NX10-

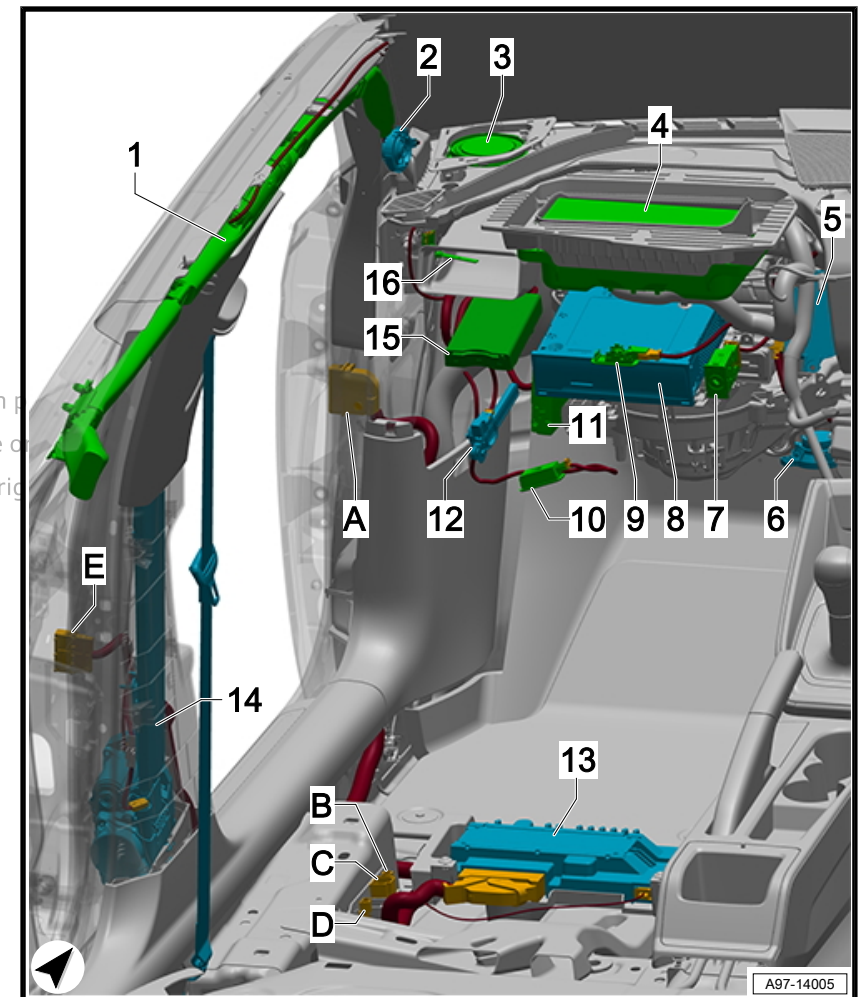

15 - Chip card reader control unit -J676-

16 - Left vent temperature sender -G150-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview](#) ⇒ [page 1](#)

1.1.3 Left footwell, LHD models




Note

For left-hand drive models

- 1 - Light switch -E1-
- 2 - Left vent temperature sender -G150-
- 3 - Light 1 for dashboard ambient lighting -L292-
- 4 - Control unit for cornering light and headlight range control -J745-
- 5 - Parking aid loudspeaker -R169-
- 6 - Power steering control unit -J500-
- 7 - Accelerator pedal module -GX2-
- 8 - Left footwell light -W9-
- 9 - Data bus diagnostic interface -J533-
- 10 - Parking aid control unit -J446-
- 11 - Onboard supply control unit -J519-
- 12 - Diagnostic connection -U31-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG

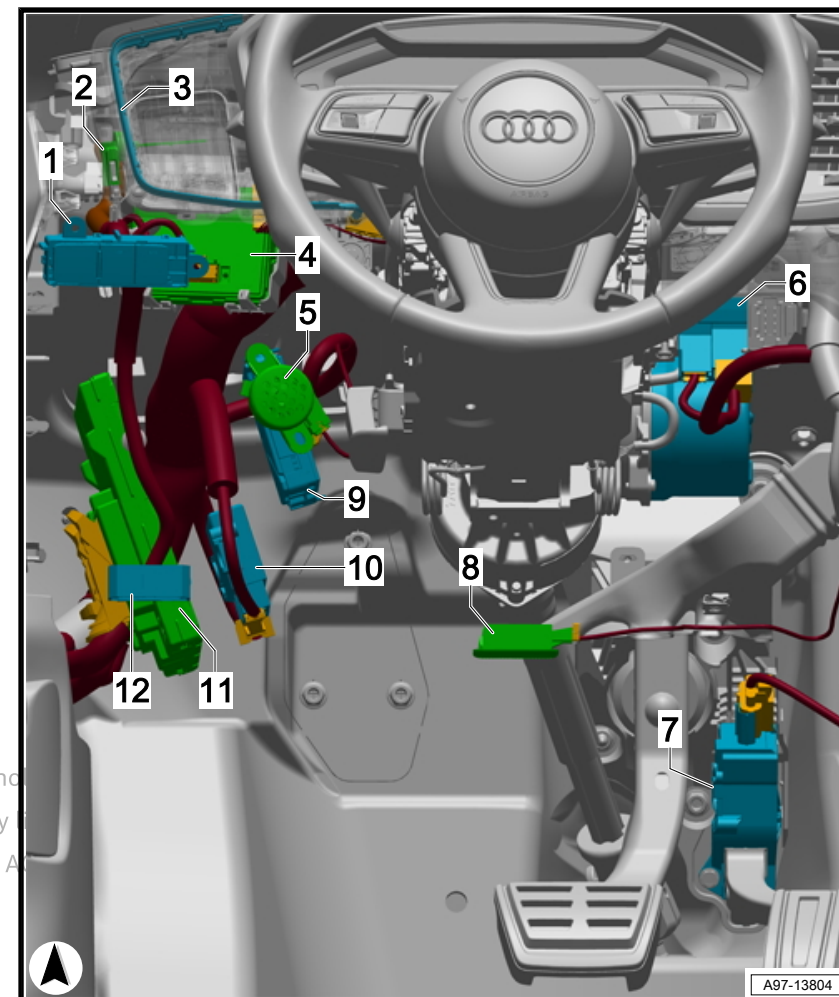

[Back to overview ⇒ page 1](#)

1.1.4 Right footwell, RHD models




Note

For right-hand drive models



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. with respect to the correctness of information.

- 1 - Power steering control unit -J500-
- 2 - Light 1 for dashboard ambient lighting -L292-
- 3 - Right vent temperature sender -G151-
- 4 - Light switch -E1-
- 5 - Control unit for cornering light and headlight range control -J745-
- 6 - Onboard supply control unit -J519-
- 7 - Parking aid loudspeaker -R169-
- 8 - Data bus diagnostic interface -J533-
- 9 - Diagnostic connection -U31-
- 10 - Accelerator pedal module -GX2-
- 11 - Right footwell light -W10-

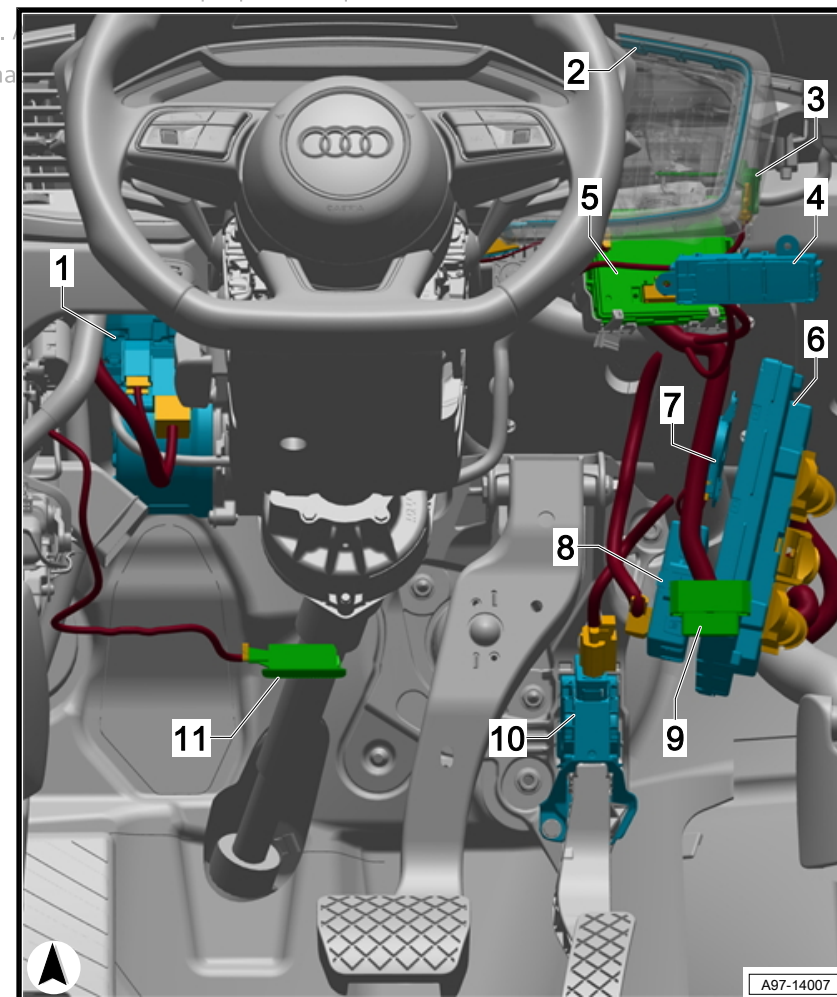

[Back to overview ⇒ page 1](#)

1.1.5 Front right of interior, LHD models



Note

For left-hand drive models

A - 27-pin connector -T27c- , black

□ For left-hand drive models

B - 19-pin connector -T19c- , black

□ For left-hand drive models

**C - 3-pin connector -T3bg- , yellow/
3-pin connector -T3bj- , yellow**

D - 6-pin connector -T6ao- , green / 6-pin connector -T6at- , green

□ For left-hand drive models

**E - 5-pin connector -T5l- , black/
5-pin connector -T5y- , black**

1 - Front passenger side airbag igniter 1 -N131-

2 - Front right mid-range loudspeaker -R104-

3 - Front right treble loudspeaker -R22-

4 - Right vent temperature sender -G151-

5 - Front passenger side curtain airbag igniter -N252-

6 - Entry and start authorisation control unit -J518-

7 - Glove compartment light switch -E26-

8 - Right footwell light -W10-


9 - Control unit 1 for information electronics -J794-

10 - Glove compartment light -W6-

11 - Key operated switch to deactivate front passenger side airbag -E224-

12 - Emergency call module loudspeaker -R335-

13 - Front right seat belt -NX11-

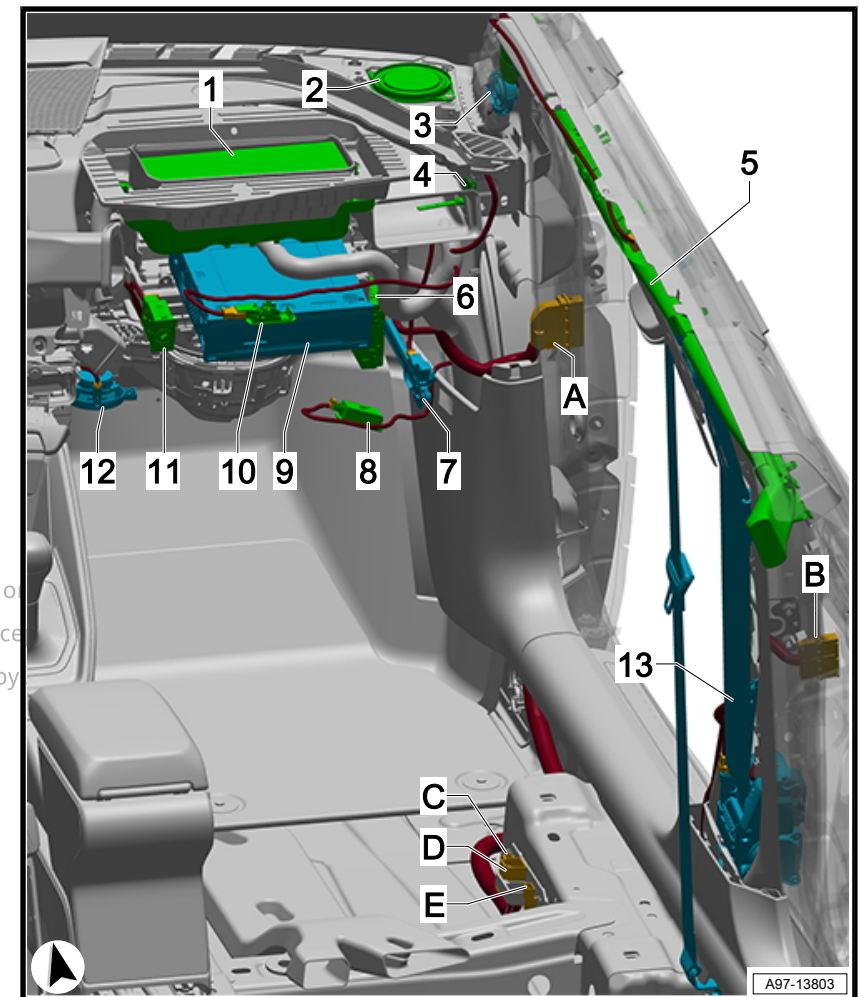

[Back to overview ⇒ page 1](#)

1.1.6 Front right of interior, RHD models



Note

For right-hand drive models

A - 27-pin connector -T27c- , black

□ For right-hand drive models

B - 19-pin connector -T19c- , black

□ For right-hand drive models

C - 3-pin connector -T3bu- , yellow/
3-pin connector -T3bv- , yellow

D - 6-pin connector -T6ao- , green / 6-pin connector -T6at- , green

□ For right-hand drive models

E - 5-pin connector -T5z- , black/
5-pin connector -T5ah- , black


1 - Front right mid-range loudspeaker -R104-

2 - Front right treble loudspeaker -R22-

3 - Driver side curtain airbag igniter -N251-

4 - Front right seat belt -NX11-

5 - TV tuner -R78-

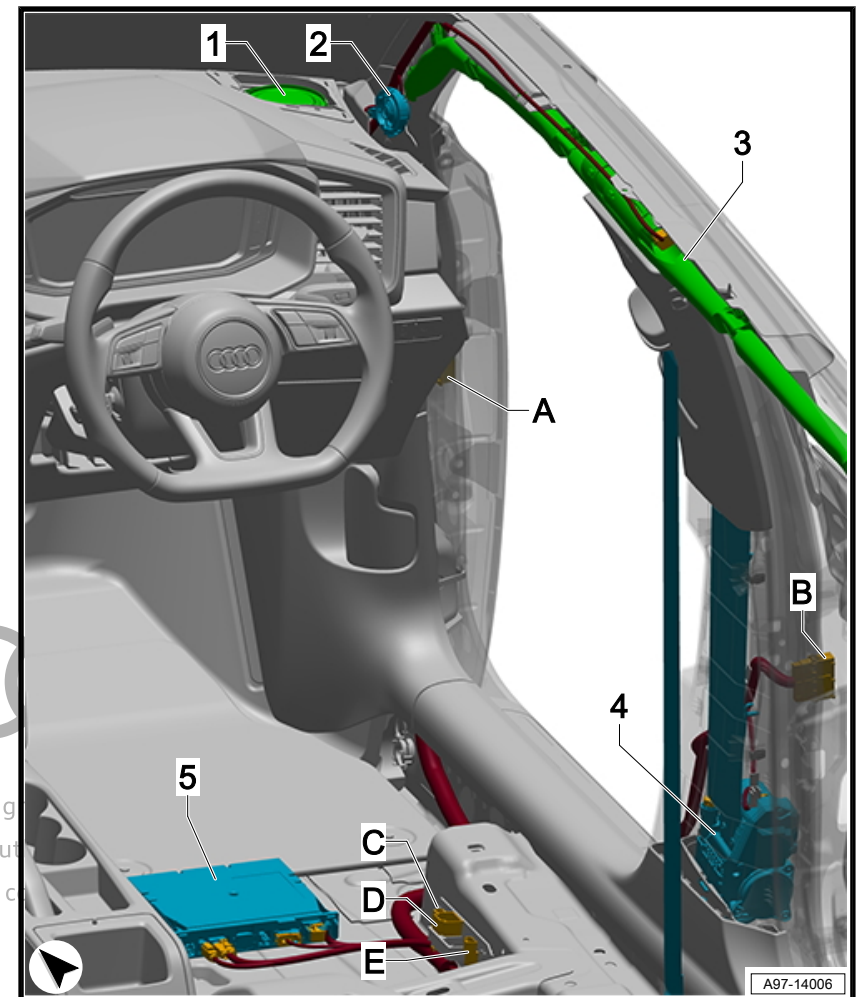

[Back to overview](#) ⇒ [page 1](#)

1.1.7 Dash panel, LHD models




Note

For left-hand drive models



- 1 - Emergency call module control unit and communication unit -J949-
- 2 - Control unit in dash panel insert -J285-
- 3 - Light 2 for dashboard ambient lighting -L293-
- 4 - LTE aerial 2 -R306-
 - ☐ From July 2019
 - ☐ For models with emergency call system
 - ☐ For models without emergency call system -> see fitting locations: rear part of vehicle
- 5 - Display unit for front information display and operating unit control unit -J685-
- 6 - Centre loudspeaker -R208-
- 7 - Centre loudspeaker 2 -R219-
- 8 - Heater and air conditioning controls -EX21-
- 9 - Operating unit 1 for driving and comfort functions -E791-
- 10 - 12 V socket -U5-
- 11 - USB hub -R293-

Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. The copyright holder assumes no responsibility with respect to the correctness of information.

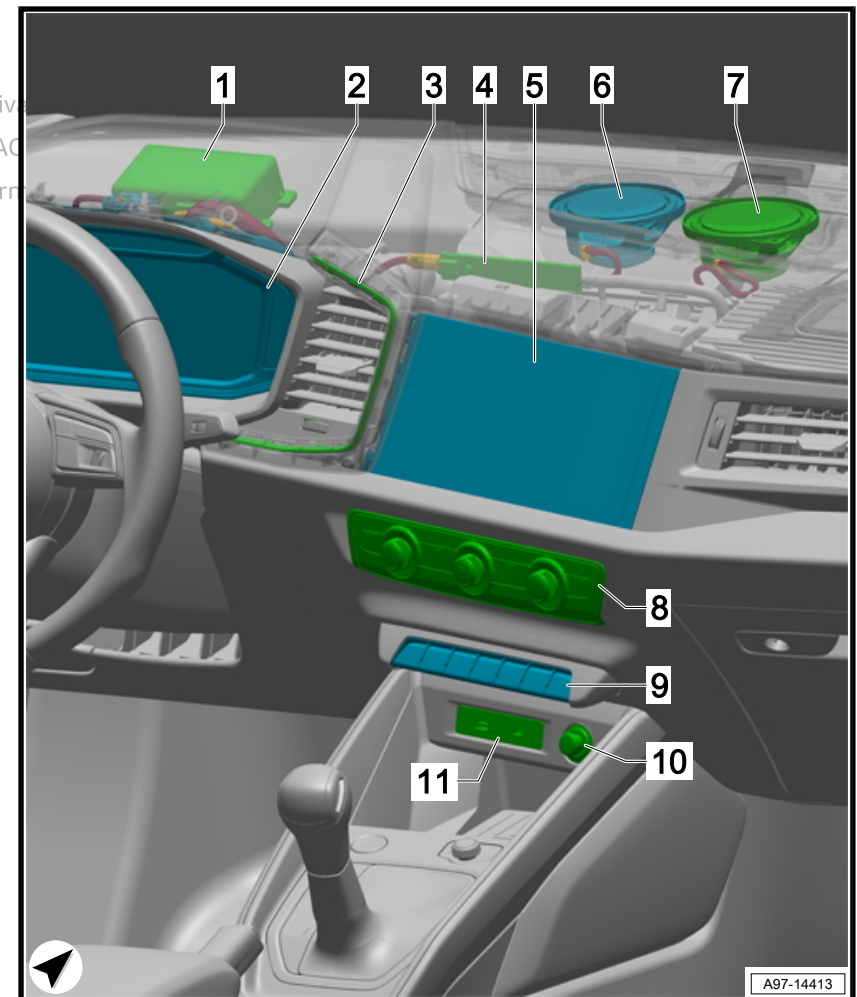

[Back to overview](#) ⇒ [page 1](#)

1.1.8 Dash panel, RHD models




Note

For right-hand drive models

- 1 - Data transmission aerial -R180-
- 2 - Centre loudspeaker 2 -R219-
- 3 - Centre loudspeaker -R208-
- 4 - LTE aerial 2 -R306-
 - ☐ From July 2019
 - ☐ For models with emergency call system
 - ☐ For models without emergency call system -> see fitting locations: rear part of vehicle
- 5 - Display unit for front information display and operating unit control unit -J685-
- 6 - Light 2 for dashboard ambient lighting -L293-
- 7 - Control unit in dash panel insert -J285-
- 8 - Emergency call module control unit and communication unit -J949-
- 9 - Heater and air conditioning controls -EX21-
- 10 - Operating unit 1 for driving and comfort functions -E791-
- 11 - USB hub -R293-
- 12 - 12 V socket -U5-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

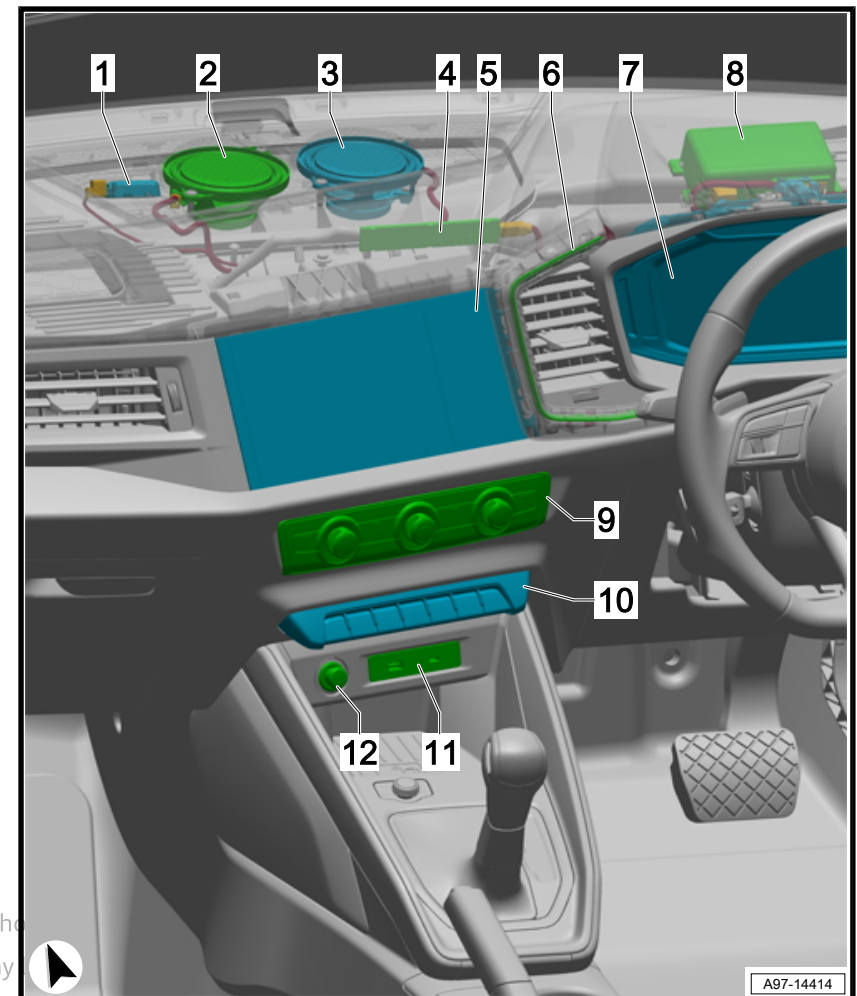


[Back to overview](#) ⇒ [page 1](#)

1.1.9 Steering wheel

- 1 - Tiptronic switch to shift down -E480-
- 2 - Driver side airbag igniter -N95-
- 3 - Coil connector -F350-
- 4 - Not installed
- 5 - Tiptronic switch to shift up -E479-
- 6 - Multifunction steering wheel control unit -J453-
- 7 - Horn plate -H-
- 8 - Multifunction buttons on left in steering wheel -E440-



Protected by copyright. Copying for private or commercial purposes is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee the correctness of information in this document.

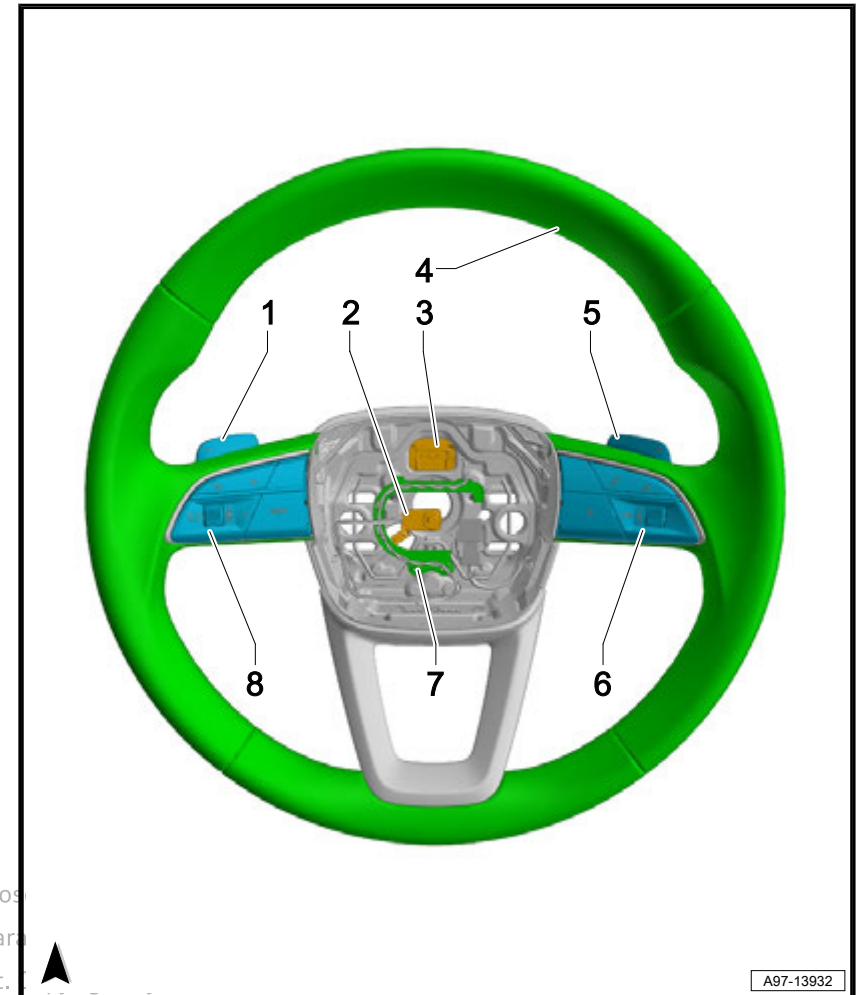

A97-13932


[Back to overview](#) ⇒ [page 1](#)

1.1.10 Steering column

- 1 - Steering column electronics control unit -J527-
- 2 - Immobiliser reader coil -D2-
- 2 - Ignition/starter switch -D-
- 3 - Ignition key withdrawal lock solenoid -N376-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

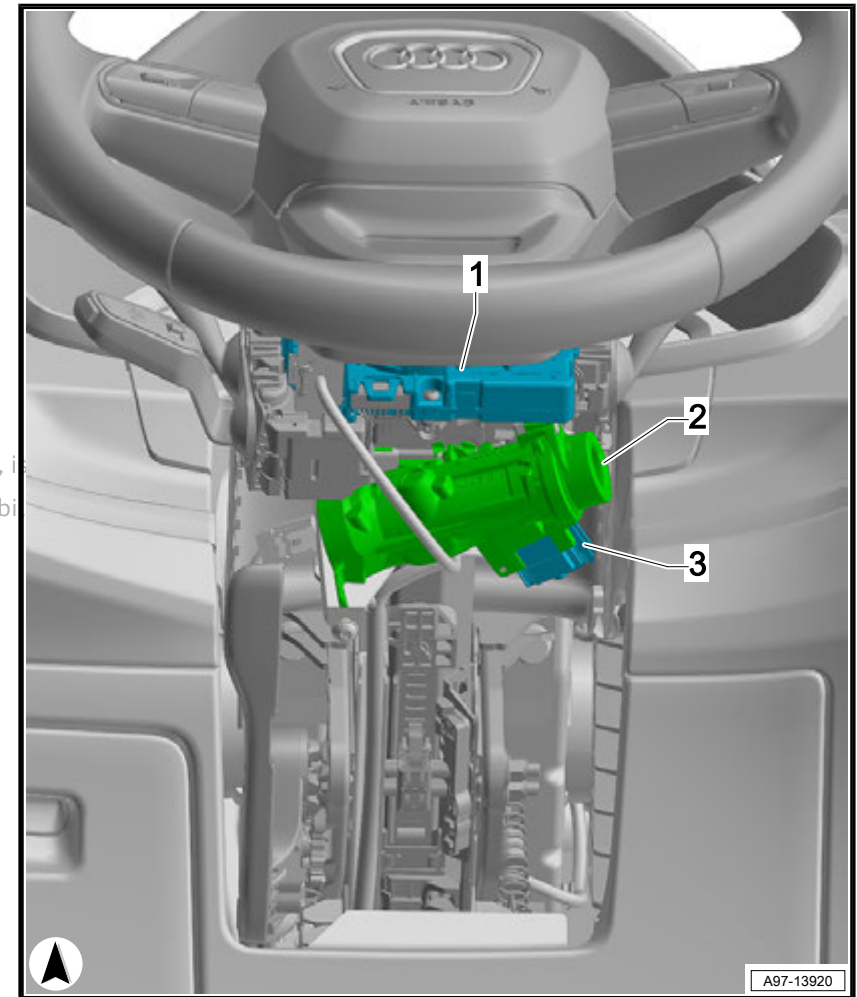

[Back to overview](#) ⇒ [page 1](#)

1.1.11 Front centre console, LHD models




Note

For left-hand drive models

- 1 - Entry and start authorisation button -E408-
- 2 - Storage compartment illumination bulb -L120-
- 3 - Charger 1 for mobile devices -J1146-
- 4 - Airbag control unit -J234-
- 5 - Driver side volume regulator -E67-
- 6 - Interior aerial 1 for entry and start system -R138-
- 7 - Selector lever -E313-
- 8 - Handbrake warning switch -F9-
- 9 - Aerial for in-vehicle communication -R364-

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG

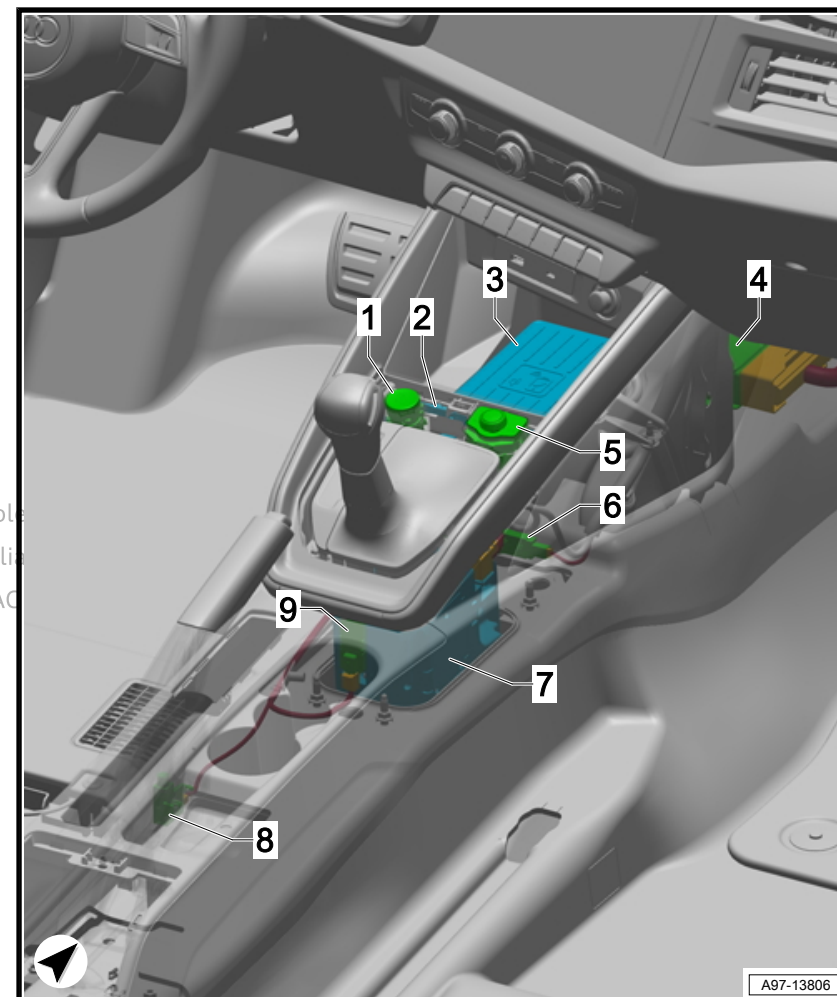

[Back to overview](#) ⇒ [page 1](#)

1.1.12 Front centre console, RHD models




Note

For right-hand drive models

- 1 - Charger 1 for mobile devices -J1146-
- 2 - Storage compartment illumination bulb -L120-
- 3 - Entry and start authorisation button -E408-
- 4 - Aerial for in-vehicle communication -R364-
- 5 - Handbrake warning switch -F9-
- 6 - Selector lever -E313-
- 7 - Interior aerial 1 for entry and start system -R138-
- 8 - Driver side volume regulator -E67-
- 9 - Airbag control unit -J234-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

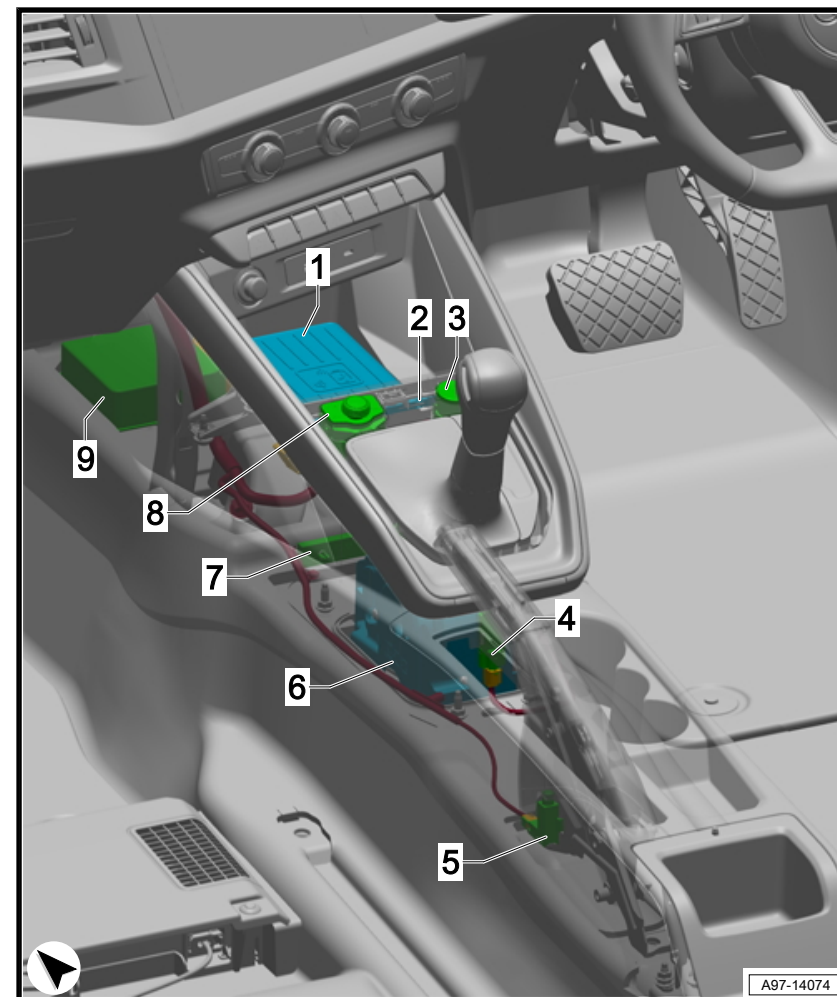

[Back to overview ⇒ page 1](#)

1.1.13 Left front seat

1 - Driver side belt switch -E24-

- ☐ For left-hand drive models

1 - Front passenger side belt switch -E25-

- ☐ For right-hand drive models

2 - Side airbag igniter on driver side -N199-

- ☐ For left-hand drive models

2 - Side airbag igniter on front passenger side -N200-

- ☐ For right-hand drive models


3 - Seat occupied sensor, front passenger side -G128-

- ☐ For right-hand drive models

4 - Front left seat heating -ZX11-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

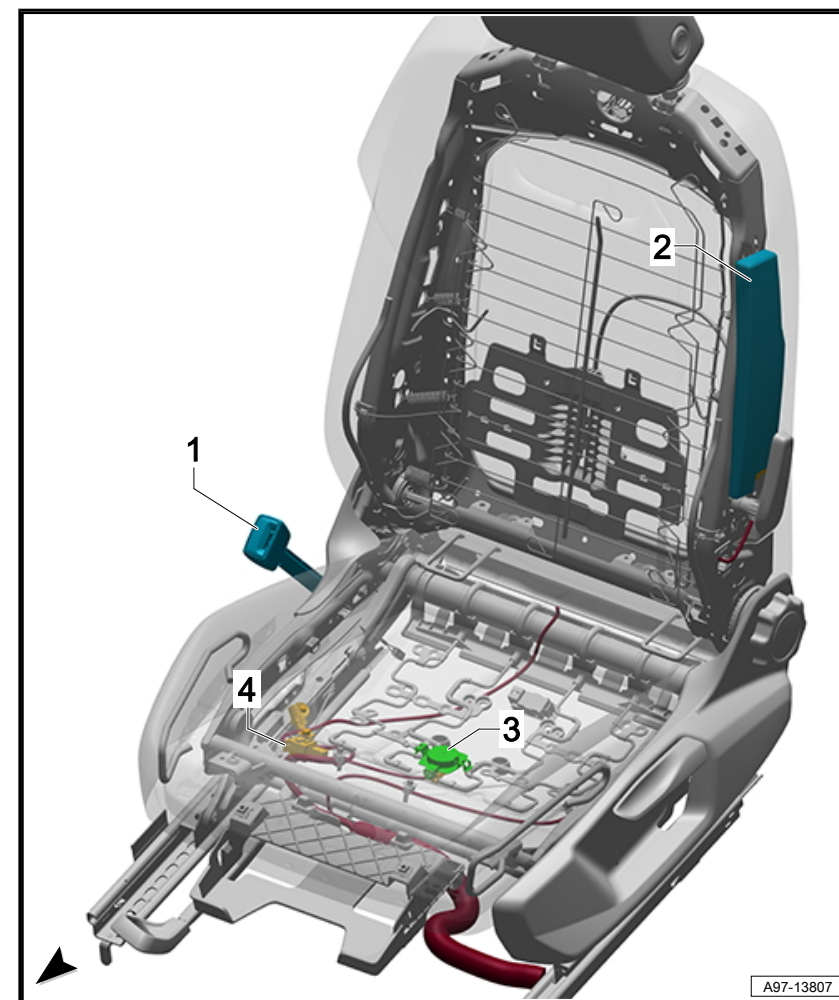

[Back to overview ⇒ page 1](#)

1.1.14 Right front seat

1 - Side airbag igniter on front passenger side -N200-

☐ For left-hand drive models

1 - Side airbag igniter on driver side -N199-

☐ For right-hand drive models

2 - Front passenger side belt switch -E25-

☐ For left-hand drive models

2 - Driver side belt switch -E24-

☐ For right-hand drive models


3 - Front right seat heating -ZX13-

4 - Seat occupied sensor, front passenger side -G128-

☐ For left-hand drive models



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

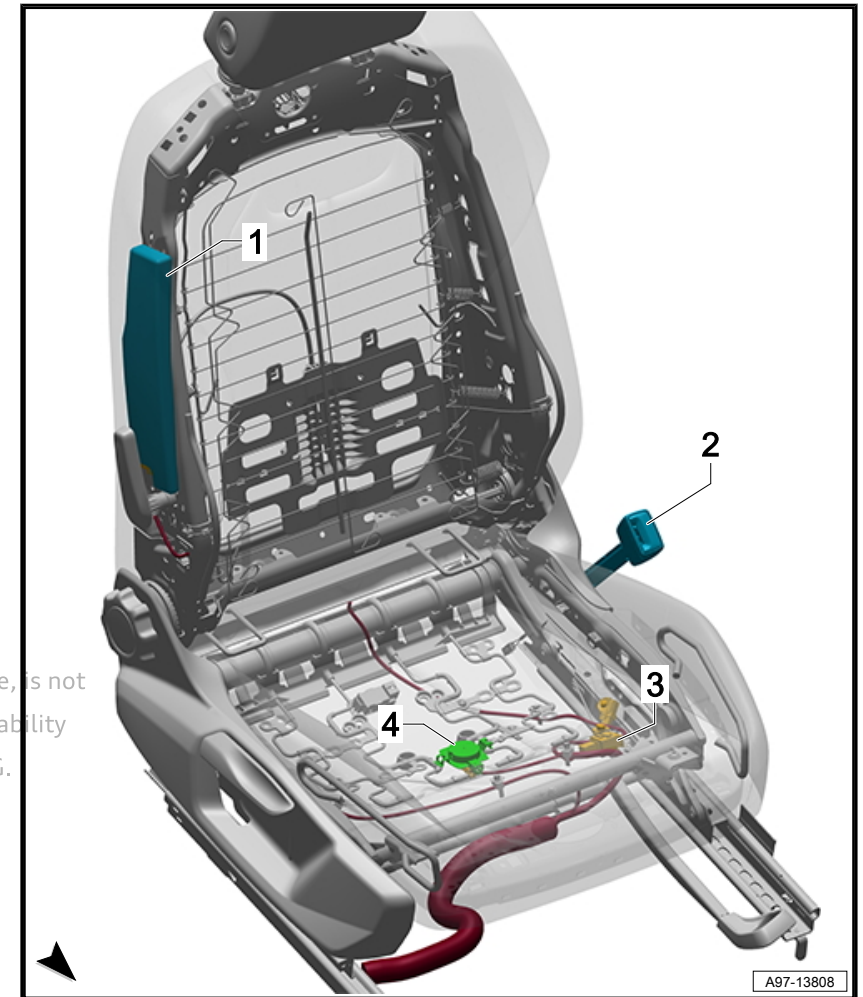

[Back to overview ⇒ page 1](#)

1.2 Rear interior

♦ [⇒ "1.2.1 Rear interior, view from left", page 27](#)

◆ ⇒ ["1.2.2 Rear interior, view from right", page 28](#)

1.2.1 Rear interior, view from left

A - 6-pin connector -T6c-, black/
6-pin connector -T6d-, black

☐ For left-hand drive models

A - 6-pin connector -T6av-, black/
6-pin connector -T6aw-, black

☐ For right-hand drive models

1 - Right effect loudspeaker -R210-

2 - Rear belt tensioner igniter on front passenger side -N197-

☐ For left-hand drive models

2 - Rear belt tensioner igniter on driver side -N196-

☐ For right-hand drive models

3 - Passenger side rear belt switch -E259-

☐ For left-hand drive models

3 - Driver's side rear belt switch -E258-

☐ For right-hand drive models

4 - Twin belt buckle -FX4-

5 - Rear left shock absorber damping adjustment valve -N338-

6 - Rear left speed sensor -G46-

7 - Rear seat occupied sensor, driver side -G177-

☐ For left-hand drive models

7 - Rear seat occupied sensor, passenger side -G178-

☐ For right-hand drive models

8 - Rear centre seat occupied sensor -G1010-

9 - Rear seat occupied sensor, passenger side -G178-


☐ For left-hand drive models

9 - Rear seat occupied sensor, driver side -G177-

☐ For right-hand drive models

10 - Rear side airbag crash sensor on front passenger side -G257-

☐ For left-hand drive models

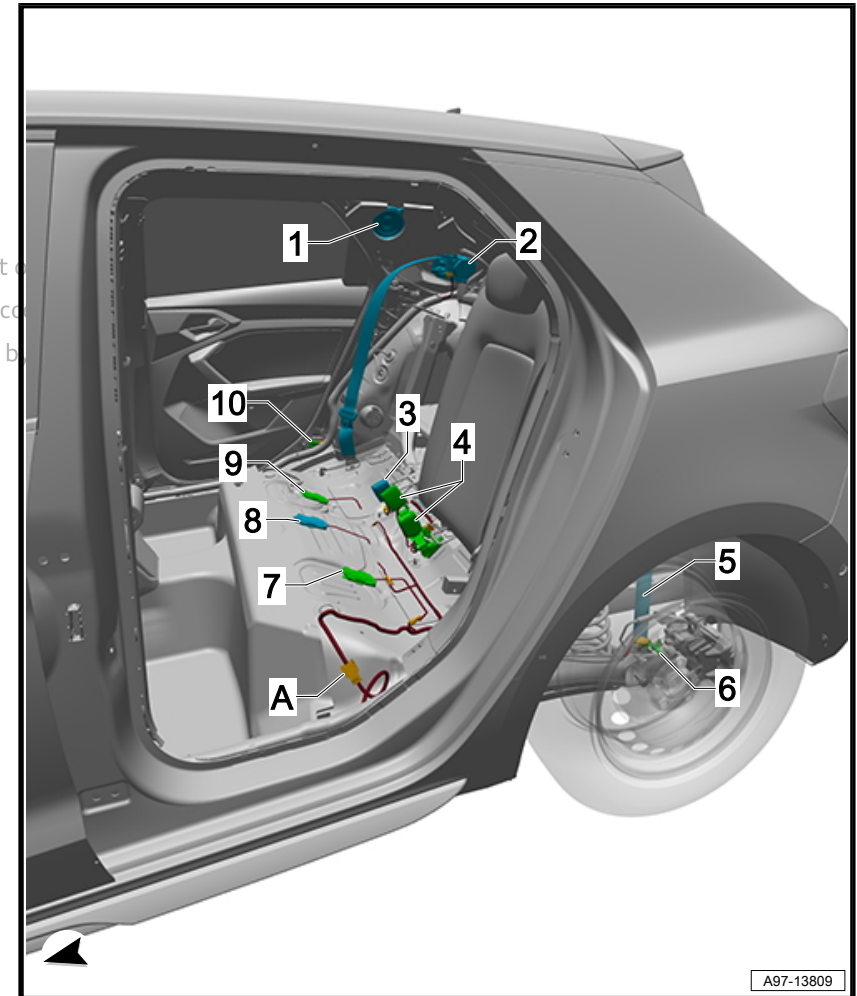

10 - Rear side airbag crash sensor on driver side -G256-

- ☐ For right-hand drive models

[Back to overview ⇒ page 1](#)

1.2.2 Rear interior, view from right

1 - Rear belt tensioner igniter on driver side -N196-

- ☐ For left-hand drive models

1 - Rear belt tensioner igniter on front passenger side -N197-

- ☐ For right-hand drive models

2 - Left effect loudspeaker -R209-

3 - Rear side airbag crash sensor on driver side -G256-

- ☐ For left-hand drive models

3 - Rear side airbag crash sensor on front passenger side -G257-

- ☐ For right-hand drive models

4 - Fuel delivery unit -GX1-


5 - Fuel pump control unit -J538-

6 - Rear right speed sensor -G44-

7 - Rear right shock absorber damping adjustment valve -N339-

8 - Interior aerial 2 for entry and start system -R139-

Protected by copyright. Copying for private or commercial purposes without prior written permission is prohibited. Audi AG does not assume any liability with respect to the correctness of information in this document.

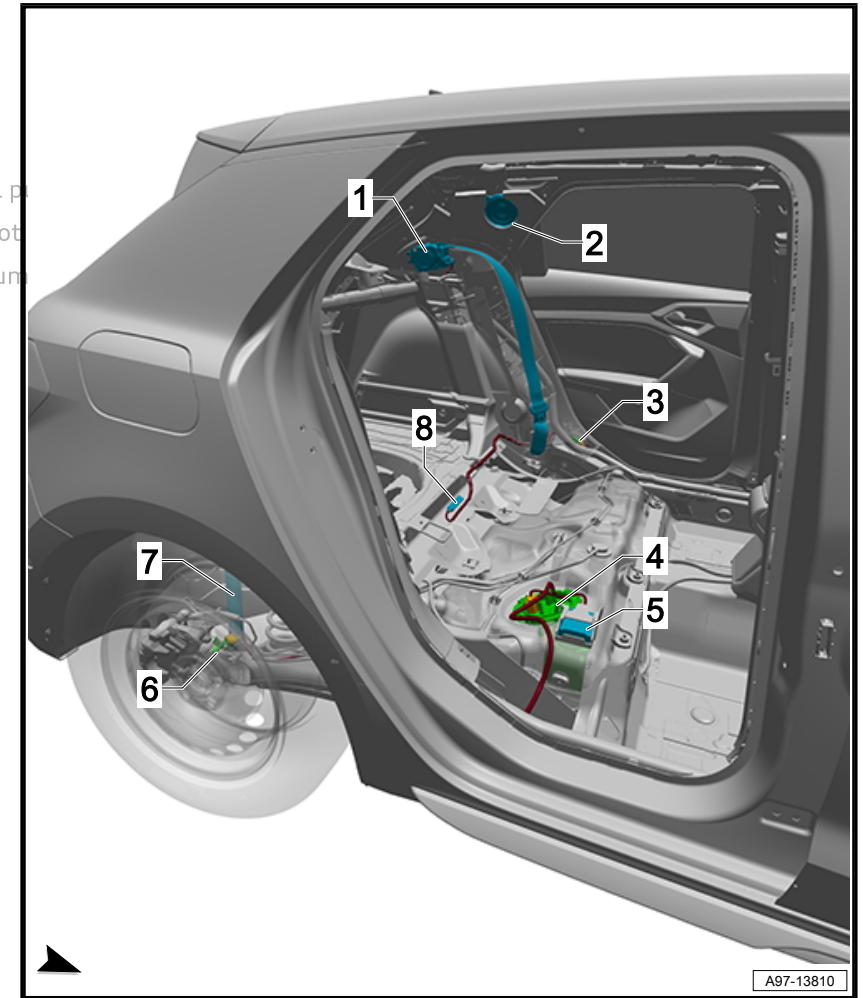

Back to overview ⇒ [page 1](#)

1.3 Roof

♦ ⇒ ["1.3.1 Roof, part 1", page 29](#)

♦ ⇒ ["1.3.2 Roof, part 2", page 32](#)

1.3.1 Roof, part 1



Note

Illustration shows left-hand drive model.



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1 - Front passenger side illuminated vanity mirror -W14-

- ☐ For left-hand drive models

1 - Driver side illuminated vanity mirror -W20-

- ☐ For right-hand drive models

2 - Telephone microphone -R38-

- ☐ For right-hand drive models
- ☐ Up to July 2019

2 - Front right microphone -R141-

- ☐ From July 2019
- ☐ For right-hand drive models
- ☐ For left-hand drive models with emergency call system

3 - Front roof module -WX3-

4 - Anti-theft alarm sensor -G578-

5 - Telephone microphone -R38-

- ☐ For left-hand drive models
- ☐ Up to July 2019

5 - Left front microphone -R140-

- ☐ From July 2019
- ☐ For left-hand drive models
- ☐ For right-hand drive models with emergency call system

6 - Internal microphone -R74-

7 - Driver side illuminated vanity mirror -W20-

- ☐ For left-hand drive models

7 - Front passenger side illuminated vanity mirror -W14-

- ☐ For right-hand drive models

8 - Driver side vanity mirror contact switch -F147-

- ☐ For left-hand drive models


8 - Front passenger side vanity mirror contact switch -F148-

- ☐ For right-hand drive models

9 - Front camera for driver assist systems -R242-

10 - Traffic data aerial -R173-

11 - Windscreen heater for front sensors -Z113-

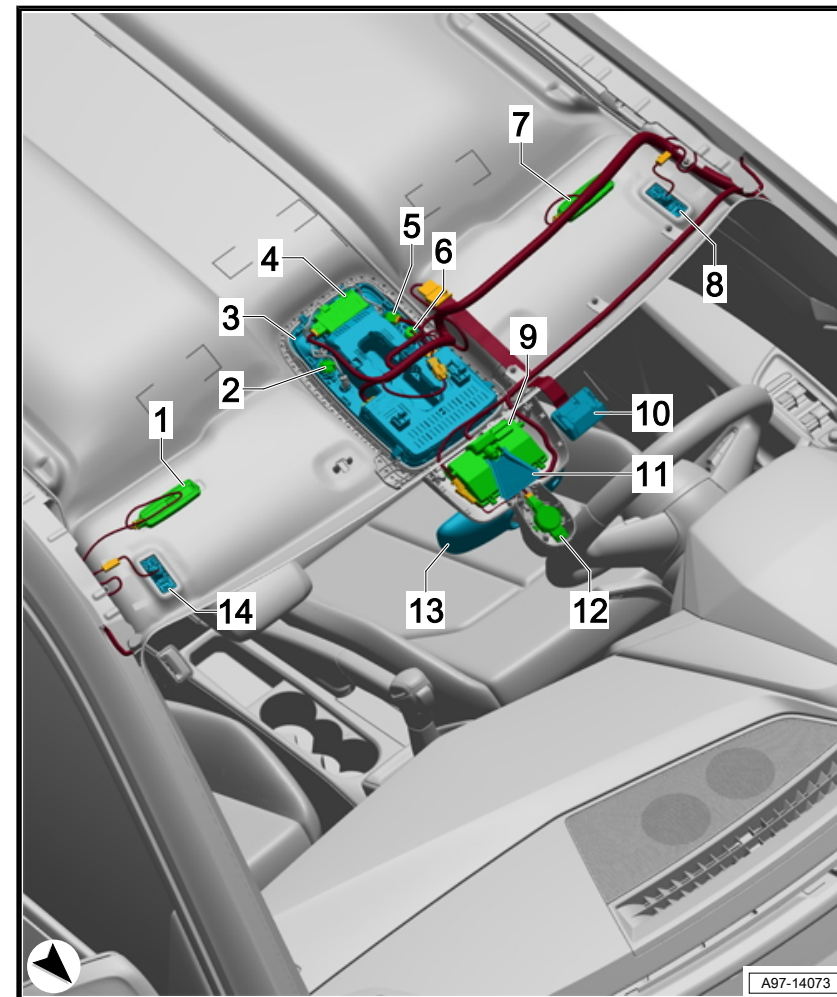

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

12 - Rain and light sensor -G397-

13 - Interior mirror -EX5-

14 - Front passenger side vanity mirror contact switch -F148-

☐ For left-hand drive models

14 - Driver side vanity mirror contact switch -F147-

☐ For right-hand drive models



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview ⇒ page 1](#)

1.3.2 Roof, part 2

1 - Roof aerial -R216-

2 - Rear interior light -WX2-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

[Back to overview ⇒ page 1](#)

1.4 Doors

in respect to the correctness of information in this document. Copyright by AUDI AG.

♦ [⇒ "1.4.1 Driver door, left-hand drive models", page 33](#)

- ◆ ⇒ ["1.4.2 Driver door, right-hand drive models", page 35](#)
- ◆ ⇒ ["1.4.3 Front passenger door, left-hand drive models", page 36](#)
- ◆ ⇒ ["1.4.4 Front passenger door, right-hand drive models", page 37](#)
- ◆ ⇒ ["1.4.5 Rear left door", page 38](#)
- ◆ ⇒ ["1.4.6 Rear right door", page 39](#)

1.4.1 Driver door, left-hand drive models



Note

For left-hand drive models



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A - 4-pin connector -T4h- , black / 4-pin connector -T4i- , black

□ For left-hand drive models

B - 27-pin connector -T27b- , black

□ For left-hand drive models

1 - Light for driver side interior door handle illumination -L219-

2 - Driver side interior locking button for central locking system -E308-

3 - Driver side exterior mirror -VX4-

4 - Central locking SAFELOCK function warning lamp -K133-

5 - Light for driver door ambient lighting -W86-

6 - Driver door control unit -J386-

7 - Front left bass loudspeaker -R21-

8 - Side airbag crash sensor on driver side -G179-

9 - Light 2 for driver door ambient lighting -W97-

10 - Exterior mirror adjuster -EX11-

11 - Driver side window regulator motor -V147-


12 - Operating unit for driver door window regulator -EX36-

13 - Driver door lock unit -VX21-

14 - Driver door exterior handle contact sensor -G415-



Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. No liability with respect to the correctness of information.

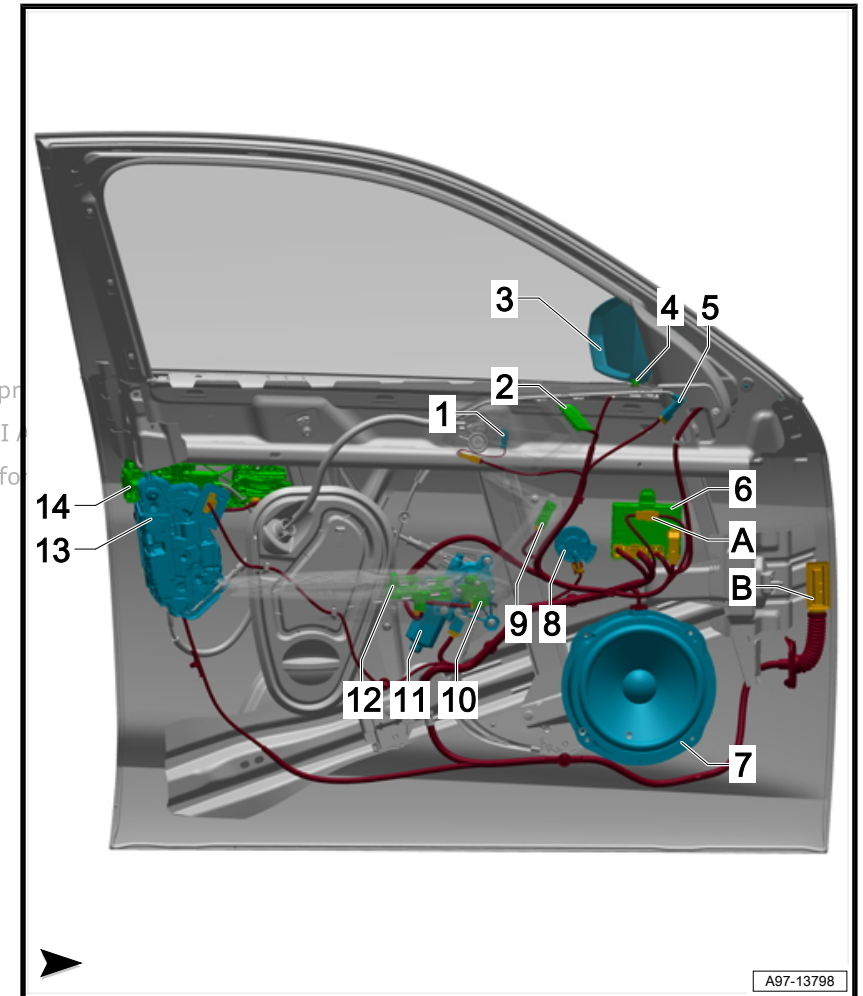

[Back to overview](#) ⇒ [page 1](#)

1.4.2 Driver door, right-hand drive models



Note

For right-hand drive models

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A - 4-pin connector -T4j- , black / 4-pin connector -T4k- , black

☐ For right-hand drive models

B - 27-pin connector -T27d- , black

☐ For right-hand drive models

1 - Light for driver door ambient lighting -W86-

2 - Central locking SAFELOCK function warning lamp -K133-

3 - Driver side exterior mirror -VX4-

4 - Driver side interior locking button for central locking system -E308-

5 - Light for driver side interior door handle illumination -L219-

6 - Light 2 for driver door ambient lighting -W97-

7 - Driver door exterior handle contact sensor -G415-

8 - Driver door lock unit -VX21-

9 - Operating unit for driver door window regulator -EX36-


10 - Driver side window regulator motor -V147-

11 - Exterior mirror adjuster -EX11-

12 - Side airbag crash sensor on driver side -G179-

13 - Front right bass loudspeaker -R23-

14 - Driver door control unit -J386-

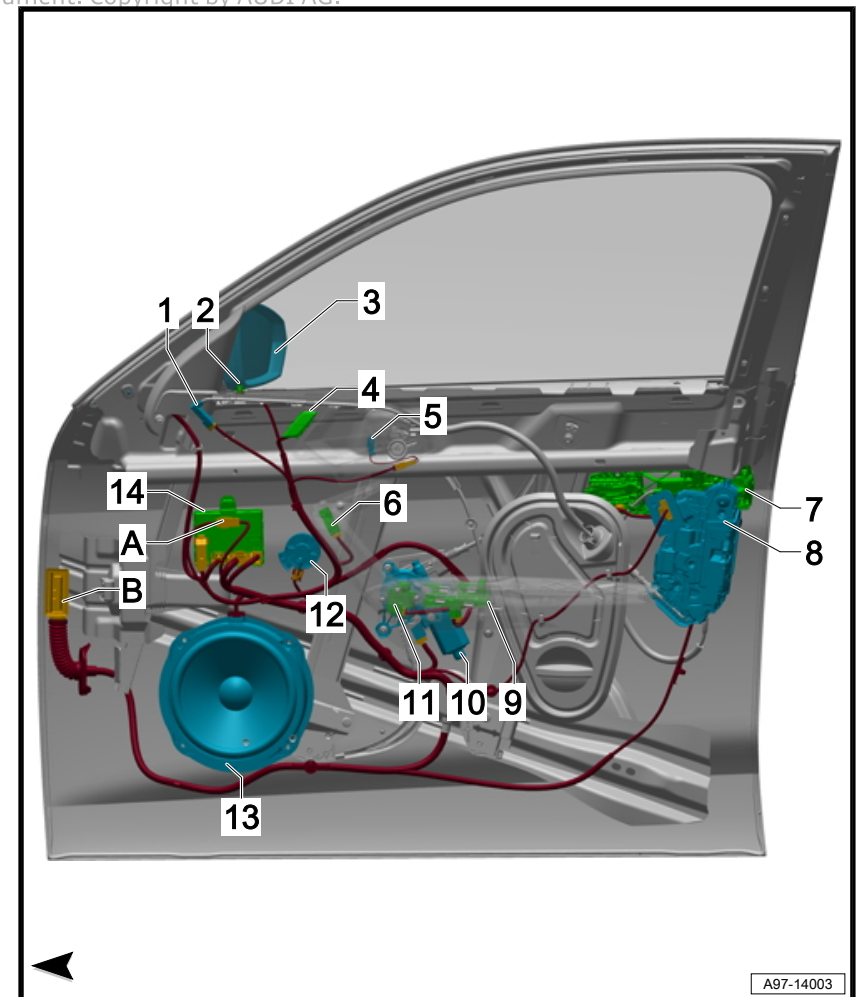

[Back to overview ⇒ page 1](#)

1.4.3 Front passenger door, left-hand drive models



Note

For left-hand drive models

A - 27-pin connector -T27d- , black

□ For left-hand drive models

B - 4-pin connector -T4j- , black / 4-pin connector -T4k- , black

□ For left-hand drive models

1 - Light for passenger door ambient lighting -W87-

2 - Passenger side exterior mirror -VX5-

3 - Light for front passenger side interior door handle illumination -L220-

4 - Front passenger door exterior handle contact sensor -G416-

5 - Front passenger door lock unit -VX22-

6 - Window regulator switch in front passenger door -EX27-

7 - Front passenger side window regulator motor -V148-

8 - Light 2 for front passenger door ambient lighting -W98-


9 - Side airbag crash sensor on front passenger side -G180-

10 - Front right bass loudspeaker -R23-

11 - Front passenger door control unit -J387-



Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG is not responsible with respect to the correctness of information in the

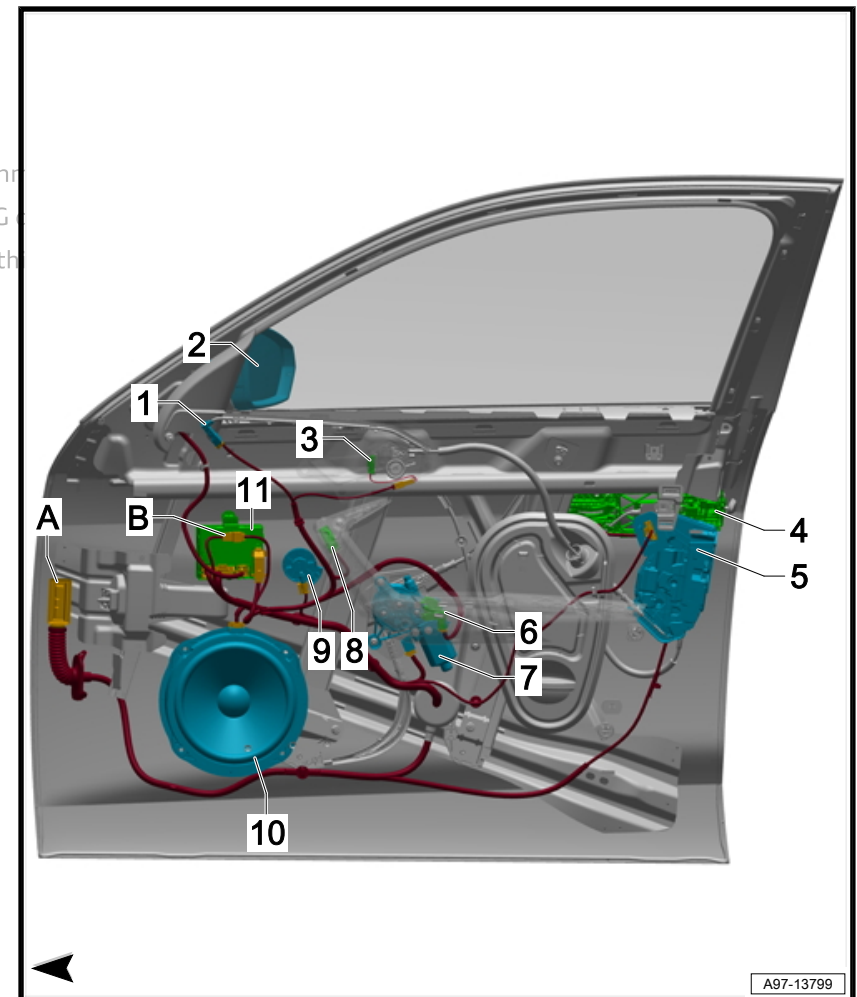

[Back to overview ⇒ page 1](#)

1.4.4 Front passenger door, right-hand drive models



Note

For right-hand drive models

A - 4-pin connector -T4h- , black / 4-pin connector -T4i- , black

□ For right-hand drive models

B - 27-pin connector -T27b- , black

□ For right-hand drive models

1 - Light for front passenger side interior door handle illumination -L220-

2 - Passenger side exterior mirror -VX5-

3 - Light for passenger door ambient lighting -W87-

4 - Front passenger door control unit -J387-

5 - Front left bass loudspeaker -R21-

6 - Side airbag crash sensor on front passenger side -G180-

7 - Light 2 for front passenger door ambient lighting -W98-

8 - Front passenger side window regulator motor -V148-


9 - Window regulator switch in front passenger door -EX27-

10 - Front passenger door lock unit -VX22-

11 - Front passenger door exterior handle contact sensor -G416-



Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. All rights reserved with respect to the correctness of information.

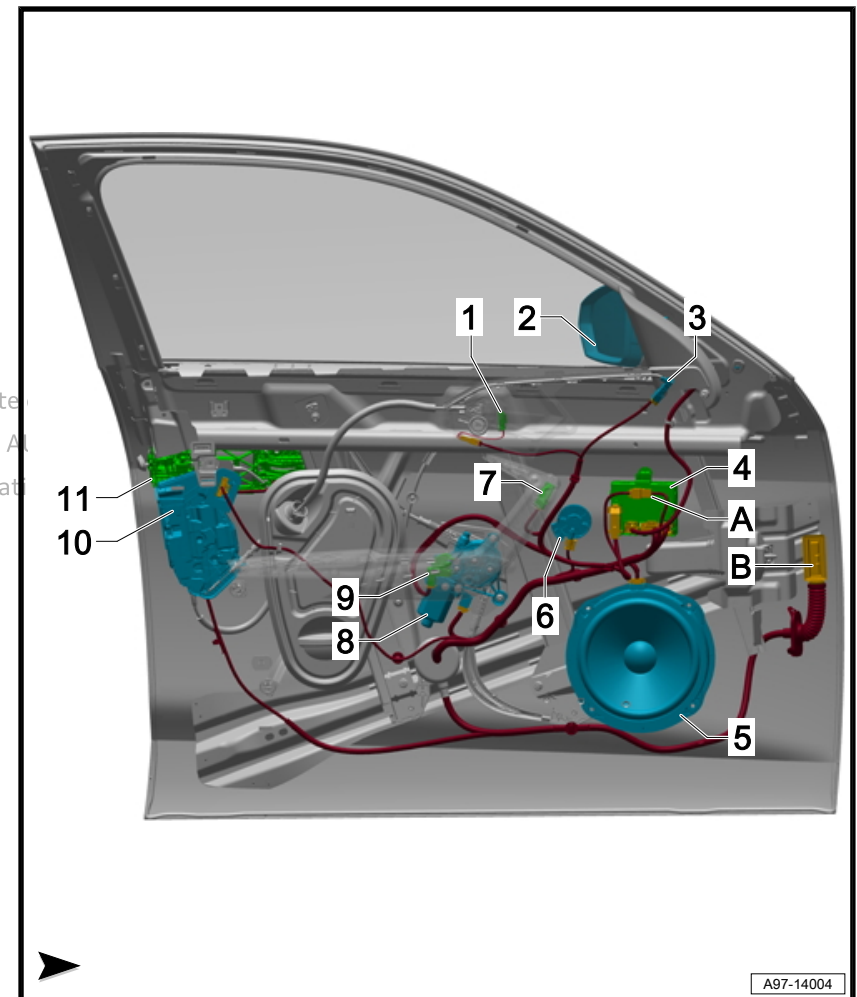

[Back to overview ⇒ page 1](#)

1.4.5 Rear left door

A - 19-pin connector -T19b- , black

B - 8-pin connector -T8s- , black/
8-pin connector -T8q- , black

1 - Light 1 for rear left door ambient lighting -L201-

2 - Control unit with rear driver side window regulator motor -J1016-

☐ For left-hand drive models

2 - Control unit with rear passenger side window regulator motor -J1017-

☐ For right-hand drive models

3 - Rear driver side window regulator button -E711-


☐ For left-hand drive models

3 - Rear passenger side window regulator button -E713-

☐ For right-hand drive models

4 - Rear left door lock unit -VX23-

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

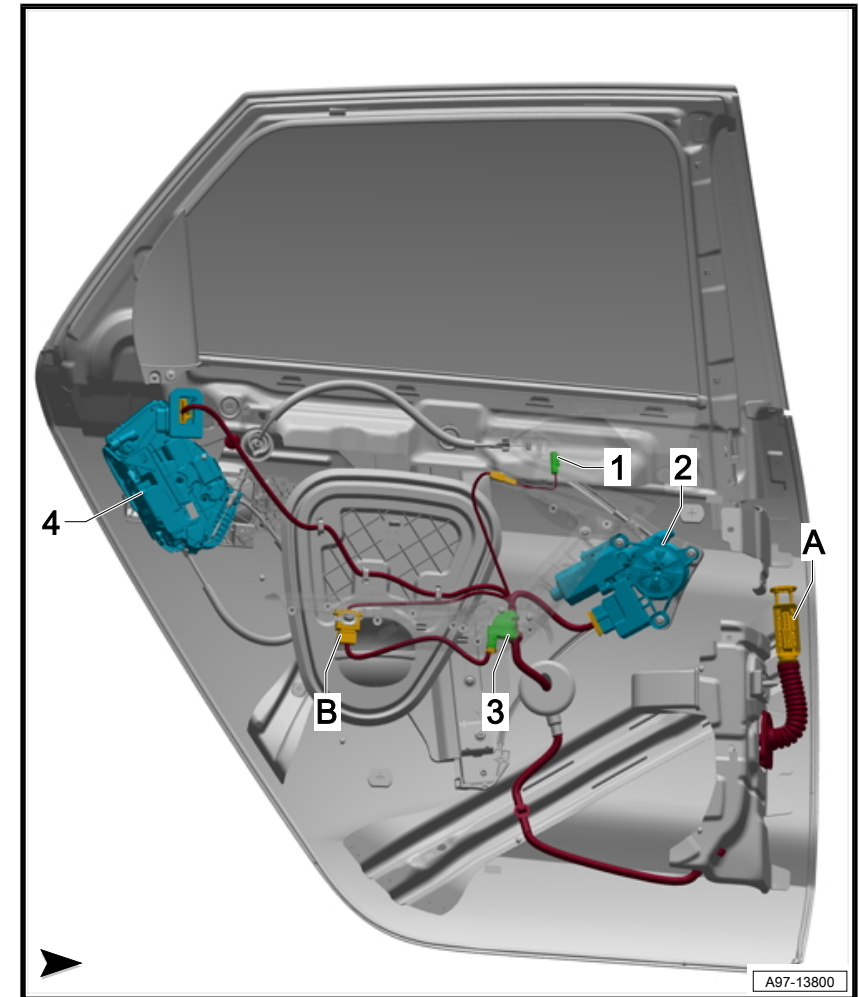

[Back to overview](#) ⇒ [page 1](#)

1.4.6 Rear right door

A - 19-pin connector -T19d- , black

B - 8-pin connector -T8r- , black/
8-pin connector -T8ah- , black

1 - Light 1 for rear right door ambient lighting -L202-

2 - Rear right door lock unit -VX24-

3 - Rear passenger side window regulator button -E713-

□ For left-hand drive models

3 - Rear driver side window regulator button -E711-

□ For right-hand drive models

4 - Control unit with rear passenger side window regulator motor -J1017-


□ For left-hand drive models

4 - Control unit with rear driver side window regulator motor -J1016-

□ For right-hand drive models



Protected by copyright
permitted unless autho
with respect to the cor

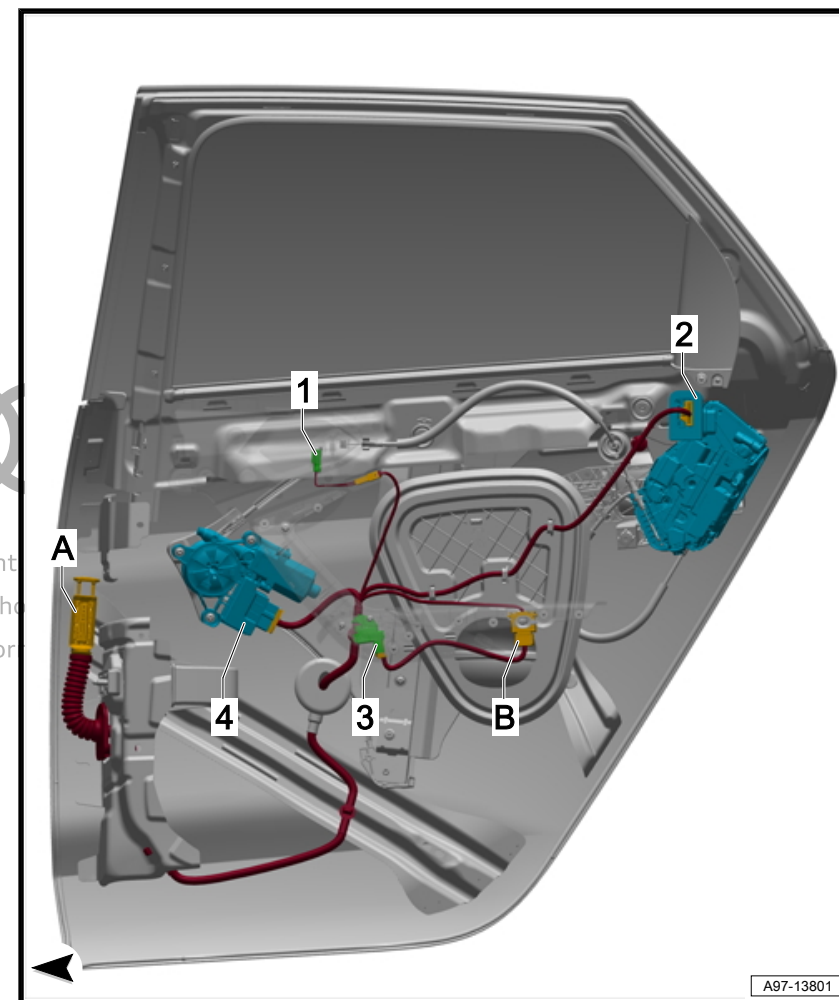

A97-13801

Back to overview ⇒ [page 1](#)

1.5 Heater and air conditioning unit

◆ ⇒ [“1.5.1 Air conditioning system, KH6, part 1”, page 40](#)

◆ ⇒ [“1.5.2 Air conditioning system, KH6, part 2”, page 42](#)

◆ ⇒ [“1.5.3 Climatronic, 9AK, part 1”, page 43](#)

◆ ⇒ [“1.5.4 Climatronic, 9AK, part 2”, page 44](#)

1.5.1 Air conditioning system, KH6, part 1



Note

For models with air conditioning system




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- 1 - Air distribution flap -VX33-
- 2 - Air recirculation flap control motor -V113-
- 3 - Fresh air blower control unit -J126-
 - ☐ For models with air conditioning system
- 4 - Evaporator output temperature sender -G263-
 - ☐ For models with air conditioning system
- 5 - Not installed



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

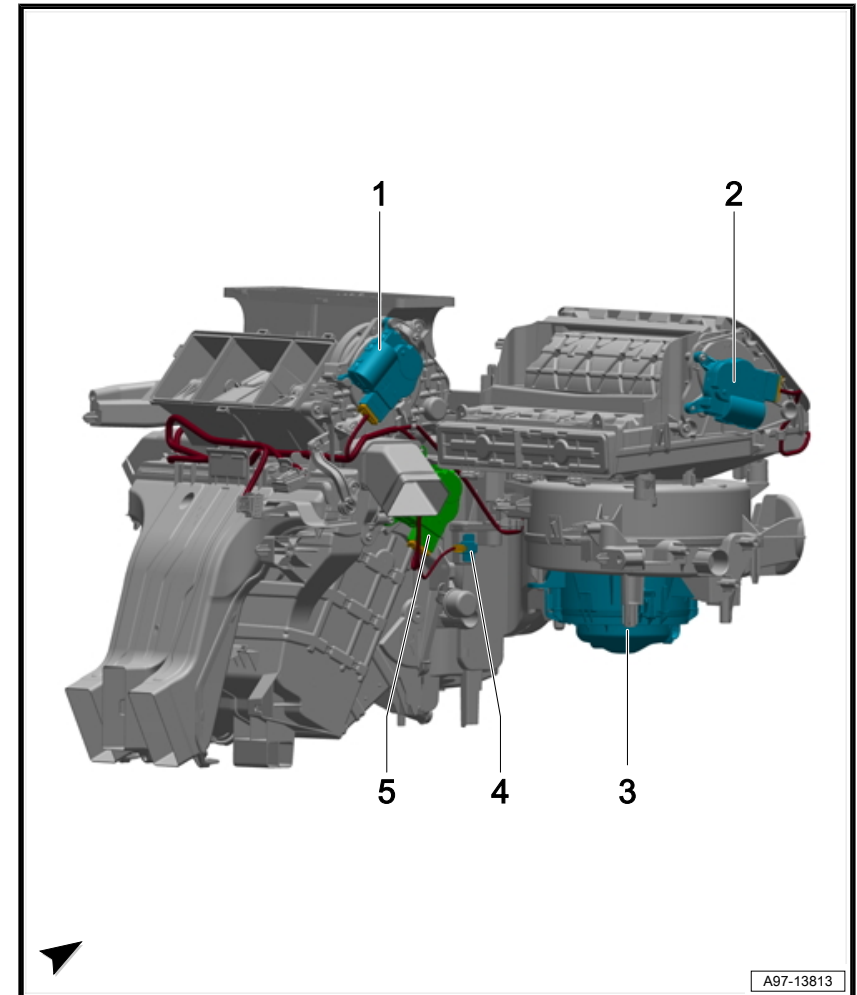

[Back to overview](#) ⇒ [page 1](#)

1.5.2 Air conditioning system, KH6, part 2



Note

For models with air conditioning system

1 - Not installed

2 - Footwell vent temperature sender -G192-


☐ For models with air conditioning system

3 - Front left temperature flap -VX34-

☐ For models with air conditioning system



Protected by copyright. Copying for private or commercial purposes, in part or permitted, unless authorised by AUDI AG. AUDI AG does not guarantee or accept with respect to the correctness of information in this document. Copyright by A

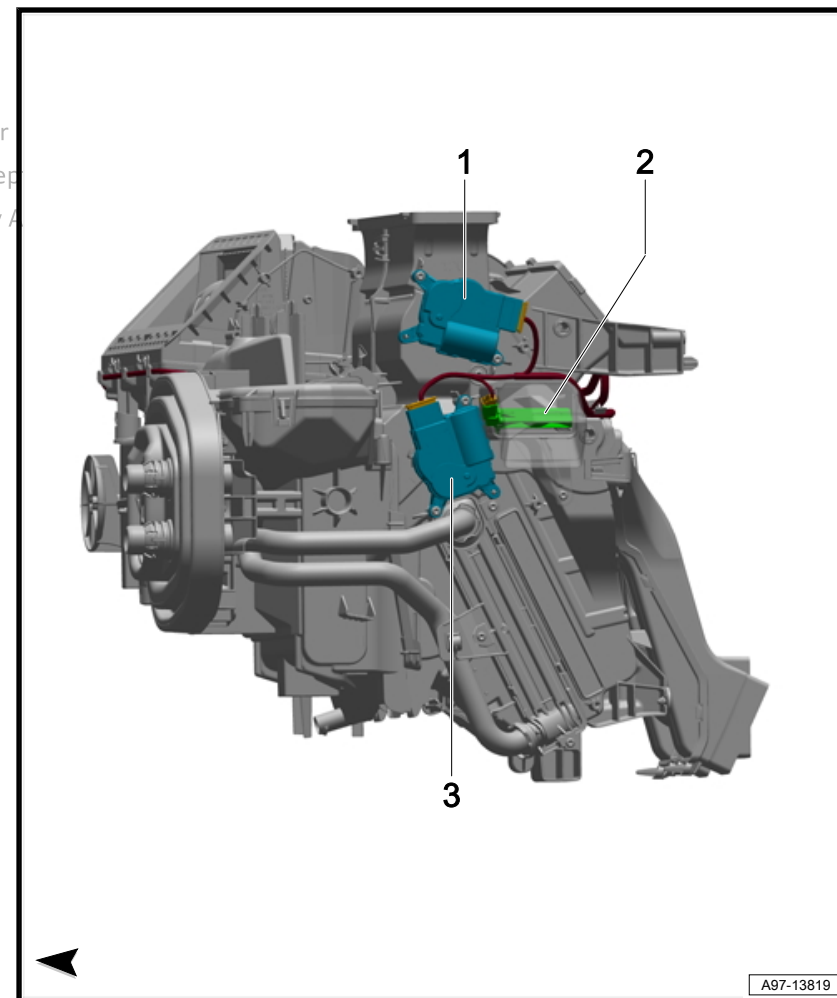

A97-13819

[Back to overview](#) ⇒ [page 1](#)

1.5.3 Climatronic, 9AK, part 1




Note

For models with Climatronic

- 1 - Air distribution flap -VX33-
- 2 - Air recirculation flap -VX52-
- 3 - Fresh air blower control unit -J126-
 - ☐ For models with Climatronic
- 4 - Evaporator output temperature sender -G263-
 - ☐ For models with Climatronic
- 5 - Front right temperature flap -VX35-



Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document.

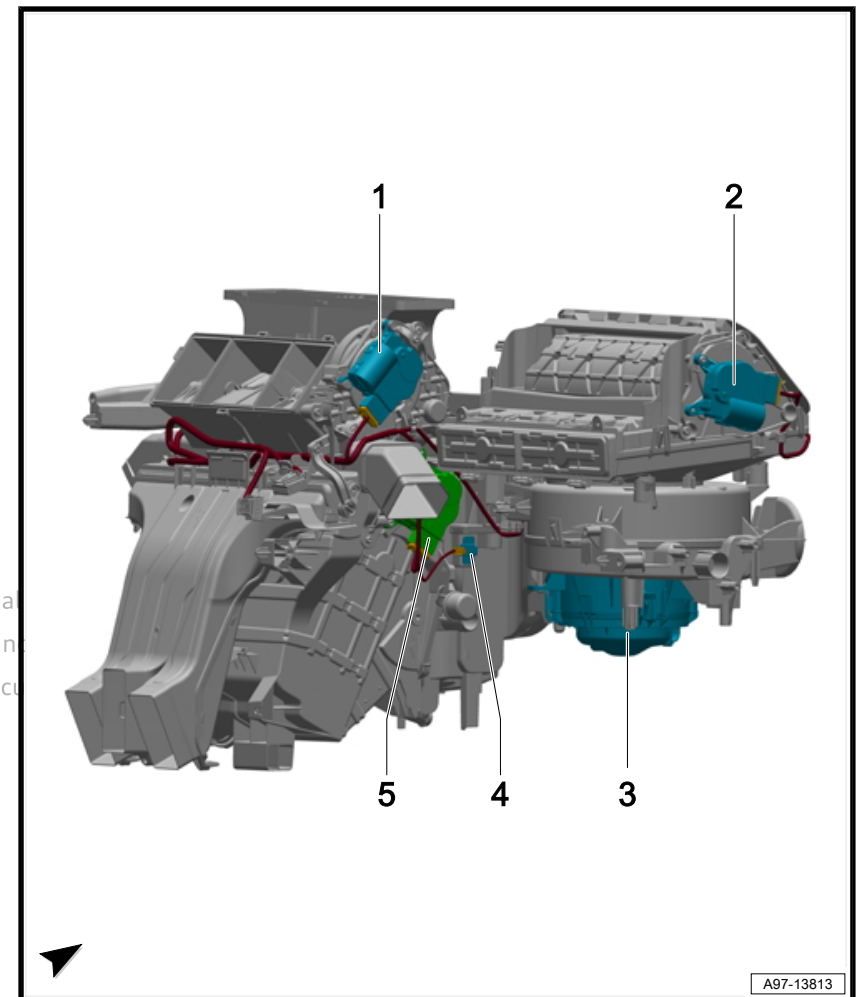

A97-13813

[Back to overview](#) ⇒ [page 1](#)

1.5.4 Climatronic, 9AK, part 2



Note

For models with Climatronic


1 - Defroster flap -VX47-

2 - Footwell vent temperature sender -G192-

☐ For models with Climatronic

3 - Front left temperature flap -VX34-

☐ For models with Climatronic

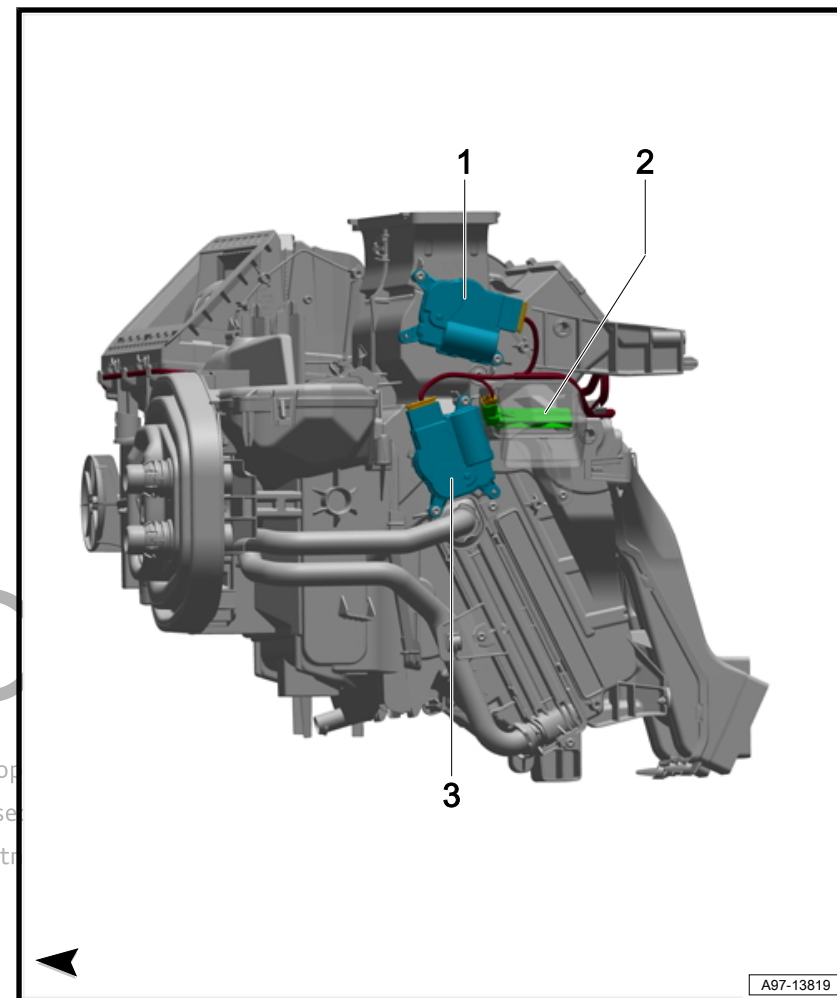

Protected by copyright. Copying is not permitted unless authorised by Audi AG with respect to the correct use of the material.

Back to overview ⇒ [page 1](#)



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.