

DTC INDEX

Corvette

ACTIVE NOISE CANCELLATION SYSTEM - DIAGNOSTIC TROUBLE CODES

ACTIVE NOISE CANCELLATION SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1277 or B127C</u>	Microphone 1/2 Input Signal

ANTILOCK BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

ANTILOCK BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B2745</u>	Traction Control Switch Circuit Short to Ground
<u>DTC C0035, C0040, C0045 or C0050</u>	Wheel Speed Sensor
<u>DTC C0110</u>	Pump Motor
<u>DTC C0131</u>	Traction Control System Pressure Circuit
<u>DTC C0161</u>	Antilock Braking System Brake Switch
<u>DTC C0179</u>	System Thermal High Malfunction
<u>DTC C0186, C0196 or C0287</u>	Lateral Acceleration Sensor/Yaw Rate/Longitudinal Acceleration Sensor
<u>DTC C0245</u>	Wheel Speed Sensor
<u>DTC C0280</u>	Stability System Active Too Long
<u>DTC C0710</u>	Steering Position Signal
<u>DTC C124F, C1250 or C1251</u>	Lateral Acceleration Sensor
<u>DTC C127F</u>	Rear Axle Control Signal Message Counter
<u>DTC P0856</u>	Traction Control Torque Request Circuit

AUTOMATIC TRANSMISSION - 6L80 - DIAGNOSTIC TROUBLE CODES

AUTOMATIC TRANSMISSION - 6L80 - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0601, P0603, P0604, or P062F</u>	DTC P0601 Control Module Read Only Memory Performance DTC P0603 Control Module Long Term Memory Reset DTC P0604 Control Module Random Access Memory Performance DTC P062F Control Module Long Term Memory Performance
<u>DTC P0634</u>	DTC P0634 Control Module Overtemperature
<u>DTC P0658 or P0659</u>	DTC P0658 Actuator High Control Circuit Group 1 Low Voltage DTC P0659 Actuator High Control Circuit Group 1 High Voltage
<u>DTC P0667, P0668, or P0669</u>	DTC P0667 Control Module Temperature Sensor Performance DTC P0668 Control Module Temperature Sensor Circuit Low

	Voltage DTC P0669 Control Module Temperature Sensor Circuit High Voltage
<u>DTC P06AC, P06AD, or P06AE</u>	DTC P06AC Control Module Power Up Temperature Sensor Performance DTC P06AD Control Module Power Up Temperature Sensor Circuit Low Voltage DTC P06AE Control Module Power Up Temperature Sensor Circuit High Voltage
<u>DTC P0711-P0713</u>	DTC P0711 Transmission Fluid Temperature Sensor Performance DTC P0712 Transmission Fluid Temperature Sensor Circuit Low Voltage DTC P0713 Transmission Fluid Temperature Sensor Circuit High Voltage
<u>DTC P0716 or P0717</u>	DTC P0716 Input Speed Sensor Performance DTC P0717 Input Speed Sensor Circuit No Signal
<u>DTC P0722 or P0723</u>	DTC P0722 Output Speed Sensor Circuit No Signal DTC P0723 Output Speed Sensor Circuit Intermittent
<u>DTC P0741 or P0742</u>	DTC P0741 Torque Converter Clutch (TCC) System - Stuck Off - Transmission Hydraulic/Mechanical Performance DTC P0742 Torque Converter Clutch (TCC) System - Stuck On - Transmission Hydraulic/Mechanical Performance
<u>DTC P0751 or P0752</u>	DTC P0751 Shift Solenoid Valve 1 Performance - Stuck Off - Transmission Hydraulic/Mechanical Performance DTC P0752 Shift Solenoid Valve 1 Performance - Stuck On - Transmission Hydraulic/Mechanical Performance
<u>DTC P0756</u>	DTC P0756 Shift Solenoid Valve 2 Performance - Stuck Off - Transmission Hydraulic/Mechanical Performance
<u>DTC P0776 or P0777</u>	DTC P0776 Pressure Control Solenoid Valve 2 - Stuck Off - Transmission Hydraulic/Mechanical Performance DTC P0777 Pressure Control Solenoid Valve 2 - Stuck On - Transmission Hydraulic/Mechanical Performance
<u>DTC P0796 or P0797</u>	DTC P0796 Pressure Control Solenoid Valve 3 - Stuck Off - Transmission Hydraulic/Mechanical Performance DTC P0797 Pressure Control Solenoid Valve 3 - Stuck On - Transmission Hydraulic/Mechanical Performance
<u>DTC P0815, P0816, P0826, or P1876</u>	DTC P0815 Upshift Switch Circuit DTC P0816 Downshift Switch Circuit DTC P0826 Up and Down Shift Switch Circuit DTC P1876 Up and Down Shift Enable Switch Circuit Low Voltage
<u>DTC P0842 or P0843</u>	DTC P0842 Transmission Fluid Pressure Switch 1 Circuit Low Voltage DTC P0843 Transmission Fluid Pressure Switch 1 Circuit High Voltage

<u>DTC P0850-P0852</u>	DTC P0850 Park/Neutral Position Switch Circuit DTC P0851 Park/Neutral Position Switch Circuit Low Voltage DTC P0852 Park/Neutral Position Switch Circuit High Voltage
<u>DTC P0872 or P0873</u>	DTC P0872 Transmission Fluid Pressure Switch 3 Circuit Low Voltage DTC P0873 Transmission Fluid Pressure Switch 3 Circuit High Voltage
<u>DTC P0877 or P0878</u>	DTC P0877 Transmission Fluid Pressure Switch 4 Circuit Low Voltage DTC P0878 Transmission Fluid Pressure Switch 4 Circuit High Voltage
<u>DTC P0961-P0963</u>	DTC P0961 Line Pressure Control Solenoid Valve Performance DTC P0962 Line Pressure Control Solenoid Valve Control Circuit Low Voltage DTC P0963 Line Pressure Control Solenoid Valve Control Circuit High Voltage
<u>DTC P0965-P0967</u>	DTC P0965 Pressure Control Solenoid Valve 2 Performance DTC P0966 Pressure Control Solenoid Valve 2 Control Circuit Low Voltage DTC P0967 Pressure Control Solenoid Valve 2 Control Circuit High Voltage
<u>DTC P0969-P0971</u>	DTC P0969 Pressure Control Solenoid Valve 3 Performance DTC P0970 Pressure Control Solenoid Valve 3 Control Circuit Low Voltage DTC P0971 Pressure Control Solenoid Valve 3 Control Circuit High Voltage
<u>DTC P0973 or P0974</u>	DTC P0973 Shift Solenoid Valve 1 Control Circuit Low Voltage DTC P0974 Shift Solenoid Valve 1 Control Circuit High Voltage
<u>DTC P0976 or P0977</u>	DTC P0976 Shift Solenoid Valve 2 Control Circuit Low Voltage DTC P0977 Shift Solenoid Valve 2 Control Circuit High Voltage
<u>DTC P0989 or P0990</u>	DTC P0989 Transmission Fluid Pressure Switch 5 Circuit Low Voltage DTC P0990 Transmission Fluid Pressure Switch 5 Circuit High Voltage
<u>DTC P175F</u>	DTC P175F Acceleration Sensor Signal Message Counter Incorrect
<u>DTC P1761</u>	DTC P1761 Up and Down Shift Switch Signal Message Counter Incorrect
<u>DTC P182E or P1915</u>	DTC P182E Internal Mode Switch Indicates - Invalid Range DTC P1915 Internal Mode Switch Does Not Indicate Park/Neutral During Start
<u>DTC P2714 or P2715</u>	DTC P2714 Pressure Control Solenoid Valve 4 - Stuck Off - Transmission Hydraulic/Mechanical Performance DTC P2715 Pressure Control Solenoid Valve 4 - Stuck On - Transmission Hydraulic/Mechanical Performance

<u>DTC P2719-P2721</u>	DTC P2719 Pressure Control Solenoid 4 System Performance DTC P2720 Pressure Control Solenoid 4 Control Circuit Low Voltage DTC P2721 Pressure Control Solenoid 4 Control Circuit High Voltage
<u>DTC P2723 or P2724</u>	DTC P2723 Pressure Control Solenoid Valve 5 - Stuck Off - Transmission Hydraulic/Mechanical Performance DTC P2724 Pressure Control Solenoid Valve 5 - Stuck On - Transmission Hydraulic/Mechanical Performance
<u>DTC P2728-P2730</u>	DTC P2728 Pressure Control (PC) Solenoid Valve 5 Performance DTC P2729 Pressure Control (PC) Solenoid Valve 5 Control Circuit Low Voltage DTC P2730 Pressure Control (PC) Solenoid Valve 5 Control Circuit High Voltage
<u>DTC P2762, P2763, or P2764</u>	DTC P2762 Torque Converter Clutch (TCC) Pressure Control Solenoid Valve Performance DTC P2763 Torque Converter Clutch (TCC) Pressure Control Solenoid Valve Control Circuit High Voltage DTC P2764 Torque Converter Clutch (TCC) Pressure Control Solenoid Valve Control Circuit Low Voltage

BATTERY, CHARGING SYSTEM AND STARTING SYSTEM - DIAGNOSTIC TROUBLE CODES

BATTERY, CHARGING SYSTEM AND STARTING SYSTEM - DIAGNOSTIC TROUBLE CODES

<u>DTC</u>	<u>Description</u>
<u>DTC B1325, B1327, B1328, B1330, B1517, C0800, C0805, C0895, C0899, C0900, P0560, P0562, P0563, P129B or P129C</u>	Power Circuit Voltage
<u>DTC B1516</u>	Battery Current Sensor
<u>DTC B151A</u>	Battery Capacity Performance
<u>DTC P0615, P0616 or P0617</u>	Starter Relay
<u>DTC P0621</u>	Generator L-Terminal
<u>DTC P0622</u>	Generator F-Terminal

BOLTED EXTERIOR BODY PANELS AND CLOSURES - DIAGNOSTIC TROUBLE CODES

BOLTED EXTERIOR BODY PANELS AND CLOSURES - DIAGNOSTIC TROUBLE CODES

<u>DTC</u>	<u>Description</u>
<u>DTC B3006</u>	Hood Ajar Circuit

SYSTEM - DIAGNOSTIC TROUBLE CODES

CELLULAR SYSTEM, ENTERTAINMENT SYSTEM, AND NAVIGATION SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0997</u>	Auxiliary Electronic Control Unit
<u>DTC B1024</u>	Circuit Board Temperature Sensor (Human Machine Interface Control Module)
<u>DTC B1024</u>	Circuit Board Temperature Sensor (Audio Amplifier)
<u>DTC B1025-B1135</u>	Audio Output 1, 3, 5, 6, 7, 8, 9 (UQA)
<u>DTC B1025-B1135</u>	Audio Output 1, 3, 5, 6, 7, 8, 9, 10, 11 (UQS)
<u>DTC B124F</u>	Universal Serial Bus (USB) Programmin
<u>DTC B124B</u>	USB 1
<u>DTC B124C</u>	USB 2
<u>DTC B125A</u>	Antenna 1
<u>DTC B125B</u>	Antenna 2
<u>DTC B125C</u>	Satellite Antenna
<u>DTC B125E</u>	Digital Audio Broadcast (DAB) Circuit
<u>DTC B1271</u>	Theft Protection Active
<u>DTC B1277</u>	Microphone 1
<u>DTC B127E</u>	Front Video Display
<u>DTC B1446 or B1447</u>	Backup Power Source
<u>DTC B2455</u>	Cellular Phone Microphone
<u>DTC B2462</u>	Global Positioning System (with UE1)
<u>DTC B2462</u>	Global Positioning System (without UE1)
<u>DTC B2470</u>	Cellular Phone Antenna
<u>DTC B2476 or B2482</u>	Cellular Phone Select Service Switch
<u>DTC B2485</u>	Wireless Communication Antenna

CRUISE CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

CRUISE CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C or P162C</u>	Cruise Control Malfunction
<u>DTC P0571</u>	Cruise Control Brake Switch
<u>DTC P0572 or P0573</u>	Brake Switch Circuit 1
<u>DTC P0575</u>	Cruise Control Switch Signal Message Counter
<u>DTC P0703</u>	Brake Switch Signal Message Counter

DATA COMMUNICATION SYSTEM - DIAGNOSTIC TROUBLE CODES

DATA COMMUNICATION SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1000</u>	Electronic Control Unit
<u>DTC B1001</u>	Option Configuration
<u>DTC B101D</u>	Electronic Control Unit Hardware
<u>DTC B101E</u>	Electronic Control Unit Software
<u>DTC C056D</u>	Electronic Control Unit Hardware
<u>DTC C056E</u>	Electronic Control Unit Software
<u>DTC C078A</u>	Tire Pressure Indicator Module
<u>DTC P0601-P0606, P060A, P062F or P262B</u>	Control Module Memory
<u>DTC U0020</u>	Low Speed CAN Bus
<u>DTC U0028</u>	MOST Bus
<u>DTC U0029</u>	MOST Bus Performance
<u>DTC U0073 or U2100</u>	Control Module Communication Bus A/CAN Bus
<u>DTC U0074</u>	Control Module Communication Bus B (Chassis Expansion Bus)
<u>DTC U0074</u>	Control Module Communication Powertrain Expansion CAN Bus (Powertrain Expansion Bus)
<u>DTC U0077</u>	Control Module Communication Chassis Expansion CAN Bus
<u>DTC U0078</u>	Control Module Communication Low Speed CAN Bus
<u>DTC U0100-U02FF</u>	Control Module Error
<u>DTC U0300-U0336</u>	Control Module Error
<u>DTC U0400-U05FF</u>	Control Module Error
<u>DTC U1500-U15FF</u>	Control Module Error
<u>DTC U1804</u>	Lost Communication with Inside Rearview Mirror Control Module
<u>DTC U1814</u>	Powertrain Wake-Up Communication
<u>DTC U18A2</u>	Lost Communication with Fuel Pump Driver Control Module
<u>DTC U18B9-U18BF</u>	Primary/Secondary High Speed CAN Bus Subnet
<u>DTC U2098</u>	MOST Communication Enable Circuit
<u>DTC U2099</u>	High Speed Communication Enable
<u>DTC U2616</u>	Fuel Pump Driver Control Module

ENGINE CONTROLS/FUEL - 6.2L - DIAGNOSTIC TROUBLE CODES

ENGINE CONTROLS/FUEL - 6.2L - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0010, P2088, or P2089</u>	DTC P0010 Camshaft Position Actuator Solenoid Valve Control Circuit DTC P2088 Camshaft Position Actuator Solenoid Valve Control Circuit Low Voltage DTC P2089 Camshaft Position Actuator Solenoid Valve Control Circuit High Voltage
<u>DTC P0011</u>	DTC P0011 Intake Camshaft Position System Performance
<u>DTC P0016</u>	DTC P0016 Crankshaft Position - Camshaft Position Not Plausible
<u>DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, or P0161</u>	DTC P0030 HO2S Heater Control Circuit Bank 1 Sensor 1 DTC P0031 HO2S Heater Control Circuit Low Voltage Bank 1 Sensor 1 DTC P0032 HO2S Heater Control Circuit High Voltage Bank 1 Sensor 1 DTC P0036 HO2S Heater Control Circuit Bank 1 Sensor 2 DTC P0037 HO2S Heater Control Circuit Low Voltage Bank 1 Sensor 2 DTC P0038 HO2S Heater Control Circuit High Voltage Bank 1 Sensor 2 DTC P0050 HO2S Heater Control Circuit Bank 2 Sensor 1 DTC P0051 HO2S Heater Control Circuit Low Voltage Bank 2 Sensor 1 DTC P0052 HO2S Heater Control Circuit High Voltage Bank 2 Sensor 1 DTC P0053 HO2S Heater Resistance Bank 1 Sensor 1 DTC P0054 HO2S Heater Resistance Bank 1 Sensor 2 DTC P0056 HO2S Heater Control Circuit Bank 2 Sensor 2 DTC P0057 HO2S Heater Control Circuit Low Voltage Bank 2 Sensor 2 DTC P0058 HO2S Heater Control Circuit High Voltage Bank 2 Sensor 2 DTC P0059 HO2S Heater Resistance Bank 2 Sensor 1 DTC P0060 HO2S Heater Resistance Bank 2 Sensor 2 DTC P0135 HO2S Heater Performance Bank 1 Sensor 1 DTC P0141 HO2S Heater Performance Bank 1 Sensor 2 DTC P0155 HO2S Heater Performance Bank 2 Sensor 1 DTC P0161 HO2S Heater Performance Bank 2 Sensor 2
<u>DTC P0068 or P1101</u>	DTC P0068 Throttle Body Air Flow Performance DTC P1101 Intake Air Flow System Performance
<u>DTC P0089, P228C, or P228D</u>	DTC P0089 Fuel Pressure Regulator Performance DTC P228C Fuel Pressure Regulator Control Performance - Low Pressure DTC P228D Fuel Pressure Regulator Control Performance - High Pressure

<u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>	DTC P0090 Fuel Pressure Regulator Control Circuit DTC P0091 Fuel Pressure Regulator Control Circuit Low Voltage DTC P0092 Fuel Pressure Regulator Control Circuit High Voltage DTC P00C8 Fuel Pressure Regulator High Control Circuit Open DTC P00C9 Fuel Pressure Regulator High Control Circuit Low Voltage DTC P00CA Fuel Pressure Regulator High Control Circuit High Voltage
<u>DTC P0096 or P0111</u>	DTC P0096 Intake Air Temperature (IAT) Sensor 2 Performance DTC P0111 Intake Air Temperature (IAT) Sensor 1 Performance
<u>DTC P0097, P0098, or P0099</u>	DTC P0097 Intake Air Temperature (IAT) Sensor 2 Circuit Low Voltage DTC P0098 Intake Air Temperature (IAT) Sensor 2 Circuit High Voltage DTC P0099 Intake Air Temperature (IAT) Sensor 2 Circuit Intermittent
<u>DTC P00C6</u>	DTC P00C6 Fuel Rail Pressure Low During Engine Cranking
<u>DTC P00F4-P00F6</u>	DTC P00F4 Intake Air Humidity Sensor Circuit Low Voltage DTC P00F5 Intake Air Humidity Sensor Circuit High Voltage DTC P00F6 Intake Air Humidity Sensor Circuit Erratic
<u>DTC P0101</u>	DTC P0101 Mass Air Flow (MAF) Sensor Performance
<u>DTC P0102 or P0103</u>	DTC P0102 Mass Air Flow (MAF) Sensor Circuit Low Frequency DTC P0103 Mass Air Flow (MAF) Sensor Circuit High Frequency
<u>DTC P0106</u>	DTC P0106 Manifold Absolute Pressure (MAP) Sensor Performance
<u>DTC P0107 or P0108</u>	DTC P0107 Manifold Absolute Pressure (MAP) Sensor Circuit Low Voltage DTC P0108 Manifold Absolute Pressure (MAP) Sensor Circuit High Voltage
<u>DTC P0112, P0113, or P0114</u>	DTC P0112 Intake Air Temperature (IAT) Sensor 1 Circuit Low Voltage DTC P0113 Intake Air Temperature (IAT) Sensor 1 Circuit High Voltage DTC P0114 Intake Air Temperature (IAT) Sensor 1 Circuit Intermittent
<u>DTC P0116</u>	DTC P0116 Engine Coolant Temperature (ECT) Sensor Performance
<u>DTC P0117, P0118, or P0119</u>	DTC P0117 Engine Coolant Temperature (ECT) Sensor Circuit Low Voltage DTC P0118 Engine Coolant Temperature (ECT) Sensor Circuit High Voltage DTC P0119 Engine Coolant Temperature (ECT) Sensor Circuit Intermittent
<u>DTC P0121-P0123, P0222,</u>	DTC P0121 Throttle Position Sensor 1 Performance

<u>P2135</u>	DTC P0123 Throttle Position Sensor 1 Circuit High Voltage DTC P0222 Throttle Position Sensor 2 Circuit Low Voltage DTC P0223 Throttle Position Sensor 2 Circuit High Voltage DTC P16A0 Sensor Communication Circuit Low Voltage DTC P16A1 Sensor Communication Circuit High Voltage DTC P16A2 Sensor Communication Circuit Performance DTC P2135 Throttle Position Sensors 1-2 Not Plausible
<u>DTC P0128</u>	DTC P0128 Engine Coolant Temperature (ECT) Below Thermostat Regulating Temperature
<u>DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158</u>	DTC P0131 HO2S Circuit Low Voltage Bank 1 Sensor 1 DTC P0132 HO2S Circuit High Voltage Bank 1 Sensor 1 DTC P0137 HO2S Circuit Low Voltage Bank 1 Sensor 2 DTC P0138 HO2S Circuit High Voltage Bank 1 Sensor 2 DTC P0151 HO2S Circuit Low Voltage Bank 2 Sensor 1 DTC P0152 HO2S Circuit High Voltage Bank 2 Sensor 1 DTC P0157 HO2S Circuit Low Voltage Bank 2 Sensor 2 DTC P0158 HO2S Circuit High Voltage Bank 2 Sensor 2
<u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P015A-P015D, or P2270- P2273</u>	DTC P0133 HO2S Slow Response Bank 1 Sensor 1 DTC P013A HO2S Slow Response Rich to Lean Bank 1 Sensor 2 DTC P013B HO2S Slow Response Lean to Rich Bank 1 Sensor 2 DTC P013C HO2S Slow Response Rich to Lean Bank 2 Sensor 2 DTC P013D HO2S Slow Response Lean to Rich Bank 2 Sensor 2 DTC P013E HO2S Delayed Response Rich to Lean Bank 1 Sensor 2 DTC P013F HO2S Delayed Response Lean to Rich Bank 1 Sensor 2 DTC P014A HO2S Delayed Response Rich to Lean Bank 2 Sensor 2 DTC P014B HO2S Delayed Response Lean to Rich Bank 2 Sensor 2 DTC P0153 HO2S Slow Response Bank 2 Sensor 1 DTC P015A HO2S Delayed Response Rich to Lean Bank 1 Sensor 1 DTC P015B HO2S Delayed Response Lean to Rich Bank 1 Sensor 1 DTC P015C HO2S Delayed Response Rich to Lean Bank 2 Sensor 1 DTC P015D HO2S Delayed Response Lean to Rich Bank 2 Sensor 1 DTC P2270 HO2S Signal Stuck Lean Bank 1 Sensor 2 DTC P2271 HO2S Signal Stuck Rich Bank 1 Sensor 2 DTC P2272 HO2S Signal Stuck Lean Bank 2 Sensor 2 DTC P2273 HO2S Signal Stuck Rich Bank 2 Sensor 2

<u>DTC P0171, P0172, P0174, or P0175</u>	DTC P0171 Fuel Trim System Lean Bank 1 DTC P0172 Fuel Trim System Rich Bank 1 DTC P0174 Fuel Trim System Lean Bank 2 DTC P0175 Fuel Trim System Rich Bank 2
<u>DTC P0178 or P0179</u>	DTC P0178 Fuel Composition Sensor Circuit Low Frequency DTC P0179 Fuel Composition Sensor Circuit High Frequency
<u>DTC P018B-P018D</u>	DTC P018B Fuel Pressure Sensor Performance DTC P018C Fuel Pressure Sensor Circuit Low Voltage DTC P018D Fuel Pressure Sensor Circuit High Voltage
<u>DTC P0191</u>	DTC P0191 Fuel Rail Pressure Sensor Performance
<u>DTC P0192 or P0193</u>	DTC P0192 Fuel Rail Pressure Sensor Circuit Low Voltage DTC P0193 Fuel Rail Pressure Sensor Circuit High Voltage
<u>DTC P0197 or P0198</u>	DTC P0197 Engine Oil Temperature (EOT) Sensor Circuit Low Voltage DTC P0198 Engine Oil Temperature (EOT) Sensor Circuit High Voltage
<u>DTC P0201-P0208, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P0279, P0280, P0282, or P0283</u>	DTC P0201 Cylinder 1 Injector Control Circuit DTC P0202 Cylinder 2 Injector Control Circuit DTC P0203 Cylinder 3 Injector Control Circuit DTC P0204 Cylinder 4 Injector Control Circuit DTC P0205 Cylinder 5 Injector Control Circuit DTC P0206 Cylinder 6 Injector Control Circuit DTC P0207 Cylinder 7 Injector Control Circuit DTC P0208 Cylinder 8 Injector Control Circuit DTC P0261 Cylinder 1 Injector Control Circuit Low Voltage DTC P0262 Cylinder 1 Injector Control Circuit High Voltage DTC P0264 Cylinder 2 Injector Control Circuit Low Voltage DTC P0265 Cylinder 2 Injector Control Circuit High Voltage DTC P0267 Cylinder 3 Injector Control Circuit Low Voltage DTC P0268 Cylinder 3 Injector Control Circuit High Voltage DTC P0270 Cylinder 4 Injector Control Circuit Low Voltage DTC P0271 Cylinder 4 Injector Control Circuit High Voltage DTC P0273 Cylinder 5 Injector Control Circuit Low Voltage DTC P0274 Cylinder 5 Injector Control Circuit High Voltage DTC P0276 Cylinder 6 Injector Control Circuit Low Voltage DTC P0277 Cylinder 6 Injector Control Circuit High Voltage DTC P0279 Cylinder 7 Injector Control Circuit Low Voltage DTC P0280 Cylinder 7 Injector Control Circuit High Voltage DTC P0282 Cylinder 8 Injector Control Circuit Low Voltage DTC P0283 Cylinder 8 Injector Control Circuit High Voltage
<u>DTC P0231, P0232, or P023F</u>	DTC P0231 Fuel Pump Control Circuit Low Voltage DTC P0232 Fuel Pump Control Circuit High Voltage DTC P023F Fuel Pump Control Circuit
<u>DTC P0300-P0308</u>	DTC P0300 Engine Misfire Detected DTC P0301 Cylinder 1 Misfire Detected DTC P0302 Cylinder 2 Misfire Detected

	DTC P0303 Cylinder 3 Misfire Detected DTC P0304 Cylinder 4 Misfire Detected DTC P0305 Cylinder 5 Misfire Detected DTC P0306 Cylinder 6 Misfire Detected DTC P0307 Cylinder 7 Misfire Detected DTC P0308 Cylinder 8 Misfire Detected
<u>DTC P0315</u>	DTC P0315 Crankshaft Position System Variation Not Learned
<u>DTC P0324, P0326, P0331, P06B6, or P06B7</u>	DTC P0324 Knock Sensor System Performance DTC P0326 Knock Sensor Performance Bank 1 DTC P0331 Knock Sensor Performance Bank 2 DTC P06B6 Control Module Knock Sensor Processor 1 Performance DTC P06B7 Control Module Knock Sensor Processor 2 Performance
<u>DTC P0325, P0327, P0328, P0330, P0332, or P0333</u>	DTC P0325 Knock Sensor Circuit Bank 1 DTC P0327 Knock Sensor Circuit Low Voltage Bank 1 DTC P0328 Knock Sensor Circuit High Voltage Bank 1 DTC P0330 Knock Sensor Circuit Bank 2 DTC P0332 Knock Sensor Circuit Low Voltage Bank 2 DTC P0333 Knock Sensor Circuit High Voltage Bank 2
<u>DTC P0335 or P0336</u>	DTC P0335 Crankshaft Position Sensor Circuit DTC P0336 Crankshaft Position Sensor Performance
<u>DTC P0340 or P0341</u>	DTC P0340 Camshaft Position Sensor Circuit DTC P0341 Camshaft Position Sensor Performance
<u>DTC P0351-P0358, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, P2316, P2318, P2319, P2321, or P2322</u>	DTC P0351 Ignition Coil 1 Control Circuit DTC P0352 Ignition Coil 2 Control Circuit DTC P0353 Ignition Coil 3 Control Circuit DTC P0354 Ignition Coil 4 Control Circuit DTC P0355 Ignition Coil 5 Control Circuit DTC P0356 Ignition Coil 6 Control Circuit DTC P0357 Ignition Coil 7 Control Circuit DTC P0358 Ignition Coil 8 Control Circuit DTC P2300 Ignition Coil 1 Control Circuit Low Voltage DTC P2301 Ignition Coil 1 Control Circuit High Voltage DTC P2303 Ignition Coil 2 Control Circuit Low Voltage DTC P2304 Ignition Coil 2 Control Circuit High Voltage DTC P2306 Ignition Coil 3 Control Circuit Low Voltage DTC P2307 Ignition Coil 3 Control Circuit High Voltage DTC P2309 Ignition Coil 4 Control Circuit Low Voltage DTC P2310 Ignition Coil 4 Control Circuit High Voltage DTC P2312 Ignition Coil 5 Control Circuit Low Voltage DTC P2313 Ignition Coil 5 Control Circuit High Voltage DTC P2315 Ignition Coil 6 Control Circuit Low Voltage DTC P2316 Ignition Coil 6 Control Circuit High Voltage DTC P2318 Ignition Coil 7 Control Circuit Low Voltage DTC P2319 Ignition Coil 7 Control Circuit High Voltage

	DTC P2322 Ignition Coil 8 Control Circuit High Voltage
<u>DTC P0420 or P0430</u>	DTC P0420 Catalyst System Low Efficiency DTC P0430 Catalyst System Low Efficiency Bank 2
<u>DTC P0442</u>	DTC P0442 Evaporative Emission (EVAP) System Small Leak Detected
<u>DTC P0443, P0458, or P0459</u>	DTC P0443 Evaporative Emission (EVAP) Purge Solenoid Valve Control Circuit DTC P0458 Evaporative Emission (EVAP) Purge Solenoid Valve Control Circuit Low Voltage DTC P0459 Evaporative Emission (EVAP) Purge Solenoid Valve Control Circuit High Voltage
<u>DTC P0446</u>	DTC P0446 Evaporative Emission (EVAP) Vent System Performance
<u>DTC P0449, P0498, or P0499</u>	DTC P0449 Evaporative Emission (EVAP) Vent Solenoid Valve Control Circuit DTC P0498 Evaporative Emission (EVAP) Vent Solenoid Valve Control Circuit Low Voltage DTC P0499 Evaporative Emission (EVAP) Vent Solenoid Valve Control Circuit High Voltage
<u>DTC P0451-P0454</u>	DTC P0451 Fuel Tank Pressure Sensor Performance DTC P0452 Fuel Tank Pressure Sensor Circuit Low Voltage DTC P0453 Fuel Tank Pressure Sensor Circuit High Voltage DTC P0454 Fuel Tank Pressure Sensor Circuit Intermittent
<u>DTC P0455</u>	DTC P0455 Evaporative Emission (EVAP) System Large Leak Detected
<u>DTC P0496</u>	DTC P0496 Evaporative Emission (EVAP) System Flow During Non-Purge
<u>DTC P0506 or P0507</u>	DTC P0506 Idle Speed Low DTC P0507 Idle Speed High
<u>DTC P050D</u>	DTC P050D Cold Start Rough Idle
<u>DTC P057B-P057D</u>	DTC P057B Brake Pedal Position Sensor Performance DTC P057C Brake Pedal Position Sensor Circuit Low Voltage DTC P057D Brake Pedal Position Sensor Circuit High Voltage
<u>DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B (ECM)</u>	DTC P0601 Control Module Read Only Memory Performance DTC P0602 Control Module Not Programmed DTC P0603 Control Module Long Term Memory Reset DTC P0604 Control Module Random Access Memory Performance DTC P0606 Control Module Processor Performance DTC P062B Control Module Fuel Injector Control Performance DTC P062F Control Module Long Term Memory Performance DTC P0630 VIN Not Programmed or Mismatched - Engine Control Module (ECM) DTC P16F3 Control Module Redundant Memory Performance DTC P262B Control Module Power Off Timer Performance

<u>DTC P0601-P0606, P060A, P062F, or P262B (Chassis Control Module)</u>	DTC P0601 Control Module Read Only Memory Performance DTC P0602 Control Module Not Programmed DTC P0603 Control Module Long Term Memory Reset DTC P0604 Control Module Random Access Memory Performance DTC P0606 Control Module Processor Performance DTC P062F Control Module Long Term Memory Performance
<u>DTC P0628</u>	DTC P0628 Fuel Pump Enable Circuit Low Voltage
<u>DTC P0641, P0651, P0697, or P06A3</u>	DTC P0641 5V Reference 1 Circuit DTC P0651 5V Reference 2 Circuit DTC P0697 5V Reference 3 Circuit DTC P06A3 5V Reference 4 Circuit
<u>DTC P0650, P263A, or P263B</u>	DTC P0650 Malfunction Indicator Lamp (MIL) Control Circuit DTC P263A Malfunction Indicator Lamp (MIL) Control Circuit Low Voltage DTC P263B Malfunction Indicator Lamp (MIL) Control Circuit High Voltage
<u>DTC P0685-P0687, P0689, P0690, or P1682</u>	DTC P0685 Engine Controls Ignition Relay Control Circuit DTC P0686 Engine Controls Ignition Relay Control Circuit Low Voltage DTC P0687 Engine Controls Ignition Relay Control Circuit High Voltage DTC P0689 Engine Controls Ignition Relay Feedback Circuit Low Voltage DTC P0690 Engine Controls Ignition Relay Feedback Circuit High Voltage DTC P1682 Ignition 1 Switch Circuit 2
<u>DTC P0700</u>	DTC P0700 Transmission Control Module Requested MIL Illumination
<u>DTC P1248-P124F</u>	DTC P1248 Cylinder 1 Injector High Control Circuit Shorted to Control Circuit DTC P1249 Cylinder 2 Injector High Control Circuit Shorted to Control Circuit DTC P124A Cylinder 3 Injector High Control Circuit Shorted to Control Circuit DTC P124B Cylinder 4 Injector High Control Circuit Shorted to Control Circuit DTC P124C Cylinder 5 Injector High Control Circuit Shorted to Control Circuit DTC P124D Cylinder 6 Injector High Control Circuit Shorted to Control Circuit DTC P124E Cylinder 7 Injector High Control Circuit Shorted to Control Circuit DTC P124F Cylinder 8 Injector High Control Circuit Shorted to Control Circuit
<u>DTC P1255</u>	DTC P1255 Fuel Pump Control Module Driver High Temperature

<u>DTC P127C or P127D</u>	DTC P127C Fuel Rail Pressure Sensor 2 Circuit Low Voltage DTC P127D Fuel Rail Pressure Sensor 2 Circuit High Voltage
<u>DTC P129B or P129C</u>	DTC P129B Fuel Pump Driver Control Module System Voltage Low Voltage DTC P129C Fuel Pump Driver Control Module System Voltage High Voltage
<u>DTC P129D</u>	DTC P129D Fuel Pump Driver Control Module Ignition On/Start Switch Circuit Low Voltage
<u>DTC P129E</u>	DTC P129E Fuel Pump Driver Control Module Signal Message Counter Incorrect
<u>DTC P12A6</u>	DTC P12A6 Fuel Pump Driver Control Module Enable Circuit Performance
<u>DTC P12A8</u>	DTC P12A8 Fuel Pump Control Signal Message Counter Incorrect
<u>DTC P135A or P135B</u>	DTC P135A Ignition Coil Supply Voltage Circuit Bank 1 DTC P135B Ignition Coil Supply Voltage Circuit Bank 2
<u>DTC P1380 or P1381</u>	DTC P1380 Misfire Detected - Rough Road Data Not Available DTC P1381 Misfire Detected - No Communication with Brake Control Module
<u>DTC P1400</u>	DTC P1400 Cold Start Emission Reduction Control System
<u>DTC P150C</u>	DTC P150C Transmission Control Module Engine Speed Request Signal Message Counter Incorrect
<u>DTC P1516, P2101, P2119, or P2176</u>	DTC P1516 Throttle Actuator Control (TAC) Module Throttle Actuator Position Performance DTC P2101 Throttle Actuator Position Performance DTC P2119 Throttle Closed Position Performance DTC P2176 Minimum Throttle Position Not Learned
<u>DTC P159F or P15A0</u>	DTC P159F Fuel Economy Mode Switch Circuit Low Voltage DTC P15A0 Fuel Economy Mode Switch Circuit High Voltage
<u>DTC P15A1</u>	DTC P15A1 Fuel Economy Mode Switch Performance
<u>DTC P163A</u>	DTC P163A Control Module Fuel Pressure Regulator 1 Control System Circuitry Performance
<u>DTC P2096-P2099</u>	DTC P2096 Post Catalyst Fuel Trim System Low Limit Bank 1 DTC P2097 Post Catalyst Fuel Trim System High Limit Bank 1 DTC P2098 Post Catalyst Fuel Trim System Low Limit Bank 2 DTC P2099 Post Catalyst Fuel Trim System High Limit Bank 2
<u>DTC P2122, P2123, P2127, P2128, or P2138</u>	DTC P2122 Accelerator Pedal Position (APP) Sensor 1 Circuit Low Voltage DTC P2123 Accelerator Pedal Position (APP) Sensor 1 Circuit High Voltage DTC P2127 Accelerator Pedal Position (APP) Sensor 2 Circuit Low Voltage DTC P2128 Accelerator Pedal Position (APP) Sensor 2 Circuit High Voltage DTC P2138 Accelerator Pedal Position (APP) Sensors 1-2 Not

	Plausible
<u>DTC P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, P216F, P217B, P217C, P217E, or P217F</u>	DTC P2147 Cylinder 1 Injector High Control Circuit Low Voltage DTC P2148 Cylinder 1 Injector High Control Circuit High Voltage DTC P2150 Cylinder 2 Injector High Control Circuit Low Voltage DTC P2151 Cylinder 2 Injector High Control Circuit High Voltage DTC P2153 Cylinder 3 Injector High Control Circuit Low Voltage DTC P2154 Cylinder 3 Injector High Control Circuit High Voltage DTC P2156 Cylinder 4 Injector High Control Circuit Low Voltage DTC P2157 Cylinder 4 Injector High Control Circuit High Voltage DTC P216B Cylinder 5 Injector High Control Circuit Low Voltage DTC P216C Cylinder 5 Injector High Control Circuit High Voltage DTC P216E Cylinder 6 Injector High Control Circuit Low Voltage DTC P216F Cylinder 6 Injector High Control Circuit High Voltage DTC P217B Cylinder 7 Injector High Control Circuit Low Voltage DTC P217C Cylinder 7 Injector High Control Circuit High Voltage DTC P217E Cylinder 8 Injector High Control Circuit Low Voltage DTC P217F Cylinder 8 Injector High Control Circuit High Voltage
<u>DTC P2199</u>	DTC P2199 Intake Air Temperature (IAT) Sensors 1-2 Not Plausible
<u>DTC P219A or P219B</u>	DTC P219A Fuel Trim Cylinder Balance Bank 1 DTC P219B Fuel Trim Cylinder Balance Bank 2
<u>DTC P2227-P2230</u>	DTC P2227 Barometric Pressure (BARO) Sensor Performance DTC P2228 Barometric Pressure (BARO) Sensor Circuit Low Voltage DTC P2229 Barometric Pressure (BARO) Sensor Circuit High Voltage DTC P2230 Barometric Pressure (BARO) Sensor Circuit Erratic
<u>DTC P2269</u>	DTC P2269 Water in Fuel
<u>DTC P2544</u>	DTC P2544 Transmission Torque Request Signal Message Counter Incorrect
<u>DTC P2548</u>	DTC P2548 Vehicle Dynamics System Torque Request Signal Message Counter Incorrect
<u>DTC P2615 or P2616</u>	DTC P2615 Camshaft Position Signal Output Circuit Low Voltage DTC P2616 Camshaft Position Signal Output Circuit High Voltage
<u>DTC P2635</u>	DTC P2635 Fuel Pump Flow Performance
<u>DTC P2636</u>	DTC P2636 Fuel Pump 2 Flow Insufficient
<u>DTC P26C8</u>	DTC P26C8 Chassis Control Module Requested MIL Illumination
<u>DTC P3400</u>	DTC P3400 Cylinder Deactivation System
<u>DTC P3401, P3403, P3404, P3425, P3427, P3428, P3441, P3443, P3444, P3449, P3451, or P3452</u>	DTC P3401 Cylinder 1 Deactivation Solenoid Valve Control Circuit Open DTC P3403 Cylinder 1 Deactivation Solenoid Valve Control Circuit Low Voltage DTC P3404 Cylinder 1 Deactivation Solenoid Valve Control Circuit High Voltage

	DTC P3425 Cylinder 4 Deactivation Solenoid Valve Control Circuit Open
	DTC P3427 Cylinder 4 Deactivation Solenoid Valve Control Circuit Low Voltage
	DTC P3428 Cylinder 4 Deactivation Solenoid Valve Control Circuit High Voltage
	DTC P3441 Cylinder 6 Deactivation Solenoid Valve Control Circuit Open
	DTC P3443 Cylinder 6 Deactivation Solenoid Valve Control Circuit Low Voltage
	DTC P3444 Cylinder 6 Deactivation Solenoid Valve Control Circuit High Voltage
	DTC P3449 Cylinder 7 Deactivation Solenoid Valve Control Circuit Open
	DTC P3451 Cylinder 7 Deactivation Solenoid Valve Control Circuit Low Voltage
	DTC P3452 Cylinder 7 Deactivation Solenoid Valve Control Circuit High Voltage

ENGINE COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

ENGINE COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0480, P0691 or P0692</u>	Cooling Fan Speed Control

FIXED AND MOVEABLE WINDOWS - DIAGNOSTIC TROUBLE CODES

FIXED AND MOVEABLE WINDOWS - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0283</u>	Electric Rear Defrost
<u>DTC B316B or B317A</u>	Driver/Passenger Window Switch
<u>DTC B3205 or B3210</u>	Driver/Passenger Window Motor

FOLDING TOP - DIAGNOSTIC TROUBLE CODES

FOLDING TOP - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B12FE and B12FF</u>	Folding Top Header Unlatched Sensor
<u>DTC B1308</u>	Folding Top Up Relay
<u>DTC B1309</u>	Folding Top Down Relay
<u>DTC B130A</u>	Luggage Barrier Sensor
<u>DTC B1310</u>	Folding Top Up Position Sensor
<u>DTC B1311</u>	Left Folding Top Header Unlatched Sensor

	Latched Sensor
<u>DTC B1445</u>	Folding Top Control Module Voltage
<u>DTC B3602</u>	Folding Top Control Switch
<u>DTC B3674-B3677</u>	Folding Top Solenoid Valve 1, 2, 3, 4
<u>DTC B3680</u>	Folding Top Pump Motor
<u>DTC B3685 and B3686</u>	Folding Top Header Latched Left/Right Sensor
<u>DTC B3687 and B3688</u>	Convertible Top Tension Bow Up/Down Sensor

HORN SYSTEM - DIAGNOSTIC TROUBLE CODES

HORN SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B2750</u>	Horn Relay

HVAC SYSTEM - AUTOMATIC - DIAGNOSTIC TROUBLE CODES

HVAC SYSTEM - AUTOMATIC - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0163</u>	Passenger Compartment Temperature Sensor
<u>DTC B0173, B0178, B0509, B0514 or B3933</u>	Duct Air Temperature Sensor/Evaporator Temperature Sensor
<u>DTC B018A, B048C, B048F or B1395</u>	Windshield Temperature Sensor/Humidity Sensor/Control Module Voltage Reference
<u>DTC B0183</u>	Solar Load Sensor
<u>DTC B0228, B0413, B0423, B1395 or B374A</u>	Recirculate Position Feedback/Main Temperature Control Feedback/Control Module Voltage Reference/Air Flow Control Feedback
<u>DTC B393B</u>	Air Conditioning Compressor Valve Control
<u>DTC P0532 or P0533</u>	Air Conditioning (A/C) Refrigerant Pressure Sensor
<u>DTC P0645, P0646 or P0647</u>	Air Conditioning (A/C) Compressor Clutch Relay

HYDRAULIC BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

HYDRAULIC BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC C0267</u>	Low Brake Fluid Indicated
<u>DTC C027B</u>	Brake Booster Electric Vacuum Pump
<u>DTC C025E</u>	Brake Booster Vacuum Sensor

IMMOBILIZER SYSTEM - DIAGNOSTIC TROUBLE CODES

IMMOBILIZER SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B2955</u>	Security Sensor Data
<u>DTC B302A</u>	Mobile Telephone Communications Interface Requested Immobilization
<u>DTC B3031</u>	Security Controller In Learn Mode Malfunction
<u>DTC B3055</u>	No Transponder Modulation or No Transponder
<u>DTC B305C</u>	Immobilizer Transponder of Wrong Type Programmed
<u>DTC B3060</u>	Unprogrammed Transponder Identification Code Received Malfunction
<u>DTC B389A</u>	Environment Identification
<u>DTC B3902</u>	Incorrect Immobilizer Identifier Received
<u>DTC B3924-B3928</u>	Incorrect Environmental Identifier Received From Module
<u>DTC B3935</u>	Transponder Authentication Error
<u>DTC B3976</u>	Unconfigured Transponder
<u>DTC B3978-B3982</u>	Incorrect Environmental Identifier Received From Module
<u>DTC B3984</u>	Device 1 Environment Identifier Not Programmable
<u>DTC P0513</u>	Immobilizer Key Incorrect
<u>DTC P0633</u>	Immobilizer Key Not Programmed
<u>DTC P162B</u>	Remote Vehicle Speed Limiting Signal Message Counter Incorrect
<u>DTC P1631</u>	Immobilizer Fuel Enable Signal Not Correct
<u>DTC P1649</u>	Immobilizer Security Code Not Programmed

INSTRUMENT PANEL SYSTEM DISPLAYS AND GAUGES - DIAGNOSTIC TROUBLE CODES

INSTRUMENT PANEL SYSTEM DISPLAYS AND GAUGES - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0158</u>	Ambient Air Temperature Sensor
<u>DTC B0550</u>	Odometer Circuit General Memory Malfunction
<u>DTC B071F</u>	Transmission Shift Indicator Internal Malfunction
<u>DTC B124F</u>	Universal Serial Bus (USB)
<u>DTC B361A</u>	Head-Up Display Module
<u>DTC B361B</u>	Head-Up Display Switch
<u>DTC P0461-P0464, P2066, P2067 or P2068</u>	Fuel Level Sensor 1/2
<u>DTC P0521, P0522 or P0523</u>	Engine Oil Pressure Sensor

INSTRUMENT PANEL AND CONSOLE TRIM - DIAGNOSTIC TROUBLE CODES

INSTRUMENT PANEL AND CONSOLE TRIM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B324D</u>	Instrument Panel Compartment Door Latch Actuator

KEYLESS ENTRY SYSTEM AND REMOTE FUNCTIONS - DIAGNOSTIC TROUBLE CODES

KEYLESS ENTRY SYSTEM AND REMOTE FUNCTIONS - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B3101</u>	Keyless Entry Data Link
<u>DTC B3105</u>	Keyless Entry System Transmitters
<u>DTC B3106</u>	Keyless Entry Data Link
<u>DTC B3109-B3113</u>	Keyless Entry Transmitter 1-5 Battery
<u>DTC B310D-B310F</u>	Keyless Entry Transmitter 6, 7, 8 Battery
<u>DTC B3119</u>	Keyless Entry Antenna 1
<u>DTC B3120</u>	Keyless Entry Antenna 2
<u>DTC B3121</u>	Keyless Entry Antenna 3
<u>DTC B3122</u>	Keyless Entry Antenna 4
<u>DTC B3123</u>	Keyless Entry Antenna 5
<u>DTC B3124</u>	Keyless Entry Antenna 6

LIGHTING SYSTEM - DIAGNOSTIC TROUBLE CODES

LIGHTING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1395</u>	Control Module Voltage Reference
<u>DTC B1480</u>	Battery Rundown Protection Circuit
<u>DTC B2540</u>	Rear Fog Lamps Control Circuit
<u>DTC B2545</u>	Backup Lamps Circuit
<u>DTC B2570</u>	Trunk Lamp Control Circuit
<u>DTC B257A</u>	Headlamp Switch Input Signals Correlation Malfunction
<u>DTC B2580</u>	Headlamp High Beam Control Circuit
<u>DTC B2585 or B3867</u>	Park Lamps Control Circuit
<u>DTC B258A</u>	Low Beam Control Circuit
<u>DTC B2600 or B2605</u>	Daytime Running Lamps Control Circuit
<u>DTC B2610</u>	Passenger Compartment Dimming 1 Circuit

<u>DTC B2615</u>	Passenger Compartment Dimming 2 Circuit
<u>DTC B2625</u>	Display Dimming Pulse Width Modulation Output
<u>DTC B2645</u>	Ambient Light Sensor Circuit
<u>DTC B3588</u>	Rear Fog Lamp Switch Circuit Malfunction
<u>DTC B3596</u>	Hazard Lamps Request Circuit Malfunction
<u>DTC B3600</u>	Control Module Voltage Reference Output 1
<u>DTC B3650</u>	High Beam Request Signal Circuit Performance
<u>DTC B3806</u>	High Beam and Headlamp Flash Select Circuit Malfunction
<u>DTC B3881 or B3882</u>	Tail Lamp Circuit
<u>DTC B3883</u>	License Plate Lamp Circuit
<u>DTC B3884</u>	Center High Mounted Brake Lamp
<u>DTC B3948 or B3949</u>	Front Turn Signal
<u>DTC B3950 or B3951</u>	Rear Turn Signal
<u>DTC C0277 or C0890</u>	Brake Pedal Position Sensor
<u>DTC C0297</u>	Brake Applied Output Circuit

MANUAL TRANSMISSION - TREMEC 6-SPEED - DIAGNOSTIC TROUBLE CODES

MANUAL TRANSMISSION - TREMEC 6-SPEED - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0502 or P0503</u>	Vehicle Speed Sensor (VSS)
<u>DTC P0712 or P0713</u>	Transmission Fluid Temperature Sensor
<u>DTC P0729, P0731-P0735 or P076F</u>	Gear Ratio Incorrect
<u>DTC P0801, P088C or P088D</u>	Reverse Inhibit Solenoid Actuator
<u>DTC P0803, P080C or P080D</u>	Skip Shift Solenoid Actuator
<u>DTC P0806-P0808</u>	Clutch Pedal Position (CPP) Sensor
<u>DTC P080A</u>	Clutch Pedal Position (CPP)
<u>DTC P18C4 or P18C5</u>	Gear Position Sensor Circuit 1
<u>DTC P18C6 or P18C7</u>	Gear Position Sensor Circuit 2
<u>DTC P18C9</u>	Gear Position Sensor
<u>DTC P18CA</u>	Gear Position Sensor

MIRROR SYSTEM - DIAGNOSTIC TROUBLE CODES

MIRROR SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B154A or B154B</u>	Mirror Internal Malfunction

OBJECT DETECTION SYSTEM - DIAGNOSTIC TROUBLE CODES

OBJECT DETECTION SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B127B</u>	Rearview Camera Input Signal Circuit

PARKING BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

PARKING BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC C028A, C028B or C028F</u>	Park Brake Motor/Park Brake Solenoid Actuator
<u>DTC C027D</u>	Park Brake Slip Detected
<u>DTC C028E</u>	Park Brake Solenoid Actuator Current Sensor
<u>DTC C0293</u>	Park Brake Switch
<u>DTC C0298</u>	Park Brake Unlatch Switch
<u>DTC C0558</u>	Calibration Data
<u>DTC C0561</u>	System Disabled Information
<u>DTC C056D</u>	Electronic Control Unit Hardware
<u>DTC C056E</u>	Electronic Control Unit Software
<u>DTC C0574</u>	Printed Circuit Board Temperature Sensor

POWER DOOR LOCK SYSTEM AND RELEASE SYSTEMS - DIAGNOSTIC TROUBLE CODES

POWER DOOR LOCK SYSTEM AND RELEASE SYSTEMS - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1474 or B3849</u>	Exterior Door Handle Switch
<u>DTC B2494</u>	Liftgate Handle Switch
<u>DTC B250B</u>	Driver Door Unlatch Low Control Circuit
<u>DTC B251A-B251F</u>	Door Unlatch
<u>DTC B252A or B252B</u>	Door Unlatch Enable
<u>DTC B2730</u>	Interior Trunk Lid Unlatch Switch
<u>DTC B297B or B297C</u>	Door Open Switch
<u>DTC B3125, B3130 or B3135</u>	Driver Door Only Unlock/All Doors Lock/Unlock
<u>DTC B313A or B313B</u>	Door Lock Status Indicator
<u>DTC B3140, B3145, B3150 or B3155</u>	Door Lock/Unlock Switch
<u>DTC B3265</u>	Trunk Lid Unlatch
<u>DTC B3618</u>	Exterior Liftgate Unlatch Switch
<u>DTC B3797</u>	All Door Dead Lock Circuit

POWER SEAT SYSTEM - DIAGNOSTIC TROUBLE CODES

POWER SEAT SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1405, B1825, B2355, B2365 or B2375</u>	Control Module Voltage Reference/Seat Position Sensor
<u>DTC B1415, B359B or B359C</u>	Control Module Voltage Reference/Unlocked Switch/Limit Switch
<u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, B1820, B1830, B1835, B1840 or B1845</u>	Seat Position Switch (Driver Seat)
<u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, B1820, B1830, B1835, B1840 or B1845</u>	Seat Position Switch (Passenger Seat)
<u>DTC B2755 or B2765</u>	Driver Memory Select Switch
<u>DTC B3920</u>	Driver Seat Motors Group

POWER STEERING SYSTEM - DIAGNOSTIC TROUBLE CODES

POWER STEERING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC C0176</u>	Control Module Temperature Sensor
<u>DTC C0475</u>	Electric Steering Motor
<u>DTC C047A</u>	Electric Steering Motor Position Sensor
<u>DTC C0544</u>	Steering Wheel Angle Sensor
<u>DTC C0545</u>	Steering Wheel Torque Sensor
<u>DTC C0546</u>	Steering System Temperature Sensor
<u>DTC C055C</u>	Steering Gear Performance Malfunction
<u>DTC C0565</u>	Vehicle Identification Number Not Plausible
<u>DTC C056D</u>	Electronic Control Unit Hardware Malfunction
<u>DTC C056E</u>	Electronic Control Unit Software Malfunction

REAR DRIVE AXLE - DIAGNOSTIC TROUBLE CODES

REAR DRIVE AXLE - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC C0393</u>	Rear Axle Clutch Solenoid Valve
<u>DTC C0394</u>	Rear Differential Sump Temperature Sensor
<u>DTC C0407</u>	Differential Oil Pump Motor
<u>DTC C0411</u>	Rear Differential Pressure Sensor
<u>DTC C0412</u>	Rear Differential Clutch Temperature Sensor
<u>DTC C0413</u>	Rear Differential Hydraulic System Bleed Not Performed
<u>DTC C0414</u>	Rear Differential Hydraulic System

<u>DTC C0418</u>	Rear Drive Clutch Classification Not Programmed
<u>DTC C0870</u>	Control Module Voltage Reference Output Circuit

SEAT BELT SYSTEM - DIAGNOSTIC TROUBLE CODES

SEAT BELT SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0072 or B0073</u>	Seat Belt Switch

SEAT HEATING SYSTEM AND SEAT COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

SEAT HEATING SYSTEM AND SEAT COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B191A</u>	Front Heated Seat Module

SECONDARY AND CONFIGURABLE CUSTOMER CONTROL SYSTEM

SECONDARY AND CONFIGURABLE CUSTOMER CONTROL SYSTEM

DTC	Description
<u>DTC B3622</u>	Steering Wheel Controls Switch

SHIFT LOCK CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

SHIFT LOCK CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B270A</u>	Park Lock Solenoid Actuator
<u>DTC B270B</u>	Park Lock Solenoid Actuator Shift Control Circuit

STEERING WHEEL AND STEERING COLUMN - DIAGNOSTIC TROUBLE CODES

STEERING WHEEL AND STEERING COLUMN - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1023</u>	Integral Switch Malfunction
<u>DTC B144C</u>	Inverted Run/Start Power Relay
<u>DTC B2515</u>	Steering Column Lock Motor Feedback
<u>DTC B285A</u>	Steering Column Position Module
<u>DTC B2897</u>	Steering Column Lock Motor

<u>DTC B2910</u>	Steering Column Lock Password Incorrect
<u>DTC B305A</u>	Steering Column Lock Password Incorrect

SUPPLEMENTAL INFLATABLE RESTRAINT SYSTEM - DIAGNOSTIC TROUBLE CODES

SUPPLEMENTAL INFLATABLE RESTRAINT SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0012 or B0013</u>	Steering Wheel Air Bag Deployment Loop
<u>DTC B0014, B0021, B0031 or B0038</u>	Seat Side Air Bag Deployment Loop
<u>DTC B0015, B001A, B001B or B0022</u>	Seat Belt Pretensioner
<u>DTC B003B, B0019 or B0020</u>	Passenger Instrument Panel Air Bag Vent Deployment Loop
<u>DTC B0052</u>	Deployment Commanded
<u>DTC B0071</u>	Passenger Seat Belt Tension Sensor
<u>DTC B0074</u>	Passenger Presence Sensor
<u>DTC B0079 or B0080</u>	Seat Position Sensor
<u>DTC B0081</u>	Passenger Presence Module (Inflatable Restraint Sensing and Diagnostic Module)
<u>DTC B0081</u>	Passenger Presence Module (Passenger Presence System)
<u>DTC B0083-B0088</u>	Front Impact Sensor
<u>DTC B067F or B0680</u>	Air Bag On/Off Indicator Circuit
<u>DTC B1001</u>	Option Configuration
<u>DTC B1019</u>	System Configuration Error

SUSPENSION CONTROL SYSTEM - SUSPENSION DAMPING - DIAGNOSTIC TROUBLE CODES

SUSPENSION CONTROL SYSTEM - SUSPENSION DAMPING - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC C056D</u>	Electronic Control Unit Hardware
<u>DTC C0574</u>	Printed Circuit Board Temperature Sensor
<u>DTC C0575, C0580, C0585 or C0590</u>	Damper Actuator
<u>DTC C0615, C0620, C0625 or C0630</u>	Position Sensor
<u>DTC C0696</u>	Position Sensor 5V Supply

THEFT DETERRENT SYSTEM - DIAGNOSTIC TROUBLE CODES

THEFT DETERRENT SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description

DTC B291A	Content Theft Deterrent Assembly Internal Malfunction
DTC B291B	Content Theft Deterrent Sensor Malfunction

TIRE PRESSURE MONITORING SYSTEM - DIAGNOSTIC TROUBLE CODES

TIRE PRESSURE MONITORING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC C0569	System Configuration Malfunction
DTC C0750, C0755, C0760 or C0765	Tire Pressure Sensor(Japan)
DTC C0750, C0755, C0760 or C0765	Tire Pressure Sensor
DTC C0774	Low Tire Pressure System Performance
DTC C0775	Tire Pressure Monitoring System Sensors (Japan)
DTC C0775	Tire Pressure Monitoring System Sensors

TRANSMISSION COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

TRANSMISSION COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC P184C	Transmission Cooling Fan Control Circuit
DTC P184F	Transmission Cooling Fan Control Circuit

WIPER SYSTEM AND WASHER SYSTEM - DIAGNOSTIC TROUBLE CODES

WIPER SYSTEM AND WASHER SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B3715 or B3875	Windshield Wiper Relay
DTC B3810	Headlamp Washer Relay
DTC B3873	Front Washer Relay

WIRING SYSTEMS AND POWER MANAGEMENT - DIAGNOSTIC TROUBLE CODES

WIRING SYSTEMS AND POWER MANAGEMENT - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B097B	DTC B097B Power Mode Start Switch Circuit
DTC B097C	DTC B097C Power Mode Run/Start Indicator Circuit
DTC B1370 (Instrument Cluster)	DTC B1370 Control Module Ignition On and Start Circuit
DTC B1445	DTC B1445 Control Module Voltage Output Circuit Short
DTC B144A	DTC B144A RUN Power Relay Circuit

<u>DTC B1451</u>	DTC B1451 Accessory Power Circuit
<u>DTC B147E or B147F</u>	DTC B147E Battery Saver Relay Set Secondary Circuit Short to Battery
<u>DTC P2534 or P2535</u>	DTC P2534 Ignition On/Start Switch Circuit Low Voltage DTC P2535 Ignition On/Start Switch Circuit High Voltage
<u>DTC P2537</u>	DTC P2537 Ignition Accessory Switch Circuit Low Voltage