

Cadillac Fleetwood (1996) – fuse box diagram

Instrument panel fuse block

1	X	2	X	3	X	4	X	5	X	CIRCUIT BREAKERS	
6	X	7	X	8	RAP WPT	9	RADIO	10	WIPER		
11	UP REC	12	ISSG	13	CHIME	14	CCM IGN 1	15	AIR BAG	1	PWR RECL
16	GEN	17	MEM SEAT	18	CCM IGN 3	19	RAP PWR	20	A/C COMP	2	RAP RLY
21	RAP BATT	22	HVAC MEL	23	TRK REL	24	STARTER	25	HVAC IGN	3	PWR SEAT
26	ALC BATT	27	DENT LPS	28	WRT DIO	29	RR CKS	30	X	4	RT DEFOG
31	PARK LPS	32	HORN	33	HVAC BAT	34	CCM BAT	35	PWR WR	5	HE LPS
36	TRK FDRN	37	HAZRD LPS	38	STOP LPS	39	PWR LK	40	HTD SEAT		
41	COMM LPS	42	SPDM LPS	43	TAL LPS	44	RR DEFOD	45	X		

Cadillac Fleetwood – fuse box diagram – instrument panel

Fuse number	Usage
8	Component Center (RAP Wiper) Relay
9	Radio Receiver
10	Windshield Wiper/Washer Switch
11	Air Bag System, Instrument Panel Cluster
12	Park/Neutral Position and Backup Lamp Switch, Turn Signal Lamp Flasher
13	Warnin Alarm Cruise Control Release Switch, Inside Rearview Mirror, Rear window Defogger Relay, Park/Neutral Position and Backup Lamp Switch, Automatic Level Control Sensor
14	Central Control Module (CCM)
15	Air bag System
16	Generator, Secondary Engine Cooling Fan Relay
17	Driver's Seat Ad'uster Memory Module, Heated Driver's Seat Switch, Heated 4 assenger's Seat Swltch
18	Central Control Module (CCM), Remote Control Door Lock Reciver and Theft-Deterrent Module, Cruise Control Module, Cruise Control Switch, Cruise Release Switch
19	Accessory Time Delay Cut-Off (RAP Power) Relay
20	A/C Compressor Relay, Primary Engine Cooling Fan Relay
21	Component Center (RAP Wiper) Relay
22	Blower Motor Control Module
23	Rear Compartment Lid Release Switch
24	Theft-Deterrent Relay, Air Bag System


25	Instrument Cluster, Heater-A/C Control, Vacuum/Electric Solenoid, Electric Actuator
26	Automatic Level Control Sensor, Rear Compartment Courtesy Lamp
27	Compartment Center Relay
28	Front Cigar Lighter
29	Rear Cigar Lighter
30	Park Lamp Relay
31	Horn Relay
32	Warning Alarm, Heater-A/C Control, Instrument Cluster, Headlamp Switch, Radio Receiver
34	Center Control Module (CCM)
35	Door Lock Switches, Outside Rearview Mirrors, Ignition Key Disable Relay Assembly
36	Rear Compartment Lid Pull-Down Actuator
37	Hazard Lamp Flasher
38	Stoplamps Switch
39	Door Lock Relay
40	Heated Driver's and Passenger's Seat Control Modules
41	Instrument Cluster, Radio Control, Cornering Lamps, Turn Signal Switch, Front Park Lamps
42	Headlamp Switch Control for Interior Lamps, Dimming
43	Rear Taillamps, Rear Side Marker Lamps, License Lamp

44	Outside Rearview Mirror Defogger
----	----------------------------------

Circuit Breaker	Usage
1	Lumbar, Power Antenna
2	Accesory, Time Delay Cut-Off (RAP Power) Relay
3	Driver's amd Passenger's Adjuster Switches, Driver's Seat Adjuster Memory Module, Driver's and Passenger's Seats Recline Switches
4	Rear Defogger Relay
5	Headlamp Relay, Daytime Running Lamps (DRL) Relay

Underhood Electrical Center

The electrical center is located on the passenger side wheel housing in the engine compartment.

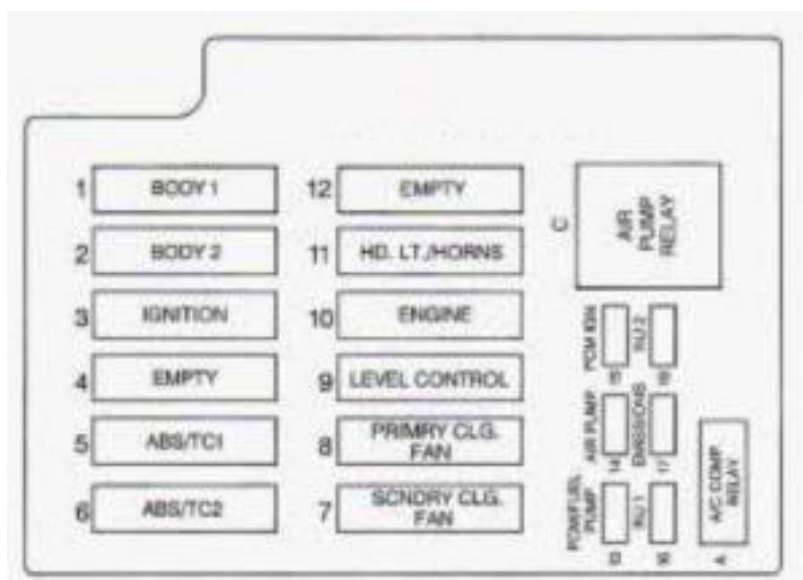

Cadillac Fleetwood – fuse box diagram – underhood electrical center

Fuse	Usage
1	Circuit Breakers: 3,4; I/P Fuses: 36, 37, 38, 39, 40
2	Circuit Breaker: 2; I/P Fuses: 21, 22, 26, 27, 28, 29, 33, 34, 35
3	Concealed Fuse; I/P Fuses: 8, 9, 10, 11, 12, 13, 14, 15, 24; Underhood Electrical Center: 15, 16, 17, 18
5	ABS/TCS Brake Pressure Modulator Valve
6	ABS/TCS Brake Pressure Modulator Valve
7	Secondary Engine Cooling EmRelay
8	Primary Engine Cooling Fan Relay
9	Automatic Level Control Air Compressor
10	Engine Compartment Fuses: 13, 14
11	Circuit Breaker: 5; I/P Fuses: 31, 32
13	Fuel Pump Relay, Powertrain Control Module (PCM)
14	Secondary Air Injection (AIR) Pump Relay
15	Powertrain Control Module (PCM), Ignition Coil
16	Fuel Injectors Cylinders 1, 4, 6, 7
17	Exhaust Gas Recirculation (EGR), Vacuum Control Signal Solenoid Valve, Secondary Air Injection (AIR), Pump Relay (Coil), Mass Air Flow Sensor, Electronic Transmission, Left and Right Heated Oxygen Sensors, Evaporative Emission (EVAP) Canister Purge Solenoid Valve
18	Fuel Injectors Cylinders 2, 3, 5, 8

A	A/C Compressor Relay
C	Secondary Air Injection (AIR) Pump Relay

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.