
PREPARATION

ENGINE CONTROL	
SST	02-1
RECOMMENDED TOOLS	02-1
LUBRICANT AND OTHERS	02-2
ENGINE MECHANICAL	
SST	02-3
SERVICE TOOL	02-3
RECOMMENDED TOOLS	02-3
LUBRICANT AND OTHERS	02-5
FUEL	
SST	02-7
RECOMMENDED TOOLS	02-7
LUBRICANT AND OTHERS	02-7
EMISSION CONTROL	
RECOMMENDED TOOLS	02-8
EXHAUST	
RECOMMENDED TOOLS	02-9
COOLONG	
RECOMMENDED TOOLS	02-10
LUBRICANT AND OTHERS	02-10
LUBRICATION	
SST	02-11
SERVICE TOOL	02-11
RECOMMENDED TOOLS	02-11
LUBRICANT AND OTHERS	02-11
IGNITION	
RECOMMENDED TOOLS	02-12
LUBRICANT AND OTHERS	02-12
STARTING	
RECOMMENDED TOOLS	02-13
LUBRICANT AND OTHERS	02-13
CHARGING	
RECOMMENDED TOOLS	02-14
LUBRICANT AND OTHERS	02-14
AUTOMATIC TRANSAXLE	
SST	02-15
RECOMMENDED TOOLS	02-15
LUBRICANT AND OTHERS	02-16
CLUTCH	
SST	02-17
RECOMMENDED TOOLS	02-17
MANUAL TRANSAXLE	
SST	02-18
RECOMMENDED TOOLS	02-18
LUBRICANT AND OTHERS	02-18

TRANSFER	
SST	02-19
RECOMMENDED TOOLS	02-19
LUBRICANT AND OTHERS	02-19
PROPELLER SHAFT	
RECOMMENDED TOOLS	02-20
DRIVE SHAFT	
SST	02-21
SERVICE TOOL	02-21
RECOMMENDED TOOLS	02-21
LUBRICANT AND OTHERS	02-21
DIFFERENTIAL	
SST	02-23
RECOMMENDED TOOLS	02-24
LUBRICANT AND OTHERS	02-24
AXLE	
SST	02-25
RECOMMENDED TOOLS	02-26
LUBRICANT AND OTHERS	02-26
SUSPENSION	
SST	02-28
RECOMMENDED TOOLS	02-28
TIRE & WHEEL	
RECOMMENDED TOOLS	02-30
BRAKE CONTROL	
SST	02-31
RECOMMENDED TOOLS	02-31
BRAKE	
SST	02-32
RECOMMENDED TOOLS	02-32
LUBRICANT AND OTHERS	02-33
PARKING BRAKE	
RECOMMENDED TOOLS	02-34
STEERING COLUMN	
RECOMMENDED TOOLS	02-35
LUBRICANT AND OTHERS	02-35
POWER STEERING	
SST	02-36
RECOMMENDED TOOLS	02-36
LUBRICANT AND OTHERS	02-36
AIR CONDITIONER	
RECOMMENDED TOOLS	02-38
LUBRICANT AND OTHERS	02-39
SRS AIRBAG	
SST	02-40
RECOMMENDED TOOLS	02-40
LUBRICANT AND OTHERS	02-41
SEAT BELT	
SST	02-42

 
 
RECOMMENDED TOOLS	02-42
LUBRICANT AND OTHERS	02-42
ENGINE IMMOBILIZER	
RECOMMENDED TOOLS	02-43
LIGHTING	
RECOMMENDED TOOLS	02-44
LUBRICANT AND OTHERS	02-44
WIPER & WASHER	
RECOMMENDED TOOLS	02-45
LUBRICANT AND OTHERS	02-45
DOOR LOCK	
RECOMMENDED TOOLS	02-46
LUBRICANT AND OTHERS	02-46
METER	
SST	02-47
RECOMMENDED TOOLS	02-47
AUDIO & VISUAL	
RECOMMENDED TOOLS	02-48
OTHER SYSTEM	
RECOMMENDED TOOLS	02-49
GLASS & WINDOW	
RECOMMENDED TOOLS	02-50
LUBRICANT AND OTHERS	02-50
MIRROR	
RECOMMENDED TOOLS	02-52
LUBRICANT AND OTHERS	02-52
INSTRUMENT PANEL	
LUBRICANT AND OTHERS	02-53
SEAT	
SST	02-54
RECOMMENDED TOOLS	02-54
LUBRICANT AND OTHERS	02-54
BODY	
SST	02-55
RECOMMENDED TOOLS	02-55
LUBRICANT AND OTHERS	02-55
EXTERIOR	
RECOMMENDED TOOLS	02-57
LUBRICANT AND OTHERS	02-57
INTERIOR	
RECOMMENDED TOOLS	02-59
LUBRICANT AND OTHERS	02-59
MULTIPLEX COMMUNICATION	
SST	02-60
RECOMMENDED TOOLS	02-60
CAN COMMUNICATION	
SST	02-61
RECOMMENDED TOOLS	02-61

PREPARATION - ENGINE CONTROL

-1

ENGINE CONTROL

SST

	09842-97209	Sub-harness, EFI computer check	EFI SYSTEM (3SZ-VE, K3-VE)
	09843-97201	Wire, EFI inspection	EFI SYSTEM (3SZ-VE, K3-VE)
	09991-87403	Wire, diagnosis check	EFI SYSTEM (3SZ-VE, K3-VE)
	09268-41047	Tool set, injection measuring	EFI SYSTEM (3SZ-VE, K3-VE)

02

RECOMMENDED TOOLS

	09960-97001	DS-II	EFI SYSTEM (3SZ-VE, K3-VE)
		Torque wrench	THROTTLE BODY ASSEMBLY KNOCK CONTROL SENSOR CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY VACUUM SENSOR ACCELERATOR CONTROL CABLE ASSEMBLY (RHD) ACCELERATOR CONTROL CABLE ASSEMBLY (LHD)
		Electrical tester	EFI SYSTEM (3SZ-VE, K3-VE) KNOCK CONTROL SENSOR E.F.I. COMPUTER RELAY CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY VACUUM SENSOR THROTTLE POSITION SENSOR INLET AIR TEMPERATURE SENSOR WATER TEMPERATURE SENSOR
		Oscillo scope	EFI SYSTEM (3SZ-VE, K3-VE)
		Temperature gauge	WATER TEMPERATURE SENSOR
	NBNS3-12	Crowfoot wrench 9.5sq (12mm) KTC or equivalent	THROTTLE BODY ASSEMBLY KNOCK CONTROL SENSOR ACCELERATOR CONTROL CABLE ASSEMBLY (RHD) ACCELERATOR CONTROL CABLE ASSEMBLY (LHD)
	B20T-19	Coolant temperature sensor socket KTC or equivalent	WATER TEMPERATURE SENSOR

-2

PREPARATION - ENGINE CONTROL

	QL25N-MH	Ratchet-equipped preset type torque wrench 9.5 sq (5-25N*m) Tohnichi or equivalent	WATER TEMPERATURE SENSOR
---	----------	--	--------------------------

 
LUBRICANT AND OTHERS

02

		Wire harness for inspection	CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY
		12V battery for car use	EFI SYSTEM (3SZ-VE, K3-VE) E.F.I. COMPUTER RELAY CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY

ENGINE MECHANICAL

SST

	09210-87701	Holder, fly wheel	PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF) PARTIAL ENGINE ASSEMBLY (3SZ-VE / 4WD) ENGINE REAR OIL SEAL (3SZ-VE, K3-VE / FF) ENGINE REAR OIL SEAL (3SZ-VE / 4WD)
	09223-87202	Replacer, crankshaft front oil seal	CHAIN (3SZ-VE, K3-VE / FF) CHAIN (3SZ-VE / 4WD) TIMING CHAIN (BELT) COVER OIL SEAL (3SZ-VE, K3-VE)
	09249-63010	Torque wrench adapter	ENGINE MOUNTING INSULATOR RR
	09278-87201	Tool, timing belt pulley holding	CHAIN (3SZ-VE, K3-VE / FF) CHAIN (3SZ-VE / 4WD) TIMING CHAIN (BELT) COVER OIL SEAL (3SZ-VE, K3-VE)
	09306-87501	Puller, counter gear front bearing	CHAIN (3SZ-VE, K3-VE / FF) CHAIN (3SZ-VE / 4WD) TIMING CHAIN (BELT) COVER OIL SEAL (3SZ-VE, K3-VE)
	09608-87302	Tool set, axle hub bearing & drive pinion bearing	ENGINE REAR OIL SEAL (3SZ-VE, K3-VE / FF) ENGINE REAR OIL SEAL (3SZ-VE / 4WD)
	09628-00011	Puller, tie-rod end	PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF)
	09991-87403	Wire, diagnosis check	ENGINE MECHANICAL SYSTEM
	09991-87404	Wire, engine control system inspection	ENGINE MECHANICAL SYSTEM

 
SERVICE TOOL

	09043-97401	Wrench, double hexagon M8	CYLINDER HEAD GASKET (3SZ-VE, K3-VE / FF) CYLINDER HEAD GASKET (3SZ-VE / 4WD)
--	-------------	---------------------------	--

RECOMMENDED TOOLS

		Engine lifter	PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF) PARTIAL ENGINE ASSEMBLY (3SZ-VE / 4WD)
--	--	---------------	--

PREPARATION - ENGINE MECHANICAL

		High transmission jack	PARTIAL ENGINE ASSEMBLY (3SZ-VE / 4WD)
	VP-939	Valve cotter tool	VALVE STEM OIL SEAL (O-RING) (3SZ-VE, K3-VE)
	09960-97001	DS-II	ENGINE MECHANICAL SYSTEM
		Torque wrench	FAN AND ALTERNATOR V BELT VALVE CLEARANCE (3SZ-VE, K3-VE) PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF) PARTIAL ENGINE ASSEMBLY (3SZ-VE / 4WD) CHAIN (3SZ-VE, K3-VE / FF) CHAIN (3SZ-VE / 4WD) CAMSHAFT (3SZ-VE) CAMSHAFT (K3-VE) CYLINDER HEAD GASKET (3SZ-VE, K3-VE / FF) CYLINDER HEAD GASKET (3SZ-VE / 4WD) TIMING CHAIN (BELT) COVER OIL SEAL (3SZ-VE, K3-VE) ENGINE REAR OIL SEAL (3SZ-VE, K3-VE / FF) ENGINE REAR OIL SEAL (3SZ-VE / 4WD) ENGINE MOUNTING INSULATOR LH ENGINE MOUNTING INSULATOR RH ENGINE MOVING CONTROL ROD (FF) ENGINE MOUNTING INSULATOR RR (4WD)
		Vernier calipers	CHAIN (3SZ-VE, K3-VE / FF) CHAIN (3SZ-VE / 4WD) CYLINDER HEAD GASKET (3SZ-VE, K3-VE / FF) CYLINDER HEAD GASKET (3SZ-VE / 4WD) TIMING CHAIN (BELT) COVER OIL SEAL (3SZ-VE, K3-VE)
		Micrometer	VALVE CLEARANCE (3SZ-VE, K3-VE)
		Dial gauge	VALVE CLEARANCE (3SZ-VE, K3-VE)
		Precision straightedge, Push-Pull gauge	ENGINE MECHANICAL SYSTEM
		CO/HC tester	ENGINE MECHANICAL SYSTEM
		Compression gauge	ENGINE MECHANICAL SYSTEM
		Thickness gauge	VALVE CLEARANCE (3SZ-VE, K3-VE)
		Belt tension gauge	ENGINE MECHANICAL SYSTEM FAN AND ALTERNATOR V BELT

		Timing light	ENGINE MECHANICAL SYSTEM
	QL25N-MH	Ratchet-equipped preset type torque wrench 9.5 sq (5-25N*m) Tohnichi or equivalent	FAN AND ALTERNATOR V BELT PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF) PARTIAL ENGINE ASSEMBLY (3SZ-VE / 4WD) TIMING CHAIN (BELT) COVER OIL SEAL (3SZ-VE, K3-VE)
	NBNS3-12	Crowfoot wrench 9.5sq (12mm) KTC or equivalent	VALVE CLEARANCE (3SZ-VE, K3-VE) PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF) PARTIAL ENGINE ASSEMBLY (3SZ-VE / 4WD) CHAIN (3SZ-VE, K3-VE / FF) CHAIN (3SZ-VE / 4WD) CAMSHAFT (3SZ-VE) CYLINDER HEAD GASKET (3SZ-VE / 4WD) ENGINE REAR OIL SEAL (3SZ-VE, K3-VE / FF) VALVE STEM OIL SEAL (O-RING) (3SZ-VE, K3-VE)
	B20T-19	Coolant temperature sensor socket KTC or equivalent	PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF) PARTIAL ENGINE ASSEMBLY (3SZ-VE / 4WD)

02

LUBRICANT AND OTHERS

		MP grease	CHAIN (3SZ-VE, K3-VE / FF) CHAIN (3SZ-VE / 4WD) TIMING CHAIN (BELT) COVER OIL SEAL (3SZ-VE, K3-VE) ENGINE REAR OIL SEAL (3SZ-VE, K3-VE / FF) ENGINE REAR OIL SEAL (3SZ-VE / 4WD))
		Engine oil	VALVE CLEARANCE (3SZ-VE, K3-VE) PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF) CHAIN (3SZ-VE, K3-VE / FF) CHAIN (3SZ-VE / 4WD) CAMSHAFT (3SZ-VE) CAMSHAFT (K3-VE) CYLINDER HEAD GASKET (3SZ-VE, K3-VE / FF) CYLINDER HEAD GASKET (3SZ-VE / 4WD) ENGINE REAR OIL SEAL (3SZ-VE, K3-VE / FF) VALVE STEM OIL SEAL (O-RING) (3SZ-VE, K3-VE)
		Gasoline	PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF) PARTIAL ENGINE ASSEMBLY (3SZ-VE / 4WD)
		Cutter knife	TIMING CHAIN (BELT) COVER OIL SEAL (3SZ-VE, K3-VE) ENGINE REAR OIL SEAL (3SZ-VE, K3-VE / FF) ENGINE REAR OIL SEAL (3SZ-VE / 4WD)
		Tape	CAMSHAFT (3SZ-VE) CAMSHAFT (K3-VE)
		Sandpaper (No.400)	TIMING CHAIN (BELT) COVER OIL SEAL (3SZ-VE, K3-VE) ENGINE REAR OIL SEAL (3SZ-VE, K3-VE / FF) ENGINE REAR OIL SEAL (3SZ-VE / 4WD)

PREPARATION - ENGINE MECHANICAL

02

		Paint	VALVE CLEARANCE (3SZ-VE, K3-VE) CAMSHAFT (3SZ-VE) CAMSHAFT (K3-VE) CYLINDER HEAD GASKET (3SZ-VE, K3-VE / FF) CYLINDER HEAD GASKET (3SZ-VE / 4WD)
		Rope or Wire	VALVE CLEARANCE (3SZ-VE, K3-VE) CAMSHAFT (3SZ-VE) CAMSHAFT (K3-VE)
		Three Bond1324	VALVE CLEARANCE (3SZ-VE, K3-VE) PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF) CAMSHAFT (3SZ-VE) ENGINE REAR OIL SEAL (3SZ-VE, K3-VE / FF) ENGINE REAR OIL SEAL (3SZ-VE / 4WD)
		Three Bond1280E	VALVE CLEARANCE (3SZ-VE, K3-VE) PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF) PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / 4WD) CHAIN (3SZ-VE, K3-VE/FF) CHAIN (3SZ-VE, K3-VE/4WD) CAMSHAFT (3SZ-VE) CAMSHAFT (K3-VE) CYLINDER HEAD GASKET (3SZ-VE, K3-VE/ FF) CYLINDER HEAD GASKET (3SZ-VE/4WD) TIMING CHAIN(BELT)COVER OIL SEAL(3SZ-VE, K3-VE) VALVE STEM OIL SEAL(O-RING)(3SZ-VE, K3-VE)
		Protective tape	CHAIN (3SZ-VE, K3-VE / FF) CHAIN (3SZ-VE / 4WD) TIMING CHAIN (BELT) COVER OIL SEAL (3SZ-VE, K3-VE) ENGINE REAR OIL SEAL (3SZ-VE, K3-VE / FF) ENGINE REAR OIL SEAL (3SZ-VE / 4WD)
		Wooden block	CHAIN (3SZ-VE, K3-VE / FF) CHAIN (3SZ-VE / 4WD) TIMING CHAIN (BELT) COVER OIL SEAL (3SZ-VE, K3-VE) VALVE STEM OIL SEAL (O-RING) (3SZ-VE, K3-VE)
		Vinyl tape	CAMSHAFT (3SZ-VE) CAMSHAFT (K3-VE)
		Engine hanger No.1	PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF) PARTIAL ENGINE ASSEMBLY (3SZ-VE / 4WD)
		Engine hanger No.2	PARTIAL ENGINE ASSEMBLY (3SZ-VE, K3-VE / FF) PARTIAL ENGINE ASSEMBLY (3SZ-VE / 4WD)

FUEL

SST

	09842-30070	Wire, EFI inspection	FUEL INJECTOR ASSEMBLY
	09268-41047	Tool set, injection measuring	FUEL SYSTEM FUEL INJECTOR ASSEMBLY

02

RECOMMENDED TOOLS

	09960-97001	DS-II	FUEL SYSTEM
		Torque wrench	FUEL INJECTOR ASSEMBLY FUEL PUMP ASSEMBLY FUEL TANK ASSEMBLY
		Electrical tester	FUEL SYSTEM FUEL INJECTOR ASSEMBLY FUEL PUMP ASSEMBLY
		EFI fuel pressure gauge	FUEL SYSTEM

LUBRICANT AND OTHERS

		Fuel hose	FUEL INJECTOR ASSEMBLY
		12V battery for car use	FUEL INJECTOR ASSEMBLY

EMISSION CONTROL

RECOMMENDED TOOLS

	B20D-22H	Oxygen sensor socket KTC or equivalent	OXYGEN SENSOR OXYGEN SENSOR NO.2
	09960-97001	DS-II	EMISSION CONTROL SYSTEM
		MityVac	EMISSION CONTROL SYSTEM
	QL50N-MH	Ratchet-equipped preset type torque wrench 9.5 sq (10-50N*m) Tohnichi or equivalent	OXYGEN SENSOR

EXHAUST

RECOMMENDED TOOLS

	B20D-22H	Oxygen sensor socket KTC or equivalent	EXHAUST MANIFOLD TO HEAD GASKET
		Torque wrench	EXHAUST MANIFOLD TO HEAD GASKET EXHAUST PIPE ASSEMBLY FR
		Vernier calipers	EXHAUST PIPE ASSEMBLY FR
	QL25N-MH	Ratchet-equipped preset type torque wrench 9.5 sq (5-25N*m) Tohnichi or equivalent	EXHAUST MANIFOLD TO HEAD GASKET

COOLING

RECOMMENDED TOOLS

	09960-97001	DS-II	COOLING FAN SYSTEM
		Torque wrench	RADIATOR ASSEMBLY THERMOSTAT
		Vernier calipers	THERMOSTAT
		Temperature gauge	THERMOSTAT
		Radiator cap tester	COOLANT COOLING SYSTEM
		Radiator cap tester adapter	COOLANT COOLING SYSTEM
		Electrical tester	COOLING FAN RELAY WITH WATER FAN ASSEMBLY
	QL25N-MH	Ratchet-equipped preset type torque wrench 9.5 sq (5-25N*m) Tohnichi or equivalent	WATER PUMP ASSEMBLY

LUBRICANT AND OTHERS

		Ethylene glycol based anti-freeze solution	COOLING SYSTEM COOLANT
		Rope	THERMOSTAT
		Heater	THERMOSTAT

LUBRICATION

SST

	09228-87201	Wrench oil filter	OIL FILTER ELEMENT
---	-------------	-------------------	--------------------

02

SERVICE TOOL

	09032-00100	Cutter, oil pan seal	OIL PAN (3SZ-VE, K3-VE / FF) OIL PAN (3SZ-VE / 4WD)
---	-------------	----------------------	--

RECOMMENDED TOOLS

		Torque wrench	LUBRICATION SYSTEM OIL PUMP ASSEMBLY (3SZ-VE, K3-VE / FF) OIL PUMP ASSEMBLY (3SZ-VE / 4WD) OIL FILTER ELEMENT OIL PAN (3SZ-VE, K3-VE / FF) OIL PAN (3SZ-VE / 4WD)
		Oil pressure gauge set	LUBRICATION SYSTEM
		Oil pressure gauge adopter	LUBRICATION SYSTEM
	B20-24HD	Oil pressure socket KTC or equivalent	LUBRICATION SYSTEM

LUBRICANT AND OTHERS

		Engine oil	LUBRICATION SYSTEM OIL PUMP ASSEMBLY (3SZ-VE, K3-VE / FF) OIL PUMP ASSEMBLY (3SZ-VE / 4WD) OIL FILTER ELEMENT
		Hose	OIL FILTER ELEMENT
		Three Bond 1104	LUBRICATION SYSTEM

IGNITION

RECOMMENDED TOOLS

		Torque wrench	IGNITION SYSTEM CAM POSITION SENSOR CRANK POSITION SENSOR
		Plug gap gauge	SPARK PLUG
		Electrical tester	IGNITION SYSTEM CAM POSITION SENSOR CRANK POSITION SENSOR

02

LUBRICANT AND OTHERS

		Engine oil	CRANK POSITION SENSOR CAM POSITION SENSOR
--	--	------------	--

STARTING

RECOMMENDED TOOLS

		Torque wrench	STARTER ASSEMBLY (FF) STARTER ASSEMBLY (4WD)
		Vernier calipers	STARTER ASSEMBLY (FF) STARTER ASSEMBLY (4WD)
		Inspection cable	STARTER ASSEMBLY (FF) STARTER ASSEMBLY (4WD)
		Electrical tester	STARTER ASSEMBLY (FF) STARTER ASSEMBLY (4WD)
	QL25N-MH	Ratchet-equipped preset type torque wrench 9.5 sq (5-25N*m) Tohnichi or equivalent	STARTER ASSEMBLY (FF) STARTER ASSEMBLY (4WD)

LUBRICANT AND OTHERS

		12V battery for car use	STARTER ASSEMBLY (FF) STARTER ASSEMBLY (4WD)
--	--	-------------------------	---

CHARGING

RECOMMENDED TOOLS

		Torque wrench	ALTERNATOR ASSEMBLY
	QL25N-MH	Ratchet-equipped preset type torque wrench 9.5 sq (5-25N*m) Tohnichi or equivalent	ALTERNATOR ASSEMBLY
		Electrical tester	CHARGING SYSTEM

 
02

LUBRICANT AND OTHERS

		Engine oil	ALTERNATOR ASSEMBLY
--	--	------------	---------------------

AUTOMATIC TRANSAXLE

SST

	09302-87201	Gauge, neutral start switch adjust	NEUTRAL START SWITCH ASSEMBLY
	09308-00010	Puller, oil seal	TRANSAXLE CASE OIL SEAL TRANSAXLE CASE OIL SEAL NO.2
	09350-87202	Tool set, automatic transmission	TRANSMISSION VALVE BODY ASSEMBLY
	09351-87211	Tool, manual valve setting	TRANSMISSION VALVE BODY ASSEMBLY
	09511-87202	Wrench rear axle bearing lock nut	TRANSAXLE CASE OIL SEAL TRANSAXLE CASE OIL SEAL NO.2
	09518-87709	Replacer, oil seal No.8	TRANSAXLE CASE OIL SEAL TRANSAXLE CASE OIL SEAL NO.2
	09628-00011	Puller, tie-rod end	TRANSAXLE CASE OIL SEAL TRANSAXLE CASE OIL SEAL NO.2

RECOMMENDED TOOLS

	09960-97001	DS-II	AUTOMATIC TRANSAXLE SYSTEM
		Torque wrench	NEUTRAL START SWITCH ASSEMBLY TRANSAXLE ASSEMBLY (ATM) TRANSMISSION REVOLUTION SENSOR OIL COOLER HOSE TRANSAXLE OIL PAN (ATM) SOLENOID WIRE TRANSAXLE CASE OIL SEAL TRANSAXLE CASE OIL SEAL NO.2 TRANSMISSION CONTROL CABLE ASSEMBLY SHIFT LOCK RELEASE CABLE ASSEMBLY
		Oscillo scope	AUTOMATIC TRANSAXLE SYSTEM
		Dial gauge	TORQUE CONVERTER & DRIVE PLATE

		Thickness gauge	SHIFT LOCK RELEASE CABLE ASSEMBLY
		Electrical tester	AUTOMATIC TRANSAXLE SYSTEM NEUTRAL START SWITCH ASSEMBLY AUTOMATIC TRANSMISSION 3WAY SOLE- NOID ASSEMBLY CLUTCH CONTROL SOLENOID NO.1 CLUTCH CONTROL SOLENOID NO.2 LOCKUP CONTROL SOLENOID
		Oil pressure gauge	AUTOMATIC TRANSAXLE SYSTEM
		Oil pressure gauge adapter	AUTOMATIC TRANSAXLE SYSTEM

 
 
02

LUBRICANT AND OTHERS

		MP grease	TRANSAXLE CASE OIL SEAL TRANSAXLE CASE OIL SEAL NO.2
		Engine oil	TRANSAXLE ASSEMBLY (ATM)
		DEXRON-III	TRANSAXLE ASSEMBLY (ATM) OIL COOLER HOSE TRANSAXLE OIL PAN (ATM) OIL STRAINER SOLENOID WIRE TRANSMISSION VALVE BODY ASSEMBLY TRANSAXLE CASE OIL SEAL TRANSAXLE CASE OIL SEAL NO.2

CLUTCH

SST

	09210-87701	Holder, fly wheel	CLUTCH UNIT (FF) CLUTCH UNIT (4WD)
	09301-87703	Tool, clutch guide	CLUTCH UNIT (FF) CLUTCH UNIT (4WD)
	09302-87701	Gauge, clutch diaphragm spring height No.4	CLUTCH UNIT (FF) CLUTCH UNIT (4WD)
	09333-00013	Aligner, clutch diaphragm spring	CLUTCH UNIT (FF) CLUTCH UNIT (4WD)

RECOMMENDED TOOLS

		Torque wrench	CLUTCH PEDAL (RHD) CLUTCH PEDAL (LHD) CLUTCH MASTER CYLINDER ASSEMBLY (3SZ-VE) CLUTCH RELEASE CYLINDER ASSEMBLY (3SZ-VE) CLUTCH RELEASE CABLE ASSEMBLY (K3-VE) CLUTCH UNIT (FF) CLUTCH UNIT (4WD)
		Vernier calipers	CLUTCH PEDAL (RHD) CLUTCH PEDAL (LHD) CLUTCH UNIT (FF) CLUTCH UNIT (4WD)
		Dial gauge	CLUTCH UNIT (FF) CLUTCH UNIT (4WD)
	QL25-MH	Ratchet-equipped preset type torque wrench 9.5 sq (5-25*m) Tohnichi or equivalent	CLUTCH PEDAL (RHD) CLUTCH PEDAL (LHD) CLUTCH MASTER CYLINDER ASSEMBLY (3SZ-VE)
	NBNS3-12	Crowfoot wrench KTC or equivalent	CLUTCH PEDAL (RHD) CLUTCH PEDAL (LHD) CLUTCH MASTER CYLINDER ASSEMBLY (3SZ-VE)
	NBNS3-10	Crowfoot wrench KTC or equivalent	CLUTCH MASTER CYLINDER ASSEMBLY (3SZ-VE) CLUTCH RELEASE CYLINDER ASSEMBLY (3SZ-VE)
	CL25N*10D-MH	Head changing/preset type torque wrench 10D (5-25N*m) Tohnichi or equivalent	CLUTCH RELEASE CYLINDER ASSEMBLY (3SZ-VE)

	RH10D*12	Ring head 10D*12 Tohnichi or equivalent	CLUTCH RELEASE CYLINDER ASSEMBLY (3SZ-VE)
--	----------	---	--

LUBRICANT AND OTHERS

		MP grease	CLUTCH PEDAL (RHD) CLUTCH PEDAL (LHD) CLUTCH MASTER CYLINDER ASSEMBLY (3SZ-VE) CLUTCH RELEASE CABLE ASSEMBLY (K3- VE) CLUTCH UNIT (FF) CLUTCH UNIT (4WD)
		EP(Extreme Pressure) grease	CLUTCH RELEASE CYLINDER ASSEMBLY (3SZ-VE) CLUTCH UNIT (FF) CLUTCH UNIT (4WD)
		Clutch grease	CLUTCH UNIT (FF) CLUTCH UNIT (4WD)
		Break fluid(DOT3)	CLUTCH MASTER CYLINDER ASSEMBLY (3SZ-VE) CLUTCH RELEASE CYLINDER ASSEMBLY (3SZ-VE) CLUTCH UNIT (FF) CLUTCH UNIT (4WD)

MANUAL TRANSAXLE

SST

	09308-00010	Puller, oil seal	FRONT DIFFERENTIAL OIL SEAL
	09518-87709	Replacer, oil seal No.8	FRONT DIFFERENTIAL OIL SEAL

02

RECOMMENDED TOOLS

 
		Torque wrench	TRANSAXLE ASSEMBLY (MTX / FF) TRANSAXLE ASSEMBLY (MTX / 4WD) TRANSMISSION FLOOR SHIFT ASSEMBLY (FF) TRANSMISSION FLOOR SHIFT ASSEMBLY (4WD) BACK-UP LAMP SWITCH ASSEMBLY
	QL50N-MH	Ratchet-equipped preset type torque wrench 9.5 sq (10-50N*m) Tohnichi or equivalent	MANUAL TRANSAXLE SYSTEM
	NBNS3-10	Crowfoot wrench KTC or equivalent	TRANSAXLE ASSEMBLY (MTX / FF) TRANSAXLE ASSEMBLY (MTX / 4WD)
	CL-25N*10D-MH	Head changing/preset type torque wrench 10D (5-25N*m) Tohnichi or equivalent	TRANSAXLE ASSEMBLY (MTX / FF) TRANSAXLE ASSEMBLY (MTX / 4WD)
	RH10D*12	Ring head 10D * 12 Tohnichi or equivalent	TRANSAXLE ASSEMBLY (MTX / FF) TRANSAXLE ASSEMBLY (MTX / 4WD)
		Electrical tester	SPEED METER SENSOR BACK-UP LAMP SWITCH ASSEMBLY

LUBRICANT AND OTHERS

		12V battery for car use	SPEED METER SENSOR
		MP grease	TRANSMISSION FLOOR SHIFT ASSEMBLY (FF) TRANSMISSION FLOOR SHIFT ASSEMBLY (4WD)
		Manual transmission gear oil (API GL-3 or GL-4, SAE 75W-90, 75W-85 or 75W-85)	MANUAL TRANSAXLE SYSTEM TRANSAXLE ASSEMBLY (MTX / FF) TRANSAXLE ASSEMBLY (MTX / 4WD) FRONT DIFFERENTIAL OIL SEAL BACK-UP LAMP SWITCH ASSEMBLY

TRANSFER

SST

	09249-63010	Torque wrench adapter	TRANSFER ASSEMBLY (4WD)
---	-------------	-----------------------	-------------------------

02

RECOMMENDED TOOLS

		Torque wrench	TRANSFER OIL (4WD) TRANSFER ASSEMBLY (4WD)
--	--	---------------	---

LUBRICANT AND OTHERS

		Manual transmission gear oil (API GL-3 or GL-4, SAE 75W-90, 75W-85 or 75W-80)	TRANSFER OIL (4WD) TRANSFER ASSEMBLY (4WD)
		Wire	TRANSFER OIL (4WD)

PROPELLER SHAFT

RECOMMENDED TOOLS

		Torque wrench	PROPELLER WITH CENTER BEARING SHAFT ASSEMBLY
		V-shaped blocks	PROPELLER WITH CENTER BEARING SHAFT ASSEMBLY
		Dial gauge	PROPELLER WITH CENTER BEARING SHAFT ASSEMBLY

DRIVE SHAFT

SST

	09511-87202	Wrench rear axle bearing lock nut	FRONT DRIVE SHAFT
	09628-00011	Puller, tie-rod end	FRONT DRIVE SHAFT
	09648-97202	Pliers B, drive shaft boots band	FRONT DRIVE SHAFT
	09729-97203	Socket, hexagon wrench 6 TONE 3KH-6L or equivalent	FRONT DRIVE SHAFT
	09905-00012	expander, snap ring	FRONT DRIVE SHAFT

SERVICE TOOL

		Chisel	FRONT DRIVE SHAFT
		Hammer	FRONT DRIVE SHAFT
		Waterpump plier	FRONT DRIVE SHAFT

RECOMMENDED TOOLS

		Torque wrench	FRONT DRIVE SHAFT
	CL100N*15D-MH	Head changing/preset type torque wrench 15D (20-100 N*m) Tohnichi or equivalent	FRONT DRIVE SHAFT
	RH15D-17	Ring head 15D*17 Tohnichi or equivalent	FRONT DRIVE SHAFT

 
LUBRICANT AND OTHERS

		Rope or wire	FRONT DRIVE SHAFT
--	--	--------------	-------------------

DIFFERENTIAL

SST

02

	09202-87202	Body, valve spring replacer	REAR DIFFERENTIAL CARRIER OIL SEAL (4WD) REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09219-87202	Stand, engine overhaul	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09308-00010	Puller, oil seal	REAR DIFFERENTIAL CARRIER OIL SEAL (4WD) REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09309-87201	Replacer, transmission bearing	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09309-87301	Replacer, output shaft bearing	REAR DIFFERENTIAL CARRIER OIL SEAL (4WD) REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09548-87202	Attachment, differential overhaul	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09564-87201	Socket, drive pinion lock nut	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09608-87501	Tool set axle hub & drive pinion bearing	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09950-50013	Puller, C set	REAR DIFFERENTIAL CARRIER OIL SEAL (4WD) REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09502-10012	Puller, differential side bearing	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09608-12010	Replacer	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)

RECOMMENDED TOOLS

		Snap ring expander	REAR DIFFERENTIAL CARRIER OIL SEAL (4WD) REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
		Torque wrench	DIFFERENTIAL OIL (4WD) REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
		Micrometer	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
		Dial gauge	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	BT4-14	Hexagon bit socket 12.7 sq (14mm) KTC or equivalent	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
		Bearing pulling attachment	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
		Jack	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)

02

 
LUBRICANT AND OTHERS

 
		MP grease	REAR DIFFERENTIAL CARRIER OIL SEAL (4WD) REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
		Differential Gear Oil SAE80W-90 (API Classification GL5)	DIFFERENTIAL OIL (4WD) REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
		Red lead primer	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
		Three Bond1216	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
		Pigment	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
		Wire brush	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
		Scraper	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)
		Alcohol or white gasoline	REAR DIFFERENTIAL CARRIER ASSEMBLY (4WD)

AXLE

SST

02

	09223-22010	Replacer, crankshaft front oil seal	REAR AXLE ASSEMBLY (4WD)
	09253-97501	Anvil, input Shaft Bearing	REAR AXLE ASSEMBLY (4WD)
	09308-00010	Puller, oil seal	REAR AXLE ASSEMBLY (4WD)
	09506-87301	Replacer, differential drive pinion bearing corn, rear	FRONT AXLE HUB LH
	09506-87302	Replacer, differential drive pinion bearing corn, rear	FRONT AXLE HUB LH
	09515-20010	Replacer, rear axle shaft bearing	REAR AXLE ASSEMBLY (4WD)
	09515-21010	Replacer	REAR AXLE ASSEMBLY (4WD)
	09517-12010	Replacer, rear axle shaft oil seal	REAR AXLE ASSEMBLY (4WD)
	09520-00031	Puller, rear axle shaft	FRONT AXLE HUB LH REAR AXLE ASSEMBLY (4WD)
	09527-87301	Remover, rear axle shaft bearing	FRONT AXLE HUB LH
	09612-30012	Puller	REAR AXLE ASSEMBLY (4WD)
	09628-00011	Puller, tie-rod end	FRONT AXLE HUB LH

	09718-87701	Replacer, dust cover	FRONT AXLE HUB LH
	09950-70010	Set, handle	FRONT AXLE HUB LH
	09951-07200	Handle	FRONT AXLE HUB LH
	09950-97201	Puller, universal	FRONT AXLE HUB LH
	09023-00100	Wrench, union nut	REAR AXLE HOUSING ASSEMBLY (4WD)
	09550-10013	Set, replacer B	FRONT AXLE HUB LH

RECOMMENDED TOOLS

		Chisel	REAR AXLE ASSEMBLY (4WD)
		Snap ring pliers	FRONT AXLE HUB LH
		Hand grinder	REAR AXLE ASSEMBLY (4WD)
		Torque wrench	AXLE SYSTEM FRONT AXLE HUB LH REAR AXLE HUB AND BEARING ASSEMBLY LH (FF) REAR AXLE ASSEMBLY (4WD) REAR AXLE HOUSING ASSEMBLY (4WD)
		V-shaped blocks	REAR AXLE ASSEMBLY (4WD)
		Dial gauge	AXLE SYSTEM REAR AXLE ASSEMBLY (4WD)
	BT4-T55L	Long TORX wrench T55 KTC or equivalent	REAR AXLE HUB & BEARING ASSEMBLY LH (FF)
		Jack	REAR AXLE HOUSING ASSEMBLY (4WD)

LUBRICANT AND OTHERS

		MP grease	REAR AXLE ASSEMBLY (4WD)
--	--	-----------	--------------------------

PREPARATION - AXLE

		Three Bond1212	REAR AXLE HOUSING ASSEMBLY (4WD)
--	--	----------------	----------------------------------

SUSPENSION

SST

	09628-00011	Puller, tie-rod end	FRONT SUSPENSION LOWER ARM NO. 1 LH
	09727-30021	Compressor, front coil spring	FRONT SHOCK ABSORBER WITH COIL SPRING
	09729-97202	Socket, lock nut17	FRONT SHOCK ABSORBER WITH COIL SPRING
	09729-97203	Socket, hexagon wrench6 (TONE 3KH-6L)	FRONT SHOCK ABSORBER WITH COIL SPRING FRONT STABILIZER BAR REAR STABILIZER BAR (4WD)
	09023-00100	Wrench, union nut	REAR COIL SPRING LH

02

RECOMMENDED TOOLS

		Brake pedal pusher	FRONT WHEEL ALIGNMENT
		Metal saw	FRONT SHOCK ABSORBER WITH COIL SPRING REAR SHOCK ABSORBER ASSEMBLY LH
		Torque wrench	FRONT WHEEL ALIGNMENT FRONT SHOCK ABSORBER WITH COIL SPRING FRONT SUSPENSION LOWER ARM NO. 1 LH FRONT STABILIZER BAR REAR COIL SPRING LH REAR SHOCK ABSORBER ASSEMBLY LH REAR AXLE BEAM ASSEMBLY (FF) REAR SUSPENSION ARM ASSEMBLY NO. 1 LH (4WD) REAR LATERAL CONTROL ROD ASSEMBLY (4WD) REAR STABILIZER BAR (FF) REAR STABILIZER BAR (4WD)
		Camber caster gauge	FRONT WHEEL ALIGNMENT REAR WHEEL ALIGNMENT
		Turning radius gauge	FRONT WHEEL ALIGNMENT
		Toe-in gauge	FRONT WHEEL ALIGNMENT REAR WHEEL ALIGNMENT

PREPARATION - SUSPENSION

		CCK gauge compensator	FRONT WHEEL ALIGNMENT REAR WHEEL ALIGNMENT
	NBNS3-17	Crowfoot wrench 9.5sq (10mm) KTC or equivalent	REAR STABILIZER BAR (4WD) FRONT STABILIZER BAR
	CL100N*15D-MH	Head changing/preset type torque wrench 15D (20-100N*m) Tohnichi or equivalent	FRONT SHOCK ABSORBER WITH COIL SPRING
	RH15D-17	Ring head 15D*17 Tohnichi or equivalent	FRONT SHOCK ABSORBER WITH COIL SPRING

TIRE & WHEEL

RECOMMENDED TOOLS

		Torque wrench	TIRE & WHEEL
		Tire pressure gauge	TIRE & WHEEL SYSTEM
		Dial gauge	TIRE & WHEEL SYSTEM

BRAKE CONTROL

SST

 
	09520-00031	Puller, rear axle shaft	SKID CONTROL SENSOR ROTOR FR LH (with ABS & VSC)
	09950-70010	Set, handle	SKID CONTROL SENSOR ROTOR FR LH (with ABS & VSC)
	09023-00100	Wrench, union nut	BRAKE ACTUATOR ASSEMBLY ABS & TRACTION ACTUATOR ASSEMBLY

RECOMMENDED TOOLS

	09960-97001	DS-II	ANTI-LOCK BRAKE SYSTEM VEHICLE STABILITY CONTROL SYSTEM
		Torque wrench	BRAKE ACTUATOR ASSEMBLY ABS & TRACTION ACTUATOR ASSEMBLY SPEED SENSOR FR LH (with ABS & VSC) SPEED SENSOR RR LH (4WD) SPEED SENSOR RR LH (FF / with ABS & VSC) YAW RATE SENSOR (with VSC) STEERING POSITION SENSOR (with VSC)
		Electrical tester	ANTI-LOCK BRAKE SYSTEM VEHICLE STABILITY CONTROL SYSTEM TRACTION CONTROL SWITCH (with VSC)
	NBNS3-12	Crowfoot wrench 9.5sq (12mm) KTC or equivalent	ABS & TRACTION ACTUATOR ASSEMBLY
	BT4-T55L	Long TORX wrench T55 KTC or equivalent	SPEED SENSOR RR LH (FF / with ABS & VSC)
	BT3-T25L	Long TORX wrench T25 KTC or equivalent	BRAKE ACTUATOR ASSEMBLY ABS & TRACTION ACTUATOR ASSEMBLY

BRAKE

SST

	09703-30011	Tool set, brake shoe return spring	REAR BRAKE
	09737-00020	Wrench, brake booster push rod	BRAKE MASTER CYLINDER ASSEMBLY (RHD) BRAKE MASTER CYLINDER ASSEMBLY (LHD)
	09023-00100	Wrench, union nut	BRAKE FLUID BRAKE MASTER CYLINDER ASSEMBLY (RHD) BRAKE MASTER CYLINDER ASSEMBLY (LHD) BRAKE BOOSTER ASSEMBLY (LHD) FRONT BRAKE FLEXIBLE HOSE NO. 1 REAR BRAKE REAR BRAKE FLEXIBLE HOSE LH

02

RECOMMENDED TOOLS

		Pin Punch	BRAKE MASTER CYLINDER ASSEMBLY (RHD) BRAKE MASTER CYLINDER ASSEMBLY (LHD)
	09960-97001	DS - II	BRAKE FLUID
		Torque wrench	BRAKE FLUID BRAKE PEDAL (RHD) BRAKE PEDAL (LHD) BRAKE PEDAL (LHD / with Shift Lock System) BRAKE MASTER CYLINDER ASSEMBLY (RHD) BRAKE MASTER CYLINDER ASSEMBLY (LHD) BRAKE BOOSTER ASSEMBLY (RHD) BRAKE BOOSTER ASSEMBLY (LHD) FRONT BRAKE PROPORTIONING VALVE ASSEMBLY FRONT BRAKE FLEXIBLE HOSE NO. 1 REAR BRAKE REAR BRAKE FLEXIBLE HOSE LH
		Vernier calipers	FRONT BRAKE BRAKE PEDAL (RHD) BRAKE PEDAL (LHD) BRAKE PEDAL (LHD / with Shift Lock System) REAR BRAKE
		Dial gauge	FRONT BRAKE
		MityVac	BRAKE SYSTEM

PREPARATION - BRAKE

	NBNS3-12	Crowfoot wrench 9.5 sq (12mm) KTC for equivalent	BRAKE MASTER CYLINDER ASSEMBLY (RHD) BRAKE MASTER CYLINDER ASSEMBLY (LHD) BRAKE BOOSTER ASSEMBLY (LHD)
	NBNS3-10	Crowfoot wrench 9.5 sq (10mm) KTC for equivalent	PROPORTIONING VALVE ASSEMBLY
	BE3-270	Extension bar (270mm) KTC for equivalent	BRAKE BOOSTER ASSEMBLY (RHD) BRAKE BOOSTER ASSEMBLY (LHD)
	ABX-33	Shoe-hold spring tool KTC for equivalent	REAR BRAKE

LUBRICANT AND OTHERS

		MP grease	BRAKE PEDAL (RHD) BRAKE PEDAL (LHD) BRAKE PEDAL (LHD / with Shift Lock System)
		Brake Grease	FRONT BRAKE REAR BRAKE
		Brake Fluid (DOT 3)	BRAKE FLUID BRAKE MASTER CYLINDER ASSEMBLY (RHD) BRAKE MASTER CYLINDER ASSEMBLY (LHD) FRONT BRAKE
		Brake Cleaner (Spray Type)	FRONT BRAKE

PARKING BRAKE

RECOMMENDED TOOLS

		Torque wrench	PARKING BRAKE CABLE ASSEMBLY NO. 3 PARKING BRAKE LEVER ASSEMBLY
		Electrical tester	BRAKE WARNING TEST SWITCH ASSEMBLY

STEERING COLMUN

RECOMMENDED TOOLS

		Torque wrench	STEERING COLUMN ASSEMBLY (RHD) STEERING COLUMN ASSEMBLY (LHD)
		Pin Punch (φ3mm)	STEERING COLUMN ASSEMBLY (RHD) STEERING COLUMN ASSEMBLY (LHD)

 
02

LUBRICANT AND OTHERS

		Drill	STEERING COLUMN ASSEMBLY (RHD) STEERING COLUMN ASSEMBLY (LHD)
--	--	-------	--

POWER STEERING

SST

	09612-00012	Stand, rack & pinion steering rack housing	STEERING GEAR ASSEMBLY (FF / RHD) STEERING GEAR ASSEMBLY (FF / LHD) STEERING GEAR ASSEMBLY (4WD)
	09616-87701	Socket, steering pinion bearing adjusting	STEERING GEAR ASSEMBLY (FF / RHD) STEERING GEAR ASSEMBLY (FF / LHD) STEERING GEAR ASSEMBLY (4WD)
	09922-10010	Wrench, steering rack end	STEERING GEAR ASSEMBLY (FF / RHD) STEERING GEAR ASSEMBLY (FF / LHD) STEERING GEAR ASSEMBLY (4WD)

02

RECOMMENDED TOOLS

	09960-97001	DS - II	POWER STEERING SYSTEM
		Torque wrench	POWER STEERING SYSTEM STEERING GEAR ASSEMBLY (FF / RHD) STEERING GEAR ASSEMBLY (FF / LHD) STEERING GEAR ASSEMBLY (4WD)
		Oscillo scope	POWER STEERING SYSTEM
		Electrical tester	POWER STEERING SYSTEM
		Simplified spinner	STEERING GEAR ASSEMBLY (FF / RHD) STEERING GEAR ASSEMBLY (FF / LHD) STEERING GEAR ASSEMBLY (4WD)

LUBRICANT AND OTHERS

		EP(Extreme Pressure) grease	STEERING GEAR ASSEMBLY (FF / RHD) STEERING GEAR ASSEMBLY (FF / LHD) STEERING GEAR ASSEMBLY (4WD)
		Long Life Grease	STEERING GEAR ASSEMBLY (FF / RHD) STEERING GEAR ASSEMBLY (FF / LHD) STEERING GEAR ASSEMBLY (4WD)
		Molybdenum disulphide lithium base grease	STEERING GEAR ASSEMBLY (FF / RHD) STEERING GEAR ASSEMBLY (FF / LHD) STEERING GEAR ASSEMBLY (4WD)

AIR CONDITIONER

RECOMMENDED TOOLS

02

 
 
		Snap ring pliers	AIR CONDITIONER PANEL (LHD) COMPRESSOR ASSEMBLY WITH MAGNET CLUTCH
		Vacuum pump	REFRIGERANT HFC-134a [R134a]
		Halogen leak detector	REFRIGERANT HFC-134a [R134a]
		Torque wrench	AIR CONDITIONER PANEL (RHD) AIR CONDITIONER RADIATOR ASSEMBLY (RHD) AIR CONDITIONER BLOWER ASSEMBLY (RHD) AIR CONDITIONER BLOWER ASSEMBLY (LHD) COMPRESSOR ASSEMBLY WITH MAGNET CLUTCH COOLER CONDENSER ASSEMBLY BLOWER REGISTER (RHD) BLOWER REGISTER (LHD) BLOWER MOTOR ASSEMBLY (RHD) BLOWER MOTOR ASSEMBLY (LHD) HEATER RADIATOR (LHD)
		Dial gauge	COMPRESSOR ASSEMBLY WITH MAGNET CLUTCH
		Manifold gauge	REFRIGERANT HFC-134a [R134a] AIR CONDITIONING SYSTEM
		Temperature gauge	AIR CONDITIONING SYSTEM
		Electrical tester	AIR CONDITIONING SYSTEM HEATER CONTROL KNOB NO. 2 (RHD) HEATER CONTROL BASE (RHD) HEATER CONTROL (RHD) HEATER CONTROL (LHD) BLOWER REGISTER (RHD) BLOWER REGISTER (LHD) COOLER CONTROL SWITCH ASSEMBLY (LHD) BLOWER MOTOR ASSEMBLY (RHD) BLOWER MOTOR ASSEMBLY (LHD) COOLER THERMISTOR NO. 3 HEATER BLOWER MOTOR RELAY ASSEMBLY MAGNET CLUTCH RELAY
	QL25N-MH	Ratchet-equipped preset type torque wrench 9.5 sq (5-25N*m) Tohnichi or equivalent	HEATER RADIATOR (LHD)
	SOP-171	External snap ring plier KTC or equivalent	AIR CONDITIONER PANEL (LHD)
	SPC0110	Spare tips for snap ring plier (Straight type 1.5) KTC or equivalent	AIR CONDITIONER PANEL (LHD)

LUBRICANT AND OTHERS

		Refrigerant gas HFC-134a (R134a)	REFRIGERANT HFC-134a [R134a]
		12V battery for car use	AIR CONDITIONING SYSTEM HEATER CONTROL KNOB NO. 2 (RHD) HEATER CONTROL BASE (RHD) HEATER CONTROL (RHD) HEATER CONTROL (LHD) COMPRESSOR ASSEMBLY WITH MAGNET CLUTCH BLOWER MOTOR ASSEMBLY (RHD) BLOWER MOTOR ASSEMBLY (LHD) HEATER BLOWER MOTOR RELAY ASSEMBLY
		Vinyl Tape	AIR CONDITIONER RADIATOR ASSEMBLY (RHD) COMPRESSOR ASSEMBLY WITH MAGNET CLUTCH COOLER CONDENSER ASSEMBLY HEATER RADIATOR (LHD)
		Compressor oil (ND-OIL8)	AIR CONDITIONER RADIATOR ASSEMBLY (RHD) AIR CONDITIONER BLOWER ASSEMBLY (LHD) COMPRESSOR ASSEMBLY WITH MAGNET CLUTCH COOLER CONDENSER ASSEMBLY HEATER RADIATOR (LHD)
		Chlorofluorocarbon recovery and regenerating machine	REFRIGERANT HFC-134a [R134a]

SRS AIRBAG

SST

	09082-00760	Sub-harness 4, air bag deployment wire	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIR BAG ASSEMBLY FRONT SEAT AIR BAG ASSEMBLY RH
	09082-87710	Wire, air bag deployment	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIR BAG ASSEMBLY CURTAIN SHIELD AIR BAG RH FRONT SEAT AIR BAG ASSEMBLY RH
	09082-97201	Sub-harness D1, air bag deployment wire	CURTAIN SHIELD AIR BAG RH
	09991-87403	Wire, diagnosis check	SRS AIR BAG SYSTEM
	09991-87404	Wire, engine control system inspection	SRS AIR BAG SYSTEM
	09082-10801	Sub-harness 8A, air bag deployment wire	HORN BUTTON ASSEMBLY
	09082-20801	Sub-harness 8B, air bag deployment wire	HORN BUTTON ASSEMBLY

02

RECOMMENDED TOOLS

		Clip remover	INSTRUMENT PANEL PASSENGER AIR BAG ASSEMBLY FRONT SEAT AIR BAG ASSEMBLY RH AIR BAG COMPUTER ASSEMBLY
	09960-97001	DS-II	SRS AIR BAG SYSTEM
		Torque wrench	HORN BUTTON ASSEMBLY SPIRAL CABLE INSTRUMENT PANEL PASSENGER AIR BAG ASSEMBLY CURTAIN SHIELD AIR BAG RH FRONT SEAT AIR BAG ASSEMBLY RH AIR BAG COMPUTER ASSEMBLY FRONT AIR BAG SENSOR RH SIDE AIR BAG SENSOR ASSEMBLY RH SIDE AIR BAG SENSOR ASSEMBLY RH NO. 2
		Electrical tester	SRS AIR BAG SYSTEM SPIRAL CABLE AIRBAG CUT OFF SWITCH CYLINDER SUB-ASSEMBLY (for Europe)

PREPARATION - SRS AIRBAG

	BT3-T30L	Long TORX wrench T30 KTC or equivalent	HORN BUTTON ASSEMBLY
	B3-E14	TORX wrench E14 KTC or equivalent	HORN BUTTON ASSEMBLY
		TORX wrench T30	HORN BUTTON ASSEMBLY

02

LUBRICANT AND OTHERS

		Wire harness (wire cross-section: 1.25mm ² or more)	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIR BAG ASSEMBLY CURTAIN SHIELD AIR BAG RH FRONT SEAT AIR BAG ASSEMBLY RH
		Wire	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIR BAG ASSEMBLY CURTAIN SHIELD AIR BAG RH FRONT SEAT AIR BAG ASSEMBLY RH
		12V battery for car use	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIR BAG ASSEMBLY CURTAIN SHIELD AIR BAG RH FRONT SEAT AIR BAG ASSEMBLY RH PASSENGER AIRBAG ON/OFF INDICATOR ASSEMBLY (for Europe)
		Protective tape	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIR BAG ASSEMBLY CURTAIN SHIELD AIR BAG RH
		Two bolts (Nominal length of 35 mm or more, pitch of 1.0 mm, nominal diameter of 6.0 mm)	HORN BUTTON ASSEMBLY
		4 tires	HORN BUTTON ASSEMBLY
		2 tires with disc wheel 3 tires	HORN BUTTON ASSEMBLY
		1 tire with disc wheel 4 tires	INSTRUMENT PANEL PASSENGER AIR BAG ASSEMBLY CURTAIN SHIELD AIR BAG RH FRONT SEAT AIR BAG ASSEMBLY RH
		Safety glasses, Vinyl bag	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIR BAG ASSEMBLY CURTAIN SHIELD AIR BAG RH FRONT SEAT AIR BAG ASSEMBLY RH

SEAT BELT

SST

	09082-87710	Wire, air bag deployment	FRONT SEAT OUTER BELT ASSEMBLY RH
	09082-97201	Sub-harness D1, air bag deployment wire	FRONT SEAT OUTER BELT ASSEMBLY RH

02

RECOMMENDED TOOLS

		Torque wrench	FRONT SEAT OUTER BELT ASSEMBLY RH FRONT SEAT INNER BELT ASSEMBLY RH REAR SEAT BELT (Fixed Seat) REAR SEAT BELT (Sliding Seat) REAR SEAT OUTER BELT ASSEMBLY CENTER (for Europe) REAR NO. 1 SEAT BELT ASSEMBLY OUT RH
		Electrical tester	FRONT SEAT INNER BELT ASSEMBLY RH FRONT SEAT CUSHION COVER AND PAD LH
	QL25N-MH	Ratchet-equipped preset type torque wrench 9.5sq (5-25N*m) Tohnichi or equivalent	FRONT SEAT INNER BELT ASSEMBLY RH

LUBRICANT AND OTHERS

		Wire harness (wire cross-section: 1.25mm ² or more)	FRONT SEAT OUTER BELT ASSEMBLY RH
		12V battery for car use	FRONT SEAT OUTER BELT ASSEMBLY RH
		Protective tape	FRONT SEAT OUTER BELT ASSEMBLY RH REAR NO. 1 SEAT BELT ASSEMBLY OUT RH
		1 tire with disc wheel (tire width approx. 185 mm)	FRONT SEAT OUTER BELT ASSEMBLY RH
		Safety glasses, Glove, Vinyl bag	FRONT SEAT OUTER BELT ASSEMBLY RH

ENGINE IMMOBILIZER
RECOMMENDED TOOLS

	09960-97001	DS - II	ENGINE IMMOBILIZER SYSTEM
		Electrical tester	ENGINE IMMOBILIZER SYSTEM

02

LIGHTING

RECOMMENDED TOOLS

		Torque wrench	HEAD LAMP ASSEMBLY LH FOG LAMP ASSEMBLY LH SIDE TURN SIGNAL LAMP ASSEMBLY LH TAIL LAMP (REAR COMBINATION LAMP) ASSEMBLY LH LICENSE PLATE LAMP ASSEMBLY CENTER STOP LAMP ASSEMBLY REAR FOG LAMP ASSEMBLY (for Europe) HEAD LAMP DIMMER SWITCH ASSEMBLY FRONT TURN SIGNAL LAMP ASSEMBLY LH
		Tire pressure gauge	HEAD LAMP ASSEMBLY LH FOG LAMP ASSEMBLY LH
		Electrical tester	MAP LAMP ASSEMBLY ROOM LAMP ASSEMBLY NO. 1 REAR ROOM LAMP ASSEMBLY LH HEAD LAMP DIMMER SWITCH ASSEMBLY HAZARD WARNING SIGNAL SWITCH ASSEMBLY HEAD LAMP LEVELING SWITCH (for Europe) STOP LAMP SWITCH ASSEMBLY REAR DOOR COURTESY LAMP SWITCH ASSEMBLY BACK DOOR LOCK ASSEMBLY LIGHT CONTROL SWITCH ASSEMBLY NO. 1 HEAD LAMP RELAY FOG LAMP RELAY FRONT DOOR COURTESY LAMP SWITCH ASSEMBLY TURN SIGNAL FLASHER ASSEMBLY

02

LUBRICANT AND OTHERS

		Screens for Test Use	HEAD LAMP ASSEMBLY LH
		Thick Paper	HEAD LAMP ASSEMBLY LH
		12V battery for car use	HEAD LAMP RELAY FOG LAMP RELAY

WIPER & WASHER

RECOMMENDED TOOLS

		TORX wrench T30	WINDOW SHIELD WIPER MOTOR ASSEMBLY
		Clip remover	WINDOW SHIELD WIPER MOTOR ASSEMBLY
		Wire brush	WINDOW SHIELD WIPER MOTOR ASSEMBLY REAR WIPER MOTOR AND BRACKET ASSEMBLY
		Torque wrench	WINDOW SHIELD WIPER MOTOR ASSEMBLY WINDOW SHIELD WIPER SWITCH ASSEMBLY REAR WIPER MOTOR AND BRACKET ASSEMBLY WINDOW SHIELD WASHER JAR ASSEMBLY
		Electrical tester	WINDOW SHIELD WIPER SWITCH ASSEMBLY

02

LUBRICANT AND OTHERS

		DENSO No. 50 grease or equivalent	WINDOW SHIELD WIPER MOTOR ASSEMBLY
		12V battery for car use	WINDOW SHIELD WIPER MOTOR ASSEMBLY WINDOW SHIELD WIPER SWITCH ASSEMBLY REAR WIPER MOTOR AND BRACKET ASSEMBLY WINDOW SHIELD WASHER MOTOR & PUMP ASSEMBLY REAR WASHER MOTOR & PUMP ASSEMBLY
		Protective tape	WINDOW SHIELD WIPER MOTOR ASSEMBLY

DOOR LOCK

RECOMMENDED TOOLS

 
		Precision Phillips Screwdriver	DOOR CONTROL TRANSMITTER MODULE SET
	09960-97001	DS - II	WIRELESS DOOR LOCK CONTROL SYSTEM
		Torque wrench	DOOR CONTROL RECEIVER
		Oscillo scope	WIRELESS DOOR LOCK CONTROL SYSTEM
		Electrical tester	POWER DOOR LOCK CONTROL SYSTEM WIRELESS DOOR LOCK CONTROL SYSTEM FRONT DOOR MOTOR LOCK ASSEMBLY RH FRONT DOOR MOTOR LOCK ASSEMBLY LH STEERING COLUMN UPPER W/SWITCH BRACKET ASSEMBLY

LUBRICANT AND OTHERS

		12V battery for car use	POWER DOOR LOCK CONTROL SYSTEM FRONT DOOR MOTOR LOCK ASSEMBLY RH FRONT DOOR MOTOR LOCK ASSEMBLY LH REAR DOOR LOCK ASSEMBLY RH REAR DOOR LOCK ASSEMBLY LH BACK DOOR LOCK ACTUATOR ASSEMBLY
--	--	-------------------------	--

METER

SST

	09991-87403	Wire, diagnosis check	METER & GAUGE SYSTEM
	09991-87404	Wire, engine control system inspection	METER & GAUGE SYSTEM

02

RECOMMENDED TOOLS

	09960-97001	DS - II	METER & GAUGE SYSTEM
		Torque wrench	COMBINATION METER ASSEMBLY
		Electrical tester	METER & GAUGE SYSTEM ENGINE OIL PRESSURE SWITCH ASSEMBLY

AUDIO & VISUAL

RECOMMENDED TOOLS

		Clip remover	ANTENNA CABLE ANTENNA CABLE NO. 2
		Torque wrench	FRONT SPEAKER ASSEMBLY NO. 1 (with 2-Speakers) SPEAKER ASSEMBLY FR NO. 2 (with 6-Speakers) SPEAKER ASSEMBLY RR (with 6-Speakers) STEREO COMPONENT TUNER ASSEMBLY AMPLIFIER ANTENNA ASSEMBLY ANTENNA CABLE ANTENNA CABLE NO. 2
		Electrical tester	AUDIO SYSTEM FRONT SPEAKER ASSEMBLY NO. 1 (with 2-Speakers) SPEAKER ASSEMBLY FR NO. 2 (with 6-Speakers) SPEAKER ASSEMBLY RR (with 6-Speakers)

OTHER SYSTEM

RECOMMENDED TOOLS

		Torque wrench	HIGH PITCHED HORN ASSEMBLY POWER OUTLET SOCKET IGNITION (STARTER) SWITCH ASSEMBLY
		Electrical tester	HORN RELAY IGNITION (STARTER) SWITCH ASSEMBLY SPIRAL CABLE HORN BUTTON WIRE

GLASS & WINDOW

RECOMMENDED TOOLS

		Sealant gun	WINDOW SHIELD GLASS BACK DOOR GLASS
		Drill or eyeleteer (heavy needle to make a hole)	WINDOW SHIELD GLASS BACK DOOR GLASS
		Scraper	WINDOW SHIELD GLASS BACK DOOR GLASS
		Torque wrench	BACK DOOR GLASS WINDOW SHIELD GLASS
		Electrical tester	POWER WINDOW CONTROL SYSTEM POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY POWER WINDOW REGULATOR SWITCH ASSEMBLY POWER WINDOW REGULATOR MOTOR ASSEMBLY RH POWER WINDOW REGULATOR MOTOR ASSEMBLY LH POWER WINDOW REGULATOR MOTOR ASSEMBLY RH (Rear Right) POWER WINDOW REGULATOR MOTOR ASSEMBLY LH (Rear Left) WINDOW SHIELD GLASS FRONT WIPER DEICER SWITCH FRONT WIPER DEICER RELAY DEFOGGER RELAY COOLER CONTROL SWITCH ASSEMBLY

02

LUBRICANT AND OTHERS

		White gasoline	WINDOW SHIELD GLASS BACK DOOR GLASS
		Cutter knife	WINDOW SHIELD GLASS BACK DOOR GLASS
		Gummed Tape	WINDOW SHIELD GLASS BACK DOOR GLASS
		Piano wire	WINDOW SHIELD GLASS BACK DOOR GLASS
		12V battery for car use	POWER WINDOW CONTROL SYSTEM POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY POWER WINDOW REGULATOR MOTOR ASSEMBLY RH POWER WINDOW REGULATOR MOTOR ASSEMBLY LH POWER WINDOW REGULATOR MOTOR ASSEMBLY RH (Rear Right) POWER WINDOW REGULATOR MOTOR ASSEMBLY LH (Rear Left) FRONT WIPER DEICER RELAY DEFOGGER RELAY COOLER CONTROL SWITCH ASSEMBLY
		Rubber suction cups	WINDOW SHIELD GLASS BACK DOOR GLASS

PREPARATION - GLASS & WINDOW

		Seal set (Part number : 999-09600-U9-001)	WINDOW SHIELD GLASS BACK DOOR GLASS
		Protective tape	WINDOW SHIELD GLASS BACK DOOR GLASS
		Wooden block	WINDOW SHIELD GLASS BACK DOOR GLASS

MIRROR

RECOMMENDED TOOLS

		Clip remover	OUTER REAR VIEW MIRROR ASSEMBLY LH
	AP201-W	Handy Remover Wide Type KTC or equivalent	OUTER MIRROR COVER LH
		Torque wrench	OUTER REAR VIEW MIRROR ASSEMBLY LH OUTER MIRROR COVER LH
		Electrical tester	OUTER MIRROR SWITCH ASSEMBLY OUTER MIRROR SWITCH ASSEMBLY OUTER REAR VIEW MIRROR ASSEMBLY RH OUTER REAR VIEW MIRROR ASSEMBLY LH

02

LUBRICANT AND OTHERS

		12V battery for car use	OUTER REAR VIEW MIRROR ASSEMBLY RH OUTER REAR VIEW MIRROR ASSEMBLY LH
		Protective tape	OUTER REAR VIEW MIRROR ASSEMBLY LH OUTER REAR VIEW MIRROR LH OUTER MIRROR COVER LH

INSTRUMENT PANEL

LUBRICANT AND OTHERS

		Protective tape	INSTRUMENT PANEL
--	--	-----------------	------------------

SEAT

SST

	09130-00160	Pliers, hog ring	FRONT SEAT ASSEMBLY RH REAR SEAT ASSEMBLY (Fixed Seat) REAR SEAT ASSEMBLY (Sliding Seat)
--	-------------	------------------	--

RECOMMENDED TOOLS

		Torque wrench	FRONT SEAT ASSEMBLY RH REAR SEAT ASSEMBLY (Fixed Seat) REAR SEAT ASSEMBLY (Sliding Seat)
--	--	---------------	--

02

LUBRICANT AND OTHERS

		Protective tape	FRONT SEAT ASSEMBLY RH
--	--	-----------------	------------------------

BODY

SST

	09812-00010	Wrench, door hinge set bolt	FRONT DOOR REAR DOOR
---	-------------	-----------------------------	-------------------------

02

RECOMMENDED TOOLS

		TORX wrench T30	FRONT DOOR REAR DOOR
		Clip remover	BONNET (HOOD) INSULATOR BONNET (HOOD) LOCK CONTROL CABLE ASSEMBLY FRONT DOOR REAR DOOR BACK DOOR FUEL LID LOCK CONTROL CABLE (RHD) FUEL LID LOCK CONTROL CABLE (LHD) FRONT FENDER LH
		Torque wrench	BONNET (HOOD) BONNET (HOOD) LOCK CONTROL CABLE ASSEMBLY FRONT DOOR REAR DOOR BACK DOOR BACK DOOR STAY FUEL LID LOCK CONTROL CABLE (RHD) FUEL LID LOCK CONTROL CABLE (LHD) FRONT FENDER LH
	CL25N * 10D-MH	Head changing/preset type torque wrench 8D, (2-6N*m) Tohnichi or equivalent	BACK DOOR STAY
	SH10D * 12	Open head Tohnichi or equivalent	BACK DOOR STAY
	BT3- T40L	Long TORX wrench T40 KTC or equivalent	FRONT DOOR REAR DOOR
	BT3- T25L	Long TORX wrench T25 KTC or equivalent	FRONT DOOR REAR DOOR
	BA23	Socket adopter KTC or equivalent	FRONT DOOR REAR DOOR

LUBRICANT AND OTHERS

		MP grease	FRONT DOOR REAR DOOR
		Butyl tape	FRONT DOOR REAR DOOR
		White gasoline	BACK DOOR
		Metal saw	BACK DOOR STAY

		Dryer	BACK DOOR
		Protective tape	FRONT DOOR REAR DOOR
		Two-sided adhesive tapes	FRONT DOOR REAR DOOR
		Safety glasses	BACK DOOR STAY
		Cutter knife	FRONT FENDER LH

EXTERIOR

RECOMMENDED TOOLS

02

		TORX wrench T40	REAR BUMPER COVER
		Clip remover	FRONT BUMPER COVER REAR BUMPER COVER ROOF DRIP SIDE FINISH MOLDING LH ROCKER PANEL MOLDING LH BLACKOUT TAPE NO. 3 LH
		Rubber spatula	BLACKOUT TAPE NO. 2 LH BLACKOUT TAPE NO. 3 LH BLACKOUT TAPE NO. 4 LH
		Scraper	FRONT BUMPER COVER NAME PLATE
	AP201-W	Handy Remover Wide Type KTC or equivalent	REAR BUMPER COVER FRONT DOOR GLASS WEATHER STRIP ASSEMBLY OUT LH REAR DOOR GLASS WEATHER STRIP ASSEMBLY OUT LH
		Torque wrench	FRONT BUMPER COVER REAR BUMPER COVER BLACKOUT TAPE NO. 2 LH BLACKOUT TAPE NO. 3 LH BLACKOUT TAPE NO. 4 LH
		Cemedine EP001 or equivalent	ROOF DRIP SIDE FINISH MOLDING LH

LUBRICANT AND OTHERS

		Butyl tape	BLACKOUT TAPE NO. 4 LH
		White gasoline	FRONT BUMPER COVER NAME PLATE ROOF DRIP SIDE FINISH MOLDING LH ROCKER PANEL MOLDING LH BLACKOUT TAPE NO. 2 LH BLACKOUT TAPE NO. 3 LH BLACKOUT TAPE NO. 4 LH
		Dryer	FRONT BUMPER COVER NAME PLATE ROOF DRIP SIDE FINISH MOLDING LH ROCKER PANEL MOLDING LH BLACKOUT TAPE NO. 2 LH BLACKOUT TAPE NO. 3 LH BLACKOUT TAPE NO. 4 LH
		Protective tape	FRONT BUMPER COVER REAR BUMPER COVER NAME PLATE ROOF DRIP SIDE FINISH MOLDING LH BLACKOUT TAPE NO. 3 LH FRONT DOOR GLASS WEATHER STRIP ASSEMBLY OUT LH REAR DOOR GLASS WEATHER STRIP ASSEMBLY OUT LH

INTERIOR

RECOMMENDED TOOLS

		Clip remover	ROOF HEAD LINING ASSEMBLY
		Torque wrench	ROOF HEAD LINING ASSEMBLY

02

LUBRICANT AND OTHERS

		Protective tape	ROOF HEAD LINING ASSEMBLY
		Wire harness repair tape (Part number : 82997-B2010-000)	ROOF HEAD LINING ASSEMBLY

MULTIPLEX COMMUNICATION

SST

	09991-87403	Wire, diagnosis check	LIN COMMUNICATION SYSTEM
	09991-87404	Wire, engine control system inspection	LIN COMMUNICATION SYSTEM

02

RECOMMENDED TOOLS

		Electrical tester	LIN COMMUNICATION SYSTEM
	09960-97001	DS - II	LIN COMMUNICATION SYSTEM

CAN COMMUNICATION

SST

	09991-87403	Wire, diagnosis check	CAN COMMUNICATION SYSTEM
	09991-87404	Wire, engine control system inspection	CAN COMMUNICATION SYSTEM

RECOMMENDED TOOLS

	09960-97001	DS - II	CAN COMMUNICATION SYSTEM
		Electrical tester	CAN COMMUNICATION SYSTEM