
ENGINE LUBRICATION

CONTENTS

LUBRICANTS 2

ENGINE OIL COOLER 2

LUBRICANTS


Items		Capacity dm ³ {ℓ}
Engine oil	Quantity in oil filter	0.3 {0.3}
	Quantity in oil cooler	0.16 {0.16}
	Total quantity	5.1 {5.1}
	Brand	DIA QUEEN MOTOR OIL (Grade SG or higher); or engine oil in a can marked with ILSAC certification.

ENGINE OIL COOLER

REMOVAL AND INSTALLATION

Pre-removal and Post-Installation Operation

- (1) Engine Oil Removal and Refilling
- (2) Front Bumper Removal and Installation
(Refer to GROUP 51.)

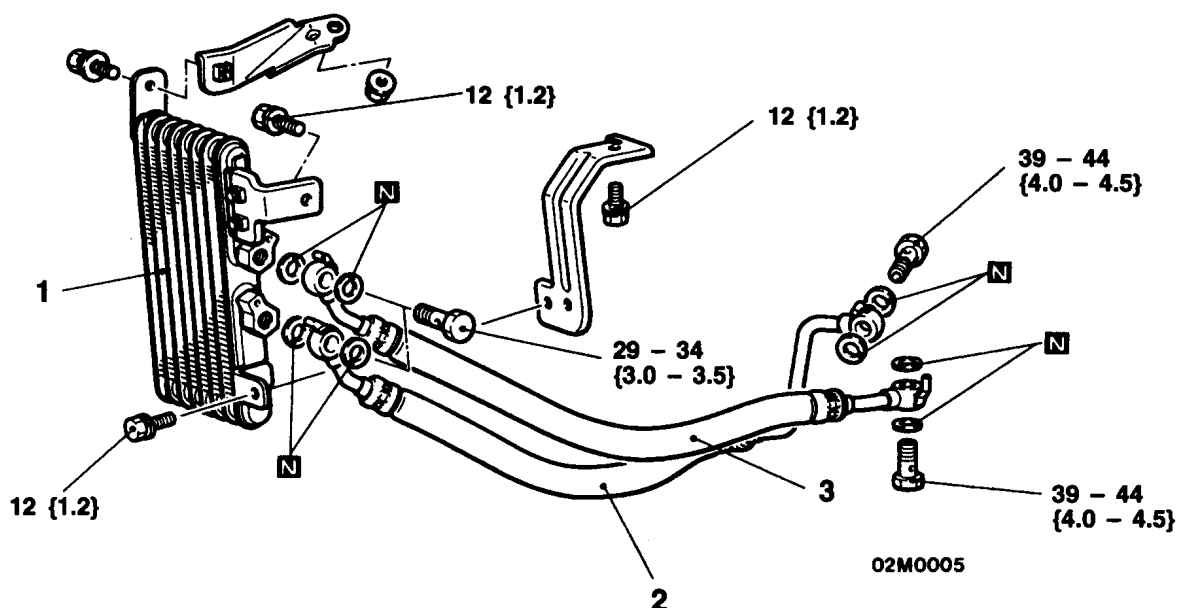

Unit: Nm {kgf · m}

Removal steps

1. Engine oil cooler
2. Feed hose assembly
3. Return hose assembly

INSTALLATION SERVICE POINT**►◄ FEED HOSE ASSEMBLY / RETURN HOSE ASSEMBLY INSTALLATION**

Fit the hose joint positioning tab into the hole in oil cooler to secure the hose assembly in position.