

## 2017 ELECTRICAL

### Wiring Systems And Power Management - Component Connector End Views - Index - Impala

## COMPONENT CONNECTOR END VIEWS - INDEX

### COMPONENT CONNECTOR END VIEWS - INDEX

| Description                                                                     |
|---------------------------------------------------------------------------------|
| <a href="#"><u>A7 Fuel Pump and Level Sensor Assembly</u></a>                   |
| <a href="#"><u>A10 Inside Rearview Mirror</u></a>                               |
| <a href="#"><u>A11 Radio X7</u></a>                                             |
| <a href="#"><u>A11 Radio X8</u></a>                                             |
| <a href="#"><u>A11 Radio X6</u></a>                                             |
| <a href="#"><u>A11 Radio X1</u></a>                                             |
| <a href="#"><u>A11 Radio X2</u></a>                                             |
| <a href="#"><u>A11 Radio X4</u></a>                                             |
| <a href="#"><u>A13 Rear Audio Control Module</u></a>                            |
| <a href="#"><u>A14D Seat Lumbar Support Pump - Driver</u></a>                   |
| <a href="#"><u>A14P Seat Lumbar Support Pump - Passenger</u></a>                |
| <a href="#"><u>A23D Door Latch Assembly - Driver</u></a>                        |
| <a href="#"><u>A23LR Door Latch Assembly - Left Rear</u></a>                    |
| <a href="#"><u>A23P Door Latch Assembly - Passenger</u></a>                     |
| <a href="#"><u>A23RR Door Latch Assembly - Right Rear</u></a>                   |
| <a href="#"><u>A24D Door Handle Assembly - Driver Exterior</u></a>              |
| <a href="#"><u>A24LR Door Handle Assembly - Left Rear Exterior</u></a>          |
| <a href="#"><u>A24P Door Handle Assembly - Passenger Exterior</u></a>           |
| <a href="#"><u>A24RR Door Handle Assembly - Right Rear Exterior</u></a>         |
| <a href="#"><u>A26 HVAC Controls</u></a>                                        |
| <a href="#"><u>A33 Media Disc Player</u></a>                                    |
| <a href="#"><u>B1 A/C Refrigerant Pressure Sensor</u></a>                       |
| <a href="#"><u>B5LF Wheel Speed Sensor - Left Front</u></a>                     |
| <a href="#"><u>B5LR Wheel Speed Sensor - Left Rear</u></a>                      |
| <a href="#"><u>B5RF Wheel Speed Sensor - Right Front</u></a>                    |
| <a href="#"><u>B5RR Wheel Speed Sensor - Right Rear</u></a>                     |
| <a href="#"><u>B7D Air Temperature Sensor - Duct Left Lower</u></a>             |
| <a href="#"><u>B7E Air Temperature Sensor - Duct Right Lower</u></a>            |
| <a href="#"><u>B7H Air Temperature Sensor - Duct Left Upper</u></a>             |
| <a href="#"><u>B7J Air Temperature Sensor - Duct Right Upper</u></a>            |
| <a href="#"><u>B9 Ambient Air Temperature Sensor</u></a>                        |
| <a href="#"><u>B10B Ambient Light/Sunload Sensor</u></a>                        |
| <a href="#"><u>B18 Battery Current Sensor (LCV)</u></a>                         |
| <a href="#"><u>B18 Battery Current Sensor (LFX/LFR)</u></a>                     |
| <a href="#"><u>B19B Brake Booster Vacuum Sensor</u></a>                         |
| <a href="#"><u>B20 Brake Fluid Level Switch</u></a>                             |
| <a href="#"><u>B22 Brake Pedal Position Sensor</u></a>                          |
| <a href="#"><u>B23A Camshaft Position Sensor - Bank 1 Exhaust (LFR/LFX)</u></a> |
| <a href="#"><u>B23B Camshaft Position Sensor - Bank 1 Intake</u></a>            |
| <a href="#"><u>B23C Camshaft Position Sensor - Bank 2 Exhaust</u></a>           |
| <a href="#"><u>B23D Camshaft Position Sensor - Bank 2 Intake (LFR/LFX)</u></a>  |
| <a href="#"><u>B23E Camshaft Position Sensor - Exhaust (LCV)</u></a>            |

| Description                                                                   |
|-------------------------------------------------------------------------------|
| <u>B23F Camshaft Position Sensor - Intake (LCV)</u>                           |
| <u>B24 Mobile Telephone Microphone</u>                                        |
| <u>B26 Crankshaft Position Sensor (LCV)</u>                                   |
| <u>B26 Crankshaft Position Sensor (LFR/LFX)</u>                               |
| <u>B34 Engine Coolant Temperature Sensor (LCV)</u>                            |
| <u>B34 Engine Coolant Temperature Sensor (LFR/LFX)</u>                        |
| <u>B35 Engine Oil Level Switch (LCV)</u>                                      |
| <u>B35 Engine Oil Level Switch (LFR/LFX)</u>                                  |
| <u>B37 Engine Oil Pressure Switch (LFR/LFX)</u>                               |
| <u>B37B Engine Oil Pressure Sensor (LCV)</u>                                  |
| <u>B39 A/C Evaporator Temperature Sensor</u>                                  |
| <u>B47 Fuel Pressure Sensor</u>                                               |
| <u>B47B Fuel Rail Pressure Sensor (LCV)</u>                                   |
| <u>B47B Fuel Rail Pressure Sensor</u>                                         |
| <u>B52A Heated Oxygen Sensor 1</u>                                            |
| <u>B52B Heated Oxygen Sensor 2</u>                                            |
| <u>B52C Heated Oxygen Sensor - Bank 1 Sensor 1</u>                            |
| <u>B52D Heated Oxygen Sensor - Bank 1 Sensor 2</u>                            |
| <u>B52E Heated Oxygen Sensor - Bank 2 Sensor 1</u>                            |
| <u>B52F Heated Oxygen Sensor - Bank 2 Sensor 2</u>                            |
| <u>B55 Engine Hood Switch</u>                                                 |
| <u>B59L Front Impact Sensor - Left</u>                                        |
| <u>B59R Front Impact Sensor - Right</u>                                       |
| <u>B63LF Side Impact Sensor - Left Front</u>                                  |
| <u>B63LR Side Impact Sensor - Left Rear</u>                                   |
| <u>B63RF Side Impact Sensor - Right Front</u>                                 |
| <u>B63RR Side Impact Sensor - Right Rear</u>                                  |
| <u>B68A Knock Sensor 1 (LCV)</u>                                              |
| <u>B68A Knock Sensor 1 (LFX)</u>                                              |
| <u>B68B Knock Sensor 2 (LCV)</u>                                              |
| <u>B68B Knock Sensor 2 (LFX)</u>                                              |
| <u>B74 Manifold Absolute Pressure Sensor</u>                                  |
| <u>B75B Mass Air Flow/Intake Air Temperature Sensor</u>                       |
| <u>B75C Multifunction Intake Air Sensor</u>                                   |
| <u>B77LF Radio Volume Compensator Interior Noise Microphone - Left Front</u>  |
| <u>B77R Radio Volume Compensator Interior Noise Microphone - Rear</u>         |
| <u>B77RF Radio Volume Compensator Interior Noise Microphone - Right Front</u> |
| <u>B87 Rearview Camera</u>                                                    |
| <u>B99 Steering Wheel Angle Sensor</u>                                        |
| <u>B107 Accelerator Pedal Position Sensor</u>                                 |
| <u>B110 Battery Sensor Module X1</u>                                          |
| <u>B117 Rain Sensor</u>                                                       |
| <u>B118B Windshield Washer Fluid Level Switch</u>                             |
| <u>B150 Fuel Tank Pressure Sensor</u>                                         |
| <u>B153D Seat Belt Buckle - Driver</u>                                        |
| <u>B153P Seat Belt Buckle - Passenger</u>                                     |
| <u>B160 Windshield Temperature and Inside Moisture Sensor</u>                 |
| <u>B198 Fuel Composition Sensor</u>                                           |
| <u>B218L Side Object Sensor Module - Left</u>                                 |
| <u>B218R Side Object Sensor Module - Right</u>                                |
| <u>B221 Alternative Fuel Tank Pressure Sensor</u>                             |
| <u>B229 Alternative Fuel Rail Pressure/Temperature Sensor</u>                 |

| Description                                                   |
|---------------------------------------------------------------|
| <u>B221 Alternative Fuel Tank Pressure Sensor</u>             |
| <u>B263 Alternative Fuel Tank Temperature Sensor</u>          |
| <u>B263 Alternative Fuel Tank Temperature Sensor (LFR)</u>    |
| <u>B280 Automatic Transmission Accumulator Solenoid Valve</u> |
| <u>B306E Parking Assist Sensor - Rear Left Outer</u>          |
| <u>B306F Parking Assist Sensor - Rear Left Middle</u>         |
| <u>B306G Parking Assist Sensor - Rear Right Middle</u>        |
| <u>B306H Parking Assist Sensor - Rear Right Outer</u>         |
| <u>C1 Battery (-) (Battery Negative)</u>                      |
| <u>C1 Battery (-) (Body Harness)</u>                          |
| <u>C1 Battery (+)</u>                                         |
| <u>C1B Battery - Auxiliary (+) (KL9)</u>                      |
| <u>C1B Battery - Auxiliary (-) (KL9)</u>                      |
| <u>E1C Accent Lamp - Driver Door Handle</u>                   |
| <u>E1D Accent Lamp - Driver Door X1</u>                       |
| <u>E1D Accent Lamp - Driver Door</u>                          |
| <u>E1F Accent Lamp - Right Rear Door Handle</u>               |
| <u>E1G Accent Lamp - Left Instrument Panel</u>                |
| <u>E1GA Accent Lamp - Left Middle Instrument Panel</u>        |
| <u>E1H Accent Lamp - Right Instrument Panel</u>               |
| <u>E1L Accent Lamp - Overhead Console</u>                     |
| <u>E1M Accent Lamp - Passenger Door Handle</u>                |
| <u>E1P Accent Lamp - Passenger Door X1</u>                    |
| <u>E1P Accent Lamp - Passenger Door X2</u>                    |
| <u>E2LF Side Marker Lamp - Left Front (T4A)</u>               |
| <u>E2LF Side Marker Lamp - Left Front (T4F)</u>               |
| <u>E2RF Side Marker Lamp - Right Front (T4A)</u>              |
| <u>E2RF Side Marker Lamp - Right Front</u>                    |
| <u>E4AC Park/Daytime Running Lamp - Left</u>                  |
| <u>E4AD Park/Daytime Running Lamp - Right</u>                 |
| <u>E4G Headlamp - Left Low Beam (T4A)</u>                     |
| <u>E4G Headlamp - Left Low Beam (T4F)</u>                     |
| <u>E4H Headlamp - Right Low Beam (T4A)</u>                    |
| <u>E4H Headlamp - Right Low Beam (T4F)</u>                    |
| <u>E4J Park Lamp - Left Front (T4F)</u>                       |
| <u>E4K Park Lamp - Right Front (T4F)</u>                      |
| <u>E4LF Turn Signal Lamp - Left Front (T4F)</u>               |
| <u>E4N Park/Turn Signal Lamp - Left (T4A)</u>                 |
| <u>E4P Park/Turn Signal Lamp - Right (T4A)</u>                |
| <u>E4RF Turn Signal Lamp - Right Front (T4F)</u>              |
| <u>E5A Backup Lamp - Left</u>                                 |
| <u>E5B Backup Lamp - Right</u>                                |
| <u>E5E Tail Lamp - Left</u>                                   |
| <u>E5F Tail Lamp - Right</u>                                  |
| <u>E5S Tail/Stop and Turn Signal Lamp - Left</u>              |
| <u>E5T Tail/Stop and Turn Signal Lamp - Right</u>             |
| <u>E6 Center High Mounted Stop Lamp</u>                       |
| <u>E7L License Plate Lamp - Left</u>                          |
| <u>E7R License Plate Lamp - Right</u>                         |
| <u>E8J Instrument Panel Courtesy Lamp - Left</u>              |
| <u>E8K Instrument Panel Courtesy Lamp - Right</u>             |
| <u>E8S Rear Compartment Courtesy Lamp</u>                     |
|                                                               |

| Description                                                           |
|-----------------------------------------------------------------------|
| <u>E14A Seat Heating Element - Driver Back</u>                        |
| <u>E14B Seat Heating Element - Driver Cushion</u>                     |
| <u>E14C Seat Heating Element - Passenger Back</u>                     |
| <u>E14D Seat Heating Element - Passenger Cushion</u>                  |
| <u>E14E Seat Heating Element - Left Rear Back</u>                     |
| <u>E14F Seat Heating Element - Left Rear Cushion</u>                  |
| <u>E14G Seat Heating Element - Right Rear Back</u>                    |
| <u>E14H Seat Heating Element - Right Rear Cushion</u>                 |
| <u>E15 Steering Wheel Heater</u>                                      |
| <u>E17D Outside Rearview Mirror Glass - Driver X4</u>                 |
| <u>E17D Outside Rearview Mirror Glass - Driver X1</u>                 |
| <u>E17D Outside Rearview Mirror Glass - Driver X2</u>                 |
| <u>E17D Outside Rearview Mirror Glass - Driver X3 (UFG or UFT)</u>    |
| <u>E17D Outside Rearview Mirror Glass - Passenger X1</u>              |
| <u>E17D Outside Rearview Mirror Glass - Passenger X2</u>              |
| <u>E17P Outside Rearview Mirror Glass - Passenger X3 (UFG or UFT)</u> |
| <u>E18 Rear Defogger Grid X1</u>                                      |
| <u>E18 Rear Defogger Grid X2</u>                                      |
| <u>E27 Instrument Panel Compartment Lamp</u>                          |
| <u>E28 Center Console Compartment Lamp</u>                            |
| <u>E31L Sunshade Mirror Lamp - Left</u>                               |
| <u>E31R Sunshade Mirror Lamp - Right</u>                              |
| <u>E37LF Dome/Reading Lamps - Left Front</u>                          |
| <u>E37R Dome/Reading Lamps - Rear</u>                                 |
| <u>E37RF Dome/Reading Lamps - Right Front</u>                         |
| <u>E38 Flood Lamp - Center Console</u>                                |
| <u>E63D Flood Lamp - Driver Door Handle</u>                           |
| <u>E63P Flood Lamp - Passenger Door Handle</u>                        |
| <u>E66D Outside Rearview Mirror Lamps Assembly - Driver</u>           |
| <u>E66P Outside Rearview Mirror Lamps Assembly - Passenger</u>        |
| <u>F101 Passenger Instrument Panel Air Bag X1</u>                     |
| <u>F101 Passenger Instrument Panel Air Bag X2</u>                     |
| <u>F101 Passenger Instrument Panel Air Bag X3</u>                     |
| <u>F105L Roof Rail Air Bag - Left</u>                                 |
| <u>F105R Roof Rail Air Bag - Right</u>                                |
| <u>F106LF Seat Side Air Bag - Left Front</u>                          |
| <u>F106LR Seat Side Air Bag - Left Rear X1</u>                        |
| <u>F106LR Seat Side Air Bag - Left Rear X2</u>                        |
| <u>F106RF Seat Side Air Bag - Right Front</u>                         |
| <u>F106RR Seat Side Air Bag - Right Rear X1</u>                       |
| <u>F106RR Seat Side Air Bag - Right Rear X2</u>                       |
| <u>F107 Steering Wheel Air Bag X1</u>                                 |
| <u>F107 Steering Wheel Air Bag X2</u>                                 |
| <u>F107 Steering Wheel Air Bag X3</u>                                 |
| <u>F112D Seat Belt Retractor Pretensioner - Driver</u>                |
| <u>F112P Seat Belt Retractor Pretensioner - Passenger</u>             |
| <u>F113D Seat Belt Anchor Pretensioner - Driver</u>                   |
| <u>F113P Seat Belt Anchor Pretensioner - Passenger</u>                |
| <u>F114D Knee Air Bag - Driver</u>                                    |
| <u>F114P Knee Air Bag - Passenger</u>                                 |
| <u>G10L Cooling Fan Motor - Left</u>                                  |
| <u>G10R Cooling Fan Motor - Right</u>                                 |
|                                                                       |

| Description                                                      |
|------------------------------------------------------------------|
| <u>G13 Generator X1</u>                                          |
| <u>G13 Generator X2</u>                                          |
| <u>G17 Heater Coolant Pump</u>                                   |
| <u>G18 High Pressure Fuel Pump (LCV)</u>                         |
| <u>G18 High Pressure Fuel Pump (LFX)</u>                         |
| <u>G24 Windshield Washer Pump</u>                                |
| <u>K9 Body Control Module X1</u>                                 |
| <u>K9 Body Control Module X2</u>                                 |
| <u>K9 Body Control Module X3</u>                                 |
| <u>K9 Body Control Module X4</u>                                 |
| <u>K9 Body Control Module X5</u>                                 |
| <u>K9 Body Control Module X6</u>                                 |
| <u>K9 Body Control Module X7</u>                                 |
| <u>K14 Distance Sensing Cruise Control Module</u>                |
| <u>K17 Electronic Brake Control Module</u>                       |
| <u>K18 Compass Module</u>                                        |
| <u>K20 Engine Control Module X1 (LCV)</u>                        |
| <u>K20 Engine Control Module X2 (LCV)</u>                        |
| <u>K20 Engine Control Module X3 (LCV)</u>                        |
| <u>K20 Engine Control Module X1 (LFR)</u>                        |
| <u>K20 Engine Control Module X2 (LFR)</u>                        |
| <u>K20 Engine Control Module X1 (LFX)</u>                        |
| <u>K20 Engine Control Module X2 (LFX)</u>                        |
| <u>K20 Engine Control Module X3 (LFX)</u>                        |
| <u>K29F Seat Heating Control Module - Front X1 (KA1)</u>         |
| <u>K29F Seat Heating Control Module - Front X2 (KA1)</u>         |
| <u>K29R Seat Heating Control Module - Rear X1 (KA6)</u>          |
| <u>K29R Seat Heating Control Module - Rear X2 (KA6)</u>          |
| <u>K31 Navigation Control Module X3 (MAW)</u>                    |
| <u>K31 Navigation Control Module X5 (MAW)</u>                    |
| <u>K31 Navigation Control Module X1</u>                          |
| <u>K31 Navigation Control Module X2</u>                          |
| <u>K31 Navigation Control Module X6</u>                          |
| <u>K31 Navigation Control Module X7</u>                          |
| <u>K32 Steering Wheel Heating Control Module</u>                 |
| <u>K33 HVAC Control Module X4</u>                                |
| <u>K33 HVAC Control Module X1</u>                                |
| <u>K33 HVAC Control Module X2</u>                                |
| <u>K33 HVAC Control Module X3</u>                                |
| <u>K36 Inflatable Restraint Sensing and Diagnostic Module X1</u> |
| <u>K36 Inflatable Restraint Sensing and Diagnostic Module X2</u> |
| <u>K38 Chassis Control Module</u>                                |
| <u>K40 Seat Memory Control Module X1</u>                         |
| <u>K40 Seat Memory Control Module X2</u>                         |
| <u>K40 Seat Memory Control Module X3</u>                         |
| <u>K40 Seat Memory Control Module X5</u>                         |
| <u>K40 Seat Memory Control Module X6</u>                         |
| <u>K43 Power Steering Control Module X1 (LCV)</u>                |
| <u>K43 Power Steering Control Module X2 (LCV)</u>                |
| <u>K43 Power Steering Control Module X3 (NJ1)</u>                |
| <u>K43 Power Steering Control Module X1 (LFR/LFX)</u>            |
| <u>K43 Power Steering Control Module X2 (LFR/LFX)</u>            |

| Description                                                     |
|-----------------------------------------------------------------|
| <u>K43 Power Steering Control Module X3 (NJ2)</u>               |
| <u>K56 Serial Data Gateway Module X1</u>                        |
| <u>K56 Serial Data Gateway Module X2</u>                        |
| <u>K62 Sunroof Sunshade Motor Module</u>                        |
| <u>K73 Telematics Communication Interface Control Module X1</u> |
| <u>K73 Telematics Communication Interface Control Module X2</u> |
| <u>K73 Telematics Communication Interface Control Module X8</u> |
| <u>K73 Telematics Communication Interface Control Module X6</u> |
| <u>K73 Telematics Communication Interface Control Module X5</u> |
| <u>K73 Telematics Communication Interface Control Module X9</u> |
| <u>K73 Telematics Communication Interface Control Module X7</u> |
| <u>K74 Human Machine Interface Control Module X1</u>            |
| <u>K74 Human Machine Interface Control Module X2</u>            |
| <u>K74 Human Machine Interface Control Module X3</u>            |
| <u>K74 Human Machine Interface Control Module X4</u>            |
| <u>K74 Human Machine Interface Control Module X5</u>            |
| <u>K74 Human Machine Interface Control Module X7</u>            |
| <u>K77 Remote Control Door Lock Receiver X1</u>                 |
| <u>K77 Remote Control Door Lock Receiver X2</u>                 |
| <u>K83 Park Brake Control Module</u>                            |
| <u>K84 Keyless Entry Control Module X4</u>                      |
| <u>K84 Keyless Entry Control Module X1</u>                      |
| <u>K84 Keyless Entry Control Module X2</u>                      |
| <u>K85 Passenger Presence Module X1</u>                         |
| <u>K85 Passenger Presence Module X2</u>                         |
| <u>K89 Immobilizer Control Module (BTM)</u>                     |
| <u>K89 Immobilizer Control Module (-BTM)</u>                    |
| <u>K96 Mirror Control Module</u>                                |
| <u>K99 Steering Column Position Control Module X1</u>           |
| <u>K99 Steering Column Position Control Module X2</u>           |
| <u>K99 Steering Column Position Control Module X3</u>           |
| <u>K99 Steering Column Position Control Module X4</u>           |
| <u>B174 Frontview Camera</u>                                    |
| <u>K125 Dual Battery Control Module</u>                         |
| <u>K182 Parking Assist Control Module X1</u>                    |
| <u>K182 Parking Assist Control Module X2</u>                    |
| <u>KR14 Brake Booster Pump Motor Relay X1</u>                   |
| <u>KR14 Brake Booster Pump Motor Relay X2</u>                   |
| <u>KR20C Cooling Fan Low Speed Relay</u>                        |
| <u>M4 Air Inlet Door Actuator</u>                               |
| <u>M6 Air Temperature Door Actuator</u>                         |
| <u>M6L Air Temperature Door Actuator - Left</u>                 |
| <u>M6R Air Temperature Door Actuator - Right</u>                |
| <u>M7 Transmission Shift Lock Control Solenoid Actuator</u>     |
| <u>M8 Blower Motor</u>                                          |
| <u>M28L High Beam Solenoid Actuator - Left (T4A)</u>            |
| <u>M28L High Beam Solenoid Actuator - Left (T4F)</u>            |
| <u>M28R High Beam Solenoid Actuator - Right (T4A)</u>           |
| <u>M28R High Beam Solenoid Actuator - Right (T4F)</u>           |
| <u>M37 Mode Door Actuator</u>                                   |
| <u>M40 Rear Compartment Lid Latch</u>                           |
| <u>M50D Seat Front Vertical Motor - Driver</u>                  |
|                                                                 |

| Description                                                  |
|--------------------------------------------------------------|
| <u>M50P Seat Front Vertical Motor - Passenger</u>            |
| <u>M51D Seat Horizontal Motor - Driver</u>                   |
| <u>M51P Seat Horizontal Motor - Passenger</u>                |
| <u>M55D Seat Rear Vertical Motor - Driver</u>                |
| <u>M55P Seat Rear Vertical Motor - Passenger</u>             |
| <u>M56D Seat Recline Motor - Driver</u>                      |
| <u>M56P Seat Recline Motor - Passenger</u>                   |
| <u>M57P Seat Vertical Motor - Passenger</u>                  |
| <u>M64 Starter Motor X1 (LCV)</u>                            |
| <u>M64 Starter Motor X2</u>                                  |
| <u>M64 Starter Motor X1 (LFR/LFX)</u>                        |
| <u>M64 Starter Motor X2 (LFR/LFX)</u>                        |
| <u>M69 Sunroof Motor</u>                                     |
| <u>M73A Seat Blower Motor - Driver Back</u>                  |
| <u>M73B Seat Blower Motor - Passenger Back</u>               |
| <u>M74D Window Motor - Driver</u>                            |
| <u>M74LR Window Motor - Left Rear</u>                        |
| <u>M74P Window Motor - Passenger</u>                         |
| <u>M74RR Window Motor - Right Rear</u>                       |
| <u>M75 Windshield Wiper Motor</u>                            |
| <u>M77D Outside Rearview Mirror Motor - Driver (A45)</u>     |
| <u>M77D Outside Rearview Mirror Motor - Driver (-A45)</u>    |
| <u>M77P Outside Rearview Mirror Motor - Passenger (A45)</u>  |
| <u>M77P Outside Rearview Mirror Motor - Passenger (-A45)</u> |
| <u>Mad Outside Rearview Mirror Folding Motor - Driver</u>    |
| <u>Map Outside Rearview Mirror Folding Motor - Passenger</u> |
| <u>M30 Key Capture Solenoid Actuator</u>                     |
| <u>M16 Active Grille Air Shutter Actuator</u>                |
| <u>M97 Fuel Fill Door Lock Actuator</u>                      |
| <u>P2 Transmission Shift Lever Position Indicator</u>        |
| <u>P13 Horn Assembly</u>                                     |
| <u>P14 Passenger Air Bag Disabled Indicator</u>              |
| <u>P16 Instrument Cluster</u>                                |
| <u>P17 Info Display Module X1</u>                            |
| <u>P17 Info Display Module X2</u>                            |
| <u>P19AG Speaker - Left Front Door (UQG)</u>                 |
| <u>P19AG Speaker - Left Front Door (UQS)</u>                 |
| <u>P19AH Speaker - Right Front Door (UQG)</u>                |
| <u>P19AH Speaker - Right Front Door (UQS)</u>                |
| <u>P19AJ Speaker - Left Rear Window Shelf</u>                |
| <u>P19AK Speaker - Right Rear Window Shelf</u>               |
| <u>P19AL Speaker - Left Rear Door (UQG)</u>                  |
| <u>P19AL Speaker - Left Rear Door (UQS)</u>                  |
| <u>P19AM Speaker - Right Rear Door (UQG)</u>                 |
| <u>P19AM Speaker - Right Rear Door (UQS)</u>                 |
| <u>P19B Speaker - Center Instrument Panel</u>                |
| <u>P19H Speaker - Left Front Tweeter (UQG)</u>               |
| <u>P19H Speaker - Left Front Tweeter (UQS)</u>               |
| <u>P19V Speaker - Right Front Tweeter (UQG)</u>              |
| <u>P19V Speaker - Right Front Tweeter (UQS)</u>              |
| <u>P43 Collision Alert Indicators</u>                        |
| <u>Q2 A/C Compressor Clutch</u>                              |
|                                                              |

| Description                                                           |
|-----------------------------------------------------------------------|
| <u>Q6A Camshaft Position Actuator Solenoid Valve - Bank 1 Exhaust</u> |
| <u>Q6B Camshaft Position Actuator Solenoid Valve - Bank 1 Intake</u>  |
| <u>Q6C Camshaft Position Actuator Solenoid Valve - Bank 2 Exhaust</u> |
| <u>Q6D Camshaft Position Actuator Solenoid Valve - Bank 2 Intake</u>  |
| <u>Q6E Camshaft Position Actuator Solenoid Valve - Exhaust</u>        |
| <u>Q6F Camshaft Position Actuator Solenoid Valve - Intake</u>         |
| <u>Q8 Control Solenoid Valve Assembly X1 (LCV)</u>                    |
| <u>Q8 Control Solenoid Valve Assembly X1 (LFR/LFX)</u>                |
| <u>Q8 Control Solenoid Valve Assembly X2 (MHG)</u>                    |
| <u>Q8 Control Solenoid Valve Assembly X3</u>                          |
| <u>Q8 Control Solenoid Valve Assembly X4</u>                          |
| <u>Q12 Evaporative Emission Purge Solenoid Valve (LCV)</u>            |
| <u>Q12 Evaporative Emission Purge Solenoid Valve (LFR/LFX)</u>        |
| <u>Q13 Evaporative Emission Vent Solenoid Valve</u>                   |
| <u>Q17A Fuel Injector 1 (LCV)</u>                                     |
| <u>Q17A Fuel Injector 1 (LFR/LFX)</u>                                 |
| <u>Q17B Fuel Injector 2 (LCV)</u>                                     |
| <u>Q17B Fuel Injector 2 (LFR/LFX)</u>                                 |
| <u>Q17C Fuel Injector 3 (LCV)</u>                                     |
| <u>Q17C Fuel Injector 3 (LFR/LFX)</u>                                 |
| <u>Q17D Fuel Injector 4 (LCV)</u>                                     |
| <u>Q17D Fuel Injector 4 (LFR/LFX)</u>                                 |
| <u>Q17E Fuel Injector 5 (LFR/LFX)</u>                                 |
| <u>Q17F Fuel Injector 6 (LFR)</u>                                     |
| <u>Q17F Fuel Injector 6 (LFX)</u>                                     |
| <u>Q38 Throttle Body (LCV)</u>                                        |
| <u>Q38 Throttle Body (LFR)</u>                                        |
| <u>Q38 Throttle Body (LFX)</u>                                        |
| <u>Q44 Engine Oil Pressure Control Solenoid Valve</u>                 |
| <u>Q46 A/C Compressor Solenoid Valve</u>                              |
| <u>Q68A CNG Cut-Off Solenoid Valve 1 (LFR)</u>                        |
| <u>Q69 CNG High Pressure Regulator Solenoid Valve</u>                 |
| <u>Q70A Alternative Fuel Injector 1</u>                               |
| <u>Q70B Alternative Fuel Injector 2</u>                               |
| <u>Q70C Alternative Fuel Injector 3</u>                               |
| <u>Q70D Alternative Fuel Injector 4</u>                               |
| <u>Q70E Alternative Fuel Injector 5</u>                               |
| <u>Q70F Alternative Fuel Injector 6</u>                               |
| <u>R14L Rear Window Defogger Noise Filter - Left</u>                  |
| <u>S2 Transmission Manual Shift Switch</u>                            |
| <u>S12 Dome Lamp Switch</u>                                           |
| <u>S13D Door Lock Switch - Driver</u>                                 |
| <u>S13P Door Lock Switch - Passenger</u>                              |
| <u>S25 Garage Door Opener</u>                                         |
| <u>S26 Hazard Warning Switch</u>                                      |
| <u>S33L Horn Switch - Left X1</u>                                     |
| <u>S33L Horn Switch - Left X2</u>                                     |
| <u>S33R Horn Switch - Right X1</u>                                    |
| <u>S33R Horn Switch - Right X2</u>                                    |
| <u>S35 Instrument Panel Compartment Lamp Switch</u>                   |
| <u>S36 Instrument Panel Dimmer Switch</u>                             |
| <u>S38 Ignition Mode Switch</u>                                       |
|                                                                       |

| Description                                                                                  |
|----------------------------------------------------------------------------------------------|
| <u>S39 Ignition Switch</u>                                                                   |
| <u>S47D Seat Memory Switch - Driver</u>                                                      |
| <u>S48A Multifunction Switch - Instrument Panel</u>                                          |
| <u>S48E Multifunction Switch - Center Console</u>                                            |
| <u>S51 Telematics Button Assembly</u>                                                        |
| <u>S52 Outside Rearview Mirror Switch</u>                                                    |
| <u>S58A Rear Compartment Lid Unlatch Switch - Exterior</u>                                   |
| <u>S58B Rear Compartment Lid Unlatch Switch - Interior</u>                                   |
| <u>S64D Seat Adjuster Switch - Driver X1</u>                                                 |
| <u>S64D Seat Adjuster Switch - Driver X2</u>                                                 |
| <u>S64P Seat Adjuster Switch - Passenger (A6C)</u>                                           |
| <u>S64P Seat Adjuster Switch - Passenger X1 (AG2)</u>                                        |
| <u>S64P Seat Adjuster Switch - Passenger X2 (AG2)</u>                                        |
| <u>S65P Seat Lumbar Support Switch - Passenger</u>                                           |
| <u>S65P Seat Lumbar Support Switch - Passenger (AG2)</u>                                     |
| <u>S70E Steering Wheel Controls Switch - Radio Presets</u>                                   |
| <u>S70F Steering Wheel Controls Switch - Radio Volume</u>                                    |
| <u>S70L Steering Wheel Controls Switch - Left</u>                                            |
| <u>S70R Steering Wheel Controls Switch - Right</u>                                           |
| <u>S71 Steering Column Tilt and Telescope Switch</u>                                         |
| <u>S72 Sunroof Switch</u>                                                                    |
| <u>S78 Turn Signal/Multifunction Switch</u>                                                  |
| <u>S79D Window Switch - Driver</u>                                                           |
| <u>S79LR Window Switch - Left Rear</u>                                                       |
| <u>S79P Window Switch - Passenger X2</u>                                                     |
| <u>S79P Window Switch - Passenger X1</u>                                                     |
| <u>S79RR Window Switch - Right Rear</u>                                                      |
| <u>S82 Windshield Wiper/Washer Switch</u>                                                    |
| <u>S91 Park Brake Control Switch</u>                                                         |
| <u>T1 Accessory DC/AC Power Inverter Module</u>                                              |
| <u>T2 Antenna</u>                                                                            |
| <u>T2RR Antenna - Roof Rear X3</u>                                                           |
| <u>T3 Audio Amplifier X1 (UQG)</u>                                                           |
| <u>T3 Audio Amplifier X1 (UQS)</u>                                                           |
| <u>T3 Audio Amplifier X2</u>                                                                 |
| <u>T3 Audio Amplifier X3</u>                                                                 |
| <u>T3 Audio Amplifier X4</u>                                                                 |
| <u>T4G Cellular Phone, Navigation, and Digital Radio Antenna X3 (IO6 without MAM or UE1)</u> |
| <u>T4G Cellular Phone, Navigation, and Digital Radio Antenna X4</u>                          |
| <u>T4G Cellular Phone, Navigation, and Digital Radio Antenna X2</u>                          |
| <u>T4G Cellular Phone, Navigation, and Digital Radio Antenna X3 (UE1 with MAM)</u>           |
| <u>T4G Cellular Phone, Navigation, and Digital Radio Antenna X1</u>                          |
| <u>T7L Headlamp Ballast - Left X1</u>                                                        |
| <u>T7R Headlamp Ballast - Right X1</u>                                                       |
| <u>T8A Ignition Coil 1 (LCV)</u>                                                             |
| <u>T8A Ignition Coil 1 (LFR/LFX)</u>                                                         |
| <u>T8B Ignition Coil 2 (LFR/LFX)</u>                                                         |
| <u>T8B Ignition Coil 2 (LCV)</u>                                                             |
| <u>T8C Ignition Coil 3 (LCV)</u>                                                             |
| <u>T8C Ignition Coil 3 (LFR/LFX)</u>                                                         |
| <u>T8D Ignition Coil 4 (LCV)</u>                                                             |

| Description                                                         |
|---------------------------------------------------------------------|
| <u>T8D Ignition Coil 4 (LFR/LFX)</u>                                |
| <u>T8E Ignition Coil 5</u>                                          |
| <u>T8F Ignition Coil 6</u>                                          |
| <u>T10E Keyless Entry Antenna - Rear Compartment</u>                |
| <u>T10G Keyless Entry Antenna - Rear Fascia</u>                     |
| <u>T10J Keyless Entry Antenna - Center Console Front</u>            |
| <u>T10K Keyless Entry Antenna - Center Console Rear</u>             |
| <u>T15 Navigation Antenna Signal Splitter X1</u>                    |
| <u>T15 Navigation Antenna Signal Splitter X2</u>                    |
| <u>T15 Navigation Antenna Signal Splitter X3</u>                    |
| <u>T22 Mobile Device Wireless Charger Module</u>                    |
| <u>T23 Radio Antenna Amplifier X1</u>                               |
| <u>T23 Radio Antenna Amplifier X4</u>                               |
| <u>X80D Accessory Power Receptacle - Center Console Compartment</u> |
| <u>X80G Accessory Power Receptacle - Instrument Panel</u>           |
| <u>X80H Accessory Power Receptacle - Center Console</u>             |
| <u>X81 Accessory Power Receptacle - 110V AC X1</u>                  |
| <u>X81 Accessory Power Receptacle - 110V AC X2</u>                  |
| <u>X81B Accessory Power Receptacle - 220V AC X1</u>                 |
| <u>X81B Accessory Power Receptacle - 220V AC X2</u>                 |
| <u>X83 Auxiliary Audio Input X1</u>                                 |
| <u>X83 Auxiliary Audio Input X2</u>                                 |
| <u>X84 Data Link Connector</u>                                      |
| <u>X85 Steering Wheel Air Bag Coil X4</u>                           |
| <u>X85 Steering Wheel Air Bag Coil X5</u>                           |
| <u>X85 Steering Wheel Air Bag Coil X1</u>                           |
| <u>X85 Steering Wheel Air Bag Coil X2</u>                           |
| <u>X85 Steering Wheel Air Bag Coil X3</u>                           |
| <u>X92 USB Receptacle</u>                                           |