

			Test results		
1	COMPONENT CONCERNED	DIFFERENTIAL PRESSURE SENSOR AND AIR CONDITIONING PRESSURE SENSOR WIRING CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Differential pressure sensor and air conditioning pressure sensor wiring	Check the continuity of the wiring of differential pressure sensor and air conditioning pressure sensor The power supply from the control unit is for the following sensors:  - Differential pressure sensor - Air conditioning pressure sensor	Go to Step 2	Faulty wiring continuity.	Restore the correct continuity for the wiring.
2	COMPONENT CONCERNED	DIFFERENTIAL PRESSURE SENSOR AND AIR CONDITIONING PRESSURE SENSOR WIRING CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Differential pressure sensor and air conditioning pressure sensor wiring	Check the insulation of the wiring of differential pressure sensor and air conditioning pressure sensor	Go to Step 3	Wiring insulation not correct.	Restore correct wiring insulation.
3	COMPONENT CONCERNED	DIFFERENTIAL PRESSURE SENSOR AND AIR CONDITIONING PRESSURE SENSOR WIRING CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Differential pressure sensor and air conditioning pressure sensor wiring	Check for the presence of a short circuit on the wiring of differential pressure sensor and air conditioning pressure sensor	Go to Step 4	Presence of short circuits	Eliminate the short circuit and restore correct operation.
4	COMPONENT CONCERNED	DIFFERENTIAL PRESSURE SENSOR CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Differential pressure sensor	Check that the differential pressure sensor is working properly	Go to Step 5	Differential pressure sensor not working correctly	Replace the differential pressure sensor Op. 1080B82 PARTICULATE FILTER DIFFERENTIAL PRESSURE (D.P.F.) SENSOR - R.R.
5	COMPONENT CONCERNED	AIR CONDITIONING PRESSURE SENSOR CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Conditioner pressure sensor	Check that the conditioner pressure sensor is working correctly	End of diagnosis	The air conditioning pressure sensor is not working properly	Replace the conditioner pressure sensor Op. 5040B20 AIR CONDITIONING LINEAR PRESSURE TRANSDUCER - R.R.