

			Test results		
1	COMPONENT CONCERNED	NEUTRAL SENSOR ELECTRICAL CONNECTION CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Neutral sensor wiring	Check for the presence of a short circuit to earth on the neutral sensor electrical connections.	Go to Step 2	Presence of short circuit to earth.	Restore insulation to earth
2	COMPONENT CONCERNED	NEUTRAL SENSOR ELECTRICAL CONNECTION CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Neutral sensor wiring	Check for the presence of a short circuit to Vbatt on the neutral sensor electrical connections.	Go to Step 3	Presence of short circuit to Vbatt.	Restore insulation to + battery
3	COMPONENT CONCERNED	NEUTRAL SENSOR ELECTRICAL CONNECTION CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Neutral sensor wiring	Check for the presence of an open circuit on the neutral sensor electrical connections.	Go to Step 4	Presence of open circuit	Restore circuit to correct operation.
4	COMPONENT CONCERNED	NEUTRAL SENSOR CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Neutral sensor	Check that the neutral sensor is working correctly.	End of diagnosis	The neutral sensor is not working correctly	Replace the neutral sensor Op. 5520D04 GEAR LEVER IN NEUTRAL SENSOR - R.R.